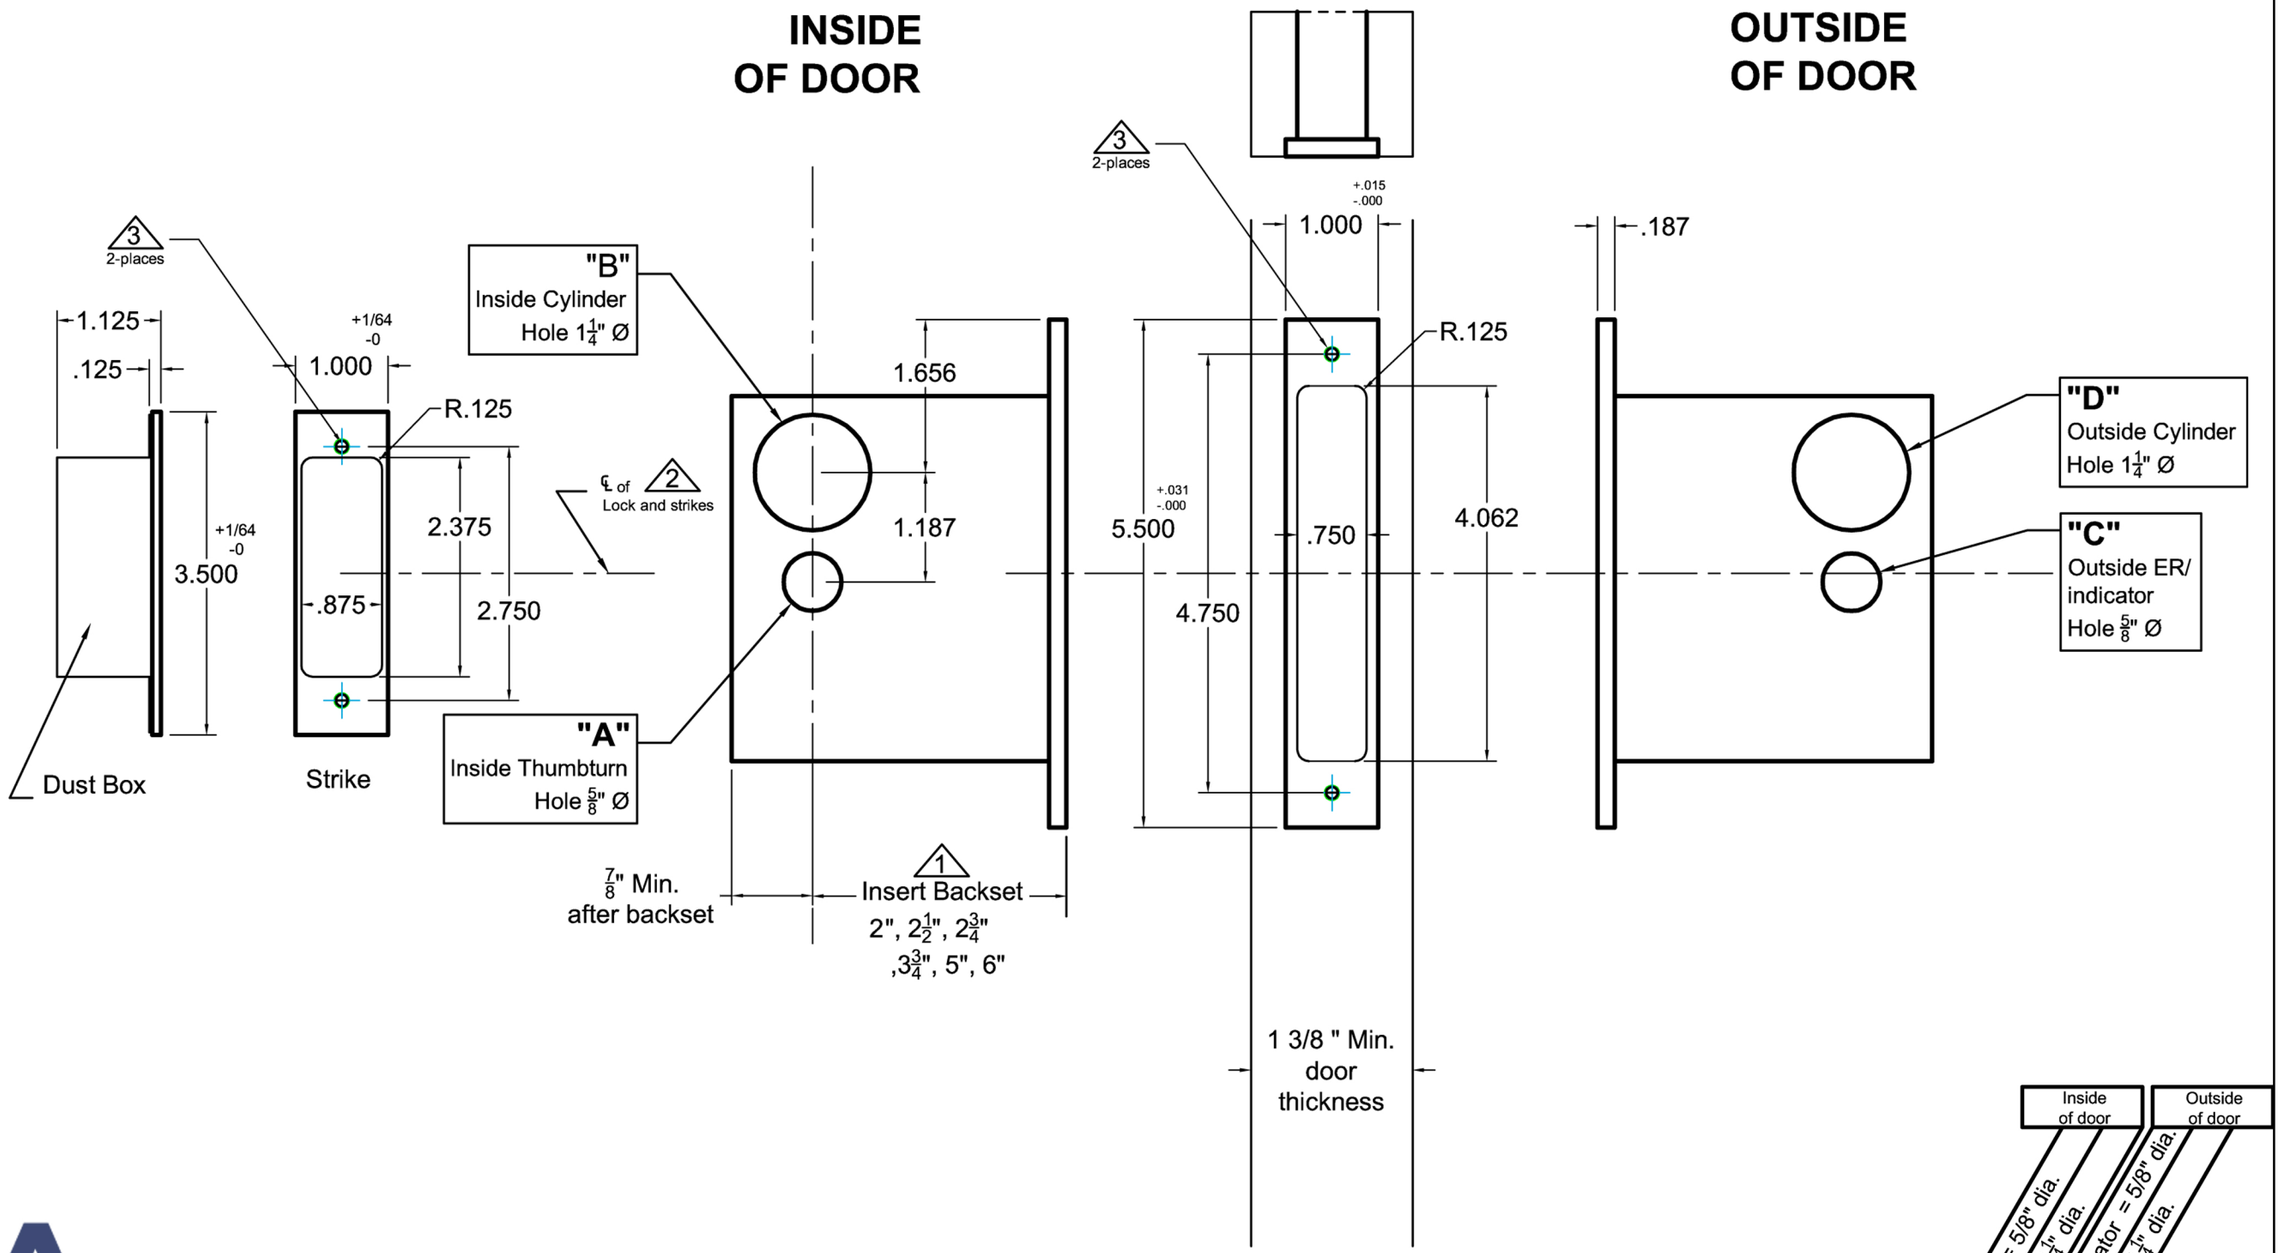

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9500 Deadlock - LOCK ONLY - All Backsets

Notes:

1. Insert backset here 2", 2 1/2", 2 3/4", 3 3/4", 5", 6"
2. Centerline of strike and front are the same.
3. Prep for #8 wood or 8-32 machine screws .

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

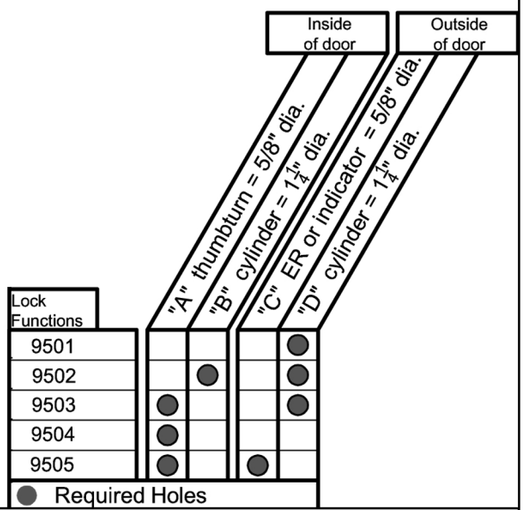

T-ALH.9500.DL