Lock Functions	A	B	C	D	E	F
8800ADL	●			●		
8801*						●
8802*			●			●
8803*		●				●
8822	●		●	●		●
8824	●	●		●		●
8825	●			●		
8839	●	●		●	○	
8842	●		●	●		●
8845	●			●		●
8845S	●		●	●		●
8848	●	●		●		●
8849	●	●		●		●
8856	●			●		●
8858	●		●	●		●
8859	●			●		●

● Required Holes
○ Optional Holes

(no strike needed)

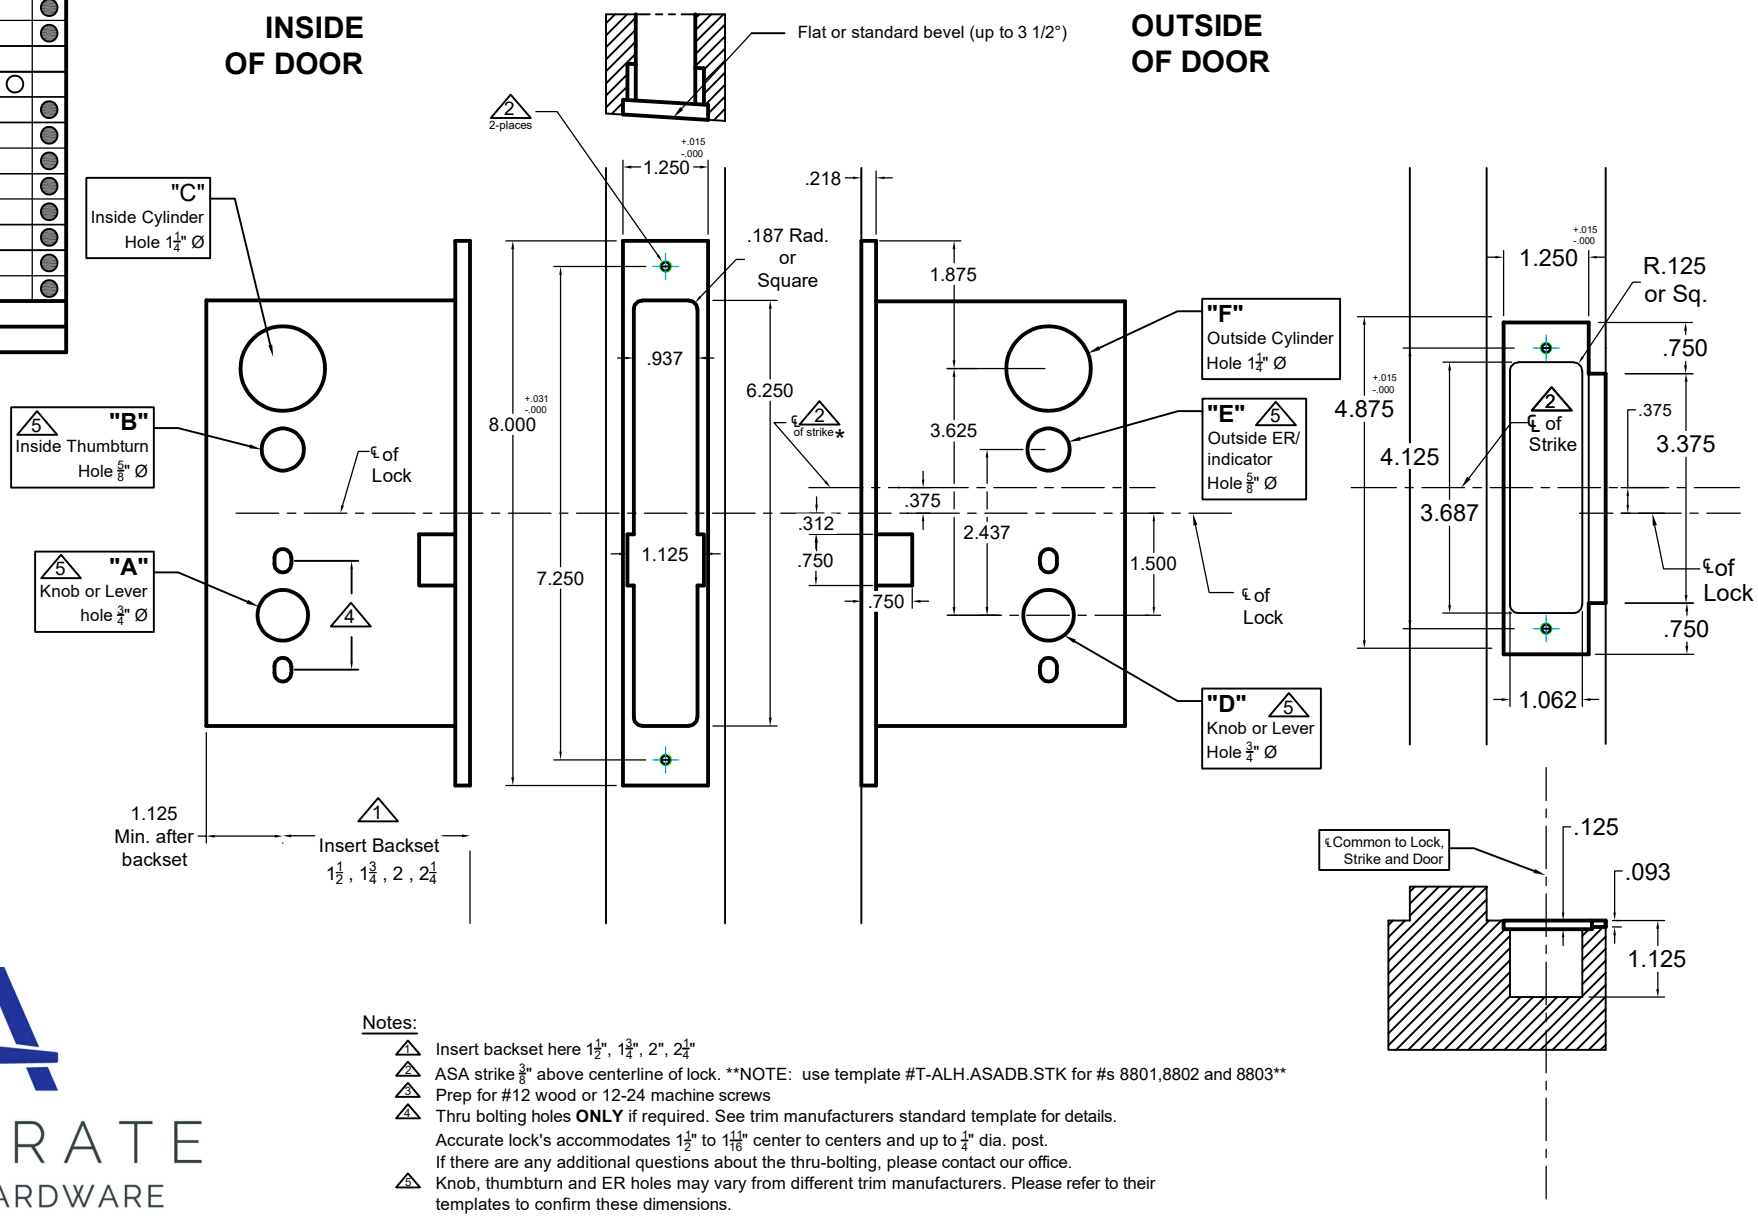

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Notes:

1. Insert backset here 1½", 1¾", 2", 2¼"
2. ASA strike ⅜" above centerline of lock. **NOTE: use template #T-ALH.ASADB.STK for #s 8801,8802 and 8803**
3. Prep for #12 wood or 12-24 machine screws
4. Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
   Accurate lock's accommodates 1½" to 1 11/16" center to centers and up to ¼" dia. post.
   If there are any additional questions about the thru-bolting, please contact our office.
5. Knob, thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details

Standard 8800 Lever x Lever or Knob x Knob Template All Backsets

T-ALH.8800.LL