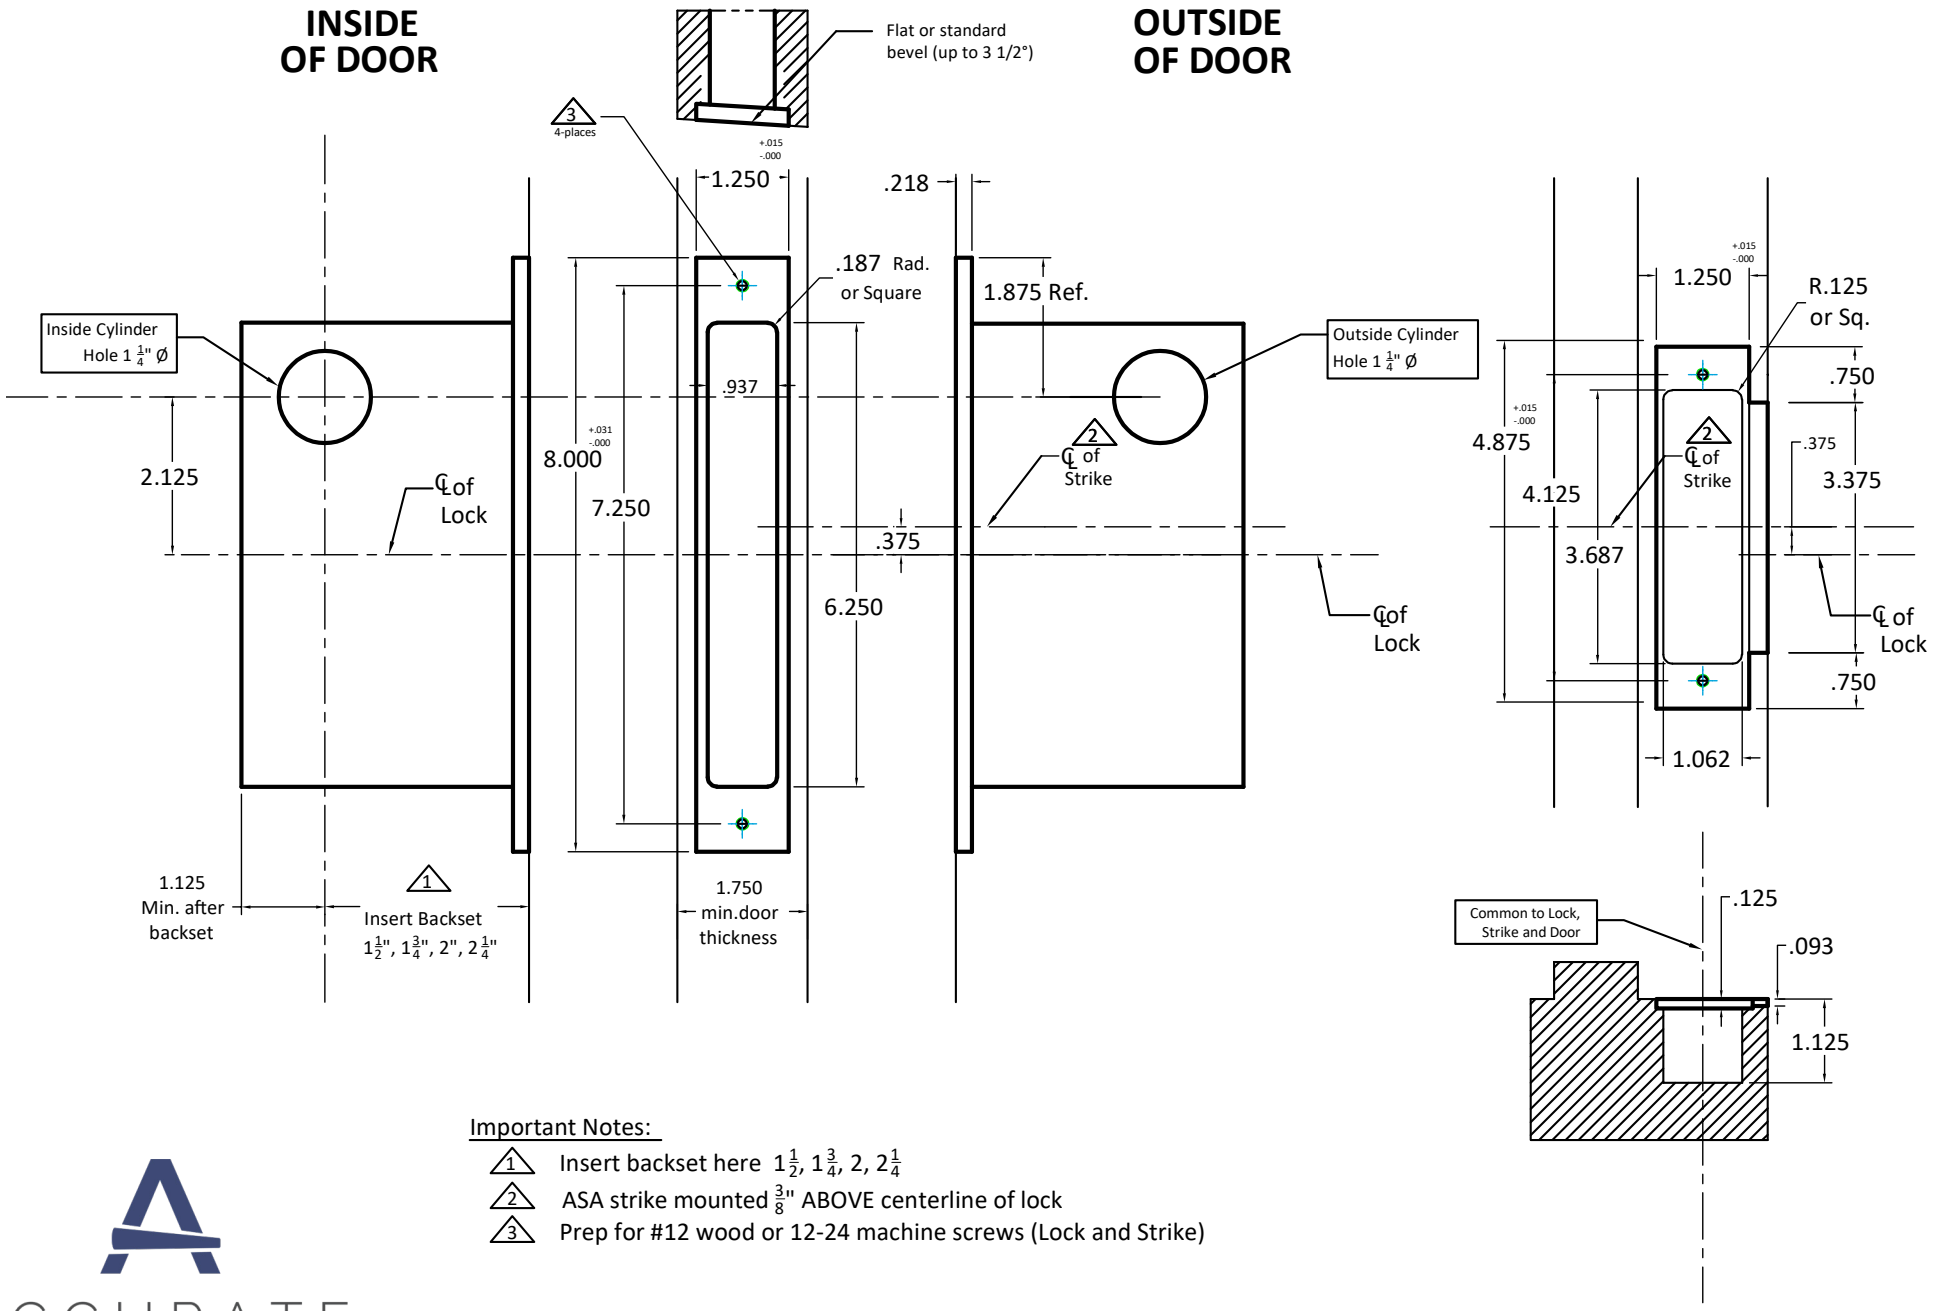

Important Notes:

1. Insert backset here $1\frac{1}{2}$, $1\frac{3}{4}$, 2, $2\frac{1}{4}$
2. ASA strike mounted $\frac{3}{8}$" ABOVE centerline of lock
3. Prep for #12 wood or 12-24 machine screws (Lock and Strike)

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details

Standard 8822ARL
All Backsets

T-ALH.8822ARL