Functions	A	B	C	D	E	F
9000ADL-USD	●			●		
9022USD	●		●	●		●
9022ARL-USD			●			●
9024USD	●	●		●		●
9024ARL-USD		●				●
9025USD	●			●		
9025ARL-USD						
9034USD	●	●		●		●
9039USD	●	●		●	○	
9039ARL-USD		●			○	
9042USD	●		●	●		●
9043USD	●	●		●		●
9043E-USD	●	●		●	●	
9044USD	●	●		●		●
9044E-USD	●	●		●	●	
9045USD	●			●		●
9045S-USD	●		●	●		●
9046USD	●		●	●		●
9048USD	●	●		●		●
9049USD	●	●		●		●
9053USD	●	●	●	●	●	●
9056USD	●		●	●		●
9058USD	○		●	○		●
9059USD	●			●		●
9060USD	○		●	○		●
9067USD	●	●		●		●
9069USD	●	●		●		●

(No strike needed)

● Required Holes
○ Optional Holes

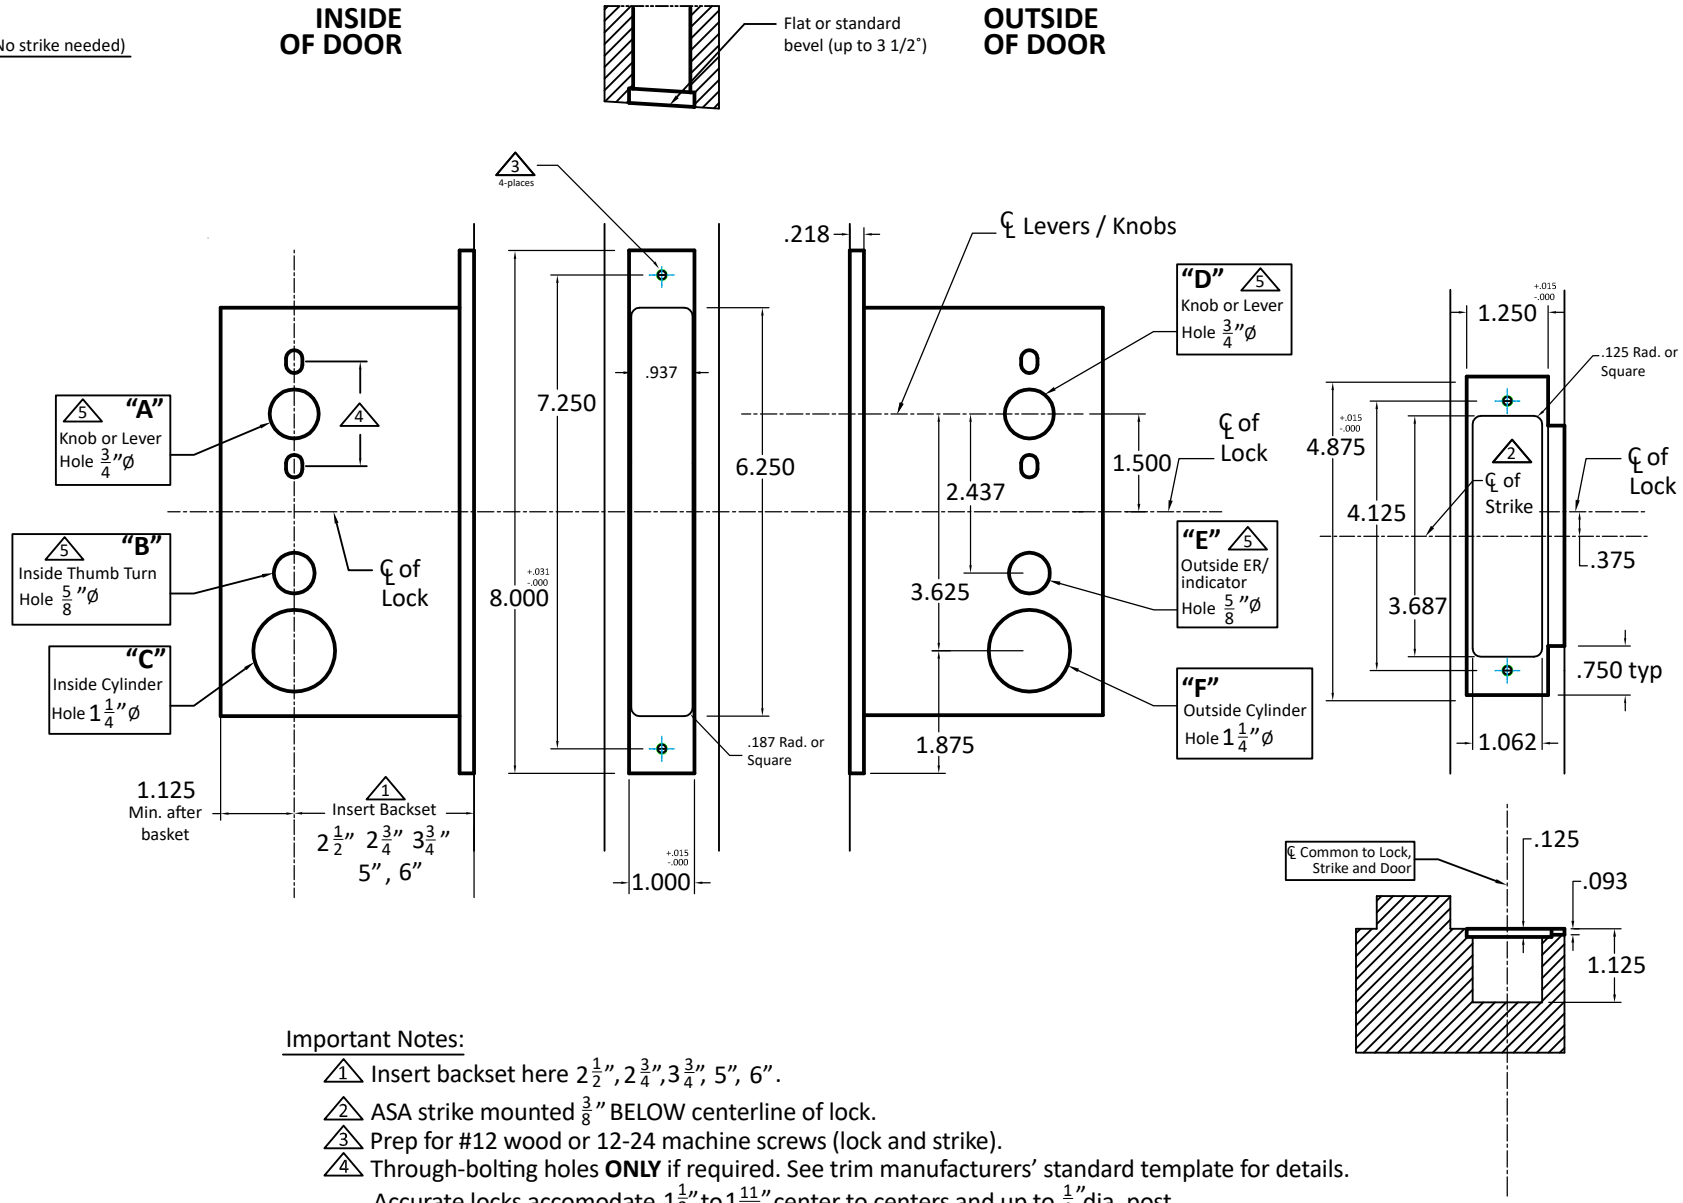

Important Notes:

1. Insert backset here $2\frac{1}{2}$", $2\frac{3}{4}$", $3\frac{3}{4}$", 5", 6".
2. ASA strike mounted $\frac{3}{8}$" BELOW centerline of lock.
3. Prep for #12 wood or 12-24 machine screws (lock and strike).
4. Through-bolting holes **ONLY** if required. See trim manufacturers' standard template for details.
   Accurate locks accomodate $1\frac{1}{2}$" to $1\frac{11}{16}$" center to centers and up to $\frac{1}{4}$" dia. post.
   If there are any additional questions about through-bolting , please contact us.
5. Knob/Lever, Thumb Turn, and ER holes may vary from different trim manufacturers.
   Please refer to their templates to confirm dimensions.

Additional Notes:

a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate contruction or re-inforcement for proper intallation of hardware shown.
b) Please contact us for double lipped template if needed.
c) See spec sheets for additional lock details.

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9000USD - Upside Down (Lever High) Template- All Backsets

T-ALH.9000USD