Functions	A	B	C	D	E	F
9122ML	●		●	●		●
9124ML	●	●		●		●
9125ML	●			●		
9139ML	●	●		●	○	

● Required Holes
○ Optional Holes

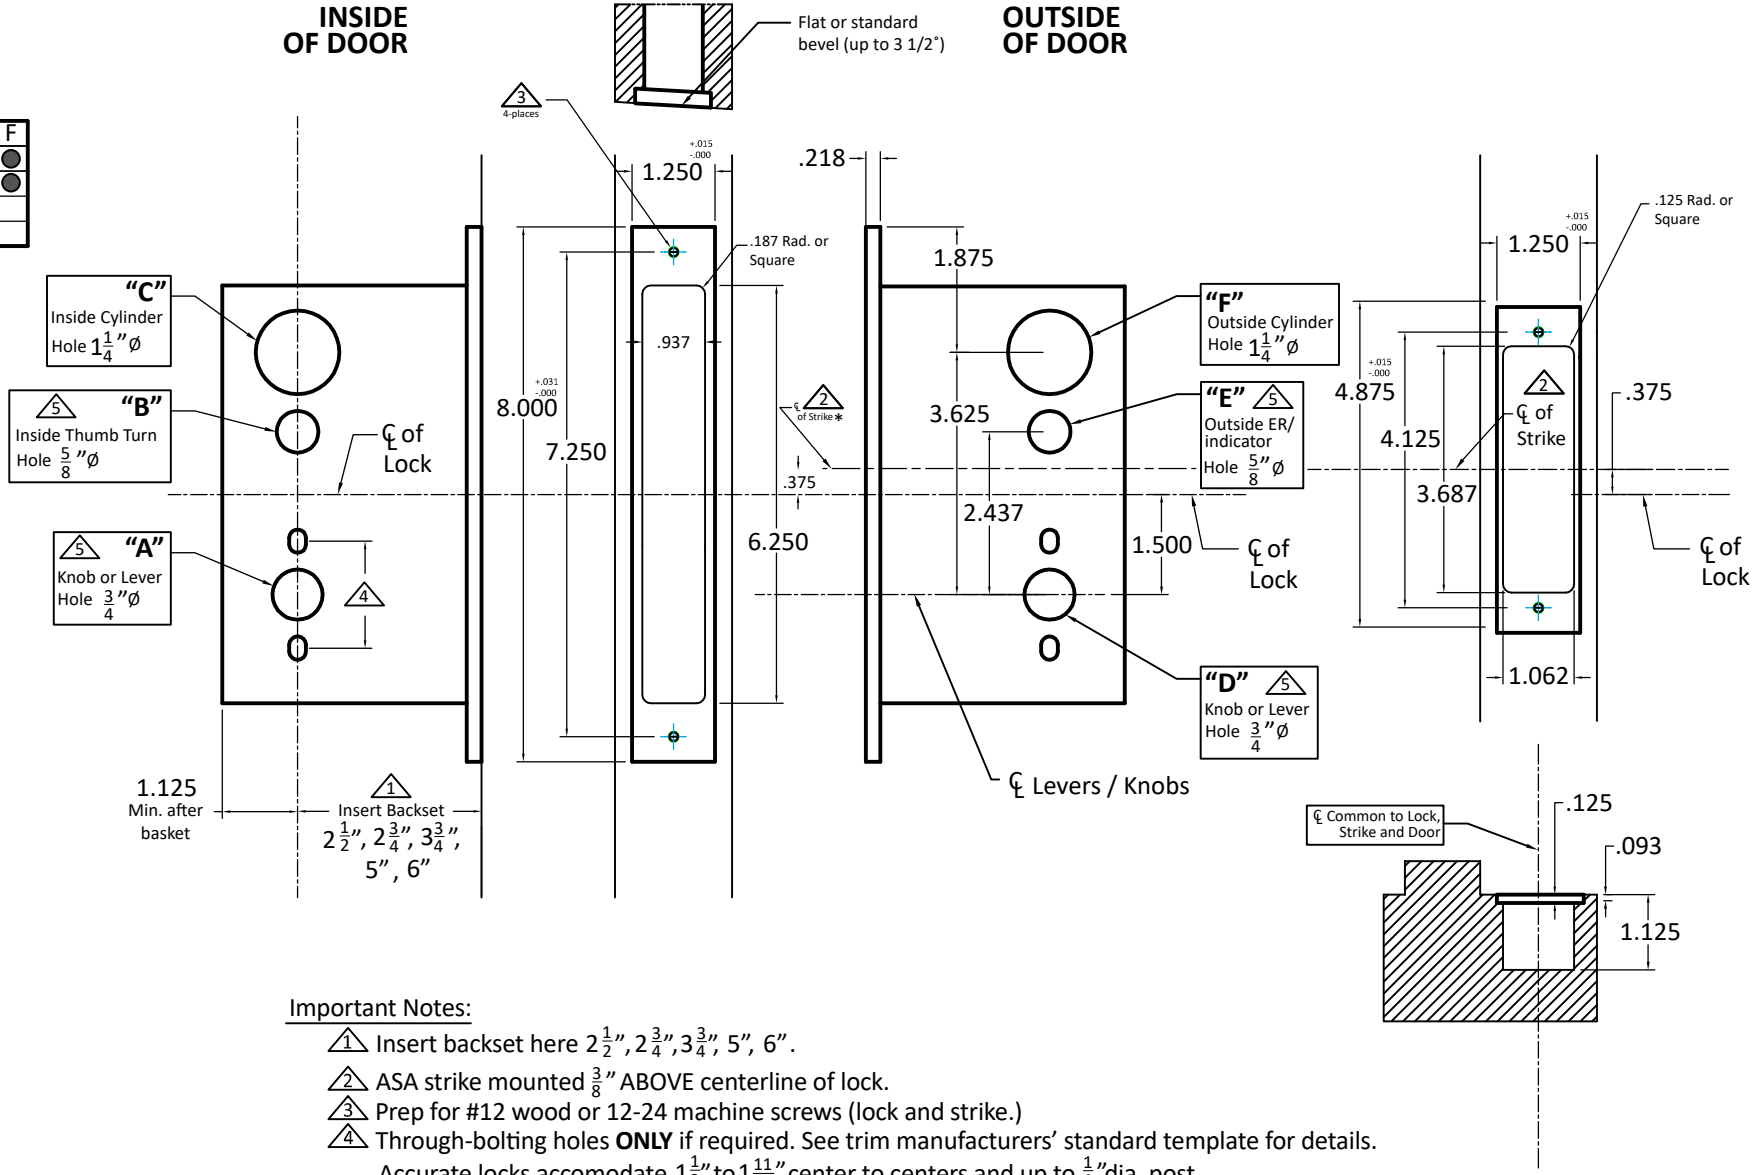

Important Notes:

1. Insert backset here $2\frac{1}{2}$", $2\frac{3}{4}$", $3\frac{3}{4}$", 5", 6".
2. ASA strike mounted $\frac{3}{8}$" ABOVE centerline of lock.
3. Prep for #12 wood or 12-24 machine screws (lock and strike.)
4. Through-bolting holes **ONLY** if required. See trim manufacturers' standard template for details.
   Accurate locks accomodate $1\frac{1}{2}$" to $1\frac{11}{16}$" center to centers and up to $\frac{1}{4}$" dia. post.
   If there are any additional questions about through-bolting , please contact us.
5. Knob/Lever, Thumb Turn, and ER holes may vary from different trim manufacturers.
   Please refer to their templates to confirm dimensions.

Additional Notes:

a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate contruction or re-inforcement for proper installation of hardware shown.
b) Please contact us for double lipped template if needed.
c) See spec sheets for additional lock details.

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Standard 9100ML Magnetic Lever x Lever or Knob x Knob - All Backsets

T-ALH.9100ML.LL