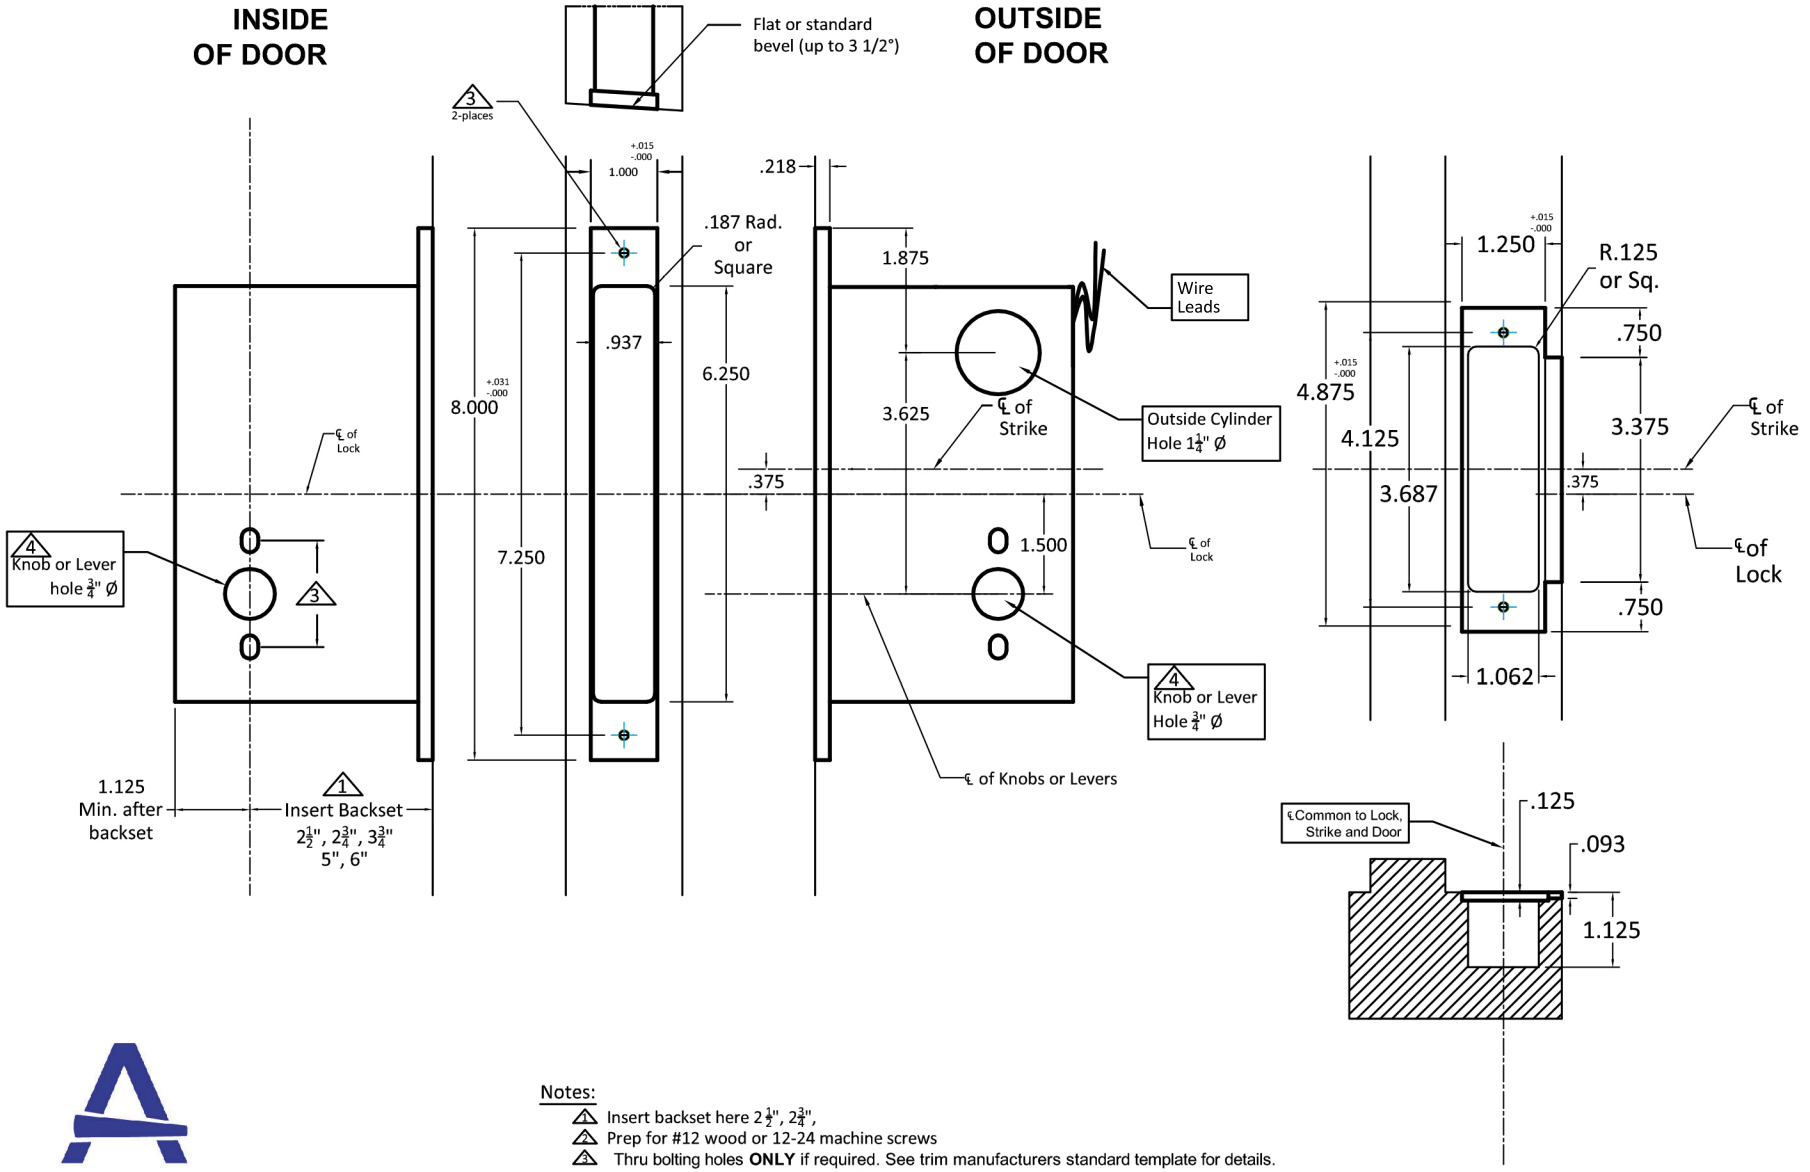

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Notes:

1. Insert backset here 2½", 2¾",
2. Prep for #12 wood or 12-24 machine screws
3. Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
   Accurate lock's accommodates 1½" to 1 11/16" center to centers and up to ¼" dia. post.
   If there are any additional questions about the thru-bolting, please contact our office.
4. Knob, thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing
- adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details

Standard M9045E/M9056E/M9059E
Lever x Lever or Knob x Knob Template
All Backsets

T-ALH.M9045E/M9056E/M9059E.LL