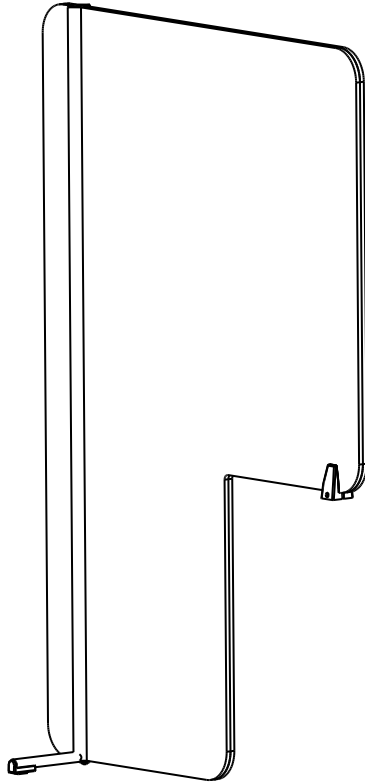## Kaya freestanding install guide
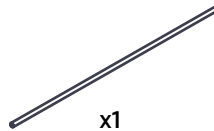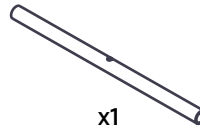
x1 Kaya Bridge

CONTENTS

PET panel - colour and model as per order
x1

Support vertical - with welded washer
x1
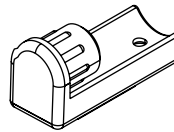
Support horizontal
x1

1" tube saddle washer
x1

1" tube glide
x2

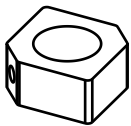Curved washer
x1

Black HDPE Collar
x1

No. 12 x 1.25"
Self drilling screw
x1

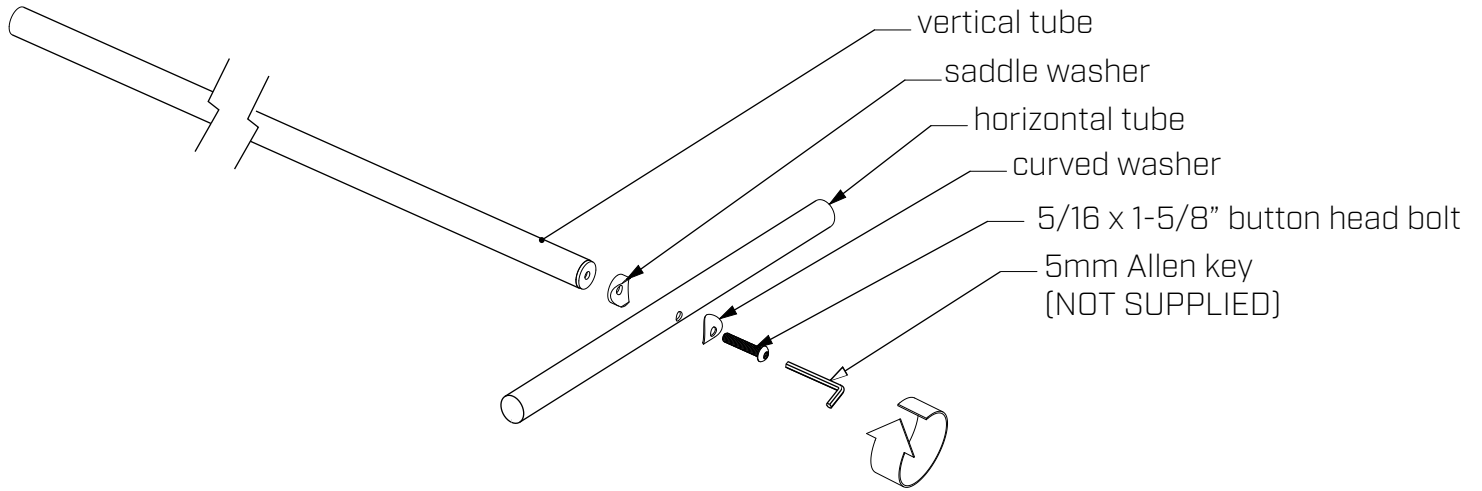Button head hex drive screw - 0.3125" x 1.625" long
x1

Safety protection you will need:

• Safety Glasses

Tools you will need:

• Set of Allen Keys

O

FUNC.

WHERE FUN AND FUNCTION CONNECT
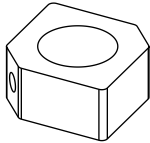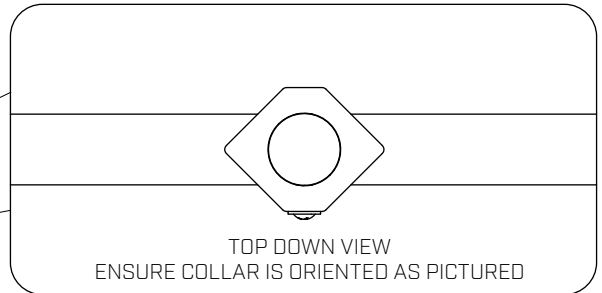
1

vertical tube

saddle washer

horizontal tube

curved washer

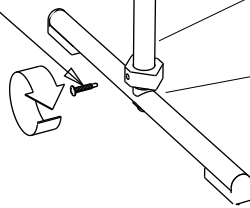5/16 x 1-5/8" button head bolt

5mm Allen key
(NOT SUPPLIED)

2

(2) 1" tube glide
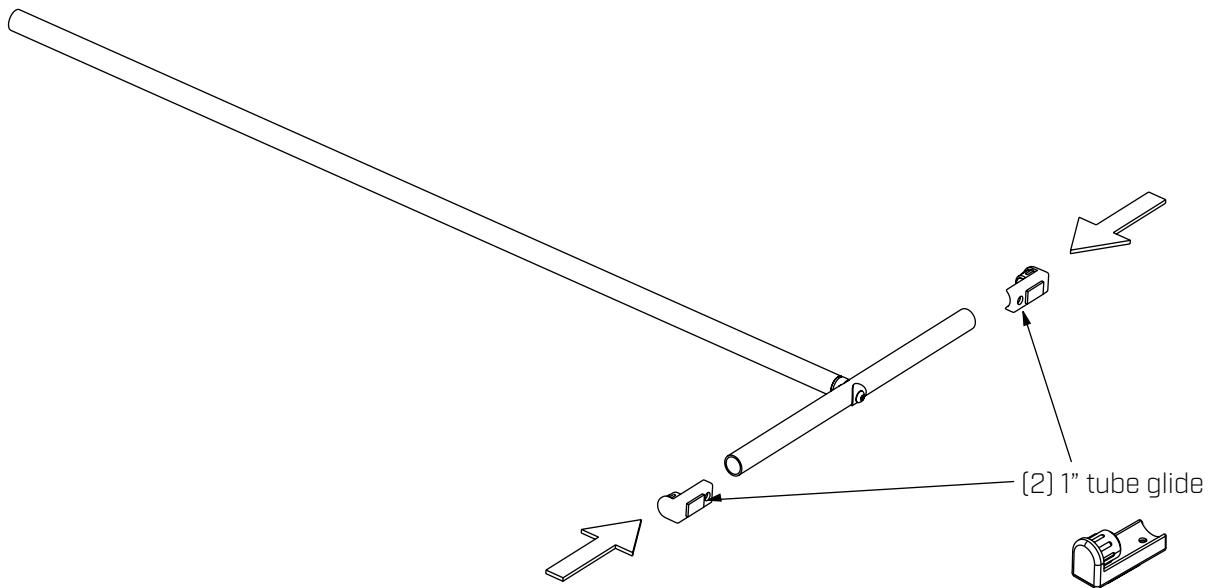
3

BLACK HDPE COLLAR

NO.12 X 1.25" SELF
DRILLING SCREW

X= DESK TOP HEIGHT - 28"

X

TOP DOWN VIEW
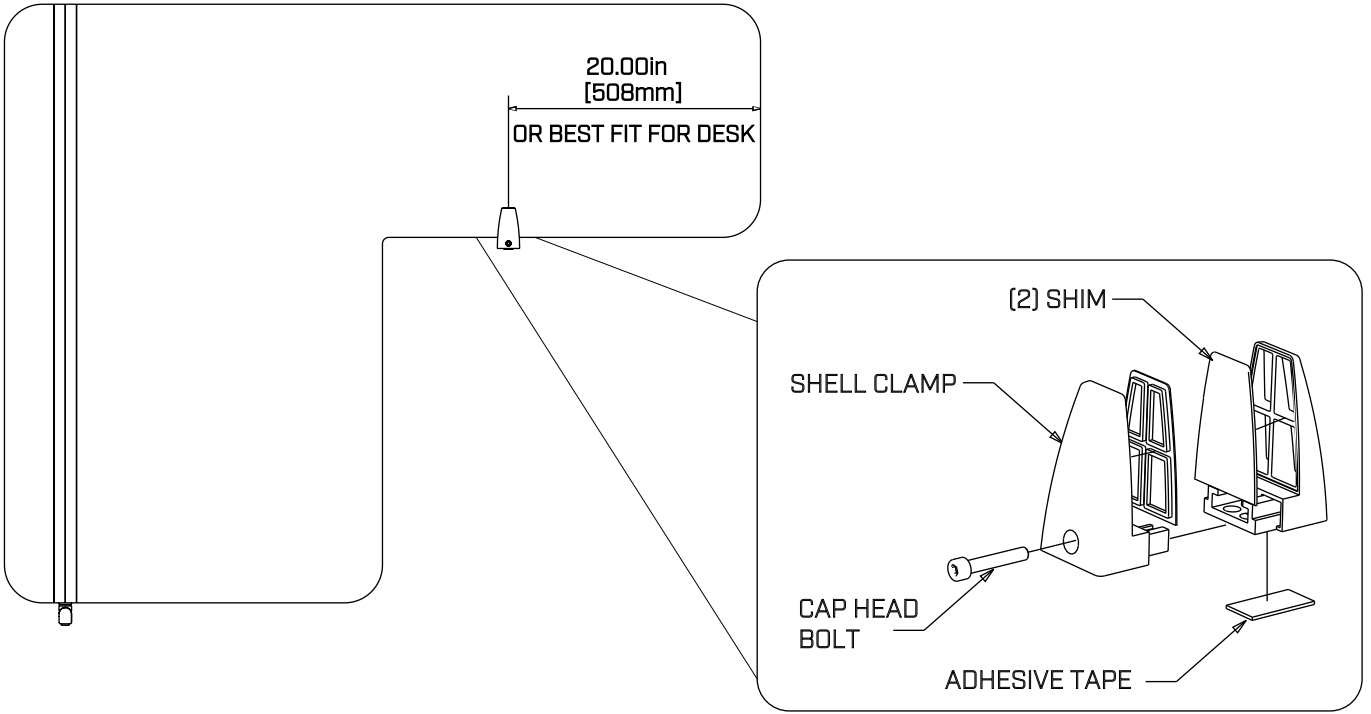ENSURE COLLAR IS ORIENTED AS PICTURED
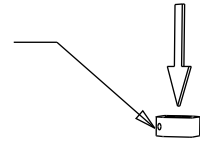
4
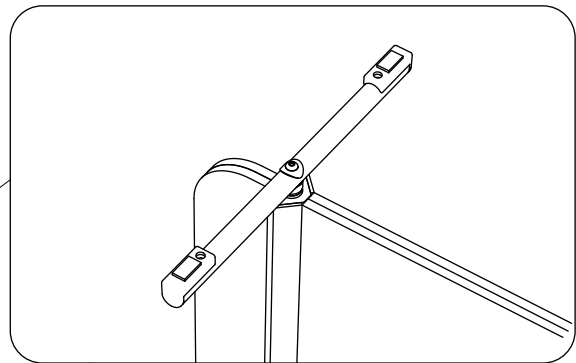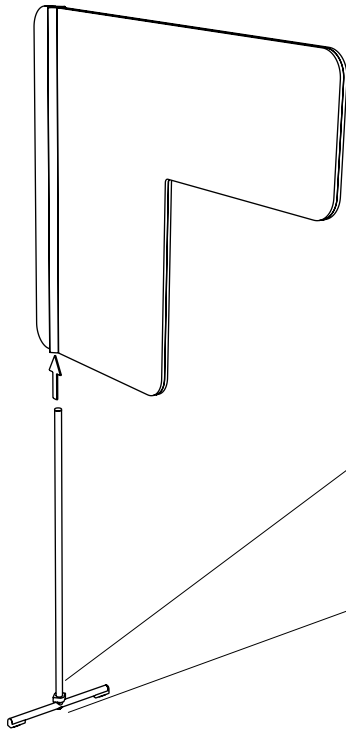
ENSURE COLLAR IS SEATED INSIDE PET PANEL POCKET

5

20.00in
[508mm]

OR BEST FIT FOR DESK

[2] SHIM

SHELL CLAMP

CAP HEAD
BOLT

ADHESIVE TAPE

6