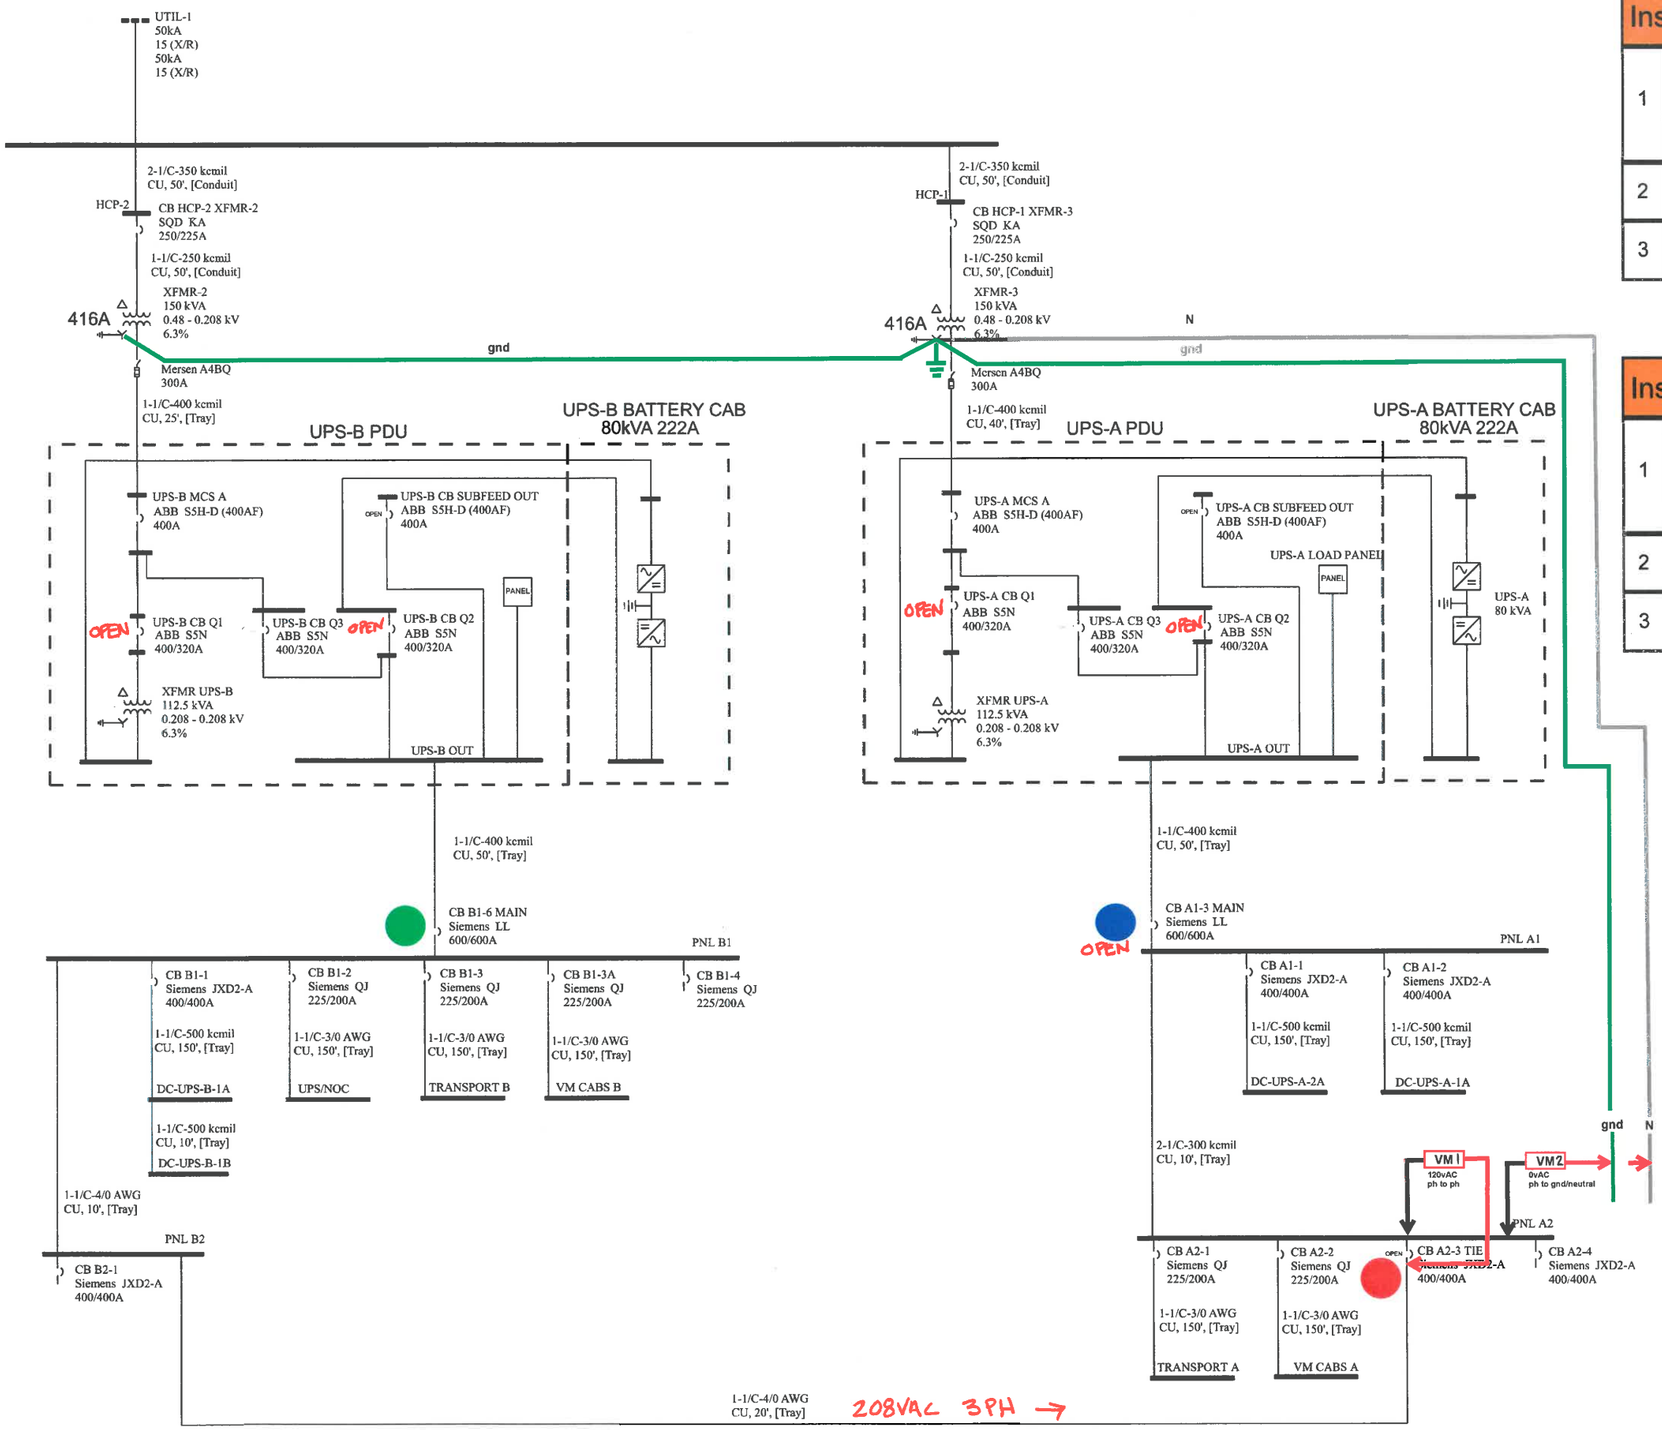

Instructions to Transfer all A and B Loads to UPS-A

1	Verify that all switches and breakers are in the open/closed state shown on the schematic on the left. If they are NOT, stop and re-evalaute. If they are in the open/closed state shown on the schematic, proceed with step 2.
2	Open/LOTO CB B1-6 Main
3	Close CB A2-3 Tie

Reverse procedure to return to Normal Operating Setup

Instructions to Transfer all A and B Loads to UPS-B

1	Verify that all switches and breakers are in the open/closed state shown on the schematic on the left. If they are NOT, stop and re-evalaute. If they are in the open/closed state shown on the schematic, proceed with step 2.
2	Open/LOTO CB A1-3 Main
3	Close CB A2-3 Tie

Reverse procedure to return to Normal Operating Setup