1.
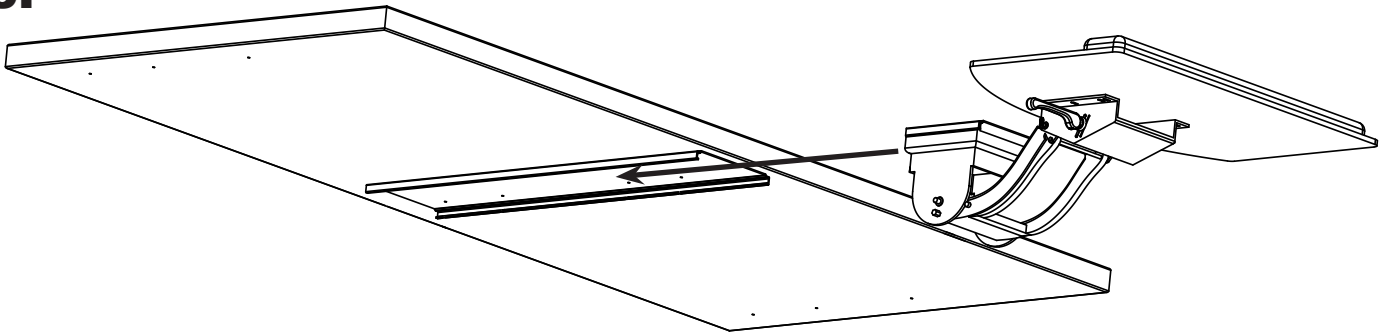

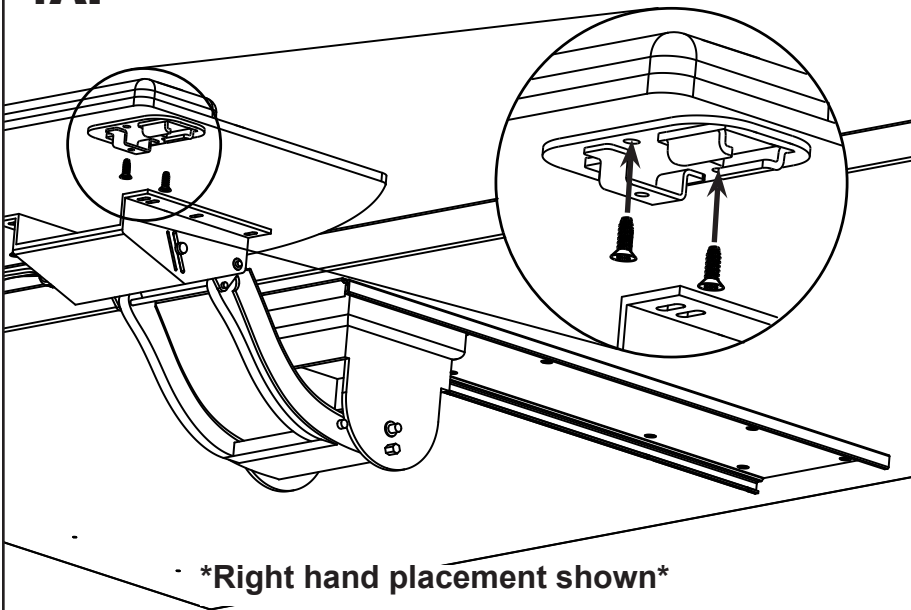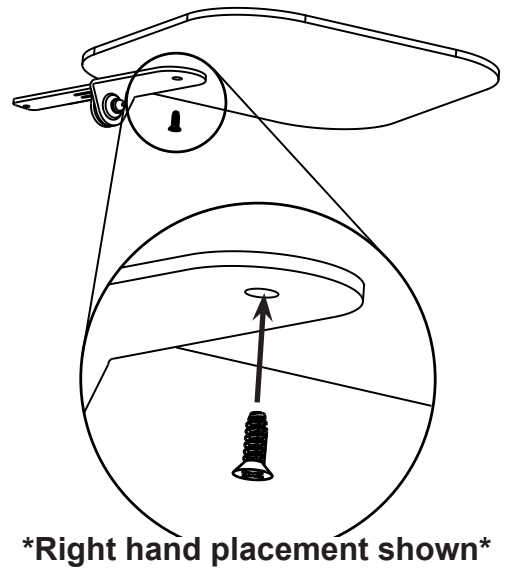Using template provided, install keyboard track onto underside of worksurface.

2.
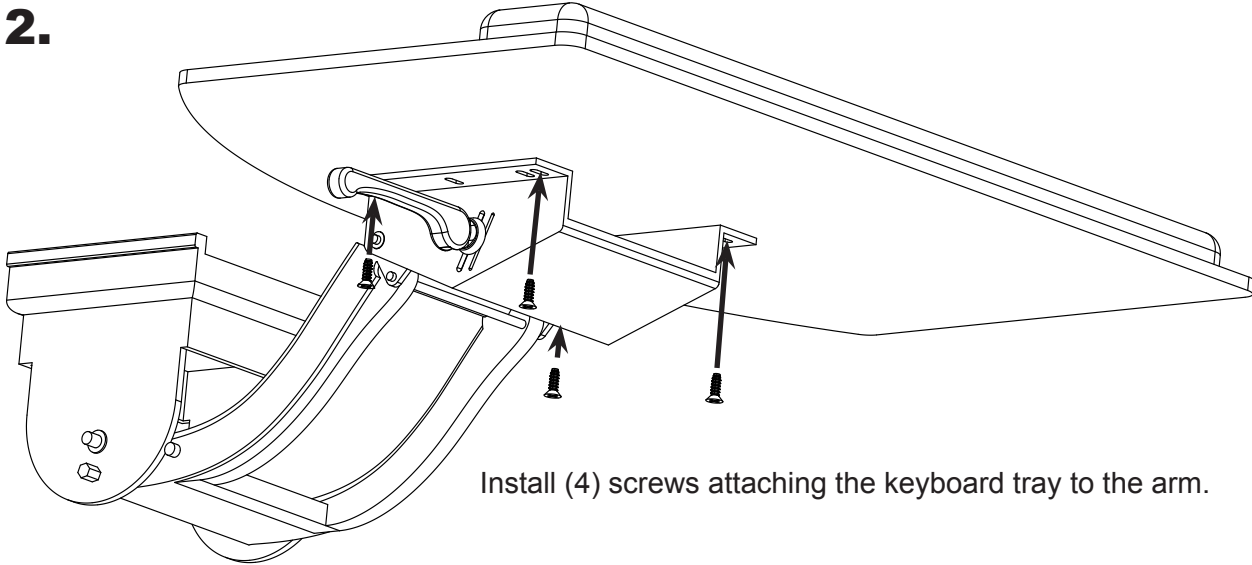
Install (4) screws attaching the keyboard tray to the arm.

3.

Install keyboard tray/arm into track on underside of worksurface.

4A.

Right hand placement shown

4B.

Right hand placement shown

Determine if you want a right or left handed placement. Install bracketry on side that you want to install the mouse tray using (1) screw. Install bracketry onto mouse tray using (1) screw.

5.

Slide mouse tray into bracketry on underside of keyboard tray. Once mouse tray has been inserted into bracketry, tighten bolt to secure.