LUXOR | H.WILSON

3 Shelf LP + LE Cart Instructions

07/11/13

www.luxorfurn.com
www.hwilson.com

Parts List

Tools Required
- Rubber Mallet

NOTICE:
Leg lengths may vary by model

A x1

C x1

E x4

F x4

B x1

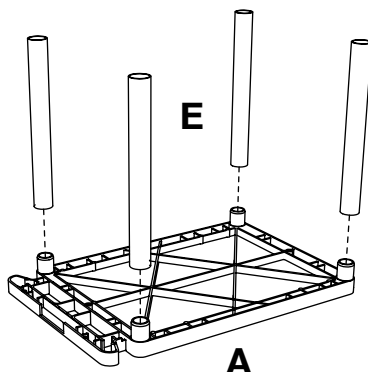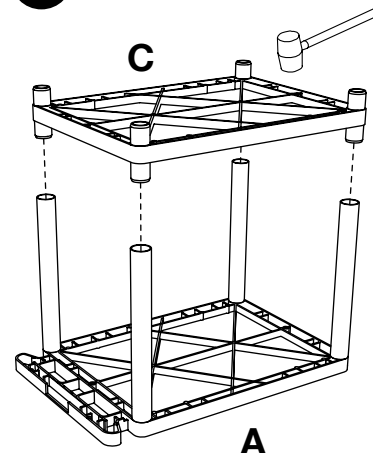**D** x4

1

D

B
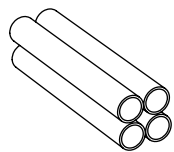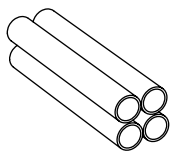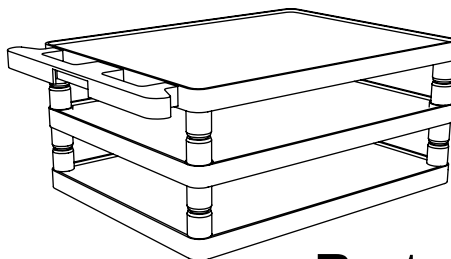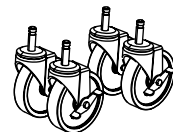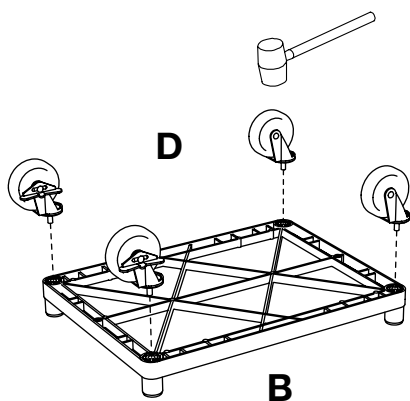
2 Install optional cabinet pack / pullout shelf / electrical assembly after step 1

E

A

3

C

A

4

F

C

5

B

C

6

LUXOR | H.WILSON

Front Pullout Shelf Instructions
LP + LE Cart

05/03/13
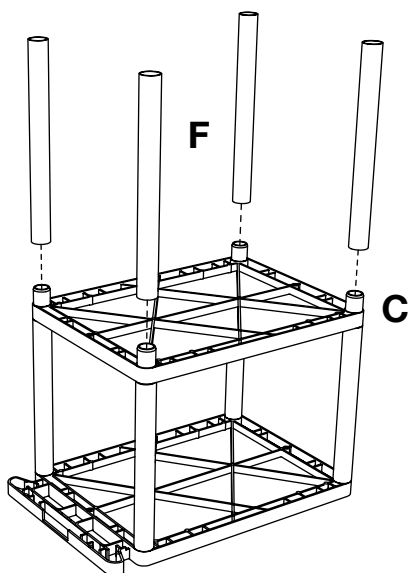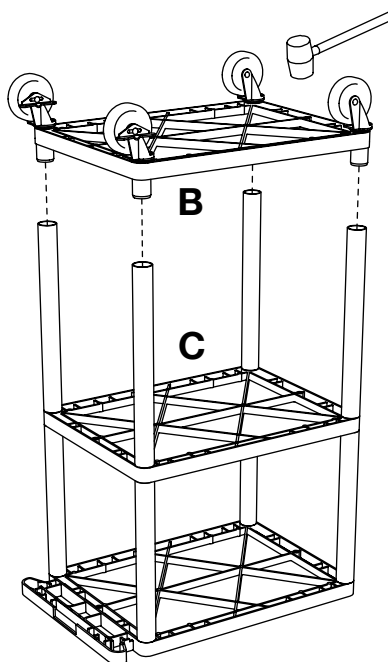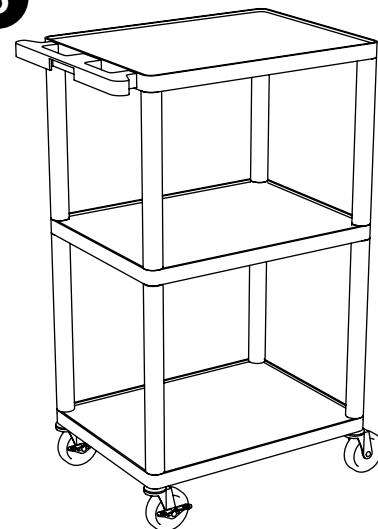
www.luxorfurn.com
www.hwilson.com

Parts List

Tools Required
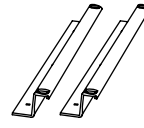- Phillips Screwdriver

P ×1

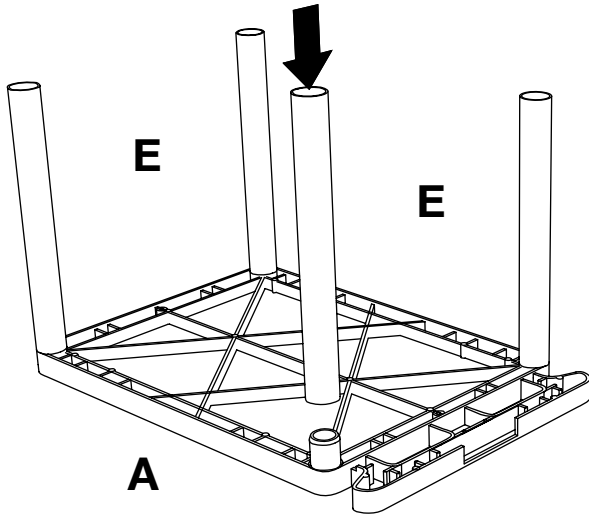**G** ×1

H ×1

K ×1

L ×2

M ×6

N ×4

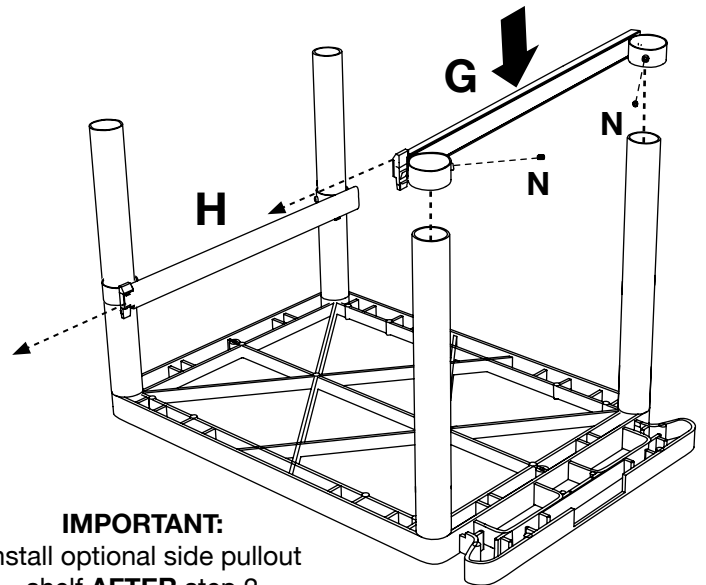**1** Lay the top shelf of your cart upside down and Install the four legs intended for this shelf.
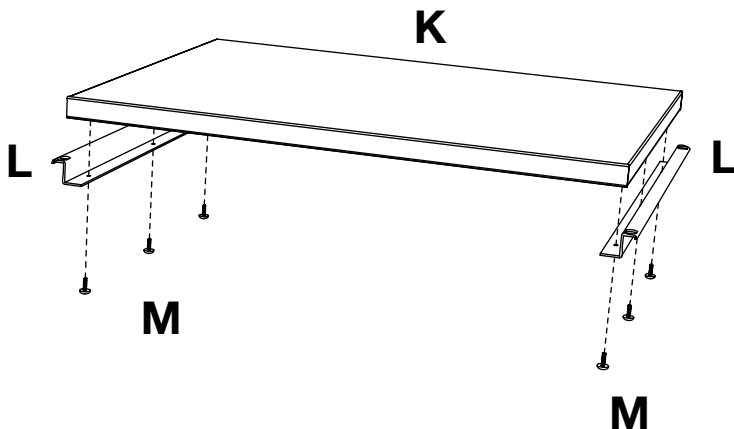
E

E

E

A

2 Slide and align runner **G** & **H** onto the legs and tighten screw **N** with allen wrench **P**.

G
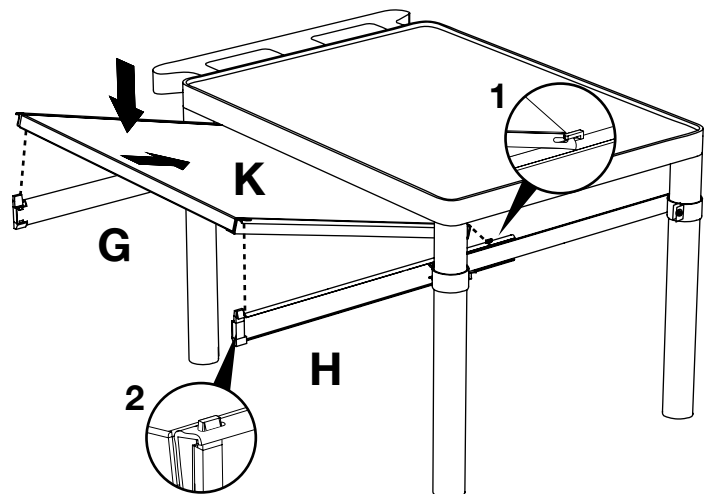
N

N

H

IMPORTANT:
Install optional side pullout shelf **AFTER** step 2

3 Take pullout shelf **K** and bracket **L** and screw together into the unfinished surface of shelf **K** with screw **M**.
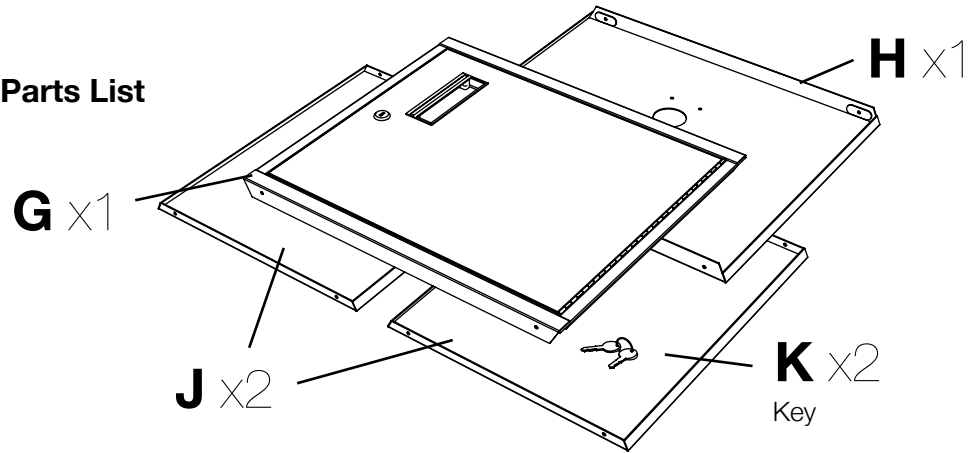
K

L

L

M

M

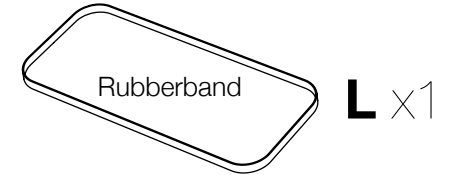**4** Mount pullout shelf **K** to runner **G** & **H** so that the edge of the shelf snaps into the runner hooks.

1

K

G

2

H

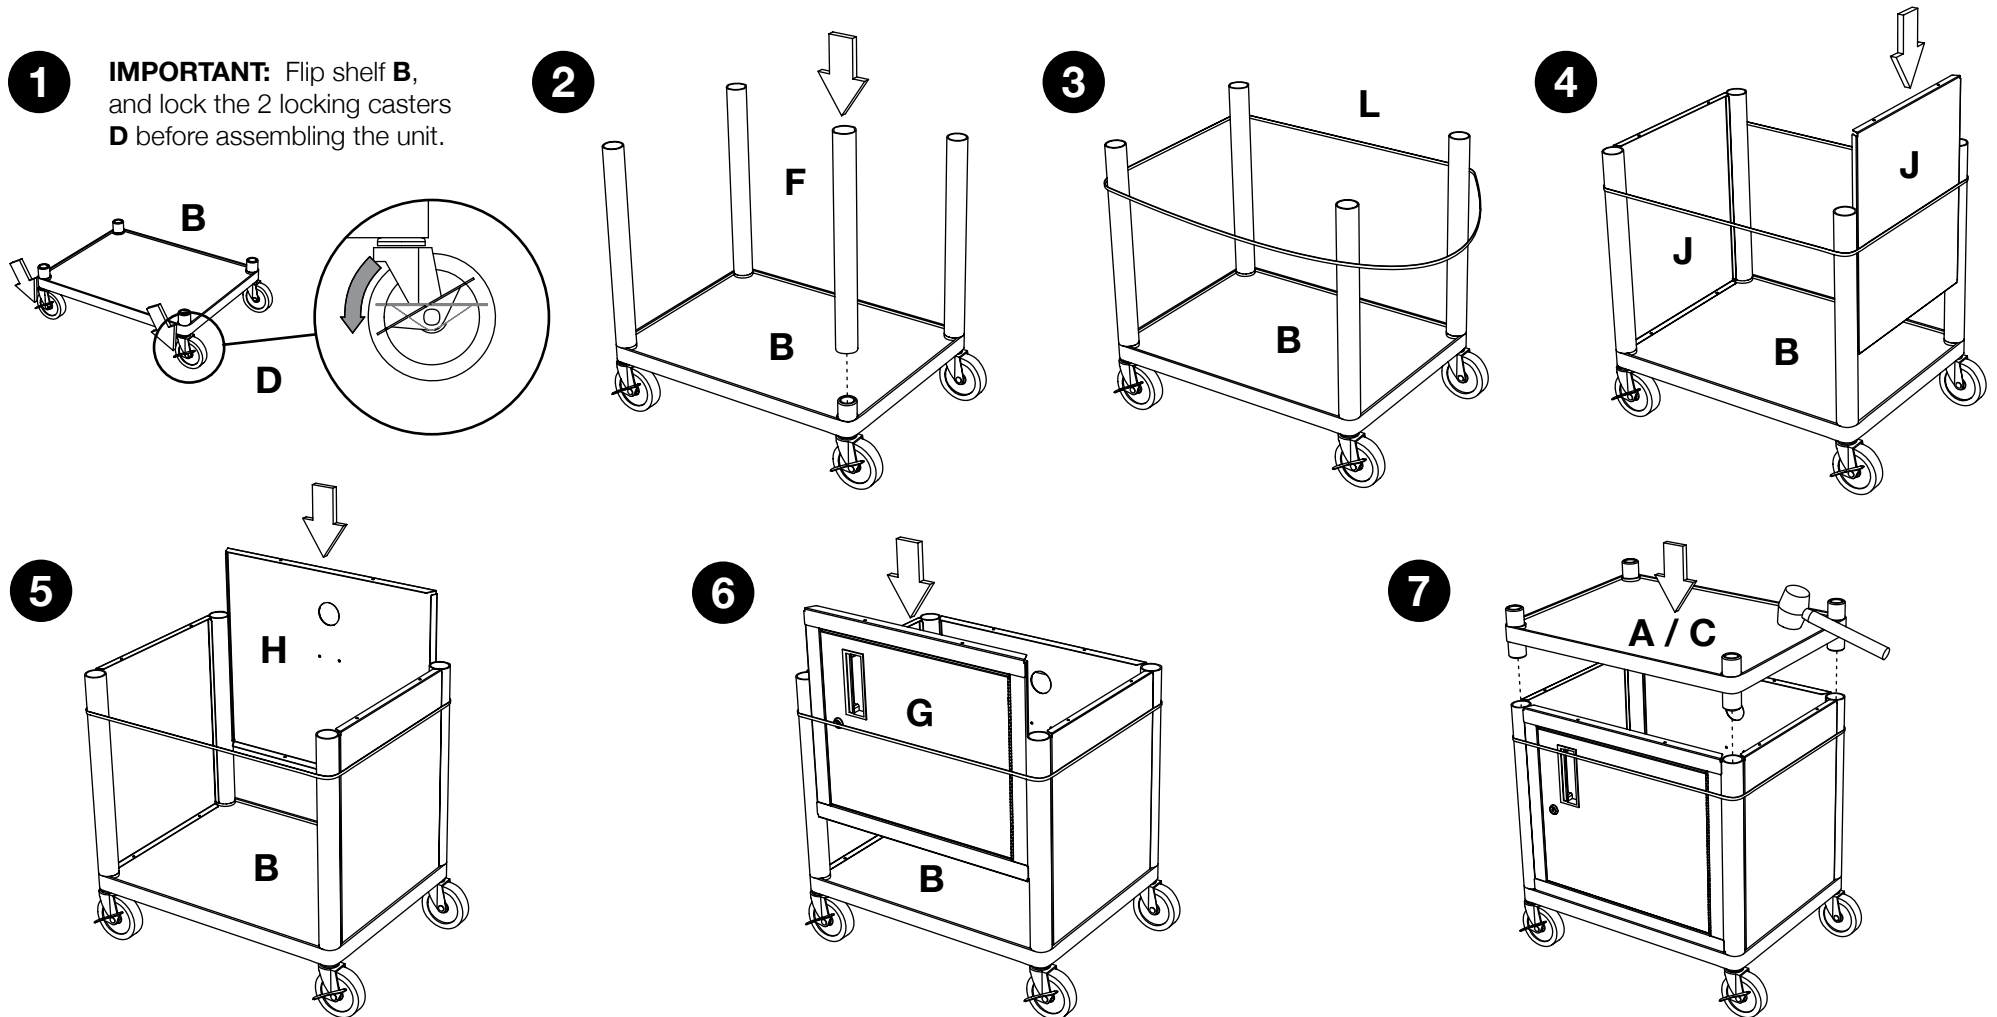You have now completed your pullout shelf.

LUXOR | H.WILSON

www.luxorfurn.com
www.hwilson.com

LP + LE Cart Cabinet
Pack Instructions

Please consult your cart base
unit instructions before starting

Parts List

H ×1

G ×1

J ×2

K ×2
Key

Tools Required

- Rubber Mallet

Rubberband **L** ×1

1 **IMPORTANT:** Flip shelf **B**, and lock the 2 locking casters **D** before assembling the unit.

B

D

2 **F** **B**

3 **L** **B**

4 **J** **J** **B**

5 **H** **B**

6 **G** **B**

7 **A / C**

LUXOR | H.WILSON

www.luxorfurn.com
www.hwilson.com

Parts List

Tools Required
- Philips Screwdriver

LP + LE Electrical
Assembly Instructions

F ×1
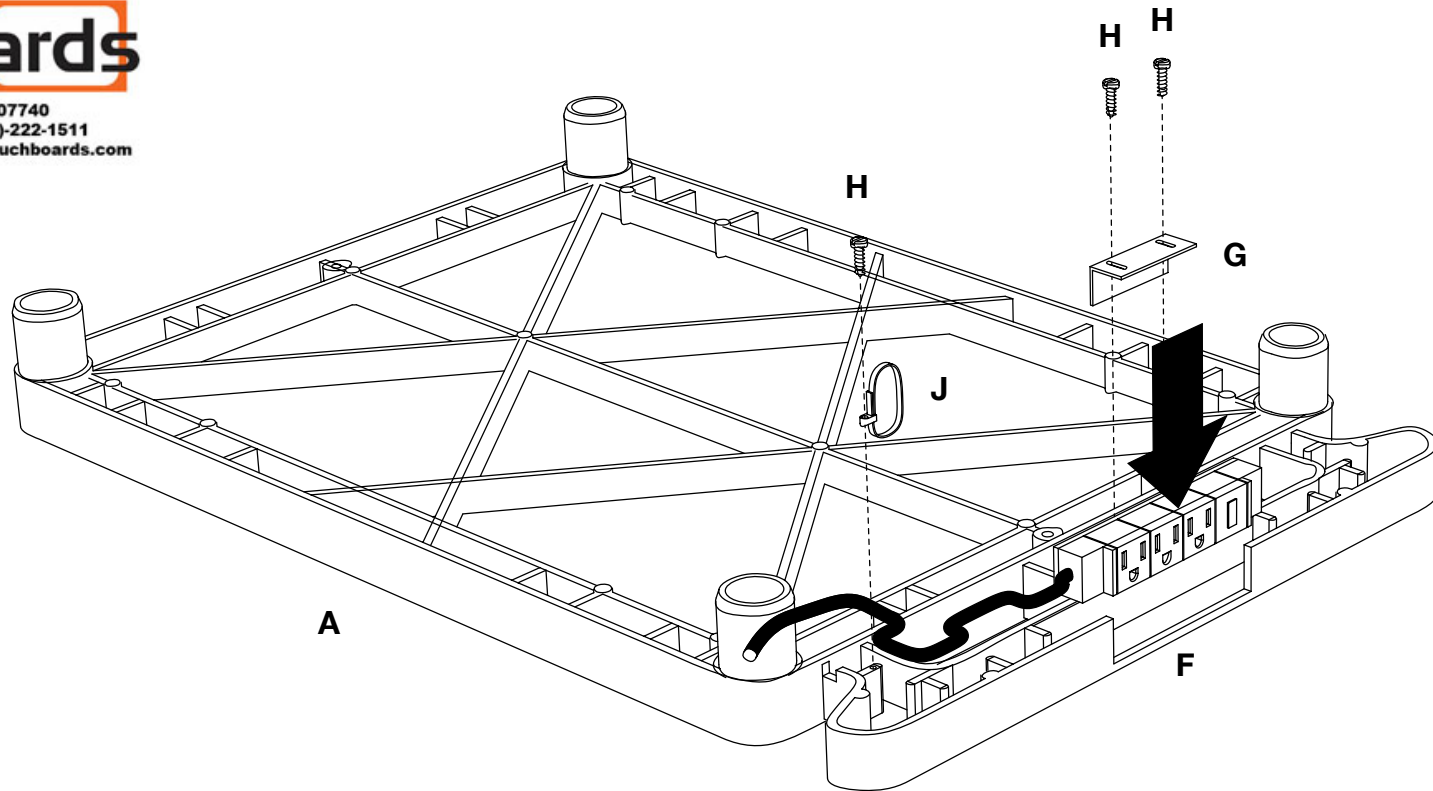
G ×1

H ×3
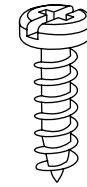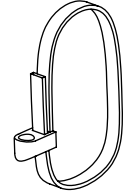
J ×1

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

H   H

H

G

J

A

F

1 Attach electric outlet **F** to top shelf **A**, secure with
L bracket **G** and cable lock **J**. Loop outlet cable
F through cable lock **J** and the inserts on shelf **A**.
Screw L bracket **G** and cable lock **J** onto top shelf
A with screw **H** and a philips screwdriver.