PANDUIT

DP6A 10GIG, DP6 PLUS and *DP5e*
Replacement Port Module

Part Numbers: DRJ6X88TGBL, DRJ688TGBL, DRJ5E88TGBL

INSTALLATION INSTRUCTIONS   PN392A

1   REMOVAL

Top of Panel

2   INSTALLATION

Top of Panel

TERMINATION INSTRUCTIONS

3

1.5" (38.1mm)

CWST

Trim pair separator and/or filler if present.

4   **T568B**   **T568A**

T568B			T568A		
P4		P3	P4		P2
P1		P2	P1		P3

5   **Option 1**   **Option 2**

T56   BA

Do <u>not</u> untwist more then 1/8" from the IDC tower

T56   BA

(T568B shown)

6   **PDT110 Tool**   (T568B shown)

CUT

7   (T568B shown)

CUT

T56   BA

T56   BA

8

9
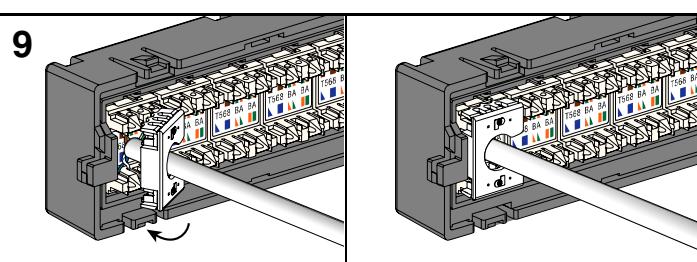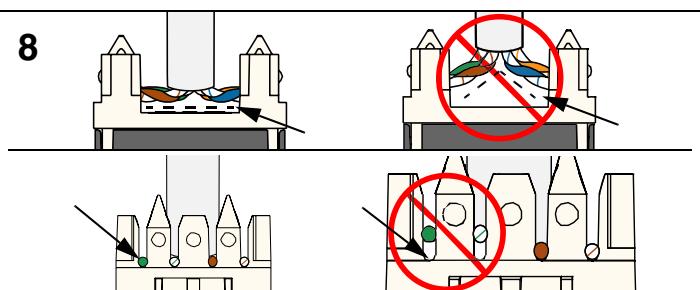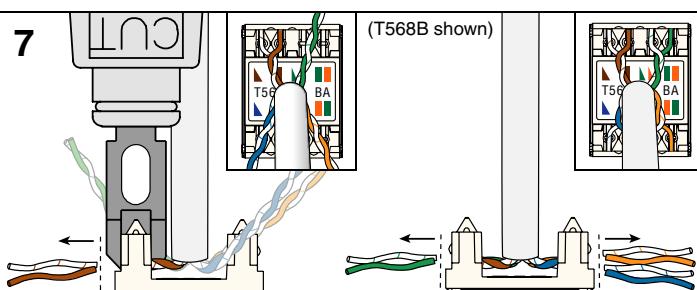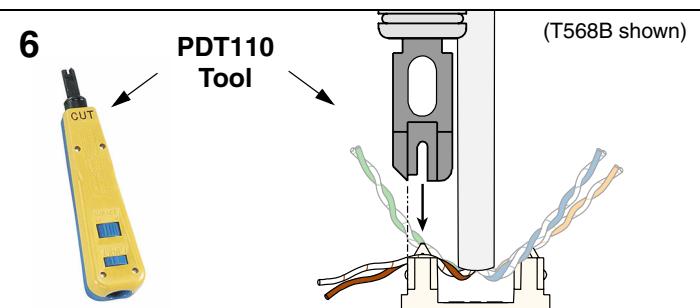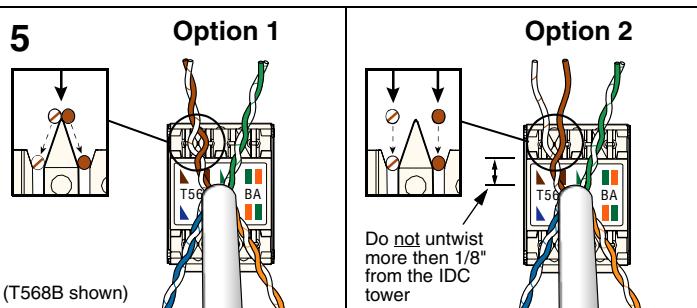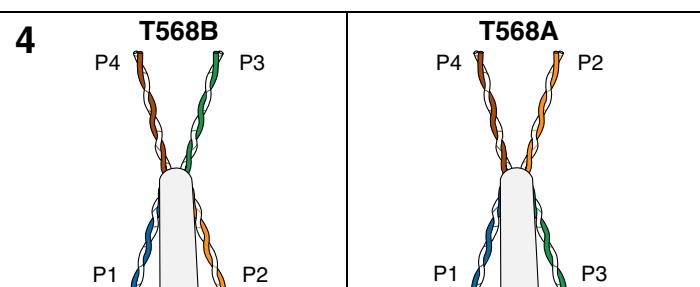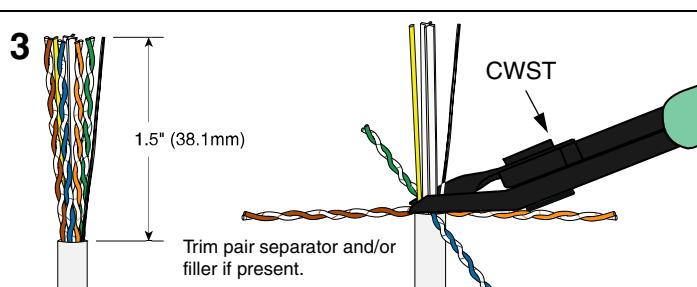
**Notes:**
1. For specified performance, follow TIA/EIA 568-B installation guidelines.
2. Port Modules can terminate PVC or Plenum rated 22-26 AWG solid or stranded IWC cable with 0.048 inch (1.2 mm) maximum insulated conductor outside diameter.
3. Port Modules may be re-terminated a minimum of 20 times.
4. For technical and performance information, consult *PANDUIT* Technical Support.

As with all Communication Components, the following statements apply:
1. Never install communications wiring during a lightning storm.
2. Never install communications wiring in wet locations unless the port module is specifically designed for use in wet locations.
3. Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
4. Use caution when installing or modifying communication wiring.