


---

Portable Digital Voice Amplifier  
**VOXFLOW**  
User Manual

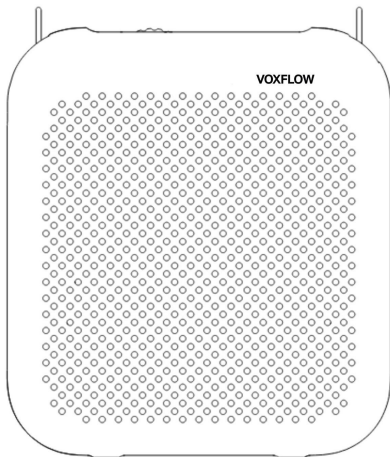

---

Welcome to our guide on how to use digital voice amplifier Voxflow, its capacity of lithium batteries can reach up to 2000mAh. With high endurance and long standby capacity, it's suitable for teaching, meeting, training, tour guide, singing, square dance, sales promotion, outdoor activities, etc. Please read the manual carefully before using, so that you can operate the voice amplifier correctly and get ideal performance. The current user manual in electronic form is available at [www.uhura.pl/voxflow](http://www.uhura.pl/voxflow) or after scanning the QR code visible here:



Visit [www.uhura.pl](http://www.uhura.pl) to download the user manual and guide for free.

**Odwiedź nas na [www.uhura.pl](http://www.uhura.pl) by pobrać instrukcję oraz bezpłatny poradnik.**

## Product functional features:

1. This version has a 2000 mAh built-in lithium battery.
2. With digital amplification technology, its rated power is 5 W and max power is up to 10 W.
3. High performance double NdFeB foam edge loudspeaker, with clear acoustic fidelity, loud voice, and high sensitivity.
4. Equipped with a USB-C interface, it can be charged with a 5 V mobile phone charger and computer USB port.
5. Dial volume switch, simple and fast volume control.
6. Support AUX-in, support MP3, WMA, WAV files.
7. Exquisite and fashionable appearance design, comfortable feel, simple function, simple operation, easy portability such as hanging on shoulder or waist.


---

## Function map :





Voice Amplifier

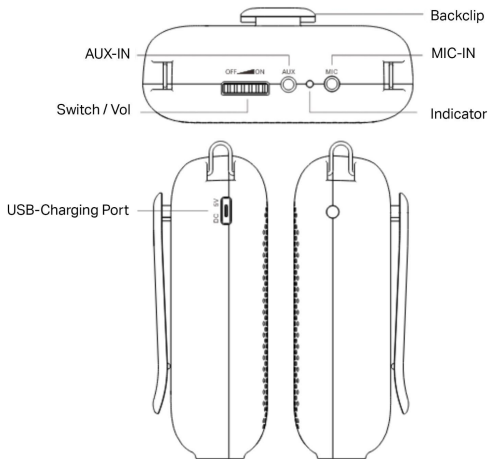---

# Voxflow



## Ports and controls:

	<b>Mic-in</b>	In Standby mode, insert microphone to 3.5 mm microphone interface to amplify your voice.
	<b>Aux-in</b>	3.5 mm audio interface, supports music playing, insert audio cable to play music automatically.
	<b>USB-C Charging Port</b>	Charging port supports charging through a 5 V mobile phone charger and computer USB port.
	<b>Dial Volume Switch</b>	Rotating the dial can switch on/off the amplifier and adjust the volume. Rotate the switch clockwise (pull right) to turn on the amplifier and increase volume, rotate the switch counterclockwise (pull left) to decrease volume till turn off the power.

## Operation description :

- Power switch operation for the Voice Amplifier**  
Turning On the Amplifier: Rotate the switch clockwise until you hear a distinct "click" sound and observe the indicator light illuminating.  
Turning Off the Amplifier: Rotate the switch counterclockwise to the left until you hear a clear "click" sound and notice the indicator light turning off.
- Volume control of the voice amplifier:**  
Rotate the volume dial to adjust the volume. Pull right the button clockwise to increase the volume and pull left the button counterclockwise to decrease the volume.
- Wired microphone voice amplification:**  
Please wear a wired microphone, properly adjust the microphone position, and keep it at least 50 cm away from the amplifier to avoid distortion. Then plug the audio plug

---

of the wired microphone into the MIC interface on the voice amplifier. Now your voice is amplified.

4. **Aux mode of the voice amplifier:**

Connect the voice amplifier with computers, mobile phones,, MP3, MP4 and other devices through the 3.5 mm AUX audio cable to play audio, it can be used as an external speaker.

5. **Low battery power of the voice amplifier:**

When the red LED of the voice amplifier flashes, it means the power is low. Please charge the voice amplifier.

6. **Voice amplifier charging:**

Voice amplifier can be charged through a USB-C cable when you connect it to a computer, a 5 V mobile phone charger, or a mobile power supply device etc. The indicator flashes 1 time/second when it's being charged. The indicator stops flashing when the speaker is 80% charged. It will be fully charged if you continue to charge for one more hour. When the indicator flashes quickly which shows that the battery power is low, please charge it. It takes about 4-6 hours to fully charge it.

## Tips and cautions:

1. The microphone should be placed 0.5 to 1 centimeters in front of your mouth. It is suggested that the sponge cover should not be removed, because the sponge cover can weaken the air flow, reduce the noise, and make the voice more clear.
2. Microphone should not be close to the voice amplifier, and it's better not to place the amplifier in front of the microphone. If squeaking occurs, you can reduce the volume appropriately or enlarge the distance between the microphone and the amplifier. The microphone pickup head should not be grasped by hand, otherwise it will squeak because of resonance.
3. The product only supports standard 5 V charging and does not support all kinds of QC fast charging. Charging with a voltage higher than 5 V will burn the product or fail to charge.

- 
4. When you use it for the first time, or after a long time before you use it again, please keep the amplifier fully charged to ensure battery life.
  5. To avoid distortion or damage caused by excessive voltage or current, please do not insert the external sound source signal into the MIC interface.
  6. Please don't disassemble or repair it by non-professional technical personnel. If there are any problems, please contact our company for after sale service.
  7. To prevent the danger of short-circuiting, please keep products or accessories away from water, moisture, rain, or splash.
  8. Do not use it in inflammable and explosive areas or in areas where radio equipment is prohibited. When you are entering dangerous areas or prohibited areas, power should be turned off to avoid potential safety hazards.
  9. Do not use it in high temperature, high pressure, and high humidity environments (such as sun exposure, stove, heater, humidifier, water pool, etc.). Do not place it or close to dangerous sources (fire source, liquid, explosive, high-speed machinery, etc.) to avoid damage and danger.
  10. To protect the environment, please put the discarded amplifier in the designated trash can or send it back to the manufacturer. It should not be discarded at will.

## Packing List :

- Voice amplifier • 1,
- 3.5mm audio cable • 1,
- USB-C cable • 1,
- headset wired microphone • 1,
- adjustable waistband • 1,

## Product specification :

Rated power	5 W
Max power	10 W
Loudspeaker	3 inches 2 $\Omega$ magnetic speaker
Frequency response	120 Hz - 15 KHz
Battery	3.7 V / 2000 mAh, 1 lithium battery
Charging voltage	USB/DC 5V / 1A
Charging time	2-3 h
Using time	16-18 h
Size	91.1 • 101.5 • 37.8 mm
Net weight	159.5 g

1. Specification of wired version with 2000 mAh lithium battery

### Product Support:

For support please contact the seller or visit our website: [www.uhura.pl](http://www.uhura.pl)

**UHURA BIONICS**

**We can hear you! - tour needs and your speech problems**

We are UHURA BIONICS, a Polish startup that has set itself the goal of solving the problem of atypical speech (speech and voice disorders) of over 136 million people around the world.

Causes of atypical speech: laryngectomy, cerebral palsy (CP), multiple sclerosis (MS), spinal muscular atrophy (SMA), amyotrophic lateral sclerosis (ALS, SLA), Down syndrome, Parkinson's disease, Alzheimer's, stroke. We have created and are developing an AI module for speech conversion - improving speech understanding and intonation - bringing people with atypical speech closer to the process of not only understandable, but also free communication. Our research team is constantly working and developing the AI algorithm, at the same time placing it in products developed by UHURA BIONICS - tailored to the needs of the patient and his condition.

We have introduced the VOXFLOW voice amplifier to easily enable you to speak louder and clearer. It will give you confidence in any situation and make you heard. Konrad, has undergone laryngectomy himself, he builds our entire team and inspires us so that atypical speech is not a barrier to communication, he uses VOXFLOW mainly in restaurants or public speaking.

---

# A laryngectomy guide:

Here is a free book dedicated to all laryngectomized patients and their caregivers for their courage and perseverance. Contains a handful of practical tips and instructions. You can download it here for free:

[www.uhura.pl/guide](http://www.uhura.pl/guide)

If you want to receive it in a printed version - write to us - we will send it to you after covering only the shipping costs: [kontakt@uhura.pl](mailto:kontakt@uhura.pl)

VOXFLOW Series 1 / Norwii S358 Series Made for:

**UHURA Bionics sp. z o. o.**

Add: Podmiejska 5/2.16 19-300 EŁK, POLAND

NIP: 8481884010 REGON: 523981740, KRS: 0001009618

Tel: (+48) 792 092 690

Email: [konrad@uhura.pl](mailto:konrad@uhura.pl)

---

Manufacturer:

Shanghai Norwii Technology Co., Ltd.

Add: No.277, Jinfeng Road, Pudong New District,

Shanghai 201201, China

Tel: +86 21 518 720 80

Email: support@norwii.com

For more informations, documents and up to date guides, please visit:  
[www.uhura.pl/voxflo](http://www.uhura.pl/voxflo)

