AUTOMATIC AIR VENT SERVICING INSTRUCTIONS

IMPORTANT: Follow all federal/national, state, and local codes when installing, testing, or performing work on systems. All parts are covered by a lifetime warranty against manufacturing defects, provided they are installed by a licensed plumber and operated under normal working conditions. If you have any questions or comments, please contact us at (800) 225-9529 or visit us on the web at www. webstonevalves.com.


Regular maintenance of the air vent is not required. However, over time debris may collect in the unit and impact performance. Should this occur, use the following instructions to clean the unit:

Note: When filling the system, ensure the vent cap is tightened to help prevent possible damage to the unit. The air vent is designed to extract microbubbles and static air; it is not intended to be used to bleed the entire system.

After the system is filled and a manual bleed is performed, loosen the vent cap to vent any air that accumulates in the future automatically.

CAUTION! System fluid under pressure can be very hazardous. **Isolate the vent from the system before inspecting**. If the vent cannot be isolated, reduce the system pressure to zero before beginning any maintenance. Water temperatures above 100°F can also be very hazardous. Allow the system to cool to below 100°F before proceeding. Use caution and maintain a safe distance from the vent while it's open. Failure to follow these instructions may cause serious bodily injury or property damage.

- **1.** Using two strap wrenches, hold the body in place and carefully remove the body cap, exercising caution to avoid damage to its O-ring. Lift up on the vent stem to remove the vent head assembly.
- 2. Use a mild detergent or water/vinegar solution to clean the vent head assembly. If there is excessive build-up, soak the vent head assembly in mineral spirits for several hours and then clean thoroughly.
- 3. Reassemble the air vent.
- 4. Return the system to operating condition.

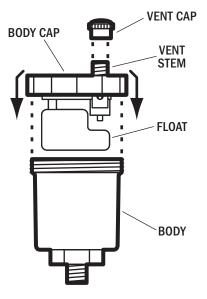

MARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



P: (800) 225-9529 F: (800) 336-5133 www.webstonevalves.com webstone@nibco.com