
In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

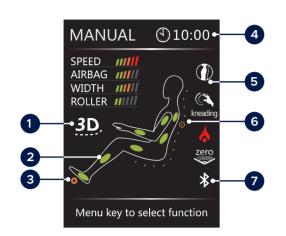

- 1 3D intensity level
- 2 Active airbags
- 3 Active rollers
- 4 Time left
- 5 Indicators
- 6 Back-roller position & direction
- 7 Bluetooth connected

While in-use screen is showing



- Press **OK** for shortcut to zero gravity
 Press **Up** on directional button to increase back roller speed
- Press **Down** on directional button to decrease back roller speed

Airbag Intensity


When in-use screen is showing:



- Use directional buttons
 Right side to increase intensity
- **Left** side to decrease intensity

When main menu is showing:

Navigate to **AIRBAG** and press **OK**. Navigate to **FORCE** select **OK**. Set intensity desired by selecting 1 (lowest) through 5 (highest) and pressing **OK**.

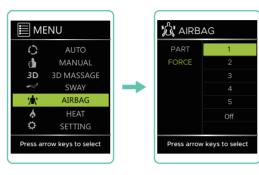

Note: Airbags must be active to set intensity level

Share a photo and tag us:



@Infinitymassagechairs



@infinity_chairs



@Infinitymassagechairs

Don't forget to use #lovemyinfinitychair

INFINITY

72 Stard Road, Seabrook, NH 03874 603-910-5000 www.infinitymassagechairs.com

INFINITY®

Quick Start Guide

IT-8500[™] X3 3D/4D Massage Chair

