

Dukane Corp AV Division

Visual Presenter Software
queue User's Guide v 8.0



Touchboards

205 Westwood Ave, Long Branch, NJ 07740

Phone: 866-94 BOARDS (26273) / (732)-222-1511

Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Information in this Guide may change due to product improvements. To obtain the latest manuals, literature, and software please visit the Dukane web site at; www.dukcorp.com/av and look at the specific model SUPPORT or DOWNLOADS section.

Contents

1. Introduction	3
2. queue's key features	3
3. System requirement.....	3
4. Before install	4
5. Install queue TM in Windows XP	4
6. Install queue TM in Windows Vista.....	7
7. Install queue in Mac	11
8. Running queue	12
8.1.User Interface	12
8.2.Toolbars and Buttons.....	13
9. Descriptions of Functions	16
9.1.Start the Visual Presenter.....	16
9.2.I would like to capture images	16
9.3.I would like to display the live image	16
9.4.I would like to freeze the live image.....	16
9.5.I would like to annotate the displayed image.....	16
9.6.I would like to add textual annotation to images.	17
9.7.I would like to record video	18
9.8.I would like to display full screen	18
10. Uninstall.....	19
10.1. Uninstall queue (Case of Windows XP).....	19
10.2. Uninstall USB driver (Case of Windows XP)	20
10.3. Uninstall queue (Case of Windows Vista).....	21
10.4. Uninstall USB driver (Case of Windows Vista)	23

1. Introduction

This manual Applies to;

- 1.1. queue for Mac
- 1.2. queue for PC and USB driver which support WIA and TWAIN standards.

2. queue's key features

- 2.1. Remote control of the Visual Presenter
- 2.2. Capture and record images.
- 2.3. Annotate the image, highlight important details and then save it.
- 2.4. Support a full screen image function.
- 2.5. Post processing of video on the computer
- 2.6. Export pictures in the Visual Presenter or camera to a computer
- 2.7. Controls for the visual presenter/ camera and ability to capture photos

3. System requirement

Operating System	Minimum System Requirements
Windows XP	<ul style="list-style-type: none">● CPU:P4 1.8 GHz● Memory: 512MB● Support Direct X 9● Resolution: 1024x768● Minimum Hard Disc Space Required: 100MB
Windows Vista	<ul style="list-style-type: none">● CPU: P4 1.8 GHz● Memory: 1GB● Support Direct X 9● Resolution: 1024x768● Minimum Hard Disc Space Required: 100MB
MAC OS X v10.4.10, v10.5	<ul style="list-style-type: none">● CPU: PowerPC G4 866MHz or Intel Pentium® 1.83GHz Intel Core 2 Duo processor● Memory: 512MB● 1,024x768 screen resolution and 24-bit color display● Minimum Hard Disc Space Required: 1GB● QuickTime 7.4.5 above

4. Before installing queue





- 4.1. Connect the power cord of the Visual Presenter / camera.
- 4.2. Turn on the Visual Presenter.
- 4.3. Do not connect the USB cable to the Visual Presenter and your computer.







<Very Important> To ensure successful installation, please make sure each of the following steps is completed.


5. Install queue™ in Windows XP

- 5.1. Click the [Setup.exe] to start the installation wizard of queue.
- 5.2. Follow the screen instructions and press [Next].

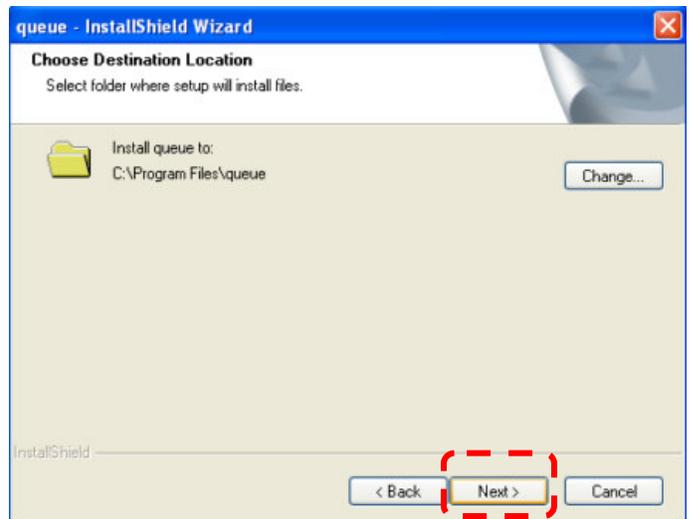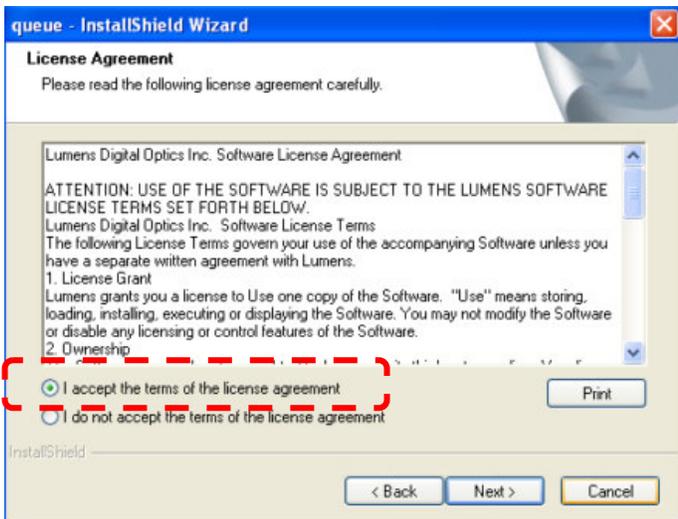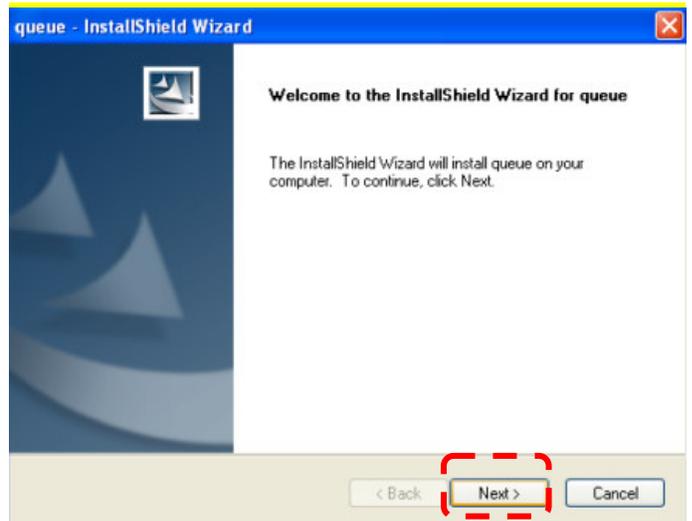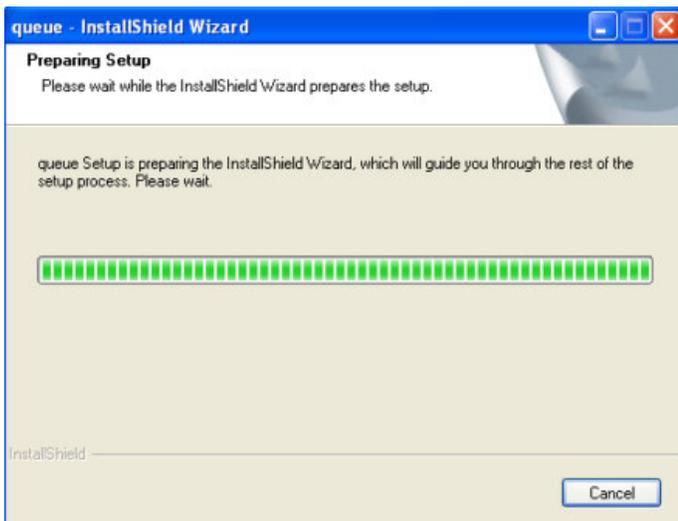


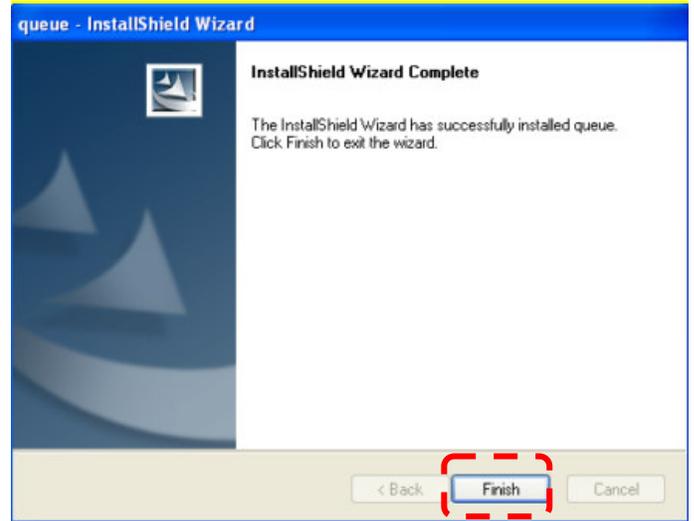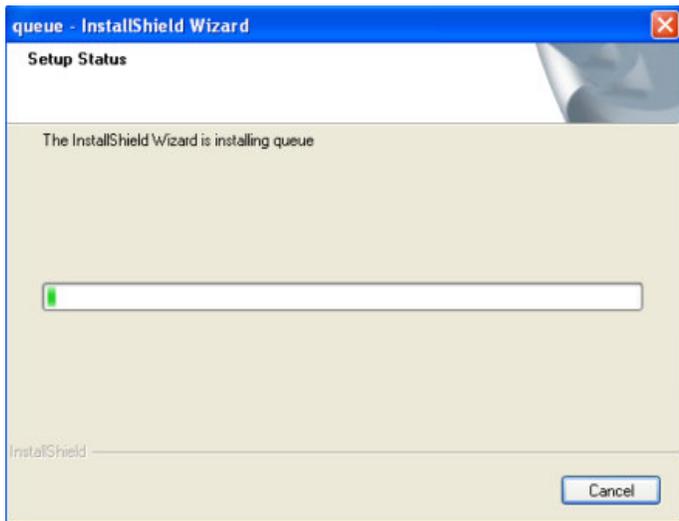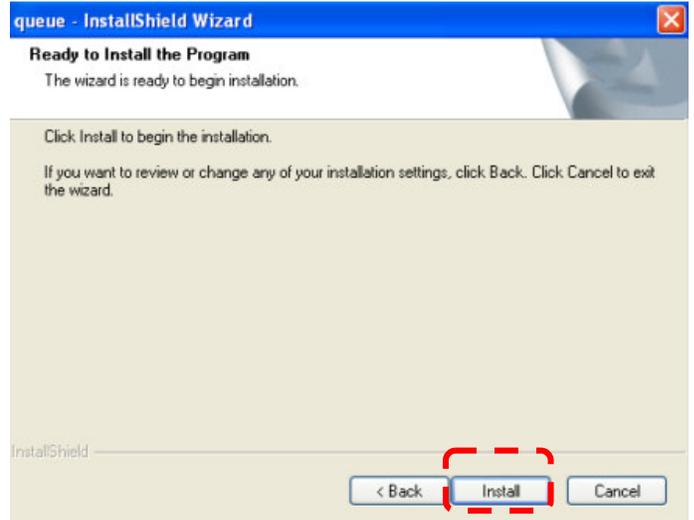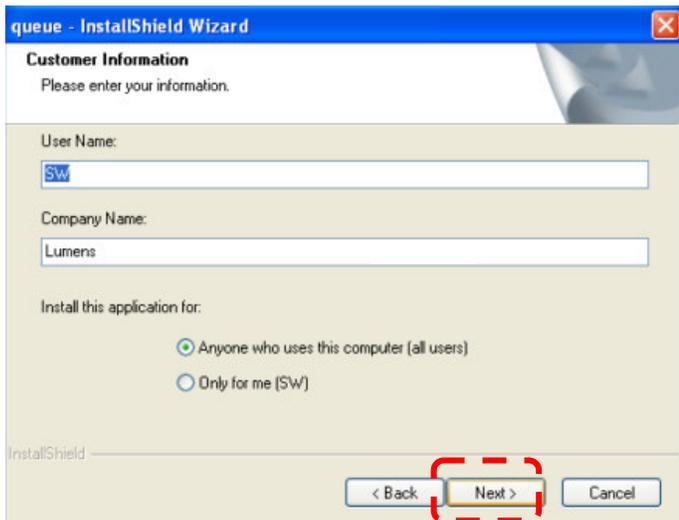


5.3. Press **[Yes]** to create a queue shortcut at your desktop.

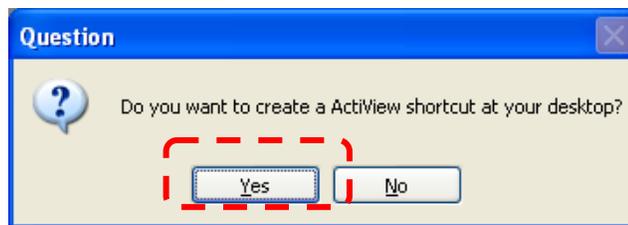


5.4. Follow the screen instructions and press **[Next]**.

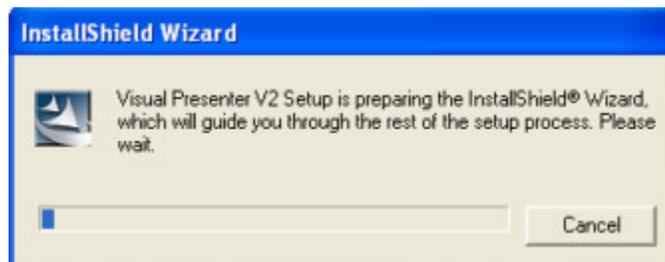



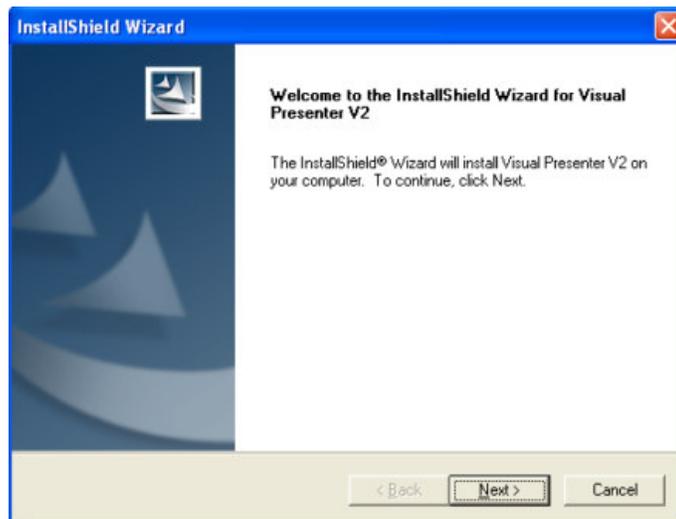





5.5. Once the installation is completed, press **[Finish]** to reboot the system.


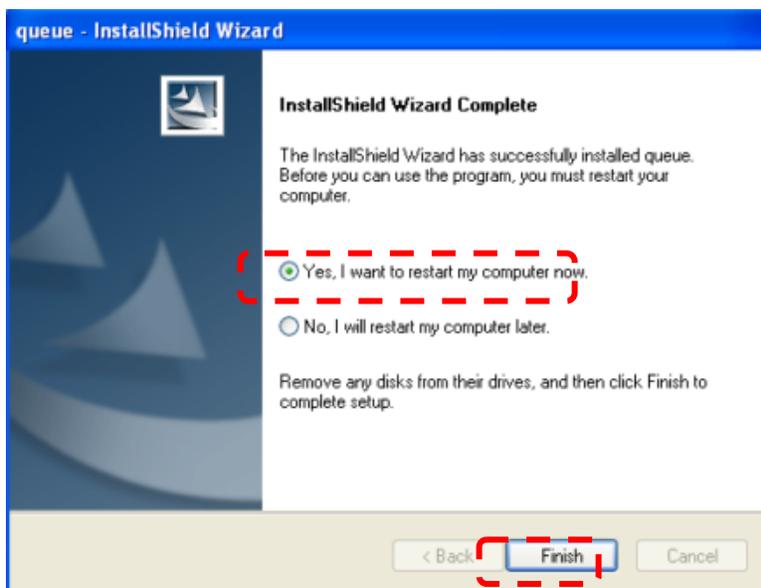


6. Installing queue™ in Windows Vista


- 6.1. Click the [Setup.exe] to start the installation wizard of queue.
- 6.2. Follow the screen instructions and press [Next].

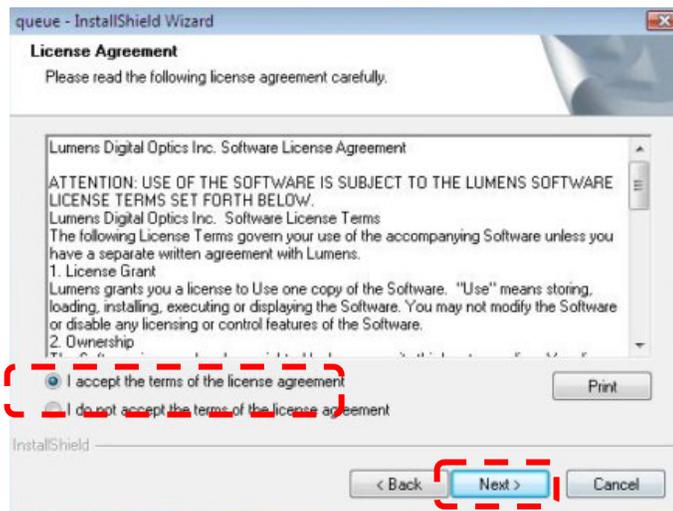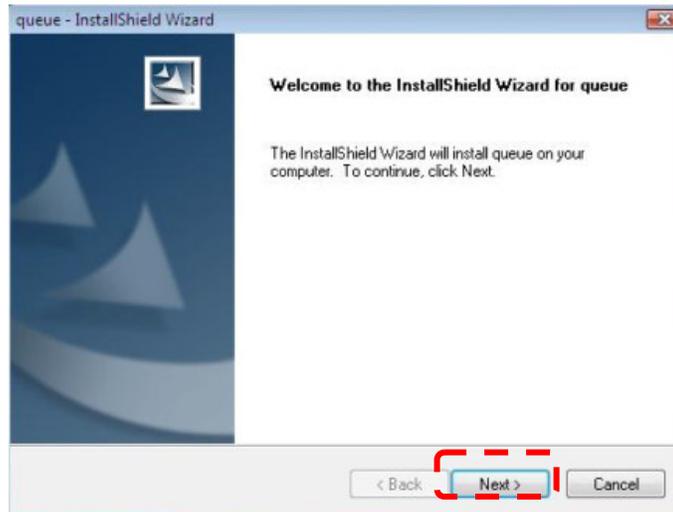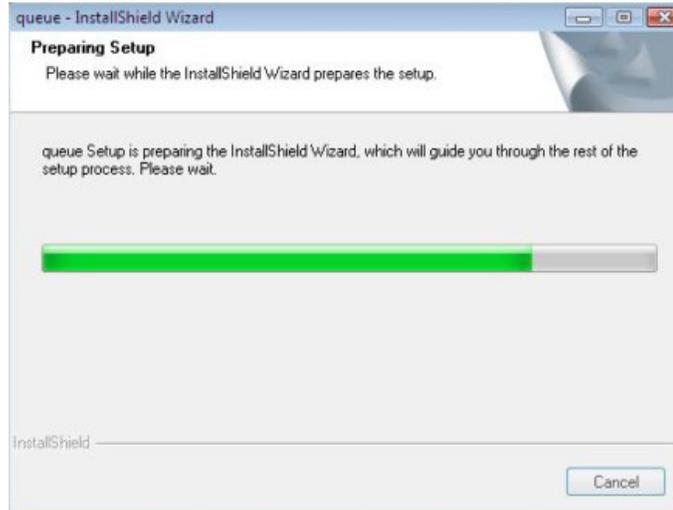

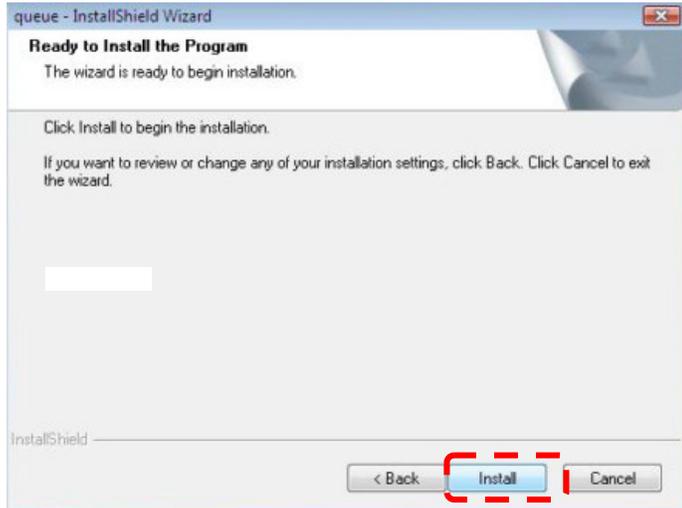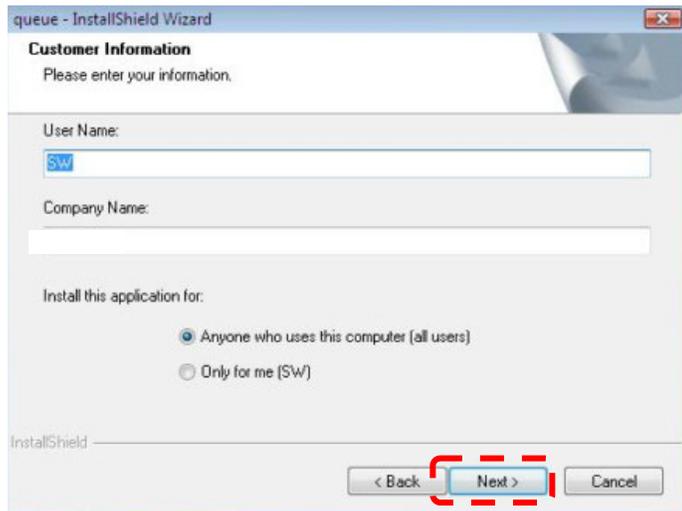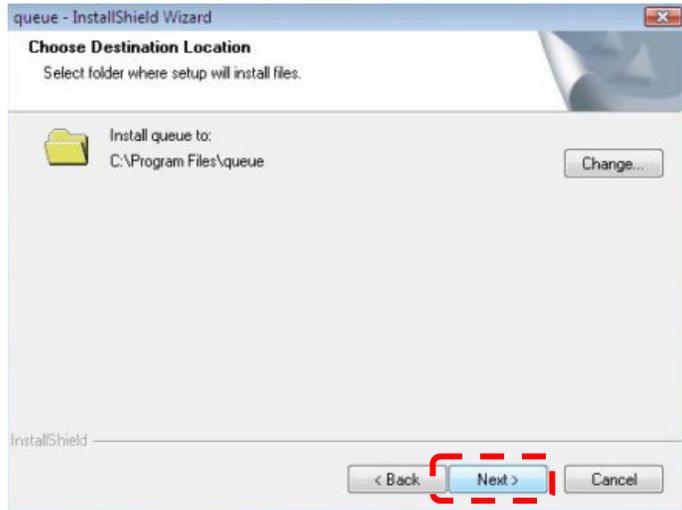


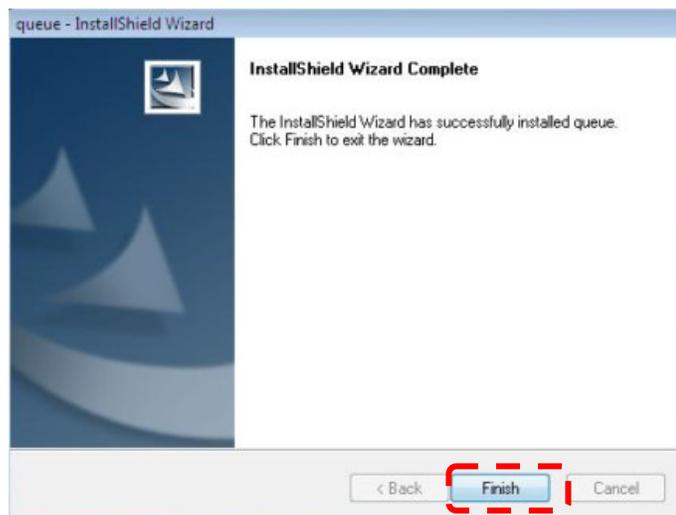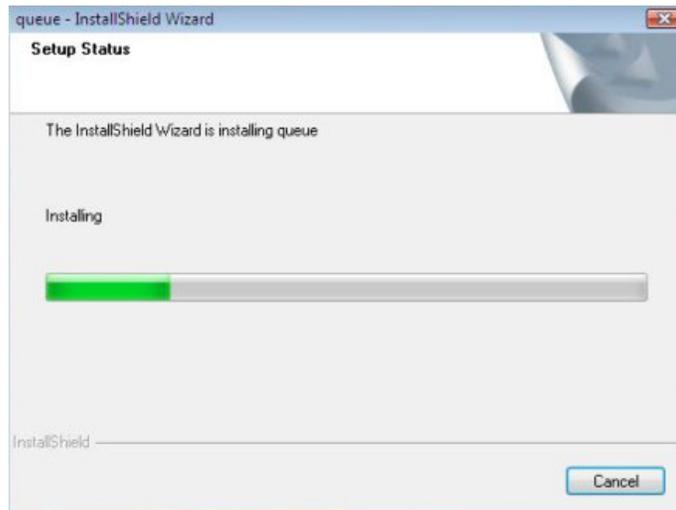


6.3. Press **[Yes]** to create a queue™ shortcut at your desktop.

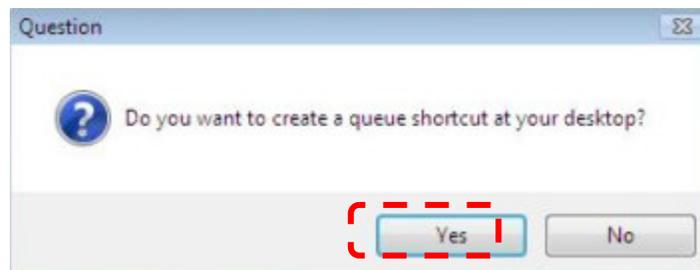

6.4. Follow the screen instructions and press **[Next]**.

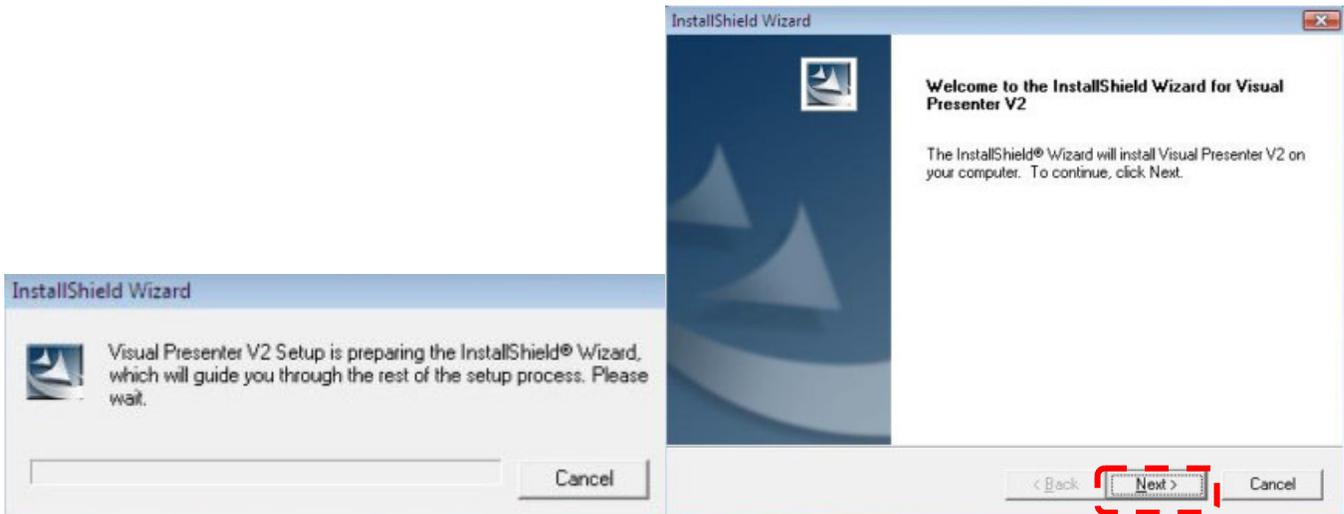


6.5. Please click the **[Finish]** button then reboot the system.

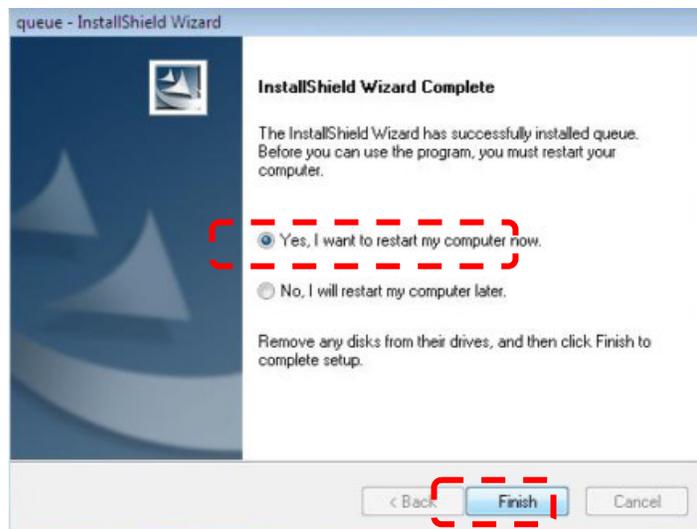

7. Installing queue in Mac

7.1. Select [queue] to begin installation and follow the screen instructions.

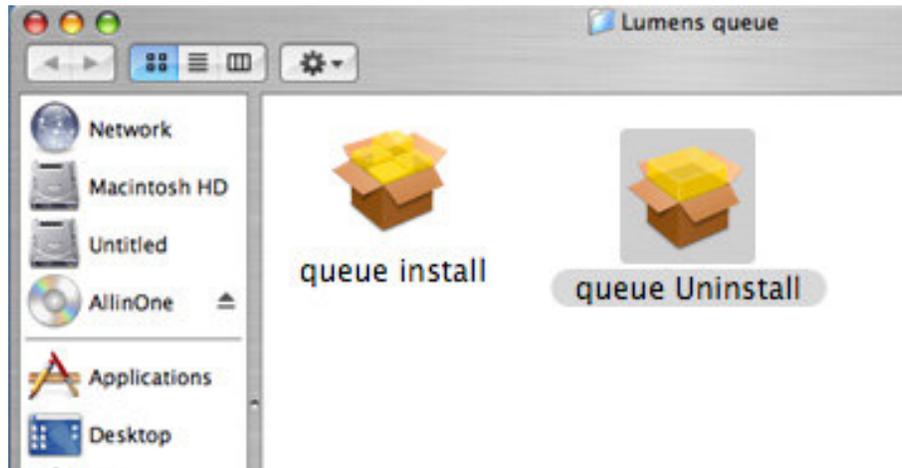


7.2. Verifying the installation is completed (MAC) : Click [Applications] > [queue]



8. Running queue


8.1. User Interface

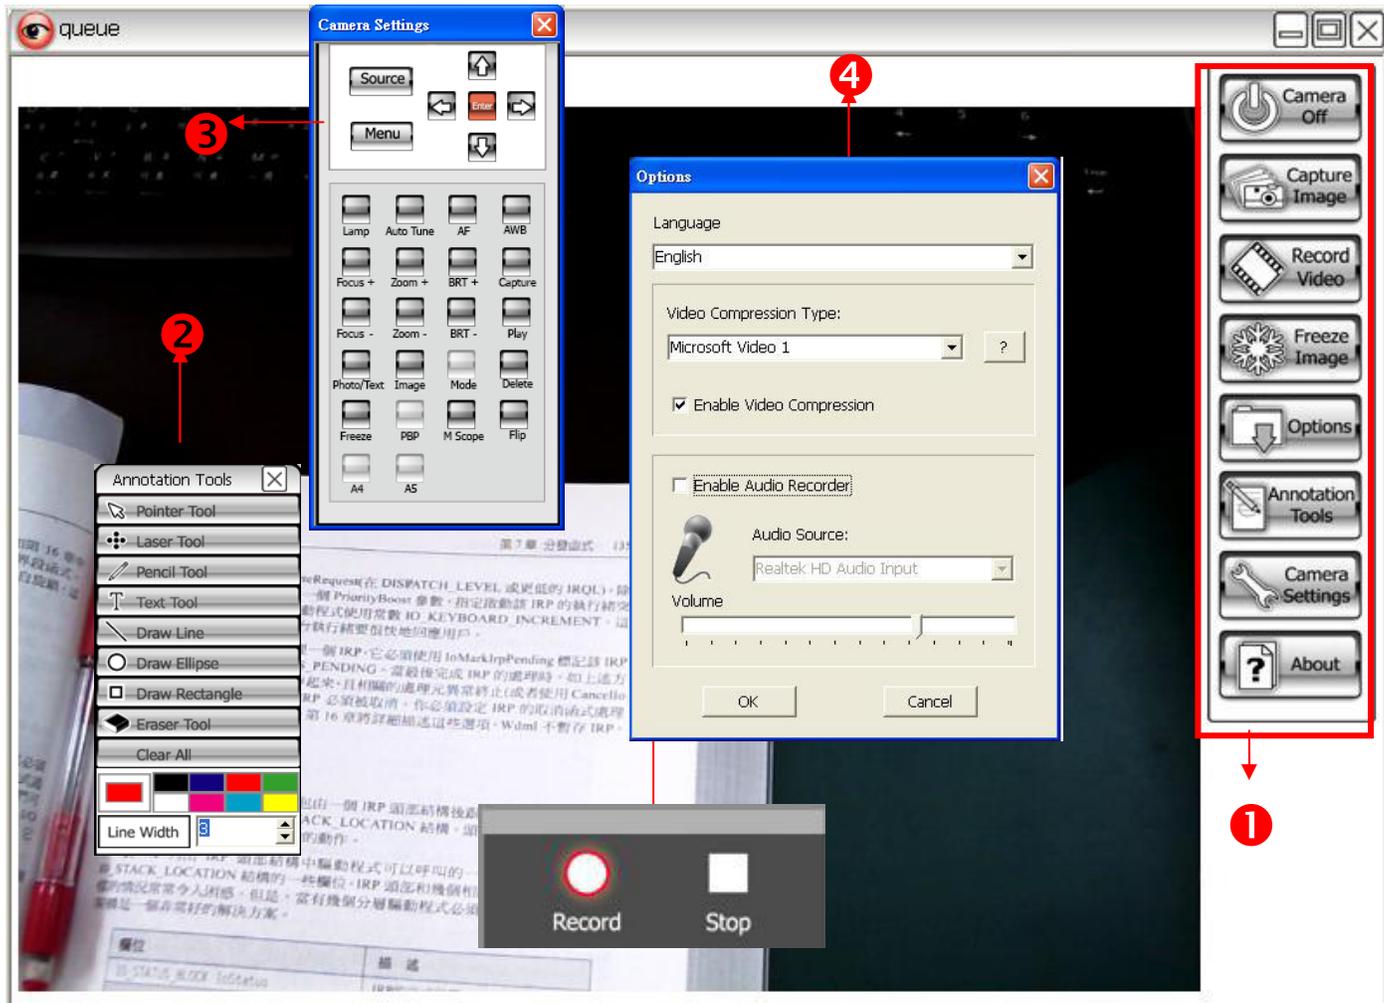

#	Toolbar	Functions
1	Basic Operation	Functions such as capture images, freeze images, live images and etc.
2	Annotation Tools	Provide annotation tools to mark or annotate the displayed image.
3	Camera Settings	Provide operation functions using the same with keys on the remote control / machine's control panel.
4	Options	Provide recording and language options.
5	Video Tools	Provide video functions such as start and stop for recording.

8.2. Toolbars and Buttons


8.2.1. Basic Operation




Turn on / Turn off the **visual presenter / camera**.



Capture the live image and save.



Open / Close the video tools.



Display the live image. / Freeze the live image of queue.



Open the dialogue box of options setting. Refer to [8.2.4 Options](#) for more information.



It provides annotation tools to mark or annotate the displayed image. Refer to [8.2.2 Annotation tools](#) for more information.




Adjust the live image. Refer to [8.2.3 Camera Settings](#) for more information.



Provide general information and user manual for queue.

8.2.2. Annotation Tools

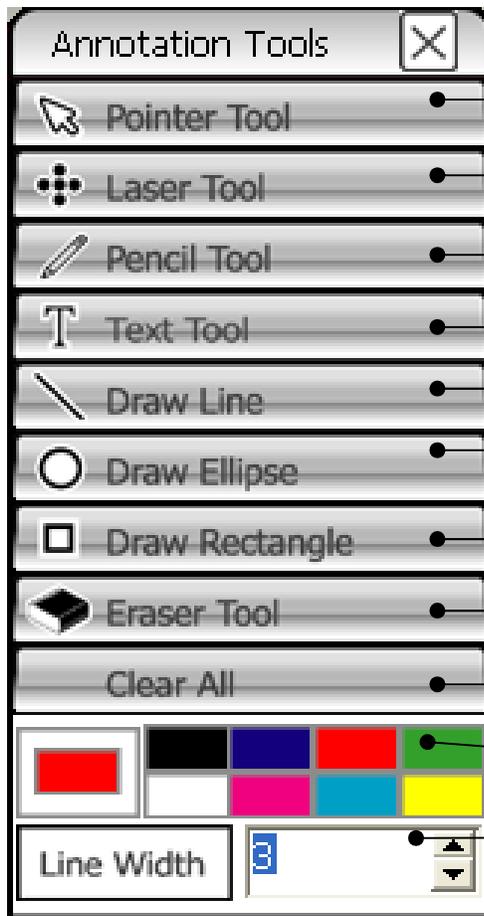

1. This is the default mode.
2. Draw a small color dot.
3. Draw free-hand.
4. Add text.
5. Draw a straight line.
6. Draw an oval or circular graph.
7. Draw a square or rectangle.
8. Erase the drawing.
9. Clear the drawing altogether.
10. Choose the color for the selected drawing
11. Increase or decrease the thickness of the lines. (If the value is higher, the line is thicker).

8.2.3. Camera Settings




Control the live image via the **Camera Settings** interface. The operating procedure is the same as the **remote control** and **control panel** of the **Visual Presenter or camera** . Refer to the device user manual for more information.


<Note> The operation of a button may vary depending on the product functions. An inactive button will be greyed out.

8.2.4. Options


(Case of Windows XP & Vista)

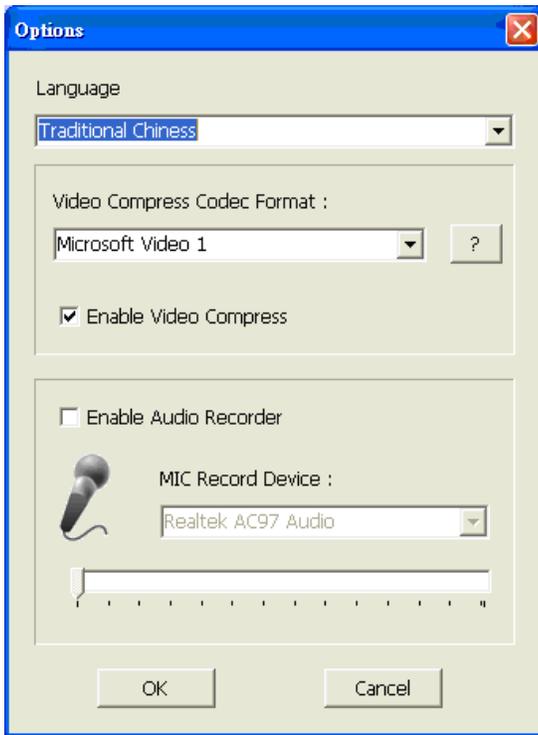

1. **Language** : Set the English user interface.
2. **Video Compress Codec Format** : Set the video format.
<Note>You need to enable the [Enable Video Compress] before setting.
3. **Enable Video Compress** : Enable the video format setting.
4. **Enable Audio Recorder** : Enable the MIC record device.
5. **MIC Record Device** : Set the MIC record device.
<Note>You need to enable the [Enable Audio Recorder] before setting.



(Using MAC)

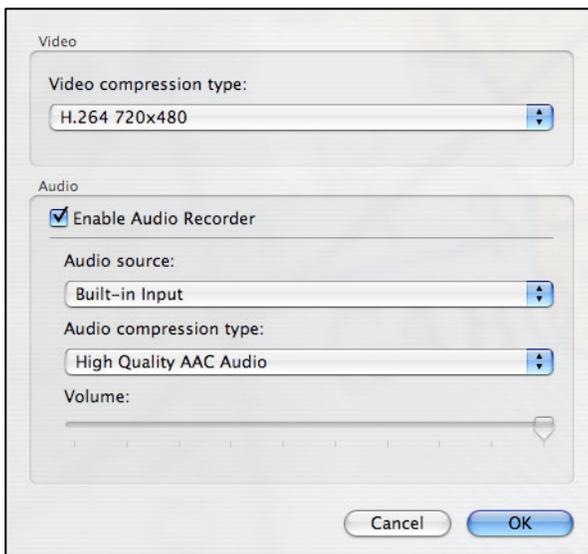

1. **Video compression type** : Set the video format.
2. **Enable Audio Recorder** : Enable the audio recorder.
3. **Audio source** : Set the audio source.
4. **Audio compression type** : Set the audio compression type.
<Note>You need to enable the [Enable Audio Recorder] before setting the [Audio compression type].

9. Descriptions of Functions

9.1. Start the Visual Presenter

9.1.1. Press  to start the camera.

9.2. I would like to capture images.

9.2.1. Press  then a Save As window will be displayed.

9.2.2. Key in the file name then press **[Save]**.

9.3. I would like to display the live image.

9.3.1. Press  to display the live image.


9.4. I would like to freeze the live image.

9.4.1. Press  to freeze the live image of queue.

9.5. I would like to annotate the displayed image.

9.5.1. Press  to open the annotation tools.


9.5.2. The default mode is **[Pointer Tool]**. You can select another annotation tool.

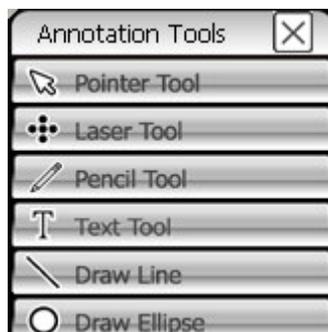


9.5.3. Select a color for drawing.



9.5.4. Set the value of Line width (If the value is higher, the line is thicker).



9.5.5. Mark or annotate the displayed image.

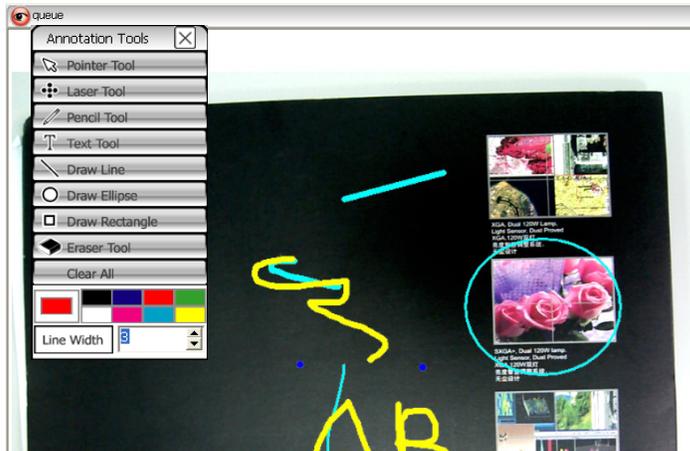


<Remark> You can press  to capture images that you draw.

9.6. I would like to add textual annotation to images.

9.6.1. Press  to open the annotation tools.

9.6.2. Select **[Text Tool]**

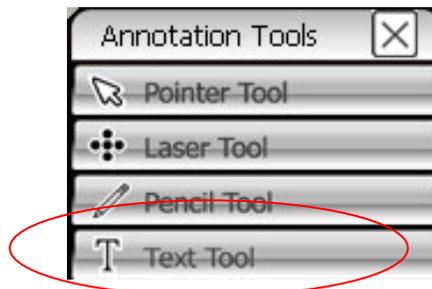

9.6.3. The **[Text Tool]** window will pop up when you click the screen for the text to be added in.

9.6.4. Enter the text in blank fields and click **[OK]**.



9.6.5. Click [T] to change fonts settings (size/color/effect).

<Note> You can press



to capture images that you draw.

9.7. I would like to record video

<Note> Please make sure the mode is live image.

<Note> If you want to record audio at the same time, please refer to [8.2.4 Options, Enable Audio Recorder](#)

9.7.1. Press



to open the video tool

9.7.2. Press [Record] then a "Save As" window will be displayed.

9.7.3. Key in the file name then press [Save] to **start recording**.

9.7.4. Press [Stop] to stop recording.

9.7.5. Press



to close the record tool.

9.8. I would like to display the image full screen

9.8.1. Moving the mouse to the upper right corner, press



to enter the full screen display.



9.8.2. Moving the mouse to the upper right corner while in full screen mode, press



to exit full screen display.

<Note>While in the full screen display mode, right-clicking will activate the Annotation Tools.


10. Uninstall

10.1. Uninstall queue (Windows XP)


10.1.1. Select [Uninstall queue] in the [Program] to uninstall.



10.1.2. Press [OK].

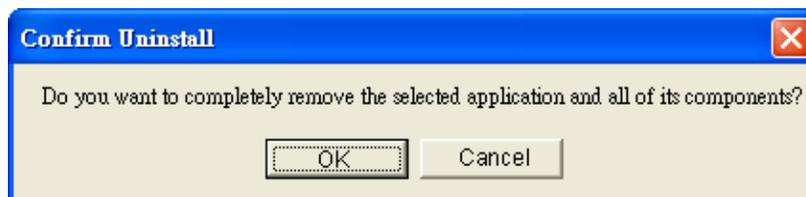

10.1.3. The system will start running uninstall and removing related components.

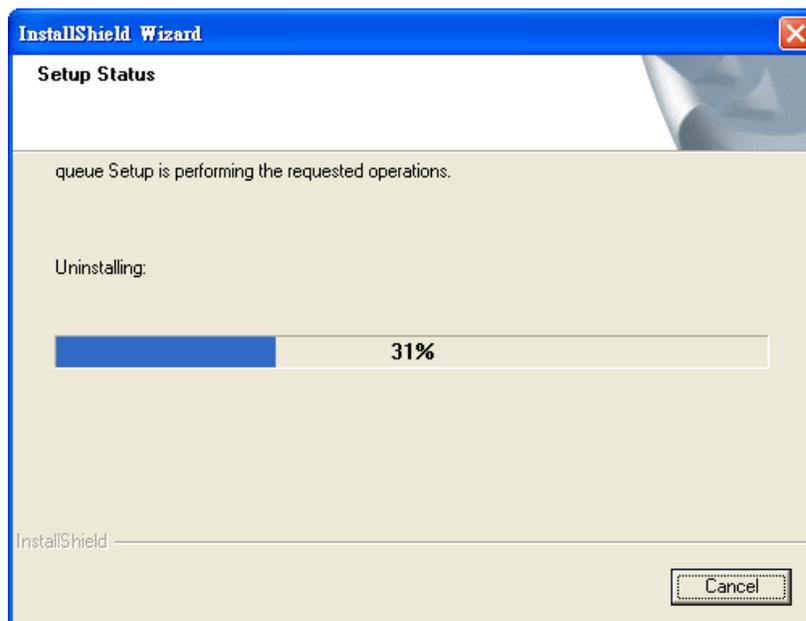


10.1.4. The uninstallation is completed, and the system will automatically exit the uninstall wizard.


10.2. Uninstall USB driver (Windows XP)

10.2.1. [Program] → [Control Panel] → [Add or Remove Programs].


10.2.2. Find *Visual Presenter V2*, and then press [Remove].

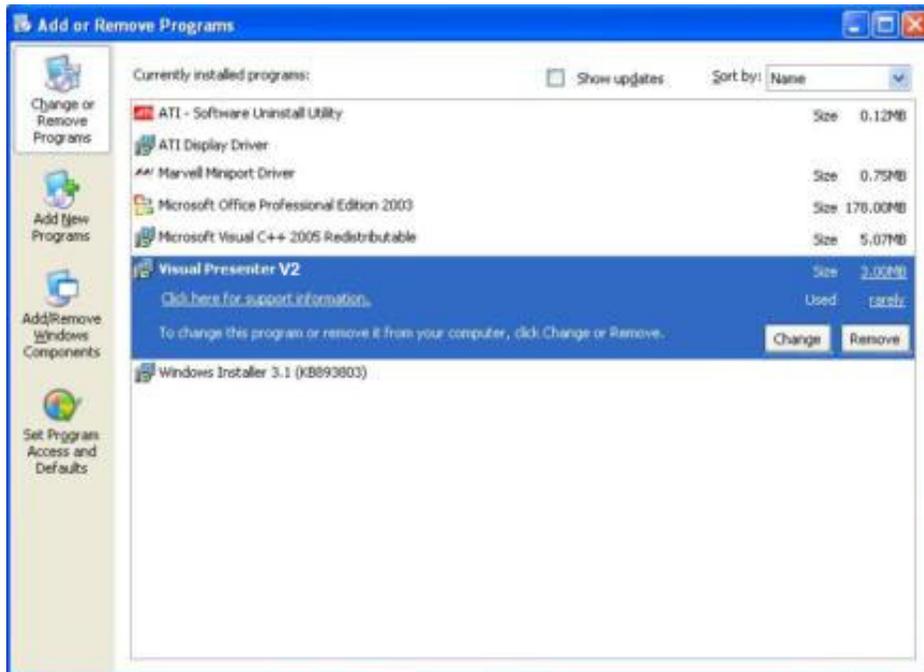

10.2.3. Press [OK].

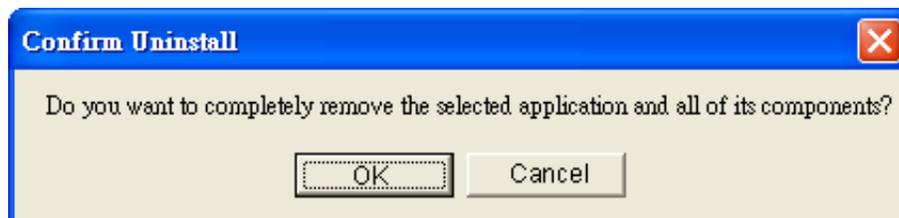


10.2.4. Once the uninstallation is done, please click **[Finish]** to restart the computer.

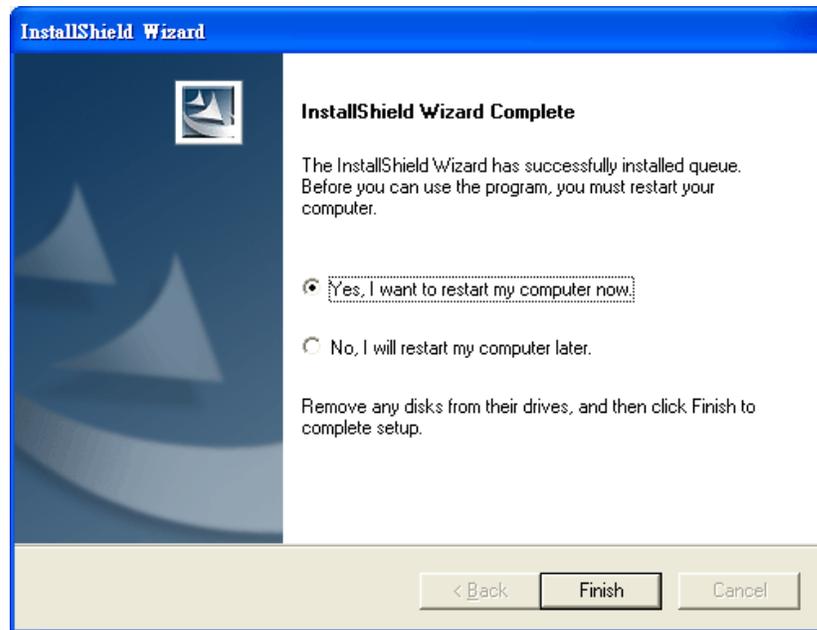


10.3. Uninstall queue (Windows Vista)


10.3.1. Select **[Uninstall queue]** in the to uninstall.




10.3.2. Press **[Yes]** to completely remove the application.

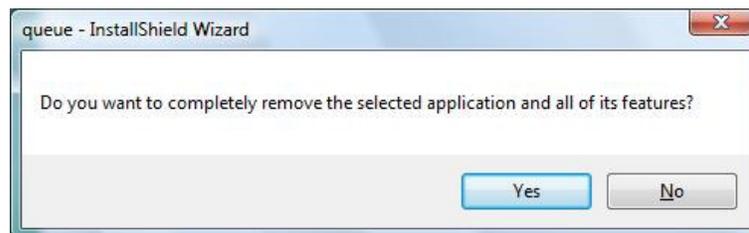

Press [Finish] once the uninstallation is completed.

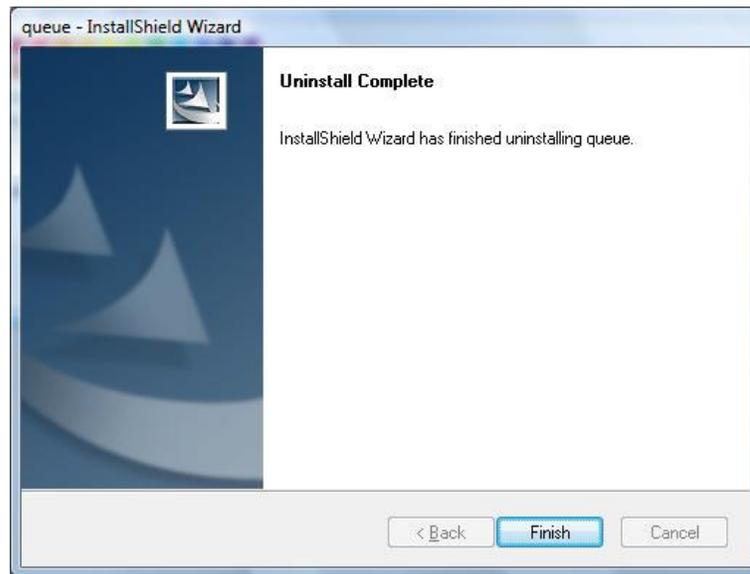


10.3.3. Press **[Finish]** to reboot the system.

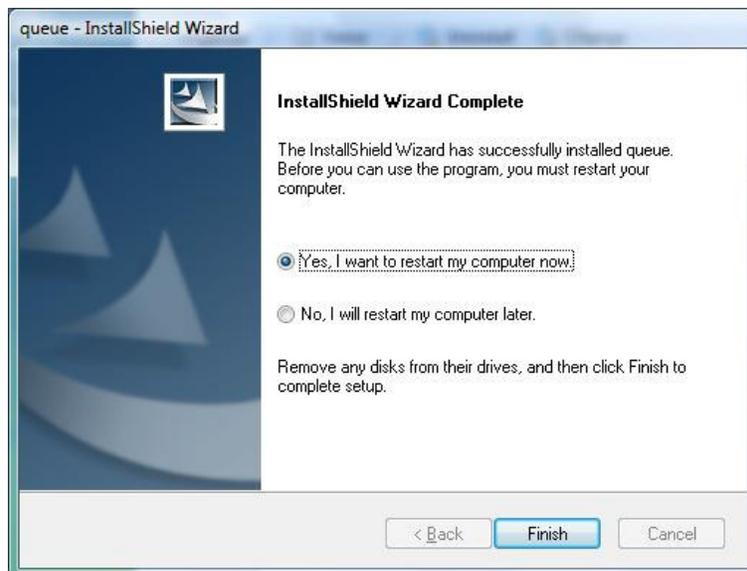


10.4. Uninstall USB driver (Windows Vista)

10.4.1. [Program] → [Control Panel] → [Uninstall a program].

10.4.2. Find [Visual Presenter V2] , and then press [Uninstall].

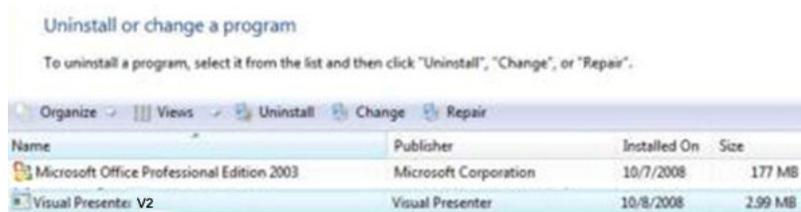

10.4.3. Press [Yes] to uninstall *Visual Presenter V2*

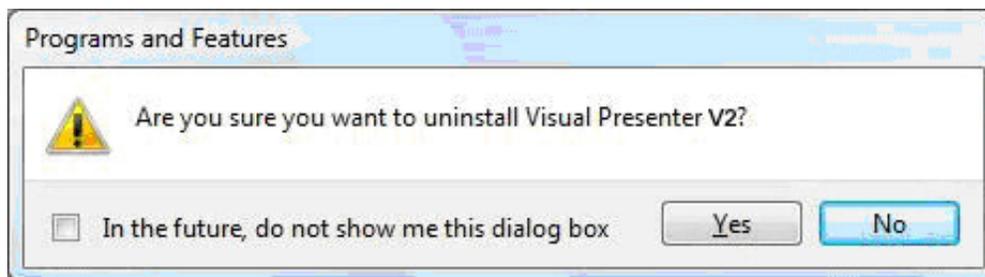

10.4.4. Press [OK] to close applications automatically.

