DC211 Quick Start Guide

Lumens

- * Please activate your warranty at www.lumens.com.tw/reg
- * Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents

Main Unit



Quick Start Guide



* To download this manual in other languages, visit Lumens website


Remote Control Holder



VESA Base ler Installation Guide



Remote control



Power Cord



* Appearance may vary in different countries

VGA Cable



USB Cable C-Video



Cable

RS232 Adapter (Optional)




Microscope Adapter




Pouch




Backlight (Optional)



2. Getting Started

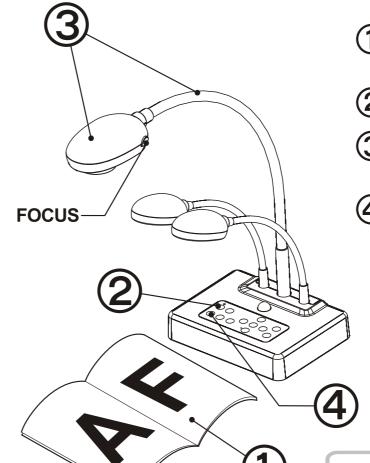


- 1 Place an object to be displayed under the camera.
- 2 Turn the power on. \circlearrowleft
- 3 Adjust the gooseneck and lens to appropriate position.
- 4 Press the [AUTO TUNE] button to optimize the image.
 You are ready to teach / present.
 - * Each time the camera head is moved, press the [FOCUS] button to refocus the lens.

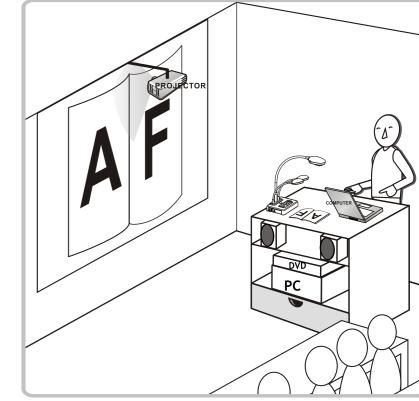




▼ Connect to a Projector or Monitor

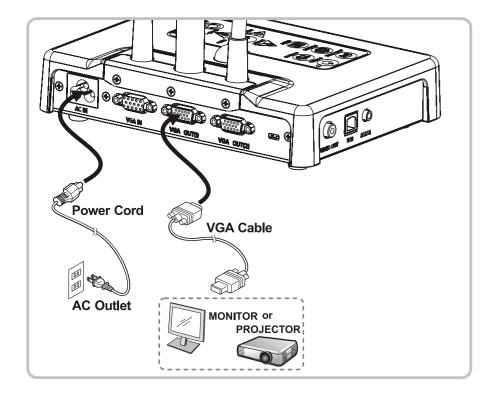


▼ Connect to a Computer and Use Lumens' Software.

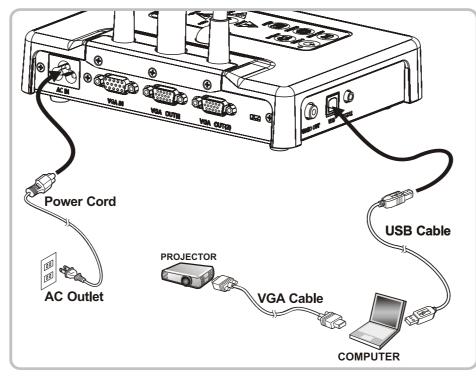


* Driver and software can be downloaded from Lumens website.

▼ Connect a Projector, Computer and Monitor simultaneously

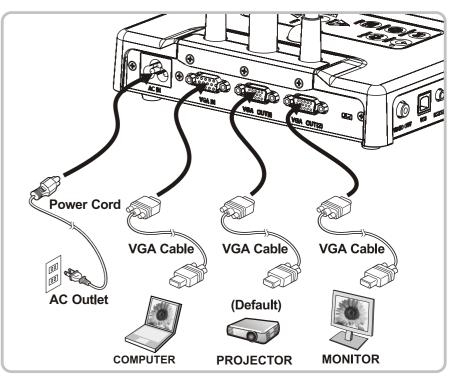


* Press [SOURCE] to change image source from Computer.

▼ Connect to an Interactive Whiteboard (IWB)

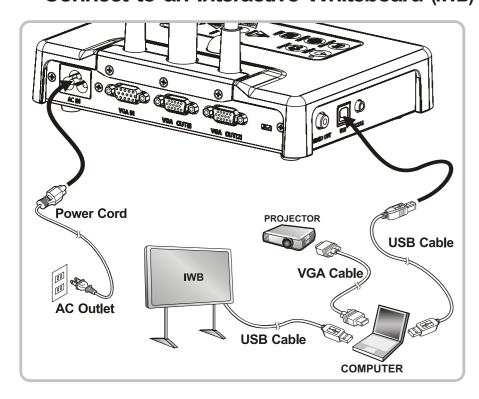

▼ Connect to a TV

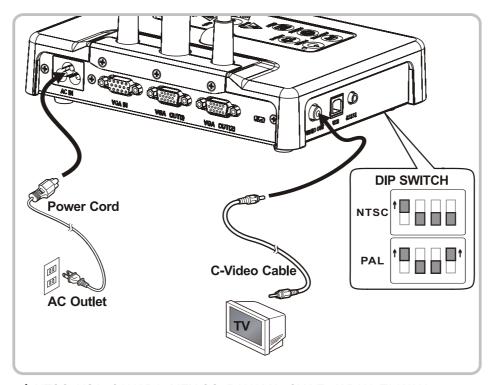

* NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN, KOREA AND PHILIPPINES.

- * PAL: Country / region not listed above.
- * After the unit is re-started, new DIP switch configuration is effective.

▼ Connect to an Computer via RS232

