

Setup Guide for



Touchboards

205 Westwood Ave, Long Branch, NJ 07740

Phone: 866-94 BOARDS (26273) / (732)-222-1511

Fax: (732)-222-7088 | E-mail: sales@touchboards.com

For Windows 98SE/Me/2000/XP and Vista

Use this guide to quickly setup and use your mimio Xi interactively with a projector.


1

Check your contents

Your mimio Interactive contains the following components:



mimio Studio CD



mimio Xi



mimio Mouse



Mounting Brackets



x1 AA Batteries




USB Cable

2 Install mimio Studio

1. Insert the mimio Studio CD into your CD ROM drive.




The mimio Studio CD will auto launch.


2. Select **Install Software** from the top menu.
3. Select **mimio Studio**. An installation application will launch. Follow the onscreen instructions.
4. Click the **Close**  button at top of the window to exit.

3 Setup your mimio Xi


1. Unfold the mimio Xi.

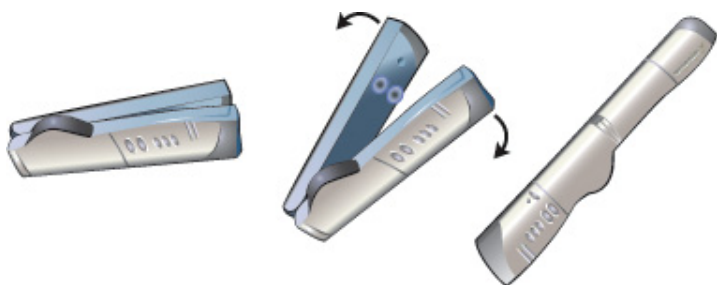

2. Plug the included mini-USB cable into the socket on the bottom recessed end of the mimio Xi.

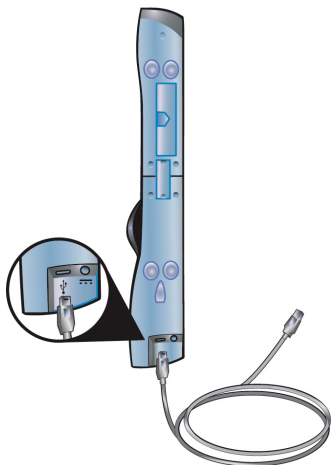


3. Attach the mimio Xi to your whiteboard, using one of the following:
- For periods of extended use or repeated use in any location, attach the mimio Xi using the mounting brackets:
 - a. Snap the mounting brackets over the suction cups, making sure they clip into the recesses on the edges of the mimio Xi.

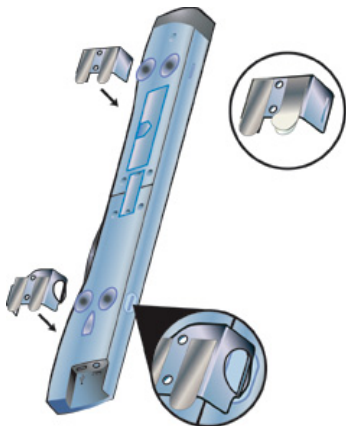

- b. Carefully peel the backing from the adhesive strips.

- c. Mount the mimio Xi by pressing the bar, with mounting bracket in place, in the upper left-hand corner of your whiteboard.

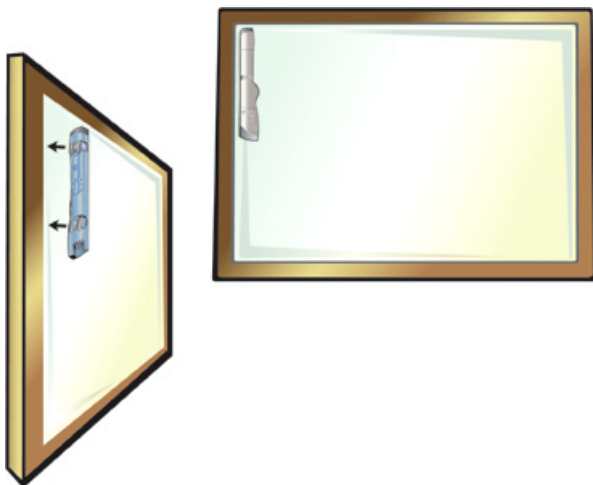

- For short periods of use, attach the mimio Xi using the suction cups.
 - a. Clean the surface of the whiteboard with a damp cloth.

- b. Press the mimio Xi in the upper left-hand corner of your whiteboard.



4. Plug the other end of the USB cable into your PC USB port. The capture bar should be automatically detected by the PC and the mimio Studio software. Refer to your system documentation if you are unable to find the USB port, or if your capture bar is not automatically detected.



4 Setup your mimio Mouse

1. Remove the battery cover by lightly pressing down and pushing the cover back away from the mimio Mouse tip.



2. Insert AA battery.




3. Put the battery cover back on by gliding the cover back into place.




5 Calibrate with a projector

1. Project your Desktop image onto your whiteboard. Make sure there is a 2-3" buffer between the projected image and:
 - The edges of the whiteboard
 - The mimio device

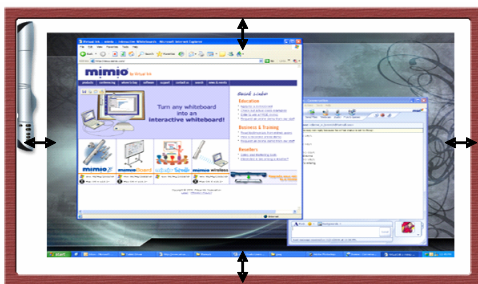



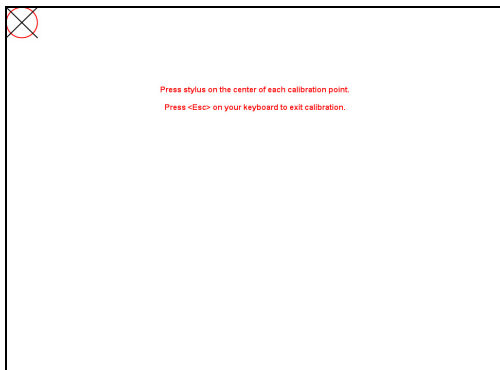

2. Press the **Interactive**  button on your mimio device.



3. Follow the onscreen instructions.

6

Using the Interactive Mode

- Use the mimio Mouse as a mouse to control your Desktop or interact with applications.
- Press the **Hover**  (front) button, to hover the mimio Mouse over your Desktop or application.
- Press the **Right-click**  (back) button, to execute a right-click at the current mimio Mouse location.
- Use the mimio Tools to annotate over any application.
 1. Double-Click the **mimio Tools** shortcut on the Desktop.
 2. Click **Screen Markup**  to “freeze” whatever screen or application you are in.
 3. Annotate the frozen screen with the mimio Tools. All object drawing and manipulation features in the mimio Tools are available during screen annotation.
 4. Click **Mouse**  to “unfreeze” the screen. All annotations are automatically archived for later use in the mimio Markups.
- Use the **mimio Notebook** to create content and present content.
 1. Double-Click the **mimio Notebook** shortcut on the Desktop.
 2. Use the mimio Tools to create or edit content.

For more information about using the Interactive Mode check out the comprehensive mimio Studio User’s Guide on the mimio Studio CD.

7

Accessories and Add-ins

Visit the mimio Store at <http://www.mimio.com/buy/store> (for USA customers) or contact your local reseller to purchase add-ons and accessories.



mimio wireless

mimio Wireless is an upgrade available for mimio Xi. With mimio wireless you no longer need to worry about tripping over cables or whether the USB cable is long enough to reach your computer.



mimio Capture Kit

mimio Capture Kit is an upgrade available for mimio Interactive or mimio Board. The mimio Capture Kit enables you to digitally capture notes or drawings that can be saved, shared, and/or integrated into other materials.

US Office

Sanford Brands - mimio
150 CambridgePark Drive
Cambridge, MA 02140
USA

Toll-free in US: (877) my-mimio (696-4646)
E-mail: productinfo@mimio.com

Support telephone: (877) 846-3721
Support E-mail: techsupport@mimio.com

UK and Europe Office

Sanford Brands - mimio
7 Berkshire Business Centre
Berkshire Drive
Thatcham, Berkshire
RG19 4EW
UK

Telephone: +44 870 458 3344
Fax: +44 870 458 3355
E-mail: eurosales@mimio.com

Support Telephone: +44 (0)870 458 3366
Support E-mail: techsupport.europe@mimio.com

© 2007 Sanford LP. All rights reserved. mimio is a registered trademark and mimio Xi a trademark of Sanford LP.

Windows is a registered trademark of Microsoft, Inc. All rights reserved.