

JBC

www.jbctools.com

INSTRUCTION MANUAL



CL3008 / CL4008

Metal/Fiber Brushes for
Automatic Junior Tip Cleaner
(CLMS)

This manual corresponds to the following references:

CL3008* (Metal)

CL4008* (Fiber)

**each ref. incl. 2 brushes*

Packing List


The following items should be included:



*Metal Brushes**



*Fiber Brushes**

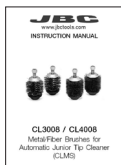

Brushes for CLMS* 2 units

**according purchased reference*

Manual 1 unit

Ref. 0027331

Features

Fiber brushes* have a longer lifespan than metal brushes.

	CL3008	CL4008
Material	Metal	Fiber
Cleaning	Intensive	Gentle
Max. time use	10 s	5 s
Recommended time use	1-2 s	1-2 s
Life cycle	Long	Extended*
Core	Black	Black




*** Only use the non-metal brushes when they are rotating. Incorrect use will damage them.**

Changing Brushes for CLMS


1. Open the Splashguard

Unplug CLMS from the mains and slide the tab on the top to open the splashguard.

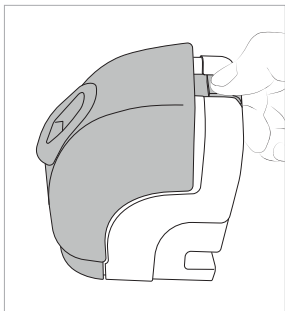

2. Change the Brushes

Pull upwards the bottom end of the brushes to remove them and place the new ones following the same steps conversely.

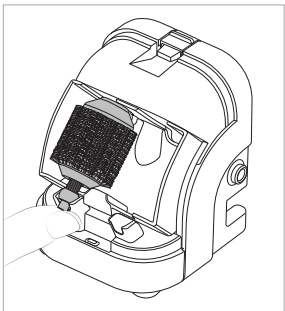

Specifications

CL3008

Metal Brushes for CLMS

Ref.: **CL3008**

- Total Net Weight: 50 g / 0.11 lb
- Package Dimensions/Weight: 140 x 81 x 80 mm / 112 g
(L x W x H) 5.51 x 3.19 x 3.15 in / 0.25 lb

CL4008

Fiber Brushes for CLMS

Ref.: **CL4008**

- Total Net Weight: 50 g / 0.11 lb
- Package Dimensions/Weight: 140 x 81 x 80 mm / 112 g
(L x W x H) 5.51 x 3.19 x 3.15 in / 0.25 lb

For both references:

- Brush Dimensions: 34 x 34x 61 mm / 1.34 x 1.34 x 2.40 in

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



www.jbctools.com