

JBC

www.jbctools.com



Brushes for CLMB

CLMB-A8 / CLMB-A7

CLMB-P1 / CLMB-P7

Packing List

The following items should be included:

Brushes for CLMB 1 unit

Ref. CLMB-A8 (2 brushes)


Ref. CLMB-A7 (2 brushes)

Ref. CLMB-P1 (2 brushes)

Ref. CLMB-P7 (2 brushes)

Manual 1 unit

Ref. 0013941

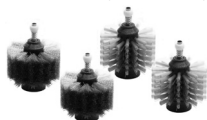

Characteristics

	CLMB-A8	CLMB-A7	CLMB-P1	CLMB-P7
Material	Metal	Metal	Non-metal	Non-metal
Cleaning	Intensive	Intensive	Gentle	Gentle
Max. time use	10 s	10 s	5 s	5 s
Recommended time use	1-2 s	1-2 s	1-2 s	1-2 s
Life cycle*	Long	Long	Extended	Extended
Core**	Black	Blue	Black	Blue

! Only use the non-metal brushes when they are turning. Incorrect use will damage them.

* When used properly, the non-metal brushes will have a longer life than the metal ones.

** The blue core brush is used to distinguish it from the black core one when doing lead-free and leaded soldering.

Changing Brushes

1. Unplug from the mains and lift off the splashguard.



2. Lift up the white piece to remove the brushes.



3. Remove the tin collection tray for cleaning. Once clean, return it followed by the new brushes.



Specifications

- Weight and dimensions:

CLMB-A8: 80 g (2.8 oz) / 50 x 50 x 67 mm (1.97 x 1.97 x 2.64 in)

CLMB-A7: 80 g (2.8 oz) / 50 x 50 x 67 mm (1.97 x 1.97 x 2.64 in)

CLMB-P1: 40 g (1.4 oz) / 50 x 50 x 67 mm (1.97 x 1.97 x 2.64 in)

CLMB-P7: 40 g (1.4 oz) / 50 x 50 x 67 mm (1.97 x 1.97 x 2.64 in)

JBC

Warranty

JBC's 2 year warranty covers this device against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage. In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

www.jbctools.com

0013941-0417