

Digi Cell plus (DIGI+)

Quick Test Guide



Charging DIGI+



Charge fully with Micro-USB cable before first use

Refit USB socket cover



Fully charged battery run time: 50 tests

Note: Charge fully at least once every 6 months

Powering On

Use Left (L), Middle (M) or Right (R) button to power on



Testing - Water (H2O) - SPOT (single oil test) for DIGI+ Water and DIGI+ Combined



Follow on-screen instructions



RANGE* → OK → START




*Select the test range for the approximate amount of water. If not known, select 0.1 - 20.0 % to reduce risk of overpressure.



Note: Close and hand tighten only (1/8 turn max.)

3 SHAKE CELL FOR 3 MINUTES
TO ABORT TEST PRESS 0 FOR 5 SECONDS

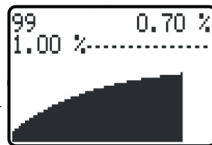

PRESS ANY KEY T
15.6 %

TESTING IS COMPLETE
Check result against limit for the test point

Digi Cell plus (DIGI+) - Quick Test Guide




Testing - BN - SPOT (single oil test) for DIGI+ BN and DIGI+ Combined



BN = a comparison of the pressure generated in the cell between used oil and new oil being shaken with a reagent. For each oil type, new oil is measured and saved as a calibration.

Calibration

Cell must be calibrated for each of the oil types to be measured using a new sample of unused oil before used oil can be tested.

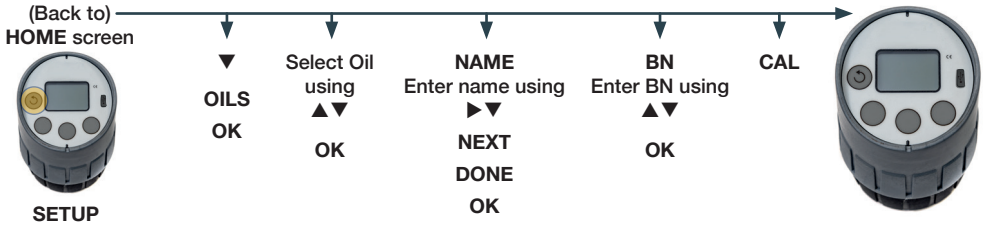


Measure Used Oil

Select Oil using ▲▼
OK → (Follow on-screen instructions)



Note: Close and hand tighten only (1/8 turn max.)

3 SHAKE CELL FOR 2 MINUTES
TO ABORT TEST PRESS 0 FOR 5 SECONDS

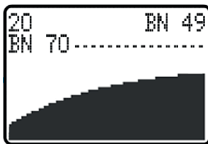

PRESS ANY KEY TO
BN 50

TESTING IS COMPLETE
Check result against limit for the test point

Cleaning



Dispose of contents carefully and wipe with a lint-free cloth
Use a mild solvent if necessary, for example, isopropyl alcohol.

Powering Off



OR

AUTO-OFF
after 5 minutes