

## RETURN PACKAGING INSTRUCTIONS

These instructions are to be followed when preparing to return a Slaughter tester. Be sure to **REMOVE ALL ACCESSORIES and INTERLOCK DISABLE** from the instrument before packaging to prevent damage.

**Please follow the instructions below to properly package your tester. Improper packaging can result in shipping damage. Slaughter is not responsible for any damages that occur in transit. It is recommended that you insure the shipment through the shipping company, in the event shipping damage does occur.**

- 1.** Call **Customer Support** at 1-847-932-3662 to obtain an RMA number.



**1-847-932-3662**

- 2.** Open the tester box and remove the foam inserts. (Large instruments have 4 foam inserts, one for each corner.)




- 3.** Line up divots in the foam inserts with the “feet” of the tester. Fit the inserts over the front & rear panels.



feet



- 4.** Place the tester and foam inserts in the box and ship to Slaughter.

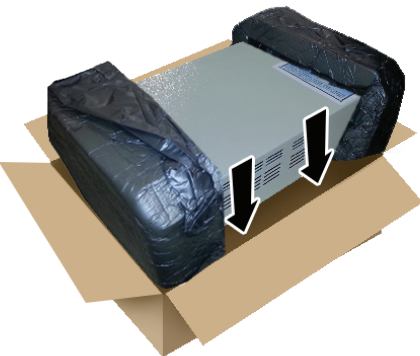

- 5.** Mark the container “**FRAGILE**” to ensure proper handling.



- 6.** Reference RMA number in all shipping documents.

**RMA NUMBER:**

0195426

sample