


The protection class IP65 is reached with the cap for the respective instrument and attached waterproof probes or inserted socket plugs.

The TopSafe is manufactured from a food-safe material. Foodstuffs that stain, (e.g. tomato ketchup) can colour the TopSafe permanently. The protective function is not affected by this.

Use

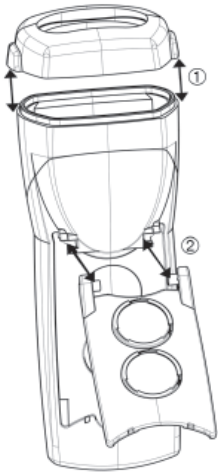

> Inserting the instrument

- 1 Prise up the cap at the side and remove ①.
- 2 Push the instrument into the TopSafe.
- 3 Attach the correct cap and press tight:



testo 110, 112,
416, 425, 625,
720, 512



testo 925
testo 926



testo 922

> Fitting the stand:

- > Clip the stand on or off as required ②.



WARNING! Magnetic field

May be harmful to those with pacemakers.

- > Keep a minimum distance of 15 cm between pacemaker and instrument.



ATTENTION! Magnetic field

Damage to other devices!

- > Keep a safe distance away from products which could be damaged by the effects of magnetism (e.g. monitors, computers or credit cards).

> Cleaning TopSafe:

- > Clean the stand with a mild soap solution.
- > Clean TopSafe without the stand in the dishwasher.