

# Instruction Sheet

## *Thermo Scientific Orion AQUAfast AC4099 Chlorine Dioxide Ampoules*

This instruction sheet provides step-by-step instructions for using the Thermo Scientific™ Orion™ AQUAfast™ AC4099 Chlorine Dioxide Auto-Test Ampoules with the Orion AQUAfast AQ4000 colorimeter. The Orion AQUAfast Auto-Test ampoules are designed for use with the Orion AQUAfast AQ4000 colorimeter. Auto-Test ampoules contain a pre-measured amount of liquid reagent and easily fill with the correct volume of sample for simplified reagent and sample mixing. Each ampoule contains an Auto-ID barcode that is read by the AQ4000 colorimeter and used to automatically identify the test parameter and initiate the test. For complete setup and operation instructions for the colorimeter, consult the Orion AQUAfast AQ4000 colorimeter user guide.

<b>Product: AC4099</b>
<b>Revision Date: April 6, 2015</b>
256451-001 Revision B

## Product Information

AC4099 Chlorine Dioxide Auto-Test Ampoules

0.8 – 11 mg/L

Program ID# 006

Kits with lot numbers higher than 84250 have been reformulated and have a lower reagent fill level. To use these kits, update your Orion AQUAfast AQ4000 colorimeter with the latest Software Revision 14, downloadable in our website at [www.thermoscientific.com/water](http://www.thermoscientific.com/water).

## Test Method Overview

The Chlorine Dioxide Auto-Test method employs the DPD chemistry.<sup>1,2</sup> Chlorine dioxide oxidizes DPD (N,N-diethyl-p-phenylenediamine) to form a pink colored species in direct proportion to the chlorine dioxide concentration. Interference from free chlorine ( $\text{Cl}_2$ ) is prevented (up to 6 ppm  $\text{Cl}_2$ ) by the addition of glycine to the sample. Glycine converts free chlorine to chloroaminoacetic acid. Results are expressed in ppm (mg/Liter)  $\text{ClO}_2$ .

Bromine, iodine, ozone and halogenating agents will produce high test results. Chlorine dioxide, at greater than 500 ppm, may prevent color development.

1. APHA Standard Methods, 18<sup>th</sup> ed., Method 4500-Cl G (1992)
2. EPA Methods for Chemical Analysis of Water and Wastes, Method 330.5 (1983)

## Safety Information

Read the Safety Data Sheet (SDS) before performing this test. Wear safety glasses and gloves.

## Test Procedure

**Note:** Before testing, zero the Orion AQUAfast AQ4000 colorimeter using a sealed zero vial from the Orion AQUAfast Zero Auto-Test Kit, Cat. No. AQ4ZER. If the sample is colored, use the sample cup provided to dilute the sample using the following steps: 1) Add 10 mL of sample and 5 mL of deionized water to the sample cup for a total of 15 mL. 2) Transfer the diluted sample to a clean, dry screw top vial from the Zero Auto-Test Kit and use that vial to zero the meter. 3) See the AQ4000 colorimeter user guide for details on the zero procedure for the colorimeter. Discard the diluted sample after the zero procedure. Repeat for each colored sample. Re-zero with the sealed zero vial before testing any colorless samples.

1. Fill the sample cup to the 15 mL mark with the sample. See *Figure 1*.
2. Add 6 drops of Chlorine Dioxide Neutralizer solution to the contents of the sample cup. See *Figure 2*. Stir briefly with the tip of the ampoule to mix the contents of the sample cup.
3. Place the Auto-Test ampoule in the sample cup. Snap the tip by pressing the ampoule against the side of the cup. The ampoule will fill leaving a small bubble to facilitate mixing. See *Figure 3*.
4. Mix the contents of the ampoule by inverting it several times, allowing the bubble to travel from end to end each time. Tap the bottom of the ampoule on a hard surface to cause any tiny bubbles that have collected on the ampoule wall to rise to the top of the liquid in the ampoule. Wipe all liquid from the exterior of the ampoule.
5. Insert the ampoule into the AQ4000 colorimeter. Align the ▼ on the Auto-Test ampoule with the ◆ on the adapter to obtain a continuous beeping and view \*\*\*\*\* across the display. If \*\*\*\*\* and beeping are not observed, rotate the ampoule to the right or left to initiate the measurement.
6. Immediately cover the ampoule with the colorimeter's light cover.
7. The AQ4000 will begin a 1 minute countdown. After the countdown is completed, the AQ4000 will automatically proceed to the measure mode.
8. Record the concentration reading from the AQ4000 display as either mg/L or ppm ClO<sub>2</sub> or log measurement into the data logger by pressing the log key.

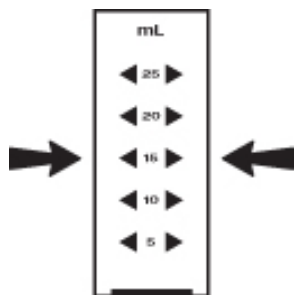


Figure 1:



Figure 2:

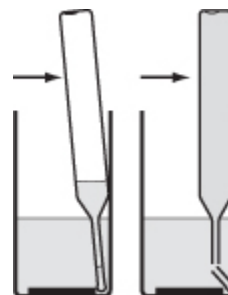


Figure 3:

## Ordering Information

Cat. No.	Description
AC4099	Orion AQUAfast Chlorine Dioxide Auto-Test Kit, 30 Ampoules
AC4010	Orion AQUAfast Ammonia as N Ultra Low Range Auto-Test Kit, 30 Ampoules
AC4070	Orion AQUAfast Chlorine (Free & Total) Auto-Test Kit, 30 Ampoules
AC4078	Orion AQUAfast Iron (Total & Soluble) Auto-Test Kit, 30 Ampoules
AC4082	Orion AQUAfast Sulfate Auto-Test Kit, 30 Ampoules
AC4016	Orion AQUAfast Sulfide (Soluble) Auto-Test Kit, 30 Ampoules
AQ4ZER	Orion AQUAfast Zero Vial Auto-Test Kit
AQ4CBL	Orion AQUAfast RS232 Cable for AQ4000 Colorimeter
AQ4000	Orion AQUAfast AQ4000 Colorimeter, Includes 4 AA Batteries, 16 mm Vial, Zero Vial Auto-Test Kit, 16 mm Vial Adapter, 13 mm Vial Adapter, Field Case, User Guide, Tablet Tampering Stir Rod, Vial Cleaning Brush

For a complete listing of all available Thermo Scientific Orion AQUAfast reagents, colorimeters and accessories, please visit [www.thermoscientific.com/water](http://www.thermoscientific.com/water).

## Contact Information

Thank you for your continued support of Thermo Scientific Orion products. Please visit [www.thermoscientific.com/water](http://www.thermoscientific.com/water) to view the Orion meter, electrode, sensor and solution products and download product literature, user guides and software updates. To access additional product support files, please visit our [Online Library](#).

For any questions or if you require assistance, contact our Technical Support Specialists:

Email [wai.techservbev@thermofisher.com](mailto:wai.techservbev@thermofisher.com)

Within the United States, call 1-800-225-1480

Outside the United States, call +1-978-232-6000

For additional product information, contact your local authorized dealer, local Thermo Scientific Orion technical sales representative or contact us using the Water and Lab Products (WLP) contact information below.

© 2015 Thermo Fisher Scientific Inc. All rights reserved. All trademarks are the property of Thermo Fisher Scientific Inc. & its subsidiaries.

### Water and Lab Products

**North America**  
Toll Free: 1-800-225-1480  
Tel: 1-978-232-6000  
[info.water@thermofisher.com](mailto:info.water@thermofisher.com)

**Germany**  
Tel: (49) 6184-90-6000  
[info.water.uk@thermofisher.com](mailto:info.water.uk@thermofisher.com)

**India**  
Tel: (91) 22-4157-8800  
[wai.asia@thermofisher.com](mailto:wai.asia@thermofisher.com)

**Japan**  
Tel: (81) 045-453-9175  
[wai.asia@thermofisher.com](mailto:wai.asia@thermofisher.com)

**China**  
Tel: (86) 21-68654588  
[wai.asia@thermofisher.com](mailto:wai.asia@thermofisher.com)

**Singapore**  
Tel: (65) 6778-6876  
[wai.asia@thermofisher.com](mailto:wai.asia@thermofisher.com)

**Australia**  
Tel: (613) 9757-4300  
In Australia: (1300) 735-295  
[InfoWaterAU@thermofisher.com](mailto:InfoWaterAU@thermofisher.com)