

WÖHLER



THE EASY WAY OF DATA TRANSFER.

Wohler A 550

FLUE GAS ANALYSIS WITH A TAP OF A FINGER

The Measure of Technology




Made in Germany

WOHLER A 550 DESKTOP SOFTWARE

System requirements

· Data management software
(computer interface necessary)

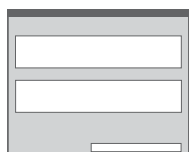

· Electronic devices:
PC, Notebook



· Operating System:
Windows 7, 8 (without Windows
RT) and 10, with current Service
Pack




Synchronisation



Performing the online measurement


1. Step

- Open the data management software and start the online measurement
- Select interface, e.g. Bluetooth® and measurement instrument

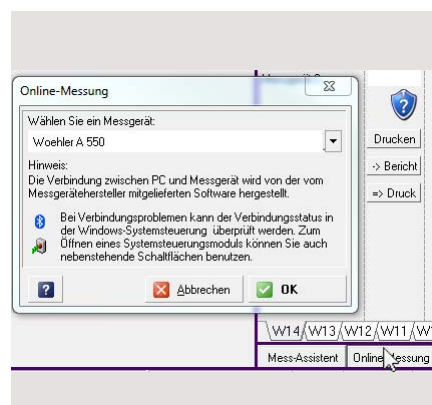

2. Step

- Perform the Single Online Measurement with the Woehler A 550
- If necessary it is possible to perform various measurement consecutively

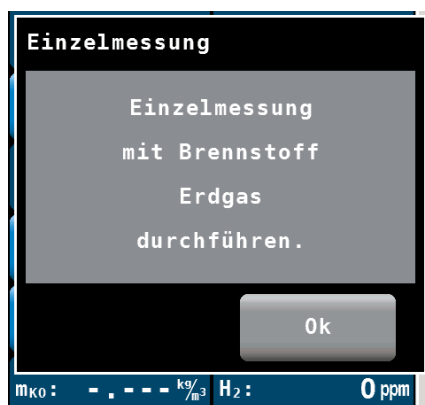

3. Step

- After the Single Online-Measurement is finished, the measurement data will be transferred to the data management software



WOHLER A 550 SMARTPHONE-APP

Measurement App for Android devices for transferring the measurement data of the Wohler A 550 to an external software or for displaying and saving the data on the smartphone.

Application

- . The Wohler A 550 App allows to exchange the measurement data of the Wohler A 550 with a software installed on a smartphone or tablet



System requirements

- . Android , Version 4.1 and higher
- . Bluetooth®-Interface



Measurement-App

- . Download the Wohler A 550 App from the Google Play Store (free of charge)



WÖHLER

Wohler USA Inc.

5 Hutchinson Drive · Danvers, MA 01923

PHONE: (+1) 978 750 9876 · **FAX:** (+1) 978 750 9799

MAIL: info@wohlerusa.com · **WEB:** www.wohlerusa.com

