




EQUIPMENT Instruction Sheet

Loctite®

Part Number 1233800

Description: 10ml GEL CA Syringe Dispenser

- 1. Press and hold white release button**

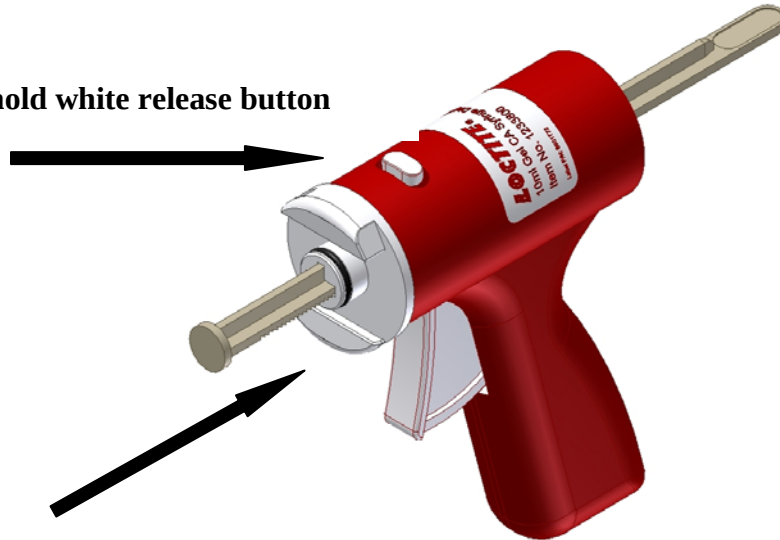

- 2. Insert Plunger in direction shown until the plunger face is seated.**




- 3. Remove end cap from the adhesive barrel**

- 4. Place barrel end over plunger face and twist clockwise so barrel ears slide under face tabs. (This will be a loose fit to accommodate other types of 10ml syringes. The plunger when moved forward will securely seat the barrel.)**



- 5. Pull the trigger to dispense**

Replacement Plungers

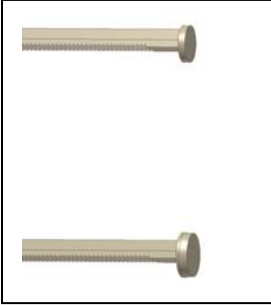

Item no. 1233798 is included in this package as it is properly sized to dispense Loctite® CA Gel Syringes. (0.5" diameter)

Item no. 1233799 is also sold separately and available for dispensing other 10ml syringe barrels you may choose to use. (0.6" diameter)

Henkel Corporation
1001 Trout Brook Crossing
Rocky Hill, CT 06067-3910

Henkel Canada Corporation
2225 Meadowpine Boulevard
Mississauga, Ontario L5N 7P2

Henkel Capital, S.A. de C.V.
Calzada de la Viga s/n Fracc. Los Laureles
Loc. Tulpetlac, C.P. 55090
Ecatepec de Morelos, Edo. de México

**Henkel Automotive
Technology Center**
2455 Featherstone Road
Auburn Hills, Michigan 48326

Henkel Ltda.
Rua Karl Huller, 136 – Jd.
Canhema 09941-410
Diadema/SP, Brazil

www.loctite.com

Loctite is a trademark of Henkel Corporation, U.S.A. © Copyright 2008. Henkel Corporation
All rights reserved. Data in this instruction sheet is subject to change without notice.
Instructions P/N: 8901773, Date: 08/2008

