

► Code Number

3582654

► Description

Exposed, Sensor Activated Regal® XL Model Urinal Flushometer, for 3/4" top spud urinals.

► Flush Cycle

□ 0.5 gpf/1.9 Lpf

► Specifications

- Chrome Plated Exposed Flushometer Parts
- Spud Coupling and Flange for 3/4" Top Spud
- Control Stop Plug
- Vacuum Breaker Flush Connection
- Low Consumption flush accuracy controlled by Para-Flo™ Technology
- Quiet, Exposed, Diaphragm Type, Chrome Plated Urinal Flushometer for either left or right hand supply with the following features:
- OPTIMA® EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- 13 1/2" x 13 1/2" Wall Box with Stainless Steel Access Panel and Vandal Resistant Screws
- 13" x 17" EASY ACCESS® Wall Box with Stainless Steel Access Panel and Vandal Resistant Screws
- Stop Seat and Vacuum Breaker molded from PERMEX® Rubber Compound for Chloramine Resistance

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

- 3/4" I.P.S. Wheel Handle Bak-Chek® Angle Stop



► Automatic Operation

Sloan OPTIMA® equipped Flushometers provide the ultimate in sanitary protection and automatic operation. There are no handles to trip or buttons to push. The Flushometer operates by means of an infrared sensor that adapts to its surrounding. Once the user enters the sensor's effective range and then steps away, the Flushometer Solenoid initiates the flushing cycle to flush the fixture.

► Hygienic

User makes no physical contact with the Flushometer surface except to initiate the Override Button when required. Helps control the spread of infectious diseases.

► Economical

Automatic operation provides water usage savings over other flushing devices. Reduces maintenance and operation costs.

► Practical

Solid state electronic circuitry assures years of dependable, trouble-free operation. The operational components of the Flushometer are identical to a handle operated Regal® XL Flushometer.

► Compliance & Certifications



This space for Architect/Engineer Approval

► Control Circuit

- Solid State
- 8 Second Arming Delay
- 24 VAC Input
- 24 VAC Output


► Solenoid Operator

24 VAC, 50/60 Hz


► Sensor Range

Nominal 15"-30" (381 mm-762 mm), adjustable $\pm 8"$ (203 mm)


► OPERATION

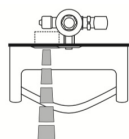

1. A continuous, invisible light beam is emitted from the OPTIMA® Sensor.

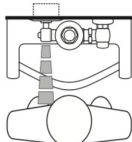


2. As the user enters the beam's effective range (15" to 30") the beam is reflected into the OPTIMA® Scanner Window and transformed into a low voltage electrical circuit. Once activated, the Output Circuit continues in a "hold" mode for as long as the user remains within the effective range of the Sensor.

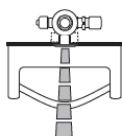


3. When the user steps away from the OPTIMA® Sensor, the circuit immediately initiates an electrical "onetime" signal that operates the Solenoid. This initiates the flushing cycle to flush the fixture. The Circuit then automatically resets and is ready for the next user.

► ROUGH-IN

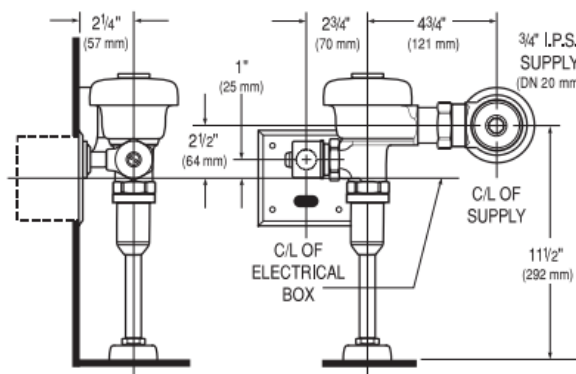

► ELECTRICAL BOX INSTALLATION

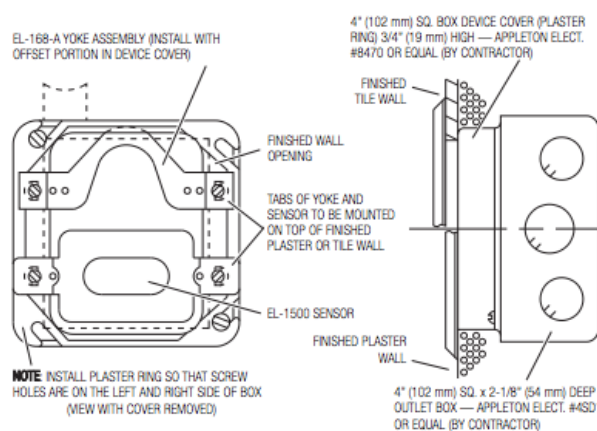

Failure to properly position the electrical boxes to the plumbing rough-in will result in improper installation and impair product performance. All tradesmen (plumbers, electricians, tile setters, etc.) involved with the installation of this product must coordinate their work to assure proper product installation. Installation Template furnished with Flushometer.

To ensure a perfect rough-in, Sloan recommends the use of the EL-485-A Flushometer Electrical Box Positioning and Support Kit. Specify and order the EL 485-A Kit separately. Consult factory for installation details.

► WIRING DIAGRAM

One Transformer serves up to ten (10) OPTIMA Closet/ Urinal Flushometers. Specify number of transformers required accordingly.