


Installation Instructions A² Composite Tub Models


GENERAL INSTALLATION INFORMATION

Thank you for selecting Aquatic. To insure maximum performance from the Aquatic fixture, please read and follow the instructions and cautions. Carefully inspect the new Aquatic fixture for any shipping damage. If such damage is found, report it to your vendor immediately. Under no circumstances should a damaged Aquatic fixture be installed. Aquatic and it's Distributor are not responsible for removal or reinstallation costs if a replacement fixture is necessary due to installation of a damaged fixture. Do not make modifications to the Aquatic fixture. This could adversely affect the safety and performance of the Aquatic fixture and void the warranty. Any failure to comply with the installation instructions and cautions may void the warranty. For questions concerning installation and maintenance of the Aquatic fixture, contact Technical Services at 1-800-945-2726.

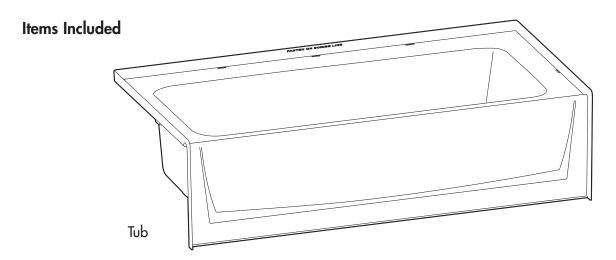

*Note: 6030CT shown for illustrational purposes only.

Tools Needed

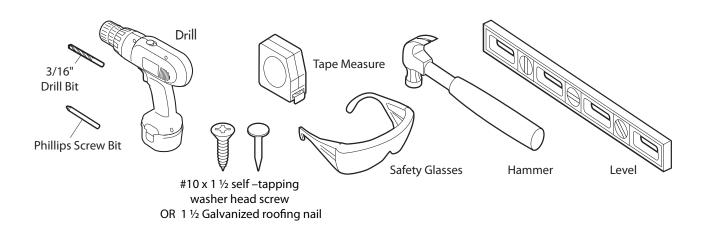

PLEASE READ ALL INSTALLATION INSTRUCTIONS COMPLETELY BEFORE BEGINNING THE INSTALLATION.



Installation Instructions A² Composite Tub Models

PRE-INSTALLATION PLANNING


- Review job print and Aquatic rough-in dimensions; verify all key dimensions against actual job conditions. MUST INSURE ROUGH DIMENSIONS ARE PROPER AND SQUARE.
- Locate studs as required and in remodeling, if necessary, add studs at each end to provide a vertical nailing surface for the side nailing flanges of the Aquatic fixture.
- 3. Make sure framed-in framing pocket is of proper size, square and plumb; check floor for level. Some shimming between the stud frame and fixture may be required.
- DO NOT install the product over open floor joist. Product should not require any additional support if the subfloor is square and level with framing. Shimming or foundation material may be required for additional support, if subfloor is uneven.
- 5. If fire-rated framing pocket is required, approved finish material must be in place prior to unit installation to meet fire safety requirements of local building code and/or FHA/HUD Minimum Property Standards. **NOTE:** Finished framing pocket must have interior dimensions shown on rough-in diagram to permit installation of unit.
- 6. Foundation material is not required.
- 7. Tubs require a 6" x 12" (150mm x 305mm) floor opening for the 1½" (40mm) drain, waste and overflow (DWO) kit (see diagram 1). **NOTE:** Be sure floor opening location matches left-hand or right-hand bath fixture drain location.
- 8. To ensure proper installation of the fixture, all local plumbing and building codes must be observed. Local building codes vary by location and you are responsible for insuring plumbing is complete and to code.
- 9. To avoid obstruction, make sure that supply lines and valve plumbing do not project into framing pocket during the installation process. Also, drain pipe must not project above floor level prior to installation.
- 11. To prevent scuffing while installing unit, cover the floor of the unit with a piece of cardboard or other protective material.
- 12. Fasteners for: Wood framing 1½" galvanized roofing nails or #10 x 1½" self-tapping washer head screws.

 Concrete or block walls 1" concrete nails and nailing tool.


 Steel studs (18 ga.) drill flanges and studs with 5½" carbide bit and use #12 x 1" sheet metal screws.

 NOTE: Always pre-drill no matter what fastener is to be used.
- 13. The slots on the horizontal surface near the nailing flange are used when installing the matching Aquatic wall system. These slots can be covered with wall material during a tub only installation.

INSTALLATION PROCEDURE

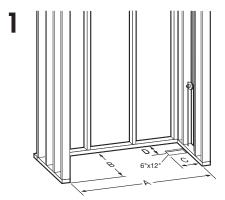

Model	A	В	C	D
6030CT/CTM	60"	31 1/2"	2 1/8"	14 1⁄4"
6030CTMIN/MM	60"	31 1/2"	2 ¾"	14 %"
6032CTMIN/MM	60"	33 ½"	2 ¾"	15 ¾"
6036CT/CTM	60"	37 1/2"	2″	17 %"
6042CT/CTM	60"	43 ½"	2″	20 %"

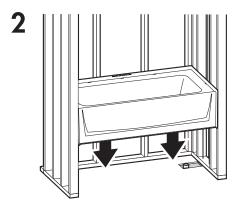

Check dimensions. **NOTE:** If you're adding additional accessories such as a grab bar–additional framing may be needed for support.


Pre-install unit to ensure framing pocket is plumb, square and a level installation can be achieved (see steps 2 and 3). Adjust framing as needed – Shim where necessary.

Lift and place the base into framing.




Installation Instructions A² Composite Tub Models


INSTALLATION PROCEDURE, CONT.

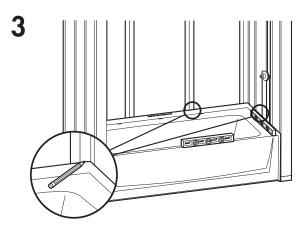


Level and mark all sides. Front apron should be firmly on the floor.

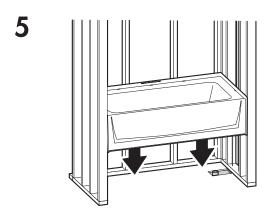


Install drain assembly per manufacturer's instructions. Place base into framing pocket.

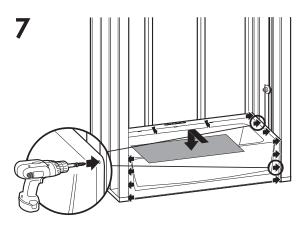

Pre-drill horizontal flanges along top of base section and fasten into each corresponding stud. Pre-drill both (vertical) side flanges and fasten to side studs 8" (200mm) on center. Place cardboard to protect finish.

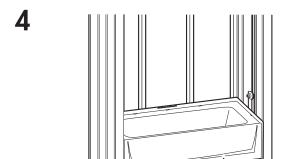

Remove tub.

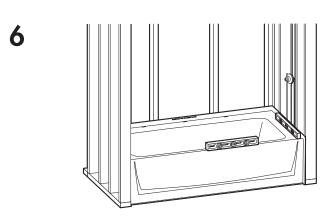

Level lengthwise and widthwise using 3 ft. (915mm) level by shimming if necessary. The unit must be set level.





CLEAN-UP

CAUTION: Some cleaning products are not suitable for use. Read all labels carefully. DO NOT USE if labels say heat, solvent based cleaning fluids, or "not suitable for use with fiberglass."

NOTE: Do not remove warranty/maintenance adhered label. Warranty/User maintenance label must be left for occupant (Required by ANSIZ124).

- 1. To prevent staining, remove all debris before plumbing leak test. Drain and wipe clean immediately after the inspection process. Use sponge with warm water and liquid detergent. Rinse, drain and wipe clean. Do not use abrasive cleansers that might mar, dull or scratch the finish such as scouring powders, steel wool, metal scrapers, or sandpaper.
- 2. If drywall mud or plaster gets on your fixture, it may be carefully removed with a wooden scraper. Roofing tar or paints may be removed with rubbing alcohol or paint thinner. Lacquer thinner should never be used on the fixture.
- 3. Plaster and latex paint may be removed with warm water, liquid detergent and brittle brush or plastic scraper. Do not use metal scraper or utensil to remove plaster or paint from finish.
- 4. Dull areas and light scratches around the outer edges of the fixture can be restored to high gloss by buffing with a soft cloth with white or cream-colored automotive rubbing compound, followed by the application of coat or good quality white automotive polish (or similar) and buff with a soft cloth. DO NOT WAX standing surfaces of the unit bottom (this includes textured, slip resistant standing surfaces), which could result in greater risk of slipping and personal injury.
- 5. Major gouges require professional repair.
- 6. See user maintenance instructions and label for more details.

USER MAINTENANCE INSTRUCTIONS

IMPORTANT! Use only recommended cleaners and procedures described herein. Use of other materials and methods may damage your bath fixture and void the warranty.

- For normal cleaning, never use abrasive cleaners such as scouring powders or pads, steel wool, scrapers, sandpaper or anything
 else that could scratch or dull the surface of your fixture. Use warm water and liquid detergents or non-abrasive cleansers, such as
 Soft Scrub Gel or Comet Gel. read all labels carefully and DO NOT USE if they say "not suitable for use with fiberglass."
- To keep your Aquatic fixture sparkling clean, apply a coat of good quality automotive paste wax or polish and buff to a high shine
 with a soft cloth or towel. Repeat every six months for easier cleaning and long lasting protection. DO NOT WAX standing surfaces of
 the unit bottom (this includes textured, slip resistant standing surfaces), which could result in greater risk of slipping and personal injury.
- 3. To restore a scratched or dull unit, use an automotive polishing compound applied with a clean cotton rag. Rub scratches and dull areas vigorously. Wipe off residues. Follow with automotive wax treatment described above. DO NOT WAX standing surfaces of the unit bottom (this includes textured, slip resistant standing surfaces), which could result in greater risk of slipping and personal injury.
- 4. To remove adhesive, try 3-M® natural cleaner, De-Solv-It® or similar materials. If residues remain, saturate small white cotton rag with nail polish remover and rub vigorously until the adhesive dissolves and disappears. These solvents are highly flammable and must be used sparingly and with caution. Do not allow solvent to go down the drain. Make sure not to contact plastic drain grates or other synthetic materials.
- 5. Rubber mats: If you use rubber "anti-skid" mat, make sure to remove it from the unit after each use to avoid harm to the surface finish.
- Hard Water: Water in certain regions, if not wiped up after bathing/showering, may cause fading of some Aquatic fixture colors.
 This is a natural occurrence beyond Aquatic's control and Aquatic is not responsible for any fading caused from hard water. (See Warranty)

CAUTION: When using any cleaning or polishing materials, make sure to read and follow all package instructions carefully. Wear rubber gloves at all times and avoid contact with eyes, skin, clothing, rugs and furnishings. Make sure all residues are rinsed off thoroughly.