


Component Checklist

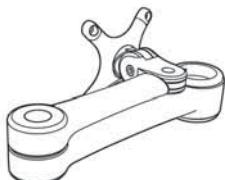

Arm Assembly


Primary Arm
Cable Cover

HARDWARE




5mm Allen Key

Display Mounting Screws

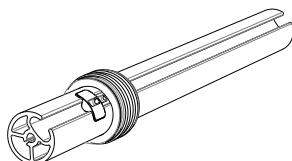M4x10/12/16mm (x4)
Phillips Head Mounting Screws

Pole Assembly



Desk Clamp Assembly

Secondary Arm
Cable CoverCable Stops
(x2)Pole Top Cap
Bolt Through
BaseCable Clip
Steel WasherM8x60mm
ScrewM8x30mm
Screw

IMPORTANT INFORMATION:

! IMPORTANT - Install Visidec Focus Articulated Arm as per installation instruction.

- ! This product supports a maximum load of 8kg (17.6lbs).
- ! The manufacturer accepts no responsibility for incorrect installation.


Step 1. Check Components

Check what you have received against the component checklist and hardware above.

Step 2. Mount Pole Assembly

Option 1: Bolt Through



It is recommended that the Pole Assembly be mounted towards the rear edge of the work surface.

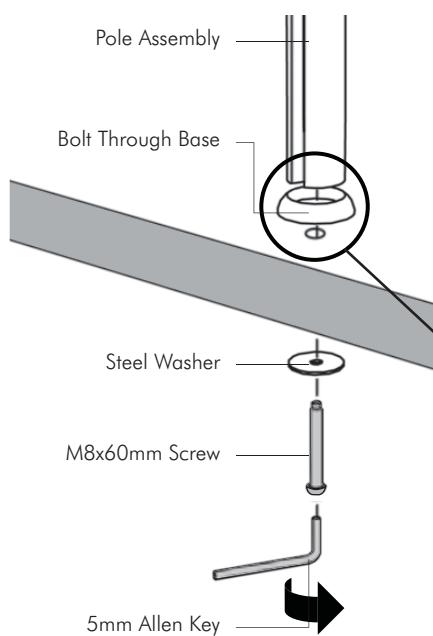

Option 2: Mount using Desk Clamp

2.1 Remove both the Pressure plate and M10 Desk Clamp Screw.

2.2 Fasten the Desk Clamp to the Bolt Through Base & Pole Assembly using the M8 x 30mm Screw and **Tighten Firmly**.

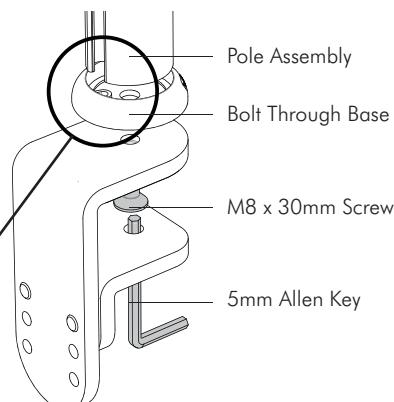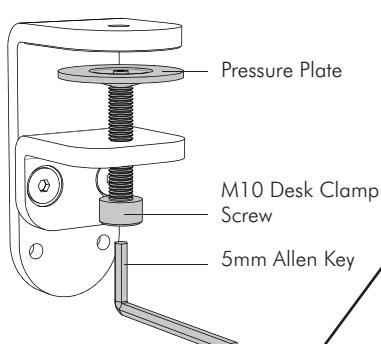

Note: Ensure that the Slot Tab in the Bolt Through Base fits snugly into the Slot on the Pole Assembly.

The Visidec logo on the Bolt Through Base must face the **front** of this assembly.


Step 2. Mount Pole Assembly (cont.)

2.3 The Desk Clamp bracket can be repositioned to suit different mounting surface thicknesses. The maximum mounting surface thicknesses supported are listed below from the Top to Middle and Bottom Screw Holes.



Top 0 - 32mm (default)
Middle 7 - 47mm
Bottom 22 - 62mm

Top 29 - 69mm
Middle 43 - 84mm
Bottom 59 - 99mm


If you need to reposition the desk clamp bracket or you have no access to the rear of your table continue to **Step 2.4**.
If you DO NOT need to reposition the desk clamp bracket and you have access to the rear of your table skip to **Step 2.7**.

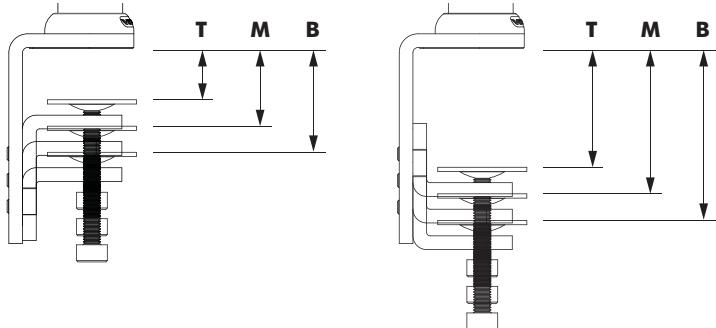


2.4 Remove the M8 x 16mm Socket Head Countersunk Screws to release the Desk Clamp Bracket.

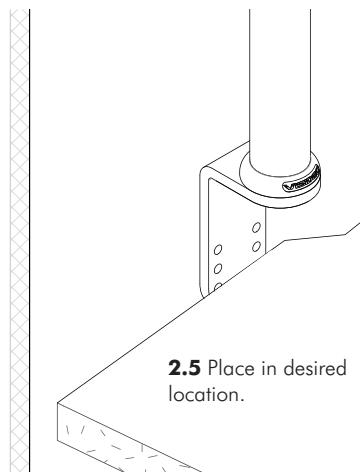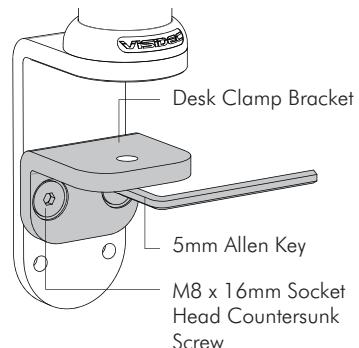

2.5 Place in desired location.

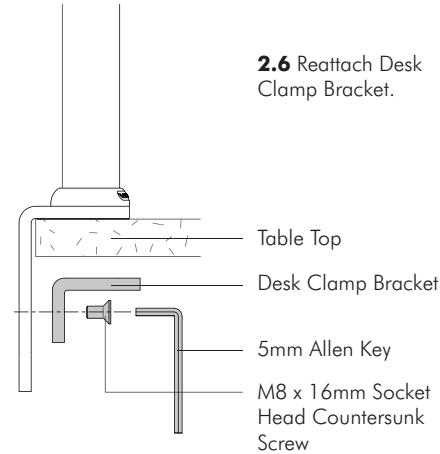


2.6 Reattach Desk Clamp Bracket.

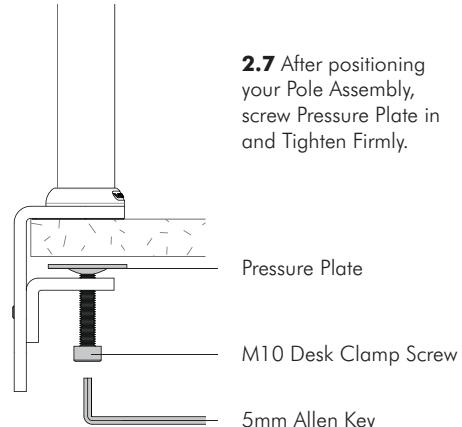


2.7 After positioning your Pole Assembly, screw Pressure Plate in and Tighten Firmly.


Step 3. Mount Arm Assembly

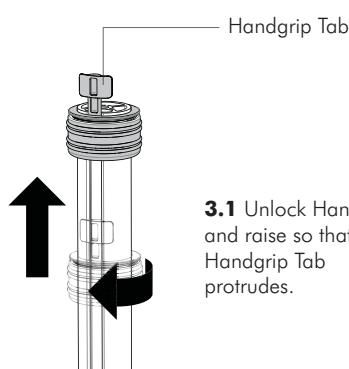


3.1 Unlock Handgrip and raise so that Handgrip Tab protrudes.

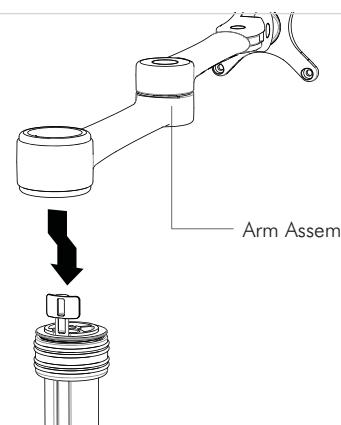

3.2 Slip the Arm Assembly over the Handgrip Tab and then onto the Pole.

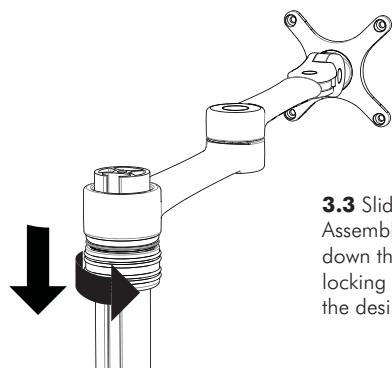


3.3 Slide the Arm Assembly and Handgrip down the pole before locking the handgrip at the desired height.

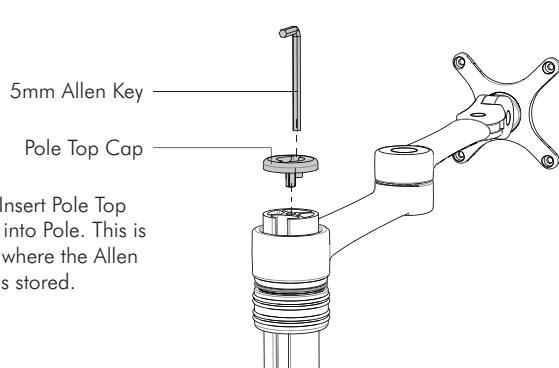

3.4 Insert Pole Top Cap into Pole. This is also where the Allen Key is stored.


Step 4. Mount Displays

Option 1: 75x75mm Hole Pattern

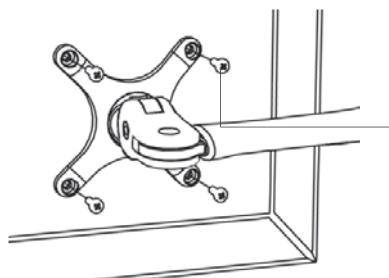


M4 Phillips Head
Mounting Screws

Option 2: 100x100mm Hole Pattern

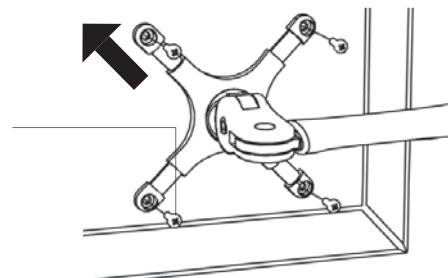


Note: Extend Arms to achieve 100x100mm hole pattern.


Step 5. Adjust Height

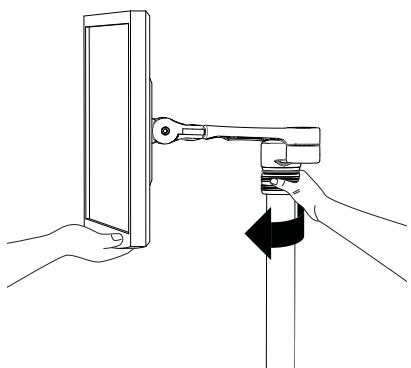

5.1 Unlock Handgrip ensuring both the screen and arm assembly are supported.

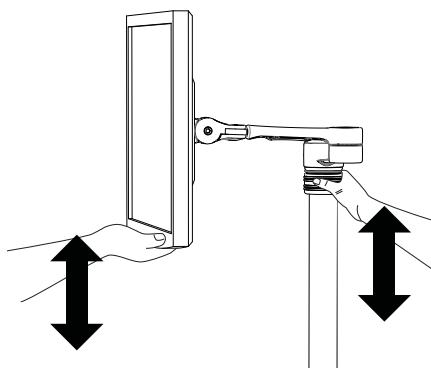


5.2 Lift/Lower the Screen to the desired height. Move both Screen and Arm assembly together.

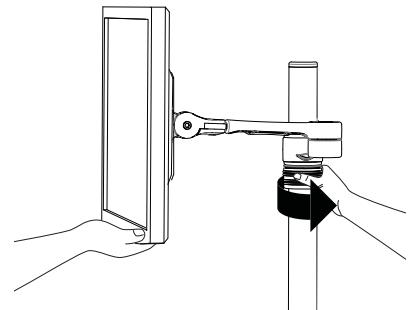


5.3 Lock Handgrip firmly.

Step 6. Cable Management


6.1 After plugging in your cables, install the Cable Covers.

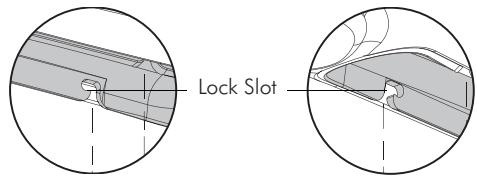

A. Insert Cable Covers up into Lock Slots.

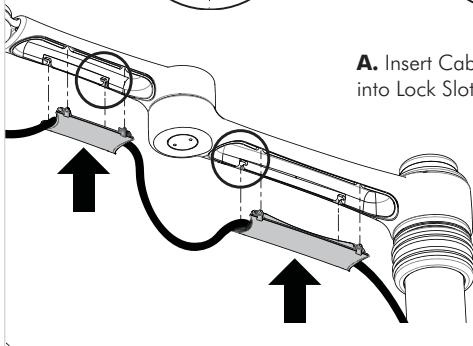


B. Push Cable Covers away from Elbow Joint to secure in place.

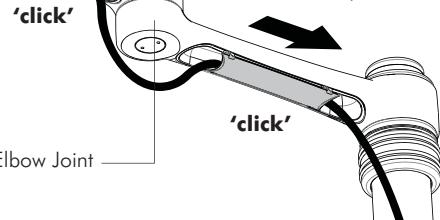

Elbow Joint

6.2 Cable Clips and Cable Stops can be installed to further manage cables. Please See Over.

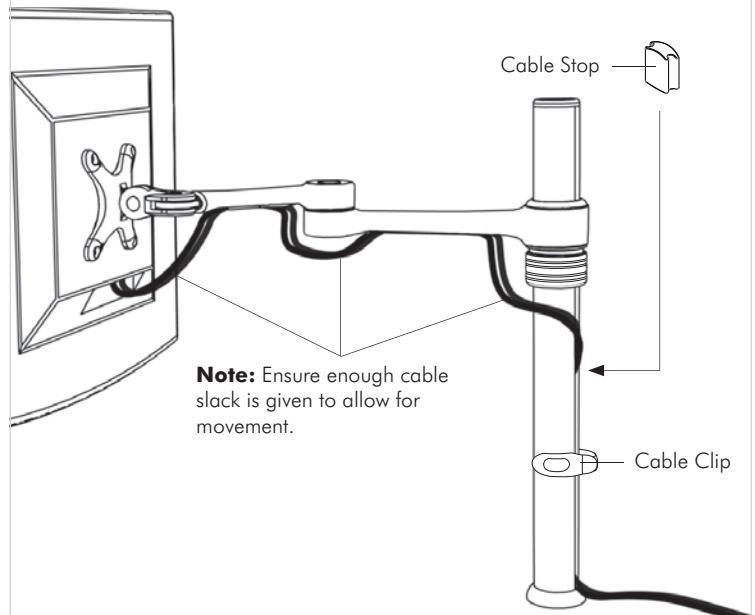

Note: Ensure enough cable slack is given to allow for movement.

Step 6.2. Insert Cable Stops




A. Insert Cable Stop on one edge of the Pole Slot.



B. Press down firmly onto the other edge of the Cable Stop and hold. This allows the rear profile to flex in place.



Step 8. Adjusting the Display Bracket

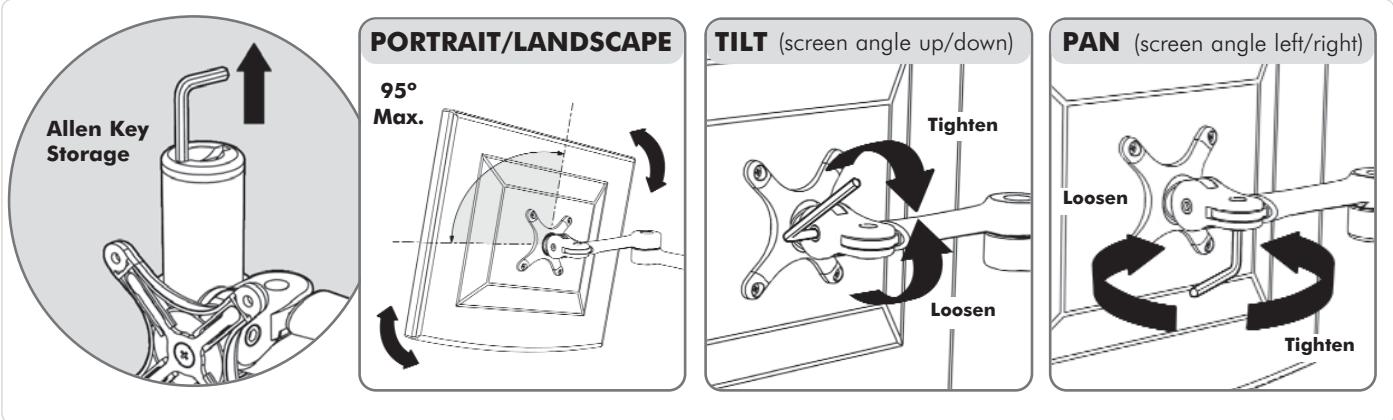

Ergonomic Guidelines

Many experts believe that the extended use of any computer screen has the potential to cause serious injury to your eyes, neck and back. This can be largely avoided by correctly positioning your display.


Viewing angle: Ergonomists recommend that the optimal position of your display should be slightly below eye level. When looking at the display's centre the user should have a downward visual angle of approximately 10°-20°.

Height: As a guide, the height **(h)** of your display should approximately be as follows:

- Tall Male (Max): 560mm (22")
- Short Male (Min): 368mm (14.5")
- Tall Female (Max): 520mm (20.5")
- Short Female (Min) 356mm (14")

Distance: For visual comfort, a viewing distance **(d)** between 500mm (20") to 750mm (29.5") is recommended.

Tilt Angle: Angular adjustments to reduce reflection on your monitor should range between 5° forward tilt to 15° backward tilt.

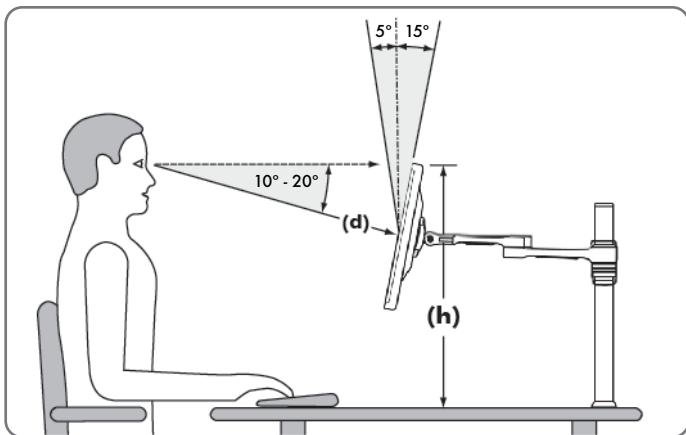

Installation Complete

