

All about Plasticizing Screws

Part 1 of the Series Discusses the Basic Design of a Plasticizing Unit and the Correct Choice of Injection Unit

The required screw diameter can be ascertained on the basis of the shot volume. The formula for the average residence time can be used to estimate the degree of utilization and the thermal load on the material. Last but not least, the maximum injection pressure and the available screw torque are key variables for successful injection molding production – basic principles for the selection of a barrel-and-screw combination, and the starting point for further optimization.

Designing an injection molding machine is actually a highly complex task. To ensure that no wrong choice is made when selecting the machine, a large number of key parameters must first be identified and included in the calculation. Particular attention must be paid to the plasticizing unit (Fig. 1), since it is a vital success factor in manufacturing high-quality products. The requirements these aggregates have to meet are extremely complex, but by carefully balancing the different aspects already at the stage of designing the equipment, it is possible to eliminate conflicts of objectives.

For example, the demand for the highest possible throughput conflicts with the requirements for material homogeneity, melt quality, conveying stability and wear resistance. The wear resistance does not depend exclusively on the type of material processed, but is rather an attribute resulting from the systemic interplay between the geometry and the correct choice of materials.

Basic Design of the Plasticizing Unit: Shot Volume

The discussion presented here in part 1 of this article series focuses on what needs to be considered in planning the basic design of the plasticizing unit and the injection unit. The definition of the basic design of the plasticizing unit and the injection unit provides the prerequisites for the next step, that is, the choice of the screw geometry. In the next part, the development of a new screw ge-



Various shapes of plasticizing screws. The correct design is approached in several steps

© Wittmann Battenfeld

ometry will be explained in more detail. (The limiting factors in developing new screw geometries are the loads on the material processed and on the machine, such as pressure, temperature, dosing torque, etc.)

Depending on the material to be processed, the optimal operating range of a plasticizing unit is a screw stroke roughly between 1 and 3 screw diameters (D). If a dosing stroke of more than 4D is selected for loading the injection unit, maximum process stability can no

longer be ensured (Fig. 2). The possible consequences would be dosing time fluctuations, air induction and accelerated wear of the unit.

The reason is that the effective screw length is reduced by an increased dosing stroke. Thus, the length of the channel is shortened to compression level, which means that the material has less time to absorb sufficient heat for melting. The result would be rising pressures inside the channel, which would strain both the material and the ma- ➤

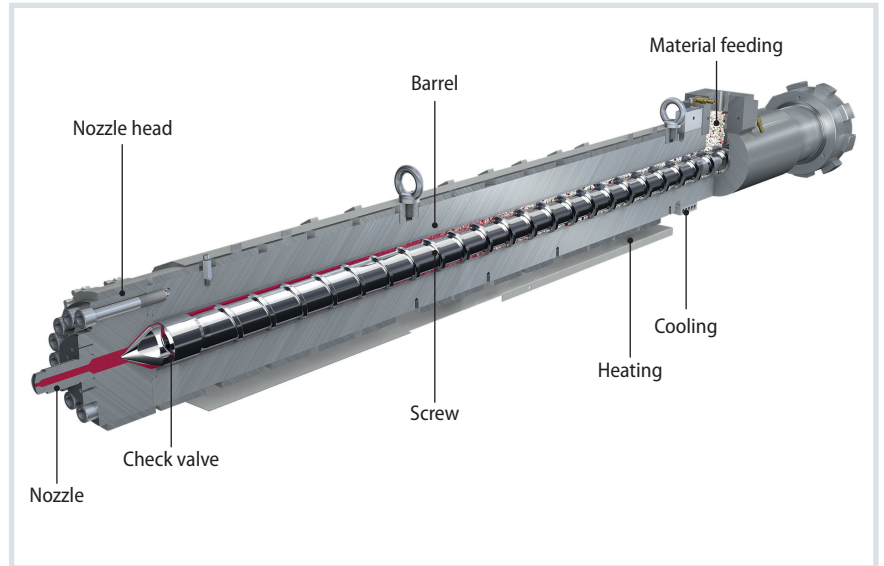


Fig. 1. From the material feeding to the nozzle: schematic diagram of the plasticizing system

Source: Wittmann Battenfel; graphic: © Hanser

Equations

To calculate the shot volume, the residual cushion, the screw diameter and the mean residence time:

$$V_{SCH} = \frac{m_T}{\rho_m} + f_{HK} \cdot V_{HK} + V_{MP} \quad (1)$$

$$V_{MP} = 0.3 \cdot \frac{D^3}{4} \cdot \pi \quad (2)$$

$$D_{min} = \sqrt[3]{\frac{4 \cdot V_{SCH}}{\pi \cdot 3}} \quad (3)$$

$$D_{max} = \sqrt[3]{\frac{4 \cdot V_{SCH}}{\pi \cdot 1}} \quad (4)$$

$$\bar{t}_v = f_{MAT} \cdot \frac{V_K}{V_{SCH}} \cdot t_{zykl} \quad (5)$$

V_{SCH} : Shot volume

m_T : Part weight

ρ_m : Melt density

f_{HK} : Hot runner factor

V_{HK} : Hot runner volume

V_{MP} : Residual melt cushion volume

D : Screw diameter

D_{min} : Smallest recommended screw diameter

D_{max} : Largest recommended screw diameter

\bar{t}_v : Mean residence time

t_{zykl} : Total cycle time

V_K : Screw channel volume

f_{MAT} : Density correction factor

chine. The shot volume is calculated from the part weight, melt density and hot runner volume (**Equation 1**).

For hot runner tools, the compression of the melt inside the hot runner must be taken into account – depending on whether the hot runner needs to be cyclically unloaded (e.g. in the case of open hot runners with easy-flowing materials). The higher the melt compressibility and the higher the injection pressure, the higher the factor hot runner (f_{HK}) for the hot runner. Typical values for f_{HK} lie between 0.1 and 0.3. Thus, even with relatively small part weights, the required stroke volume may be doubled.

For tooling with solidifying sprue, the factor f_{HK} tends towards zero. It is important to note that the weight of the solidifying sprue system is then included in the part weight and taken into account accordingly.

The volume of the residual melt cushion (V_{MP}) should change in relation to the screw diameter D . As a general rule, a screw stroke of 0.1 to 0.3 D should be found inside the barrel at the end of the holding pressure phase. Consequently, the volume of the melt cushion must be calculated (**Equation 2**).

The screw diameter can be derived from the calculated shot volume. As already stated, the metering stroke can be defined as a distance equal to the length of one to three screw diameters. Accordingly, the limit diameters apply to the screw (**Equations 3 and 4**).

In the final choice of the screw diameter, the characteristics of all products to be manufactured must be taken into account. Following careful consideration of the calculated diameter ranges, the actual screw diameter is finally selected.

Residence Time as Indicator of Thermal Damage to the Material

Residence time is the length of time spent by a given plastic particle inside the barrel. Due to the complex flow processes inside the barrel, however, there is no precisely defined time span which applies equally to all melt fractions, but a certain residence time distribution. This depends on factors such as the channel volume, the total cycle time, the material bulk density, the melt density and process parameters such as back pressure and screw speed.

The residence time distribution provides information about the material quality concerning homogeneity and sufficient plasticization. The wider the residence time distribution, the higher the homogenizing effect. Calculating the residence time distribution is a complex mathematical task. In practice, however, a simplified formula for the mean residence time is often sufficient for an assessment. The mean residence time is the amount of time a plastic particle spends on average inside the barrel. The mean residence time serves as a first indicator of thermal damage to the material (**Equation 5**).

The density correction factor (f_{MAT}) takes into account the varying material densities. For instance, the density of solid material is higher than that of the melt, which again is higher than the bulk material density to be found in granulated raw material. Experiments have shown that this factor generally lies between 0.8 and 0.9. Thus, the calculated residence time is reduced by the empty spaces between the granulate grains in the feed zone of the screw.

For common types of plastics, an optimal time window ranging from 2 min to about 8 min is to be expected. The residence time should not fall below at least 1 min. It should also be mentioned that, depending on the types of additives and base polymers, there are large differences in the thermal stability of plastics. So some special types of material – for example for lens production – can easily withstand residence times of more than 30 min, while in plastics with medical ingredients degradation processes may already set in after only 2 min.

Reference Value for the Length of the Screw

At the stage of developing a specific screw geometry, the exact channel volume is of course not yet known. Here, the volume of the existing standard 3-zone screw can be used for preliminary orientation. In the case of screws operating according to the same principle, the volumes usually deviate only slightly from the standard value.

In principle, calculation of the residence time can provide a first reference value for the total length of the screw. Screws are lengthened for extremely short dwell times and shortened for extremely long dwell times.

Maximum Screw Torque

Every injection unit has a maximum screw drive torque. It is fixed by the installed drive system. Wittmann Battenfeld machines are available with different equipment variants to provide higher drive torques.

In this context, the mechanical strength of the driven screw must also be taken into account. Here, the thinnest cross-section is the limiting factor. Accordingly, the drive torque is adapted to the strength of each type of screw to prevent screw breaks.

For determining the required torque, the previously defined variables such as stroke utilization and residence time, as well as the viscosity of the material to be processed, are decisive.

In addition to using precise calculation tools, Wittmann Battenfeld GmbH can draw on extensive experience from countless systems previously installed to make the correct choice in each particular case.

The Required and the Maximum Injection Pressure

The maximum possible injection pressure must be ascertained in every case. There

is a choice of barrels in different dimensions for every size of injection unit. Especially in the case of large barrels, the maximum injection pressure must be observed. Due to the larger cross-sectional area of the screw, a lower specific injection pressure can be set to obtain the same injection force.

Another important point: the smaller the screw diameter, the higher the transmission ratio of the specific injection pressure to injection force will become, which has an effect on control accuracy. This is ultimately the reason why no small barrels can be installed in large aggregates of any size.

In practice, the required injection pressures are derived from empirical values or determined by calculation (e.g. by filling simulations). Nevertheless, the mechanical engineering design should be laid out to provide a sufficient reserve.

Four Parameters for Decision-Making

Shot volume, residence time, maximum screw torque and maximum injection pressure: the clarification of these central parameters should make it possible to determine the size of the screw and to choose the right injection unit to match it – or at least strongly limit the choice for both decisions. ■

The Author

Filipp Pühringer heads the Process Engineering Development Department at Wittmann Battenfeld GmbH in Kottbrunn, Austria.

Note

Part 2 of the series will deal in detail with the procedure for developing a screw geometry. It will be published in one of the next issues.

Service

Digital Version

➤ A PDF file of the article can be found at www.kunststoffe-international.com/2020-10

German Version

➤ Read the German version of the article in our magazine *Kunststoffe* or at www.kunststoffe.de

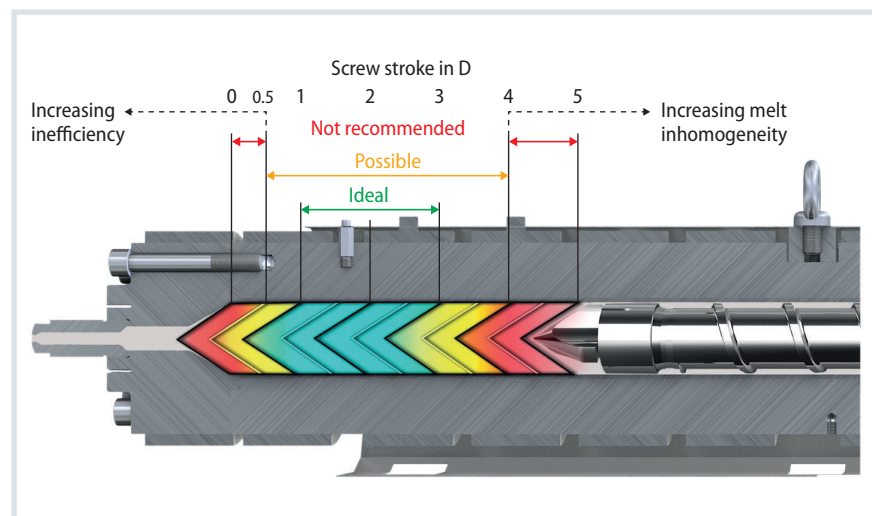


Fig. 2. Schematic diagram of the recommended stroke utilization. The optimum operating range of a plasticizing unit is at a screw stroke of about 1 to 3 D Source: Wittmann Battenfeld; graphic: © Hanser