

# AC/DC Current Transducer DHR-C10

The transducer for the electronic measurement of DC & distorted AC waveform currents, with galvanic isolation between the primary circuit (power) and the secondary circuit (measurement). True RMS 0-10V voltage output.





#### **Electrical data**

Primary Nominal DC & AC Current I <sub>PN</sub> (A.t.RMS)	Primary AC Current Max. Peak Value <sup>1)</sup> I <sub>P</sub> (A)	Output voltage (Analog) <b>V<sub>out</sub> (VDC)</b>	Ту	ре
100	600	0-10	DHR 1	00 C10
200	600	0-10	DHR 20	00 C10
300	1000	0-10	DHR 30	00 C10
400	1000	0-10	DHR 400 C10	
500 <sup>2)</sup>	1800	0-10	DHR 500 C10	
600 <sup>2)</sup>	1800	0-10	DHR 600 C10	
1000 2)	1800	0-10	DHR 1000 C10	
R, Load resi	stance		≥ 10	kΩ
V <sub>c</sub> Supply voltage			+ 20 50	V DC
I <sub>c</sub> Current consumption			30	mA
V <sub>SL</sub> Output voltage limitation (0 - 10 V)			< 14	V
<b>Î</b> <sub>P</sub> Overload	Overload capability (Ampere Turns)			A.t

#### **Performance data**


Х	Accuracy @ $I_{PN}$ , $T_{A} = 25^{\circ}C$ (excluding offset)	< ± 1	% of I <sub>PN</sub>
<b>E</b> ,	Linearity error (1% of $I_{PN} \pm I_{PN}$ )	< ± 1.0	% of I <sub>PN</sub>
<b>V</b> <sub>OE</sub>	Electrical offset voltage, $T_A = 25^{\circ}C$	< ± 1.0	% of I <sub>PN</sub>
	Temperature coefficient of $\mathbf{V}_{OE}$ (0+60 °C)	± 2.0	mV/K
	(-40+70 °C)	± 4.0	mV/K
TCV <sub>ou</sub>	Temperature coefficient of $\mathbf{V}_{OUT}$ (% of reading)	± 0.1	%/K
t	Response time to 90 % of I <sub>PN</sub> step	< 150	ms
BW	Frequency bandwidth (± 1 dB)	DC 206000	Hz

#### **General data** T<sub>A</sub> T<sub>s</sub> °C - 40 .. + 70 Surrounding operating temperature Surrounding storage temperature - 40 .. + 85 °C Mass 260 m g IP20 **IPxx** Protection degree

Notes :1) The Max. Peak AC Current is the highest peak level of the primary signal that is taken into account for accurate True RMS calculation. Yet the device is designed for maximum continuous True RMS value equal to  $I_{_{\rm PN}}$ , whereas the output is limited by the above specified output limitation.

<sup>2)</sup> According to the UL 508 Standard for Safety for Industrial Control Equipment the primary current must not exceed 475 A.t.RMS through the transducer hole.

## I<sub>PN</sub> = 100 .. 1000 A

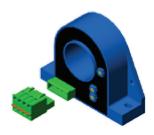

#### **Features**

- VFD and SCR waveforms current measurement
- True RMS output
- Panel mounting
- Eliminates insertion loss
- Isolated plastic case recognized according to UL94-V0

#### **Advantages**

- · Large aperture for cable up to Ø32mm
- High isolation between primary and secondary circuits
- Easy installation

#### **Applications**

- VFD Controlled Loads VFD output indicates how the motor and attached load are operating.
- SCR Controlled Loads Acurate measurement of phase angle fired or burst fired (time proportioned) SCRs. Current measurement gives faster response than temperature measurement.
- Switching Power Supplies and Electronic Ballasts True RMS sensing is the most accurate way to measure power supply or ballast input power.

#### **Application domain**

• Energy and Automation

Page 1/4



#### **Current Transducer DHR-C10**


#### **Isolation characteristics**

V	Rated isolation voltage rms <sup>3)</sup>	300	V		
	according to the standard IEC 61010-1 and with the following conditions				
	<ul> <li>Reinforced isolation</li> </ul>				
	<ul> <li>Over voltage category CAT III</li> </ul>				
	- Pollution degree PD2				
	- Heterogeneous field				
V	Rms voltage for AC isolation test <sup>4)</sup> , 50 Hz, 1min	4.0	kV		
$\hat{\mathbf{V}}_{w}^{d}$	Impulse withstand voltage <sup>4)</sup> , 1.2/50 uS	7.3	kV		
dCp	Creepage distance	7.2	mm		
dCl	Clearance distance	7.2	mm		
СТІ	Comparative tracking index (Group I)	> 600			

<u>Notes</u> :<sup>3)</sup> Between primary conductor voltage and ground. If insulated cable is used for the primary circuit, the voltage category could be improved according to the insulation characteristics given by the cable manufacturer.

<sup>4)</sup> Between primary (completely filling the aperture) and secondary.

#### **Transfer characteristics**

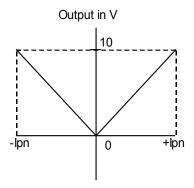



#### **Current Transducer DHR-C10**

#### Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly!

Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications.

Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



#### Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage!

The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training.

The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor.

The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturers' operating instructions.



#### Caution! Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (e.g. primary conductor, power supply).

The user shall ensure to take all measures necessary to protect against electrical shock. The transducer is a built-in device containing conducting parts that shall not be accessible after installation.

A protective enclosure or additional insulation barrier may be necessary.


The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed.


Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.


Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.



#### Dimensions DHR-C10 (in mm. 1 mm = 0.0394 inch)

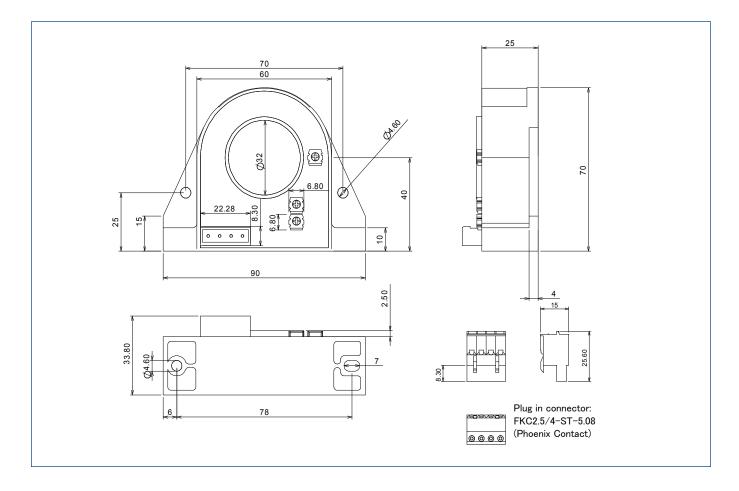

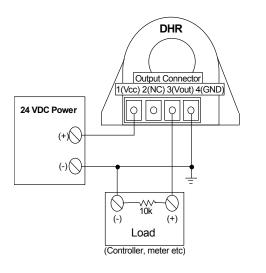

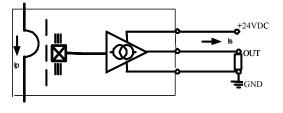

#### Connections

- Wires up to Ø 2 mm
- Female connector provided (spring terminal blocks)
- User-friendly spring-cage connection for no-tool direct conductor connection

#### **Mechanical characteristics**

- General tolerance
- Primary aperture
- Ø 32.0 mm
- Panel mounting
- 4 holes Ø 4.6 mm 70.0 mm & 78 mm

±1 mm

- Distance between holes (see above dimensions)
  - For panel mounting, replace M4 screws by new one (not supplied) with appropriate length to panel's thickness.

### Remarks

- The temperature of the primary busbar can not exceed 90 °C.
- Dynamic performances are the best with a primary busbar completely filling the primary aperture.
- This is a standard model. For different versions (supply voltages, different outputs, bidirectional measurements...), please contact us.

Page 4/4