M-190W Magnetic Sensor

205 Westwood Ave Long Branch, NJ 07740 1-877-742-TEST (8378) Fax: (732) 222-7088 salesteam@Tequipment.NET

equipment





SPECIFICATIONS:

Speed Range: 1-99,999 RPM

Operating Distance: 0.005" [0.127 mm] gap from target **Minimum Target Size:** 0.106" [2.692 mm] minimum diameter

Power required: None - Self Generating AC voltage

Output Signal: 190V P-P maximum Pole Piece Magnet Diameter: 0.106 inch [2.692 mm]

Operating Temperature: -100° to 225° F [-73° to 107° C]

Standard Cable Length: 8 feet [2.438 m]

Dimensions: 2.0" (L) x 0.625" [50.8 x 15.875 mm]

Weight: 3 oz. [85 g] Specifications are subject to change without notice.

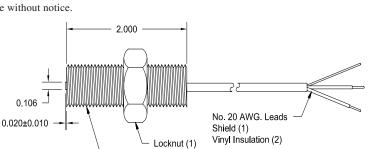


Figure 1 M-190W Dimensions

5/8-18 UNF-2A Thread

OVERVIEW:

The M-190W Magnetic Sensor is a self-powered gear sensor that is most popular for use with 60 tooth 20 pitch gears. The sensor mounts within 0.005 inches [0.127 mm] of a minimum 0.106 inch [2.692 mm] diameter ferrous target. The sensor self-generates an AC signal and requires no power from the display module.

The M-190W is compatible with all Monarch ACT Series panel tachometers and MT-190 Magnetic Trigger Sensor/Amplifier models.

CONNECTION DETAIL:

Wire Color **Function** Black AC Signal White AC Signal Shield Housing Ground

When using the M-190W with any Monarch ACT Series panel tachometer, refer to the panel tachometer instruction manual for sensor connection detail.

OPERATION:

Magnetic sensors convert motion of a ferrous target into an AC voltage output proportional to speed. The target must not be smaller than the magnetic poll piece (0.106 inches, 2.692 mm) or larger than the diameter of the sensor (0.625 inches, 15.875 mm). Gear teeth are preferred, but bolt heads, slots or keys also work. The Monarch ACT Series panel tachometers will typically operate from all 2-wire design magnetic sensors. The stainless steel and waterproof housing of the M-190W sensor allow operation in harsh locations. The user can increase the cable length up to a total of 500 feet [152.4 m] in length.



In order to comply with EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE):

This product may contain material which could be hazardous to human health and the environment. DO NOT DISPOSE of this product as unsorted municipal waste. This product needs to be RECYCLED in accordance with local regulations, contact your local authorities for more information. This product may be returnable to your distributor for recycling - contact the distributor for details.



MT-190 Magnetic Amplifier Module



SPECIFICATIONS:

Power required: 3.3 to 12 Vdc, 15 mA

Operating Distance: extended to 0.25" [6.35 mm] gap from target


Output Signal: Same as power supplied, TTL compatible with 5 Vdc supplied


Operating Temperature: 20° to 160° F [-6° to 70° C]

Standard Cable Length: 1.5 feet [0.457 m]

Dimensions: 2.65" (L) x 1.38" x 1.05" [67.3 x 35.0 x 26.7 mm]

Weight: 1.728 oz. [48.988 g] Specifications are subject to change without notice.

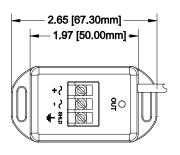

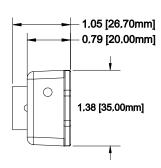



equipment

205 Westwood Ave Long Branch, NJ 07740 1-877-742-TEST (8378) Fax: (732) 222-7088 salesteam@Tequipment.NET

Figure 1 Amplifier Module Dimensions

MT-190P Magnetic Trigger Sensor/Amplifier with plug

OVERVIEW:

The MT-190 Magnetic Amplifier Module enhances the performance of the M-190W Magnetic Sensor (see other side). The Amplifier extends the operating gap for the sensor to 0.25 inches [6.35 mm] from the ferrous target. The MT-190 Magnetic Trigger Sensor with Amplifier can sense gear teeth, bolt heads or shaft keys. The MT-190 provides a pulsed output signal and is TTL compatible with 5 Vdc supplied.

The M-190W Magnetic Sensor is combined with an Amplifier Module to become an MT-190P or MT-190W. The Amplifier Module has an 8 foot [2.438 m] cable with 3 tinned wires and a ground shield (MT-190W) or 1/8 [3.5 mm] phone plug (MT-190P) termination.

The MT-190W is compatible with all Monarch ACT Series panel tachometers and Data-Chart 1250 Paperless Recorders.

The MT-190P is compatible with the following Monarch instruments: Pocket Laser Tachometer 200 (PLT200), SPSR Self-Powered Sensor, Deluxe Nova-Strobes (dax, dbx, DBL) and Phaser-Strobes (pbx, PBL).

The MT-190W and MT-190P can also output pulses to a user's data acquisition system.

CONNECTION DETAIL:

The Magnetic Sensor must be connected to the Magnetic Trigger Amplifier Module. Refer to Figure 2 for connection detail. The connection details for the Amplifier Module are shown below Figure 2.

WHITE to +

BLACK to
Shield Shield

Figure 2 Magnetic Sensor to Amplifier Connection Detail

When using the MT-190W with any

Monarch instrument, refer to the instrument instruction manual for sensor connection detail.

When using the MT-190P with any Monarch instrument, plug the 1/8 [3.5 mm] phone plug into the input jack on the respective instrument.

OPERATION:

Magnetic sensors convert motion of a ferrous target into an AC voltage output proportional to speed. The Amplifier Module amplifies the signal and converts it to square wave pulses. The target must not be smaller than the magnetic poll piece (0.106 inches, 2.692 mm) or larger than the diameter of the sensor (0.625 inches, 15.875 mm). Gear teeth are preferred, but bolt heads, slots or keys also work.

