




Large Format Printer

# iPF815

## User's Guide

Basic Printing Workflow	1	1
Working With Various Print Jobs	18	2
Enhanced Printing Options	45	3
Windows Software	201	4
Mac OS X Software	424	5
Print Jobs	562	6
Handling Paper	616	7
Adjustments for Better Print Quality	667	8
Printer Parts	684	9
Network Setting	770	10
Maintenance	802	11
Troubleshooting	849	12
Error Message	890	13
Appendix	920	14

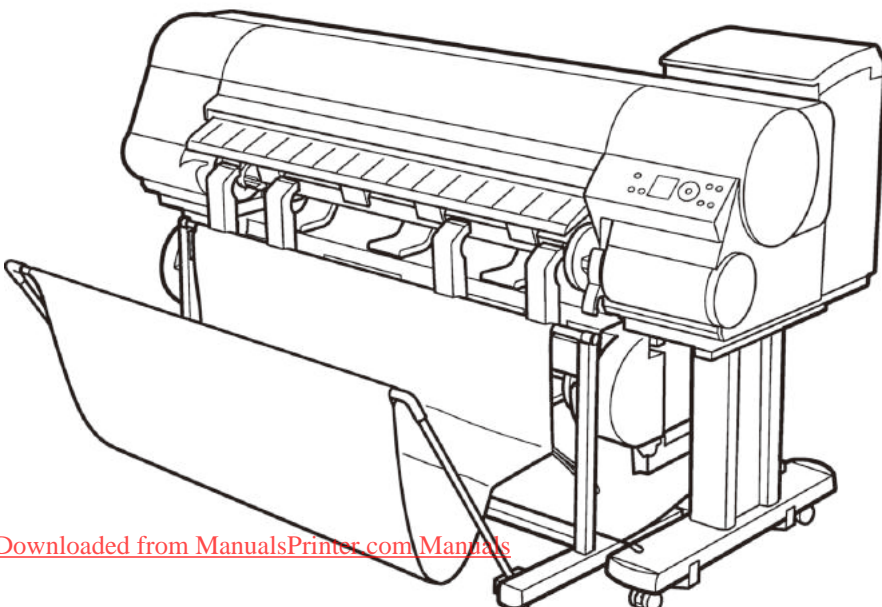

imagePROGRAF

ver1.00 2010-09-10

ENG

## Note

In order to be printed easily, this PDF-format manual is converted from the HTML-format instruction manual included on the "User Manuals CD-ROM" supplied with the printer. Thus, there are descriptions that are applied only in HTML format, and functions (video display function, etc.) that cannot be used. We appreciate your understanding.

# Contents

## Basic Printing Workflow 1

<b>Printing procedure</b>	<b>2</b>
Printing Options Using Rolls and Sheets .....	2
Loading and Printing on Rolls .....	3
Loading and Printing on Sheets .....	8
Printing in Windows .....	10
Printing from Mac OS X .....	11
<b>Canceling print jobs</b>	<b>13</b>
Canceling Print Jobs from the Control Panel .....	13
Canceling Print Jobs from Windows .....	14
Canceling Print Jobs from Mac OS X .....	15

## Working With Various Print Jobs 18

<b>Printing CAD Drawings</b>	<b>19</b>
Printing CAD Drawings .....	19
Printing Line Drawings and Text .....	19
Printing Line Drawings and Text (Windows) .....	20
Printing Line Drawings and Text (Mac OS X) .....	22
Specifying Colors and Printing CAD Drawings .....	26
Specifying Colors and Printing CAD Drawings (Windows) .....	27
HP-GL/2 Printing .....	28
<b>Printing Photos and Images</b>	<b>30</b>
Printing Photos and Images .....	30
Printing Photos and Images (Windows) .....	31
Printing Photos and Images (Mac OS X) .....	33
<b>Printing Office Documents</b>	<b>38</b>
Printing Office Documents .....	38
Printing Office Documents (Windows) .....	39
Printing Office Documents (Mac OS X) .....	40

## Enhanced Printing Options 45

<b>Adjusting Images</b>	<b>46</b>
Adjusting the Color in the Printer Driver .....	46
Fine-Tuning Colors of Photos and Images (Windows) .....	48
Fine-Tuning Colors of Photos and Images (Mac OS X) .....	52
Giving Priority to Particular Graphic Elements and Colors for Printing .....	55
Choosing the Document Type and Printing Conditions (Windows) .....	58
Choosing the Document Type and Printing Conditions (Mac OS X) .....	61
<b>Choosing Paper for Printing</b>	<b>64</b>
Choosing a Paper for Printing .....	64
Specifying Paper in the Printer Driver .....	64
<b>Printing enlargements or reductions</b>	<b>65</b>
Resizing Originals to Match the Paper Size .....	65

Resizing Originals to Match the Paper Size (Windows)	65
Resizing Originals to Match the Paper Size (Mac OS X)	67
Resizing Originals to Fit the Roll Width	71
Resizing Originals to Fit the Roll Width (Windows)	71
Resizing Originals to Fit the Roll Width (Mac OS X)	74
Resizing Originals by Entering a Scaling Value	77
Resizing Originals by Entering a Scaling Value (Windows)	78
Resizing Originals by Entering a Scaling Value (Mac OS X)	80

## Printing at full size 85

Printing on Oversized Paper	85
Printing at Full Size (Windows)	86
Printing at Full Size (Mac OS X)	87
Borderless Printing at Actual Size	91
Borderless Printing at Actual Size (Windows)	92
Borderless Printing at Actual Size (Mac OS X)	95

## Borderless Printing 100

Borderless Printing on Paper of Equivalent Size	100
Borderless Printing by Resizing Originals to Match the Paper Size (Windows)	101
Borderless Printing by Resizing Originals to Match the Paper Size (Mac OS X)	103
Borderless Printing by Resizing Originals to Fit the Roll Width	107
Borderless Printing by Resizing Originals to Fit the Roll Width (Windows)	108
Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS X)	110

## Printing banners or at other non-standard sizes 115

Printing Vertical or Horizontal Banners (Large-Format Printing)	115
Printing Vertical or Horizontal Banners (Large-Format Printing; Windows)	116
Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS X)	120
Printing on Non-Standard Paper Sizes	124
Printing on Non-Standard Paper Sizes (Windows)	124
Printing on Non-Standard Paper Sizes (Mac OS X)	129

## Tiling and multiple pages per sheet 133

Printing Multiple Originals Next to Each Other	133
Printing Multiple Originals Next to Each Other (Windows)	134
Printing Multiple Originals Next to Each Other (Mac OS X)	136
Printing Multiple Pages Continuously	138
Printing Multiple Pages Continuously (Windows)	139
Printing Multiple Pages Continuously (Mac OS X)	141
Printing Multiple Pages Per Sheet	143
Printing Multiple Pages Per Sheet (Windows)	143
Printing Multiple Pages Per Sheet (Mac OS X)	146
Printing Posters in Sections	150
Printing Large Posters (Windows)	151

## Centering originals 154

Printing Originals Centered on Rolls	154
Printing Originals Centered on Rolls (Windows)	154
Printing Originals Centered on Rolls (Mac OS X)	156
Printing Originals Centered on Sheets	160
Printing Originals Centered on Sheets (Windows)	160
Printing Originals Centered on Sheets (Mac OS X)	163

## Conserving roll paper 167

Conserving Roll Paper by Rotating Originals 90 Degrees	167
--	-----



Conserving Roll Paper by Rotating Originals 90 Degrees (Windows) .....	167
Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS X) .....	169
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins .....	173
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows) .....	173
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS X) .....	176

## Using PosterArtist to Compose Originals 181

Using PosterArtist to Compose Originals .....	181
---	-----

## Checking Images Before Printing 184

Checking the Layout in a Preview Before Printing .....	184
--	-----

## Other useful settings 186

Printing With Watermarks .....	186
Printing with Watermarks— COPY, FILE COPY, and so on (Windows) .....	187
Making the Original Orientation Match the Paper Orientation .....	190
Making the Original Orientation Match the Paper Orientation (Windows) .....	190
Making the Original Orientation Match the Paper Orientation (Mac OS X) .....	192
Using Favorites .....	196
Cutting Roll Paper After Printing .....	196
Cutting Roll Paper After Printing (Windows) .....	196
Cutting Roll Paper After Printing (Mac OS X) .....	198

# Windows Software 201

## Printer Driver 202

Printer Driver Settings .....	202
Specifying Paper in the Printer Driver .....	204
Confirming Print Settings .....	206
Checking the Layout in a Preview Before Printing .....	207
Using Favorites .....	209
Accessing the Printer Driver Dialog Box from Applications .....	211
Accessing the Printer Driver Dialog Box from the Operating System Menu .....	213
Main Sheet .....	215
Paper Information on Printer Dialog Box .....	219
Paper Detailed Settings Dialog Box .....	219
View Settings Dialog Box for the Printing Application .....	221
Color Adjustment Sheet: Color .....	221
Object Adjustment dialog box: Color .....	223
Matching Sheet .....	224
Color Adjustment Sheet: Monochrome .....	226
Object Adjustment dialog box: Monochrome .....	227
Page Setup Sheet .....	228
Output Method dialog box .....	231
Paper Size Options Dialog Box .....	232
Layout Sheet .....	233
Page Options Dialog Box .....	235
Special Settings Dialog Box .....	236
Favorites Sheet .....	237
Utility Sheet .....	239
Support Sheet .....	240
Settings Summaries Dialog Box .....	241
Device Settings Sheet .....	242

## Preview 243

The Features of Preview .....	243
-------------------------------	-----

Operating Environment .....	243
Starting Preview .....	243
Preview Main Window .....	245
Dialog Area .....	248
Enlarge/Reduce the screen display .....	249
Moving a Page .....	249
Using the ruler .....	250
Priority setting for rotating 90 degrees .....	250
Printing with Selecting the Layout .....	252
Print on the Center .....	254
Not Print Spaces at the Top/Bottom .....	255

## Free Layout 256

The Features of Free Layout .....	256
Operating Environment .....	257
Starting Free Layout .....	257
Free Layout Main Window .....	259
Detailed Settings .....	261
Preferences Dialog Box .....	262
Page Options Dialog Box .....	263
Zoom Dialog Box .....	264
Format Dialog Box .....	265
Laying out a Multiple-File Document on One Page .....	267
Laying out a Document Created with Multiple Application Programs on One Page .....	270
Selecting an Object .....	273
Changing the Object Size .....	274
Moving an Object .....	274
Rotating an Object .....	275
Laying out Objects Automatically .....	276
Aligning Objects .....	276
Changing the Object Overlapping Order .....	278
Pasting a Copied or Cut Object .....	280
Folded Duplex Window .....	281
Finished Size Settings Dialog Box .....	282
Binding Settings Dialog Box .....	283
Prints using Folded Duplex .....	284

## Color imageRUNNER Enlargement Copy 286

The Features of Color imageRUNNER Enlargement Copy .....	286
Operating Environment .....	286
Starting Color imageRUNNER Enlargement Copy .....	286
Color imageRUNNER Enlargement Copy Dialog Box .....	288
Hot Folder .....	289
Creating a New Hot Folder .....	290
Specifying an Existing Shared Folder as a Hot Folder .....	294
Setting the Print Parameters .....	297
Printing Enlargements of Scanned Originals from a Color imageRUNNER .....	298

## Print Plug-In for Office 301

Print Plug-In for Office features .....	301
Operating Environment .....	302
Steps to install .....	302
Steps to uninstall .....	306
When Print Plug-In for Office is not displayed .....	306
To start from Microsoft Word .....	311
Print Matching Roll Width (Word) .....	314

Borderless Printing (Word) .....	316
Multi-Page Printing (Word) .....	319
Register the settings(Word) .....	322
Print Using Registered Settings (Word) .....	323
Portrait Orientation / Landscape Orientation (Word) .....	325
To start from Microsoft PowerPoint .....	327
Print Matching Roll Width (PowerPoint) .....	329
Borderless Printing (PowerPoint) .....	332
Multi-Page Printing (PowerPoint) .....	334
Register the settings(PowerPoint) .....	337
Print Using Registered Settings (PowerPoint) .....	338
Portrait Orientation / Landscape Orientation (PowerPoint) .....	340
To start from Microsoft Excel .....	343
Print Entire Sheet (Excel) .....	345
Print Selected Area (Excel) .....	348
Configuring Binding (Excel) .....	351
Configuring Special Settings .....	352

## **HDI Driver** **354**

The Features of HDI Driver .....	354
Operating Environment .....	354
Installation Procedure .....	355
Installing with the Canon Installer .....	355
Installing with the Add-A-Plotter Wizard .....	362
Opening the Plotter Configuration Dialog Box .....	367
Opening from the AutoCAD File Menu .....	368
Opening from the Start Menu .....	369
Plotter Configuration Editor Dialog Box .....	371
Media Source and Media Size Settings .....	372
Graphics Settings .....	373
Opening the Custom Properties Dialog Box .....	376
Custom Properties dialog box .....	378
Paper Detailed Settings .....	380
Output Method Dialog Box .....	382
Color Compatibility Dialog Box .....	382
Printing .....	383

## **Status Monitor** **387**

The Features of imagePROGRAF Status Monitor .....	387
Job Management Using imagePROGRAF Status Monitor .....	388

## **Accounting** **390**

Accounting Manager .....	390
Launching the Accounting Manager .....	391
Accounting Manager Main Window .....	391
Accounting Manager Basic Procedures .....	394
Configuring Unit Costs in Accounting Manager .....	394
Setting the Unit Cost for Ink .....	395
Setting the Unit Cost for Paper .....	396
Setting the Unit Cost for Items Other Than Ink and Paper .....	397
Configuring Units and Display Settings in Accounting Manager .....	398
Automatically Acquiring Print Job Logs at Regular Intervals .....	399
Canceling Regular Print Job Log Acquisition .....	399
Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs .....	399
Exporting Print Job Data as a CSV File .....	400
Showing Job Properties .....	400

Showing, Saving and Loading Selected Unit Cost Data .....	401
Showing the Total Amount of Ink and Paper Consumed .....	401

## Digital Photo Front-Access 402

Digital Photo Front-Access .....	402
----------------------------------	-----

## Device Setup Utility 403

imagePROGRAF Device Setup Utility .....	403
Installing imagePROGRAF Device Setup Utility .....	403
Configuring the IP Address Using imagePROGRAF Device Setup Utility .....	404

## Media Configuration Tool 406

The Features of Media Configuration Tool .....	406
Operating Environment .....	406
Installation Procedures .....	407
Starting the Media Configuration Tool .....	409
Media Configuration Tool Main Window .....	410
Editing Media Type Information .....	411
Adding Media Types .....	412
Changing Media Names .....	414
Deleting Media Types You Have Added .....	416
Switching Media Types Display Show/Hide .....	418
Changing the Display Order of Media Types .....	419
Updating Media Types .....	421

## Mac OS X Software 424

### Printer Driver 425

Printer Driver Settings .....	425
Specifying Paper in the Printer Driver .....	427
Confirming Print Settings .....	429
Checking the Layout in a Preview Before Printing .....	431
Using Favorites .....	432
Accessing the Printer Driver Dialog Box from Applications .....	432
Main Pane .....	433
Paper Information on Printer Dialog Box .....	437
Paper Detailed Settings Dialog Box .....	438
View settings Dialog Box for the Printing Application .....	439
Matching pane .....	440
Color Settings Pane: Color .....	442
Object Adjustment dialog box: Color .....	443
Color Settings Pane: Monochrome .....	444
Object Adjustment dialog box: Monochrome .....	446
Page Setup Pane .....	447
Utility Pane .....	449
Additional Settings Pane .....	450
Support Pane .....	451

### Preview 452

The Features of Preview .....	452
Operating Environment .....	452
Starting Preview .....	453
Preview Main Window .....	454
Paper Settings Panel .....	457
Easy Settings .....	459
Advanced Settings .....	460

Output Settings Panel .....	462
Color Settings Panel .....	464
Color Adjustment .....	465
Matching .....	468
Driver Matching Mode .....	470
ICC Matching Mode .....	471
ColorSync .....	472
Preferences Dialog Box .....	472
Zoom Dialog Box .....	473
Go to Page Dialog Box .....	473
Print with No Borders .....	473
Print on the Center .....	474
Not Print Spaces at the Top/Bottom .....	475
Print Page Rotated 90 Degrees .....	476
Display with Fitting to the Width of the Paper .....	477
Display with All .....	478
Display with Actual Size .....	479
Moving a Page .....	479

## **Free Layout** **481**

The Features of Free Layout .....	481
Operating Environment .....	481
Starting Free Layout .....	482
Free Layout Main Window .....	483
Paper Settings Panel .....	486
Easy Settings .....	488
Advanced Settings .....	489
Color Settings Panel .....	491
Color Adjustment .....	492
Matching .....	495
Driver Matching Mode .....	497
ICC Matching Mode .....	498
ColorSync .....	499
Preferences Dialog Box .....	500
Page Setup Dialog Box .....	501
Zoom Dialog Box .....	502
Format Dialog Box .....	503
Laying out a Multiple-File Document on One Page .....	504
Laying out a Document Created with Multiple Application Programs on One Page .....	504
Selecting an Object .....	505
Changing the Object Size .....	505
Moving an Object .....	506
Rotating an Object .....	507
Laying out Objects Automatically .....	508
Aligning Objects .....	508
Changing the Object Overlapping Order .....	510
Pasting a Copied or Cut Object .....	512

## **Color imageRUNNER Enlargement Copy** **513**

The Features of Color imageRUNNER Enlargement Copy .....	513
Operating Environment .....	513
Starting Color imageRUNNER Enlargement Copy .....	514
Color imageRUNNER Enlargement Copy Dialog Box .....	515
Hot Folder .....	516
Creating a New Hot Folder .....	517
Editing a Hot Folder (Setting Print Conditions) .....	519

Deleting a Hot Folder .....	523
Setting the Print Parameters .....	523
Paper Settings Panel .....	524
Easy Settings .....	526
Advanced Settings .....	527
Output Settings Panel .....	529
Color Settings Panel .....	531
Driver Matching Mode .....	533
ICC Matching Mode .....	534
ColorSync .....	535
Printing Enlargements of Scanned Originals from a Color imageRUNNER .....	535

## **Printmonitor** **538**

imagePROGRAF Printmonitor .....	538
---------------------------------	-----

## **Media Configuration Tool** **539**

The Features of Media Configuration Tool .....	539
Operating Environment .....	539
Procedures for Installing .....	540
Procedures for Uninstalling .....	542
Starting the Media Configuration Tool .....	546
Media Configuration Tool main window .....	547
Editing Media Type Information .....	548
Adding Media Types .....	549
Changing Media Names .....	551
Deleting Media Types You Have Added .....	553
Switching Media Types Display Show/Hide .....	555
Changing the Display Order of Media Types .....	557
Updating Media Types .....	559

## **Print Jobs** **562**

### **Basic Print Job Operations** **563**

Saved Print Jobs .....	563
Saving Print Jobs .....	565
Managing Queued Jobs (Deleting or Preempting Other Jobs) .....	568
Printing Saved Jobs .....	572
Deleting Saved Jobs .....	577
Moving Saved Jobs .....	582

### **Advanced Print Job Operations** **589**

Saving Print Jobs Sent from Sources Other than the Printer Driver .....	589
Printing Without Saving Jobs in the Common Box .....	590
Setting Passwords for Personal Boxes .....	591
Naming Personal Boxes .....	596
Displaying a List of Saved Jobs .....	601
Printing a List of Saved Jobs .....	605
Displaying Details of Saved Jobs .....	605
Renaming Saved Jobs .....	609

## **Handling Paper** **616**

### **Paper** **617**

Types of Paper .....	617
Paper Sizes .....	620

<b>Handling rolls</b>	<b>623</b>
Attaching the Roll Holder to Rolls .....	623
Loading Rolls in the Printer .....	628
Selecting the Paper Source .....	631
Selecting the Paper Type (Roll) .....	632
Specifying the Paper Length (Roll) .....	633
Removing the Roll from the Printer .....	634
Removing the Roll Holder from Rolls .....	637
Feeding Roll Paper Manually .....	638
Keeping Track of the Amount of Roll Paper Left .....	639
Specifying the Ink Drying Time for Rolls .....	640
Specifying the Cutting Method for Rolls .....	642
Cutting the Leading Edge of Roll Paper Automatically .....	647
Reducing Dust from Cutting Rolls .....	648
Roll Holder Set .....	649

<b>Handling sheets</b>	<b>650</b>
Selecting the Paper Type (Sheet) .....	650
Loading Sheets in the Printer .....	651
Manually Loading Paper to the Position for Printing .....	654
Removing Sheets .....	656

<b>Output Stacker</b>	<b>658</b>
Stationary Output Stacker .....	658
Using the Stationary Output Stacker .....	659
Stowing the Stationary Output Stacker .....	661
Wheeled Output Stacker .....	663
Using the Wheeled Output Stacker .....	663

## **Adjustments for Better Print Quality** **667**

<b>Adjusting the Printhead</b>	<b>668</b>
Adjusting the Printhead .....	668
Automatic Straightening of Lines and Colors (Auto Head Adj.) .....	668
Manual Straightening of Lines and Colors (Manual Head Adj.) .....	670
Adjusting Line Misalignment (Head Inc. Adj.) .....	672
Troubleshooting Paper Abrasion and Blurry Images (Head Height) .....	675

<b>Adjusting the feed amount</b>	<b>676</b>
Adjusting the Feed Amount .....	676
Selecting a Feed Amount Adjustment Method (Feed Priority) .....	676
Auto Band Adjustment (Auto Band Adj.) .....	677
Manual Band Adjustment (Manual Band Adj.) .....	678
Banding Adjustment During Printing (Fine Band Adj.) .....	680
Adjusting Line Length (Adjust Length) .....	681
Adjusting the Vacuum Strength (VacuumStrngth) .....	683

## **Printer Parts** **684**

<b>Printer parts</b>	<b>685</b>
Front .....	685
Back .....	687
Top Cover (Inside) .....	688
Carriage .....	689

Ink Tank Cover (Inside) .....	690
<b>Control Panel</b> .....	<b>692</b>
Control Panel .....	692
Turning the Printer On and Off .....	694
Printer Modes .....	696
Switching Modes .....	702
Printer Menu Operations .....	704
Main Menu Operations .....	705
Menu Structure .....	709
Main Menu Settings .....	722
Main Menu Settings (During Printing) .....	734
Submenu Display .....	735
Status Print .....	736
Checking Instructions During Printer Operations .....	743
<b>Hard Disk</b> .....	<b>746</b>
Printer Hard Disk Operations .....	746
Checking the Free Hard Disk Space .....	747
Erasing Data on the Printer's Hard Disk .....	750
<b>Optional accessories</b> .....	<b>752</b>
Media Take-up Unit .....	752
Using the Media Take-up Unit .....	754
Removing Printed Documents from the Media Take-up Unit .....	761
<b>Printer Specifications</b> .....	<b>765</b>
Specifications .....	765
Print Area .....	768
<b>Network Setting</b> .....	<b>770</b>
<b>Network Setting</b> .....	<b>771</b>
Network Environment .....	771
Configuring the IP Address on the Printer .....	773
Configuring the IP Address Using the Printer Control Panel .....	774
Configuring the IP Address Using ARP and PING Commands .....	775
Using RemoteUI .....	776
Configuring the Printer's TCP/IP Network Settings .....	777
Specifying Printer-Related Information .....	778
Configuring the Communication Mode Manually .....	780
Email Notification When Printing is Finished or Errors Occur .....	781
Initializing the Network Settings .....	781
<b>Network Setting (Windows)</b> .....	<b>783</b>
Configuring the Printer Driver Destination .....	783
Configuring the Printer's NetWare Network Settings .....	784
Specifying the Printer's Frame Type .....	785
Specifying NetWare Print Services .....	787
Specifying NetWare Protocols .....	789
Configuring NetWare Network Settings .....	791
<b>Network Setting (Mac OS X)</b> .....	<b>793</b>
Configuring the Printer Driver Destination .....	793
Configuring the Printer's AppleTalk Network Settings .....	793
Configuring the Destination for AppleTalk Networks .....	794



Configuring the Destination for TCP/IP Network .....	797
Configuring the Destination for Bonjour Network .....	800

## **Maintenance** **802**

### **Ink Tanks** **803**

Ink Tanks .....	803
Replacing Ink Tanks .....	803
Checking Ink Tank Levels .....	815
When to Replace Ink Tanks .....	815

### **Printheads** **817**

Printhead .....	817
Checking for Nozzle Clogging .....	817
Cleaning the Printhead .....	819
Replacing the Printhead .....	820

### **Maintenance Cartridge** **827**

Maintenance Cartridge .....	827
Replacing the Maintenance Cartridge .....	827
Checking the Remaining Maintenance Cartridge Capacity .....	835
When to Replace the Maintenance Cartridge .....	835

### **Cleaning the Printer** **837**

Cleaning the Printer Exterior .....	837
Cleaning Inside the Top Cover .....	837

### **Other Maintenance** **841**

Preparing to Transfer the Printer .....	841
Updating the Firmware .....	847

## **Troubleshooting** **849**

### **Frequently Asked Questions** **850**

Frequently Asked Questions .....	850
----------------------------------	-----

### **Problems Regarding Paper** **852**

Clearing Jammed Roll Paper .....	852
Clearing a Jammed Sheet .....	856
Troubleshooting When Paper Jams are not Found .....	858
Roll paper cannot be inserted into the Paper Feed Slot .....	860
Cannot Load Sheets .....	861
Paper is not cut straight .....	861
Paper is not cut .....	861
The Media Take-up Unit Continues Rotating .....	861
The size of clear film cannot be detected .....	862

### **Printing does not start** **863**

The Data lamp on the Control Panel does not light up .....	863
The printer does not respond even if print jobs are sent .....	863
Ink Filling.. is displayed .....	863
The display screen indicates Agitating .....	864

### **The printer stops during a print job** **865**

An error message is shown on the Display Screen .....	865
---	-----

The printer ejects blank, unprinted paper .....	865
---	-----

## **Problems with the printing quality** 866

Printing is faint .....	866
Paper rubs against the printhead .....	867
The edges of the paper are dirty .....	868
The surface of the paper is dirty .....	868
The back side of the paper is dirty .....	869
Printed colors are inaccurate .....	869
Banding in different colors occurs .....	870
Colors in printed images are uneven .....	870
Image Edges are Blurred or White Banding Occurs .....	871
Setting the Blue Switch on the Platen .....	872
The contrast becomes uneven during printing .....	875
The length of printed images is inaccurate .....	875
Documents are printed crooked .....	875
Documents are printed in monochrome .....	875
Line thickness is not uniform .....	876
Lines are misaligned .....	876
Problems with the printing quality caused by the type of paper .....	877

## **Cannot print over a network** 878

Cannot connect the printer to the network .....	878
Cannot print over a TCP/IP network .....	878
Cannot print over a NetWare network .....	879
Cannot print over AppleTalk or Bonjour networks .....	879

## **Installation problems** 880

Removing Installed Printer Drivers .....	880
--	-----

## **HP-GL/2 problems** 882

Lines or images are missing in the HP-GL/2 data that was printed. ....	882
Lines Are Printed Too Thick or Thin During HP-GL/2 Printing .....	882
HP-GL/2 jobs are printed in monochrome (or color). ....	882
Printed Colors in Line Drawings are Inaccurate During HP-GL/2 Printing .....	882
HP-GL/2 jobs are printed 6 mm larger than specified .....	883
HP-GL/2 jobs are printed at maximum size, even if a standard size is specified .....	883
HP-GL/2 printing takes a long time. ....	883
The printer stops when printing a HP-GL/2 job (the carriage stops moving) .....	883

## **Other problems** 884

The printer does not go on .....	884
If the Printer Makes a Strange Sound .....	885
Messages advising to check the maintenance cartridge are not cleared .....	885
The printer consumes a lot of ink .....	886
Ink level detection .....	886

## **Error Message** 890

### **Error Messages** 891

### **Messages regarding paper** 893

PapR Type Mismatch .....	893
PapRTypeMismatch .....	893
The paper is too small. ....	894
RollWdthMismatch .....	894

Paper size not detected. ....	895
Insufficient paper for job ....	896
This paper cannot be used. ....	897
Roll printing is selected. ....	897
Roll printing is selected, but sheets are loaded. ....	897
The roll is empty. ....	897
Sheet removed. ....	899
Sheet printing is selected. ....	899
Regular printing is selected, but a roll is loaded. ....	899
Paper jam. ....	900
Paper loaded askew. ....	900
Paper cutting failed. ....	901
End of paper feed. ....	902
Rel lever is in wrong position. ....	902
Rewinding error. ....	902
Media take-up unit ready. ....	902
Turn on the media take-up unit. ....	903
Borderless printng not possible. ....	903

### **Messages regarding ink 904**

Ink insufficient. ....	904
No ink left. ....	904
Remaining level of the ink cannot be correctly detected. ....	904
Close Ink Tank Cover ....	905
Ink tank is empty. ....	905
Not much ink is left. ....	905
No ink tank loaded. ....	906
Wrong ink tank. ....	906

### **Messages regarding printing or adjustment 907**

Use another paper. ....	907
Cannot print as specified. ....	907
Borderless printng not possible. Paper stretched or shrank. ....	907
Before borderless printing, move the blue platen switch. ....	908
Blue platen switch is dirty. ....	908

### **Messages regarding printheads 909**

Cannot adjust printhead. ....	909
Cannot adjust band. ....	909
PHead needs cleaning. ....	910
Wrong printhead. ....	910
Problem with Printhead ....	910
Printhead error ....	910
No printhead ....	910
Execute printhead cleaning. ....	911

### **Messages regarding the maintenance cartridge 912**

Insert the maintenance cartridge. ....	912
Wrong maintenance cartridge. ....	912
Prepare for maint cart replacement. ....	912
No Maintenance Cartridge capacity. ....	912
Maintenance cartridge full. ....	912
Maintenance cartridge problem. ....	913

### **Messages regarding the hard disk 914**

Hard disk error. ....	914
-----------------------	-----

File read error. ....	914
The mail box is full. ....	914
Mail box full. Now printing without saving data. ....	914
Mail box nearly full. ....	915
Maximum jobs stored. ....	915
Too many jobs for mail box. ....	915

### Messages regarding HP-GL/2 916

This type of paper is not compatible with HP-GL/2. ....	916
GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904) ....	916
GL2: W0502 The parameter is out of range. ....	916
GL2: W0504 This command is not supported. ....	916

### Other Messages 917

GARO Wxxxx (x represents a number) ....	917
ERROR Exxx-xxxx (x represents a letter or number) ....	917
Hardware error. xxxxxxxx-xxxx (x represents a letter or number) ....	917
Top cover is open. ....	918
Prepare for parts replacement. ....	918
Parts replacement time has passed. ....	918
Unknown file. ....	918
Multi-sensor error ....	919

## Appendix 920

### How to use this manual 921


About This User Manual ....	921
Searching Topics ....	922
HTML Version of the Manual for Printing ....	924

### Disposal of the product 931

WEEE Directive ....	932
---------------------	-----

## Basic Printing Workflow

Printing procedure	2
Canceling print jobs	13

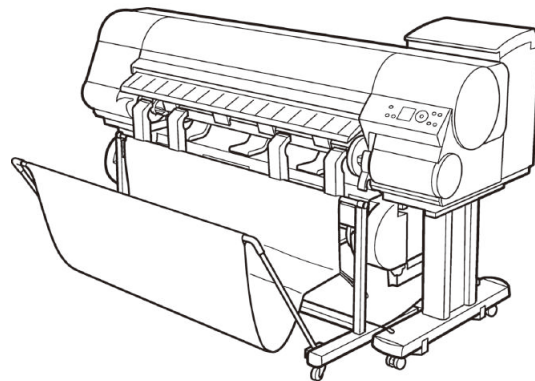

## Printing procedure

Printing Options Using Rolls and Sheets .....	2
Loading and Printing on Rolls .....	3
Loading and Printing on Sheets .....	8
Printing in Windows .....	10
Printing from Mac OS X .....	11

## Printing Options Using Rolls and Sheets

The printer supports both rolls and sheets.

This section introduces the main features of each, as well as the main printing methods available. Select rolls or sheets to suit your particular printing application.



### Note

- For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617
- A variety of other ways to print are available besides those introduced here. Choose the printing method that suits your particular printing application, referring to "Working with Various Print Jobs" and "Enhanced Printing Options" from the table of contents.

## Roll printing

Media in spooled rolls is generally called Roll Media. Rolls are loaded on the Roll Holder, which are in turn loaded in the printer.

Rolls can be used to print large photos or create posters or banners that cannot be printed on regular sheets.

- Large-format printing  
Easily print vertical or horizontal banners from familiar applications such as Microsoft Office applications. (See "Printing Vertical or Horizontal Banners (Large-Format Printing).") →P.115
- Borderless printing  
Print without a margin (border) around posters or photos. (See "Borderless Printing on Paper of Equivalent Size.") →P.100  
(See "Borderless Printing by Resizing Originals to Fit the Roll Width.") →P.107  
(See "Borderless Printing at Actual Size.") →P.91
- Banner printing  
You can print multiple pages as a single continuous image, without margins between pages. (See "Printing Multiple Pages Continuously.") →P.138
- 90-degree rotation before printing  
Originals in portrait orientation are rotated 90 degrees when possible to use paper more efficiently. (See "Conserving Roll Paper by Rotating Originals 90 Degrees.") →P.167
- Enlarged/reduced printing  
You can freely adjust the size of originals by enlarging or reducing originals before printing. (See "Resizing Originals to Match the Paper Size.") →P.65  
(See "Resizing Originals to Fit the Roll Width.") →P.71  
(See "Resizing Originals by Entering a Scaling Value.") →P.77
- Free Layout function  
Print multiple documents from multiple applications (such as word-processing programs, spreadsheet programs, and so on) next to each other. (See "Printing Multiple Originals Next to Each Other.") →P.133

## Sheet printing

Sheets refer to individual sheets of paper.

Insert the sheet between the Platen and the Paper Retainer.

- Enlarged/reduced printing  
You can freely adjust the size of originals by enlarging or reducing originals before printing.  
(See "Resizing Originals to Match the Paper Size.") →P.65  
(See "Resizing Originals by Entering a Scaling Value.") →P.77
- Free Layout function  
Print multiple documents from multiple applications (such as word-processing programs, spreadsheet programs, and so on) next to each other.  
(See "Printing Multiple Originals Next to Each Other.") →P.133

## Loading and Printing on Rolls

These are the basic steps for loading and printing on rolls.

Follow these steps to switch to a new roll or a roll of a different type or width before printing.



### Note

- The procedure varies depending on the **ManageRemainRoll** setting in the printer menu and whether or not a barcode has been printed on the loaded roll. (See "Keeping Track of the Amount of Roll Paper Left.") →P.639
  - Steps 6 and 7 are unnecessary if **ManageRemainRoll** is **On** and a barcode has been printed on the roll.
  - Step 7 is unnecessary if **ManageRemainRoll** is **Off**.
- When **Width Detection** in the printer menu is **Off**, after you have selected the type of paper in step 6, you will need to enter the roll width. (See "Main Menu Settings.") →P.722
- For details on supported sizes and types of rolls, see **Paper Sizes** or the Paper Reference Guide. (See "Paper Sizes.") →P.620 (See "Types of Paper.") →P.617
- If you are not using the optional Media Take-up Unit when printing long documents such as banners, spread a clean cloth or paper on the floor. Use the Stationary Output Stacker to prevent long printed documents from being soiled by the floor after they are printed. (See "Using the Stationary Output Stacker.") →P.659
- If you prefer to wait for the ink to dry after printing and simply eject the document, you can deactivate automatic cutting and cut the paper manually. (See "Specifying the Cutting Method for Rolls.") →P.642

1. Turn the printer on. (See "Turning the Printer On and Off.") →P.694




2. Select a roll as the paper source. (See "Selecting the Paper Source.") →P.631




3. Remove any loaded paper that will not be used.

- Rolls (See "Removing the Roll from the Printer.") →P.634

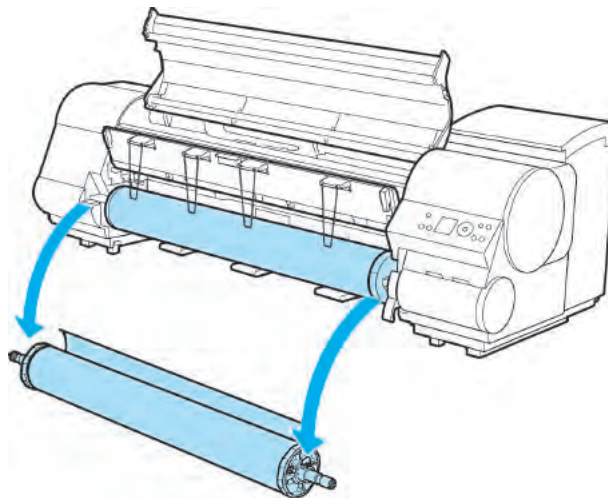


- Sheets (See "Removing Sheets.") →P.656

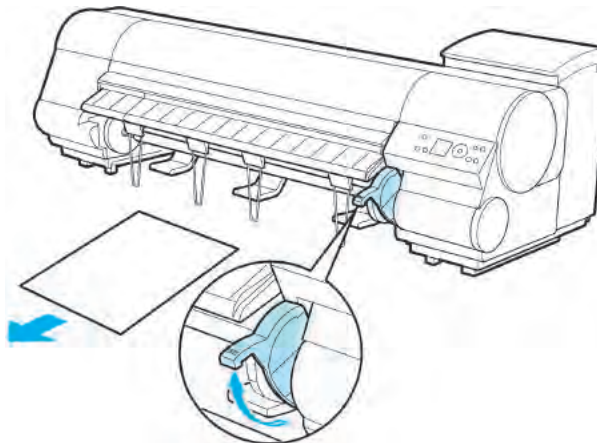




4. Load the roll on the Roll Holder. (See "Attaching the Roll Holder to Rolls.") →P.623

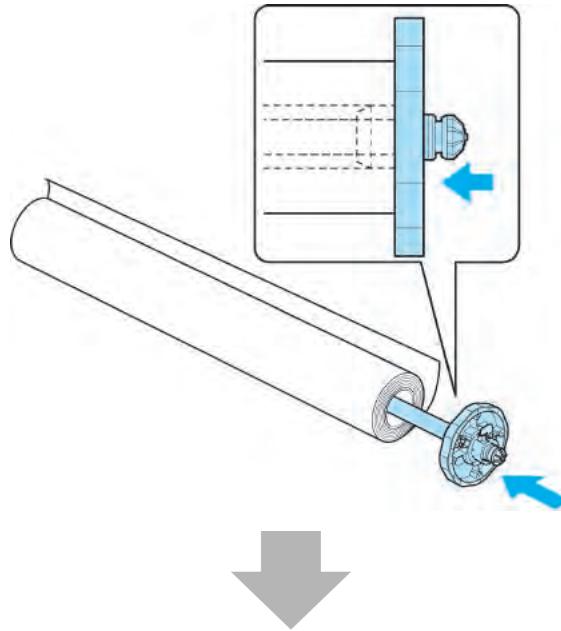

5. Load the roll in the printer. (See "Loading Rolls in the Printer.") →P.628

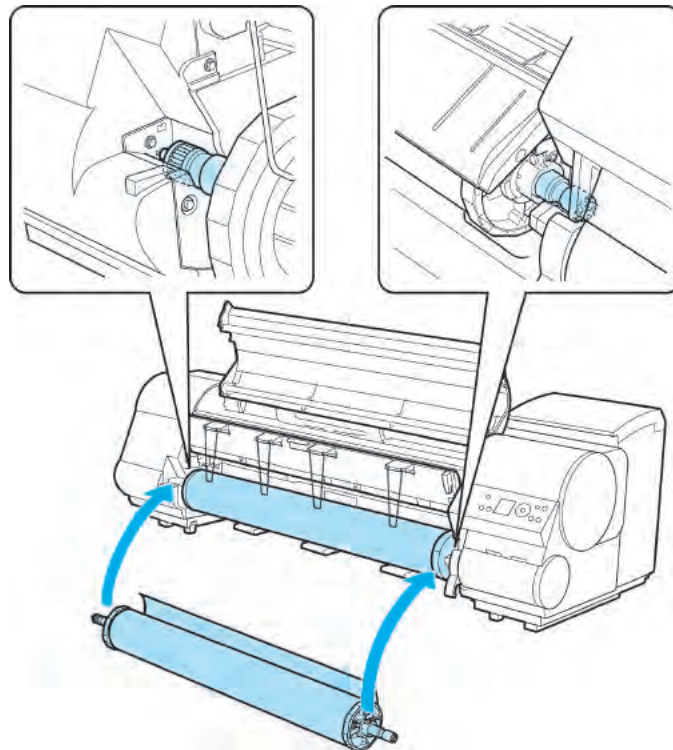

**Note**

- Before borderless printing, make sure the blue Switch on the platen is set toward the ● side. (See "Setting the Blue Switch on the Platen.") →P.872



**6.** Select the type of paper. (See "Selecting the Paper Type (Roll).") →P.632




**7.** Specify the paper length. (See "Specifying the Paper Length (Roll).") →P.633




**8.** Complete settings in the printer driver for the type of paper and other details.

- Specifying Paper in the Printer Driver (Windows) →P.204
- Specifying Paper in the Printer Driver (Mac OS X) →P.427

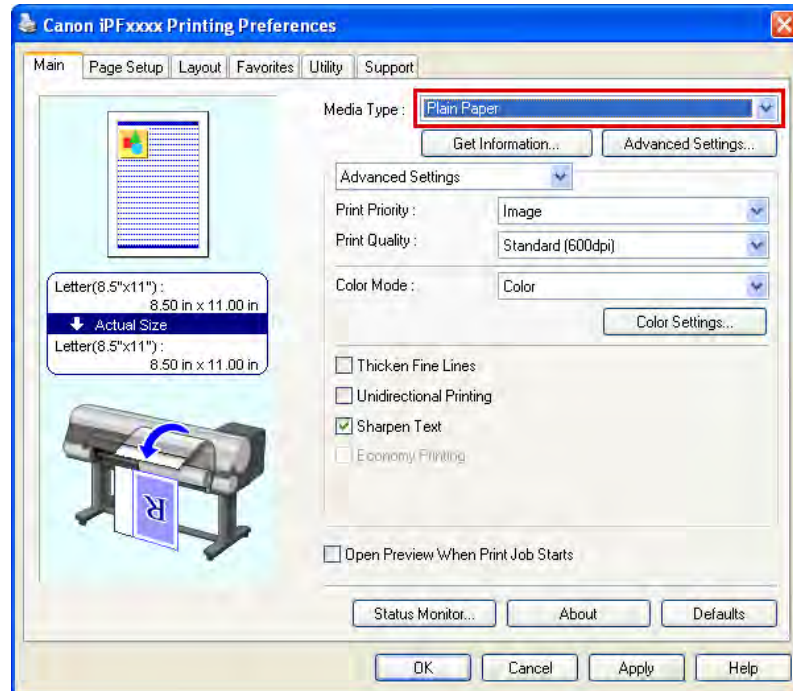

### Important

- Confirm the type of paper loaded in the printer and specify the same type in the printer driver. If the type of paper does not match, an error message is displayed and the printing quality may be affected, or printing may not be possible.
- The paper is too small. →P.894
- Paper Type Mismatch →P.893

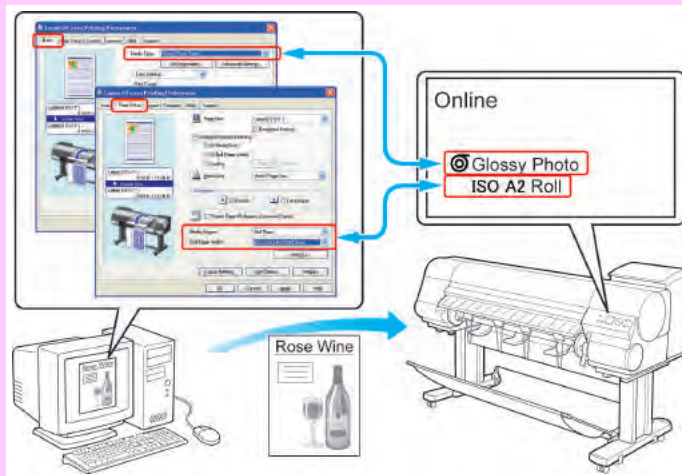

## 9. Send the print job.

- Printing in Windows →P.10
- Printing from Mac OS X →P.11



Start printing.

## Loading and Printing on Sheets

These are the basic steps for loading sheets and then printing.  
Follow the steps below to load and print on sheets.




### Note

- For details on supported types and sizes of paper, see **Paper Sizes** or the Paper Reference Guide. (See "Paper Sizes.") →P.620 (See "Types of Paper.") →P.617

1. Turn the printer on. (See "Turning the Printer On and Off.") →P.694




2. Remove any loaded paper that will not be used. (See "Removing Sheets.") →P.656

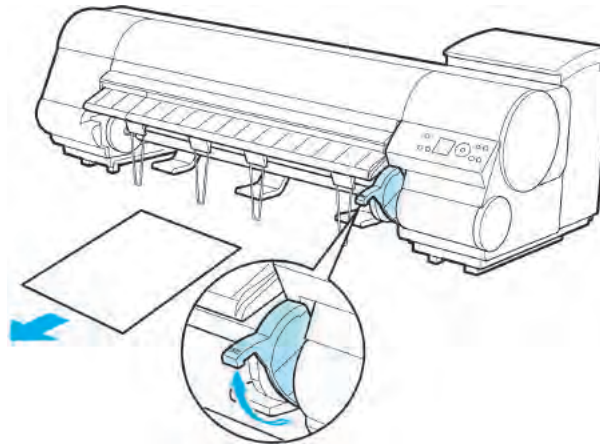

3. Complete settings in the printer driver for the type of paper and other details.
  - Specifying Paper in the Printer Driver (Windows) →P.204

- Specifying Paper in the Printer Driver (Mac OS X) →P.427

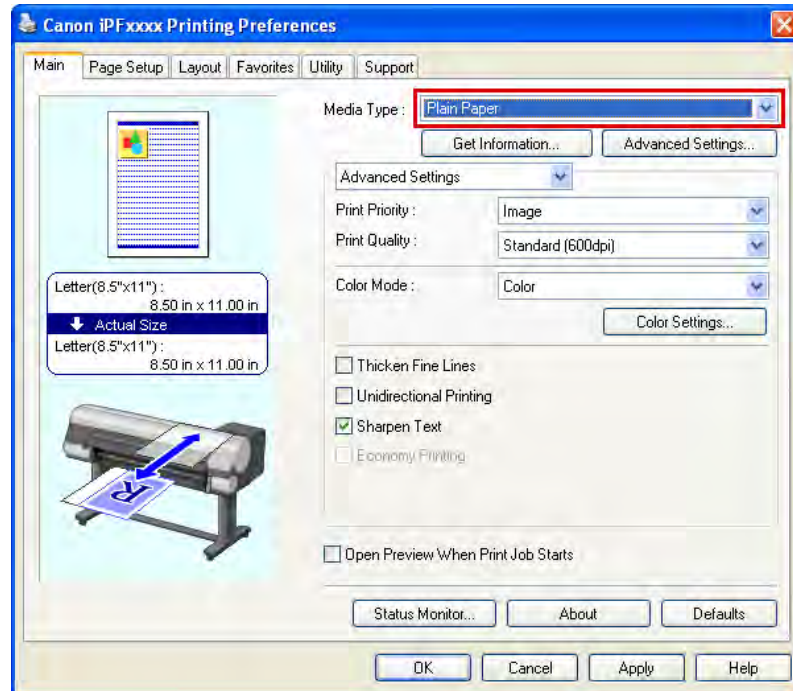

#### 4. Send the print job.


- Printing in Windows →P.10
- Printing from Mac OS X →P.11

#### 5. Load the sheet. (See "Loading Sheets in the Printer.") →P.651



##### Note

- If you will load a sheet before sending a print job, after you load the sheet, the printer automatically shows a menu for selection of the type of paper on the control panel Display Screen. Select the type of paper at this point.  
(See "Selecting the Paper Type (Sheet).") →P.650
- If you select a type of paper for which Media Width Detection is deactivated ( **Off** is selected), you must advance the paper manually to the position for printing. (See "Manually Loading Paper to the Position for Printing.") →P.654

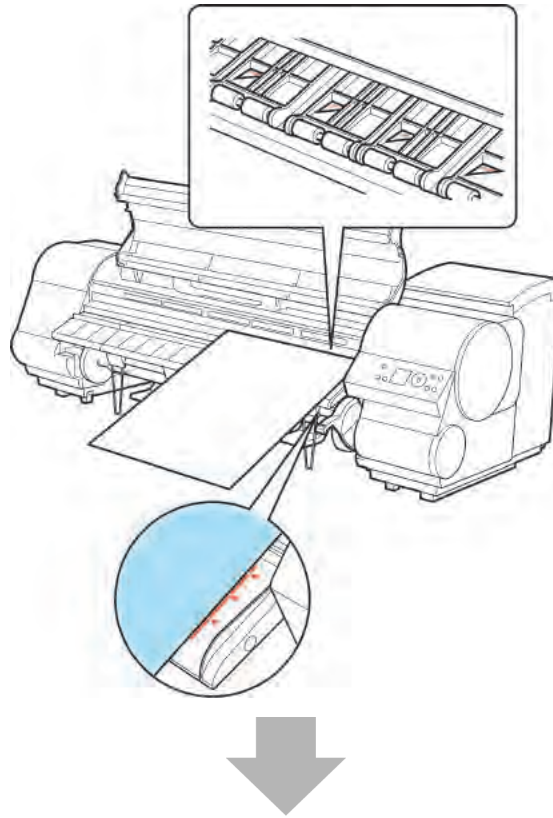

Start printing.

## Printing in Windows

Print from the application menu.



### Important

- We recommend exiting unnecessary applications before printing. Running several applications while printing may interrupt the transfer of print data and affect printing quality.


1. In the source application, select **Print** from the **File** menu to display the dialog box for printing conditions.



- After confirming that the printer is selected in the dialog box, click **Print** or **OK** to start printing.

**Note**

- The appearance of the dialog box varies depending on the software application. In most cases, the dialog box includes basic printing options and enables you to choose the printer, specify the range of pages, number of copies, and so on.  
Example: Print dialog box displayed by the application

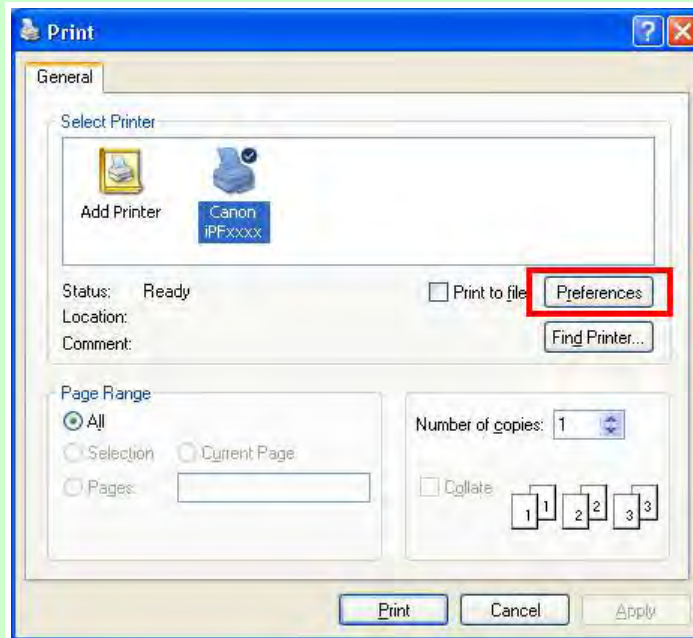

- If another printer is selected, select the printer you want to use under **Select Printer** or in the dialog box displayed after clicking **Printer**.

Settings for many printing methods (including enlarged or reduced printing, borderless printing, and so on) are displayed in the printer driver dialog box. There are two ways to access the printer driver dialog box, as follows.

- From the application  
(See "Accessing the Printer Driver Dialog Box from Applications (Windows).") →P.211
- From the operating system menu  
(See "Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows).") →P.213

## Printing from Mac OS X

Print from the application menu after registering the printer.

**Important**

- We recommend exiting unnecessary applications before printing. Running several applications while printing may interrupt the transfer of print data and affect printing quality.

## Registering the printer

Before printing, you must register the printer in **imagePROGRAF PrinterSetup.app**.

For instructions on registering the printer, see "Configuring the Printer Driver Destination ." →P.793



**Important**

- During this setup process, the printer will not be listed among available printers if it is off or disconnected.

## Printing from the application software


1. In the application software, select **Print** from the **File** menu to display the dialog box for printing conditions.



**Note**


- This dialog box includes basic printing options and enables you to choose the printer, specify the range of pages, number of copies, and so on.

2. Select the printer in the **Printer** list.

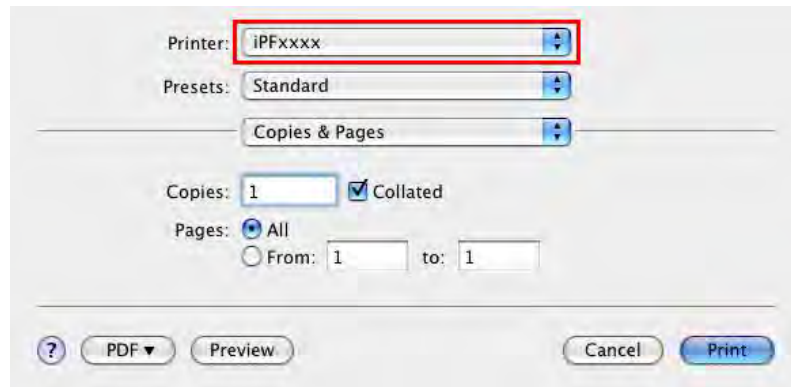

3. Click **Print** to start printing.

As shown in the following illustration, you can switch to other panes in this dialog box to complete settings for various methods of printing, including enlarged and reduced printing, borderless printing, and so on.

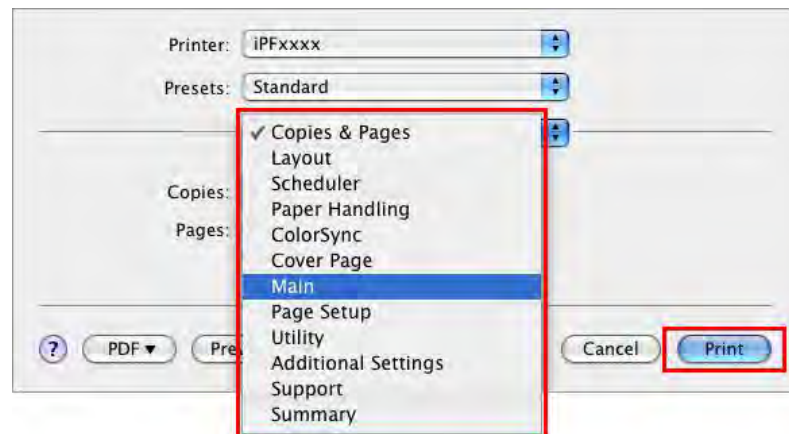



## Canceling print jobs

Canceling Print Jobs from the Control Panel .....	13
Canceling Print Jobs from Windows .....	14
Canceling Print Jobs from Mac OS X .....	15

### Canceling Print Jobs from the Control Panel


Hold down the **Stop** button for a second or more to cancel print jobs or ink drying in progress when the printer is online, offline, or in Menu mode.



Printer operation varies depending on the status when you hold down the **Stop** button for a second or more during printing.


- If you press the **Stop** button before printing starts

Holding down the **Stop** button for a second or more before printing cancels the print job and brings the printer online. When the roll is selected as the paper source, the printer goes online, and when sheet is selected, the printer goes offline.

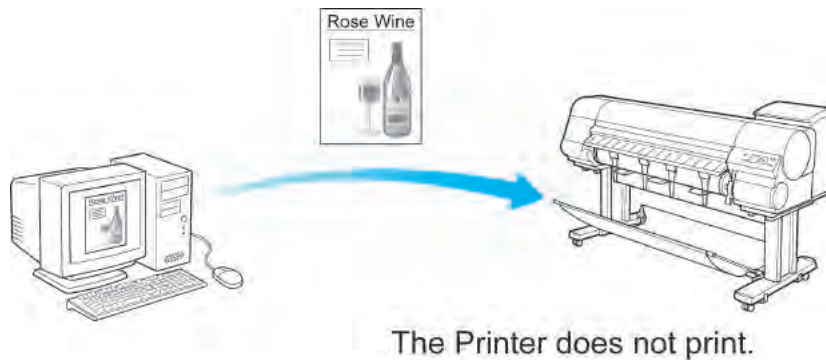


• If you press the **Stop** button during printing

Holding down the **Stop** button for a second or more during printing stops printing immediately.

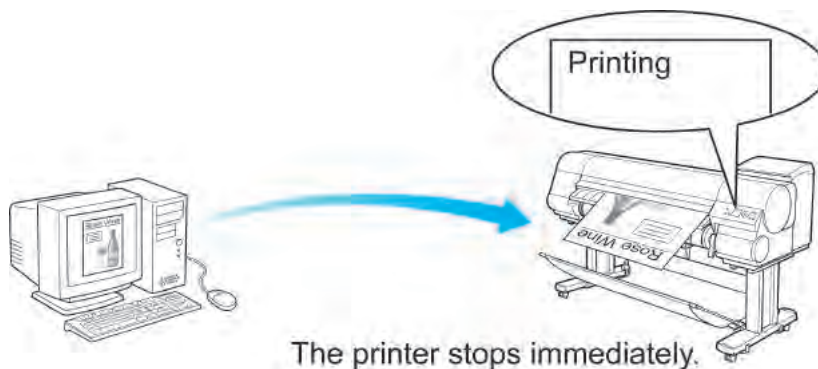

• If you press the **Stop** button when printing is paused

Holding down the **Stop** button for a second or more when printing is paused cancels the print job.

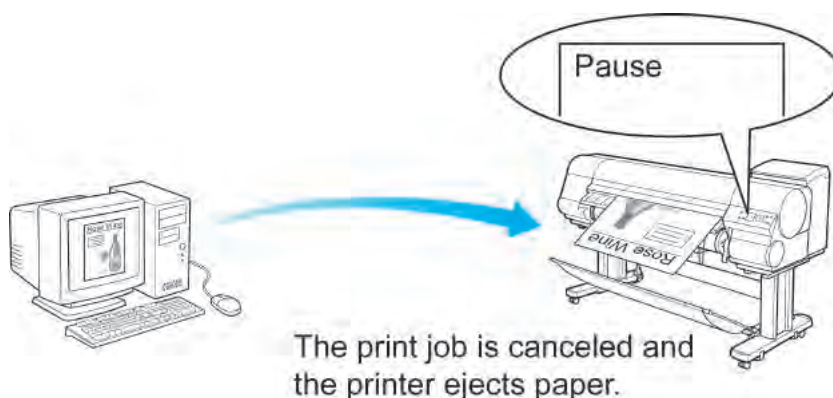

## Canceling Print Jobs from Windows

In the printer window, you can cancel jobs that are being sent to the printer.

Using imagePROGRAF Status Monitor, you can cancel print jobs that have already been received by the printer or that are currently being printed.


1. Click the printer icon in the taskbar to display the printer window.




**Note**

- You can also display this window by double-clicking the printer icon in the **Printers and Faxes** (or **Printers**) folder, accessible through the Windows **start** menu.

2. Right-click the job to cancel and select **Cancel**.

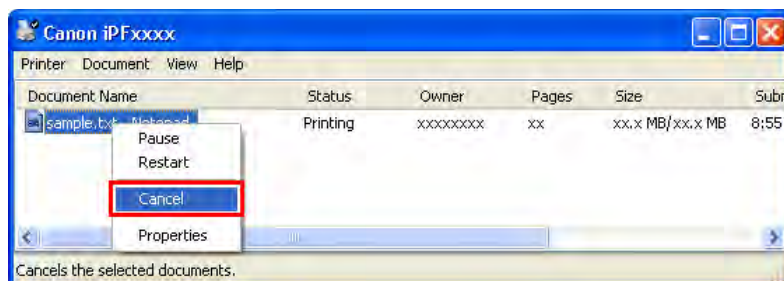

3. If the job to cancel is not shown in the printer window (that is, if the print data has already been received by the printer), double-click the taskbar icon to display imagePROGRAF Status Monitor.
4. On the **Printer Status** sheet, click **Cancel Job**.

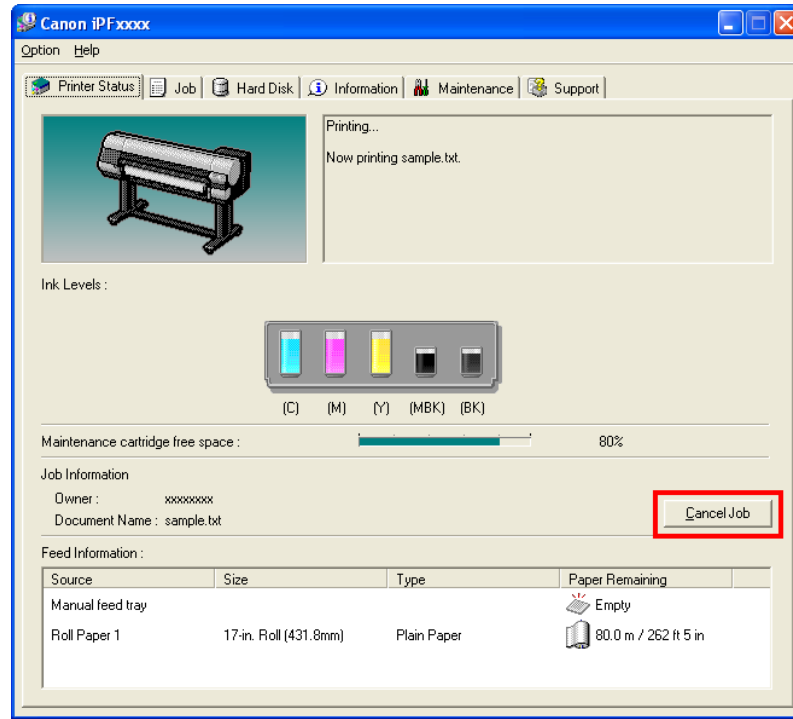**Note**

- The screen may differ slightly depending on the model you are using.

## Canceling Print Jobs from Mac OS X


In the printer window, you can cancel jobs that are being sent to the printer. Otherwise, you can cancel jobs from imagePROGRAF Printmonitor if they have been received by the printer or are currently being printed.

**Note**


- Print jobs are shown in the printer window while they are being sent from the computer. After transmission, jobs are not displayed even during printing.
- Print jobs are displayed in the imagePROGRAF Printmonitor window from the moment the printer starts receiving the print data until the moment printing is finished. They are not displayed before print data is sent to the printer, even if the computer has started preparing the print data.

1. Click the printer icon in the **Dock** to display the printer window.


2. Click **Pause Printer** to stop printing.

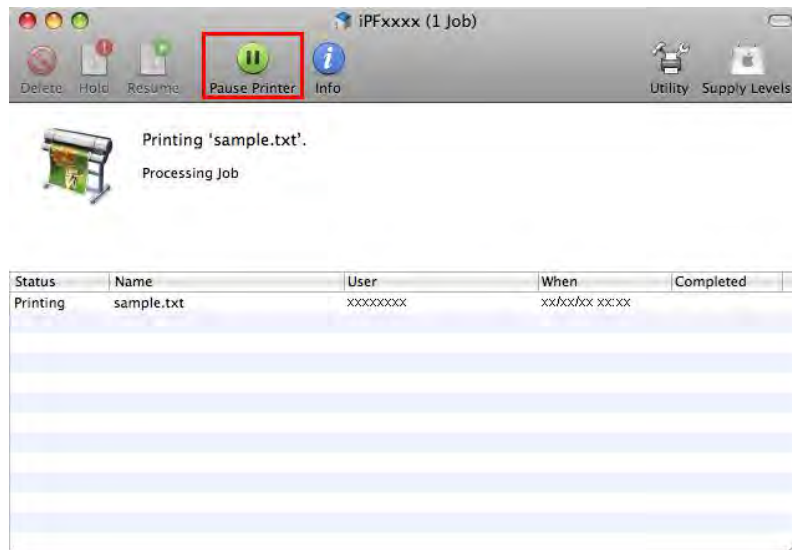


3. If there are no jobs in the printer window that can be canceled, (that is, if the print data has already been sent to the printer), click **Utility** to display imagePROGRAF Printmonitor.

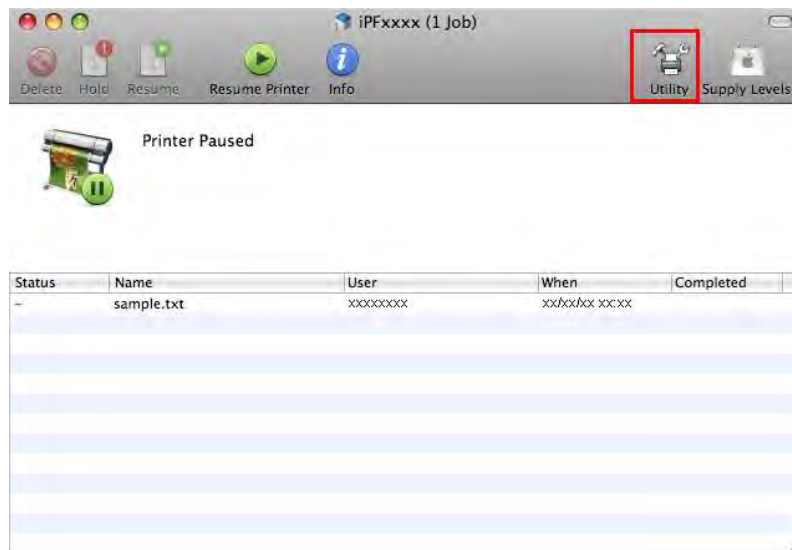

1

4. Select the print job to cancel and click  to delete the print job.

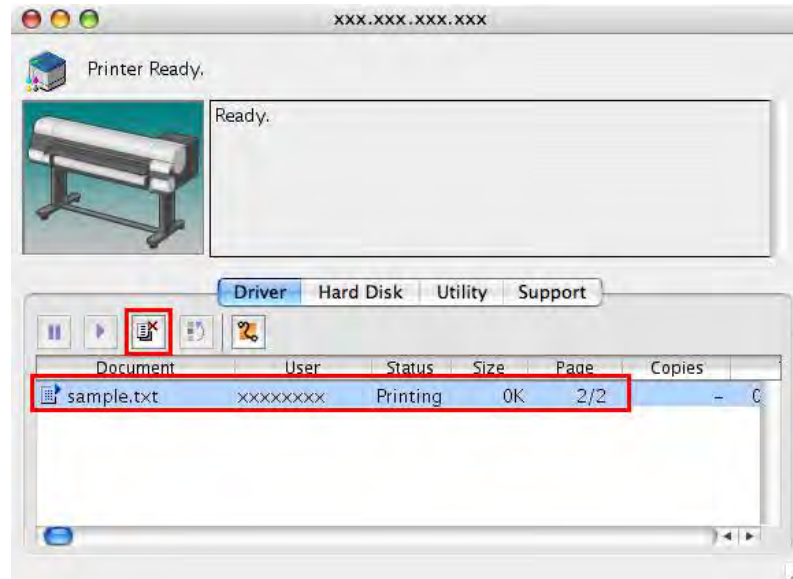

**Note**

- The screen may differ slightly depending on the model you are using.

The job sent to the printer is canceled.

5. Exit imagePROGRAF Printmonitor. In the printer window, click **Start Jobs**.




**Important**

- Always follow these steps if you cancel print jobs from imagePROGRAF Printmonitor. If you do not restart job processing, the next job cannot be printed.

## Working With Various Print Jobs

Printing CAD Drawings	19
Printing Photos and Images	30
Printing Office Documents	38

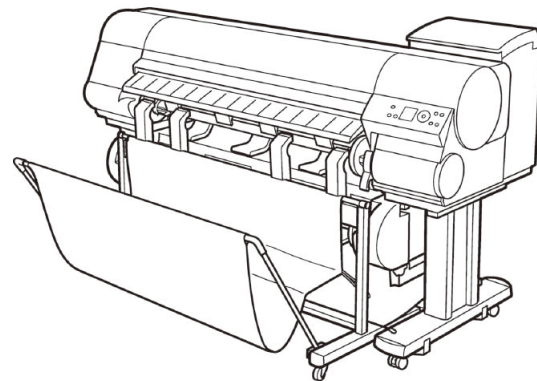

## Printing CAD Drawings

Printing CAD Drawings .....	19
Printing Line Drawings and Text .....	19
Printing Line Drawings and Text (Windows) .....	20
Printing Line Drawings and Text (Mac OS X) .....	22
Specifying Colors and Printing CAD Drawings .....	26
Specifying Colors and Printing CAD Drawings (Windows) .....	27
HP-GL/2 Printing .....	28

## Printing CAD Drawings

Using this printer, you can print fine lines and text clearly and sharply. It's easy to produce highly precise drawings from CAD applications.



### Note

- In Windows, you can print highly precise drawings using the provided imagePROGRAF HDI Driver for AutoCAD/AutoCAD LT.  
For details on the HDI driver, see the HDI Driver [→P.354](#).

For instructions on CAD printing, refer to the following topics, as appropriate for your computer and operating system.

- Printing Line Drawings and Text (Windows) [→P.20](#)
- Printing Line Drawings and Text (Mac OS X) [→P.22](#)

## Printing Line Drawings and Text

Printing is easy when you simply choose the type of original to print.


### Easy Settings



Simply choose the printing application in the list for optimal printing results.

### Print Target

Choose presets that match the type of document to be printed.

### Print targets for line drawings and text

	Print Target	Description
	<b>CAD (Color Line Drawing)</b>	Settings optimized to print intricate lines in CAD drawings clearly.

	Print Target	Description
	<b>CAD (Monochrome Line Drawing)</b>	Settings optimized to print black lines in CAD drawings clearly.
	<b>Perspective, GIS</b>	Settings optimized for printing 3D CAD drawings, perspective drawings, and maps, including GIS maps.

**Note**

- You can check the settings values for each print target by clicking **View Settings**.
- You can also fine-tune these values as needed. ( **Advanced Settings** )  
For details on **Advanced Settings**, see "Giving Priority to Particular Graphic Elements and Colors for Printing →P.55 "

## Print Quality

Choose the print quality.

The printing mode is determined by a combination of the print quality and resolution.

Print Quality	Description
<b>Highest</b>	A setting for printing at the highest resolution when quality is most important. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.
<b>High</b>	Choose this setting to print at high resolution when quality is most important. Printing takes longer and consumes more ink than in <b>Standard</b> or <b>Draft</b> modes, but this mode offers exceptional printing quality.
<b>Standard</b>	Choose this setting to print at standard resolution when quality and speed are both important. Printing takes less time than in <b>Highest</b> or <b>High</b> mode.
<b>Draft</b>	Choose this setting to print faster. Printing in draft mode can help you work more efficiently when checking layouts.

For instructions on printing line drawings and text, refer to the following topics, as appropriate for your computer and operating system.

- Printing Line Drawings and Text (Windows) →P.20
- Printing Line Drawings and Text (Mac OS X) →P.22

## Printing Line Drawings and Text (Windows)


This topic describes how to print line drawings based on the following example.

- Document: CAD drawing
- Page size: A3 (297.0 × 420.0 mm [11.7 × 16.5 in])
- Paper: Roll paper



- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) (→P.211)")
3. Make sure the **Main** sheet is displayed.

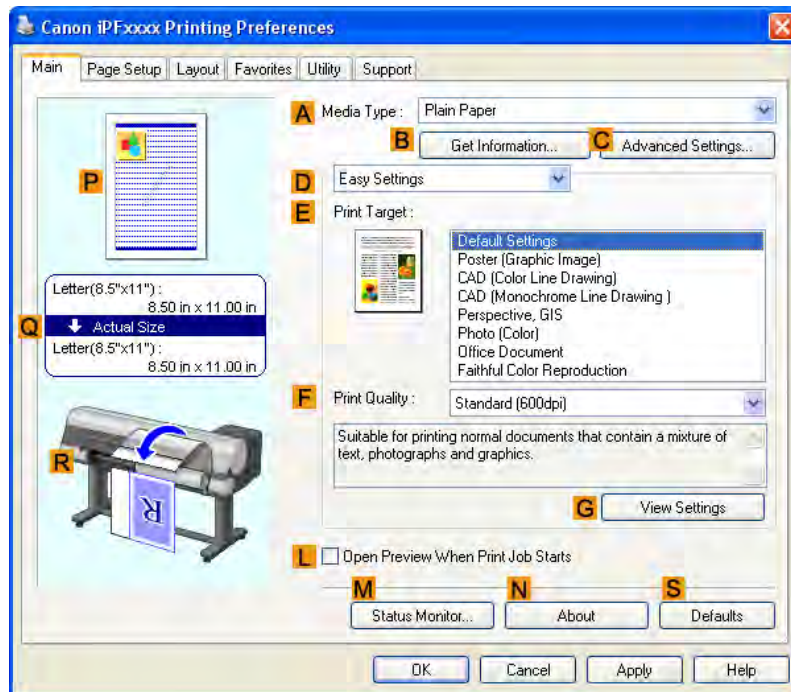


4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. After confirming that **D Easy Settings** is selected, click **CAD (Color Line Drawing)** or **CAD (Monochrome Line Drawing)** in the **E Print Target** list.



#### Note

- You can check the settings values selected in the **E Print Target** list by clicking **G View Settings**.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

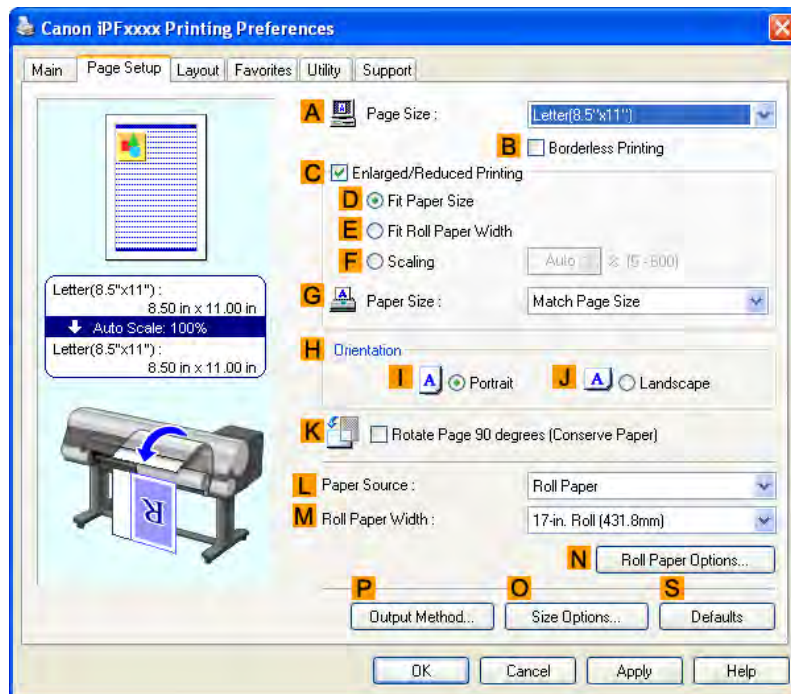

7. In **A Page Size**, click the size of the original as specified in the application. In this case, click **ISO A3**.

8. Select and click a roll paper in the **L Paper Source** list.

9. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.

10. Specify additional printing conditions.  
For details on available printing conditions, see "Printer Driver Settings (Windows) →P.202 "

11. Confirm the print settings and print as desired.

**Note**  
• For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Printing Line Drawings and Text (Mac OS X)

22


This topic describes how to print line drawings based on the following example.

- Document: CAD drawing
- Page size: A3 (297.0 × 420.0 mm [11.7 × 16.5 in])
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. This sets the **B Format for** and **C Paper Size**.

**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

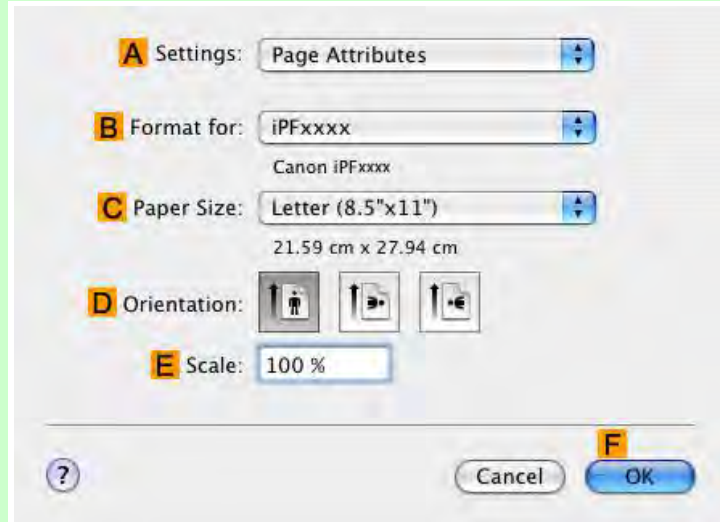


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A3**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

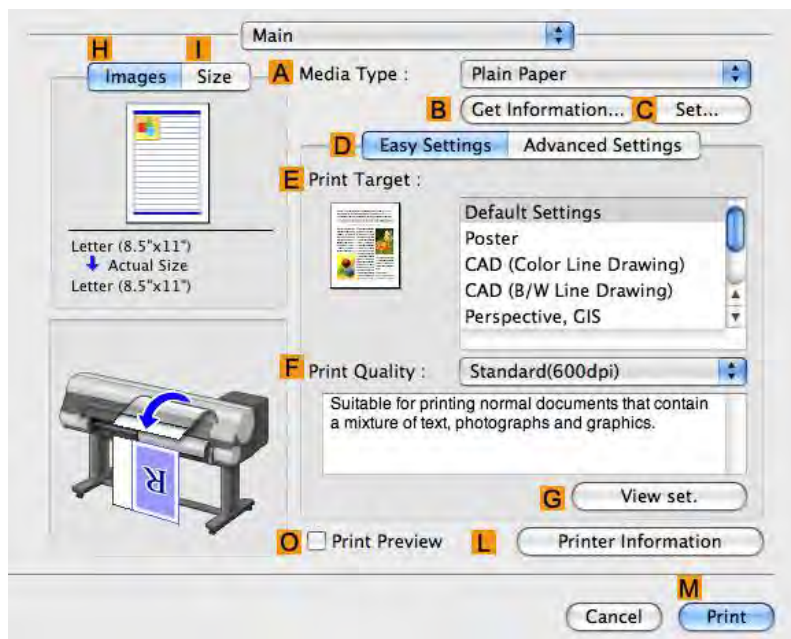

6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. After confirming that **D Easy Settings** is selected, click **CAD (Color Line Drawing)** or **CAD (Monochrome Line Drawing)** in the **E Print Target** list.


 **Note**  
• You can check the settings values selected in the **E Print Target** list by clicking **G View set.**

8. Make your selection in the **F Print Quality** list.

2

24

9. Access the **Page Setup** pane.

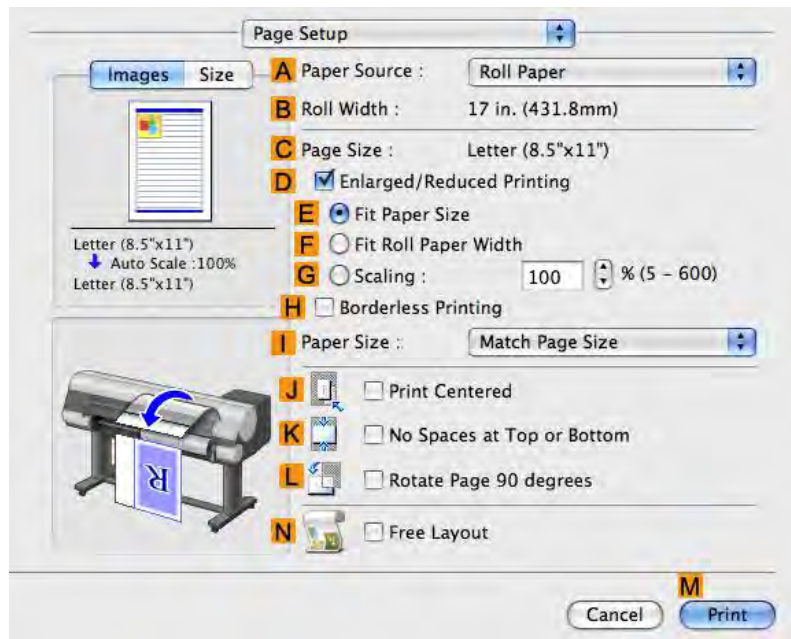

2


10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, ISO A2/A3 (420.0mm).



Note


- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

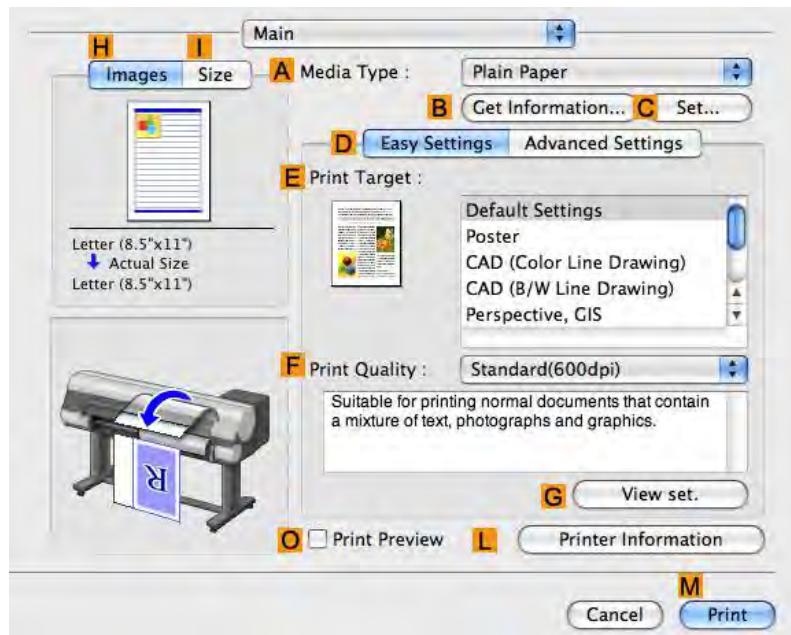

25



12. Make sure **C Page Size** on the **Page Setup** pane shows the original size as specified in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A3**.

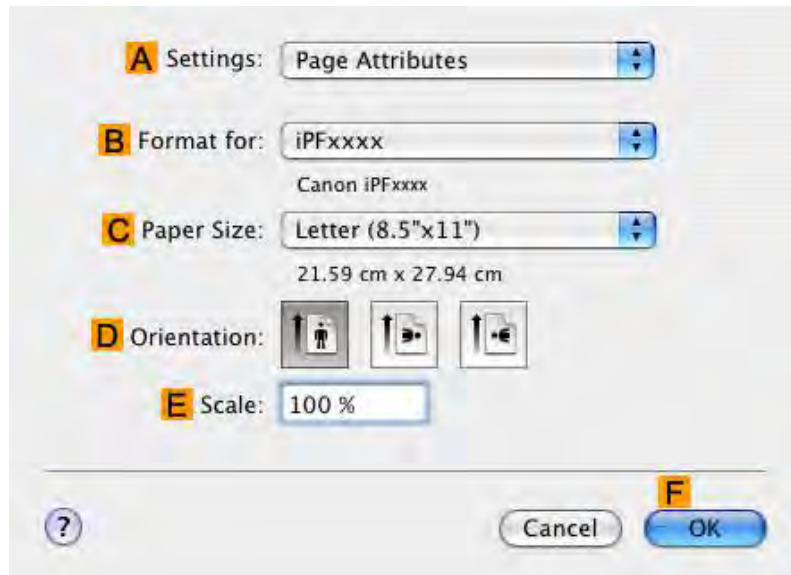

13. Specify additional printing conditions.  
For details on available printing conditions, see "Printer Driver Settings (Mac OS X) →P.425 "

14. Confirm the print settings, and then click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Specifying Colors and Printing CAD Drawings

You can complete color settings when **Color (CAD)** is selected in **Color Mode**.  
Colors can be adjusted before printing as follows when **Color Compatibility** is selected.



**Note**

- **Color (CAD)** is displayed when you select **Advanced Settings** on the **Main** sheet and set **Print Priority** to **Line Drawing/Text**.

### Color Compatibility

Color Setting Item

Color Setting	Description
<b>Color (CAD) 1</b>	Print in standard colors.
<b>Color (CAD) 2</b>	Print in brighter colors.
<b>Color (CAD) 3</b>	Print emulating the Canon BJ-W3000/W3050, in colors resembling colors produced by these printers.
<b>Color (CAD) 4</b>	Print emulating the HP Designjet 500/800, in colors resembling colors produced by these printers.

Color Setting	Description
<b>Color (CAD) 5</b>	Print emulating the HP Designjet 1000, in colors resembling colors produced by this printer.
<b>Color (CAD) 6</b>	Print emulating the HP Designjet 4000/4500, in colors resembling colors produced by these printers.

**Important**

- If you have selected **Color (CAD) 3**, **Color (CAD) 4**, **Color (CAD) 5**, or **Color (CAD) 6**, it is not possible to match the colors and image quality produced by the specified printer exactly.

For instructions on configuring **Color Compatibility**, refer to the following topics.

- Specifying Colors and Printing CAD Drawings (Windows) →P.27

2


## Specifying Colors and Printing CAD Drawings (Windows)

You can complete color settings when **Color (CAD)** is selected in **Color Mode**.

**Note**


- **Color (CAD)** is displayed when you select **Advanced Settings** on the **Main** sheet and set **Print Priority** to **Line Drawing/Text**.

1. Click **start > Printers and Faxes** (or **Printers** ).
2. Select the printer, and then display the printer properties dialog box.

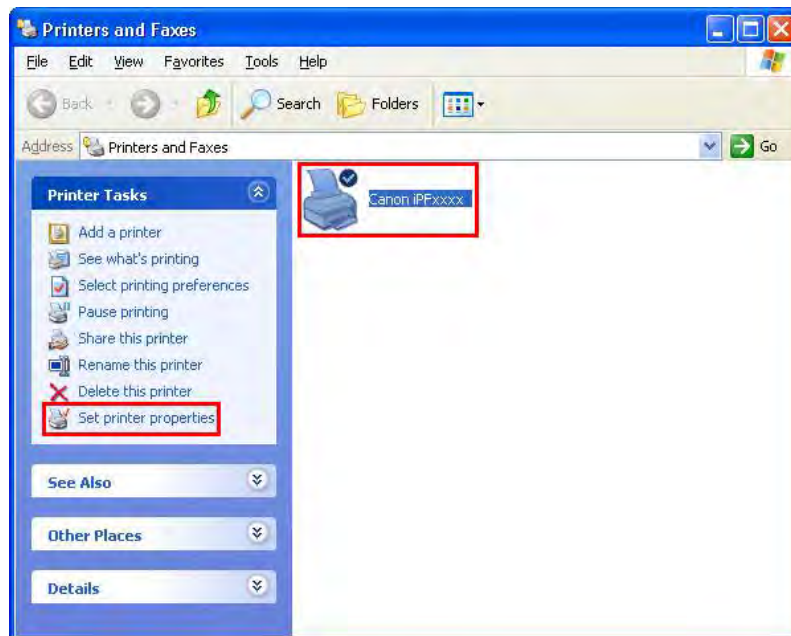


27

3. Click the **Device Settings** tab to display the **Device Settings** sheet.

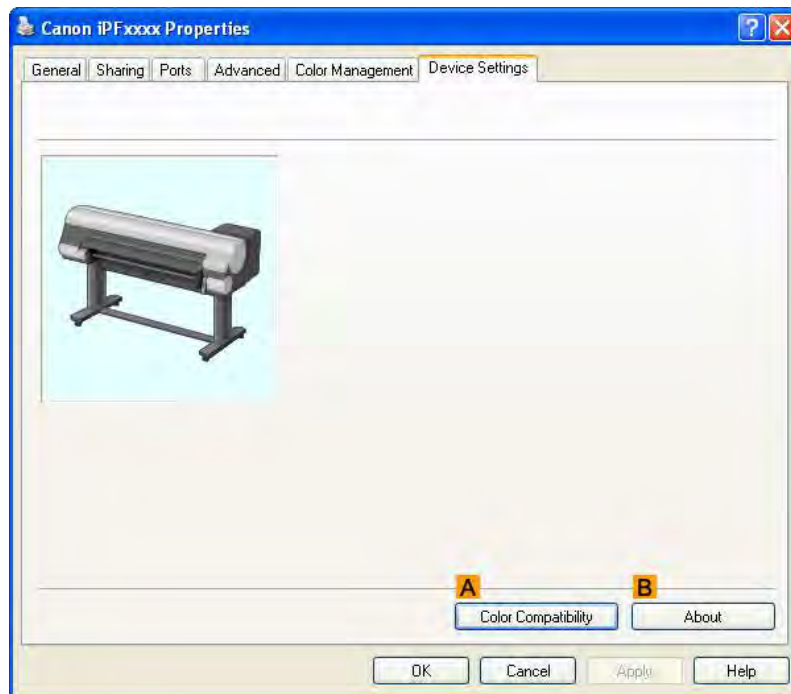

4. Click **A Color Compatibility** to display the **Color Compatibility** dialog box.

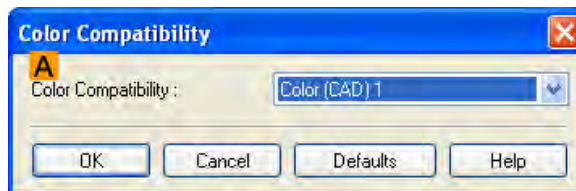

5. Select the desired color settings in the **A Color Compatibility** list.



**Note**

- For details on color settings, see "Specifying Colors and Printing CAD Drawings →P.26 "

For printing instructions, refer to the following topic.

- Choosing the Document Type and Printing Conditions (Windows) →P.58

## HP-GL/2 Printing

This printer supports the original Canon GARO printer control language as well as HP-GL/2 and HP RTL(\*1 →P.29 ) emulation.(\*2 →P.29 ) When printing from applications that support HP-GL/2 output, specify HP-GL/2 in the application's plotter output settings.



**Note**

- For instructions on configuring these settings, refer to the software documentation.



The printer automatically switches to the corresponding processing depending on whether a GARO, HP-GL/2, or HP RTL job is received. Configure the optional settings for HP-GL/2 emulation on the printer control panel. (See "Main Menu Settings.") →P.722

This printer can emulate the following printers using HP-GL/2 emulation.

Emulated Printers	
Canon	W3000 and W3050(*3 →P.29 )
Hewlett-Packard	Designjet 450c, Designjet 750c Plus, and Designjet 750c

\*1: HP-GL/2: Hewlett-Packard Graphics Language 2; HP RTL: Hewlett-Packard Raster Transfer Language

\*2: It may not be possible to print jobs with excessively large amounts of data correctly.

\*3: Layout templates are not supported.

## Printing Photos and Images

Printing Photos and Images ..... 30  
 Printing Photos and Images (Windows) ..... 31  
 Printing Photos and Images (Mac OS X) ..... 33

### Printing Photos and Images

Printing is easy when you simply choose the print target.




#### Easy Settings

Simply choose the printing application in the list for optimal printing results.

#### Print Target

Choose presets that match the type of document to be printed.

#### Print targets for photos and images

	Print Target	Description
	<b>Poster</b>	The best setting for posters. Prints using vivid and high impact colors.
	<b>Photo (Color)</b>	Suitable for printing photographic images captured with a digital camera.
	<b>Faithful Color Reproduction</b>	Prints by minimizing color differences. Suitable for when the printing results are too vivid or when printing scanned images.



**Caution**

- Depending on the **Media Type** setting, some **Print Target** options may not be available.



**Note**

- You can check the settings values for each print target by clicking **View Settings**.
- You can also fine-tune these values as needed. ( **Advanced Settings** )  
 For details on **Advanced Settings**, see "Giving Priority to Particular Graphic Elements and Colors for Printing →P.55 "

## Print Quality

Choose the print quality.

The printing mode is determined by a combination of the print quality and resolution.

Print Quality	Description
<b>Highest</b>	A setting for printing at the highest resolution when quality is most important. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.
<b>High</b>	Choose this setting to print at high resolution when quality is most important. Printing takes longer and consumes more ink than in <b>Standard</b> or <b>Draft</b> modes, but this mode offers exceptional printing quality.
<b>Standard</b>	Choose this setting to print at standard resolution when quality and speed are both important. Printing takes less time than in <b>Highest</b> or <b>High</b> mode.
<b>Draft</b>	Choose this setting to print faster. Printing in draft mode can help you work more efficiently when checking layouts.

For instructions on printing photos and images, refer to the following topics, as appropriate for your computer and operating system.

- Printing Photos and Images (Windows) →P.31
- Printing Photos and Images (Mac OS X) →P.33


## Printing Photos and Images (Windows)

This topic describes how to print photos based on the following example.

- Document: Photo image from a digital camera
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll
- Paper type: Premium Glossy Paper 200
- Roll paper width: 10 inches (254.0 mm)

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")

3. Make sure the **Main** sheet is displayed.

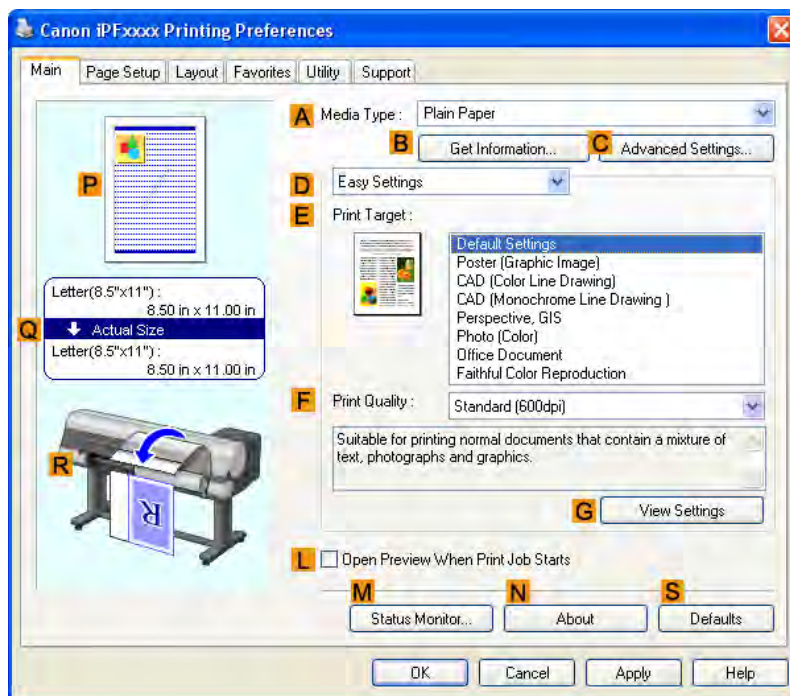

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Premium Glossy Paper 200. In the **A Media Type**, choose the type of paper used for printing, such as Glossy Paper, Coated Paper, and so on. Make sure the paper you select is loaded in the printer.



**Note**

- The paper type setting in the printer driver and related software (as well as on the Control Panel ) is updated when you install the Media Configuration Tool from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. For details, see Media Configuration Tool →P.406 .


5. After confirming that **D Easy Settings** is selected, click **Photo (Color)** in the **E Print Target** list.



**Note**

- You can check the settings values selected in the **E Print Target** list by clicking **G View Settings**.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

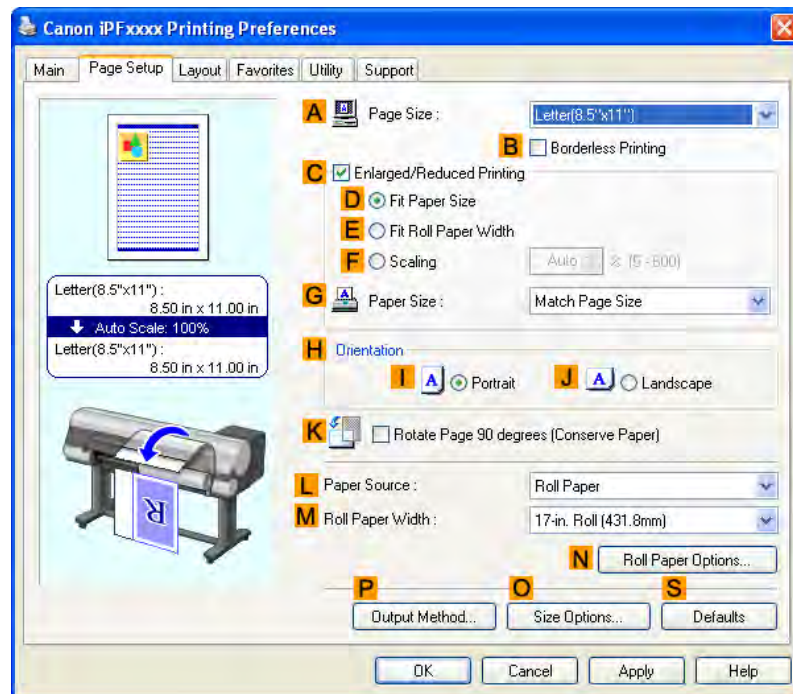

7. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **10"x12"**.
8. Select and click a roll paper in the **L Paper Source** list.
9. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **10-in. Roll (254.0mm)**.
10. Specify additional printing conditions.  
For details on available printing conditions, see "Printer Driver Settings (Windows) →P.202 "
11. Confirm the print settings and print as desired.



**Note**

- For instructions on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Printing Photos and Images (Mac OS X)

This topic describes how to print photos based on the following example.


- Document: Photo image from a digital camera
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll paper
- Paper type: Premium Glossy Paper 200
- Roll paper width: 10 inches (254.0 mm)

1. This sets the **B Format for** and **C Paper Size**.




**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

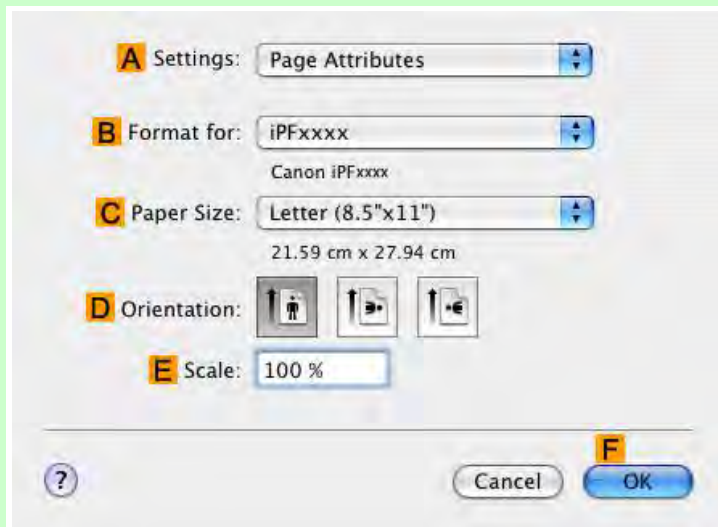


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

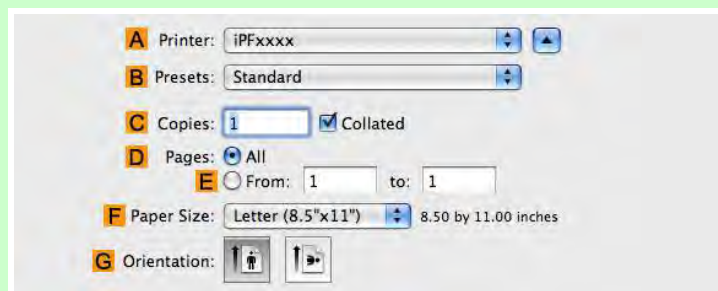

2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **10"x12"**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

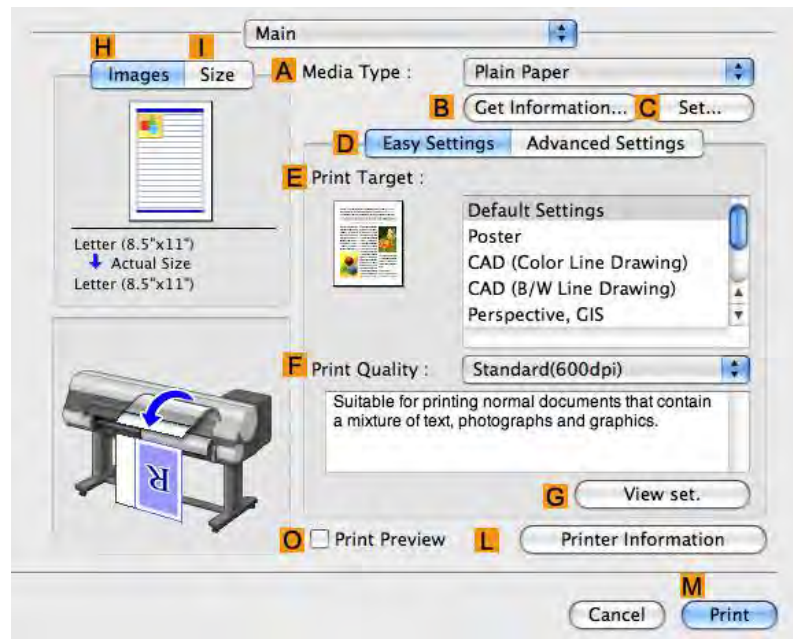

6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Premium Glossy Paper 200. Make sure the paper you select is loaded in the printer.



**Note**

- The types of paper indicated in the printer driver and related software (as well as on the Control Panel) are updated when you install the Media Configuration Tool from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. For details, see Media Configuration Tool →P.539.

7. After confirming that **D Easy Settings** is selected, click **Photo (Color)** in the **E Print Target** list.




**Note**

- For information on settings optimized for printing photos and images, see "Printing Photos and Images →P.30"
- You can check the settings values selected in the **E Print Target** list by clicking **G View set.**

8. Make your selection in the **F Print Quality** list.



9. Access the **Page Setup** pane.

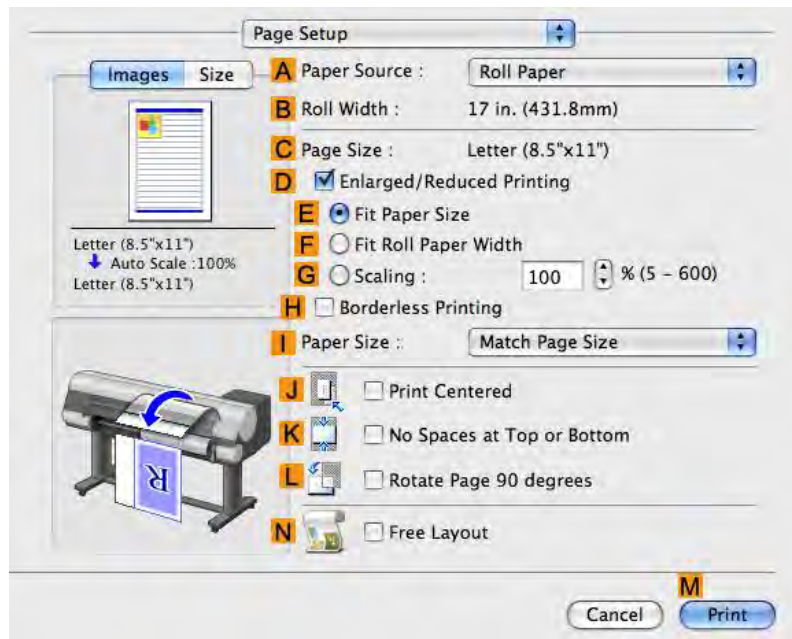


2

10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **10 in. (254.0mm)**.

**Note**


- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

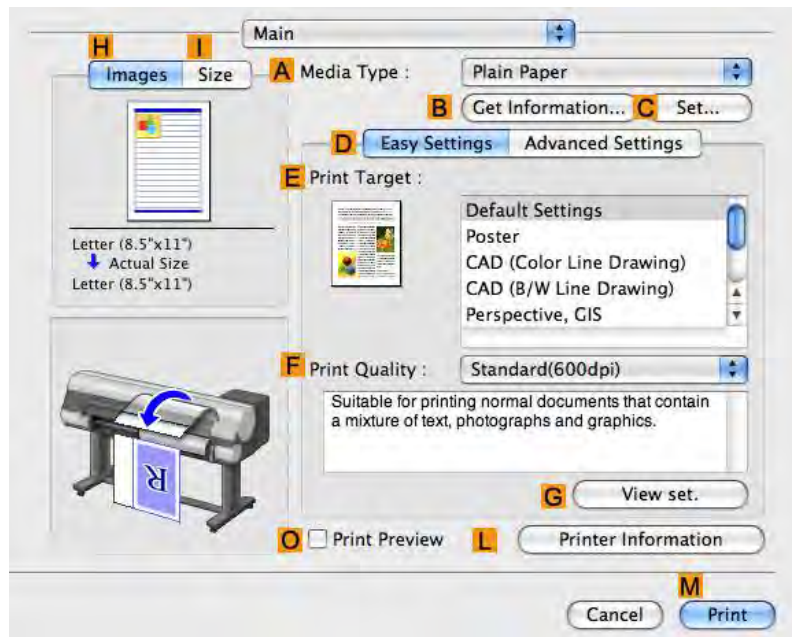

36



12. Make sure **C Page Size** on the **Page Setup** pane shows the original size as specified in **C Paper Size** in the **Page Attributes** dialog box—in this case, **10"x12"**.

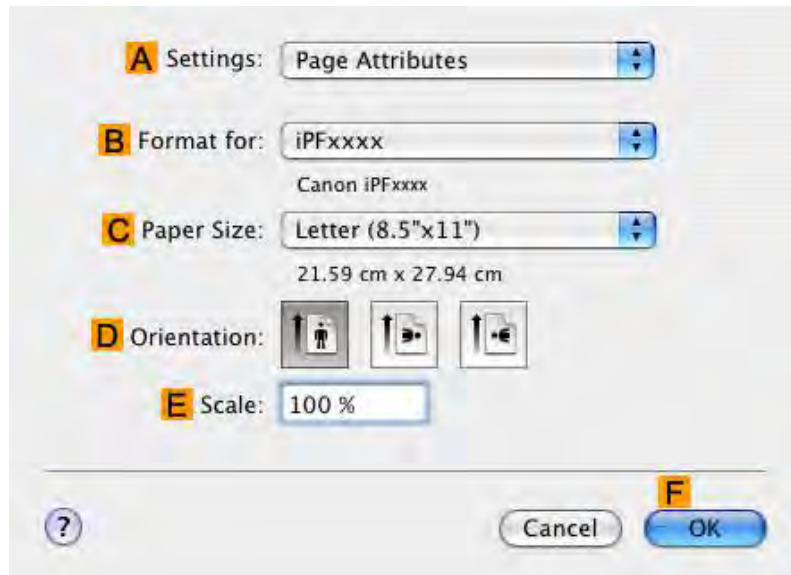

13. Specify additional printing conditions.  
For details on available printing conditions, see "Printer Driver Settings (Mac OS X) →P.425 "
14. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Printing Office Documents

Printing Office Documents ..... 38  
 Printing Office Documents (Windows) ..... 39  
 Printing Office Documents (Mac OS X) ..... 40

### Printing Office Documents

Printing is easy when you simply choose the type of original to print.


#### Easy Settings

Simply choose the printing application in the list for optimal printing results.

#### Print Target

Choose presets that match the type of document to be printed.

#### Print targets for office documents

	Print Target	Description
	Office Document	Settings optimized for clear printing of office documents such as handouts.



**Note**

- You can check the settings values for each print target by clicking **View Settings**.
- You can also fine-tune these values as needed. (Advanced Settings)  
 For details on Advanced Settings, see "Giving Priority to Particular Graphic Elements and Colors for Printing →P.55 "

#### Print Quality

Choose the print quality.

The printing mode is determined by a combination of the print quality and resolution.

Print Quality	Description
<b>Highest</b>	A setting for printing at the highest resolution when quality is most important. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.
<b>High</b>	Choose this setting to print at high resolution when quality is most important. Printing takes longer and consumes more ink than in <b>Standard</b> or <b>Draft</b> modes, but this mode offers exceptional printing quality.
<b>Standard</b>	Choose this setting to print at standard resolution when quality and speed are both important. Printing takes less time than in <b>Highest</b> or <b>High</b> mode.
<b>Draft</b>	Choose this setting to print faster. Printing in draft mode can help you work more efficiently when checking layouts.

For instructions on printing office documents, refer to the following topics, as appropriate for your computer and operating system.


- Printing Office Documents (Windows) →P.39
- Printing Office Documents (Mac OS X) →P.40

## Printing Office Documents (Windows)

This topic describes how to print office documents based on the following example.

- Document: Office document created using word-processing or spreadsheet programs
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Sheets
- Paper type: Plain Paper
- Paper size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.

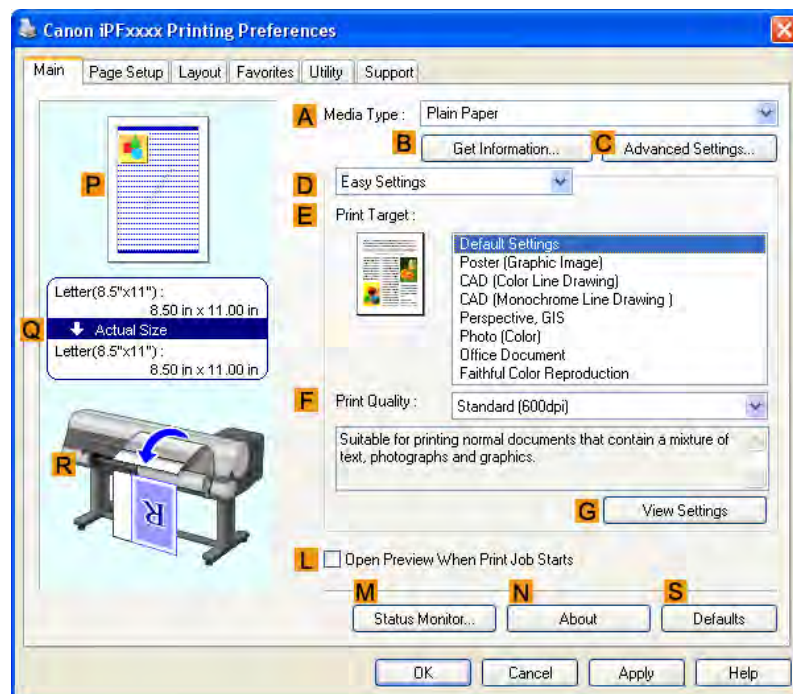


4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

5. After confirming that **D Easy Settings** is selected, click **Office Document** in the **E Print Target** list.

**Note**  
 • You can check the settings values selected in the **E Print Target** list by clicking **G View Settings**.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

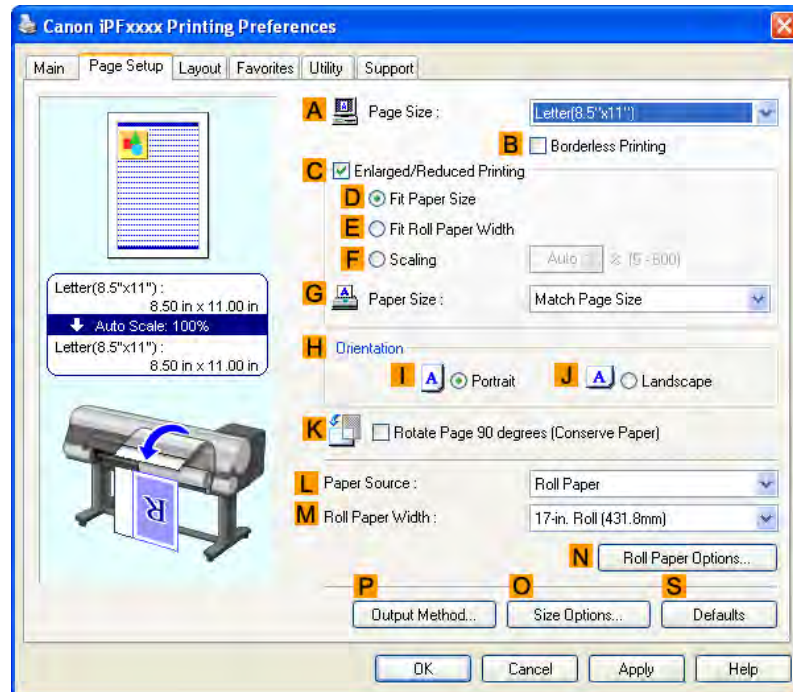

7. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4**.

8. Click **Cut Sheet** in the **L Paper Source** list.

9. Specify additional printing conditions.  
 For details on available printing conditions, see "Printer Driver Settings (Windows) →P.202 "

10. Confirm the print settings and print as desired.

**Note**  
 • For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Printing Office Documents (Mac OS X)

This topic describes how to print office documents based on the following example.

- Document: Office document created using word-processing or spreadsheet programs
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Sheets
- Paper type: Plain Paper


- Paper size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])

1. This sets the **B Format for** and **C Paper Size**.




**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

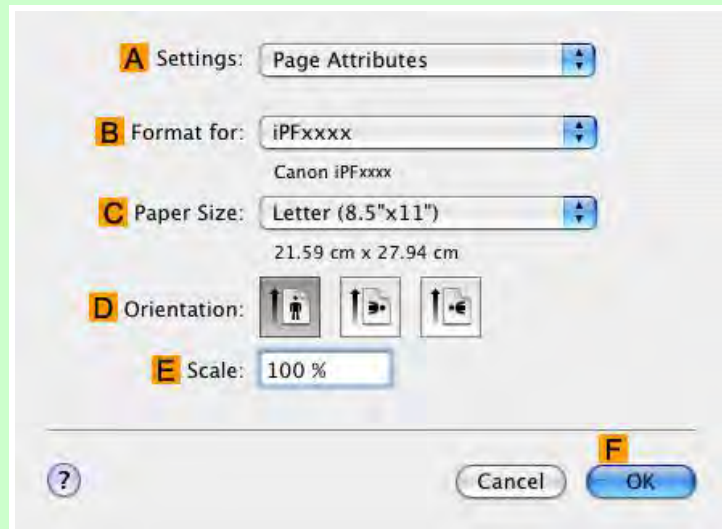


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

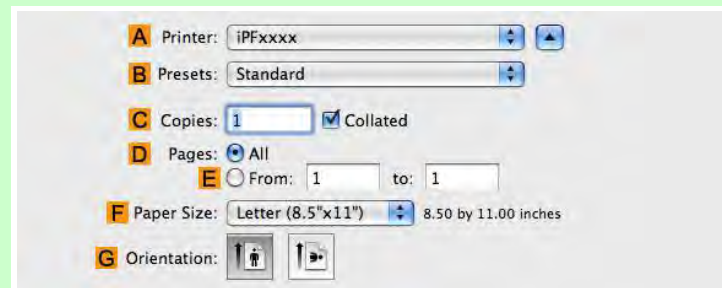


2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4 - for Paper Tray (Large Margins)**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

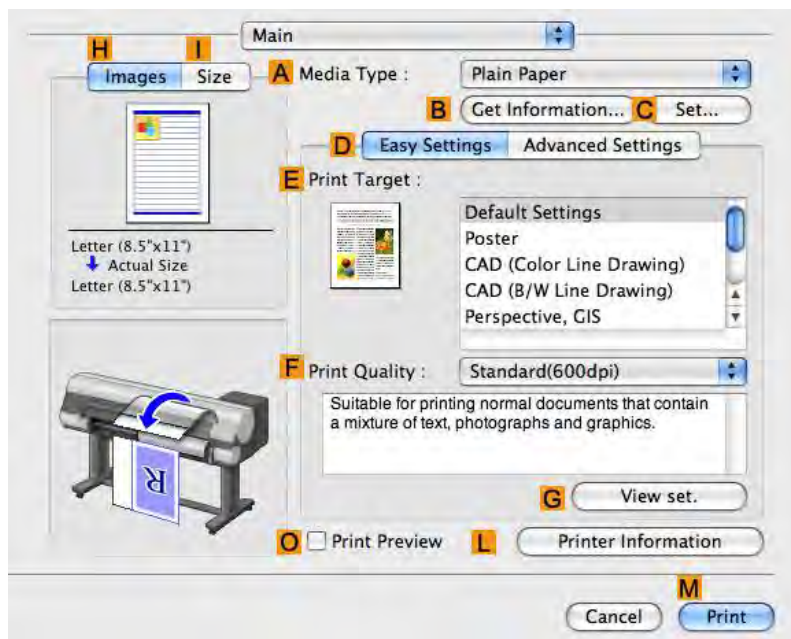

6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. After confirming that **D Easy Settings** is selected, click **Office Document** in the **E Print Target** list.


 **Note**  
• You can check the settings values selected in the **E Print Target** list by clicking **G View set.**

8. Make your selection in the **F Print Quality** list.

2



9. Access the **Page Setup** pane.

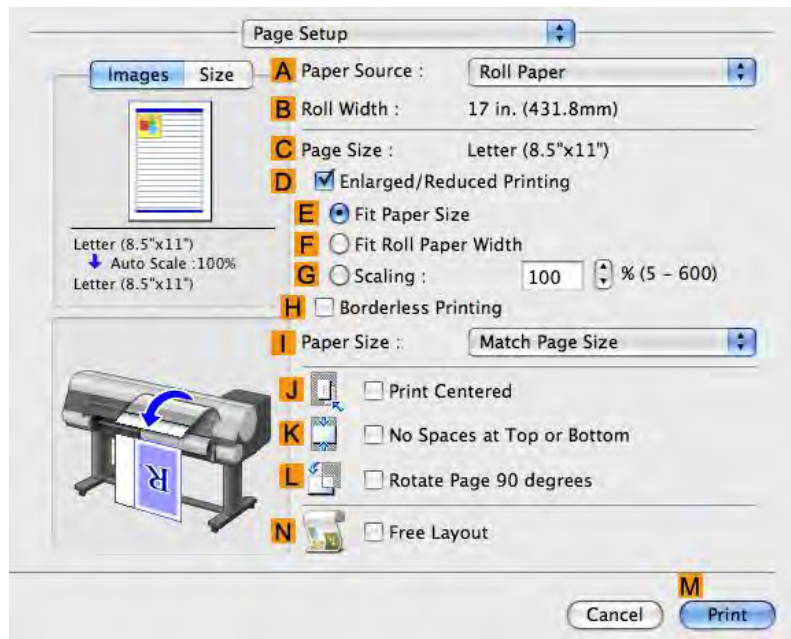

10. Click **Cut Sheet** in the **A Paper Source** list.

11. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4 - for Paper Tray (Large Margins)**.



12. Specify additional printing conditions.  
For details on available printing conditions, see "Printer Driver Settings (Mac OS X) →P.425 "

**13.** Confirm the print settings, and then click **Print** to start printing.




Note

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) [→P.429](#) "



## Enhanced Printing Options

Adjusting Images	46
Choosing Paper for Printing	64
Printing enlargements or reductions	65
Printing at full size	85
Borderless Printing	100
Printing banners or at other non-standard sizes	115
Tiling and multiple pages per sheet	133
Centering originals	154
Conserving roll paper	167
Using PosterArtist to Compose Originals	181
Checking Images Before Printing	184
Other useful settings	186

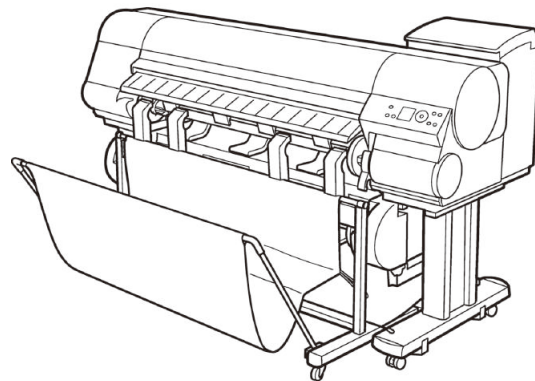

## Adjusting Images

Adjusting the Color in the Printer Driver .....	46
Fine-Tuning Colors of Photos and Images (Windows) .....	48
Fine-Tuning Colors of Photos and Images (Mac OS X) .....	52
Giving Priority to Particular Graphic Elements and Colors for Printing .....	55
Choosing the Document Type and Printing Conditions (Windows) .....	58
Choosing the Document Type and Printing Conditions (Mac OS X) .....	61

### Adjusting the Color in the Printer Driver

Color settings specified in the application for your documents are essentially given priority over other settings for each print job, but further color adjustment is possible in the printer driver.

3

#### Color Mode

Choose how the printer driver processes color, as desired.  
The available options vary depending on the color mode.

Color Mode	Description	Color Adjustment
<b>Color</b>	Print in color.	You can adjust the color balance and color-matching method.
<b>Monochrome</b>	Print in grayscale.	You can adjust the color balance.
<b>Color (CAD)</b>	A color mode optimized for line drawings (2D-CAD). Lines in red, yellow, and other colors are printed especially clearly.	You can adjust the color balance.
<b>Monochrome (BK ink)</b>	A color mode for printing line drawings. Only Black ink is used.	You can adjust the color balance.
<b>Monochrome Bitmap</b>	Print in a color mode for CAD, using Color Ink, with all non-white portions printed in black.	No color adjustment is supported.
<b>No color correction (*1)</b>	Prints without performing color-matching in the printer driver.	You can adjust the color balance.

\*1: If **No color correction** is selected, the **Matching** sheet / **Matching** pane is not displayed.

#### Color Adjustment

You can adjust colors separately for images, graphics, and text documents.

Adjustment Item	Description
<b>Cyan</b>	Fine-tune color tones by adjusting the levels of <b>Cyan</b> , <b>Magenta</b> , and <b>Yellow</b> .
<b>Magenta</b>	
<b>Yellow</b>	
<b>Gray Tone</b>	Adjust the grayscale, in a range from cool, blue tones to warm, red tones.
<b>Brightness</b>	Adjust the brightness of printed images while keeping the darkest and lightest portions intact.

46

Adjustment Item	Description
<b>Contrast</b>	Adjust the contrast of the darkest and lightest portions relative to each other. For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
<b>Saturation</b>	Adjust the level of color saturation, in a range from subdued to vivid.

**Note**

- Click **Object Adjustment** to open the **Object Adjustment** dialog box, which allows you to select the color adjustment target from **Image, Graphics, and Text**.

## Matching

You can choose the color-matching mode and method.

By adjusting the color-matching mode and method, you can make printed colors match the colors of on-screen images more closely.

Matching Mode	Description	Remarks
<b>Driver Matching Mode</b>	Enables printing of optimal color tones using a driver specific color profile.	You should normally select this mode.
<b>ICC Matching Mode</b>	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail.	This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.
<b>Driver ICM Mode</b>	Enables color matching by the printer driver using the ICM function of printer driver. Select this if you want to print by only specifying the matching method.	Available when using Windows.
<b>Host ICM Mode</b>	Enables color matching by the host computer using the ICM function of Windows. Select this if you want to print from an application that supports the ICM function.	
<b>ColorSync</b>	Enables color matching by using the ColorSync function of Mac OS. Select this if you want to perform soft proofing using ColorSync before printing.	Available when using Mac OS.

Matching Method	Description	Remarks
<b>Auto</b>	Color-matching optimized for images, graphics, or text.	The available options and their display order vary depending on your selected color-matching mode, as well as the operating system.
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.	

Matching Method	Description	Remarks
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.	The available options and their display order vary depending on your selected color-matching mode, as well as the operating system.
<b>Colorimetric (No Wht-pnt Corr)</b>	The processing method of color-matching is identical to Colorimetric. Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.	
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.	

**Note**

- Be sure to calibrate your monitor colors correctly if you adjust the colors for printing. If monitor colors are not calibrated correctly, you may not obtain the desired printing results. For instructions on monitor calibration, refer to the documentation for your monitor and operating system.

For instructions on color adjustment, refer to the following topics, as appropriate for your computer and operating system.


- Fine-Tuning Colors of Photos and Images (Windows) →P.48
- Fine-Tuning Colors of Photos and Images (Mac OS X) →P.52

## Fine-Tuning Colors of Photos and Images (Windows)

You can specify your own print settings instead of using the **Print Target** presets. This topic describes how to fine-tune the color tone of photos before printing.


1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")

3. Make sure the **Main** sheet is displayed.

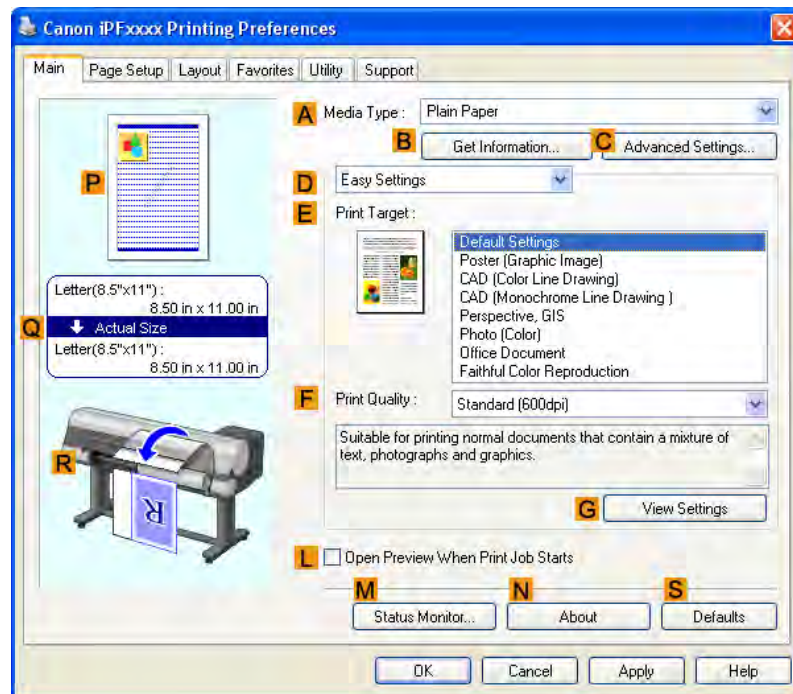


4. In the **A Media Type** list, select the type of paper that is loaded.

5. Click **D Advanced Settings** to switch the print mode.

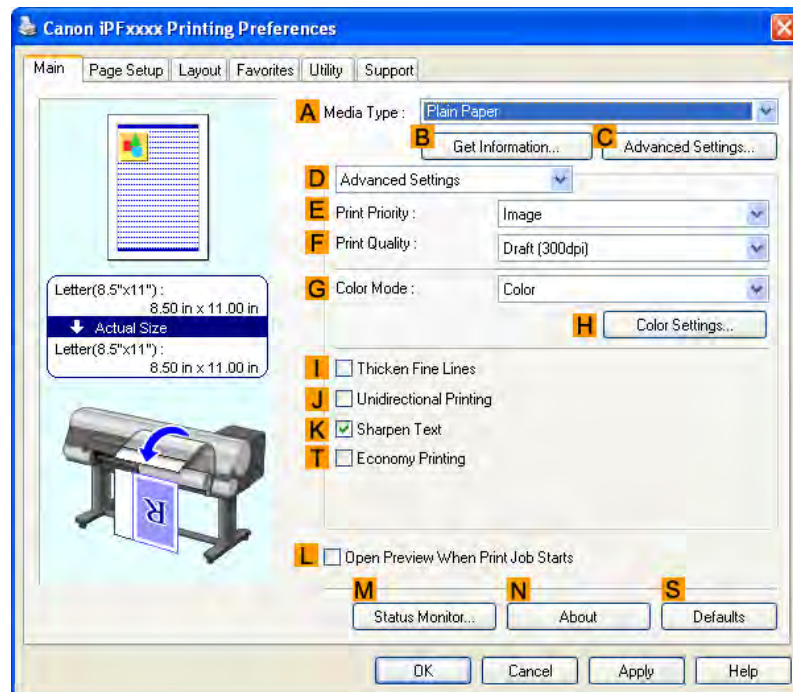

6. Click **Color** in the **G Color Mode** list.

7. Click **H Color Settings** to display the **Color Settings** dialog box.

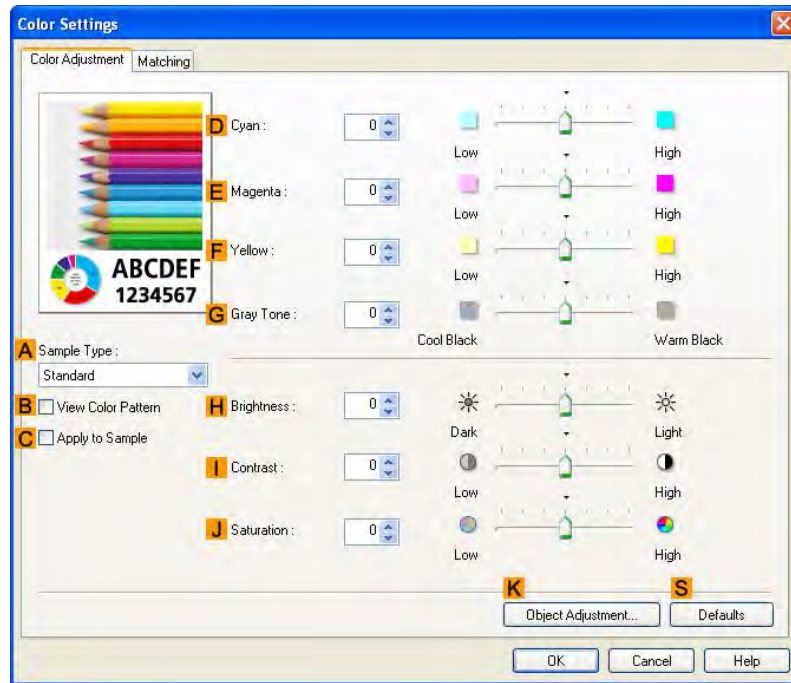

8. On the **Color Adjustment** sheet, adjust the color tones, brightness, and so on as desired.

Adjustment Item	Description
<b>D Cyan</b>	Fine-tune color tones by adjusting the levels of Cyan, Magenta, and Yellow.
<b>E Magenta</b>	
<b>F Yellow</b>	
<b>G Gray Tone</b>	Adjust the gray tone to suit the images of monochrome photos. Choose cool black (tinged with blue), pure black (neutral), warm black (tinged with red), and so on. Select the color tone in the color region or from the list.
<b>H Brightness</b>	Adjust the brightness of printed images while keeping the darkest and lightest portions intact.
<b>I Contrast</b>	Adjust the contrast of the darkest and lightest portions relative to each other. For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
<b>J Saturation</b>	Adjust the level of color saturation, in a range from subdued to vivid.




**Note**

- Click **Object Adjustment** to open the **Object Adjustment** dialog box, which allows you to select the color adjustment target from **Image**, **Graphics**, and **Text**.

9. Close the **Color Settings** dialog box.



**10.** Click the **Page Setup** tab to display the **Page Setup** sheet.

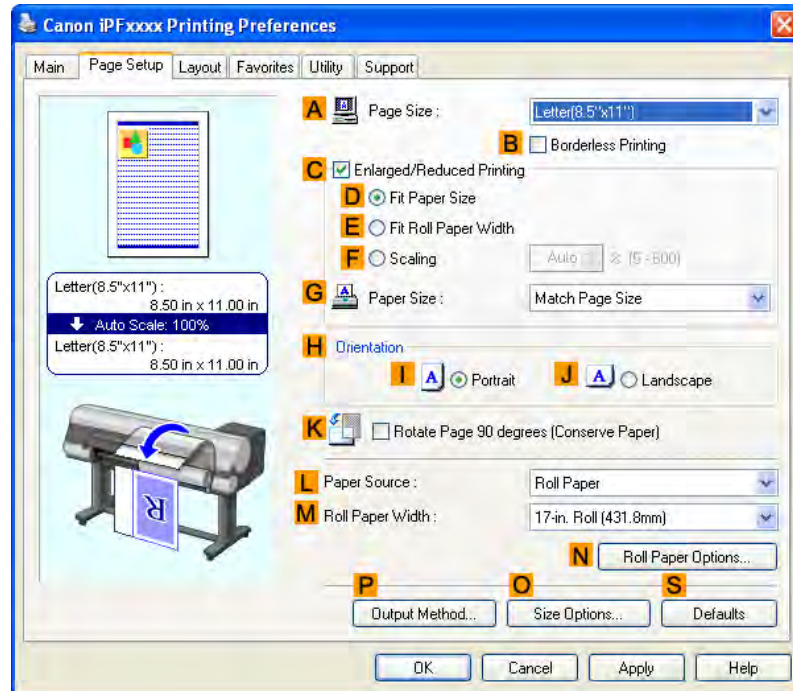

**11.** Confirm the settings of **A** Page Size, **L** Paper Source, and so on.

**12.** Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Fine-Tuning Colors of Photos and Images (Mac OS X)

You can specify your own print settings instead of using the **Print Target** presets. This topic describes how to fine-tune the color tone of photos before printing.

1. This sets the **B Format for** and **C Paper Size**.



### Note

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.




If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. Choose the original size in the **F Paper Size** list.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.




5. Access the **Main** pane.

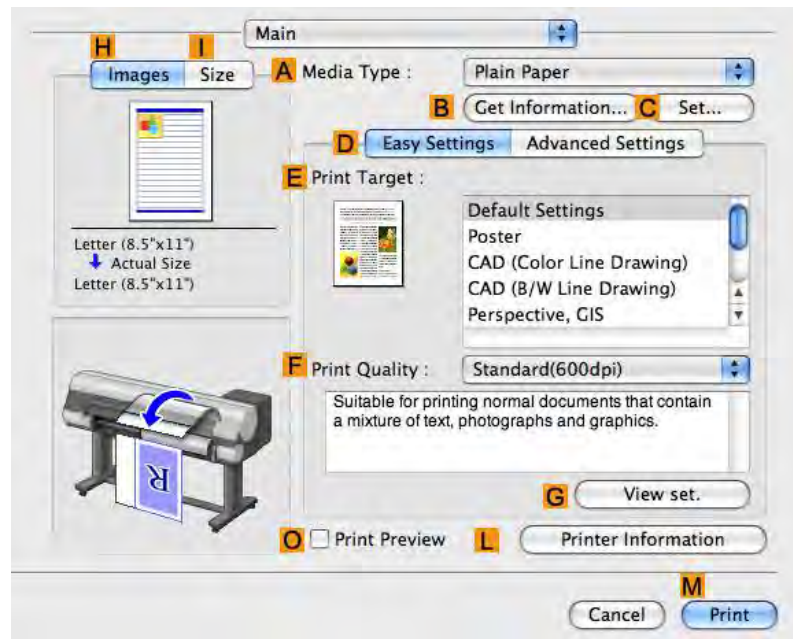


6. In the **A Media Type** list, select the type of paper that is loaded.

7. Click **D Advanced Settings** to switch the print mode.

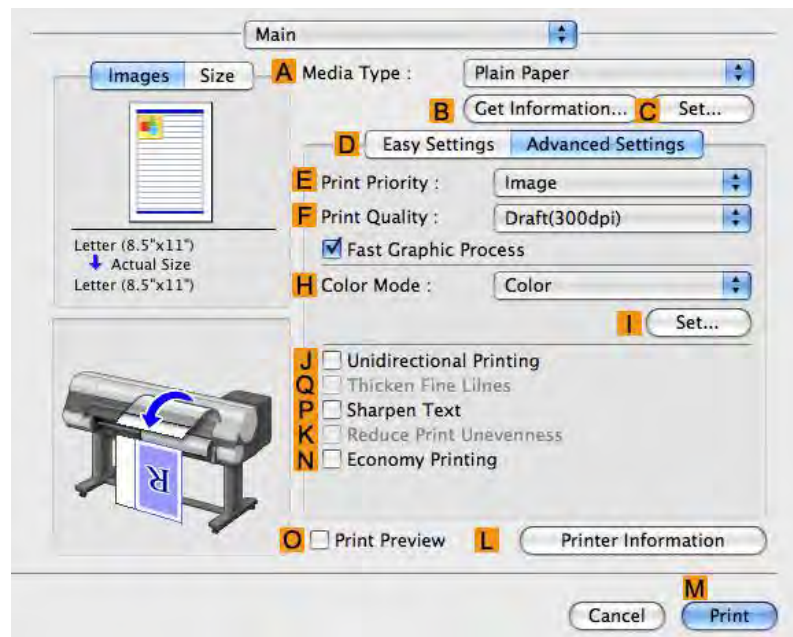

8. Click **Color** in the **H Color Mode** list.

9. Click **I** Set to display the **Color Settings** dialog box.

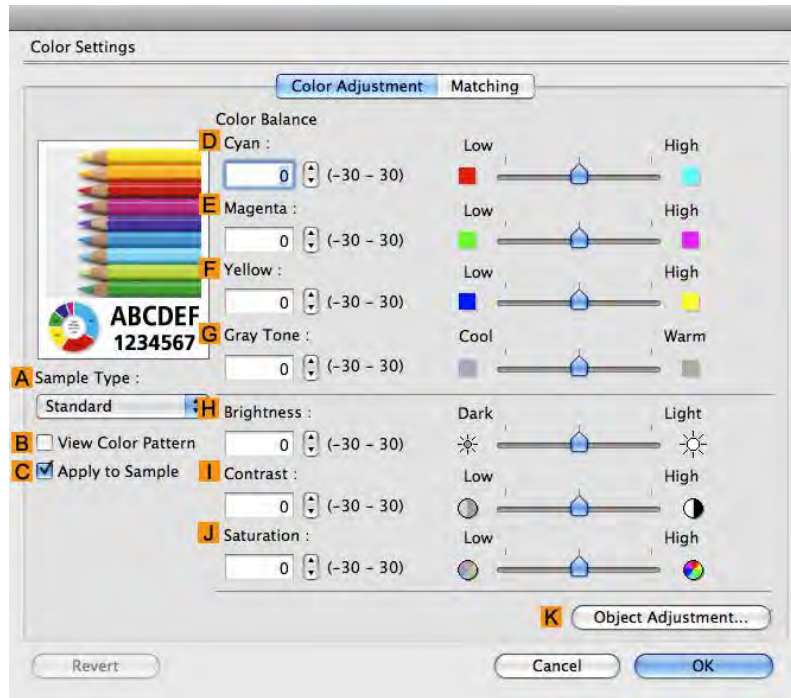

10. On the **Color Adjustment** pane, adjust the color tones, brightness, and so on as desired.

Adjustment Item	Description
<b>D</b> Cyan	Fine-tune color tones by adjusting the levels of Cyan, Magenta, and Yellow.
<b>E</b> Magenta	
<b>F</b> Yellow	
<b>G</b> Gray Tone	Adjust the gray tone to suit the images of monochrome photos. Choose cool black (tinged with blue), pure black (neutral), warm black (tinged with red), and so on. Select the color tone in the color region or from the list.
<b>H</b> Brightness	Adjust the brightness of printed images while keeping the darkest and lightest portions intact.
<b>I</b> Contrast	Adjust the contrast of the darkest and lightest portions relative to each other. For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
<b>J</b> Saturation	Adjust the level of color saturation, in a range from subdued to vivid.


**Note**

- Click **Object Adjustment** to open the **Object Adjustment** dialog box, which allows you to select the color adjustment target from **Images**, **Graphics**, and **Text**.

11. Click **OK** to close the **Color Settings** dialog box.

3

54

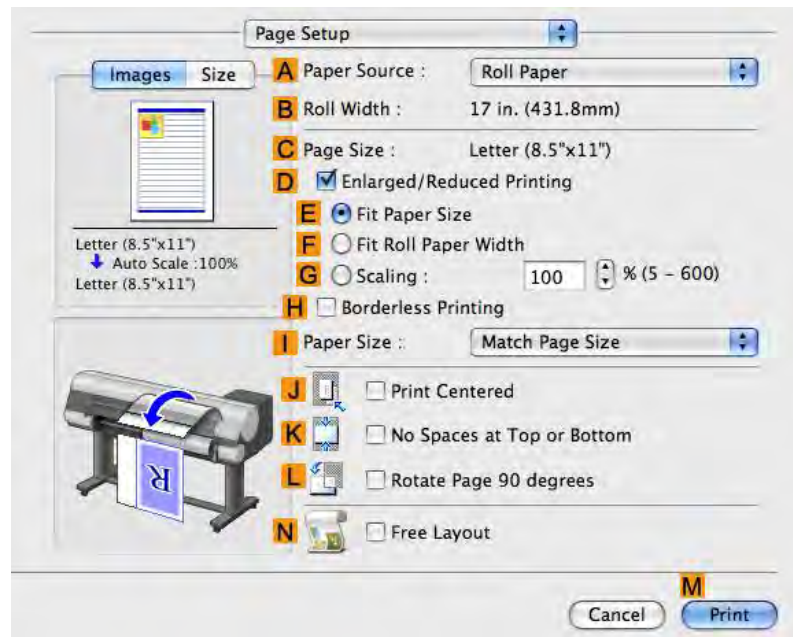**12.** Access the **Page Setup** pane.**13.** Confirm the settings of **A Paper Source** and **C Page Size**.**14.** Confirm the print settings, and then click **M Print** to start printing.**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Giving Priority to Particular Graphic Elements and Colors for Printing

You can specify detailed print settings as desired for the quality level, colors, and other criteria.

### Advanced Settings

For printing results that appear just as expected for your original, you can specify which graphic elements and colors to prioritize for printing.

**Note**

- **Easy Settings** are also available, providing convenient presets. To use the presets, simply choose the printing application.  
For details on **Easy Settings**, refer to the following topics.
  - Printing Photos and Images →P.30
  - Printing Line Drawings and Text →P.19
  - Printing Office Documents →P.38

### Print Priority

Choose the graphic elements that you want to emphasize for printing.

Print Priority (*1)	Description
<b>Image</b>	A setting for posters or other documents made up mainly of photos or images, or for emphasizing photos or images in printed documents.
<b>Line Drawing/Text</b>	Choose this setting for CAD drawings made up mainly of intricate lines, or wall newspapers and other notices with a large amount of text. Suitable for emphasizing detailed text in printed documents. However, the quality may not be sufficient when printing photos or images that require a lot of color coverage. In this case, choose <b>Image</b> instead.
<b>Office Document</b>	Choose this setting for better legibility of documents combining text and graphics, such as documents and presentation material created with typical office applications.

\*1: Options suitable for the selected type of paper are listed under Print Priority.

### Print Quality

Choose the print quality.

The printing mode is determined by a combination of the print quality and resolution.

Print Quality (*1)	Description	Print Priority
<b>Highest</b>	A setting for printing at the highest resolution when quality is most important. Printing takes longer and consumes more ink than in other modes, but this mode offers superior printing quality.	<b>Image</b>
<b>High</b>	Choose this setting to print at high resolution when quality is most important. Printing takes longer and consumes more ink than in <b>Standard</b> or <b>Draft</b> modes, but this mode offers exceptional printing quality.	<b>Image</b> <b>Line Drawing/Text</b>
<b>Standard</b>	Choose this setting to print at standard resolution when quality and speed are both important. Printing takes less time than in <b>Highest</b> or <b>High</b> mode.	<b>Image</b> <b>Line Drawing/Text</b> <b>Office Document</b>
<b>Draft</b>	Choose this setting to print faster. Printing in draft mode can help you work more efficiently when checking layouts.	<b>Image</b> <b>Line Drawing/Text</b>

\*1: Options suitable for the selected Print Priority are listed under Print Quality.

### Color Settings

Setting Item	Options	Description
<b>Color Mode (*1)</b>	<b>Color</b> <b>Monochrome</b> <b>Color (CAD)</b> <b>Monochrome (BK ink)</b> <b>Monochrome Bitmap</b> <b>No color correction</b>	Choose whether to print in color or monochrome. (See "Adjusting the Color in the Printer Driver →P.46 ")

Setting Item	Options	Description
<b>Color Adjustment</b>	<b>Cyan</b> <b>Magenta</b> <b>Yellow</b> <b>Gray Tone</b> <b>Brightness</b> <b>Contrast</b> <b>Saturation</b>	You can adjust the levels of cyan, magenta, and yellow as well as the brightness, contrast, saturation, and gray tones. If you choose <b>Monochrome</b> or <b>Monochrome (BK ink)</b> in <b>Color Mode</b> only <b>Brightness</b> and <b>Contrast</b> can be adjusted. <b>Image, Graphics, and Text</b> are available as <b>Object Adjustment</b> options.
Color-Matching Modes	<b>Driver Matching Mode</b> <b>ICC Matching Mode</b> <b>Driver ICM Mode (Windows)</b> <b>Host ICM Mode (Windows)</b> <b>ColorSync (Mac OS X)</b>	Choose the color-matching mode.
Color-Matching Method (*2)	<b>Auto</b> <b>Perceptual</b> <b>Colorimetric</b> <b>Colorimetric (No Wht-pnt Corr)</b> <b>Saturation</b>	Choose the color-matching method. The available options vary depending on your selection in <b>Color-Matching Mode</b> .

\*1: Options suitable for the selected Print Priority are listed under Color Mode.

\*2: The order of options displayed varies depending on the operating system.

### Enhancing printing quality

Setting Item	Description
<b>Unidirectional Printing</b>	Choosing unidirectional printing can improve printing results if lines are printed crooked or images are uneven. However, this takes more time than regular printing.
<b>Thicken Fine Lines</b>	Choose this option to make fine lines clearer in CAD drawings or similar documents.
<b>Sharpen Text</b>	Choose this option to print intricate text more distinctly.
<b>Reduce Print Unevenness (*1)</b>	Choose this option to counteract uneven printing.
<b>Economy Printing</b>	When this mode is selected, less ink is consumed than in regular printing, but the quality is diminished. Select this mode if you want to conserve ink when checking drawings, for example. Depending on the <b>Media Type</b> and <b>Print Quality</b> settings, this mode may not be available.

\*1: Displayed in Mac OS X.



#### Note

- To print at a higher level of quality, in the printer driver, choose **High** or **Highest** in **Print Quality**, and choose **Unidirectional Printing** as the direction of printing.

For instructions on specifying the print quality and color settings before printing, refer to the following topics, as appropriate for your computer and operating system.


- Choosing the Document Type and Printing Conditions (Windows) →P.58
- Choosing the Document Type and Printing Conditions (Mac OS X) →P.61



## Choosing the Document Type and Printing Conditions (Windows)


You can specify your own print settings instead of using the **Print Target** presets. As an example, this topic describes how to print CAD drawings as clearly as possible, with sharp lines and text.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) (→P.211)")
3. Make sure the **Main** sheet is displayed.

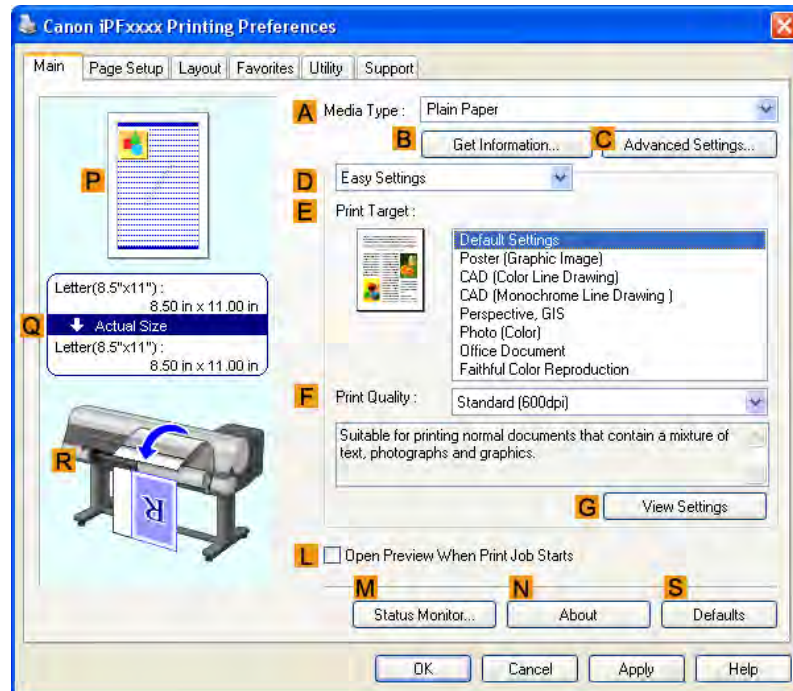

4. In the **A Media Type** list, select the type of paper that is loaded.

5. Click **D Advanced Settings** to switch the print mode.

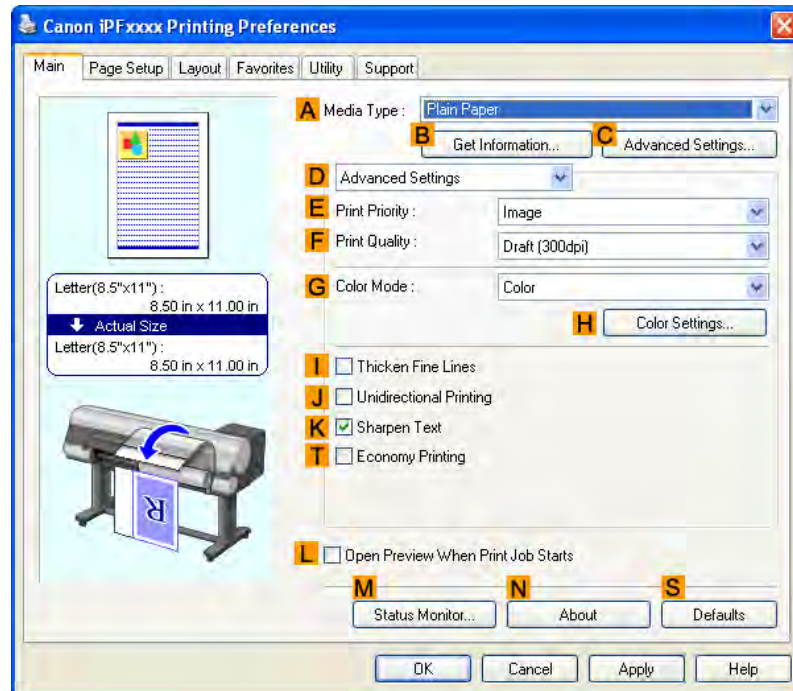

6. Click **Line Drawing/Text** in the **E Print Priority** list.

7. Click **High (1200dpi)** in the **F Print Quality** list.



Note

- Options displayed in the **F Print Quality** list vary depending on the paper type.

8. Click **Color (CAD)** in the **G Color Mode** list.

9. To adjust the color, click **H Color Settings**.




Note

- For instructions on adjusting color, see "Adjusting the Color in the Printer Driver →P.46 "

10. Select the **K Sharpen Text** check box.



11. Click the **Page Setup** tab to display the **Page Setup** sheet.

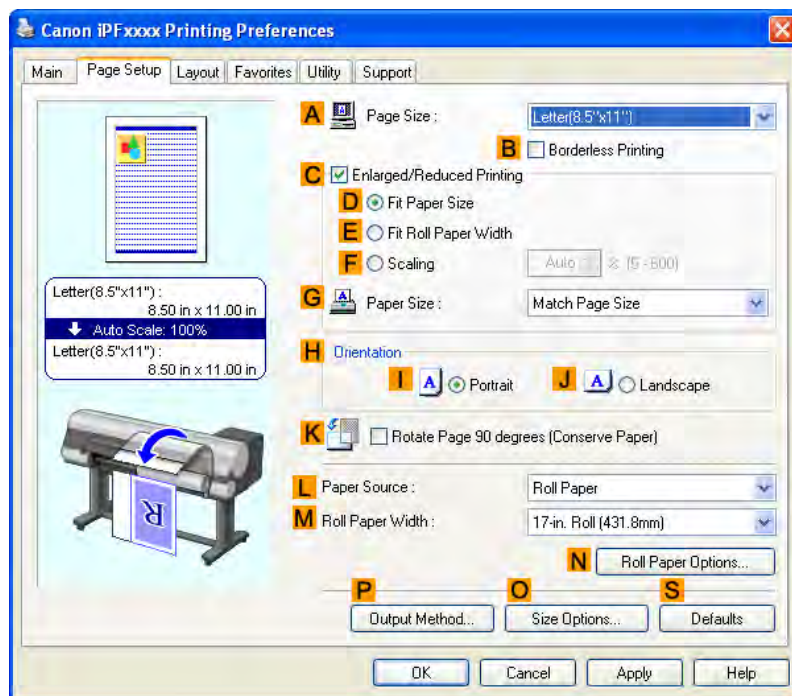

3

12. Confirm the settings of **A Page Size**, **L Paper Source**, and so on.

13. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Choosing the Document Type and Printing Conditions (Mac OS X)

You can specify your own print settings instead of using the **Print Target** presets. As an example, this topic describes how to print CAD drawings as clearly as possible, with sharp lines and text.

1. This sets the **B Format for** and **C Paper Size**.



### Note

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.




If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




2. Select the printer in the **A Printer** list.
3. Choose the original size in the **F Paper Size** list.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

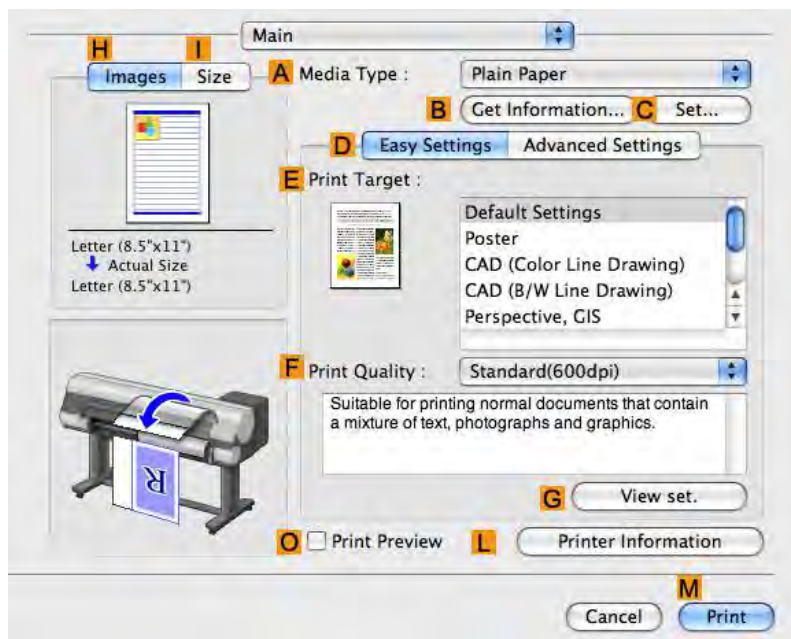

6. In the **A Media Type** list, select the type of paper that is loaded.

7. Click **D Advanced Settings** to switch the print mode.

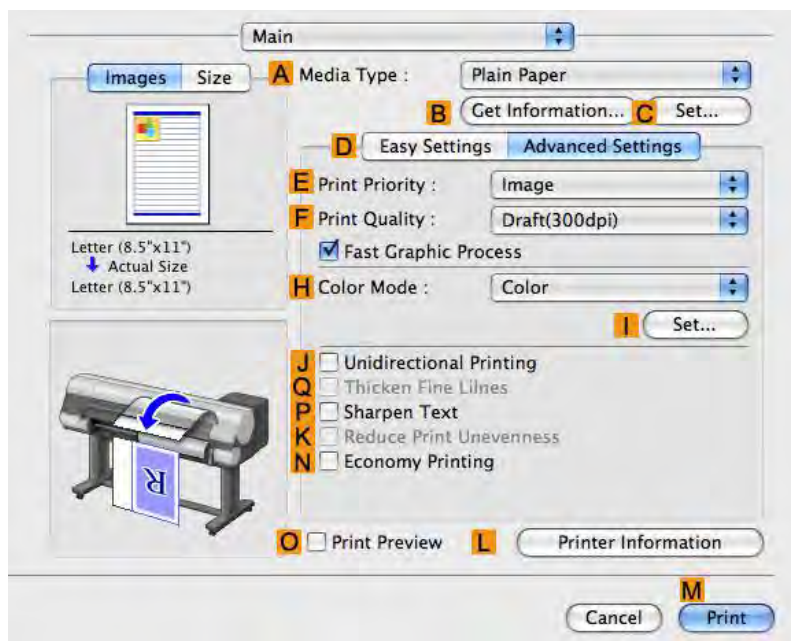

8. Click **Line Drawing** in the **E Print Priority** list.

9. Click **High(1200dpi)** in the **F Print Quality** list.

**Note**

- Options displayed in the **F Print Quality** list vary depending on the type of paper.


10. Click **Color (CAD)** in the **H Color Mode** list.

11. To adjust the color, click **I Set**.

**Note**

- For instructions on adjusting color, see "Adjusting the Color in the Printer Driver" →P.46 "

12. Access the **Page Setup** pane.

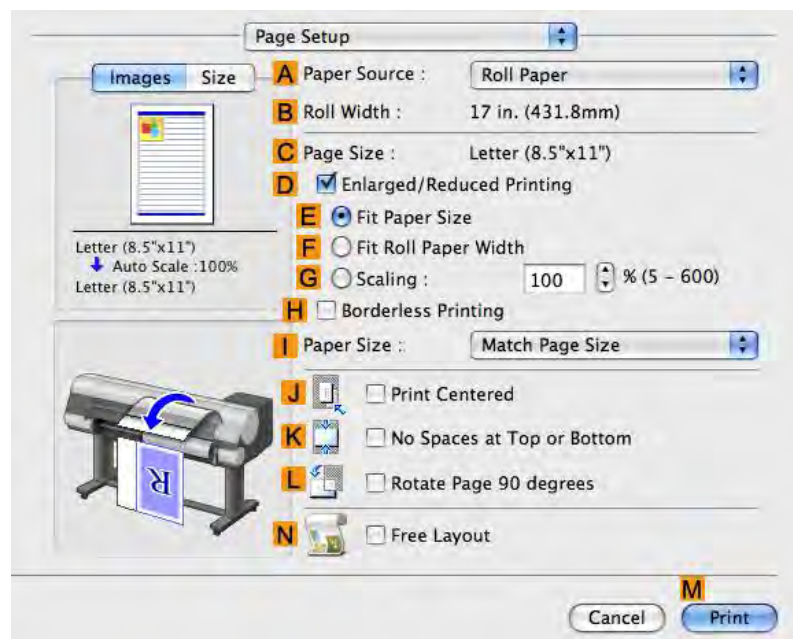

13. Confirm the settings of **A Paper Source** and **C Page Size**.

14. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X)" →P.429 "

## Choosing Paper for Printing

Choosing a Paper for Printing .....	64
Specifying Paper in the Printer Driver .....	64

### Choosing a Paper for Printing

Choosing the right paper for your particular printing application will give you the best printing results.

#### Media Type

The printer and printer driver offer print settings optimized for various paper characteristics.



#### Note

- For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper →P.617 ")
- The types of paper indicated in the printer driver and related software (as well as on the Control Panel ) are updated when you install the Media Configuration Tool from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. For information about the Media Configuration Tool, see the Media Configuration Tool →P.406 (Windows) or Media Configuration Tool →P.539 (Macintosh).
- An error message may be displayed on the printer Control Panel if the type of paper as specified in the printer driver does not match the type specified on the printer. Although you can print under these conditions, the printing results may not be suitable.

#### If the paper type is not listed for selection

If the type of paper loaded cannot be selected, try specifying glossy paper or proofing paper as a special paper (Special 1 to Special 5, in this order). BK ( Black Ink ) is used as the black ink. Try specifying other types of paper as Special 6 to Special 10. MBK ( Matte Black Ink ) is used as the black ink. Note that higher numbers in this setting enable more vivid colors but may also cause colors to run together.

For instructions on specifying the type of paper before printing, refer to the following topics.

- Selecting the Paper Type (Roll) →P.632
- Selecting the Paper Type (Sheet) →P.650

### Specifying Paper in the Printer Driver

If you replace the paper, complete the printer driver settings for the paper type and size.

For instructions on configuring paper settings in the printer driver, refer to the following topics, as appropriate for your computer and operating system.

- Specifying Paper in the Printer Driver (Windows) →P.204
- Specifying Paper in the Printer Driver (Mac OS X) →P.427



## Printing enlargements or reductions

Resizing Originals to Match the Paper Size .....	65
Resizing Originals to Match the Paper Size (Windows) .....	65
Resizing Originals to Match the Paper Size (Mac OS X) .....	67
Resizing Originals to Fit the Roll Width .....	71
Resizing Originals to Fit the Roll Width (Windows) .....	71
Resizing Originals to Fit the Roll Width (Mac OS X) .....	74
Resizing Originals by Entering a Scaling Value .....	77
Resizing Originals by Entering a Scaling Value (Windows) .....	78
Resizing Originals by Entering a Scaling Value (Mac OS X) .....	80

### Resizing Originals to Match the Paper Size


You can freely adjust the size of originals by enlarging or reducing them as desired.

#### Enlarged/Reduced Printing

Enlarge or reduce the original in the printer driver, as desired.

#### Fit Paper Size

Enlarge or reduce the original to match the size of the paper you are using.

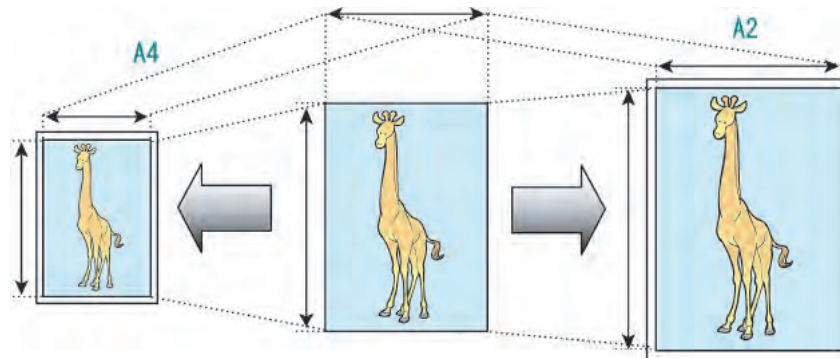

For instructions on resizing originals to match the paper size, refer to the following topics, as appropriate for your computer and operating system.

- Resizing Originals to Match the Paper Size (Windows) →P.65
- Resizing Originals to Match the Paper Size (Mac OS X) →P.67



#### Note

- For better printing results when enlarging photos from a digital camera in TIFF or JPEG format, use an image-editing application software such as Adobe Photoshop to specify an image resolution of 150 dpi or more at actual size.

### Resizing Originals to Match the Paper Size (Windows)


This topic describes how to enlarge originals before printing to match the paper size, based on the following example.

- Document: Any Type

- Page size: A4 (210.0×297.0mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.


3

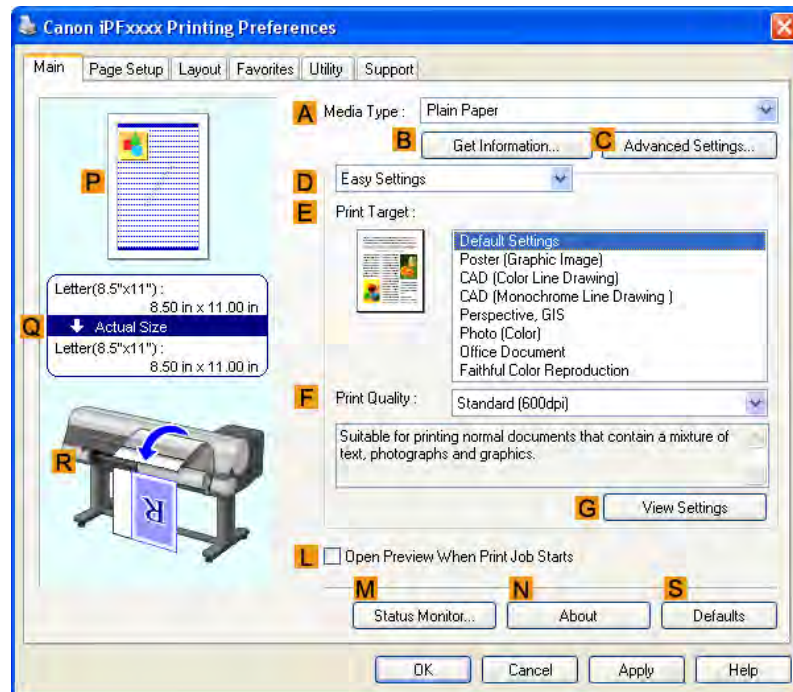

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. Select the printing application in the **E Print Target** list.



6. Click the **Page Setup** tab to display the **Page Setup** sheet.

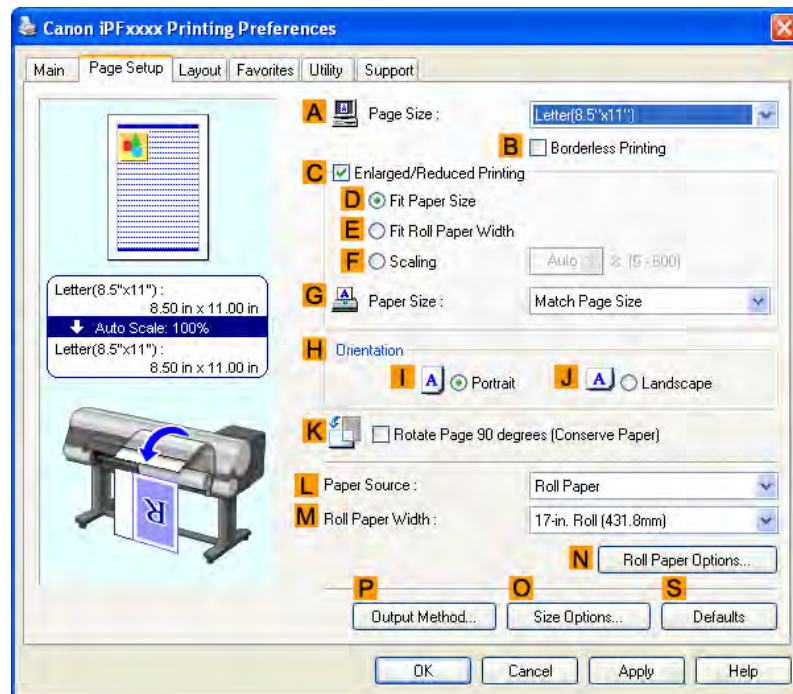

7. Select and click a roll paper in the **L Paper Source** list.
8. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.
9. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4**.
10. Select the **C Enlarged/Reduced Printing** check box.
11. Select the **D Fit Paper Size** check box.
12. Click **ISO A3** in the **G Paper Size** list.
13. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Resizing Originals to Match the Paper Size (Mac OS X)

This topic describes how to enlarge originals before printing to match the paper size, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper


- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. This sets the **B Format for** and **C Paper Size**.




**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

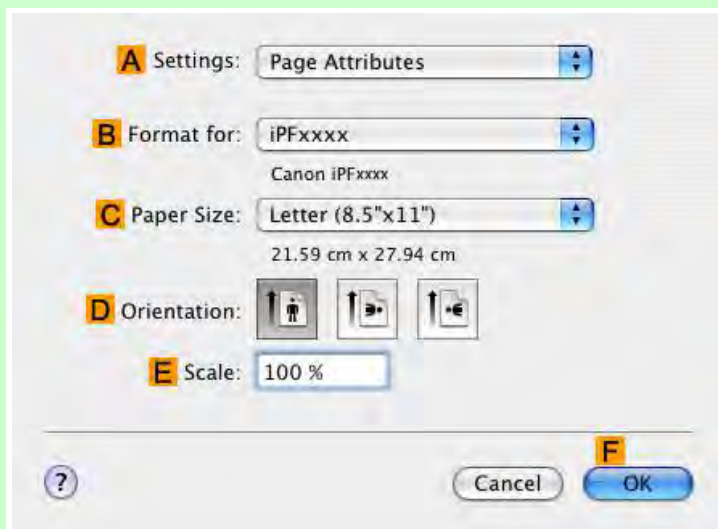

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

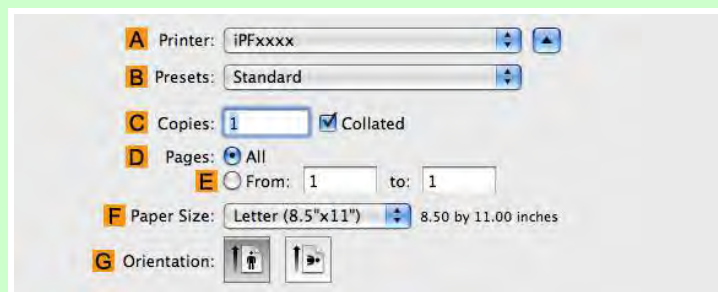


2. Select the printer in the **A Printer** list.

3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.

4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

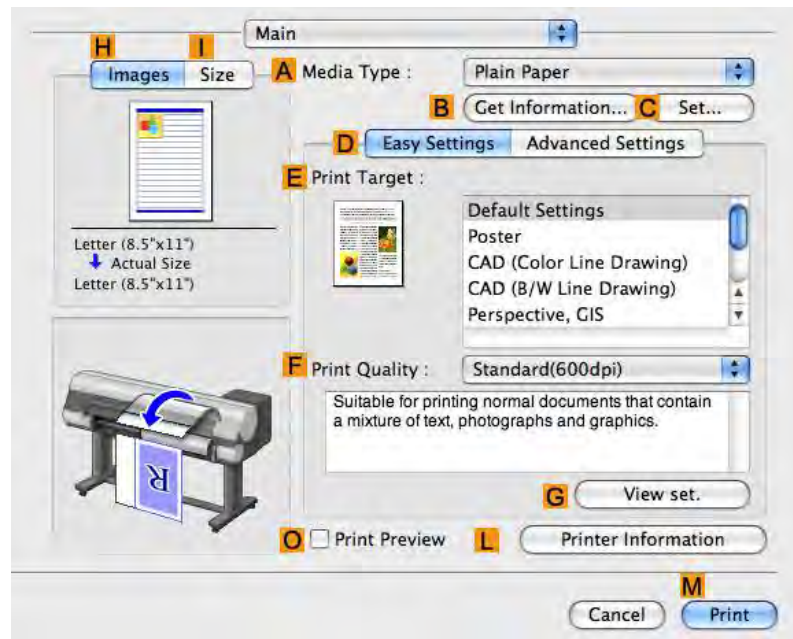


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Make your selection in the **E Print Target** list.


8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

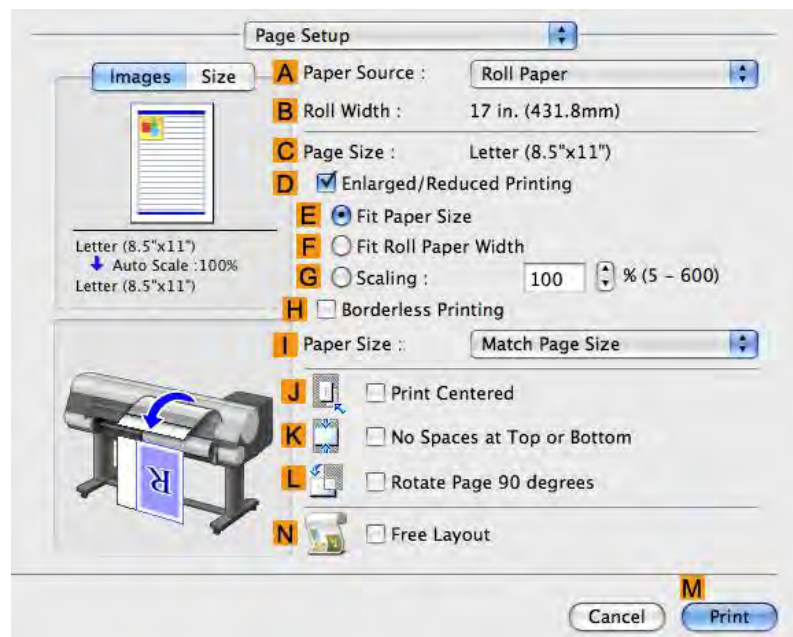


10. Select and click a roll paper in the **A Paper Source** list.


11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, ISO A2/A3 (420.0mm).

 **Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

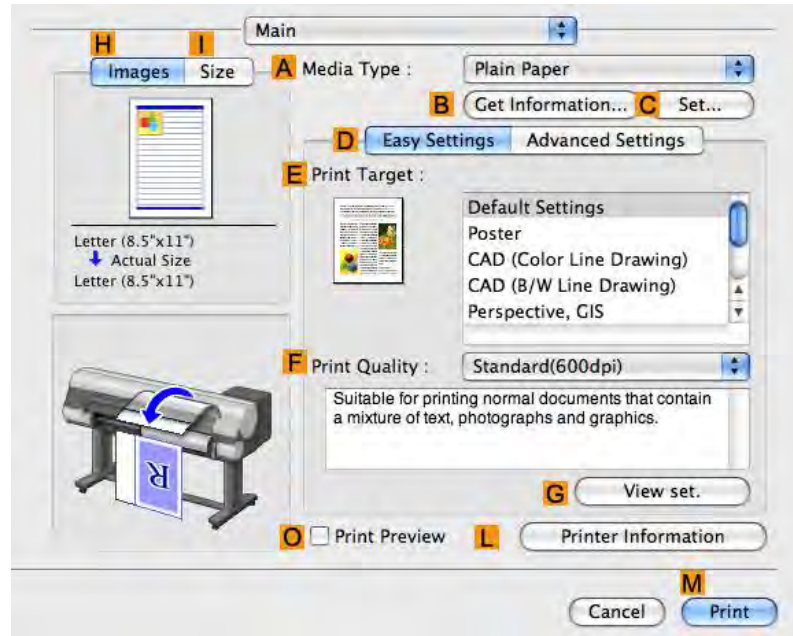

12. Make sure **C Page Size** on the **Page Setup** pane shows the original size as specified in **C Paper Size** in the **Page Attributes** dialog box—in this case, ISO A4.

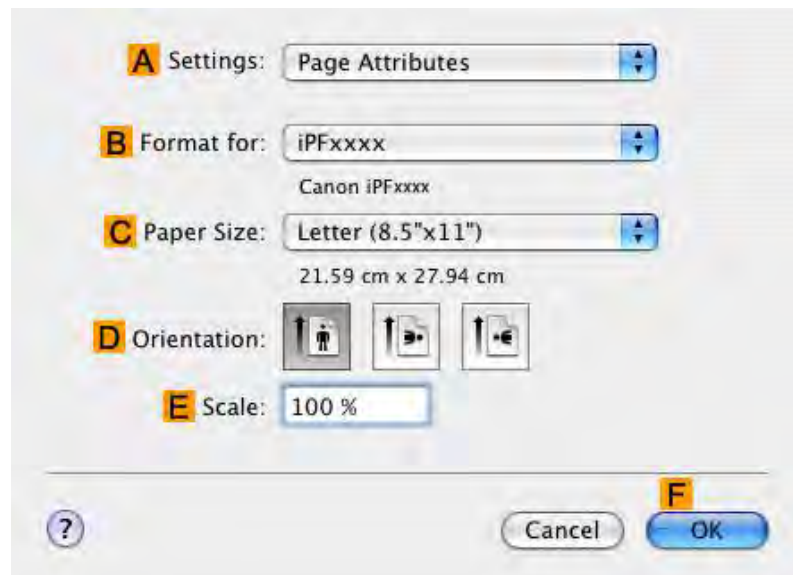

13. Select the **D Enlarged/Reduced Printing** check box.

14. Make sure **E Fit Paper Size** is selected.

3

70

15. Click **ISO A3** in the **Paper Size** list.

16. Confirm the print settings, and then click **Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Resizing Originals to Fit the Roll Width


You can freely adjust the size of originals by enlarging or reducing them as desired.

### Enlarged/Reduced Printing

Enlarge or reduce the original in the printer driver, as desired.

### Fit Roll Paper Width

Enlarge or reduce the original as a whole to match the roll paper width, as desired.

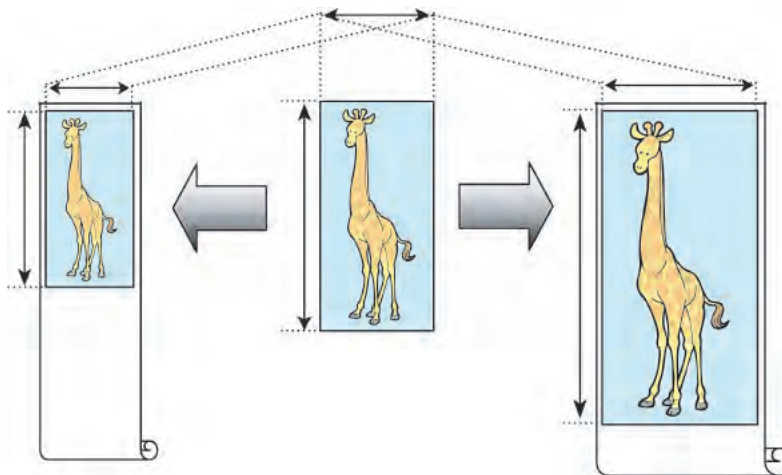

For instructions on resizing originals to match the roll paper width, refer to the following topics, as appropriate for your computer and operating system.

- Resizing Originals to Fit the Roll Width (Windows) →P.71
- Resizing Originals to Fit the Roll Width (Mac OS X) →P.74



**Note**

- For better printing results when enlarging photos from a digital camera in TIFF or JPEG format, use an image-editing application software such as Adobe Photoshop to specify an image resolution of 150 dpi or more at actual size.

## Resizing Originals to Fit the Roll Width (Windows)

This topic describes how to enlarge originals before printing to match the roll width, based on the following example.


- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)



- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: 16 inches (406.4 mm)

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.


3

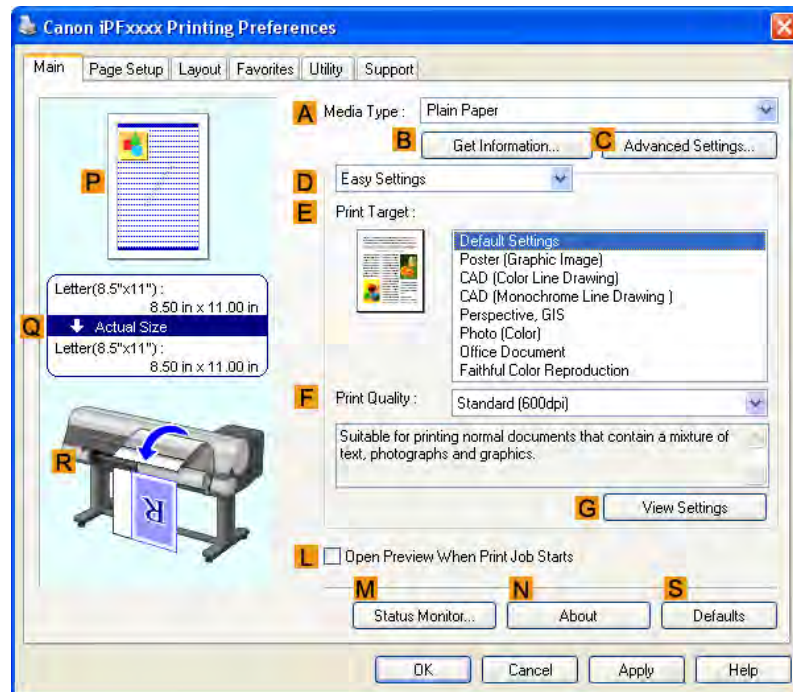

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. Select the printing application in the **E Print Target** list.

72

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

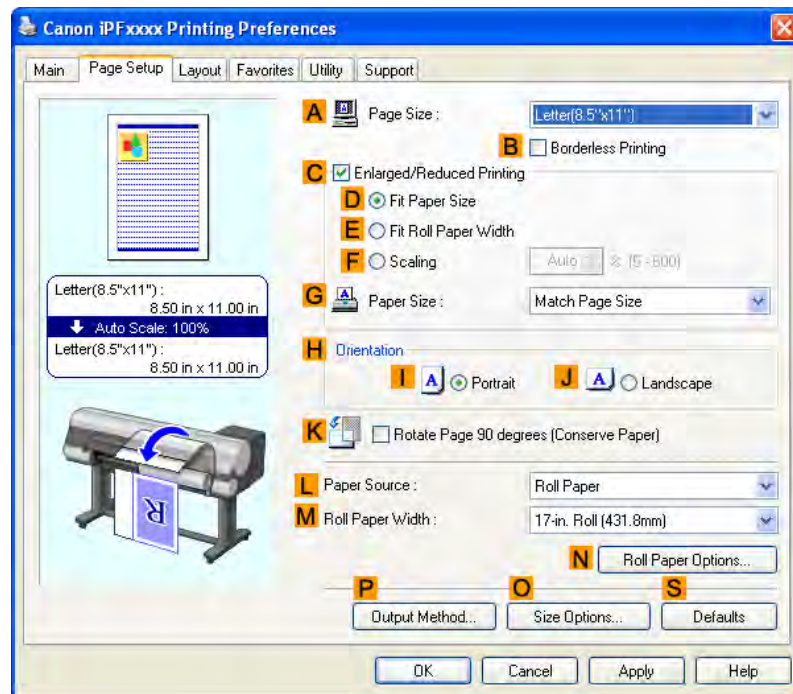

7. Select and click a roll paper in the **L Paper Source** list.
8. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4** or **Letter (8.5"x11")**.
9. Select the **C Enlarged/Reduced Printing** check box.




**Note**

- If the **C Enlarged/Reduced Printing** check box is not displayed on the **Page Setup** sheet, clear the **B Borderless Printing** check box.



3

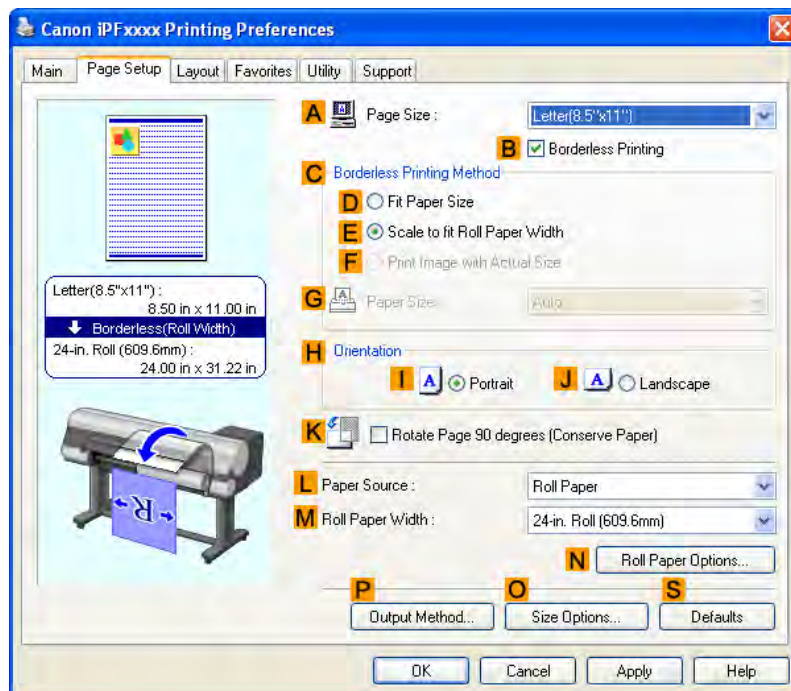

10. Click **E Fit Roll Paper Width**.



**Note**

- After you click **E Fit Roll Paper Width**, the **Information** dialog box is displayed. Select the width of the loaded roll in the **Roll Paper Width** list and click **OK**.
- Make sure the roll paper width you specify matches the width of the loaded roll.

11. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Resizing Originals to Fit the Roll Width (Mac OS X)

This topic describes how to enlarge originals before printing to match the roll width, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: 16 inches (406.4 mm)

74

1. This sets the **B Format for** and **C Paper Size**.

**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.




If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

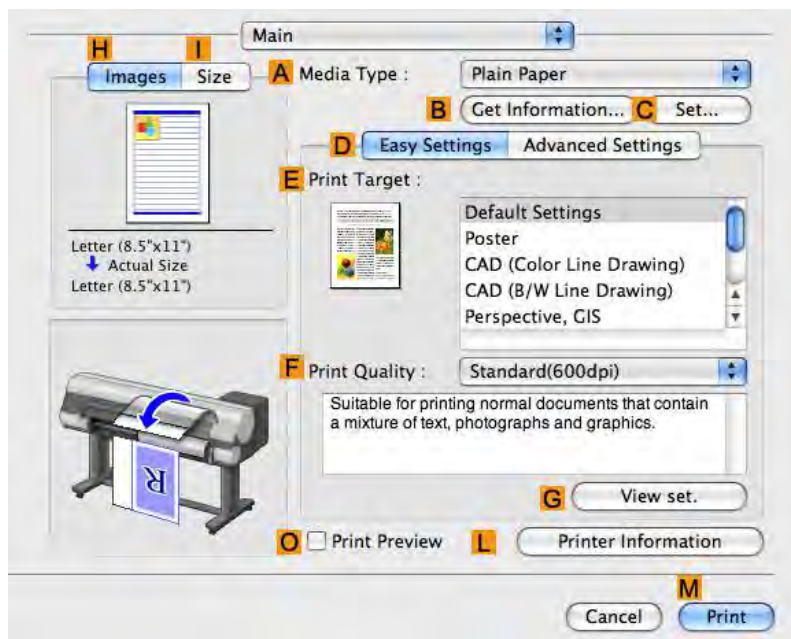


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

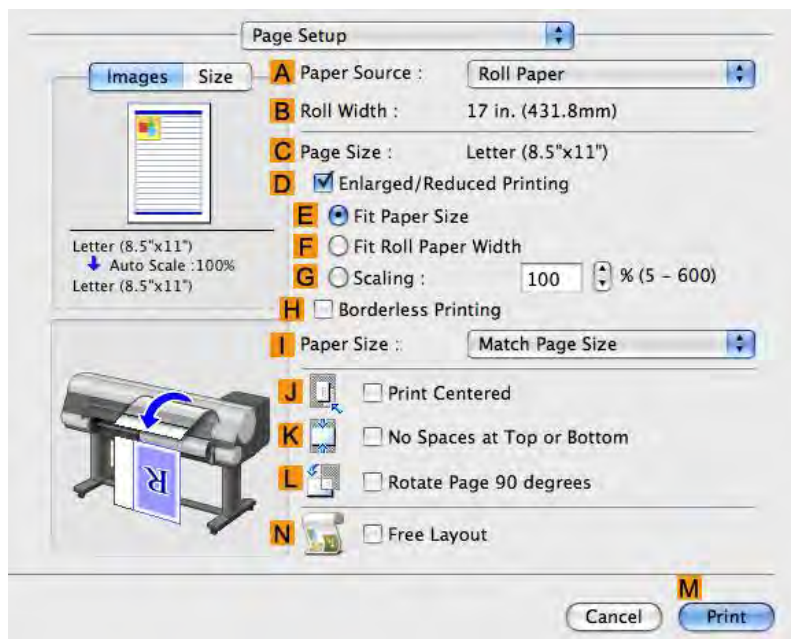


10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **16 in. (406.4mm)**.

**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

12. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

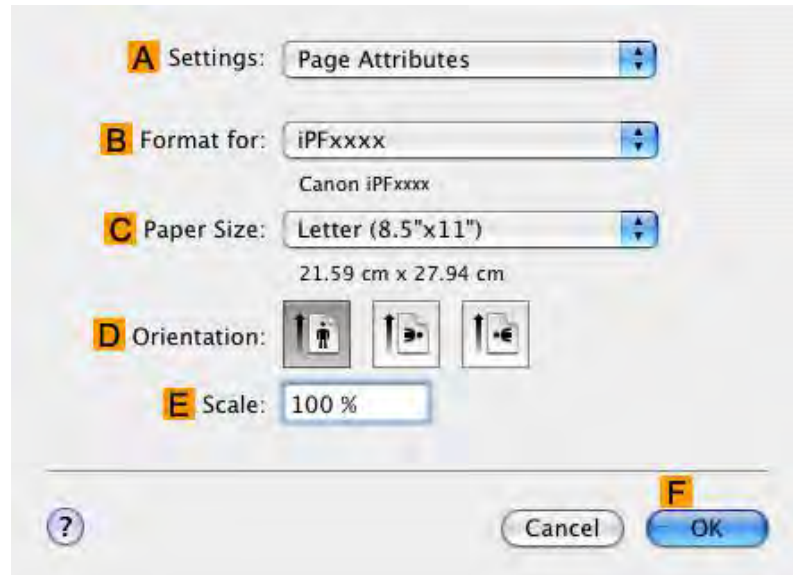

13. Select the **D Enlarged/Reduced Printing** check box.
14. Click **F Fit Roll Paper Width**.
15. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Resizing Originals by Entering a Scaling Value


You can freely adjust the size of originals by enlarging or reducing them as desired.

### Enlarged/Reduced Printing

Enlarge or reduce the original in the printer driver, as desired.

## Scaling

Enlarge or reduce originals by a particular amount, as desired.

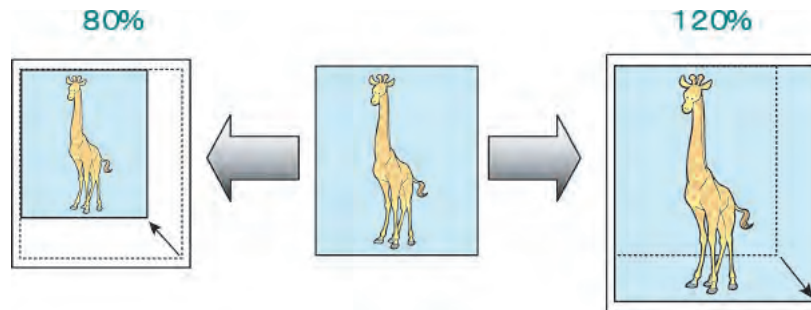

For instructions on entering a scaling value to resize originals, refer to the following topics, as appropriate for your computer and operating system.

- Resizing Originals by Entering a Scaling Value (Windows) →P.78
- Resizing Originals by Entering a Scaling Value (Mac OS X) →P.80



### Note

- For better printing results when enlarging photos from a digital camera in TIFF or JPEG format, use an image-editing application software such as Adobe Photoshop to specify an image resolution of 150 dpi or more at actual size.

## Resizing Originals by Entering a Scaling Value (Windows)

This topic describes how to enlarge originals before printing by entering a scaling value, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])




### Important

- In borderless printing, you cannot resize originals by entering a scaling value.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")




3. Make sure the **Main** sheet is displayed.

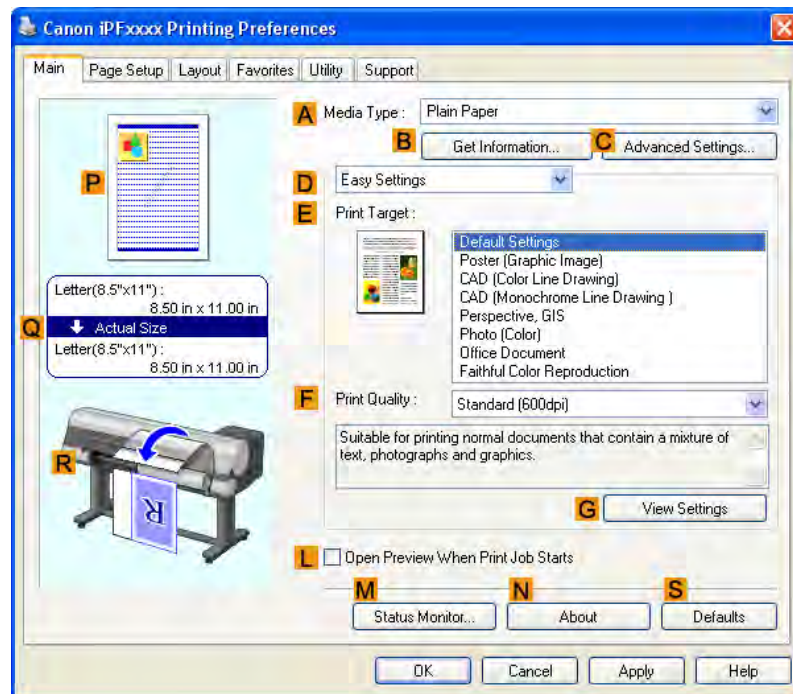

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

5. Select the printing application in the **E Print Target** list.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

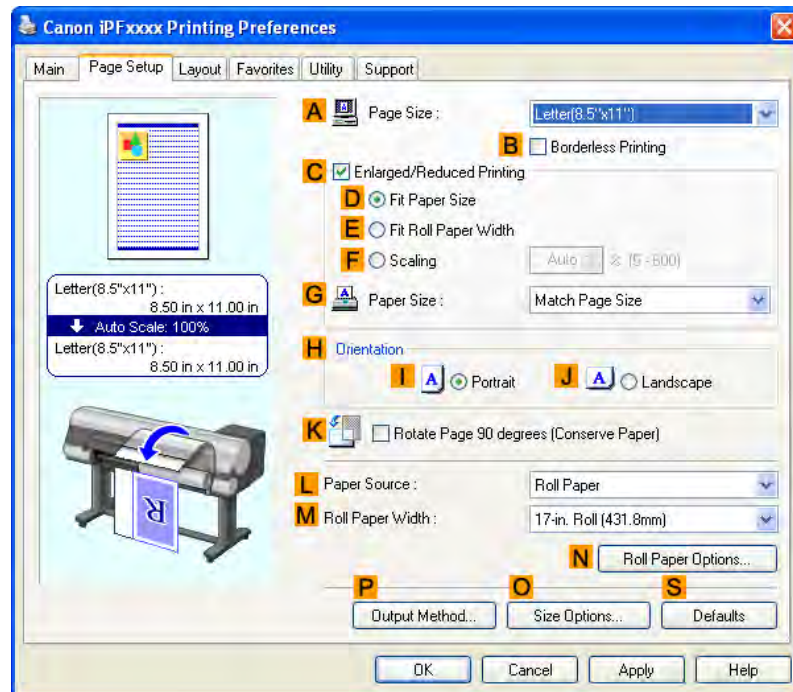


7. Select and click a roll paper in the **L Paper Source** list.
8. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.
9. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4**.
10. Select the **C Enlarged/Reduced Printing** check box.
11. Click **ISO A4** in the **G Paper Size** list.
12. Click **F Scaling** and enter **120**.



**Note**

- You can specify enlargement that exceeds the paper size, but in this case, the portions off the bottom and right edges of the paper will not be printed.
- If the original size after enlargement or reduction is smaller than the paper size, the original is printed in the upper-left corner. In this case, you can center originals by selecting **E Print Centered** on the **Layout** sheet.

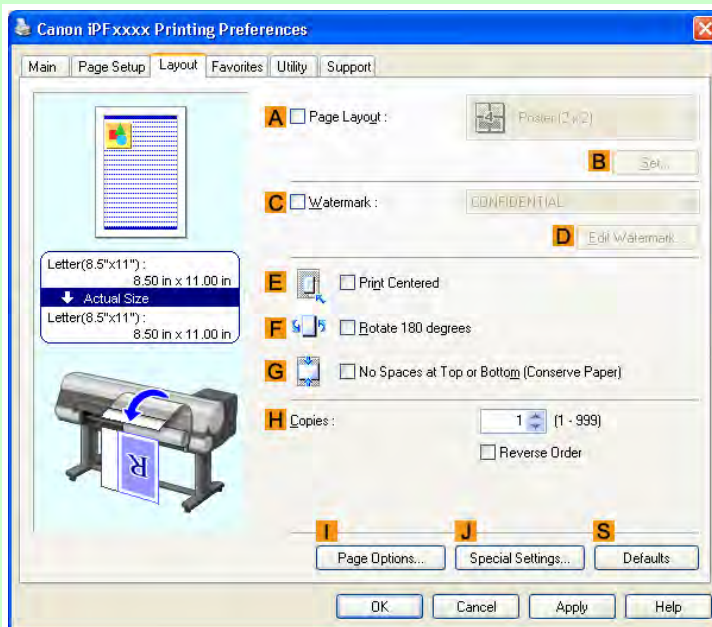

13. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Resizing Originals by Entering a Scaling Value (Mac OS X)

This topic describes how to enlarge originals before printing by entering a scaling value, based on the following example.

- Document: Any Type



- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. This sets the **B Format for** and **C Paper Size**.



**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.




If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

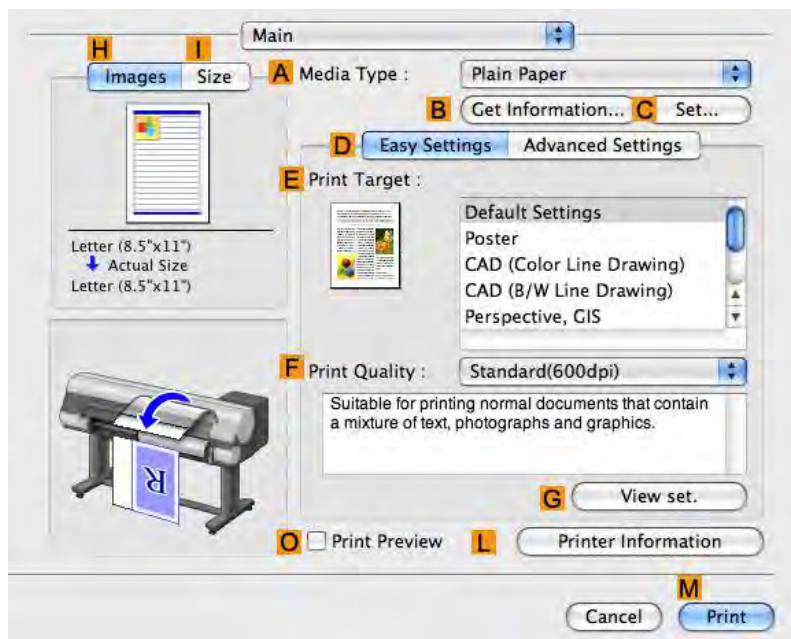


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

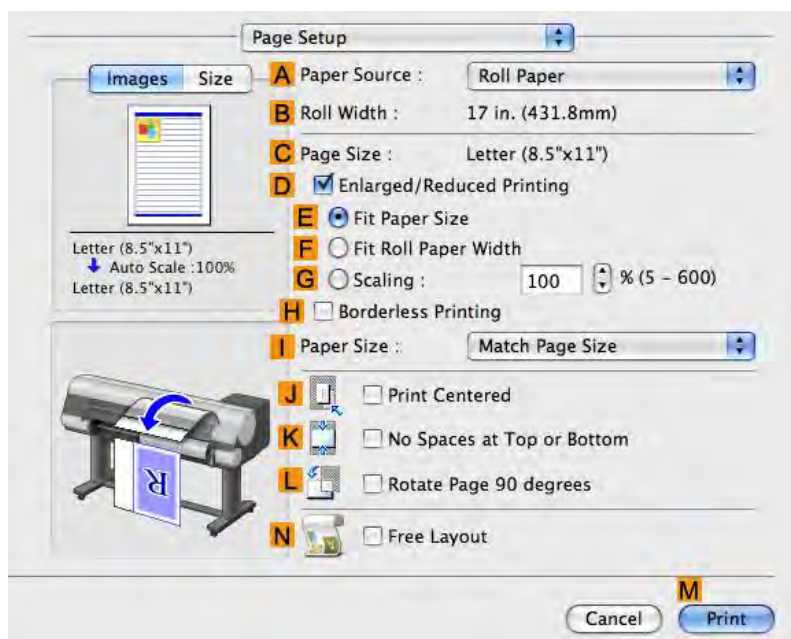


10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **ISO A2/A3 (420.0mm)**.


**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

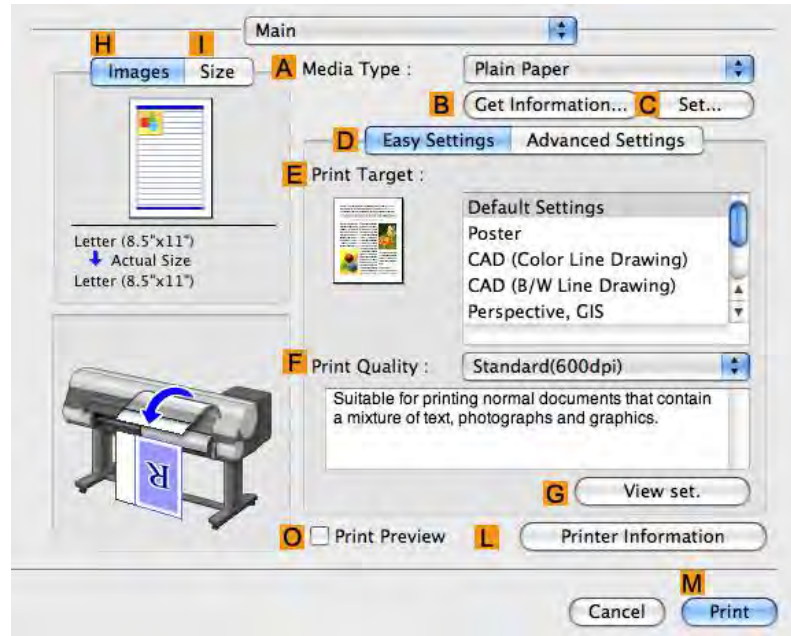

3

12. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

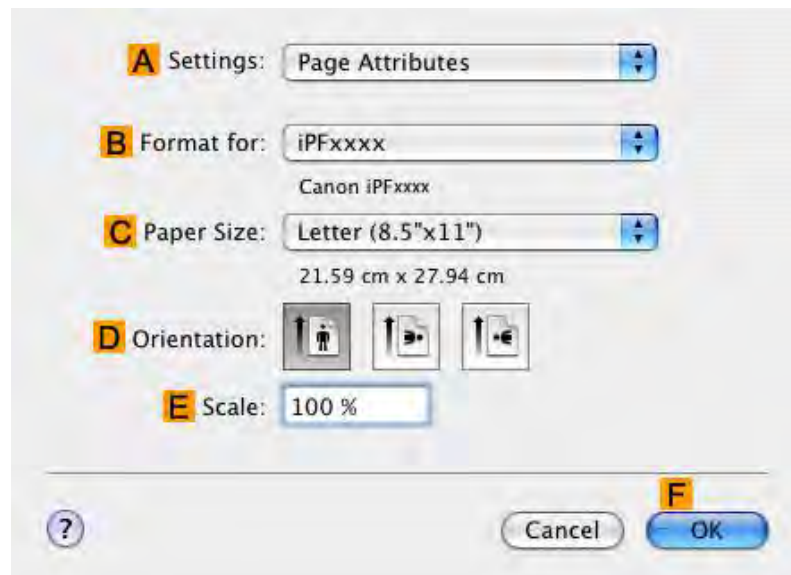

83

13. Select the **D Enlarged/Reduced Printing** check box.

**14.** Click **G Scaling** and enter **120**.



**Note**

- You can specify enlargement that exceeds the paper size, but in this case, the portion off the edge of the paper will not be printed.
- If the original size after enlargement or reduction is smaller than the paper size, the original is printed in the upper-left corner. In this case, you can center originals by selecting the **J Print Centered** check box.

**15.** Confirm the print settings, and then click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) **→P.429** "

## Printing at full size

Printing on Oversized Paper .....	85
Printing at Full Size (Windows) .....	86
Printing at Full Size (Mac OS X) .....	87
Borderless Printing at Actual Size .....	91
Borderless Printing at Actual Size (Windows) .....	92
Borderless Printing at Actual Size (Mac OS X) .....	95

## Printing on Oversized Paper

Except in borderless printing, the actual printing area corresponds to your selected paper size minus the space for a margin (See "Print Area →P.768 "). To print documents or images you prepare without a margin at actual size, use an oversized paper size.

For example, to print a A4-sized original without a margin at A4 size, print it on paper larger than A4 size and cut away the excess margin.




### Note

- If you prepare an original for printing without a margin and print it on paper of regular size, the image near the edge will not be printed.

## Oversize

The margin required by the printer is added around the **outside** of a regular paper size. For example, when printing a A4-sized original (210×297 mm), you have the following options.

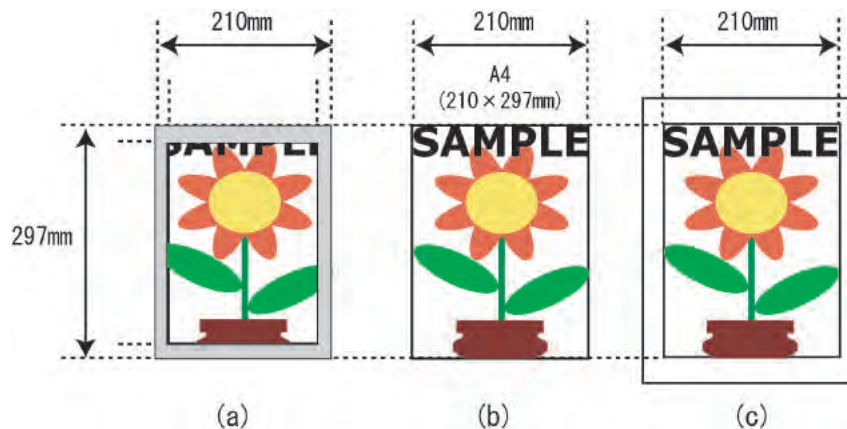

- (a) Regular paper size: Gray area not printed
- (b) Page Size
- (c) Oversized paper size: Print area matches the page size (b)



### Important

- When printing on oversize paper, load paper larger than the page size—a size that includes the margin required by the printer.
  - Sheets: Load paper that is at least 6 mm (0.24 in) wider and 26 mm (1 in) higher than the page size
  - Rolls: Load paper that is at least 6 mm (0.24 in) wider and 6 mm (0.24 in) higher than the page size





**Note**

- Paper larger than the maximum size supported by the printer cannot be used as paper for oversized printing. (See "Paper Sizes →P.620 ")
- To specify a non-standard paper size in oversized printing, register the paper size as a Custom Paper Size. Oversized printing is not available with **Custom Size**.(See "Printing on Non-Standard Paper Sizes →P.124 ")

For instructions on oversized printing, refer to the following topics, as appropriate for your computer and operating system.


- Printing at Full Size (Windows) →P.86
- Printing at Full Size (Mac OS X) →P.87

## Printing at Full Size (Windows)

This topic describes how to print at full size based on the following example. (Oversized Printing)


- Document: Any Type
- Page Size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box.(See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.

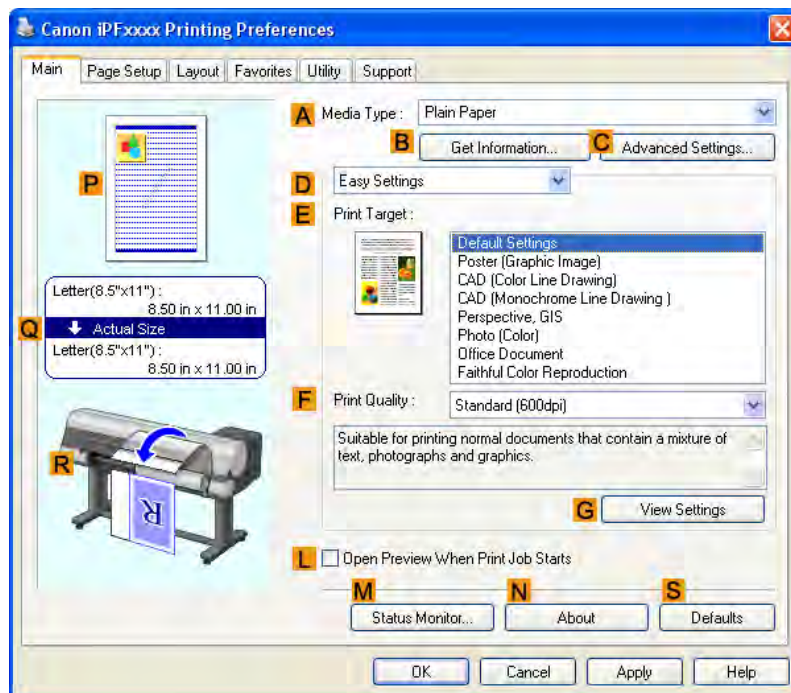



4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. Click the **Page Setup** tab to display the **Page Setup** sheet.

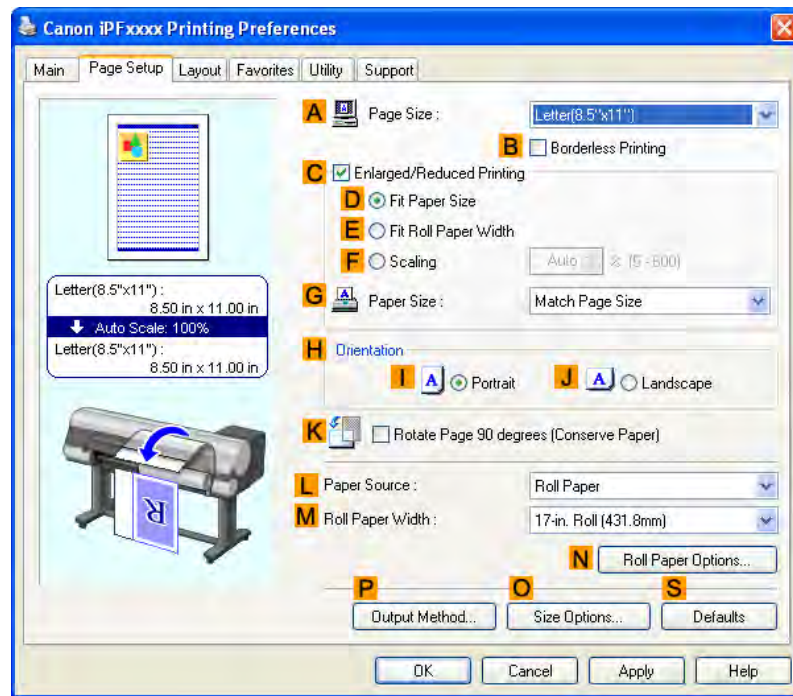

3

6. Click **O Size Options** to display the **Paper Size Options** dialog box.
7. In the **Paper Size Options** dialog box, select the **Oversize** check box in **Display Series**.
8. Click **OK** to close the **Paper Size Options** dialog box.
9. Click **Oversize - ISO A4** in the **A Page Size** list.
10. Select and click a roll paper in the **L Paper Source** list.
11. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.
12. Confirm the print settings and print as desired.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

87

## Printing at Full Size (Mac OS X)

This topic describes how to print at full size based on the following example. (Oversized Printing)

- Document: Any Type


- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. This sets the **B Format for** and **C Paper Size**.



**Note**

• The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

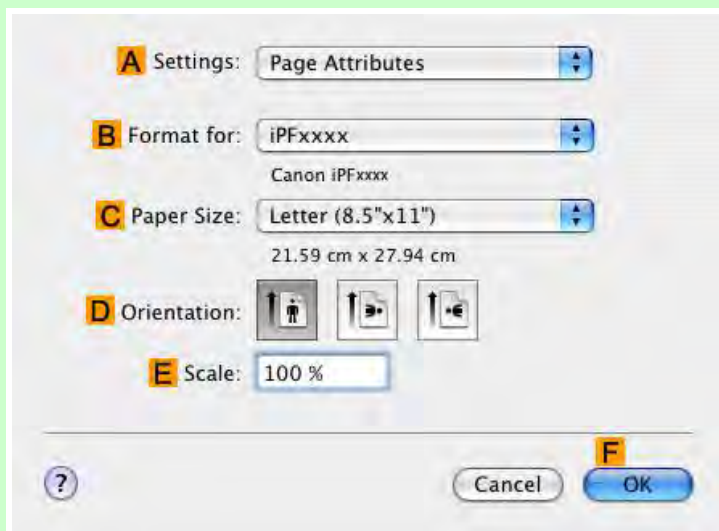

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




2. Select the printer in the **A Printer** list.

3. In **F Paper Size**, click the size of the original. In this case, click **ISO A4 - Oversize**.

4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

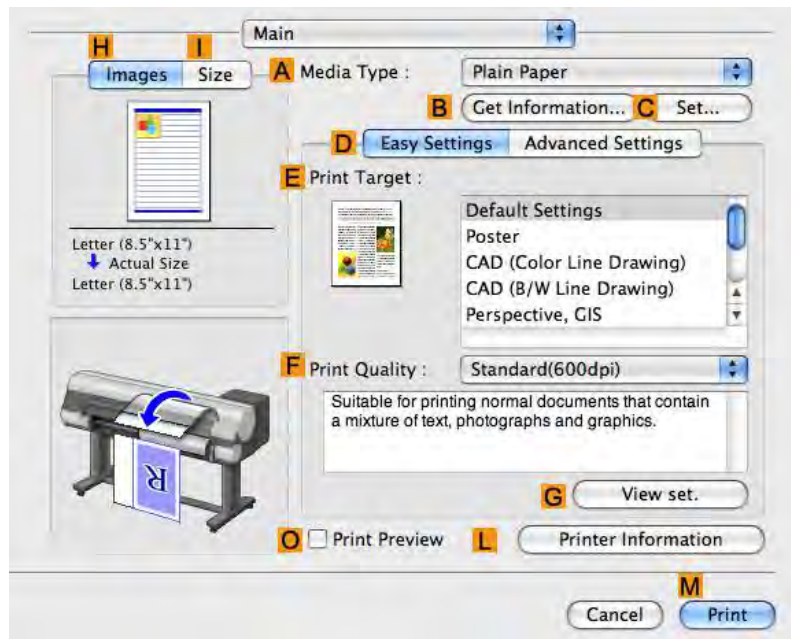


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

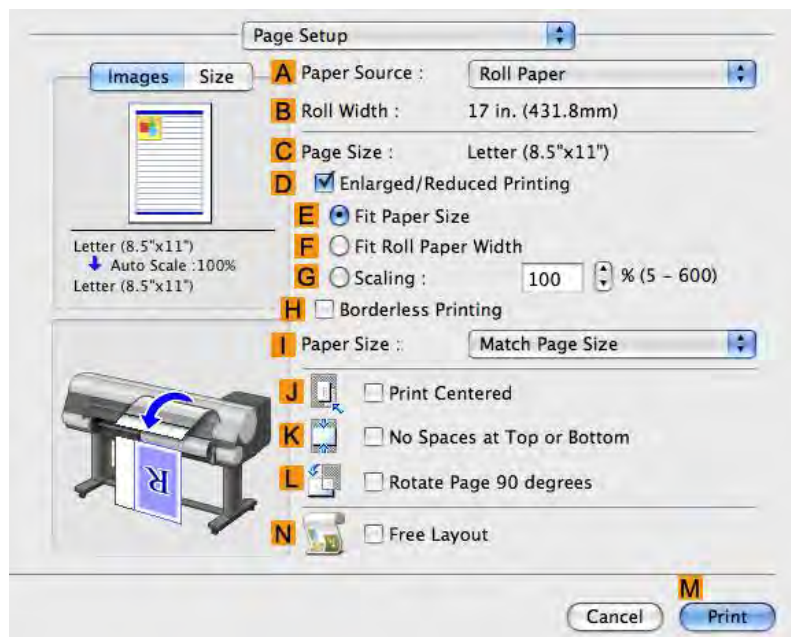


10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **ISO A2/A3 (420.0mm)**.




**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

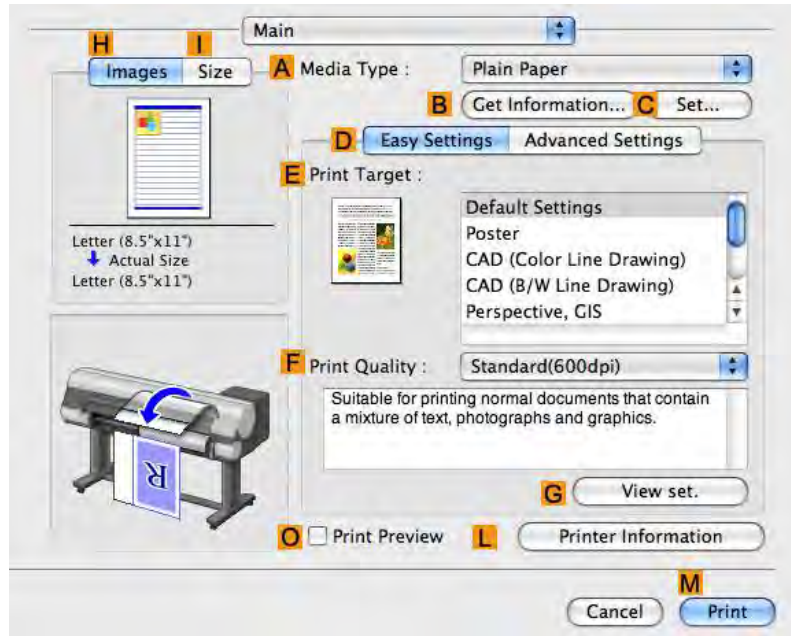

12. Make sure **C Page Size** shows the original size as specified in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4 - Oversize**.

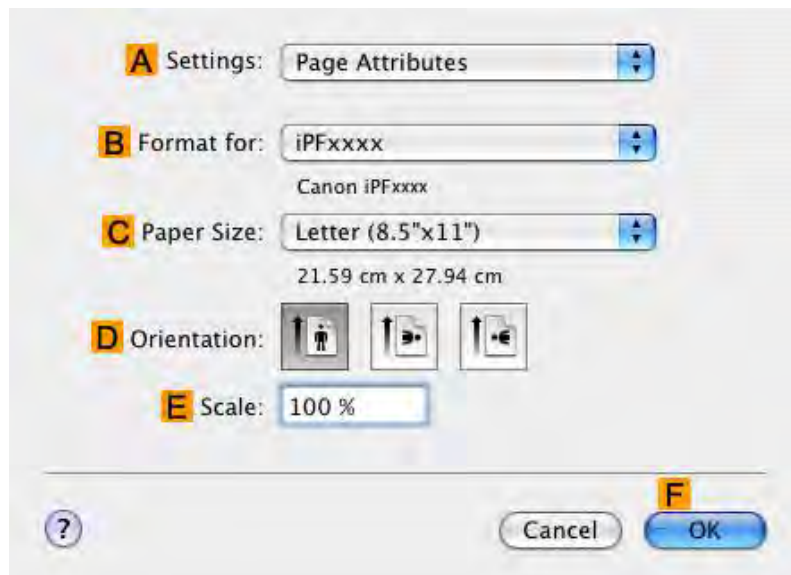

13. Confirm the print settings, and then click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Borderless Printing at Actual Size

Take advantage of borderless printing to print documents such as posters (made up mainly of photos or images) without a surrounding margin, or border.

### Borderless Printing

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.



#### Important

- Borderless printing is only available with rolls.
- Paper you can use for borderless printing is restricted to particular types of paper and rolls of particular widths. For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (See "Types of Paper →P.617 ")
- Paper incompatible with the printer's auto cut function can be printed without borders on the left and right sides only.
- These features cannot be used in combination with borderless printing: special page layouts, centering originals, and printing cut lines on rolls.
- If **Fit Paper Size** or **Print Image with Actual Size** (Windows only) is selected when performing borderless printing, **Rotate Page 90 degrees (Conserve Paper)** cannot be selected.
- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the edges. If you require higher image quality, specify **No** in **Auto Cut** in the printer driver. In this case, the paper can be printed without borders on the left and right sides only. After ejecting and cutting the printed document, use scissors to cut away the top and bottom edges.
- By factory default, the ink drying time is disabled for all paper. When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is cut, depending on frequency of use. In this case, follow these steps to change the ink drying time.
  1. On the **Main** sheet of the printer driver, click **Settings** in **Media Type**.
  2. Select the ink drying time in the **Between Pages** list of **Drying Time**.
- Before borderless printing, make sure the blue Switch on the platen is set toward the ● side. (See "Setting the Blue Switch on the Platen." →P.872)


### Borderless Printing Method

Choose the method of borderless printing that suits the original, as desired.



## Print Image with Actual Size

Prints originals at actual size, without enlarging or reducing them. Originals must be prepared in a size that exceeds the dimensions of the paper by 3 mm (0.12 in) on each side.

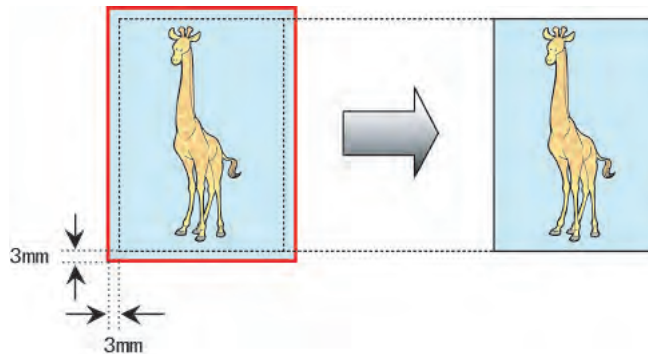

### Note

- Not all page sizes are available.
- Even if you prepare originals of the same size as the paper size, the originals are automatically enlarged when you print borderlessly in combination with resizing originals to match the paper size. This may affect image quality. When image quality is most important, make the original 3 mm longer on each side than the paper size so that the image can be printed at actual size in borderless printing.

For instructions on borderless printing of photos and images at actual size, refer to the following topics, as appropriate for your computer and operating system.

- Borderless Printing at Actual Size (Windows) →P.92
- Borderless Printing at Actual Size (Mac OS X) →P.95

## Borderless Printing at Actual Size (Windows)

This topic describes how to print borderlessly at actual size based on the following example.

- Document: Any type
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll
- Paper type: Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

1. Create the original in the source application 3 mm (0.12 in) larger on each side than 254.0×304.8 mm (10 × 12 in)—that is, 260.0×310.8 mm (10.2 × 12.2 in)




### Note

- If you can specify the margin, as in Microsoft Word, set the margin at 0 mm. For instructions on specifying the margin, refer to the software documentation.
- The extra 3 mm (0.12 in) on each side will not be printed. Create the original so that it fits inside the paper area to be printed on.

2. Choose **Print** in the application menu.




3. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
4. Make sure the **Main** sheet is displayed.

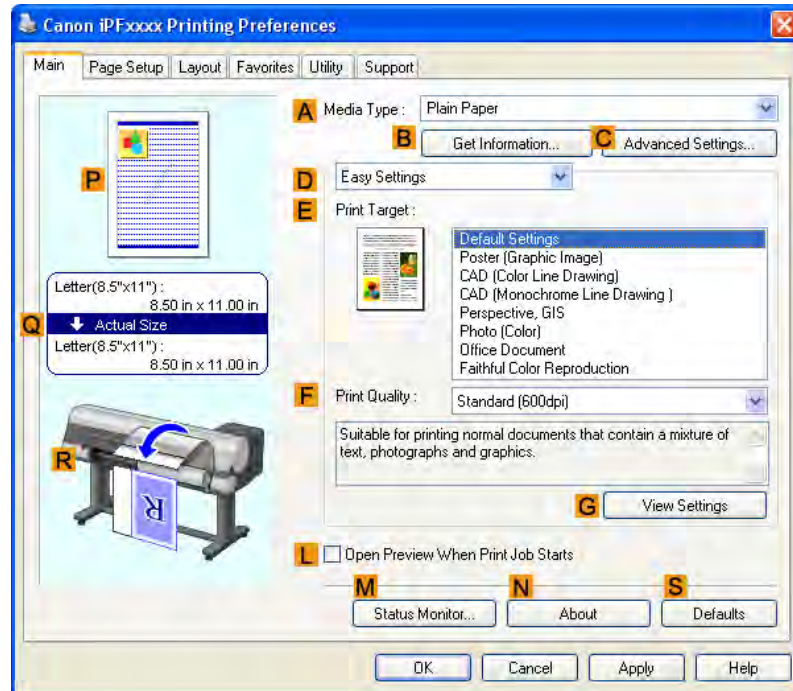

5. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Heavyweight Coated Paper.
6. Select the print target in the **E Print Target** list.


7. Click the **Page Setup** tab to display the **Page Setup** sheet.

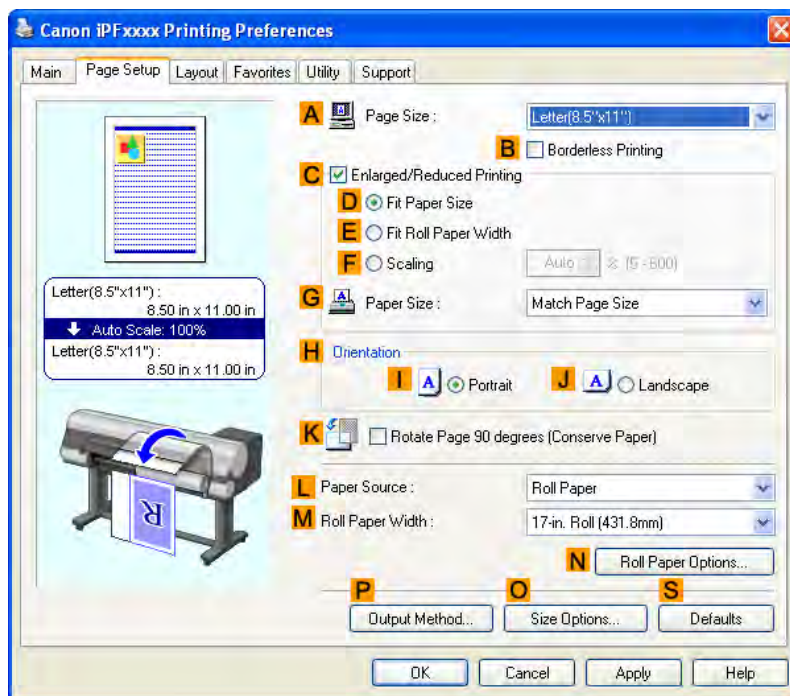

8. In the **A Page Size** list, click the size of the original as specified in the source application. In this case, click **10"x12"**.

9. Select and click a roll paper in the **L Paper Source** list.

10. Select the **B Borderless Printing** check box to display the **Information** dialog box.

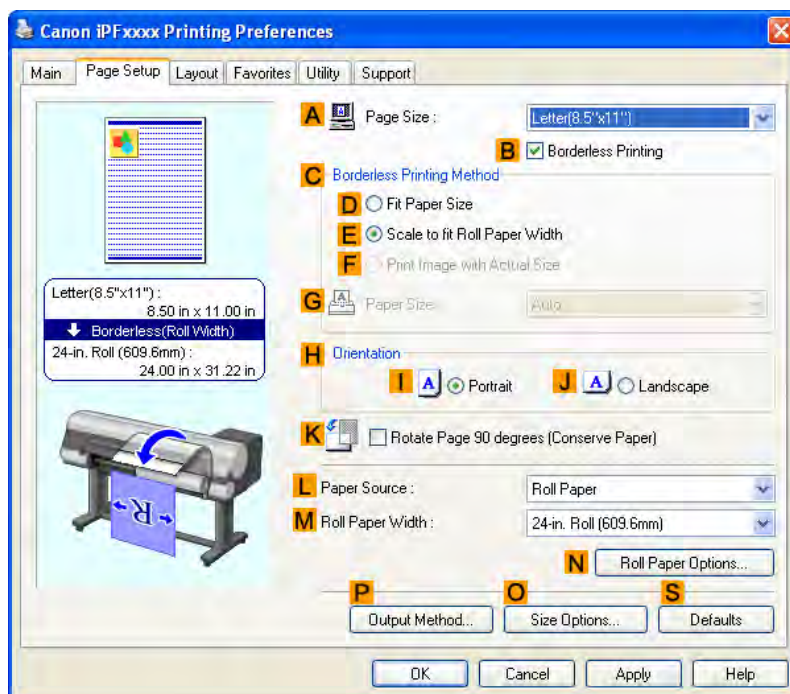

11. Select the width of the loaded roll in the **Roll Paper Width** list—in this case, click **10-in. Roll (254.0mm)**.
12. Click **OK** to close the **Information** dialog box.
13. In **C Borderless Printing Method**, click **F Print Image with Actual Size**.
14. Confirm the print settings and print as desired.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Borderless Printing at Actual Size (Mac OS X)

This topic describes how to print borderlessly at actual size based on the following example.


- Document: Any Type
- Page size: 10 × 12 inches (254.0×304.8 mm)—Borderless
- Paper: Roll paper
- Paper type: Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

1. This sets the **B Format for** and **C Paper Size**.



**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

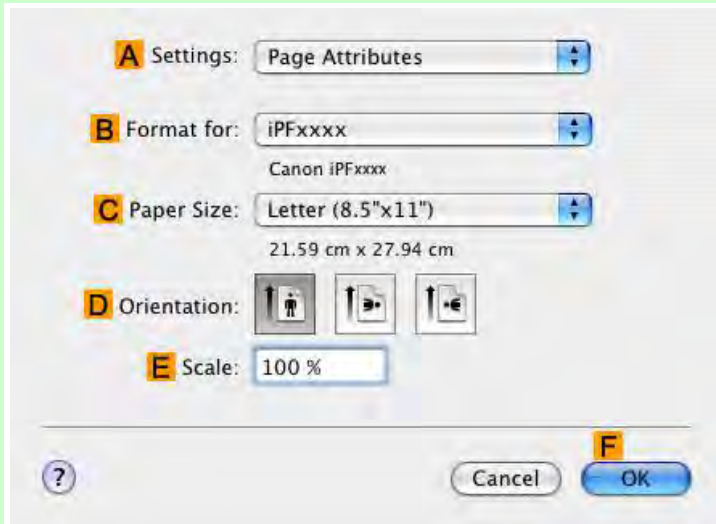

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, choose a paper size supported for borderless printing. Here, click **10"x12" - Borderless**.




**Note**

- Paper sizes supported for borderless printing are indicated by **—Borderless**.

4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

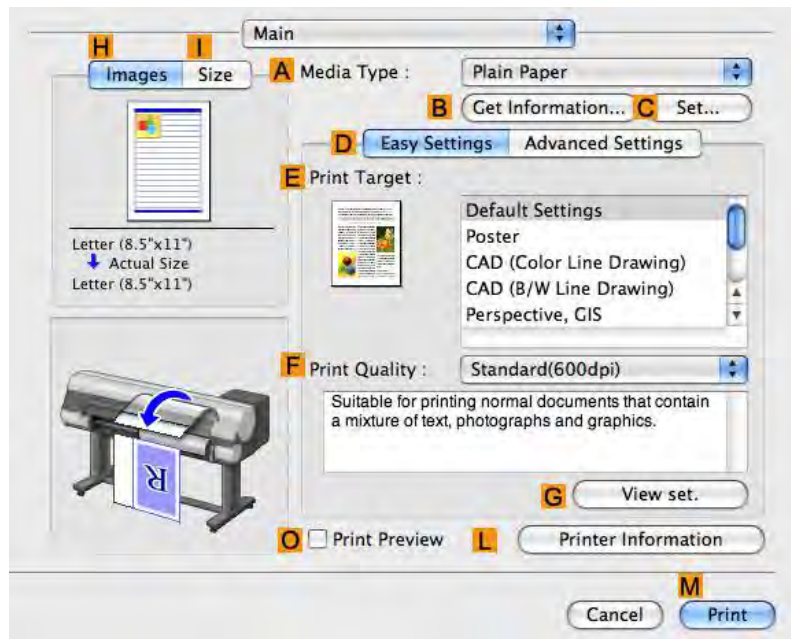


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Heavyweight Coated Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

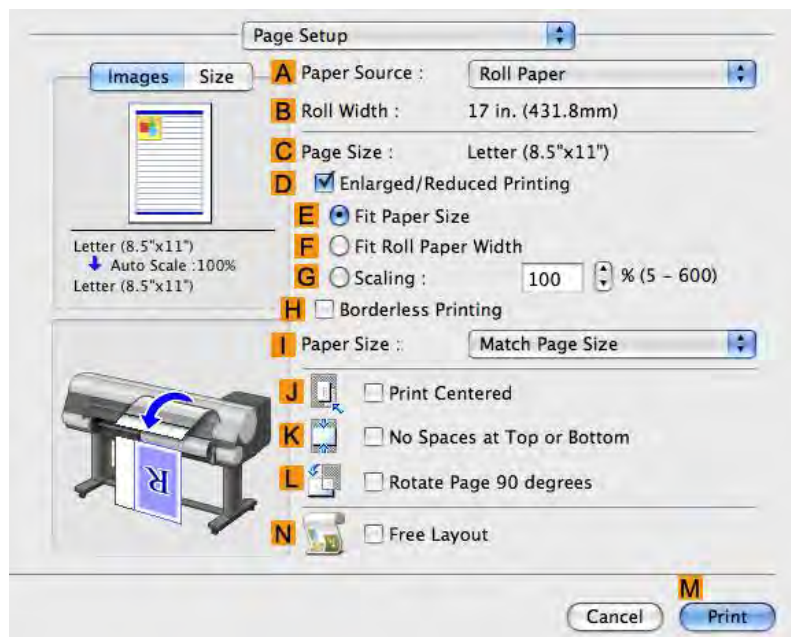

10. Select and click a roll paper in the **A Paper Source** list.




- Confirm that the roll paper width matches the paper size.  
Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **10 in. (254.0mm)**.




**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

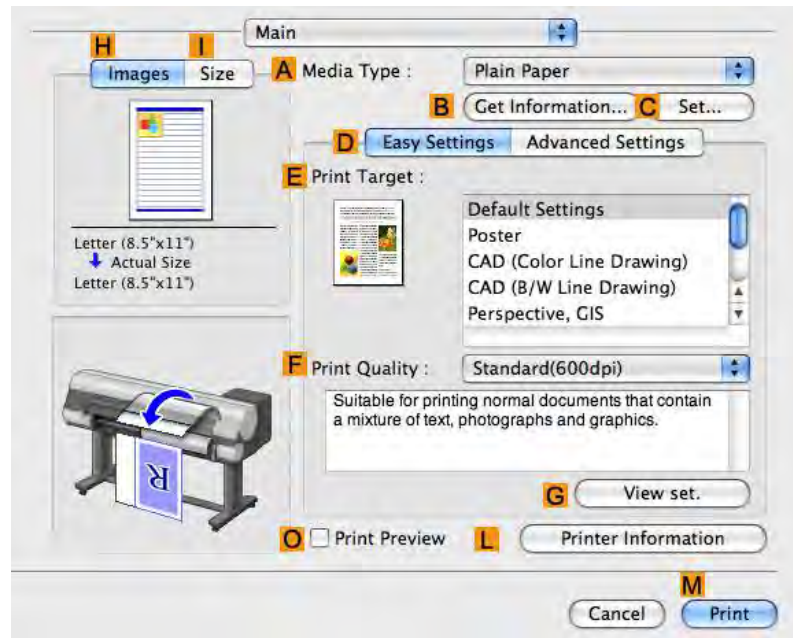

- Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **10"x12" - Borderless**.

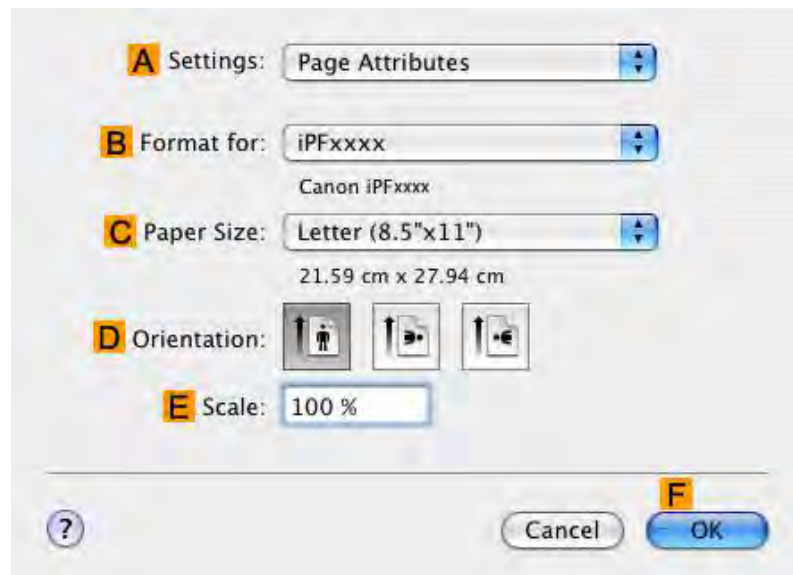



**13.** Confirm the print settings, and then click **M Print** to start printing.



Note

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Borderless Printing

Borderless Printing on Paper of Equivalent Size .....	100
Borderless Printing by Resizing Originals to Match the Paper Size (Windows) .....	101
Borderless Printing by Resizing Originals to Match the Paper Size (Mac OS X) .....	103
Borderless Printing by Resizing Originals to Fit the Roll Width .....	107
Borderless Printing by Resizing Originals to Fit the Roll Width (Windows) .....	108
Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS X) .....	110

### Borderless Printing on Paper of Equivalent Size

Take advantage of borderless printing to print documents such as posters (made up mainly of photos or images) without a surrounding margin, or border.

#### Borderless Printing

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.



#### Important


- Borderless printing is only available with rolls.
- Paper you can use for borderless printing is restricted to particular types of paper and rolls of particular widths. For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (Refer to "Types of Paper →P.617 ")
- Paper incompatible with the printer's auto cut function can be printed without borders on the left and right sides only.
- These features cannot be used in combination with borderless printing: special page layouts, centering originals, and printing cut lines on rolls.
- If **Fit Paper Size** or **Print Image with Actual Size** (Windows only) is selected when performing borderless printing, **Rotate Page 90 degrees (Conserve Paper)** cannot be selected.
- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be slightly uneven at the edges. If you require higher image quality, specify **No** in **Auto Cut** in the printer driver. In this case, the paper can be printed without borders on the left and right sides only. Cut the printed document ejected from the printer, then use scissors to cut away the edges on the top and bottom.
- By factory default, the ink drying time is disabled for all paper. When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is cut, depending on frequency of use. In this case, follow these steps to change the ink drying time.
  1. On the **Main** sheet of the printer driver, click **Settings** in **Media Type**.
  2. Select the ink drying time in the **Between Pages** list of **Drying Time**.
- Before borderless printing, make sure the blue Switch on the platen is set toward the ● side. (See "Setting the Blue Switch on the Platen.") →P.872

### Borderless Printing Method

Choose the method of borderless printing that suits the original, as desired.

## Fit Paper Size

Enlarge or reduce the original to match the size of the paper you are using.

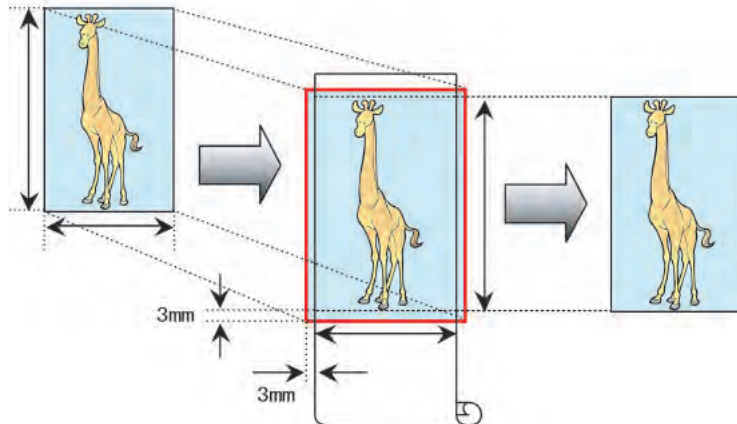

### Note

- The printer driver automatically enlarges originals 3 mm (0.12 in) past the dimensions of the paper on each side. The 3 mm portion beyond the edge on each side is not printed.

For instructions on borderless printing of photos, images, and other documents to match the paper size, refer to the following topics, as appropriate for your computer and operating system.

- Borderless Printing by Resizing Originals to Match the Paper Size (Windows) →P.101
- Borderless Printing by Resizing Originals to Match the Paper Size (Mac OS X) →P.103

## Borderless Printing by Resizing Originals to Match the Paper Size (Windows)

This topic describes how to enlarge originals before borderless printing to match the paper size, based on the following example.

- Document: Any type
- Page size: 10×12 inches (254.0×304.8 mm)
- Paper: Roll
- Paper type: Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

**1.** In the application, create an original that takes up the entire space of the paper size.




### Note

- If you can specify the margin, as in Microsoft Word, set the margin at 0 mm. For instructions on specifying the margin, refer to the software documentation.

**2.** Choose **Print** in the application menu.

**3.** Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")


4. Make sure the **Main** sheet is displayed.

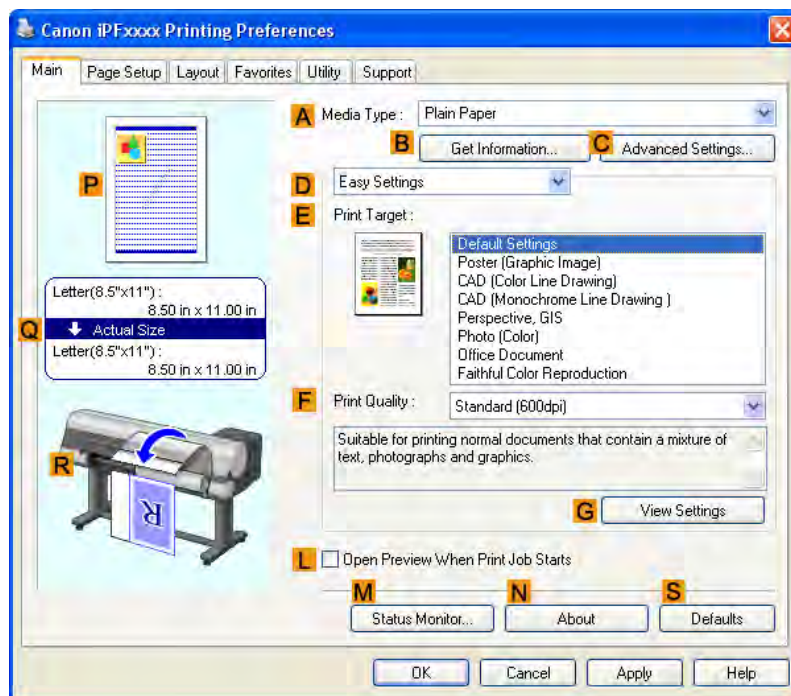


5. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Heavyweight Coated Paper.

6. Select the print target in the **E Print Target** list.

7. Click the **Page Setup** tab to display the **Page Setup** sheet.

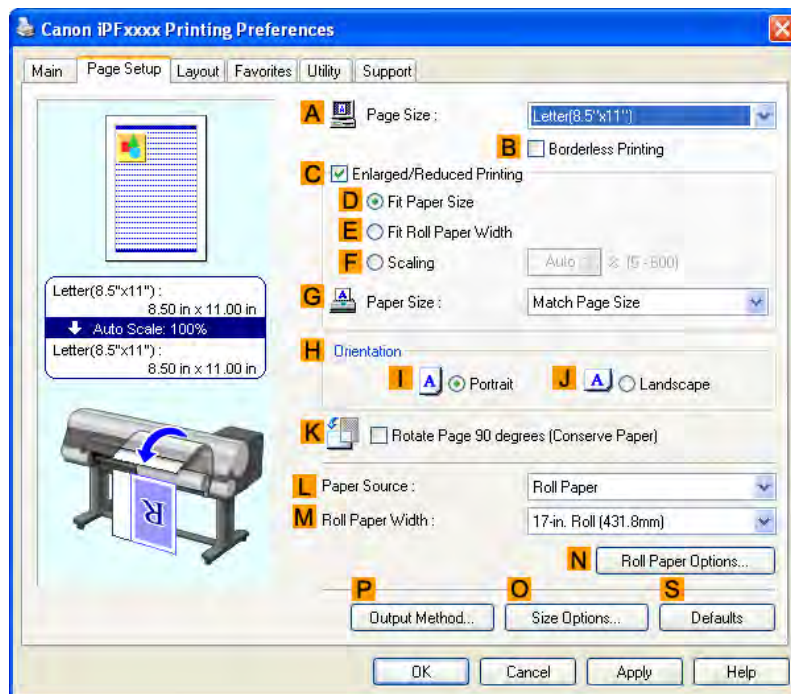

8. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **10"x12"**.
9. Select and click a roll paper in the **L Paper Source** list.
10. Select the **B Borderless Printing** check box to display the **Information** dialog box.

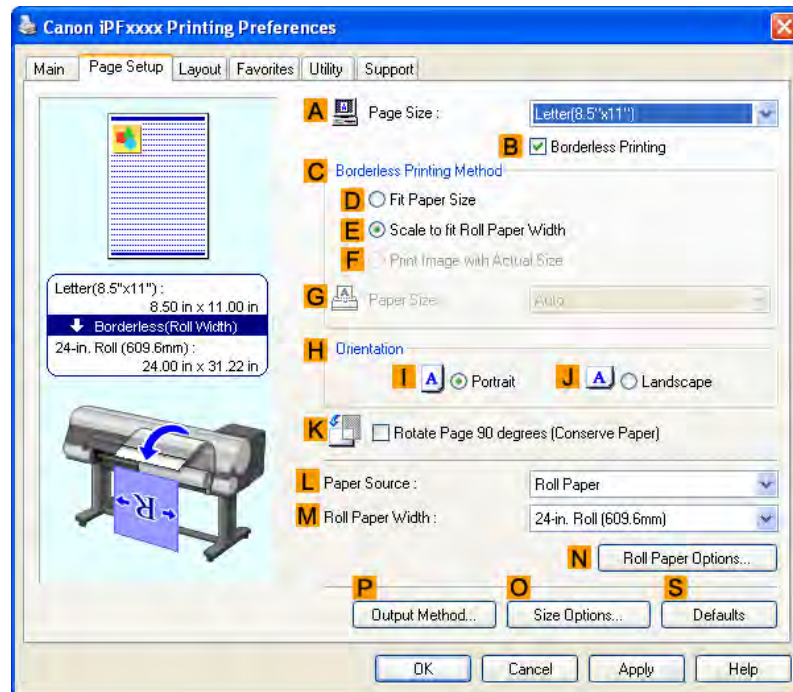

11. Select the width of the loaded roll in the **Roll Paper Width** list—in this case, click **10-in. Roll (254.0mm)**.
12. Click **OK** to close the **Information** dialog box.
13. In **C Borderless Printing Method**, click **D Fit Paper Size**.
14. Click **Match Page Size** in the **G Paper Size** list.
15. Confirm the print settings and print as desired.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Borderless Printing by Resizing Originals to Match the Paper Size (Mac OS X)

This topic describes how to enlarge originals before borderless printing to match the paper size, based on the following example.

- Document: Any Type
- Page size: 10×12 inches (254.0×304.8 mm)

- Paper: Roll paper
- Paper type: Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

1. This sets the **B Format for** and **C Paper Size**.



**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.



If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.

3. In the **F Paper Size** list, click the size of the original. In this case, click **10"x12"**.




**Note**

- All sizes are available in borderless printing if you resize originals to match the paper size.

4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.



5. Access the **Main** pane.

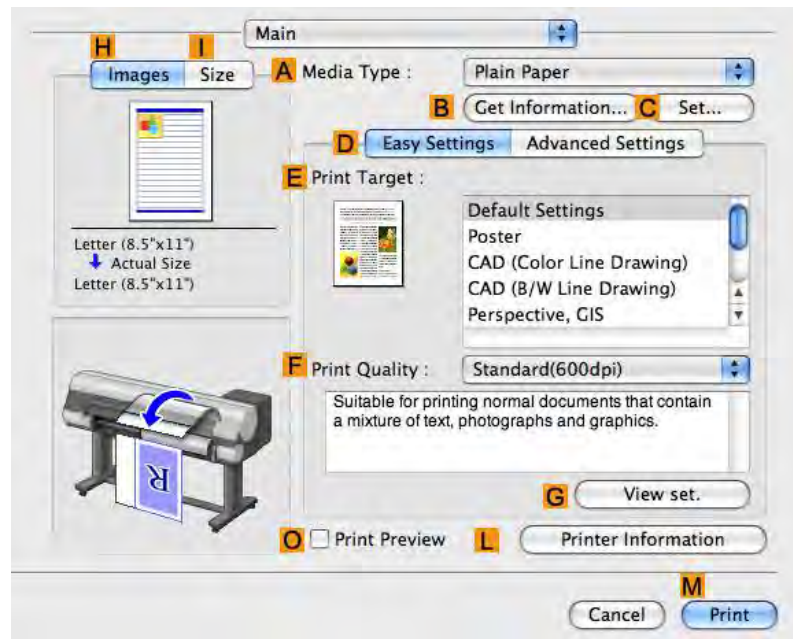


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Heavyweight Coated Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

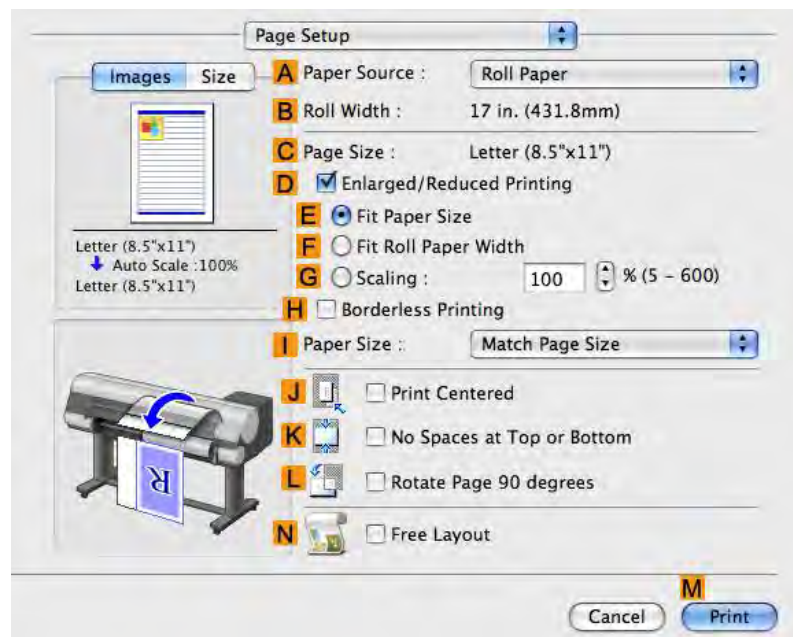


10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **10 in. (254.0mm)**.




**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

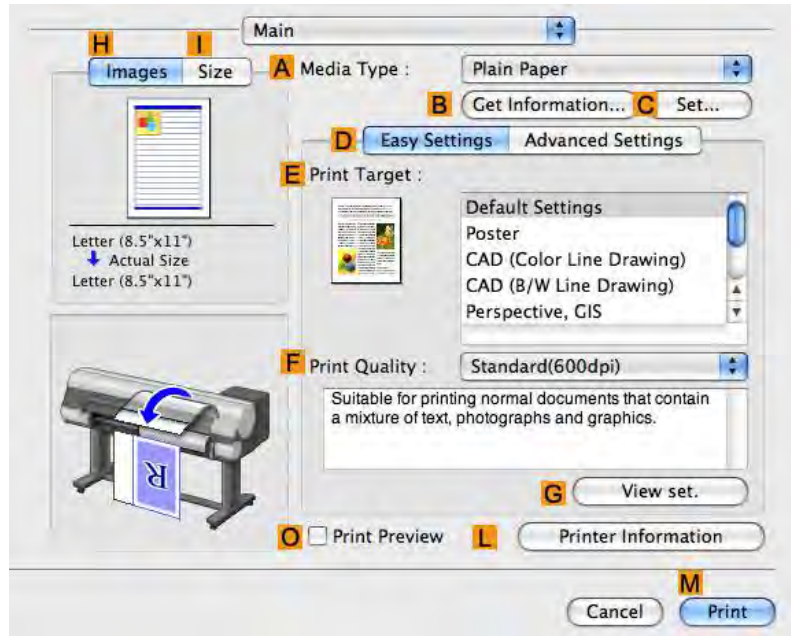

3

12. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **10"x12"**.

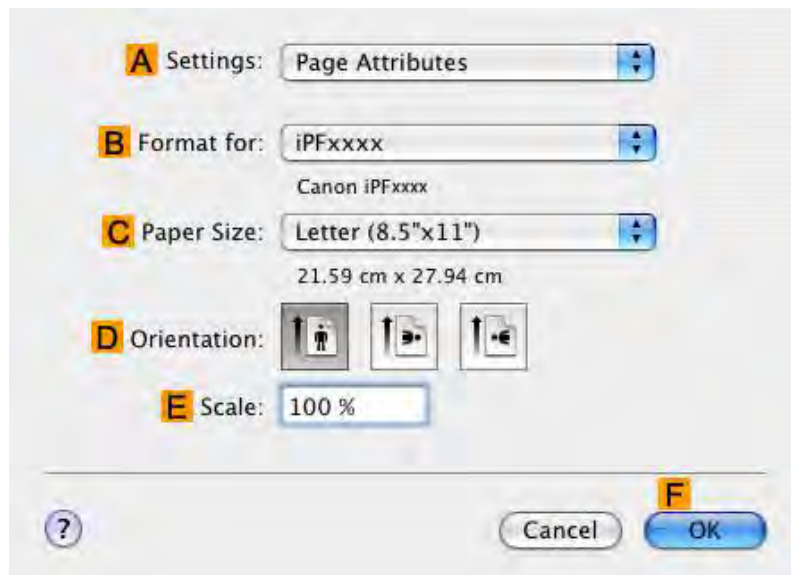

106

13. On the **Page Setup** pane, select the **D Enlarged/Reduced Printing** check box.

14. Select the **H Borderless Printing** check box.

15. Click **E Fit Paper Size** under **D Enlarged/Reduced Printing**.
16. In **I Paper Size**, click the paper size. In this case, click **10"x12" - Borderless**.
17. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) [→P.429](#) "

## Borderless Printing by Resizing Originals to Fit the Roll Width

Take advantage of borderless printing to print documents such as posters (made up mainly of photos or images) without a surrounding margin, or border.

### Borderless Printing

In regular printing, a margin required by the printer is added around the original. With borderless printing, you can print documents without the margin, so that the printed image covers the entire surface of the paper.

**Important**


- Borderless printing is only available with rolls.
- Paper you can use for borderless printing is restricted to particular types of paper and rolls of particular widths. For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (See "Types of Paper [→P.617](#) ")
- Paper incompatible with the printer's auto cut function can be printed without borders on the left and right sides only.
- These features cannot be used in combination with borderless printing: special page layouts, centering originals, and printing cut lines on rolls.
- If **Fit Paper Size** or **Print Image with Actual Size** (Windows only) is selected when performing borderless printing, **Rotate Page 90 degrees (Conserve Paper)** cannot be selected.
- When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the edges. If you require higher image quality, specify **No** in **Auto Cut** in the printer driver. In this case, the paper can be printed without borders on the left and right sides only. After ejecting and cutting the printed document, use scissors to cut away the top and bottom edges.
- By factory default, the ink drying time is disabled for all paper. When you are using paper that takes longer for ink to adhere for borderless printing and the Cutter Unit touches printing surfaces that are not dry yet, it may damage the paper or the edge of the document that is cut, depending on frequency of use. In this case, follow these steps to change the ink drying time.
  1. On the **Main** sheet of the printer driver, click **Settings** in **Media Type**.
  2. Select the ink drying time in the **Between Pages** list of **Drying Time**.
- Before borderless printing, make sure the blue Switch on the platen is set toward the ● side. (See "Setting the Blue Switch on the Platen.") [→P.872](#)

### Borderless Printing Method

Choose the method of borderless printing that suits the original, as desired.

## Scale to fit Roll Paper Width

Enlarge or reduce the original as a whole to match the roll paper width.

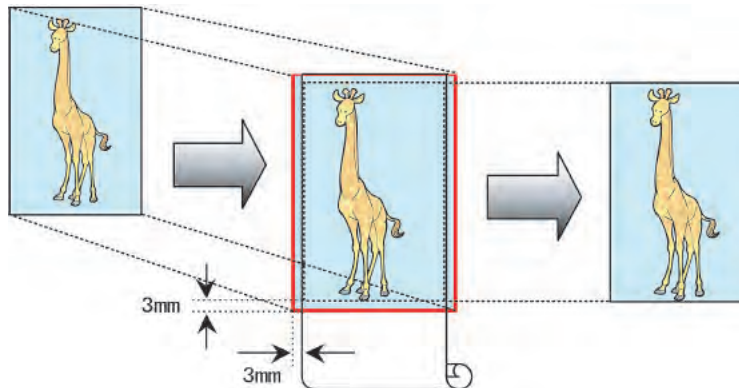

### Note

- You can combine this function with rotating pages 90 degrees before printing so that the original width (relative to portrait orientation) matches the roll paper width in borderless printing.

For instructions on borderless printing of photos, images, and other documents to match the roll paper width, refer to the following topics, as appropriate for your computer and operating system.

- Borderless Printing by Resizing Originals to Fit the Roll Width (Windows) →P.108
- Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS X) →P.110

## Borderless Printing by Resizing Originals to Fit the Roll Width (Windows)

This topic describes how to enlarge originals before borderless printing to match the roll width, based on the following example.

- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Heavyweight Coated Paper
- Roll paper width: 10 inches (254.0 mm)

1. In the application, create an original that takes up the entire space of the paper size.



### Note


- If you can specify the margin, as in Microsoft Word, set the margin at 0 mm. For instructions on specifying the margin, refer to the software documentation.

2. Choose **Print** in the application menu.

3. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")




4. Make sure the **Main** sheet is displayed.

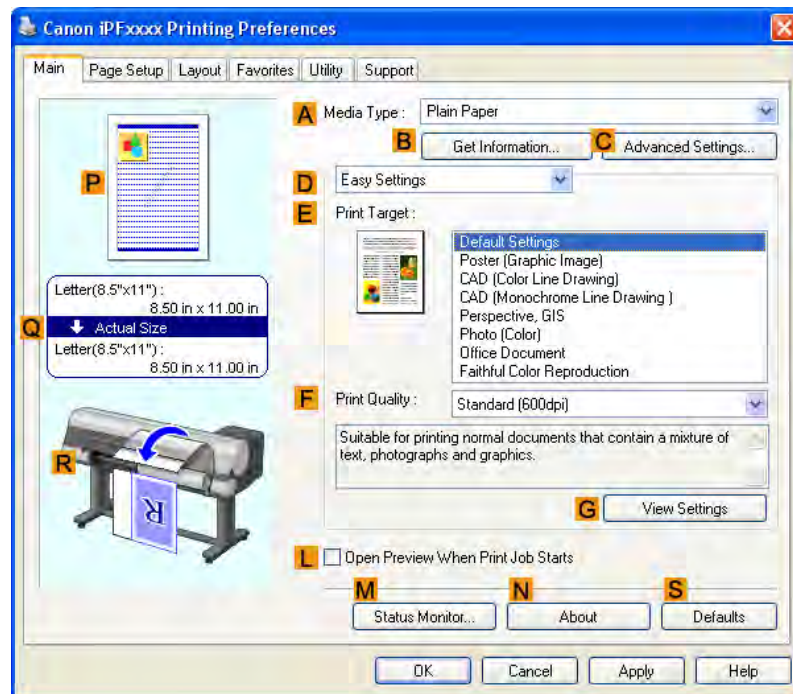


5. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Heavyweight Coated Paper.

6. Select the print target in the **E Print Target** list.

7. Click the **Page Setup** tab to display the **Page Setup** sheet.

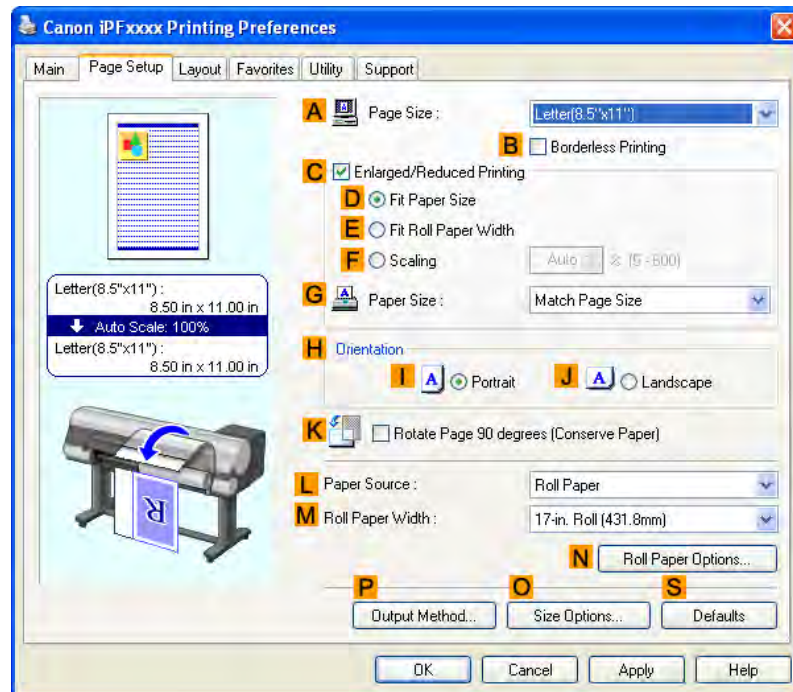

8. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4** or **Letter (8.5"x11")**.
9. Select and click a roll paper in the **L Paper Source** list.
10. Select the **B Borderless Printing** check box to display the **Information** dialog box.

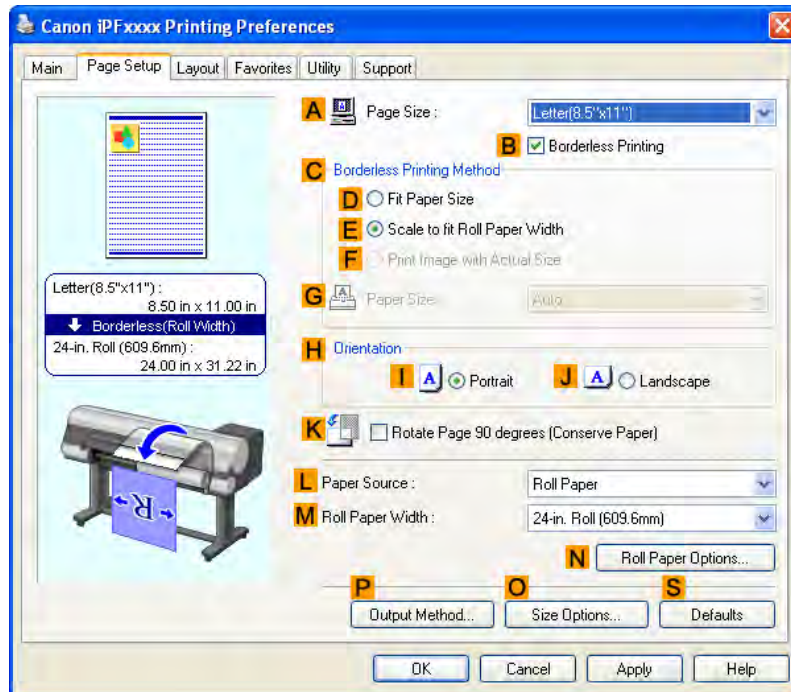

11. Select the width of the loaded roll in the **Roll Paper Width** list—in this case, click **10-in. Roll (254.0mm)**.
12. Click **OK** to close the **Information** dialog box.
13. In **C Borderless Printing Method**, make sure **E Scale to fit Roll Paper Width** is selected.
14. Confirm the print settings and print as desired.

**Note**  
 • For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

### Borderless Printing by Resizing Originals to Fit the Roll Width (Mac OS X)

This topic describes how to enlarge originals before borderless printing to match the roll width, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Heavyweight Coated Paper




- Roll paper width: 10 inches (254.0 mm)

1. This sets the **B Format for** and **C Paper Size**.




Note

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

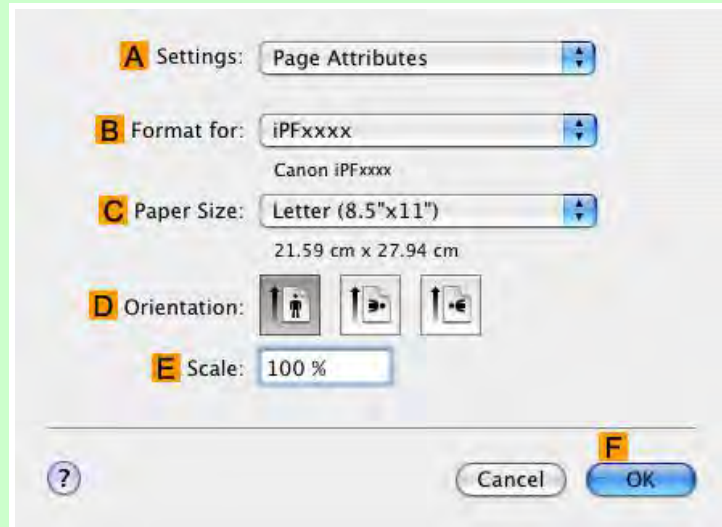

If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

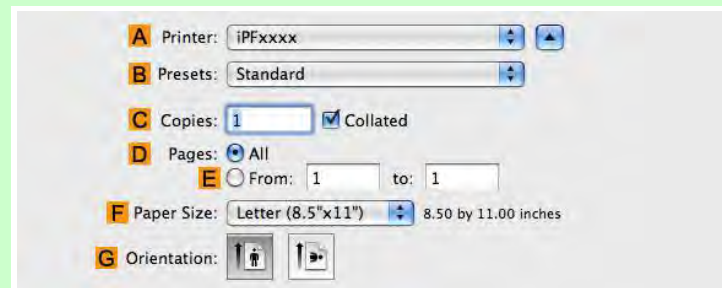

2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.




Note

- All sizes are available in borderless printing if you resize originals to fit the roll width.

4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

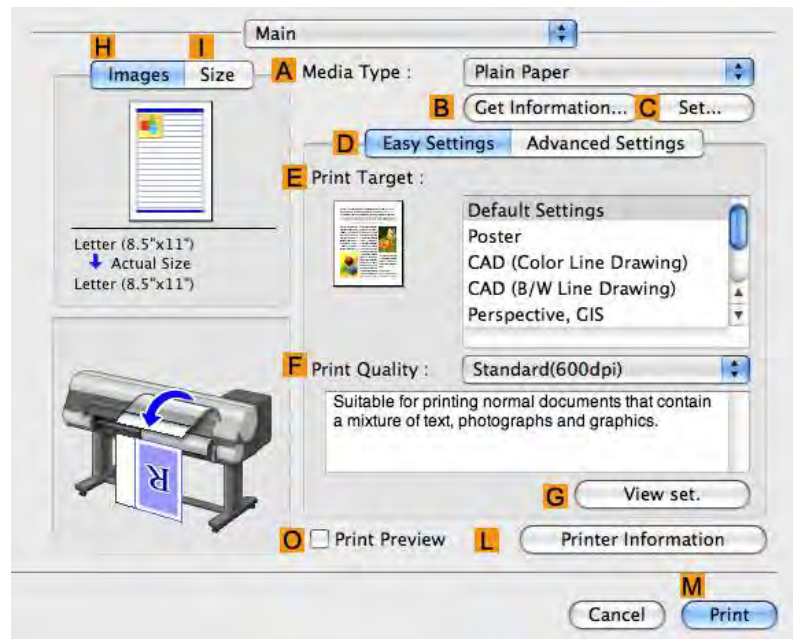


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Heavyweight Coated Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

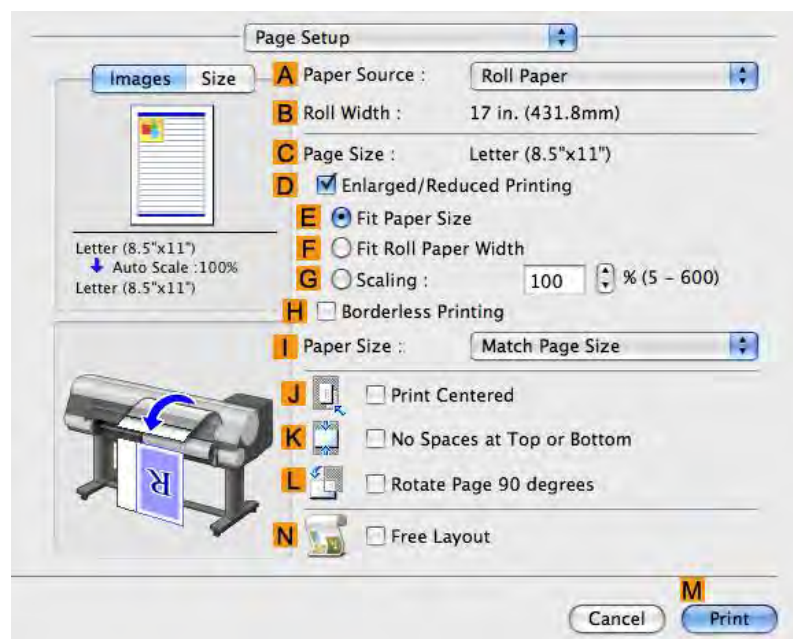


10. Select and click a roll paper in the **A Paper Source** list.


11. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **10 in. (254.0mm)**.

**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

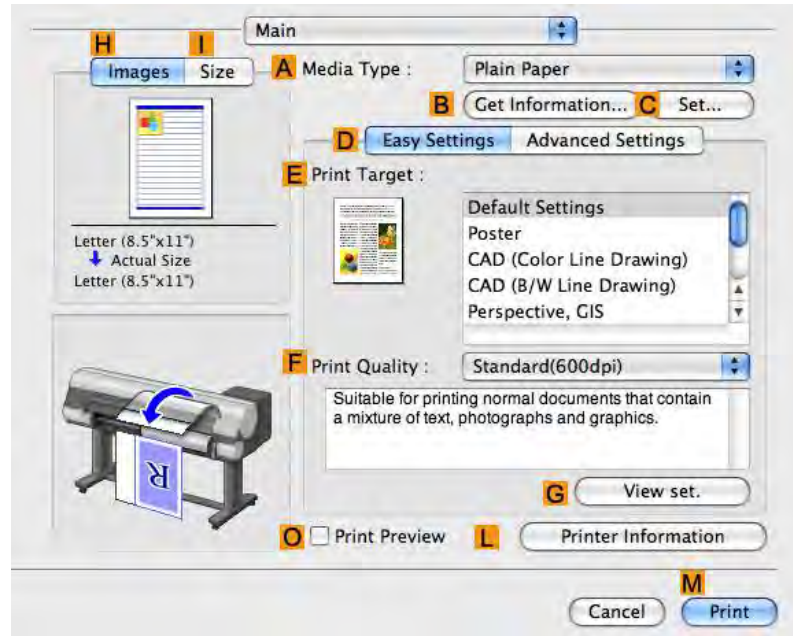

12. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

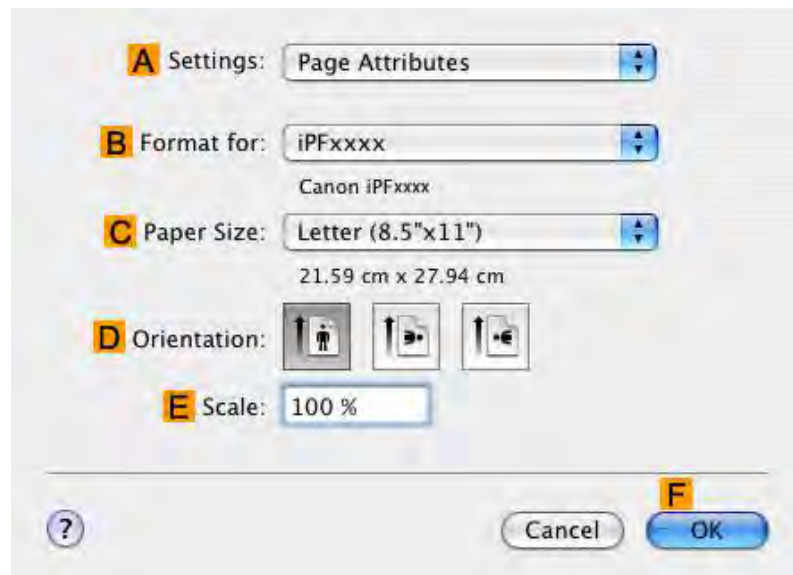

13. Select the **D Enlarged/Reduced Printing** check box.

14. Select the **H Borderless Printing** check box.

This ensures that **F Fit Roll Paper Width** is automatically selected in **D Enlarged/Reduced Printing**.

**15.** Confirm the print settings, and then click **M Print** to start printing.



Note


- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) [→P.429](#) "

## Printing banners or at other non-standard sizes

Printing Vertical or Horizontal Banners (Large-Format Printing) .....	115
Printing Vertical or Horizontal Banners (Large-Format Printing; Windows) .....	116
Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS X) .....	120
Printing on Non-Standard Paper Sizes .....	124
Printing on Non-Standard Paper Sizes (Windows) .....	124
Printing on Non-Standard Paper Sizes (Mac OS X) .....	129

### Printing Vertical or Horizontal Banners (Large-Format Printing)

You can create vertical or horizontal banners by printing originals that are in banner format on rolls. Originals created in Microsoft Word or other applications in your preferred size can be enlarged to fill the width of roll paper by completing simple printer driver settings.

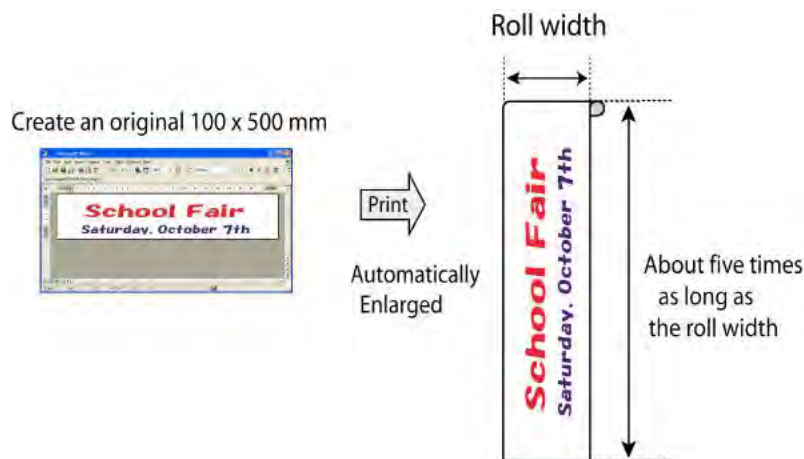

### Fit Roll Paper Width

You can easily create vertical or horizontal banners by automatically enlarging or reducing originals to fit the full width of rolls.



#### Note

- The maximum supported roll length is 18.0 m or 19.7 yd.

For instructions on printing vertical or horizontal banners, refer to the following topics, as appropriate for your computer and operating system.

- Printing Vertical or Horizontal Banners (Large-Format Printing; Windows) →P.116
- Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS X) →P.120



#### Important

- Before printing, check how much of the roll paper is left. If you have activated automatic detection of the remaining roll paper, a warning message is displayed when there is not enough roll paper left.
- If not much ink is left, prepare replacement ink tanks.
- To print at a higher level of quality, in the printer driver, choose **High** or **Highest** in Print Quality, and choose **Unidirectional Printing** as the direction of printing.



## Printing Vertical or Horizontal Banners (Large-Format Printing; Windows)

This topic describes how to print a banner about five times as long as the roll width based on the following example.

- Document: A horizontal banner created in Microsoft Word
- Page size: Non-standard (100×500 mm [3.9×19.7 in])
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: 16 in (406.4 mm)


Follow the steps below to print a banner in either horizontal or vertical format.

1. Register a Custom Paper Size.  
Banners tend to be in non-standard sizes, so register a Custom Paper Size. In this example, 100×500 mm (3.9×19.7 in) is registered.
2. In the application, create an original in the size you registered.
3. Print the banner, using the settings that correspond to banners.

### Registering a Custom Paper Size


This example describes how to register a paper size that is horizontally elongated and suitable for banners in either horizontal or vertical format.

1. Display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows) → P.213 ")
2. Click the **Page Setup** tab to display the **Page Setup** sheet.

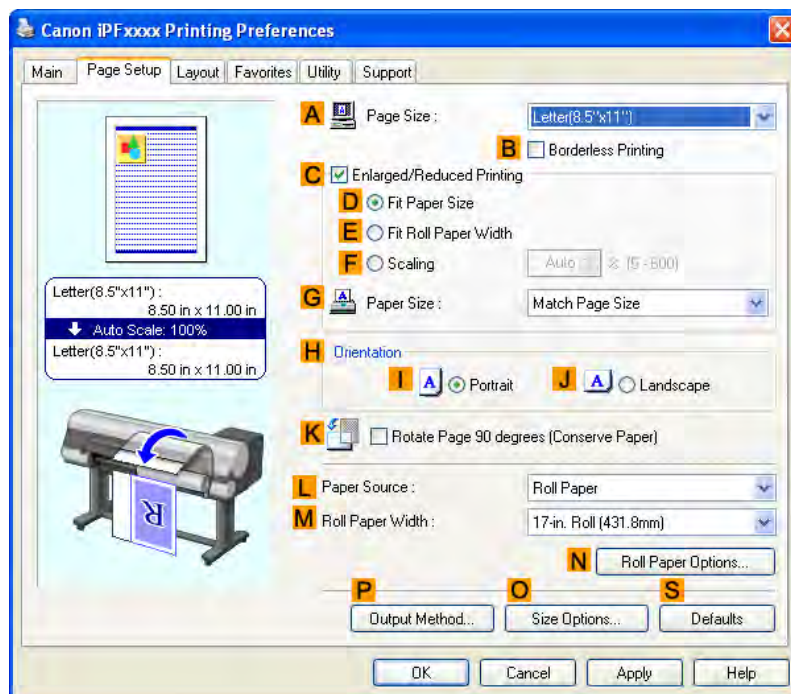


3. Select and click a roll paper in the **L Paper Source** list.



4. Click  **Size Options** to display the **Paper Size Options** dialog box.
5. Enter a desired paper name in **Custom Paper Size Name**. **My Horizontal Banner** is used in this example.
6. In **Units**, click **mm**.
7. Under **Paper Size**, enter **100** in **Width** and **500** in **Height**.
8. Click **Add** to add the paper size of **My Horizontal Banner**.
9. Click **OK** to close the **Paper Size Options** dialog box.
10. Close the printer driver dialog box.

**Note**

- You can also specify a **Custom Size** as the paper size. Note that **Custom Size** settings are not available after you exit the application.  
For more information, see "Printing on Non-Standard Paper Sizes (Windows)  "

### Creating the banner in the application

Follow the steps below to create the banner in Microsoft Word using the Custom Paper Size you registered.

1. Start Microsoft Word.
2. Choose **Page Setup** from the **File** menu to display the **Page Setup** dialog box.
3. Under **Paper Size**, click the Custom Paper Size you registered—**My Horizontal Banner** in this example.


**Important**

- If **My Horizontal Banner** is not listed, make sure this printer is selected as the printer to use.
- In applications such as Microsoft PowerPoint that do not enable you to choose registered paper sizes, use the custom paper size setting in **Custom** and specify 100×500 mm (3.9×19.7 in)


4. Set the printing orientation to horizontal.
5. Create the banner.

### Printing the banner

Follow these steps to print the banner using the corresponding banner settings.

1. Choose **Print** in the Microsoft Word menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows)  ")


3. Make sure the **Main** sheet is displayed.

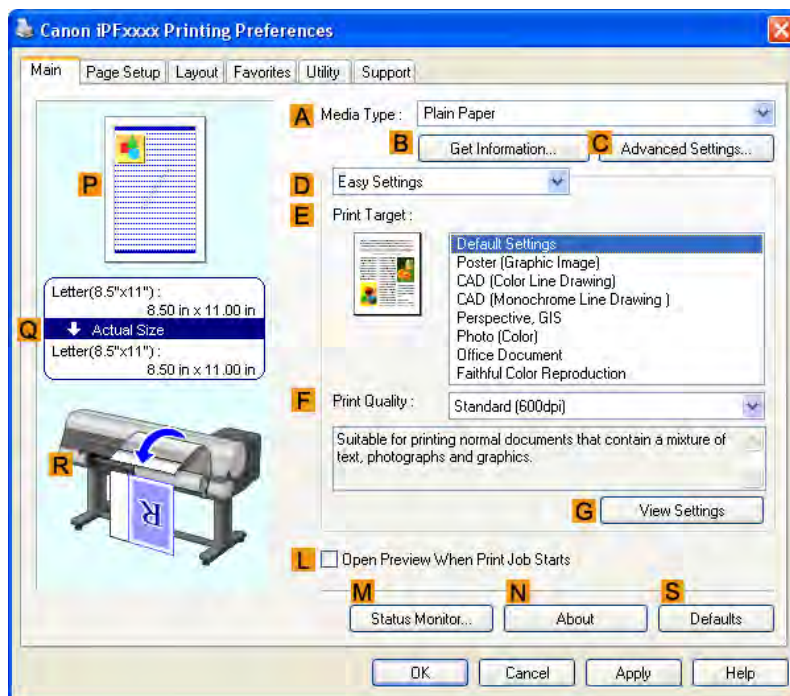

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

5. After confirming that **D Easy Settings** is selected, click **Poster** in the **E Print Target** list.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

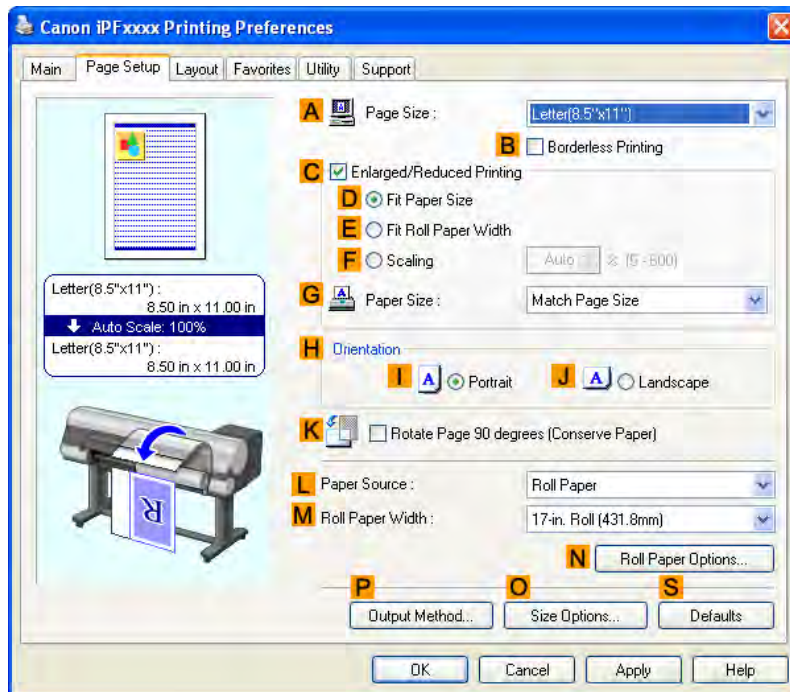

3

118


7. In the **A Page Size** list, click the size you registered, **My Horizontal Banner**.

8. Select the **C Enlarged/Reduced Printing** check box.



Note

- If the **C Enlarged/Reduced Printing** check box is not displayed on the **Page Setup** sheet, clear the **B Borderless Printing** check box.

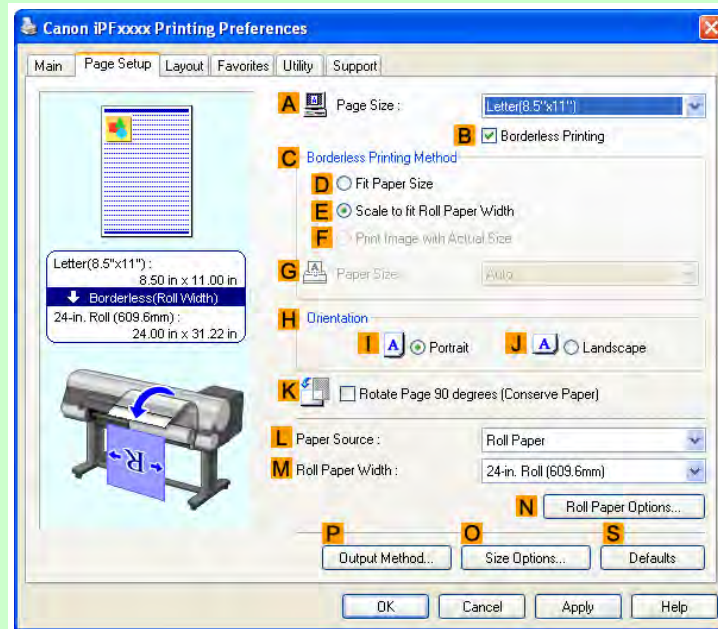

9. Select and click a roll paper in the **L Paper Source** list.

10. After you click **E Fit Roll Paper Width**, the **Information** dialog box is displayed.

11. Select the width of the loaded roll in the **Roll Paper Width** list. In this case, click **16-in. Roll (406.4mm)**, and then click **OK**.

12. Confirm the print settings and print as desired.




Note


- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

If printing is unsuccessful, you may be able to print after completing the following setting.

1. On the **Layout** sheet, click **J Special Settings** to display the **Special Settings** dialog box.

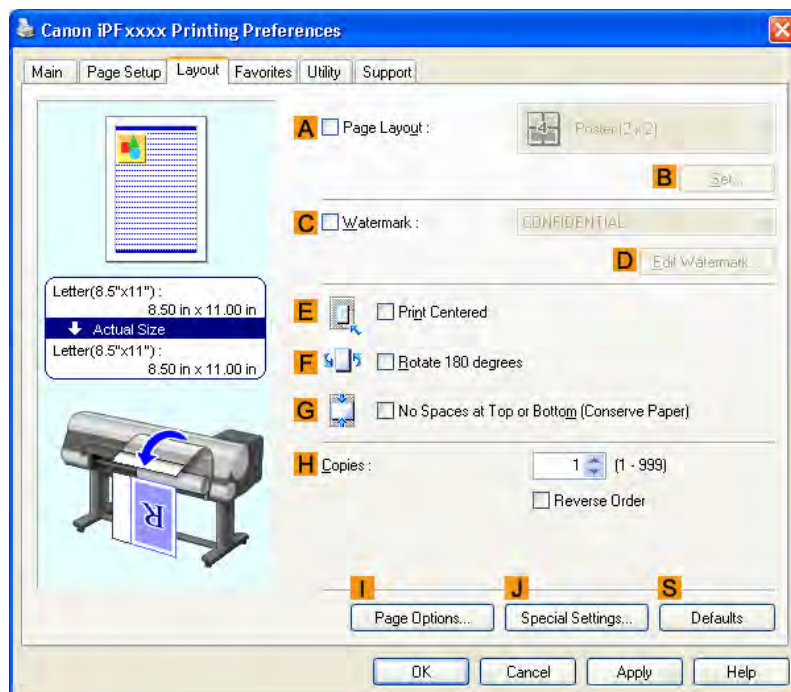

2. In the **FineZoom Settings** list, click **Yes**.

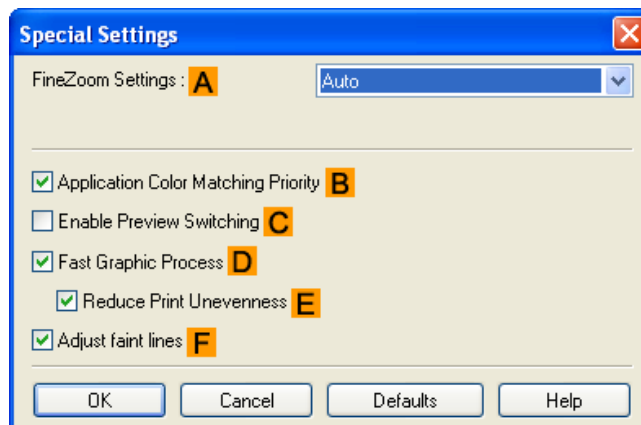

## Printing Vertical or Horizontal Banners (Large-Format Printing; Mac OS X)

This topic describes how to print a banner about five times as long as the roll width based on the following example.

- Document: An original designed for a horizontal banner
- Page Size: Non-standard (100×500 mm [3.9×19.7 in])
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: 16 inches (406.4 mm)

Follow the steps below to print a banner in either horizontal or vertical format.

1. In the application, create an original in the format of a horizontal or vertical banner.
2. Register a **Custom Page Sizes** (Mac OS X 10.3.9-10.5)/ **Custom Paper Sizes** (Mac OS X 10.6). Banners tend to be in non-standard sizes, so register a **Custom Page Sizes** (Mac OS X 10.3.9-10.5)/ **Custom Paper Sizes** (Mac OS X 10.6) in **Page Setup**. In this example, 100×500 mm (3.9×19.7 in) is registered.
3. Print the banner, using the settings that correspond to banners.




#### Note

- The following procedures are based on Mac OS X 10.5. The method of setting up non-standard paper sizes varies depending on the version of Mac OS X.


## Register a Custom Page Sizes

This example describes how to register and print using a page size that is horizontally elongated and suitable for banners in either horizontal or vertical format.

1. Create the document in the application.
2. Choose **Print** in the application menu.

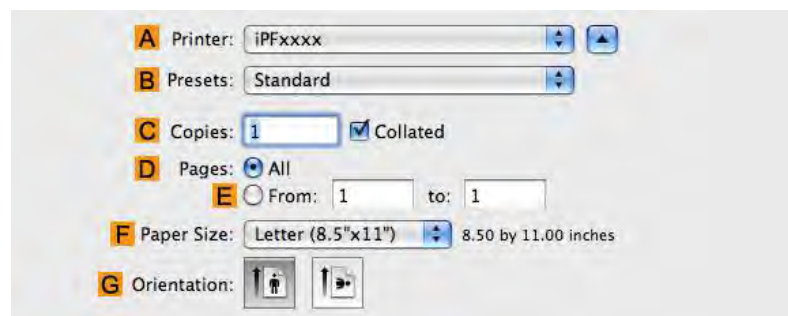

3. Select the printer in the **A Printer** list.
4. Click **Manage Custom Sizes** in the **C Paper Size** list to display the **Custom Page Sizes** dialog box.

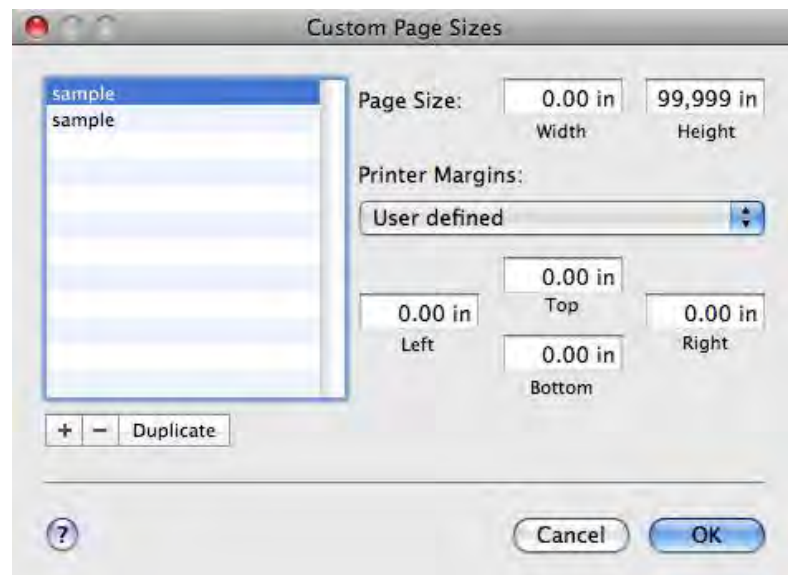




5. Double-click **Untitled** in the list at left, and then enter a name for the page size you want to register. Here, enter **100\*500**.  
If the **Untitled** size is not listed at left, click + below the list.
6. Under **Page Size**, enter **10** in **Width** and **50** in **Height**. Here, measurements are entered in centimeters.
7. Specify the margins by entering **0.3** in **Printer Margins**. Here, too, measurements are entered in centimeters.
8. Click **OK** to close the **Custom Page Sizes** dialog box.
9. In the **C Paper Size** list, click the size of the original. In this case, click **100\*500**, the size you registered.
10. In **D Orientation**, click the icon of the document in landscape orientation.
11. Click **F OK** to close the dialog box.

3

### Print the banner

Follow the steps below to print the banner using the corresponding banner settings.


1. Choose **Print** in the application menu.
2. Access the **Main** pane.

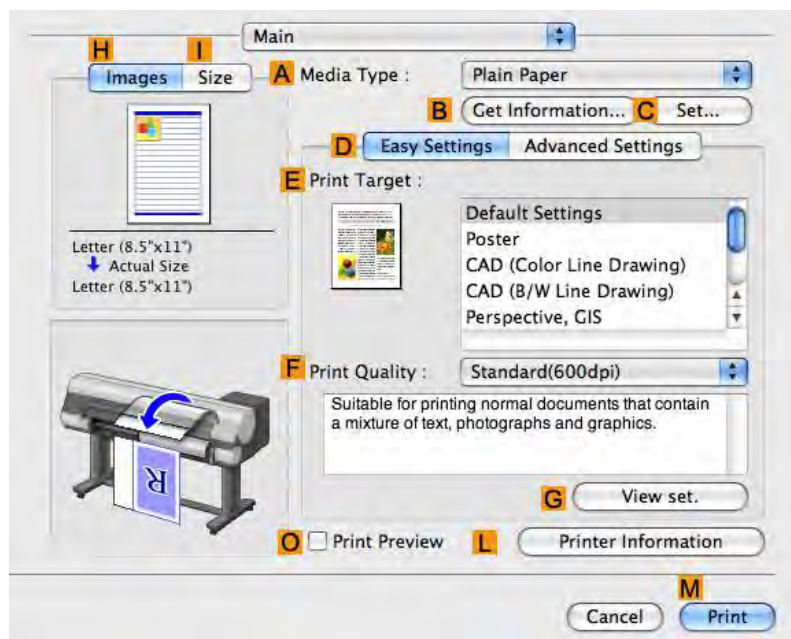

3. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
4. Make your selection in the **E Print Target** list.
5. Make your selection in the **F Print Quality** list.



6. Access the **Page Setup** pane.

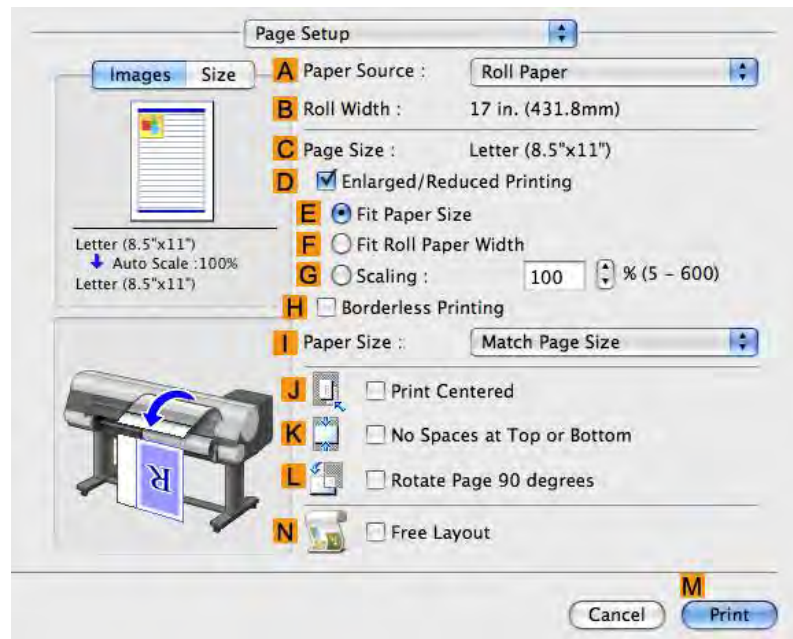


7. Select and click a roll paper in the **A Paper Source** list.

8. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **16 in. (406.4mm)**.



**Note**

- If the width of the loaded roll is not displayed in **B Roll Width**, click **L Printer Information** on the **Main** pane and update the printer information.

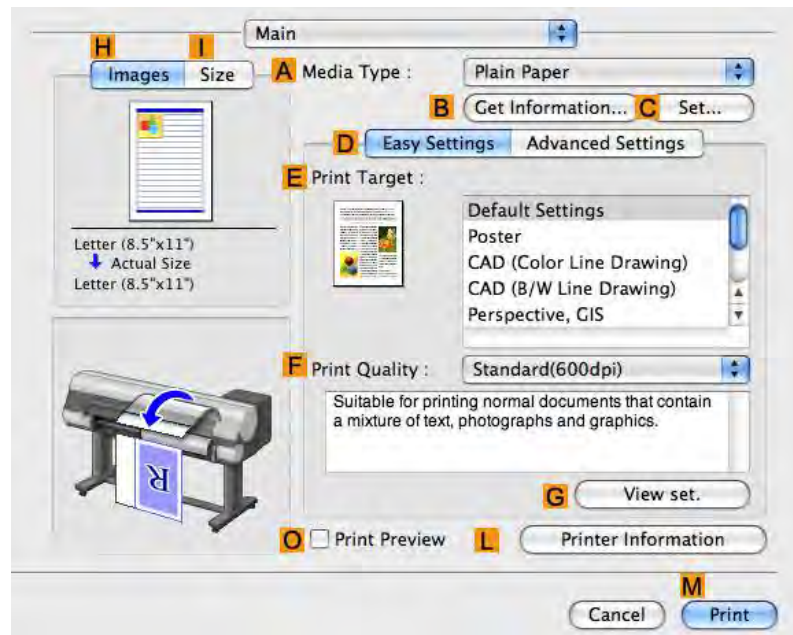

9. In **C Page Size**, make sure **100\*500** is displayed, as registered in **Page Setup**.

10. Select the **D Enlarged/Reduced Printing** check box.
11. Click **F Fit Roll Paper Width**.
12. Confirm the print settings, and click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Printing on Non-Standard Paper Sizes

By specifying the paper size, you can print on non-standard sizes of paper. There are two ways to print on non-standard paper sizes, as follows.

### Registering non-standard paper size in the printer driver

After you register non-standard paper sizes, they are listed with standard sizes so that you can choose them anytime as needed.



**Note**

- These non-standard paper sizes you register in the printer driver are called Custom Paper Size in Windows and **Custom Sizes** in Mac OS X.

### Specifying custom paper sizes for temporary use

Because these are sizes you specify temporarily in the printer driver, the sizes will not be available after you exit the application. If you want to set up a non-standard paper size so that it will always be available, we recommend registering the paper size in the printer driver.



**Note**

- These temporary paper sizes you register on the printer are called **Custom Sizes** in Windows.
- This can only be configured in Windows.

For instructions on specifying non-standard paper sizes for printing, refer to the following topics, as appropriate for your computer and operating system.

- Printing on Non-Standard Paper Sizes (Windows) →P.124
- Printing on Non-Standard Paper Sizes (Mac OS X) →P.129

## Printing on Non-Standard Paper Sizes (Windows)

This topic describes two ways to print on non-standard paper sizes.

- Printing by using **Custom Size**
- Printing by using Custom Paper Size


### Printing by using **Custom Size**

This section describes how to print using **Custom Size** based on the following example.

- Document: Any Type


- Page size: Square of non-standard dimensions (430×430 mm [16.9×16.9 in])
- Paper: Sheets
- Paper type: Any type
- Paper Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])

1. Load the square paper (430 × 430 mm [16.9 × 16.9 in]) in the printer.
2. Choose **Print** in the application menu.
3. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
4. Make sure the **Main** sheet is displayed.

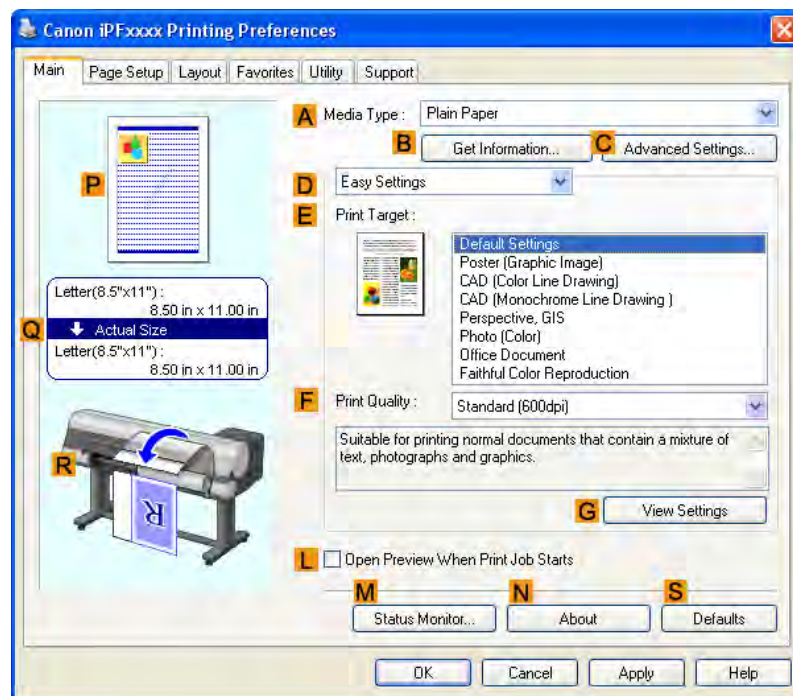

5. In the **A Media Type** list, select the type of paper that is loaded.
6. After confirming that **D Easy Settings** is selected, select from the **E Print Target** list.

7. Click the **Page Setup** tab to display the **Page Setup** sheet.

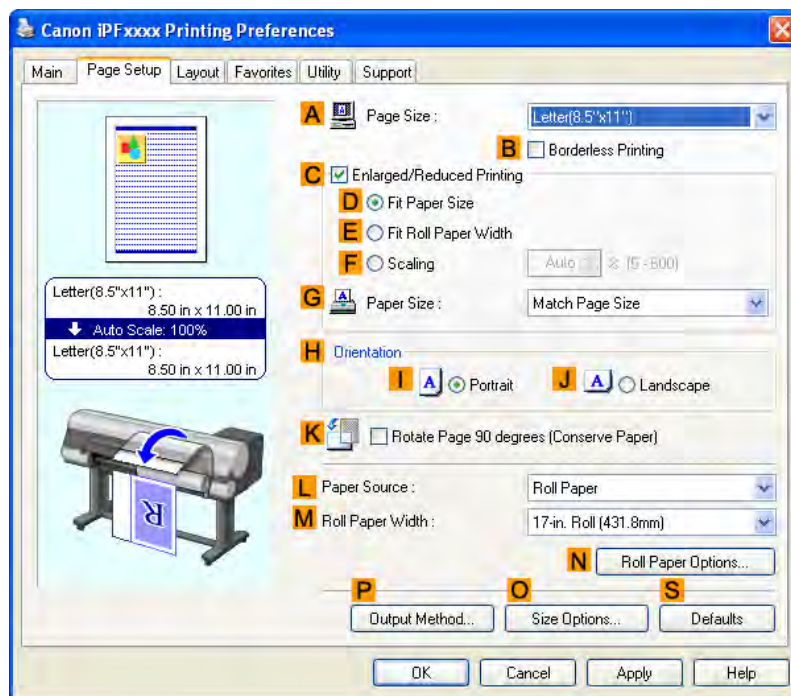

8. Click **Cut Sheet** in the **L Paper Source** list.

9. Click **Custom Size** in the **A Page Size** list to display the **Custom Size Settings** dialog box.

10. Confirm that **mm** is selected in **Units**.

11. Enter **430** (16.9 in) in both **Width** and **Height**.

12. Click **OK** to close the **Custom Size Settings** dialog box.

13. Confirm the print settings and print as desired.



**Note**


• For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

### Printing by using Custom Paper Size

This section describes how to print using Custom Paper Size based on the following example. First, register a non-standard paper size called **430 mm Square** as a Custom Paper Size.

- Document: Any Type
- Page Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])
- Paper: Sheets
- Media Type: Any type
- Paper Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])


1. Load the square paper (430 × 430 mm [16.9 × 16.9 in]) in the printer.
2. Choose **Print** in the application menu.
3. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
4. Make sure the **Main** sheet is displayed.

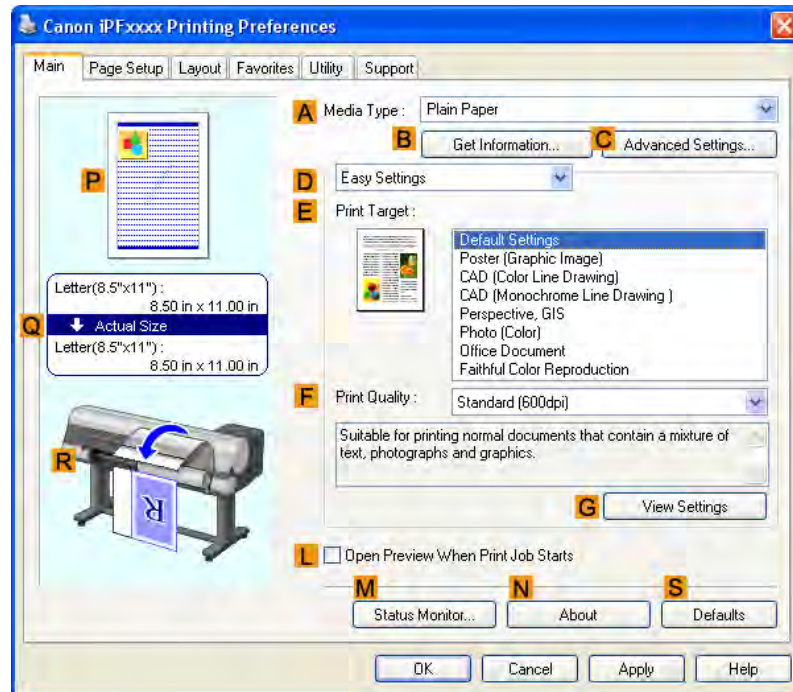

5. In the **A Media Type** list, select the type of paper that is loaded.
6. After confirming that **D Easy Settings** is selected, select from the **E Print Target** list.



7. Click the **Page Setup** tab to display the **Page Setup** sheet.

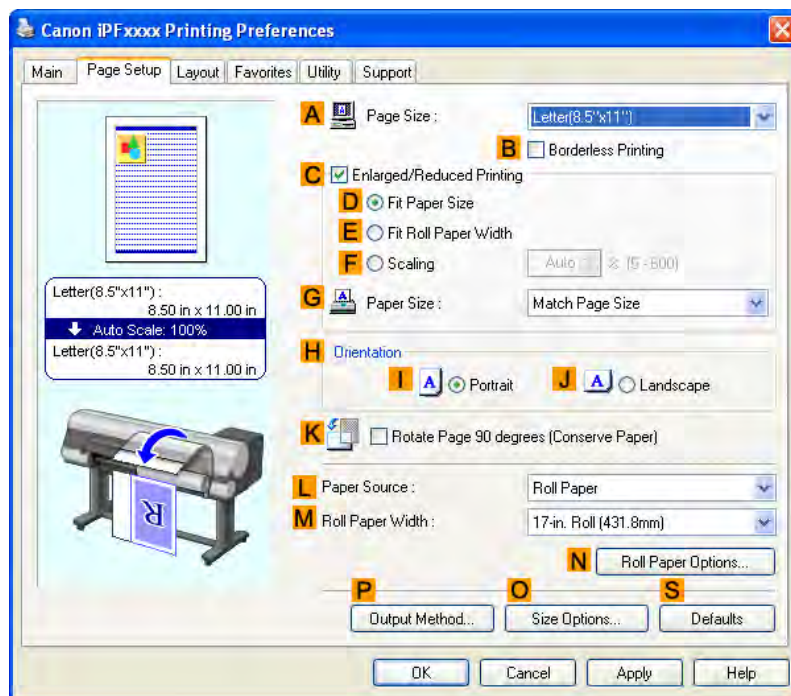

8. Click **O Size Options** to display the **Paper Size Options** dialog box.

9. Enter a desired paper name in **Custom Paper Size Name**. **430 mm Square** is used in this example.

10. Select **mm** in **Units**.

11. Enter **430** (16.9 in) in both **Width** and **Height**.



**Note**

- If you select the **Fix the Ratio of the Width to Height** check box, after you enter a value in either **Width** or **Height**, the other value will be automatically applied based on the original aspect ratio.

12. Click **Add** to register **430 mm Square**.

13. Click **OK** to close the **Paper Size Options** dialog box.

14. Click **Cut Sheet** in the **L Paper Source** list.

15. In the **A Page Size** list, click the size you added, **430 mm Square**.

16. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

3

128



## Printing on Non-Standard Paper Sizes (Mac OS X)

This section describes how to register and print **Custom Page Sizes** (Mac OS X 10.3.9-10.5)/ **Custom Paper Sizes** (Mac OS X 10.6) based on the following example. Here, you will register a non-standard paper size named **430\*430** in **Custom Page Sizes** (Mac OS X 10.3.9-10.5)/ **Custom Paper Sizes** (Mac OS X 10.6).


- Document: Any Type
- Page Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])
- Paper: Sheets
- Media Type: Any type
- Paper Size: A square sheet (430 × 430 mm [16.9 × 16.9 in])



### Note


- The following procedures are based on Mac OS X 10.5. The method of setting up non-standard paper sizes varies depending on the version of Mac OS X.

1. Create the document in the application.
2. Load the square paper (430 × 430 mm [16.9 × 16.9 in]) in the printer.
3. Choose **Print** in the application menu.

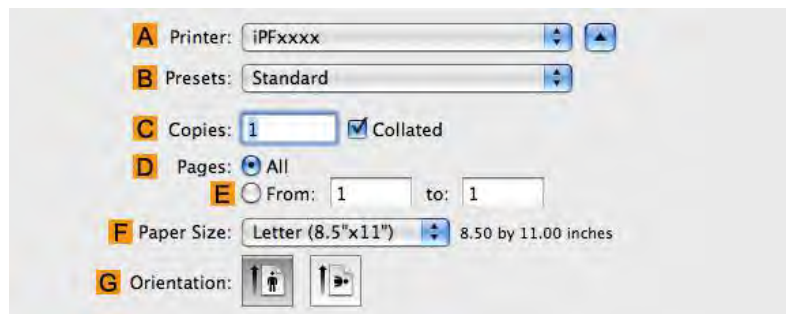

4. Select the printer in the **A Printer** list.


5. Click **Manage Custom Sizes** in the **C Paper Size** list to display the **Custom Page Sizes** dialog box.

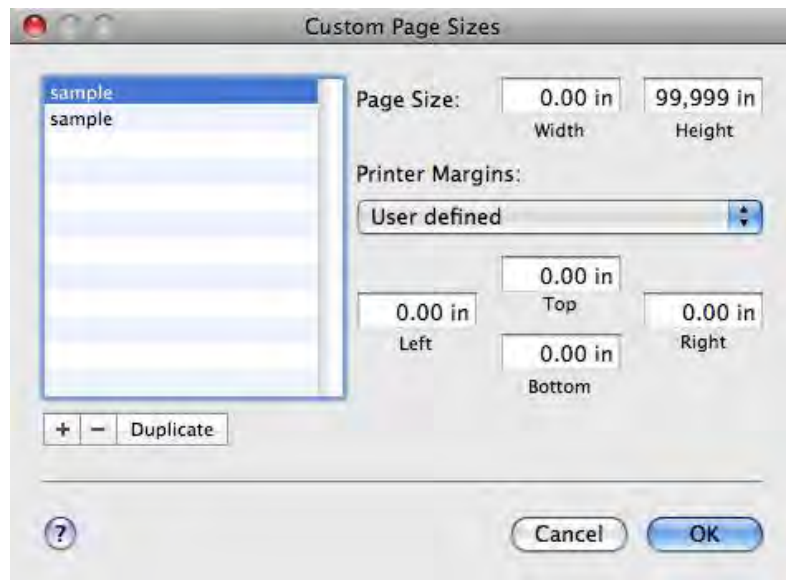

6. In **Page Size**, enter the height and width of the original. Here, enter **43.00 cm** in **Height** and **Width**.
7. In **Printer Margins**, enter **0.5** for the top and side margins and **2.3** for the bottom margin. Here, measurements are entered in centimeters.
8. Double-click **Untitled** in the list at left in the **Custom Page Sizes** dialog box and enter the paper name—in this case, **430\*430**.
9. Click **OK** to close the **Custom Page Sizes** dialog box.
10. In the **C Paper Size** list, click the size of the original. In this case, click **430\*430**, the size you registered.
11. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

3

12. Access the **Main** pane.

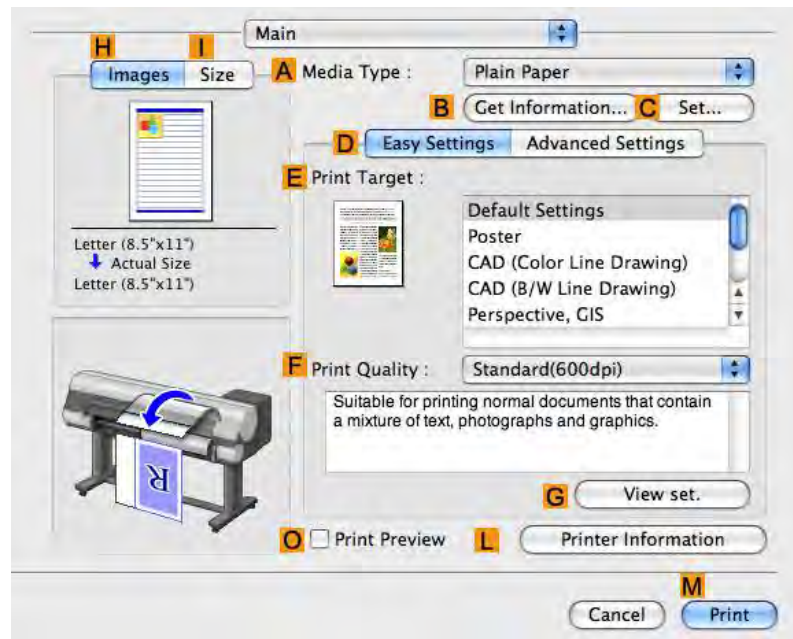


13. In the **A Media Type** list, select the type of paper that is loaded.

14. After confirming that **D Easy Settings** is selected, select from the **E Print Target** list.

15. Make your selection in the **F Print Quality** list.

16. Access the **Page Setup** pane.

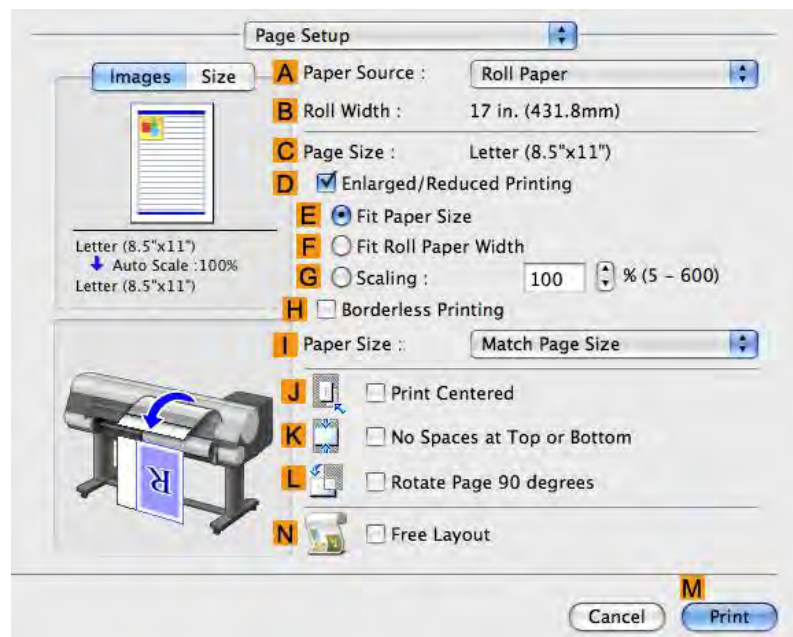

17. Click **Cut Sheet** in the **A Paper Source** list.

**18.** In **C Page Size**, make sure **430\*430** is displayed, as registered in **Page Setup**.

**19.** Confirm the print settings, and then click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) [→P.429](#) "

## Tiling and multiple pages per sheet


Printing Multiple Originals Next to Each Other .....	133
Printing Multiple Originals Next to Each Other (Windows) .....	134
Printing Multiple Originals Next to Each Other (Mac OS X) .....	136
Printing Multiple Pages Continuously .....	138
Printing Multiple Pages Continuously (Windows) .....	139
Printing Multiple Pages Continuously (Mac OS X) .....	141
Printing Multiple Pages Per Sheet .....	143
Printing Multiple Pages Per Sheet (Windows) .....	143
Printing Multiple Pages Per Sheet (Mac OS X) .....	146
Printing Posters in Sections .....	150
Printing Large Posters (Windows) .....	151

### Printing Multiple Originals Next to Each Other

By arranging originals from word-processing or spreadsheet programs or web browser screen shots next to each other on single sheets, you can create highly expressive presentation materials, easy-to-understand meeting materials, and a variety of other printed documents.

#### Free Layout (Windows)

Besides combining multiple pages in a single-page layout, you can combine originals from multiple files—even multiple source applications—in a single-page layout.

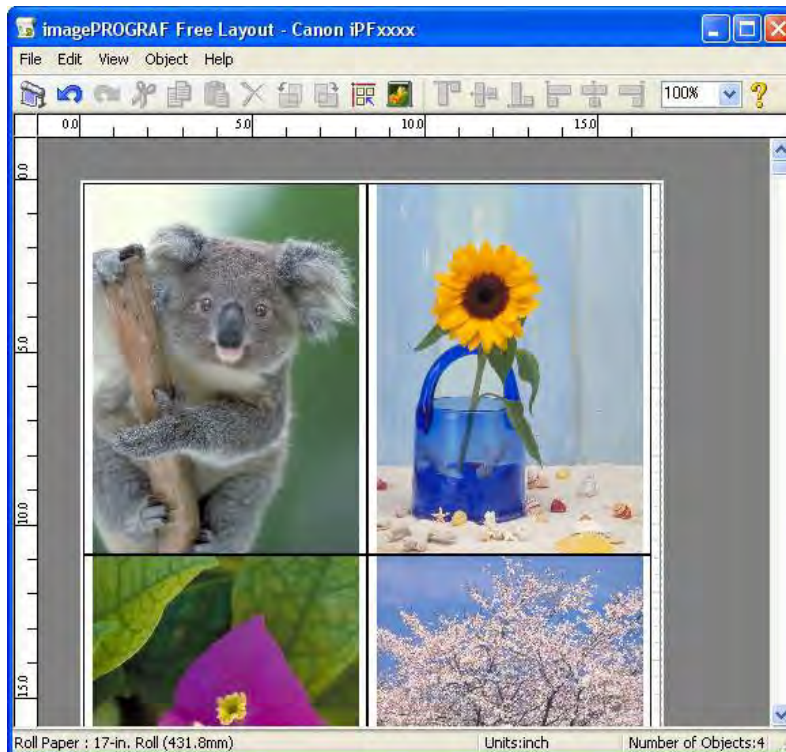




**Important**

- Free Layout cannot be used in 64-bit version of Windows.

### imagePROGRAF Free Layout (Macintosh)

Besides combining multiple pages in a single-page layout, you can combine originals from multiple files—even multiple source applications—in a single-page layout.

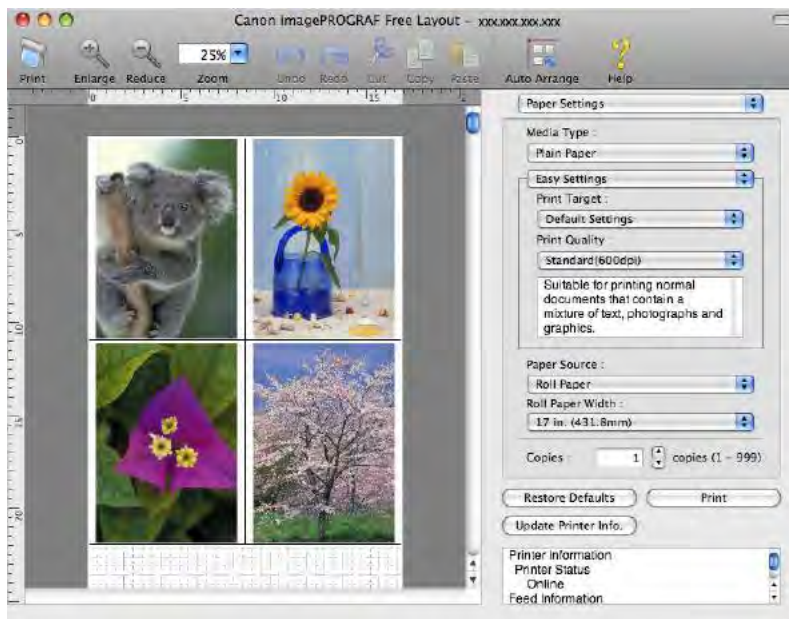

For instructions on arranging originals from multiple applications, refer to the following topics.

- Printing Multiple Originals Next to Each Other (Windows) →P.134
- Printing Multiple Originals Next to Each Other (Mac OS X) →P.136

### Printing Multiple Originals Next to Each Other (Windows)

This topic describes how to arrange multiple originals using the Free Layout function.




**Important**

- Free Layout cannot be used in 64-bit version of Windows.


1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")



3. Make sure the **Main** sheet is displayed.

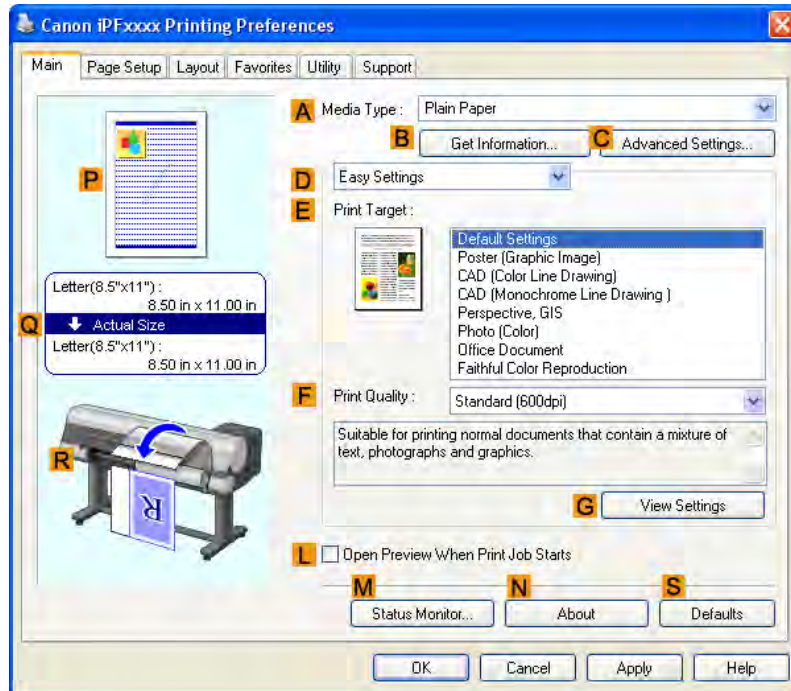


4. Click the **Layout** tab to display the **Layout** sheet.

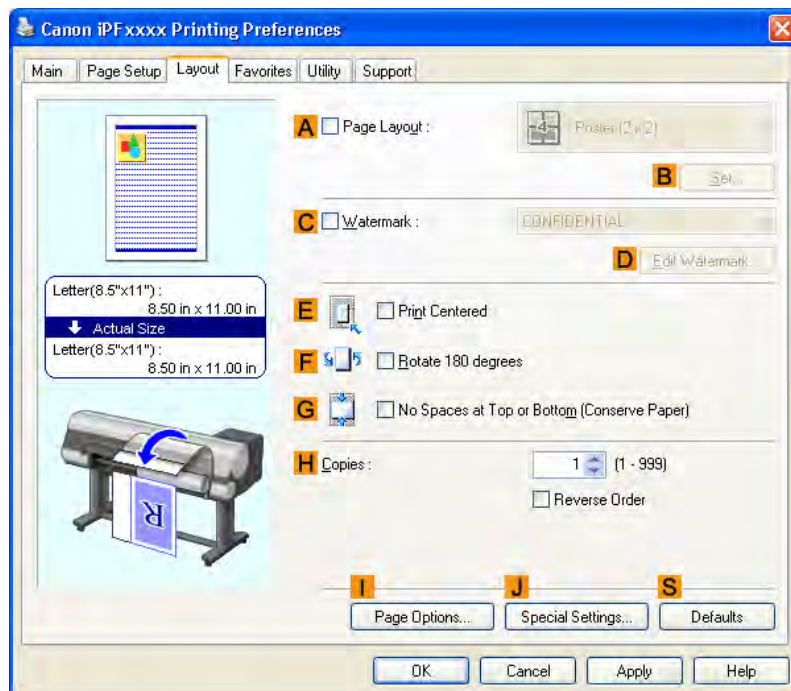

5. Select the **A Page Layout** check box.
6. Click **Free Layout** in the **A Page Layout** list.

7. When you attempt to print, the imagePROGRAF Free Layout window is displayed. (At this point, the document will not be printed yet.)

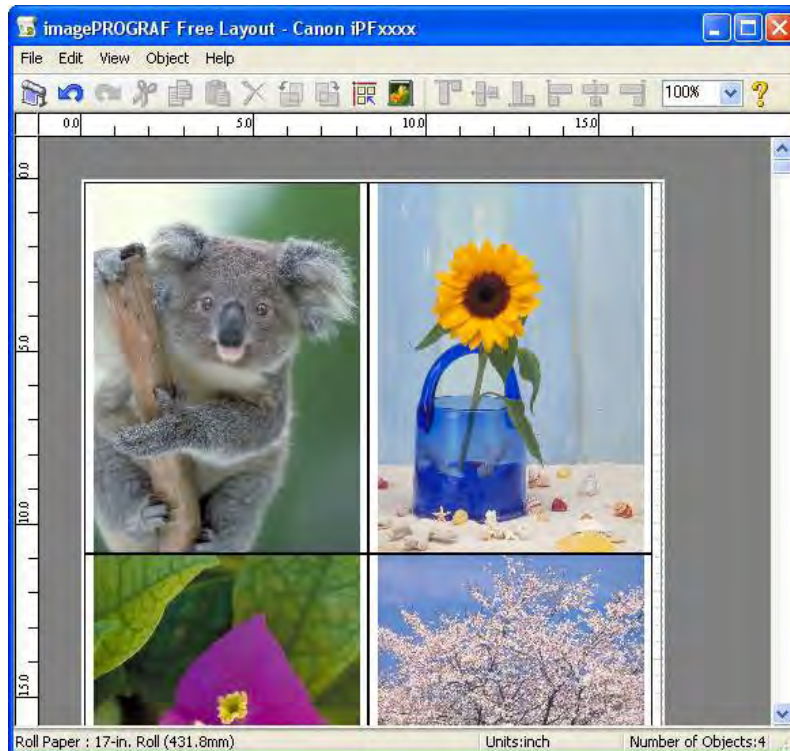

8. Edit and rearrange the image in the imagePROGRAF Free Layout window as desired.



**Important**

- Without closing the imagePROGRAF Free Layout window, repeat steps 1–7 to arrange originals from multiple applications on the same page.



**Note**

- For instructions on editing and rearranging images, refer to the imagePROGRAF Free Layout help topic.

9. Print from the imagePROGRAF Free Layout menu.



**Note**


- For details on imagePROGRAF Free Layout functions, refer to **Free Layout** →P.256 .

## Printing Multiple Originals Next to Each Other (Mac OS X)

This topic describes how to use the **Free Layout** function to arrange multiple originals next to each other before printing.

1. Choose **Print** in the application menu.


2. Access the **Page Setup** pane.

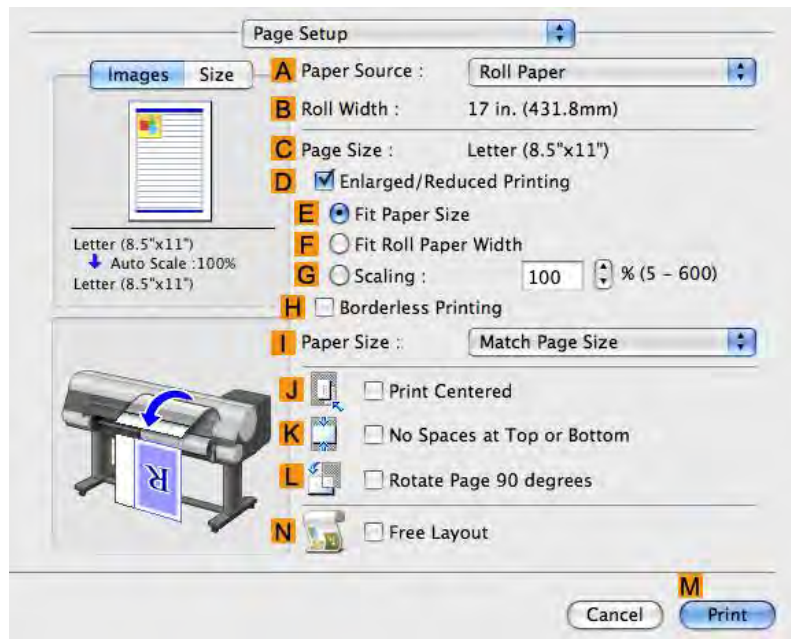

3. Select the **N** Free Layout check box.

4. Click **M** Print.

5. The **Canon imagePROGRAF Free Layout** window is displayed.

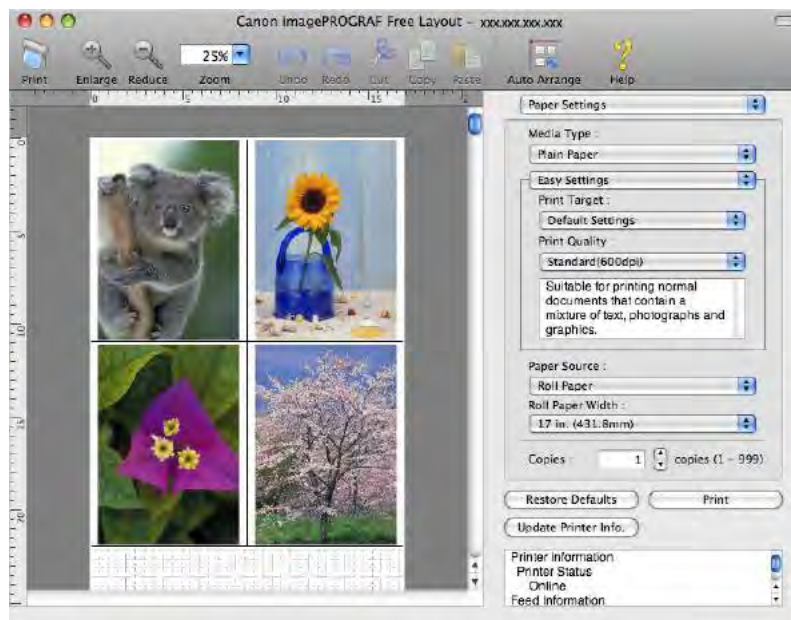

6. Edit and rearrange the image in the **Canon imagePROGRAF Free Layout** window as desired.



**Note**

- Without closing the **Canon imagePROGRAF Free Layout** window, repeat steps 1 to 4 to arrange originals from multiple applications on the same page.
- For instructions on editing and rearranging images, refer to the **Canon imagePROGRAF Free Layout** help topic.

7. Print from the **Canon imagePROGRAF Free Layout** menu.



**Note**


- For details on **Canon imagePROGRAF Free Layout** functions, refer to Free Layout →P.481 .

3

### Printing Multiple Pages Continuously

You can print multiple pages as a single continuous image, without margins between pages.

#### Roll paper (banner)

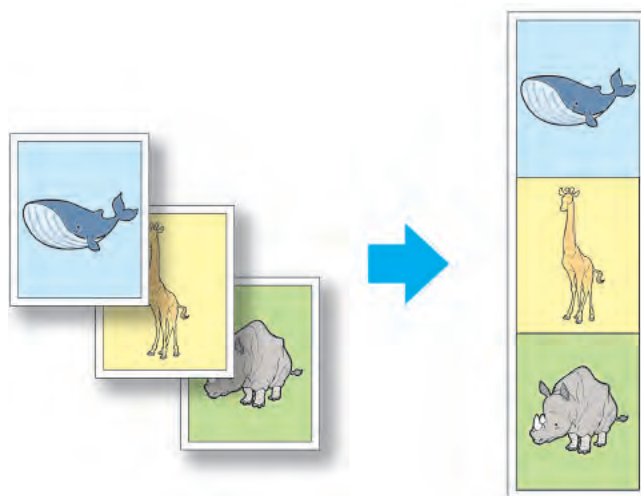

**Important**

- This feature is only available with rolls. It cannot be used when printing on sheets.
- During banner printing, settings for conserving paper, number of copies, borderless printing, enlargement or reduction, and other layout-related settings are disregarded.

138

For instructions on borderless printing of photos and images at actual size, refer to the following topics, as appropriate for your computer and operating system.

- Printing Multiple Pages Continuously (Windows) →P.139
- Printing Multiple Pages Continuously (Mac OS X) →P.141



## Printing Multiple Pages Continuously (Windows)


This topic describes how to print multiple pages as a single continuous image, without margins between pages.



### Important


- This feature is only available with rolls. It cannot be used when printing on sheets.
- During banner printing, settings for conserving paper, number of copies, borderless printing, enlargement or reduction, and other layout-related settings are disregarded.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) (→P.211)")
3. Make sure the **Main** sheet is displayed.

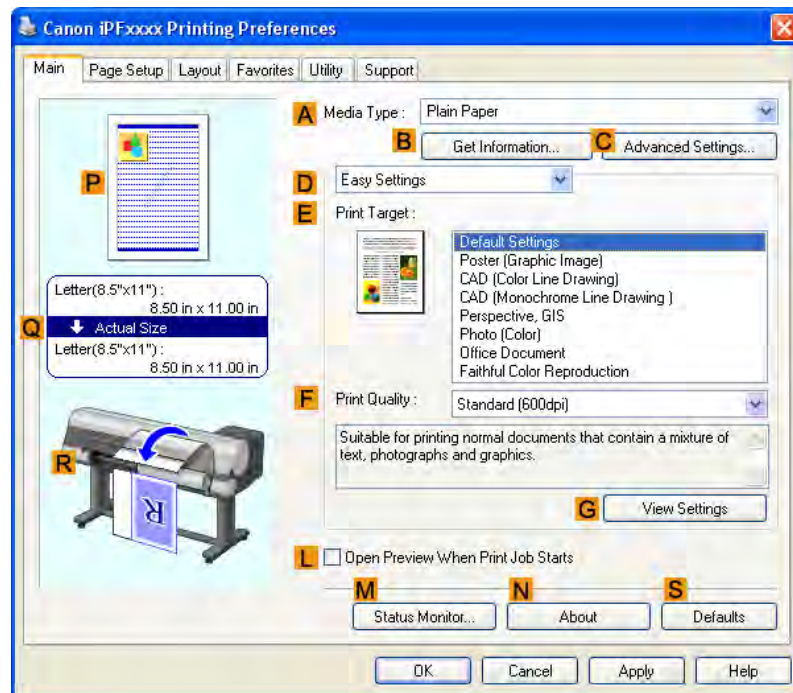


4. In the **A Media Type** list, click the type of paper that is loaded.

5. Click the **Page Setup** tab to display the **Page Setup** sheet.

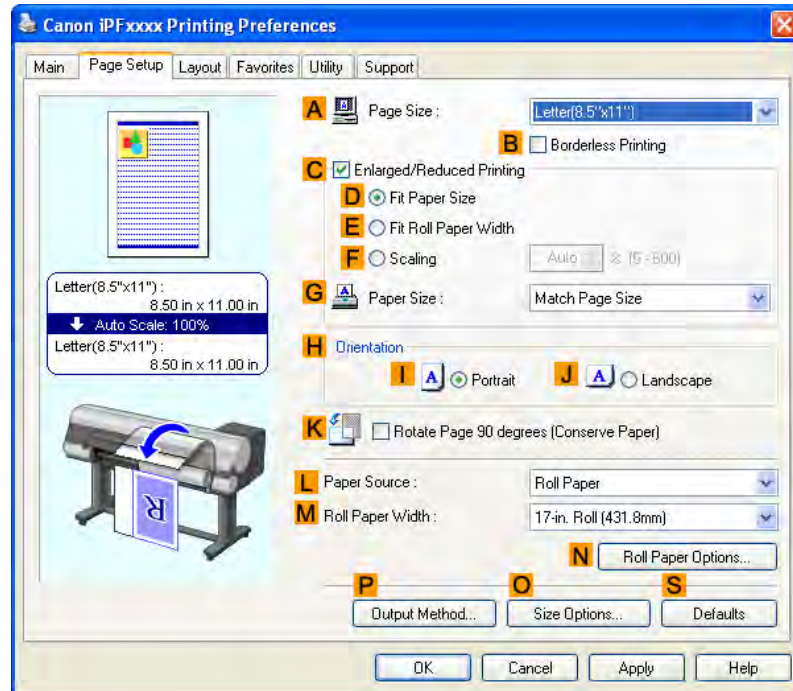

6. Select and click a roll paper in the **L Paper Source** list.

7. Click **N Roll Paper Options** to display the **Roll Paper Options** dialog box.

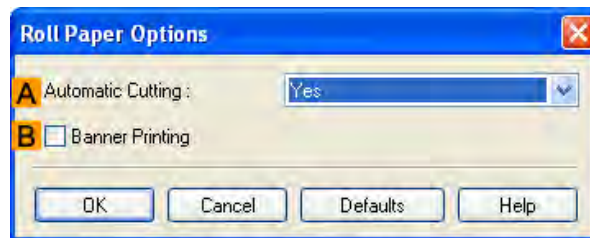

8. Select the **B Banner Printing** check box.

9. Click **OK**.

10. Confirm the print settings and print as desired.



Note

• For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "



## Printing Multiple Pages Continuously (Mac OS X)

This topic describes how to print multiple pages as a single continuous image, without margins between pages.



### Important


- This feature is only available with rolls. It cannot be used when printing on sheets.
- During banner printing, settings for conserving paper, number of copies, borderless printing, enlargement or reduction, and other layout-related settings are disregarded.

1. This sets the **B Format for** and **C Paper Size**.



### Note

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

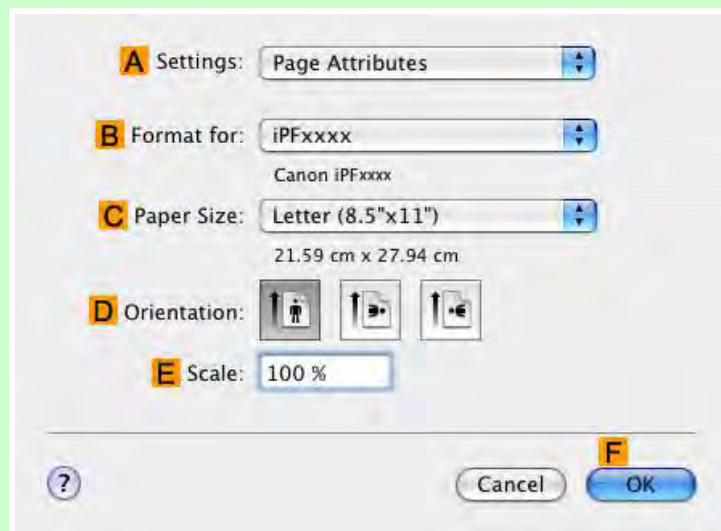


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. Click the original size in the **C Paper Size** list.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

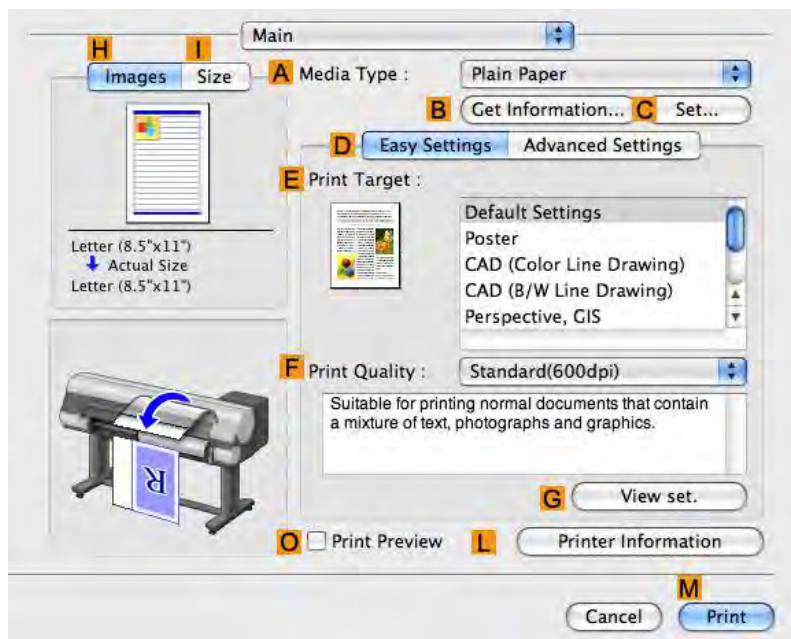


6. In the **A Media Type** list, click the type of paper that is loaded.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

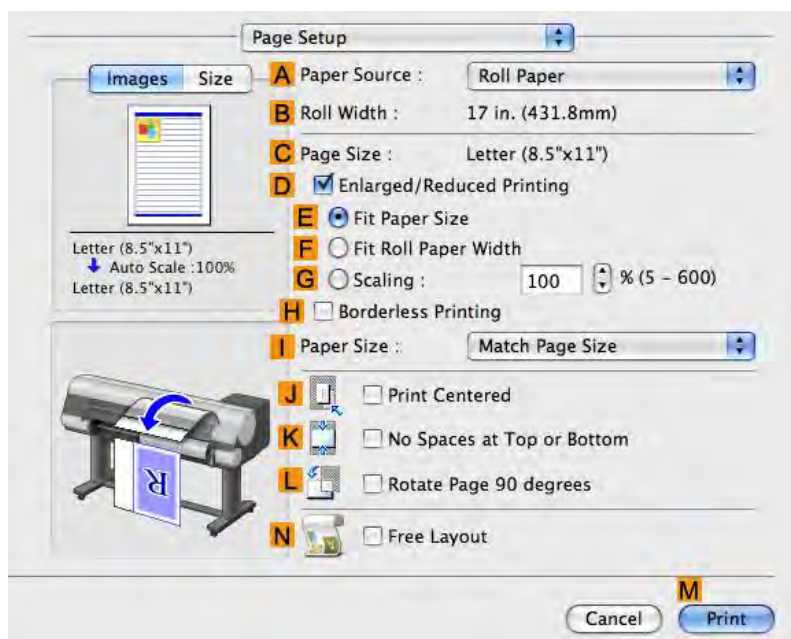

10. In the **A Paper Source** list, click **Roll Paper 1 (Banner)** or **Roll Paper 2 (Banner)**.


11. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Printing Multiple Pages Per Sheet

To conserve paper, you can print several pages of the original on a single sheet by reducing the original and dividing the sheet into areas for each page.

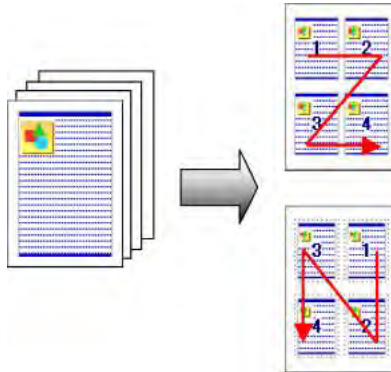

3

## Page Layout

Specify a number of pages of the original to print on a single sheet, in a layout of multiple pages per sheet.

**Note**

- You can print up to 16 pages of the original on a single sheet.
- You can also change the page layout order and print page boundary lines, as desired.

**Important**

- This function cannot be combined with the following options.
  - Borderless Printing
  - Scaling Originals (Windows)
  - Banner Printing (Windows)
- When printing using this function, the **Print Centered** setting is disabled.

For instructions on printing multiple pages per sheet, refer to the following topics, as appropriate for your computer and operating system.

- Printing Multiple Pages Per Sheet (Windows) →P.143
- Printing Multiple Pages Per Sheet (Mac OS X) →P.146

143


## Printing Multiple Pages Per Sheet (Windows)

This topic describes how to print four pages of originals together on a single sheet based on the following example.

- Document: Any Type
- Page size: A3 (297.0×420.0 mm [11.7×16.5 in])


- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.

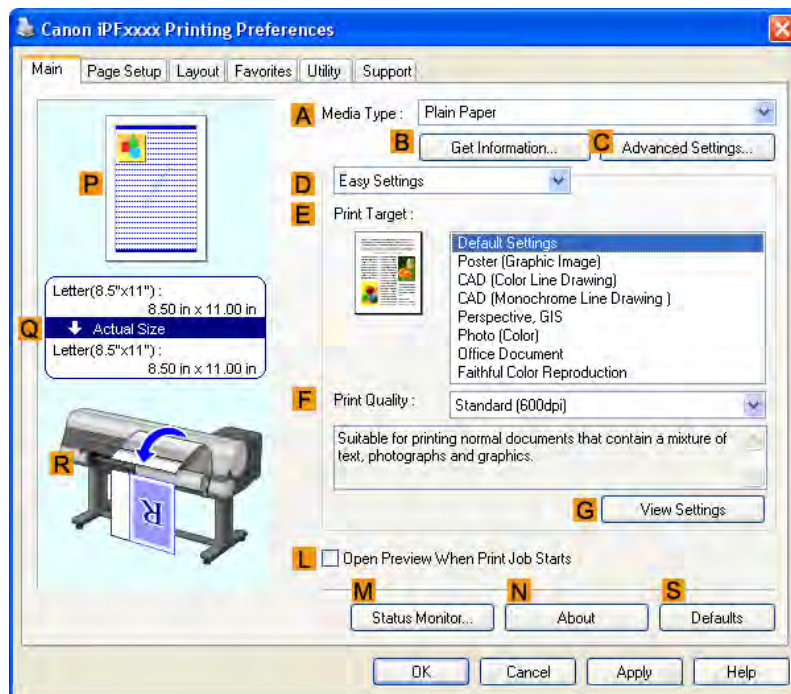

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. Make your selection in the **E Print Target** list.
6. Make your selection in the **F Print Quality** list.

7. Click the **Page Setup** tab to display the **Page Setup** sheet.

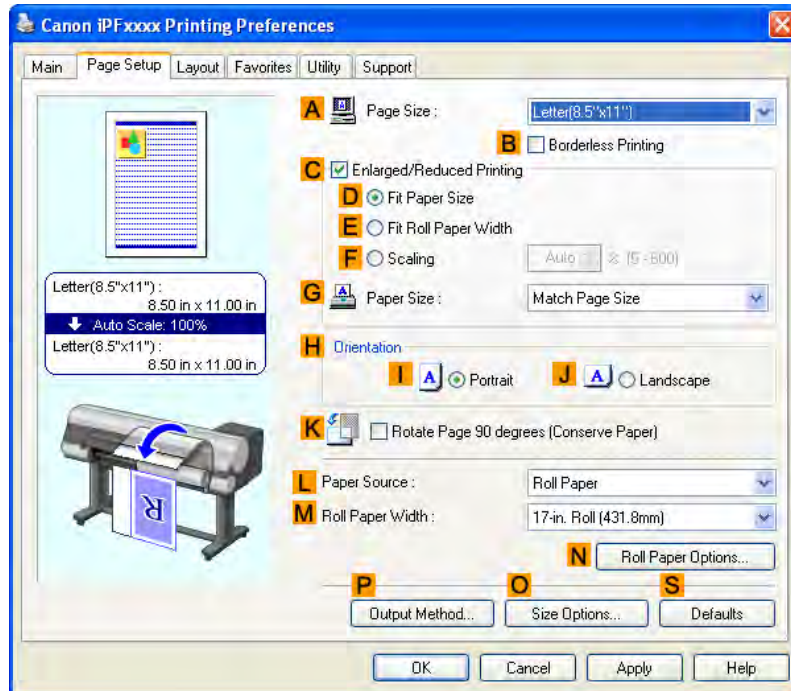


3

8. In **A Page Size**, click the size of the original as specified in the application software. In this case, click **ISO A3** or **Letter (8.5"x11")**.
9. Select and click a roll paper in the **L Paper Source** list.
10. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.

145



11. Click the **Layout** tab to display the **Layout** sheet.

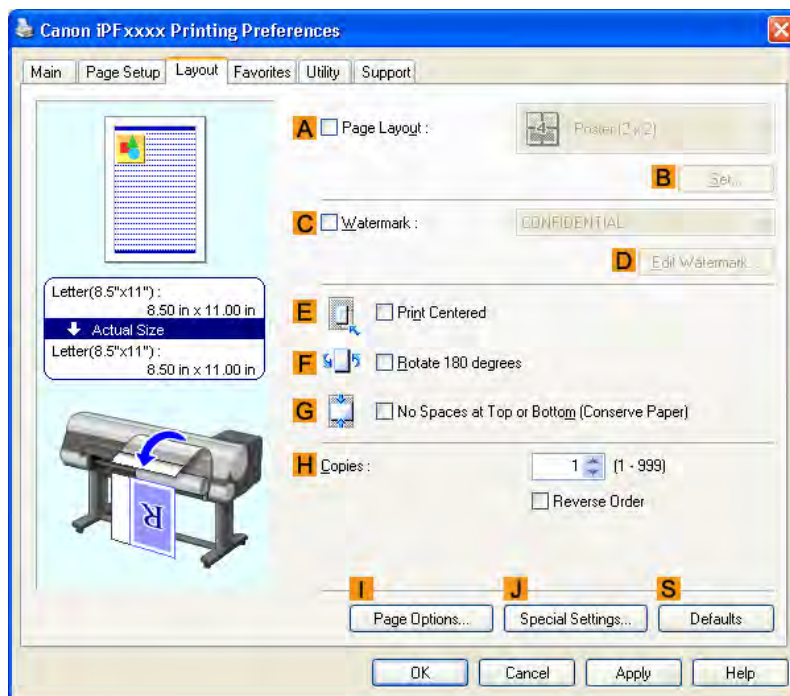

12. Select the **A Page Layout** check box.

13. Click **4 Pages/Sheet** in the **A Page Layout** list.



**Note**

- You can select the layout order for placing four pages on a sheet and a frame border in the **Page Layout Printing** dialog box by clicking **B Set**.

14. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Printing Multiple Pages Per Sheet (Mac OS X)

This topic describes how to print four pages of an original on a single sheet, based on the following example.


- Document: Any Type
- Page size: A3 (297.0 × 420.0 mm [11.7 × 16.5 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])



1. This sets the **B Format for** and **C Paper Size**.

**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

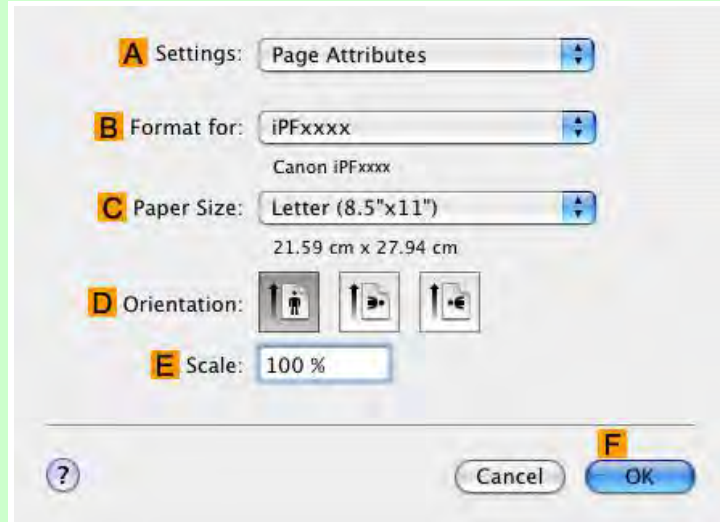


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A3**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Layout** pane.

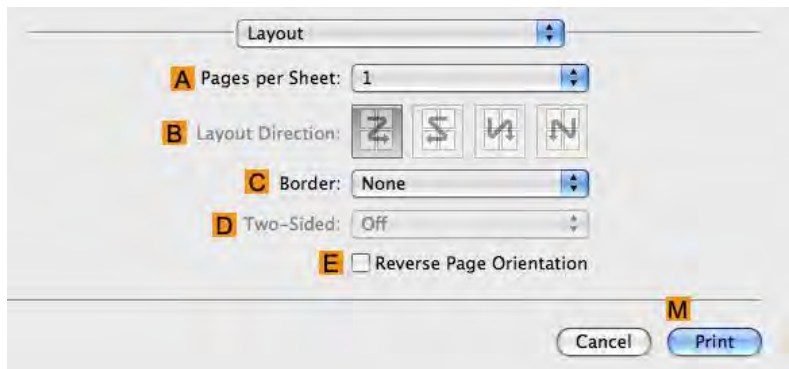

6. Click 4 in the **A Pages per Sheet** list.


3



Note

- You can choose the layout order and specify a boundary line for the four pages in **B Layout Direction** and **C Border**.

7. Access the **Main** pane.

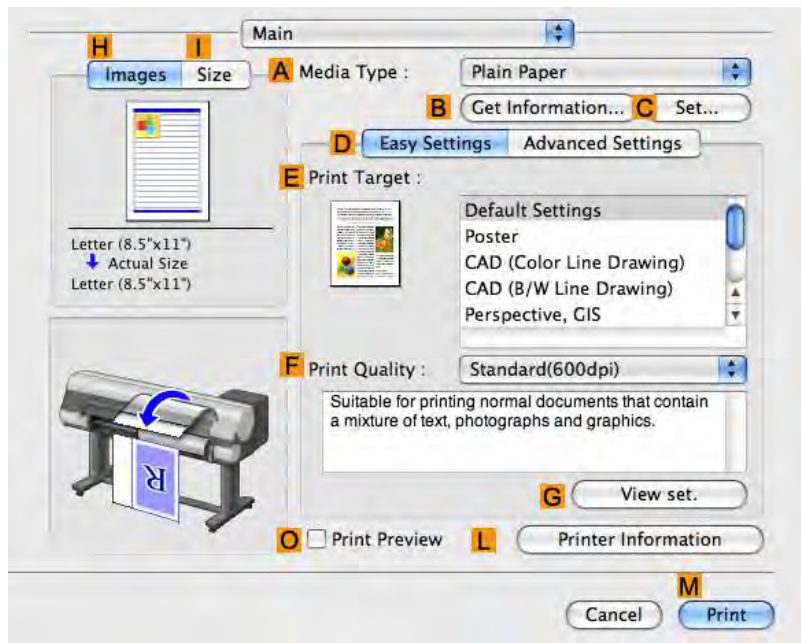


8. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

9. Make your selection in the **E Print Target** list.

10. Make your selection in the **F Print Quality** list.

## 11. Access the **Page Setup** pane.

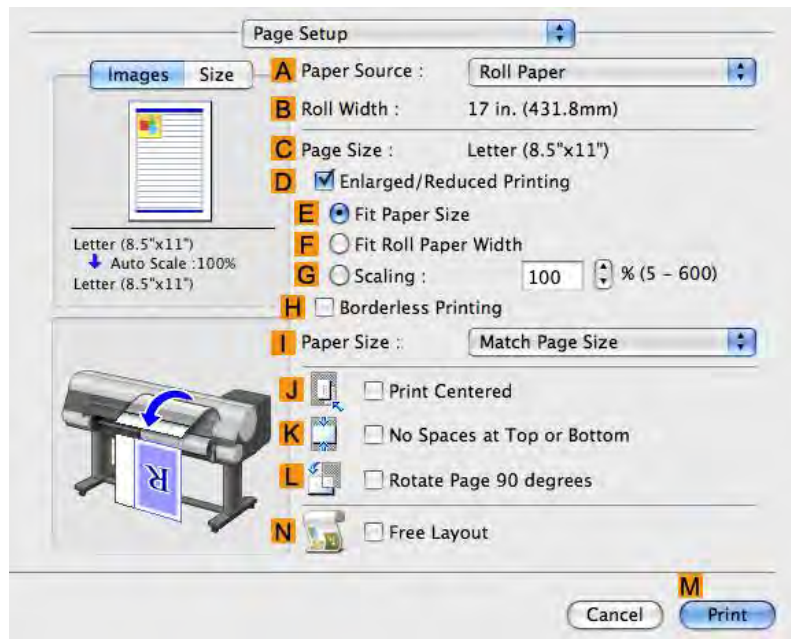


## 12. Select and click a roll paper in the **A Paper Source** list.

## 13. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, ISO A2/A3 (420.0mm).




### Note

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

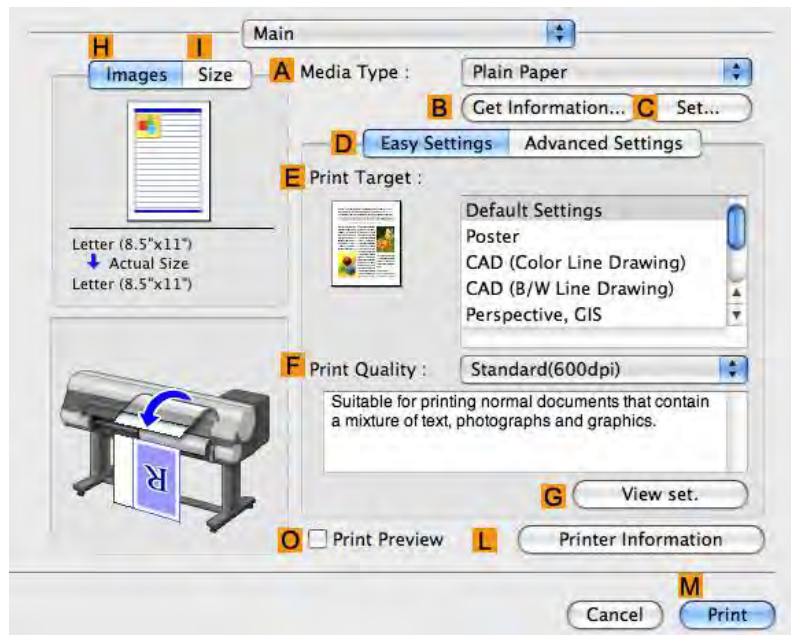

- 14. Make sure **C Page Size** shows the original size as specified in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A3**.

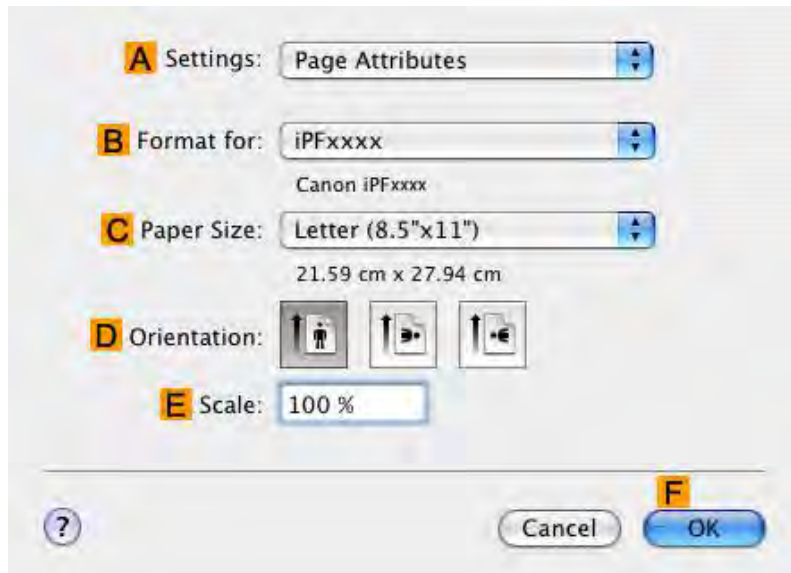


- 15. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Printing Posters in Sections

You can enlarge an original to print it in sections on several sheets. By assembling the printed sheets, you can create a poster larger than the maximum supported paper size of the printer.

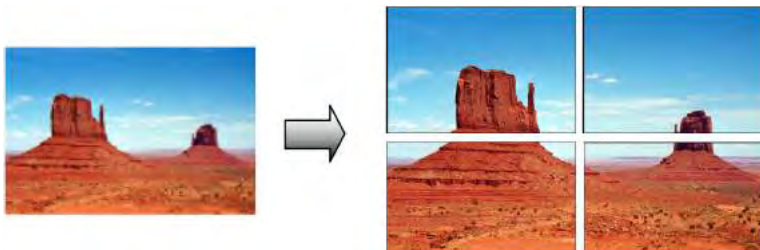

## Page Layout

Choose poster printing.



**Important**

- When printing using this function, the **Print Centered**, **Watermark**, **No Spaces at Top or Bottom (Conserve Paper)**, and **Page Options** settings are disabled.

For instructions on printing large posters, refer to the following topics, as appropriate for your computer and operating system.

- [Printing Large Posters \(Windows\)](#) →P.151

**Note**


- This method of poster printing is supported in Windows.

## Printing Large Posters (Windows)

You can enlarge an original to print it in sections on several sheets. By assembling the printed sheets, you can create a poster larger than the maximum supported paper size of the printer. This topic describes how to enlarge an A2 original for printing it in sections on four sheets, based on the following example.

- Document: Poster
- Page size: A2 (420.0×594.0 mm [16.5 × 23.4 in])
- Paper: Sheets
- Paper Size: A2 (420.0 × 594.0 mm [16.5 × 23.4 in])


1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.

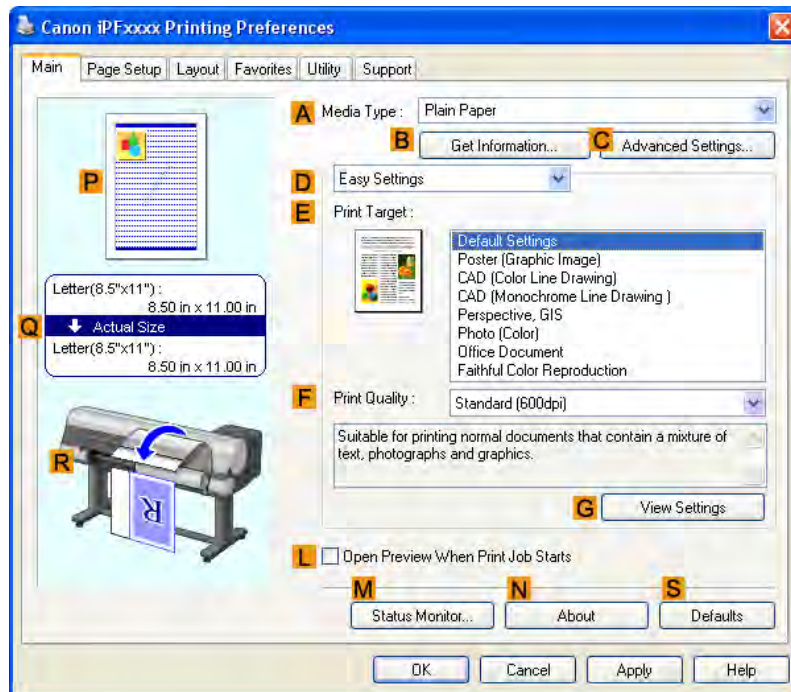

4. In the **A Media Type** list, select the type of paper that is loaded.
5. Click **Poster** in the **E Print Target** list.




6. Click the **Page Setup** tab to display the **Page Setup** sheet.

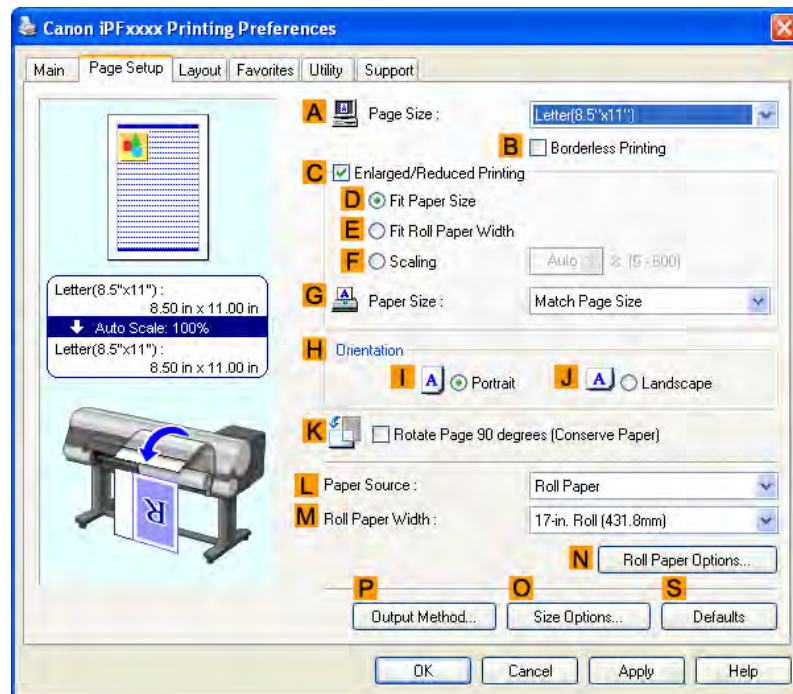

7. In **A Page Size**, click the size of the original as specified in the application. In this case, click **ISO A2**.

8. Click **Cut Sheet** in the **L Paper Source** list.

9. Click the **Layout** tab to display the **Layout** sheet.

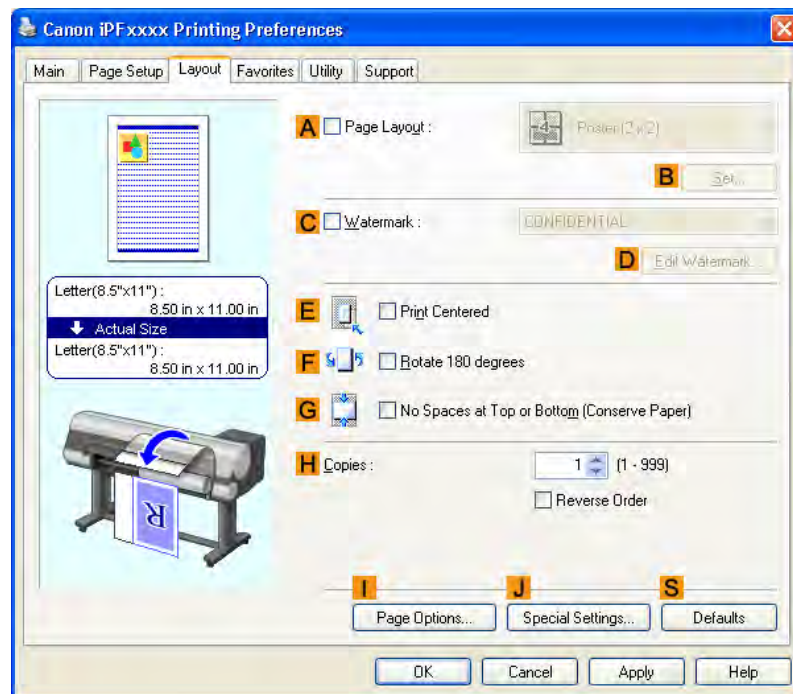



10. Select the **A Page Layout** check box.

11. Click **Poster (2 x 2)** in the **A Page Layout** list.

**Note**

- Follow the steps below to print only a portion of the poster as divided for printing.
  - Click **B Set** under **A Page Layout** to display the **Pages to Print** dialog box.
  - On the **Pages to Print** dialog box, clear the check boxes of the portion you do not want to print.
  - Click **OK** to close the **Pages to Print** dialog box.

12. Confirm the print settings and print as desired.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Centering originals

Printing Originals Centered on Rolls .....	154
Printing Originals Centered on Rolls (Windows) .....	154
Printing Originals Centered on Rolls (Mac OS X) .....	156
Printing Originals Centered on Sheets .....	160
Printing Originals Centered on Sheets (Windows) .....	160
Printing Originals Centered on Sheets (Mac OS X) .....	163

### Printing Originals Centered on Rolls

You can print originals centered on a page—for example, if the paper is larger than the original, or if you are reducing the original.


3

#### Centering originals relative to roll paper width

If you use originals smaller than the roll paper width, you can center them relative to the width when printing.

##### Print Centered

Aligns the center of the original with the center of the roll, relative to the width.

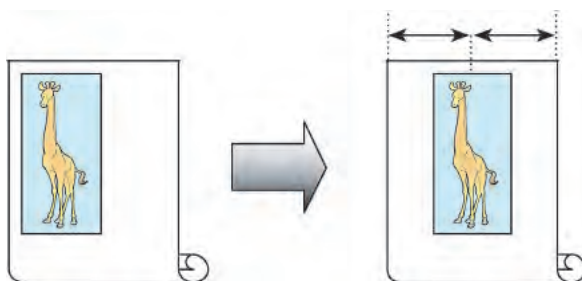

For instructions on centering originals when printing on rolls, refer to the following topics, as appropriate for your computer and operating system.

- Printing Originals Centered on Rolls (Windows) →P.154
- Printing Originals Centered on Rolls (Mac OS X) →P.156


### Printing Originals Centered on Rolls (Windows)

This topic describes how to center originals before printing on rolls based on the following example.

- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll width: A3/A4 roll (297.0 mm [11.7 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")


3. Make sure the **Main** sheet is displayed.

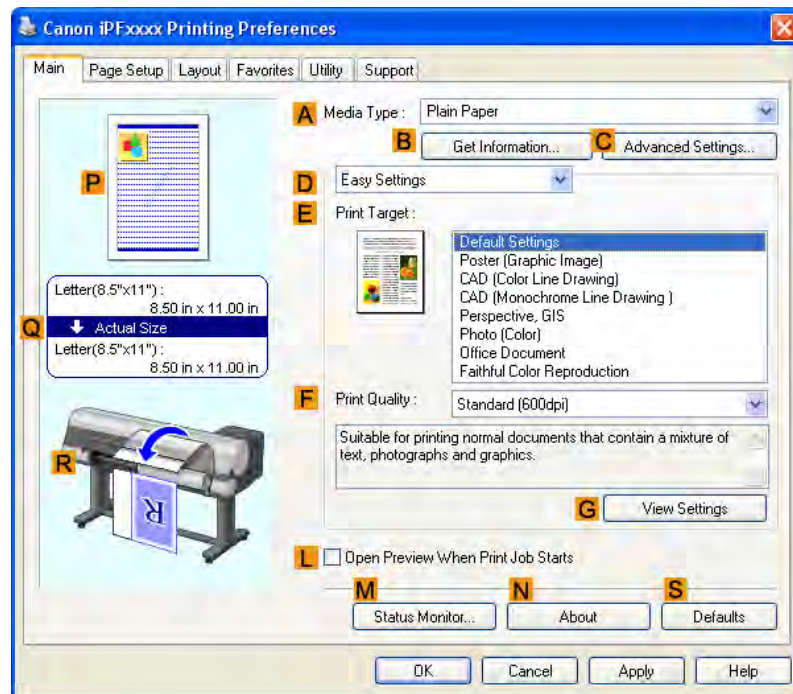


4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

5. Select the print target in the **E Print Target** list.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

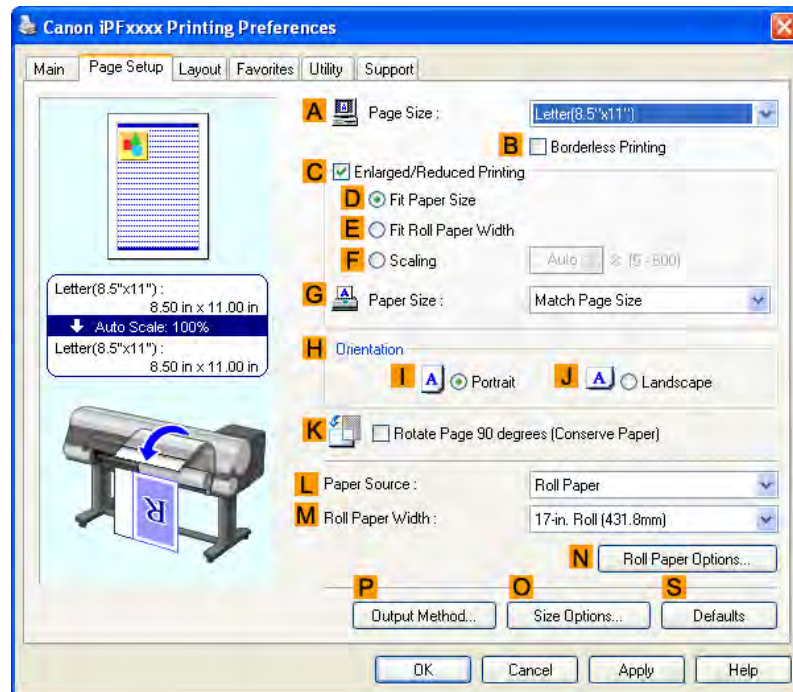

7. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4** or **Letter (8.5"x11")**.
8. Select and click a roll paper in the **L Paper Source** list.
9. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A3/A4 Roll (297.0mm)**.
10. Click the **Layout** tab to display the **Layout** sheet.

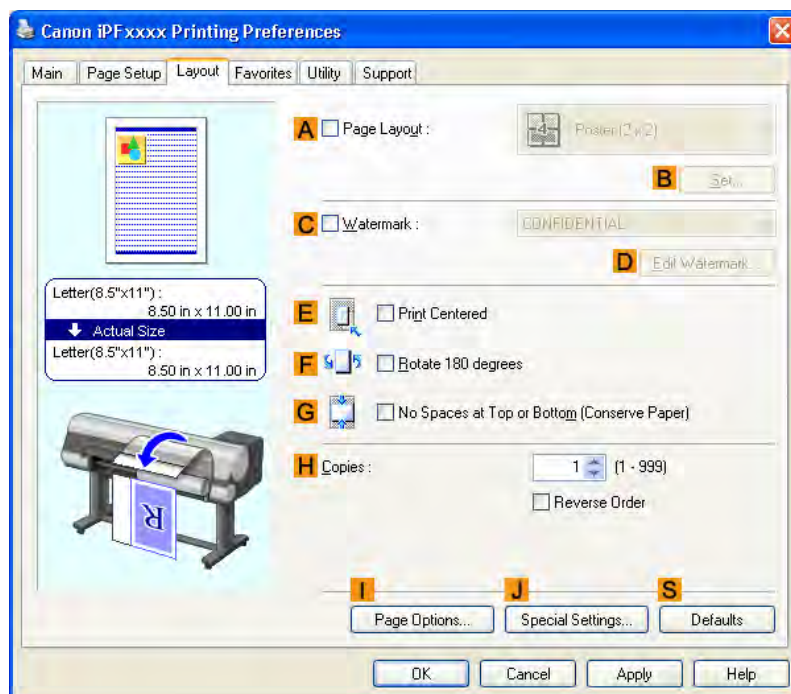

11. Select the **E Print Centered** check box.
12. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Printing Originals Centered on Rolls (Mac OS X)


This topic describes how to center originals before printing on rolls based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])


1. This sets the **B Format for** and **C Paper Size**.

**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

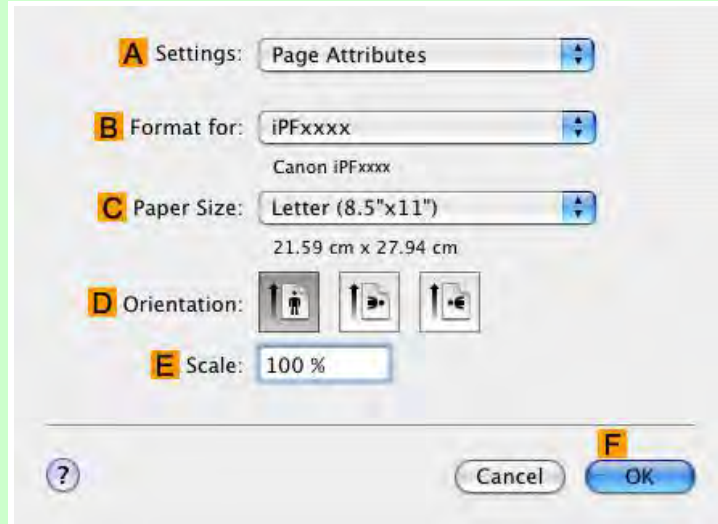


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

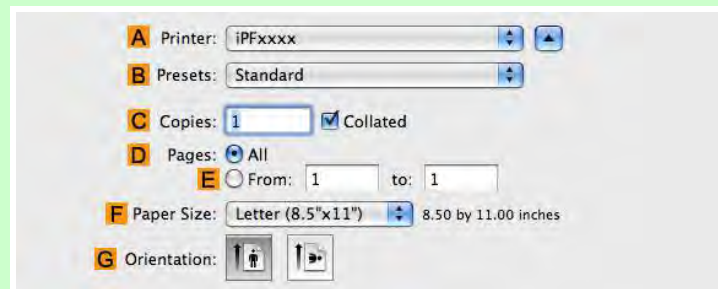

2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.



5. Access the **Main** pane.

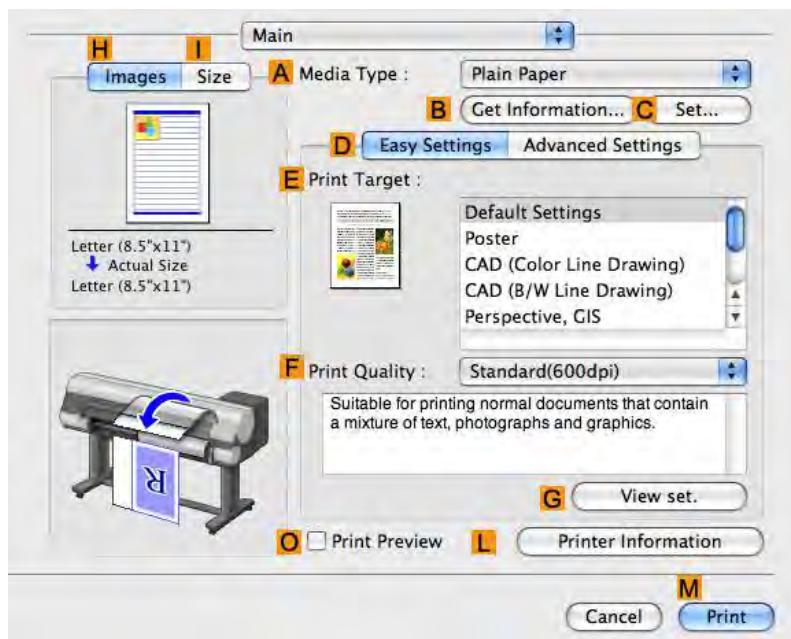


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.

9. Access the **Page Setup** pane.

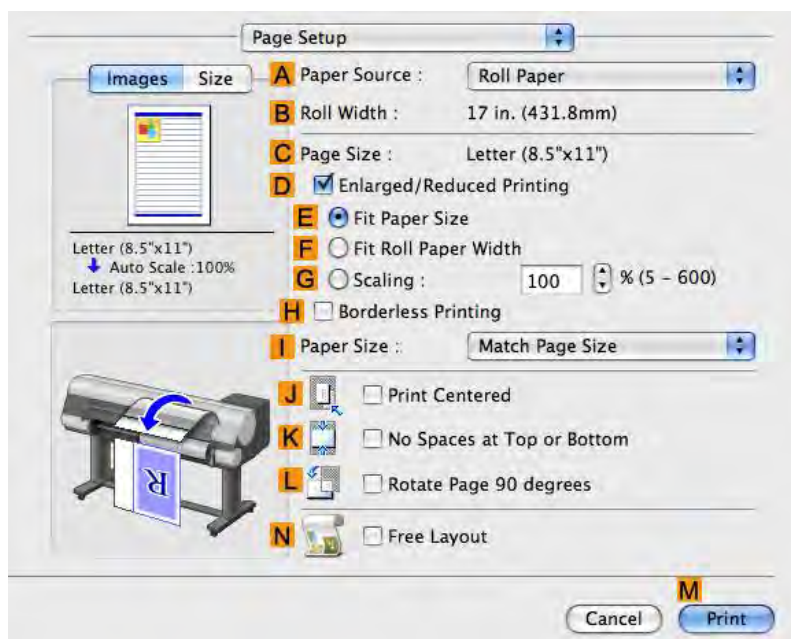


10. Select and click a roll paper in the **A Paper Source** list.

11. Make sure the width of the loaded roll is displayed in **B Roll Width**—in this case, **ISO A3/A4 (297.0mm)**.


**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

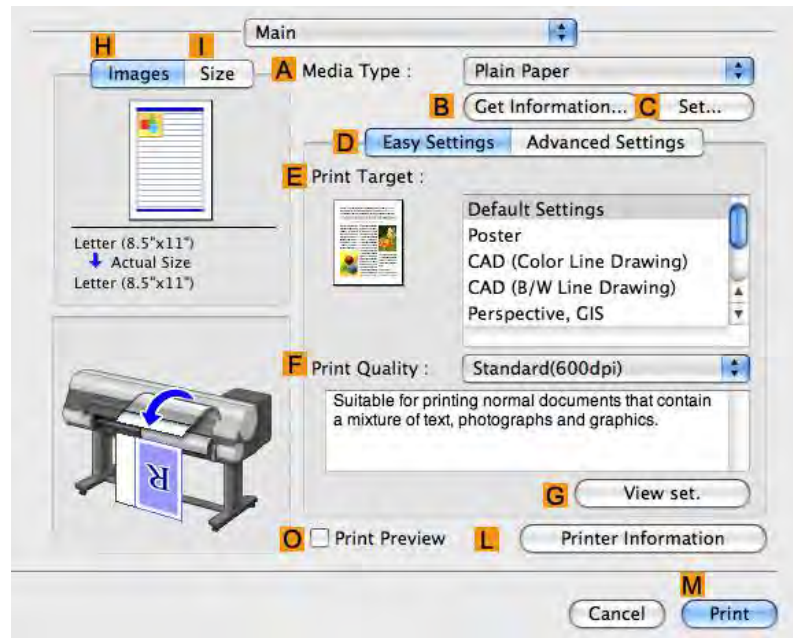

3

12. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

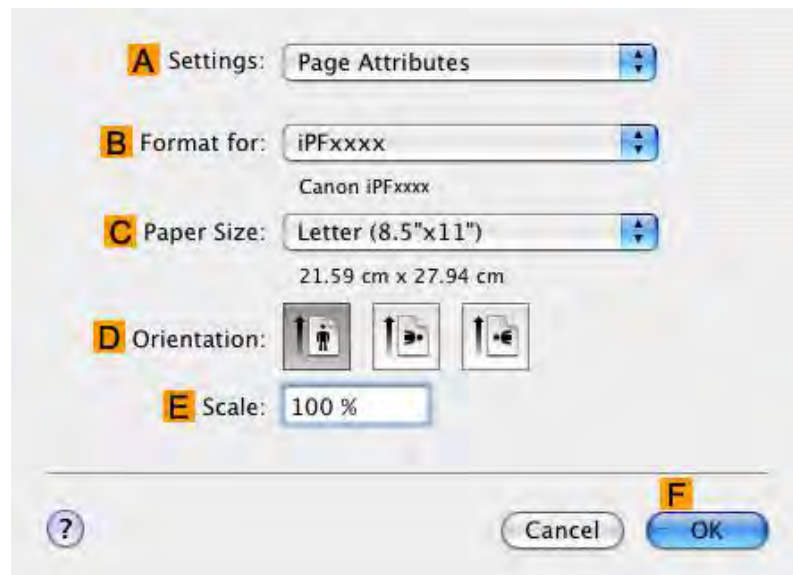

159

13. Select the **J Print Centered** check box.

14. Confirm the print settings, and then click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Printing Originals Centered on Sheets


You can print originals centered on a page—for example, if the paper is larger than the original, or if you are reducing the original.

### Centering originals on sheets

If you use paper larger than the original size or print originals after reduction, the printed images may be aligned in the upper-left corner of the paper. In this case, you can center originals on sheets when printing.

#### Print Centered

Aligns the center of the original with the center of the sheet.

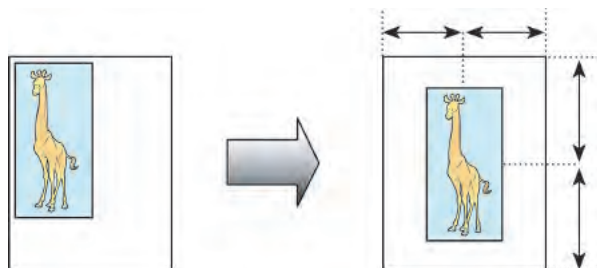

For instructions on centering originals when printing on sheets, refer to the following topics, as appropriate for your computer and operating system.

- Printing Originals Centered on Sheets (Windows) →P.160
- Printing Originals Centered on Sheets (Mac OS X) →P.163


## Printing Originals Centered on Sheets (Windows)

This topic describes how to reduce an original 50% for printing centered on a sheet.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Sheets
- Paper type: Plain Paper
- Paper size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")


3. Make sure the **Main** sheet is displayed.

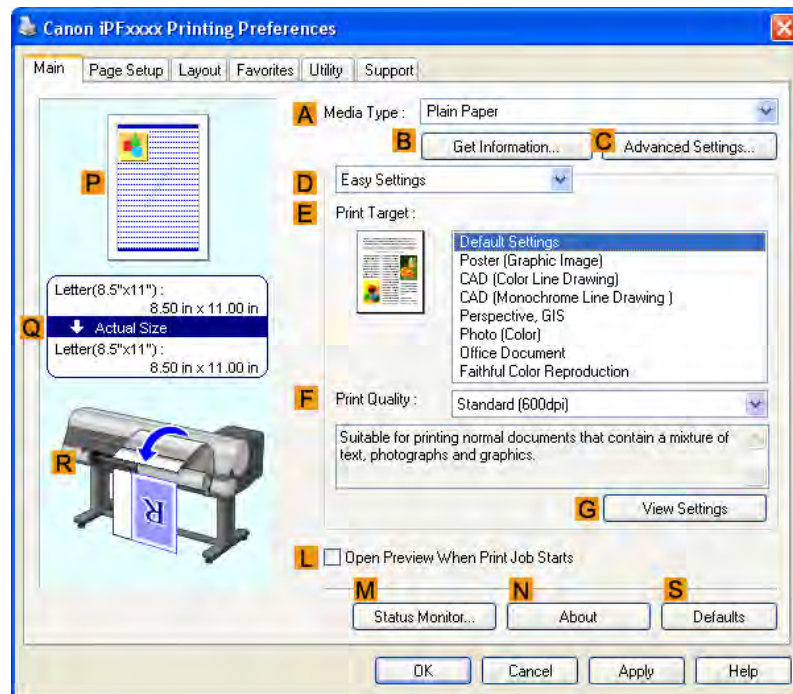

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.


5. Make your selection in the **E Print Target** list.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

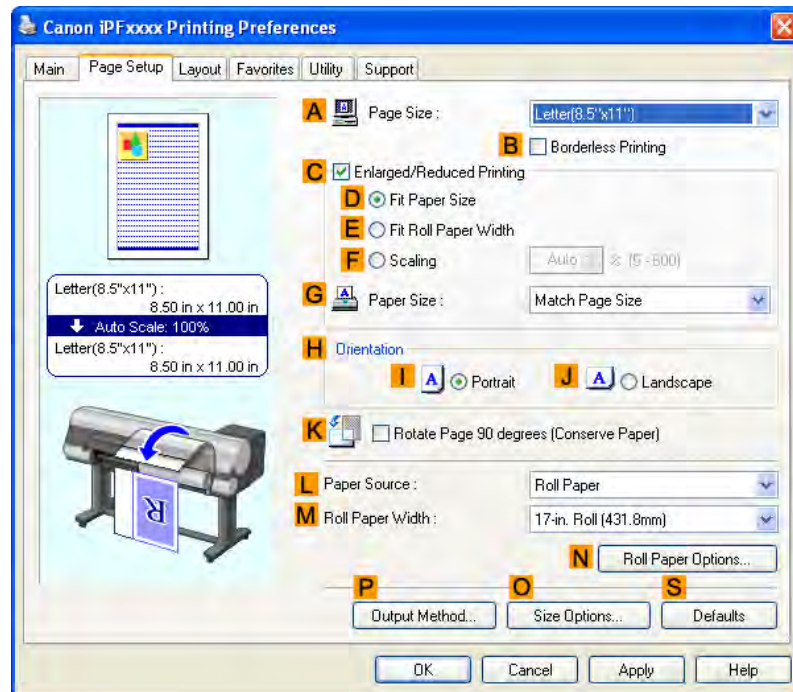



7. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4**.
8. Select the **C Enlarged/Reduced Printing** check box.
9. Click **Match Page Size** in the **G Paper Size** list.
10. Click **F Scaling** and enter **50**.
11. Click **Cut Sheet** in the **L Paper Source** list.
12. Click the **Layout** tab to display the **Layout** sheet.

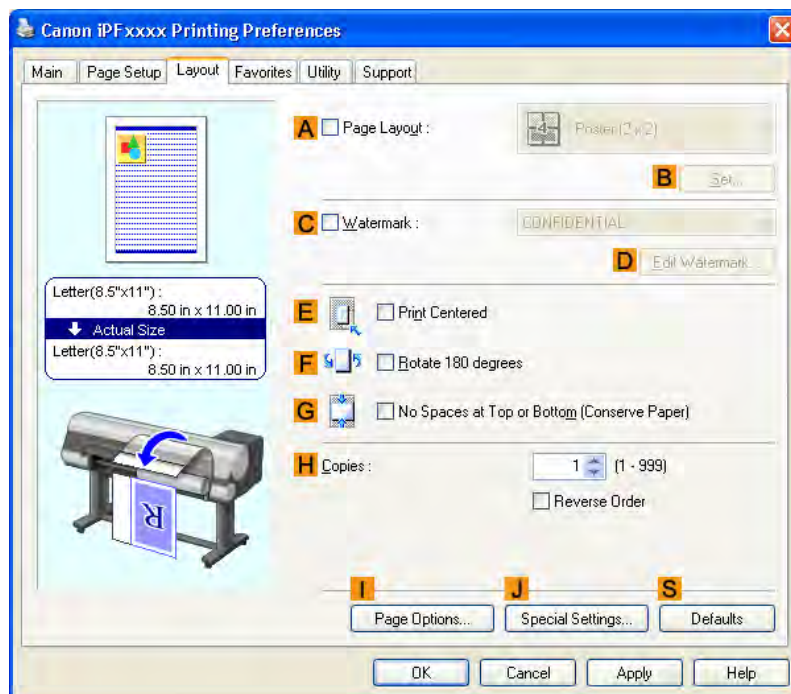

13. Select the **E Print Centered** check box.
14. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "



**Important**

- If you have selected **Cut Sheet** as the paper source, follow the instructions on the printer control panel to enter the paper size.



## Printing Originals Centered on Sheets (Mac OS X)

This topic describes how to center originals for printing on sheets, based on the following example.

- Document: Any Type
- Page size: A4
- Paper: Sheets
- Paper type: Plain Paper
- Paper size: Non-standard

1. This sets the **B Format for** and **C Paper Size**.




### Note

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.



If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

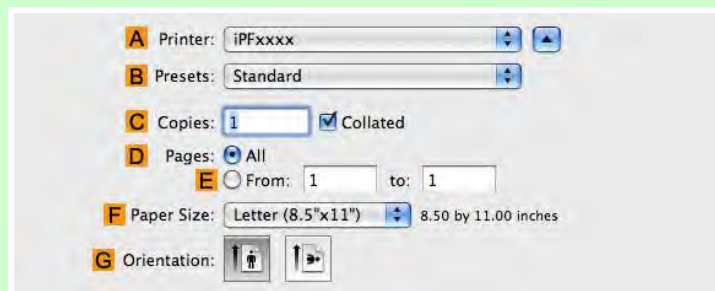


2. Select the printer in the **A Printer** list.

3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4 - Cut Sheet**.

4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

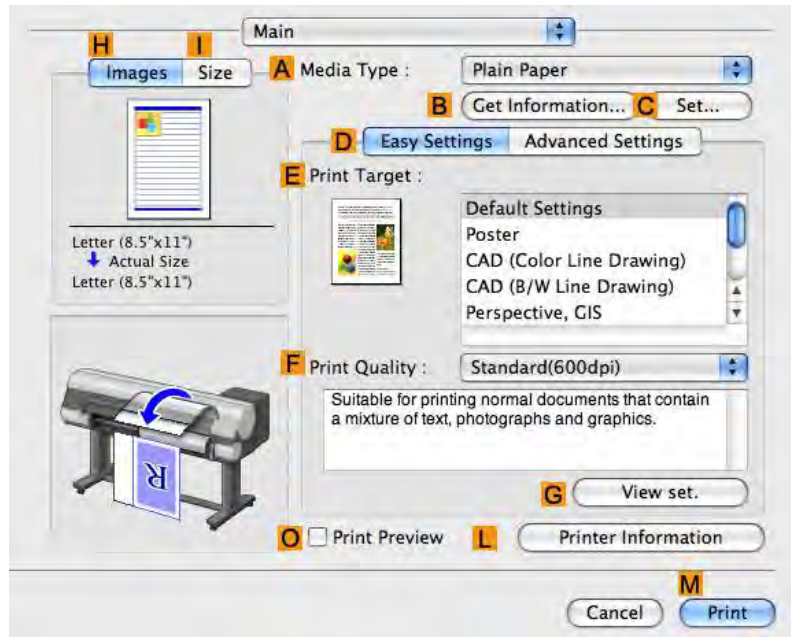


6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Make your selection in the **E Print Target** list.

8. Make your selection in the **F Print Quality** list.


9. Access the **Page Setup** pane.

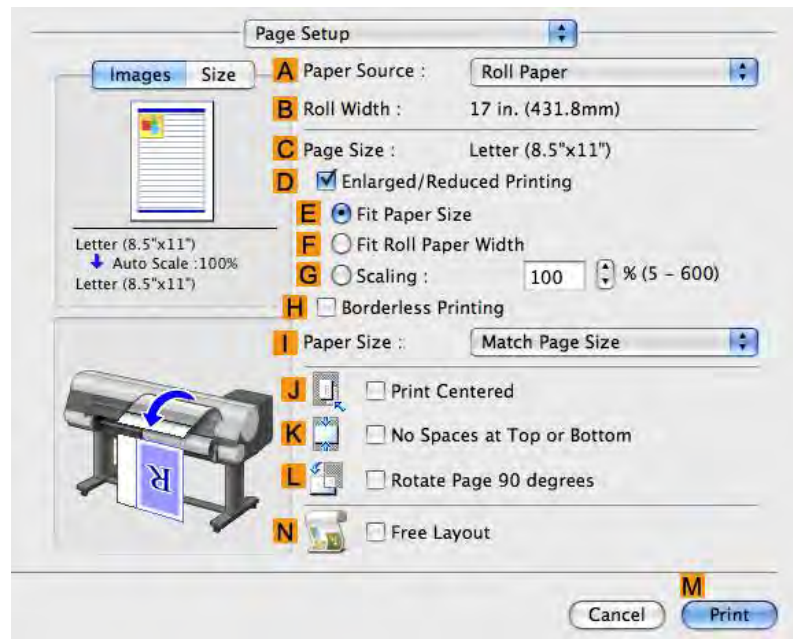

3

10. Click **Cut Sheet** in the **A Paper Source** list.

11. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4 - Cut Sheet**.

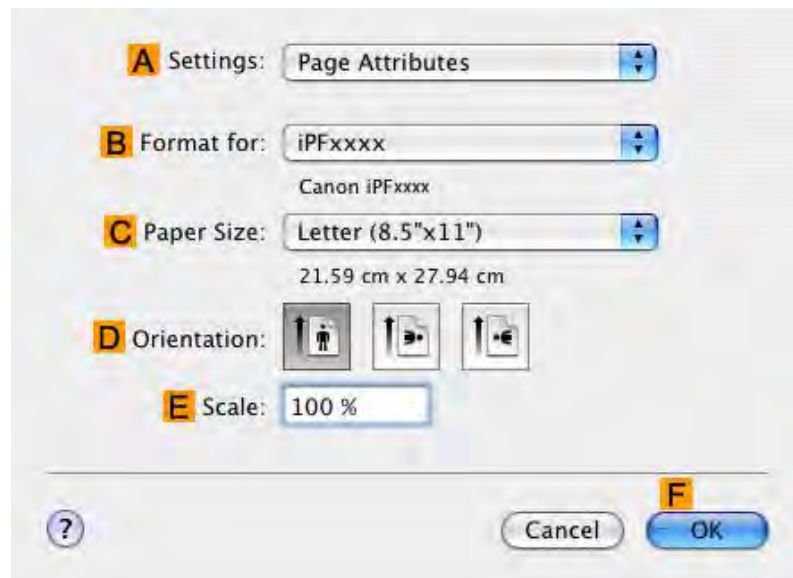

165

12. Select the **J Print Centered** check box.

13. Confirm the print settings, and then click **M Print** to start printing.



Note

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "



**Important**

- If you have selected **Cut Sheet** as the paper source, follow the instructions on the printer control panel to enter the paper size.

## Conserving roll paper


Conserving Roll Paper by Rotating Originals 90 Degrees .....	167
Conserving Roll Paper by Rotating Originals 90 Degrees (Windows) .....	167
Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS X) .....	169
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins .....	173
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows) .....	173
Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS X) .....	176

### Conserving Roll Paper by Rotating Originals 90 Degrees

You can conserve roll paper by specifying particular settings as suitable for your original.

#### Rotate Page 90 degrees (Conserve Paper)

When originals are printed in portrait orientation, the original is rotated 90 degrees before printing if it fits within the roll width. This enables you to conserve paper.

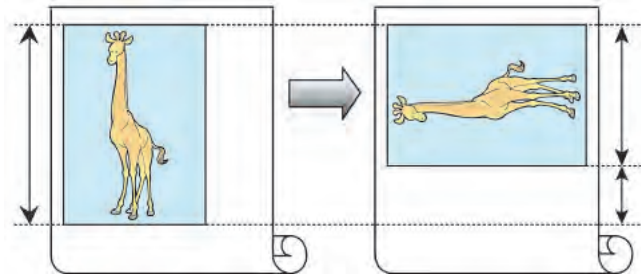

#### Important

- If the page would exceed the roll paper width after rotation, use this function with Scale to fit Roll Paper Width to print rotated pages.

For tips on conserving roll paper, refer to the following topics, as appropriate for your computer and operating system.

- Conserving Roll Paper by Rotating Originals 90 Degrees (Windows) →P.167
- Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS X) →P.169

### Conserving Roll Paper by Rotating Originals 90 Degrees (Windows)


This topic describes how to conserve paper by rotating originals 90 degrees before printing, based on the following example.

- Document: Any type
- Page size: A4 (210.0×297.0 mm)/Letter (8.3×11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])



This example illustrates how to rotate an A4 (210.0×297.0 mm)/Letter (8.3×11.7 in) original in portrait orientation 90 degrees to fit within the width of A3/A4 roll paper (297.0 mm [11.7 in]), which enables you to conserve paper.


1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) (→P.211)")
3. Make sure the **Main** sheet is displayed.

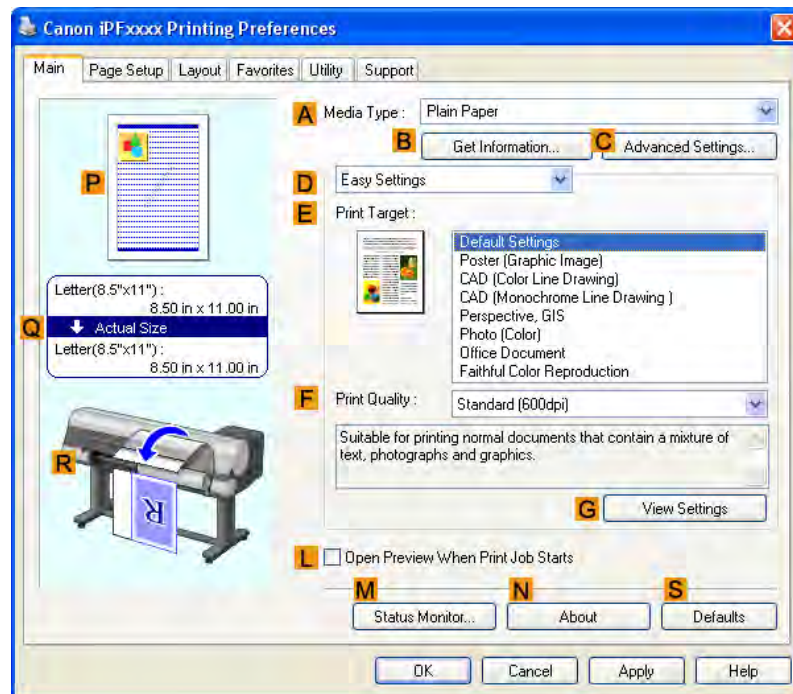

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

3

5. Click the **Page Setup** tab to display the **Page Setup** sheet.

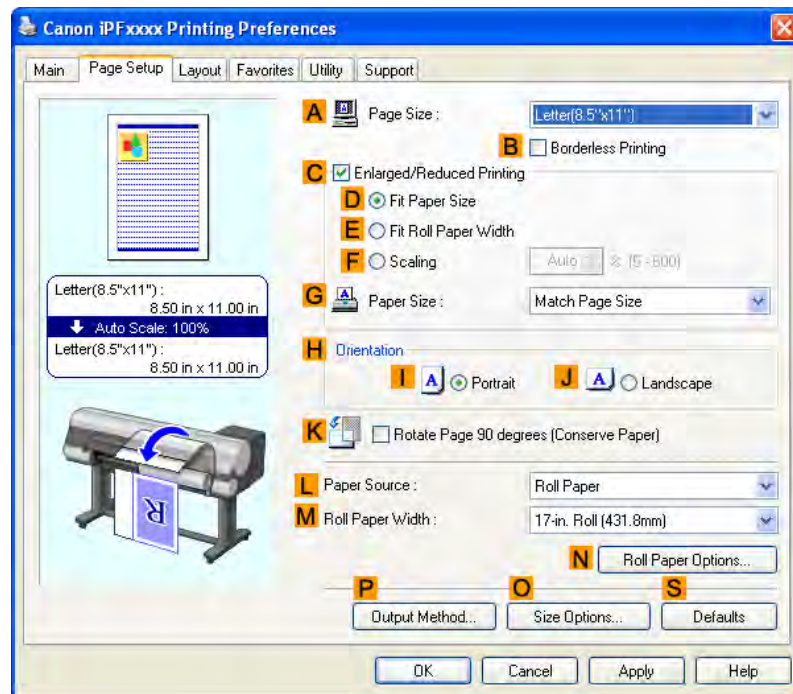

6. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4** or **Letter (8.5"x11")**.
7. Select and click a roll paper in the **L Paper Source** list.
8. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A3/A4 Roll (297.0mm)**.
9. Select the **K Rotate Page 90 degrees (Conserve Paper)** check box.
10. Confirm the print settings and print as desired.



#### Note

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Conserving Roll Paper by Rotating Originals 90 Degrees (Mac OS X)

This topic describes how to conserve roll paper by rotating originals 90 degrees before printing, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])


This example illustrates how to rotate an A4 (210.0×297.0 mm)/Letter (8.3 × 11.7 in) original in portrait orientation 90 degrees to fit within the width of A3/A4 roll (297.0 mm [11.7 in]), which enables you to conserve paper.

1. This sets the **B Format for** and **C Paper Size**.



**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

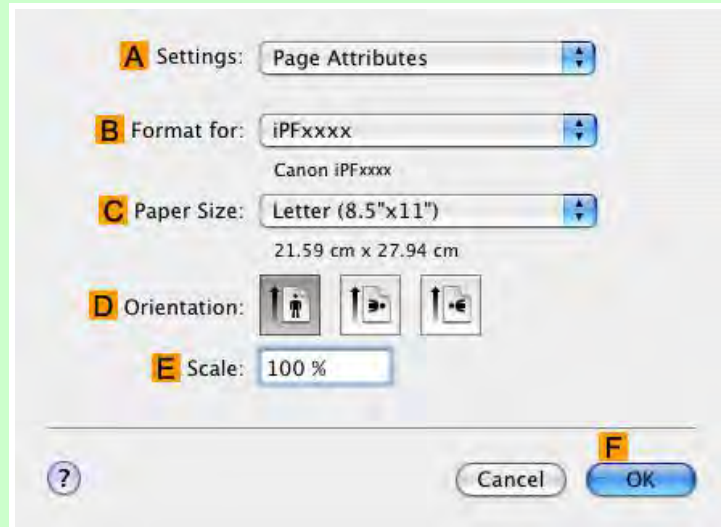


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

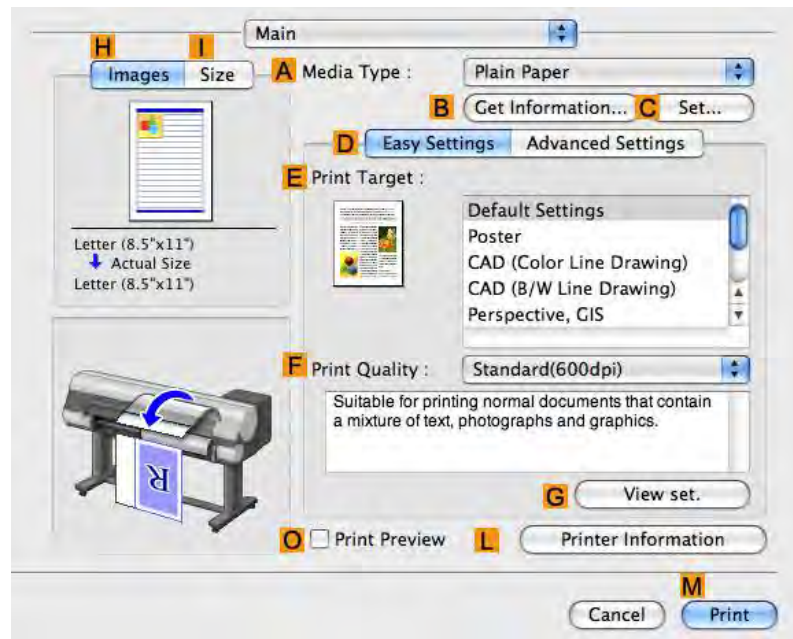

6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Access the **Page Setup** pane.

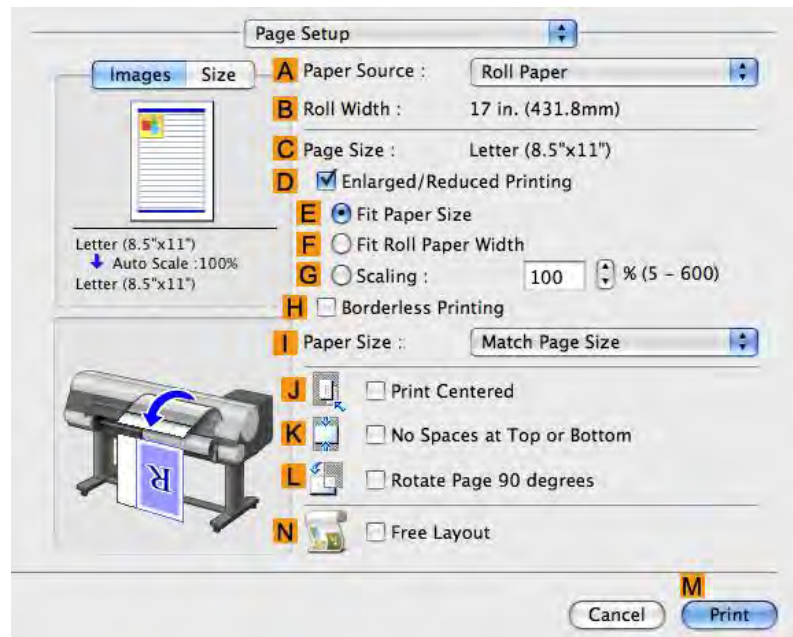

8. Select and click a roll paper in the **A Paper Source** list.




9. Make sure the width of the loaded roll is displayed in **B Roll Width** —in this case, **ISO A3/A4 (297.0mm)**.




**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

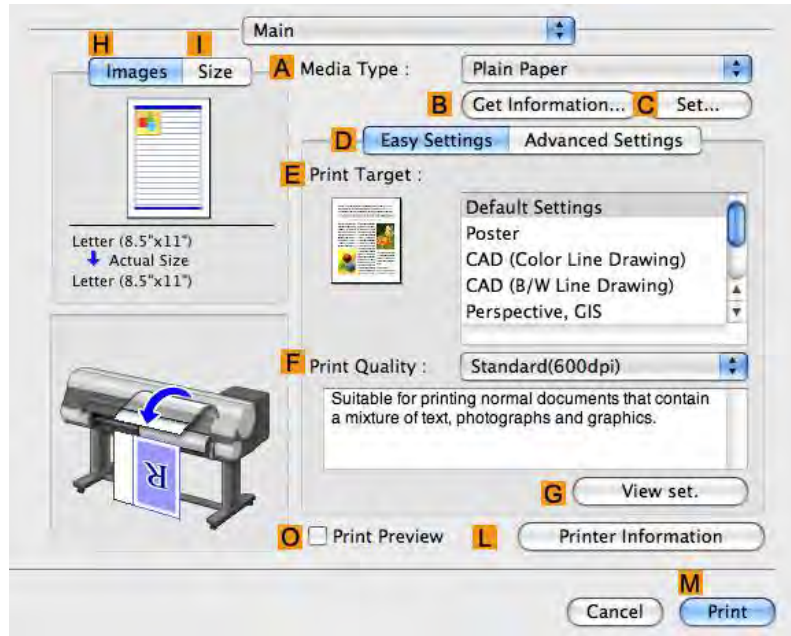

3

10. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

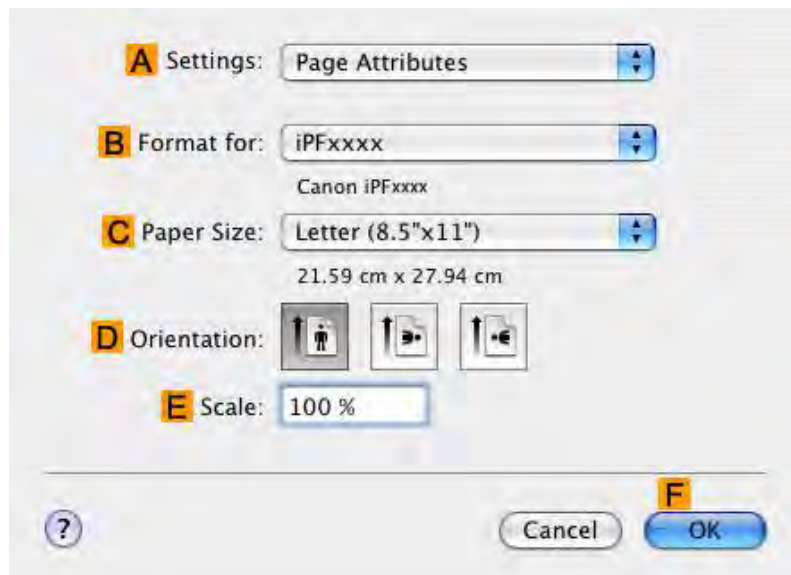

172

11. Select the **L Rotate Page 90 degrees** check box.



12. Confirm the print settings, and then click **M Print** to start printing.



**Note**


- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Conserving Roll Paper by Printing Originals Without Top and Bottom Margins

You can conserve roll paper by specifying particular settings as suitable for your original.

### No Spaces at Top or Bottom (Conserve Paper)

You can print without feeding the paper for blank portions of originals if there are top and bottom margins in originals. This enables you to conserve as much paper as the size of the margins.

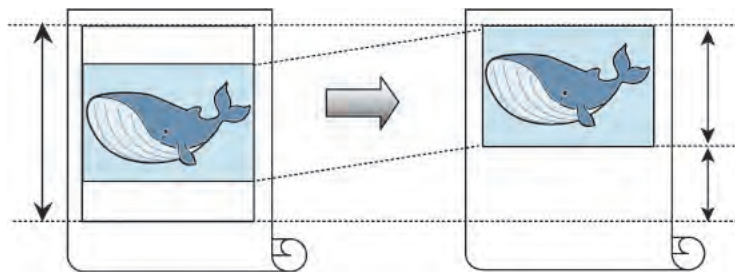

**Important**

- Printing without the top and bottom margins is not supported in the following cases.
  - Banner printing
  - If you have chosen poster as the type of page layout



**Note**

- Even during borderless printing, you can print without the top and bottom margins.
- Printing without the top and bottom margins may cause inconsistency in the size of printed documents, depending on the layout of images or text in your originals.

For tips on conserving roll paper, refer to the following topics, as appropriate for your computer and operating system.


- Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows) →P.173
- Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS X) →P.176

## Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Windows)

This topic describes how to conserve roll paper when printing originals that have a top and bottom margin, based on the following example.


- Document: Any type
- Page size: A4 (210.0×297.0mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.

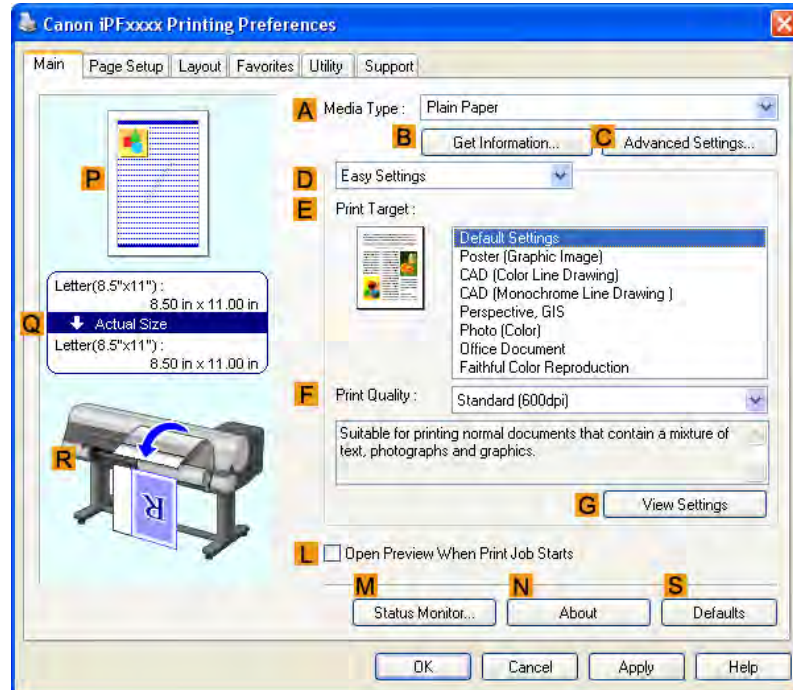


4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

5. Click the **Page Setup** tab to display the **Page Setup** sheet.

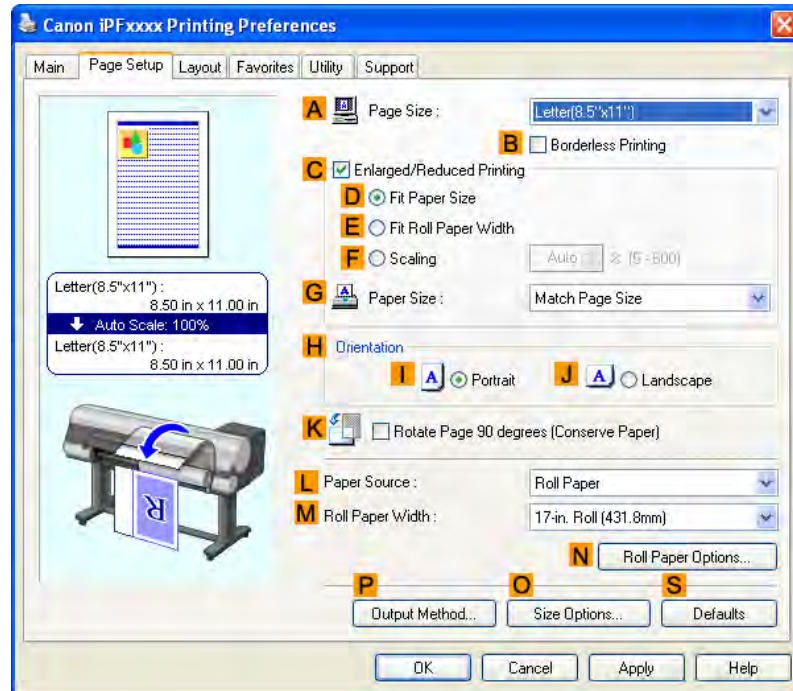

6. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4** or **Letter (8.5"x11")**.
7. Select and click a roll paper in the **L Paper Source** list.
8. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A3/A4 Roll (297.0mm)**.

9. Click the **Layout** tab to display the **Layout** sheet.

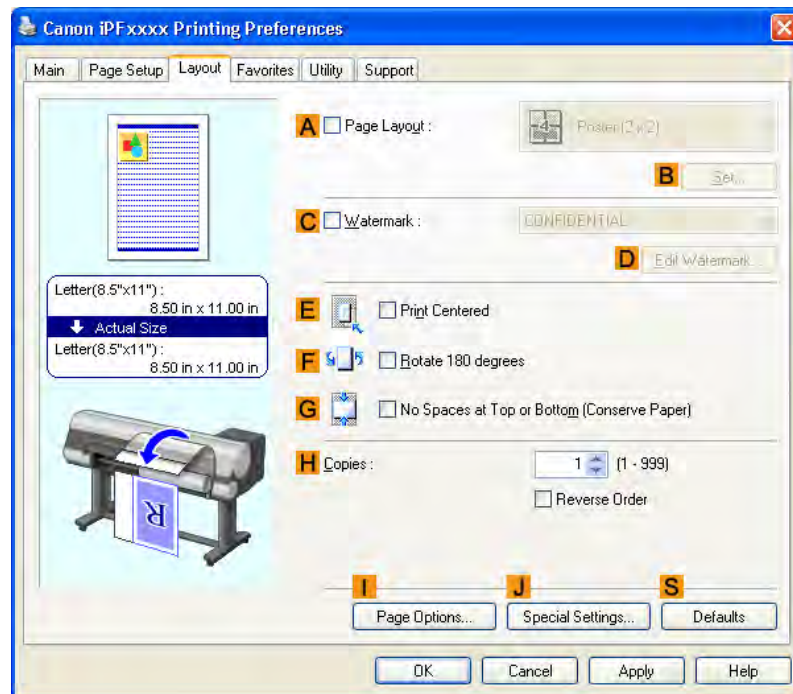

10. Select the **G No Spaces at Top or Bottom (Conserve Paper)** check box.

11. Confirm the print settings and print as desired.



**Note**

• For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Conserving Roll Paper by Printing Originals Without Top and Bottom Margins (Mac OS X)


This topic describes how to conserve roll paper when printing originals that have a top and bottom margin, based on the following example.

- Document: Any Type
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A3/A4 roll (297.0 mm [11.7 in])

1. This sets the **B Format for** and **C Paper Size**.

**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

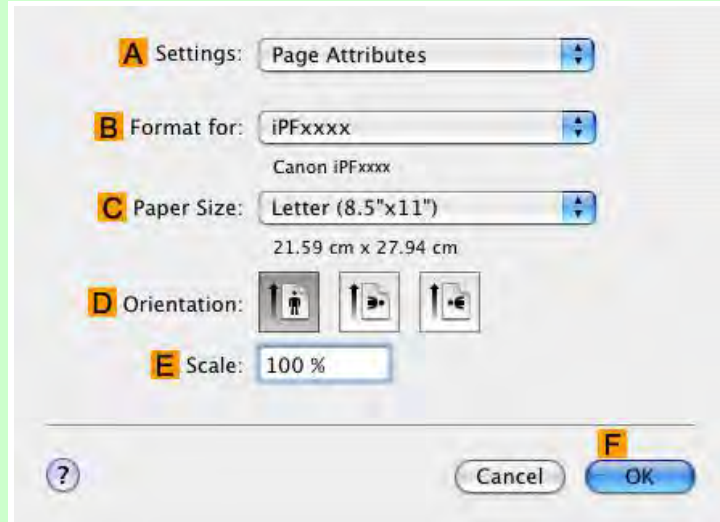


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.



2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.




5. Access the **Main** pane.

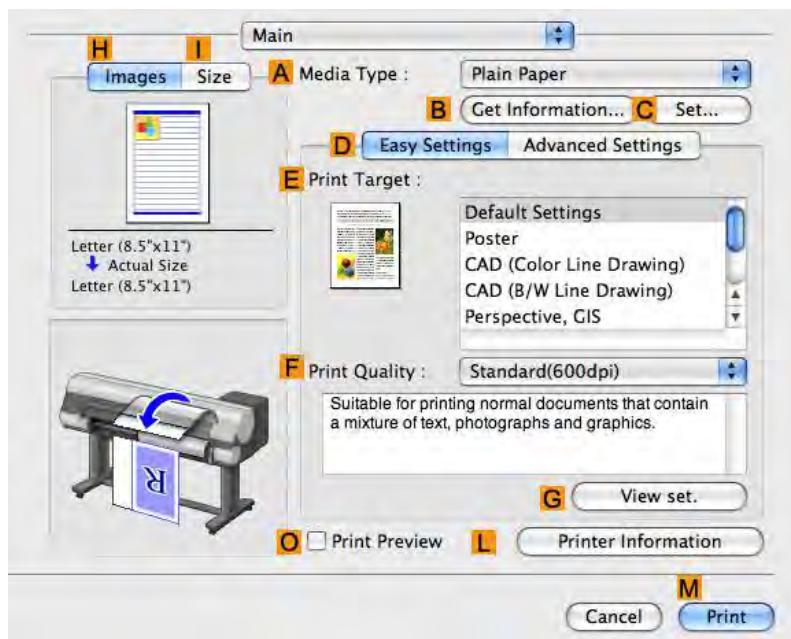

6. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

7. Access the **Page Setup** pane.

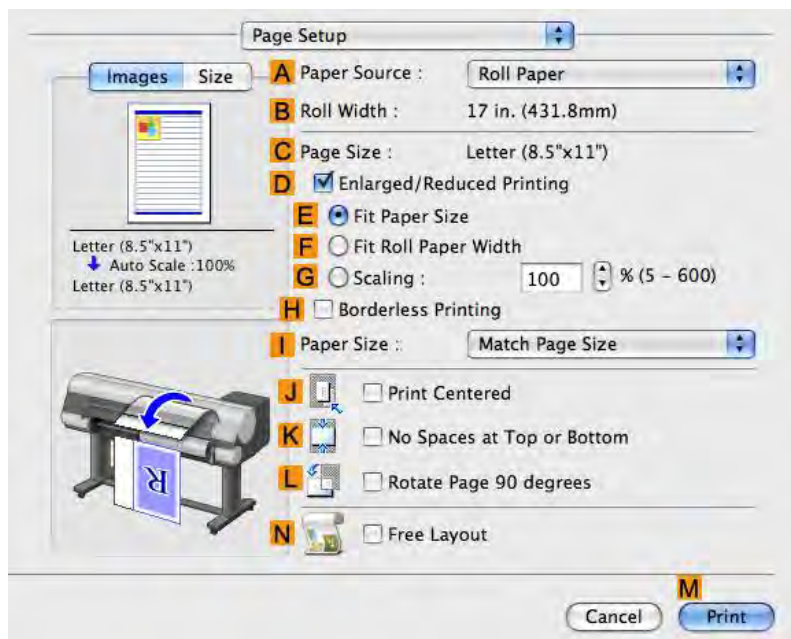


8. Select and click a roll paper in the **A Paper Source** list.

9. Make sure the width of the loaded roll is displayed in **B Roll Width**—in this case, **ISO A3/A4 (297.0mm)**.


**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

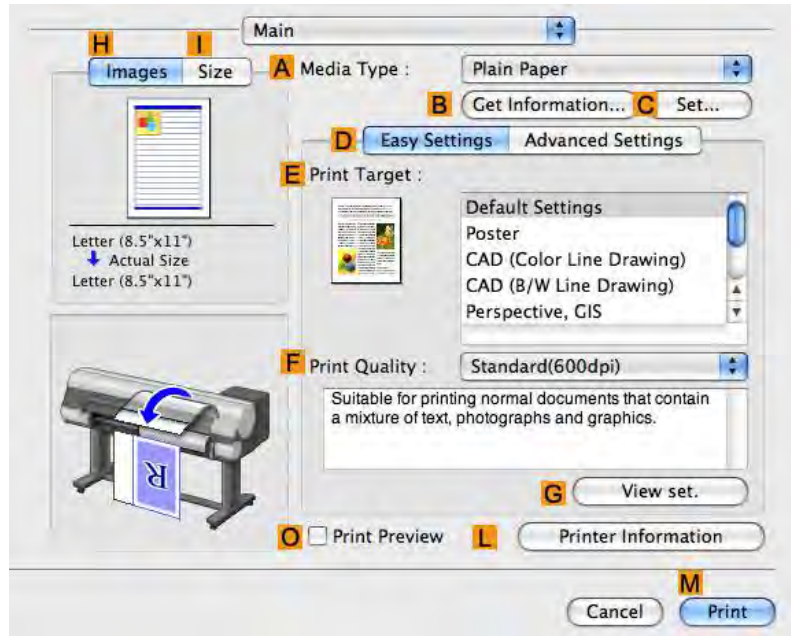

3

10. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

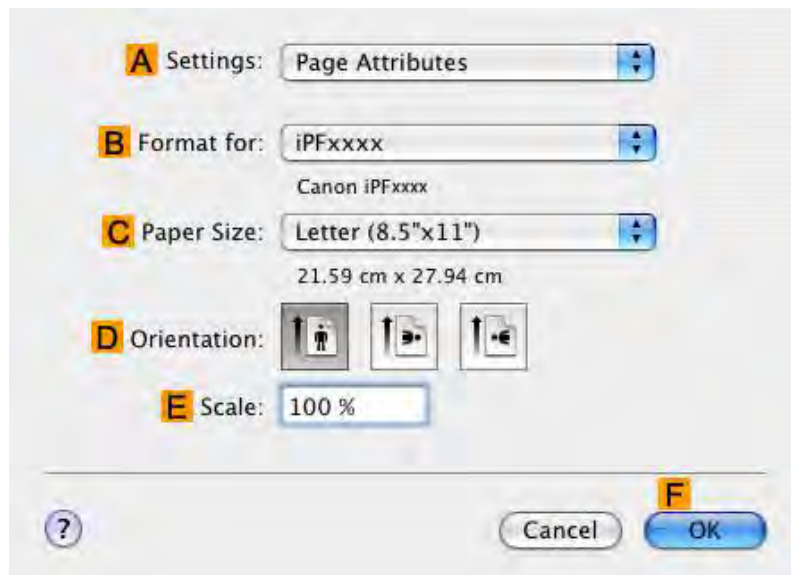

179

11. Select the **K No Spaces at Top or Bottom** check box.

**12.** Confirm the print settings, and then click **M Print** to start printing.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) **→P.429** "

## Using PosterArtist to Compose Originals

Using PosterArtist to Compose Originals ..... 181

### Using PosterArtist to Compose Originals

You can print a variety of source documents from word-processing or spreadsheet programs or screen shots from web browsers after composing an original with them using PosterArtist.


This topic describes how to use PosterArtist to compose originals from multiple applications, creating a poster layout for printing.




#### Important

- This function is only supported in Windows.
- PosterArtist (sold separately) must be installed to use this function.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows).") →P.211
3. Make sure the **Main** sheet is displayed.

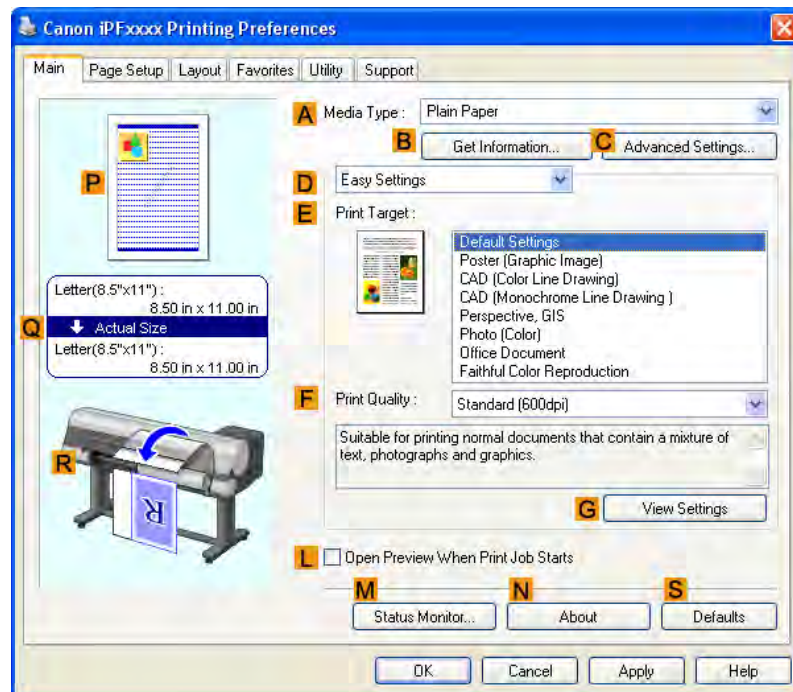


4. Click the **Layout** tab to display the **Layout** sheet.

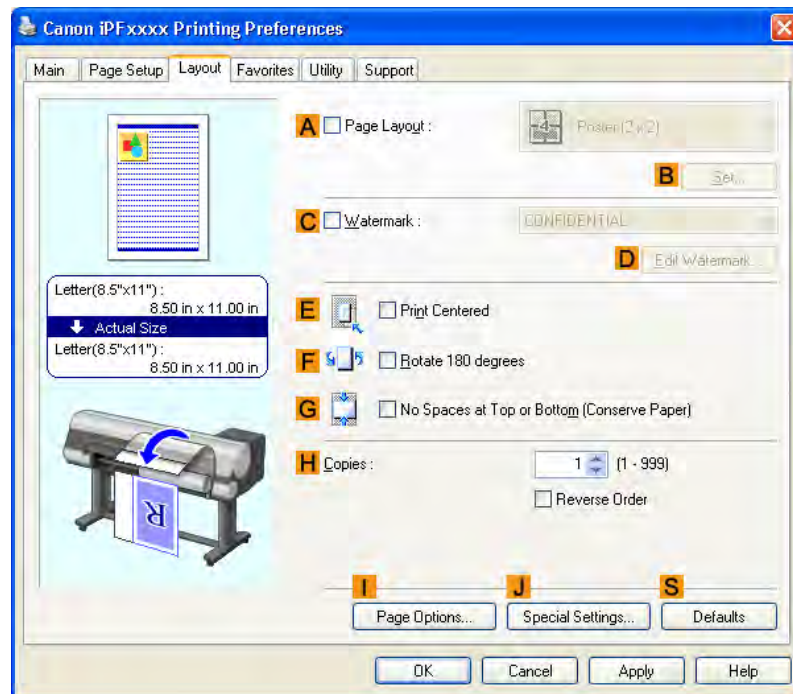

5. Select the **A Page Layout** check box.

6. Click in the **Edit Using PosterArtist** in the **A Page Layout** list.

7. When you attempt to print, PosterArtist starts up and the PageCapture window is displayed. (At this point, the document will not be printed yet.)

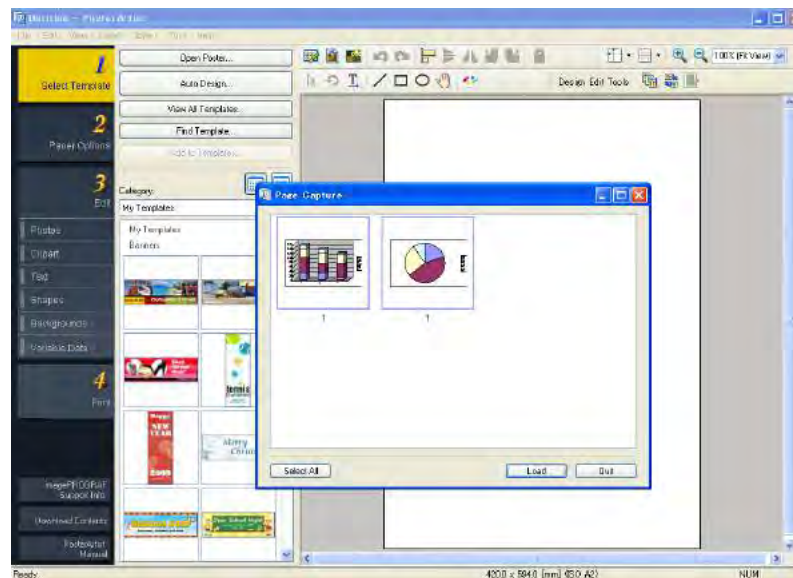

8. Choose the page to load in PosterArtist.



9. Edit and rearrange the image in the PosterArtist window as desired.



**Important**

- Without closing the PosterArtist window, repeat steps 1-8 to arrange originals from multiple applications on the same page.



**Note**

- For instructions on editing and rearranging images, refer to the PosterArtist Manual.

10. Print from the PosterArtist menu.

## Checking Images Before Printing


Checking the Layout in a Preview Before Printing ..... 184

### Checking the Layout in a Preview Before Printing

You can check the print layout on the preview screen.

#### Open Preview When Print Job Starts (Windows)

While viewing the preview screen, you can also adjust orientation or other settings, and your changes will be instantly applied on the preview screen.

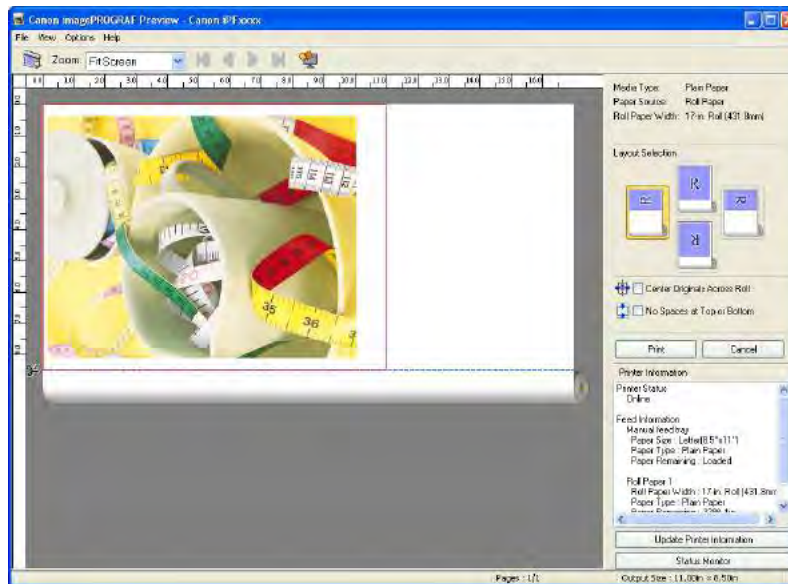


#### Note

- Under some settings and in some environments, PageComposer may be started.

## Preview (Macintosh)

While viewing the preview screen, you can also adjust layout or size settings, and your changes will be instantly applied on the preview screen.

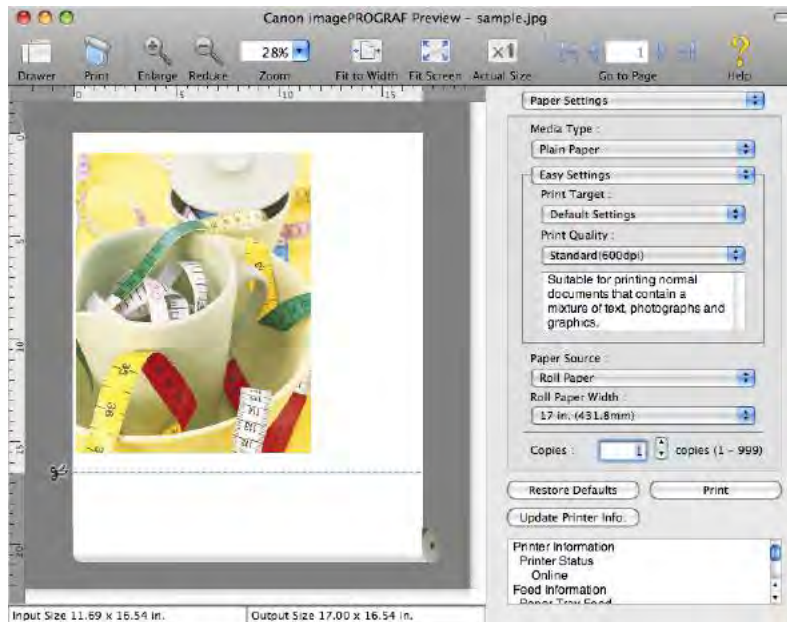

For instructions on how to check the layout before printing, refer to the following topics:

- Checking the Layout in a Preview Before Printing (Windows) →P.207
- Checking the Layout in a Preview Before Printing (Mac OS X) →P.431


## Other useful settings

Printing With Watermarks .....	186
Printing with Watermarks— COPY, FILE COPY, and so on (Windows) .....	187
Making the Original Orientation Match the Paper Orientation .....	190
Making the Original Orientation Match the Paper Orientation (Windows) .....	190
Making the Original Orientation Match the Paper Orientation (Mac OS X) .....	192
Using Favorites .....	196
Cutting Roll Paper After Printing .....	196
Cutting Roll Paper After Printing (Windows) .....	196
Cutting Roll Paper After Printing (Mac OS X) .....	198

### 3

## Printing With Watermarks

You can add watermarks (background images) to documents that require special handling.

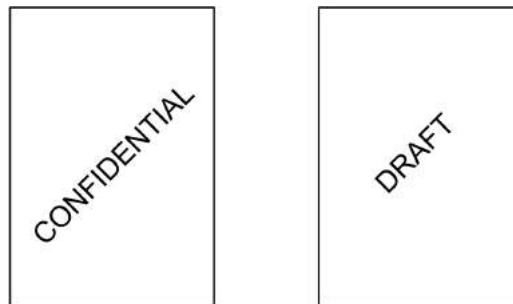

## Watermark

Watermarks are applied to all pages of your document.



### Important

- Watermarks are not printed if you select poster as the type of page layout.

The following watermarks are provided:

- CONFIDENTIAL
- COPY
- DRAFT
- FILE COPY
- FINAL
- PRELIMINARY
- PROOF
- TOP SECRET

You can also create your own watermarks. Specify the following options to customize your watermark.

- Watermark string: Specify the font, size, color, and so on. Surround the watermark with a frame, if desired.
- Watermark position: Specify the position on the page, the angle, and so on.

- Watermark printing method: Specify whether to print the watermark superimposed or under the document image. You can also print the watermark only on the first page, if desired.

**Note**

- Watermarks are supported in Windows.
- In addition to the provided watermarks, you can create up to 50 original watermarks in Windows.

For detailed instructions on printing with watermarks, refer to the following topics:


- Printing with Watermarks— COPY, FILE COPY, and so on (Windows) →P.187

## Printing with Watermarks— COPY, FILE COPY, and so on (Windows)

This topic describes how to print with watermarks, based on the following example of printing with a **FILE COPY** watermark.

- Document: Any type
- Page size: A2 (420.0×594.0 mm [16.5 × 23.4 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")
3. Make sure the **Main** sheet is displayed.

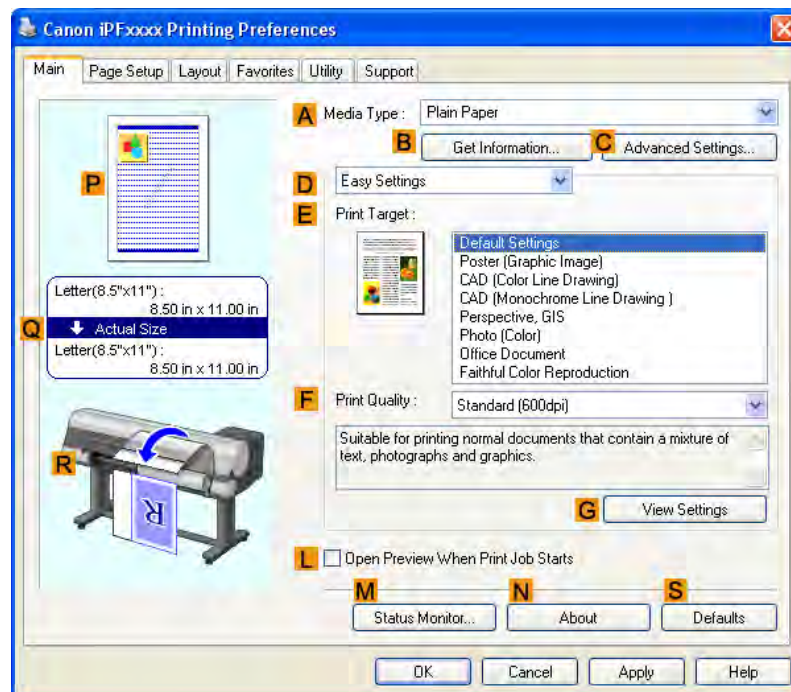




4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. Make your selection in the **E Print Target** list.



**Note**

- You can check the settings values selected in the **E Print Target** list by clicking **G View Settings**.

6. Click the **Page Setup** tab to display the **Page Setup** sheet.

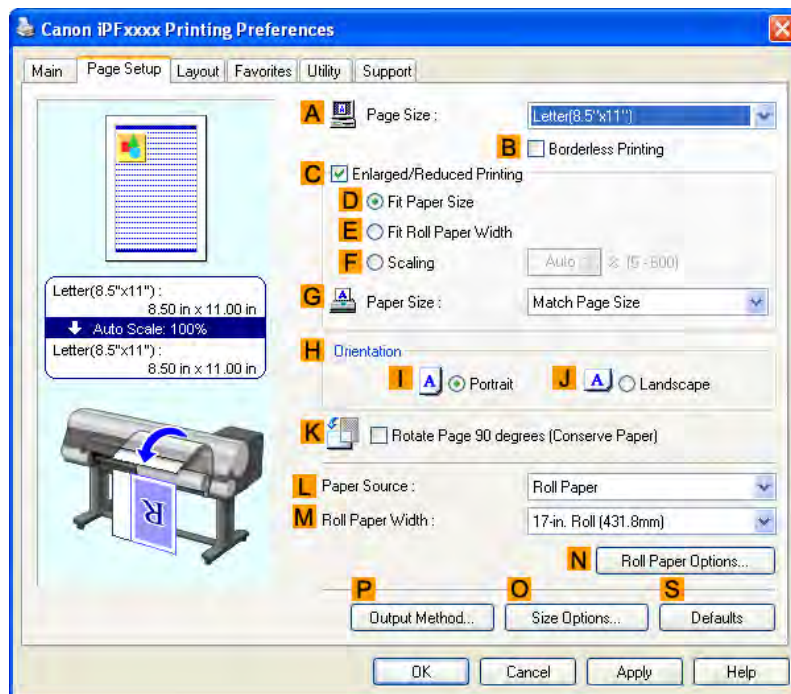


7. In **A Page Size**, click the size of the original as specified in the application software. In this case, click **ISO A2**.
8. Select and click a roll paper in the **L Paper Source** list.
9. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.

3

188

10. Click the **Layout** tab to display the **Layout** sheet.

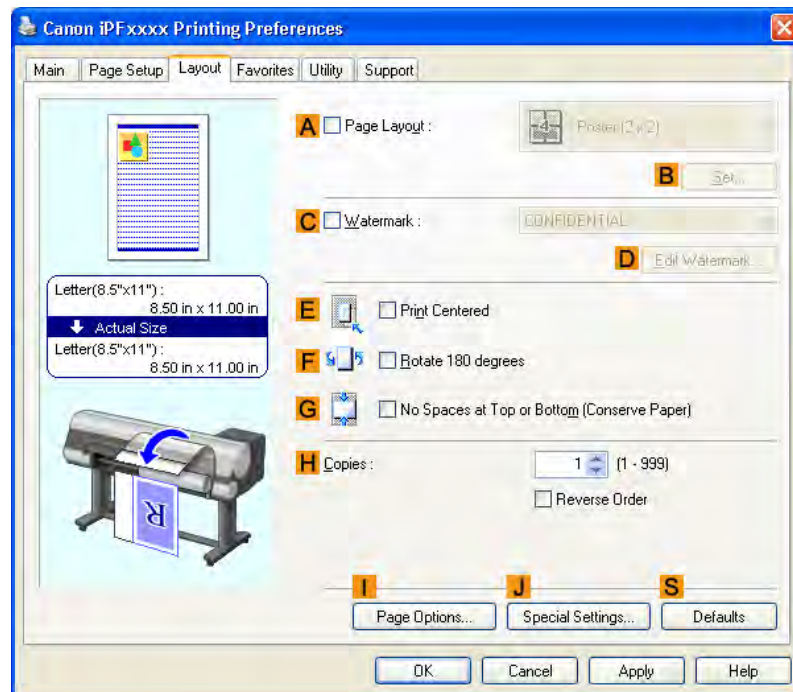

11. Select the **C Watermark** check box.

12. Click **FILE COPY** in the **Watermarks** list.



**Note**

- Click **D Edit Watermark** to open the **Edit Watermark** dialog box. In the **Edit Watermark** dialog box, you can create custom watermarks and change the position and angle of watermarks.

13. Confirm the print settings and print as desired.



**Note**


- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Making the Original Orientation Match the Paper Orientation

You can specify the original orientation to match the orientation of the paper for printing.

### Orientation

Paper is usually loaded in the printer in portrait orientation. When you have an original in landscape orientation, you can specify the printing orientation so that the original is printed in landscape orientation.

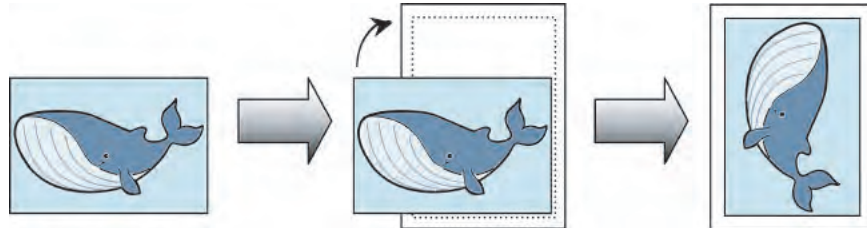

3

### Rotate 180 degrees

The original is rotated 180 degrees to print it upside down.

### Mirror

A mirror image of the original is printed.

For instructions on specifying the original orientation before printing, refer to the following topics, as appropriate for your computer and operating system.

- Making the Original Orientation Match the Paper Orientation (Windows) →P.190
- Making the Original Orientation Match the Paper Orientation (Mac OS X) →P.192


## Making the Original Orientation Match the Paper Orientation (Windows)

This topic describes how to print an original in landscape orientation after matching the paper orientation, based on the following example.

- Document: An original in landscape orientation
- Page size: A4 (210.0 × 297.0 mm)/Letter (8.3 × 11.7 in)
- Paper: Roll
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])


1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then open the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")

3. Make sure the **Main** sheet is displayed.

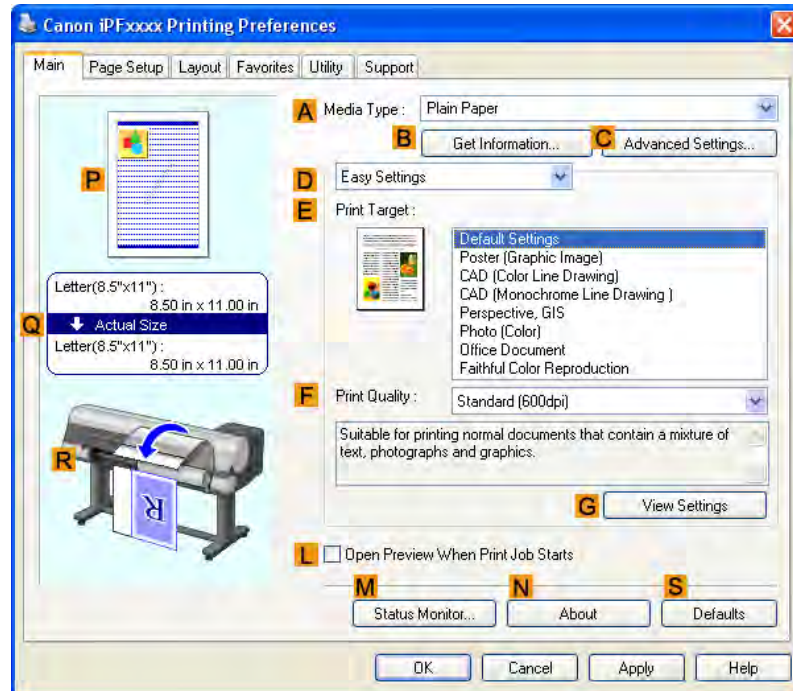

4. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.
5. Make your selection in the **E Print Target** list.
6. Make your selection in the **F Print Quality** list.

7. Click the **Page Setup** tab to display the **Page Setup** sheet.

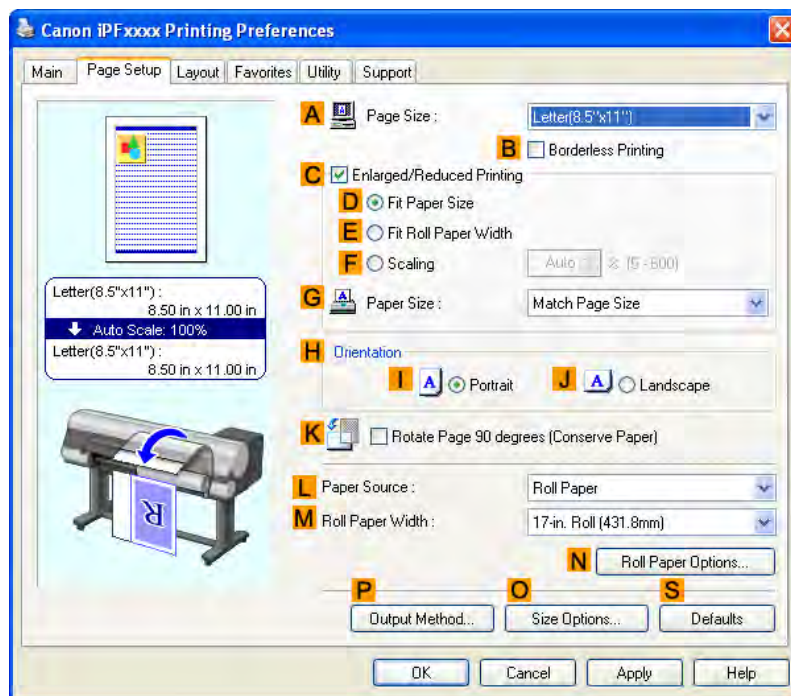

8. In the **A Page Size** list, click the size of the original as specified in the application. In this case, click **ISO A4** or **Letter (8.5"x11")**.

9. In **H Orientation**, click **J Landscape**.

10. Select and click a roll paper in the **L Paper Source** list.

11. Select the width of the loaded roll in the **M Roll Paper Width** list—in this case, **ISO A2/A3 Roll (420.0mm)**.

12. Confirm the print settings and print as desired.



**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

## Making the Original Orientation Match the Paper Orientation (Mac OS X)

This topic describes how to print an original in landscape orientation after matching the paper orientation, based on the following example.


- Document: An original in landscape orientation
- Page size: A4 (210.0 × 297.0 mm [8.3 × 11.7 in])
- Paper: Roll paper
- Paper type: Plain Paper
- Roll paper width: A2/A3 roll (420.0 mm [16.5 in])




1. This sets the **B Format for** and **C Paper Size**.

**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

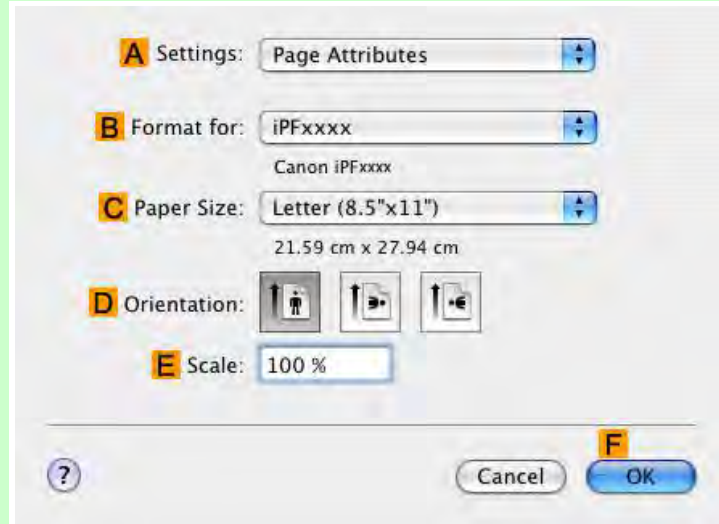


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

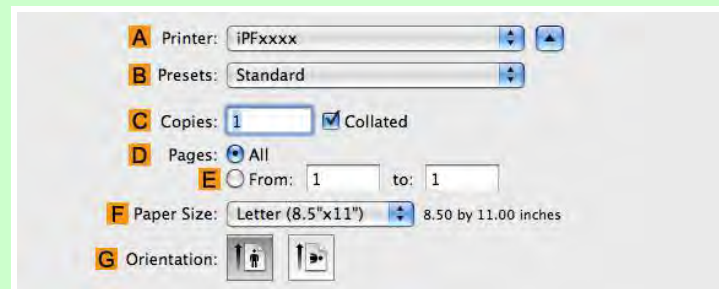

2. Select the printer in the **A Printer** list.
3. In the **F Paper Size** list, click the size of the original. In this case, click **ISO A4**.
4. In **D Orientation**, click the icon of the document in landscape orientation.
5. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

6. Access the **Main** pane.

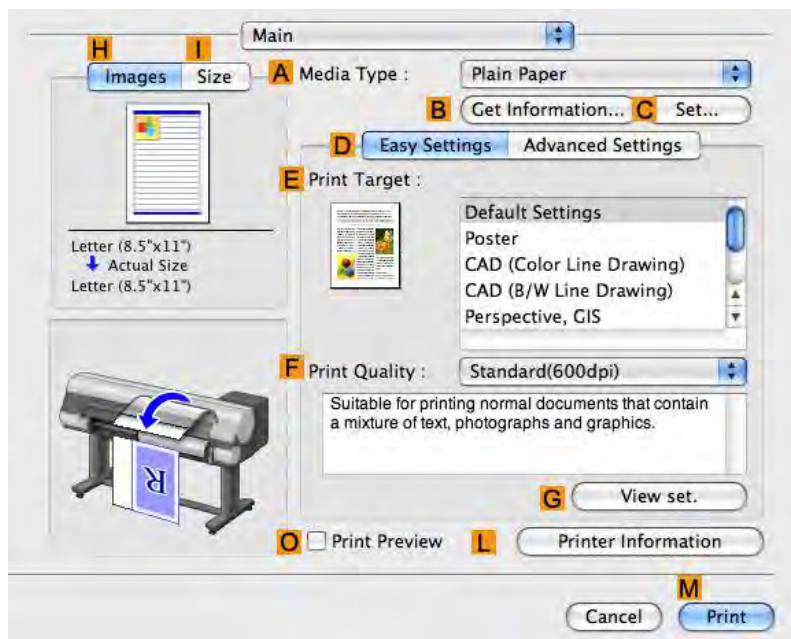


7. In the **A Media Type** list, select the type of paper that is loaded. In this case, click Plain Paper.

8. Make your selection in the **E Print Target** list.

9. Make your selection in the **F Print Quality** list.

10. Access the **Page Setup** pane.

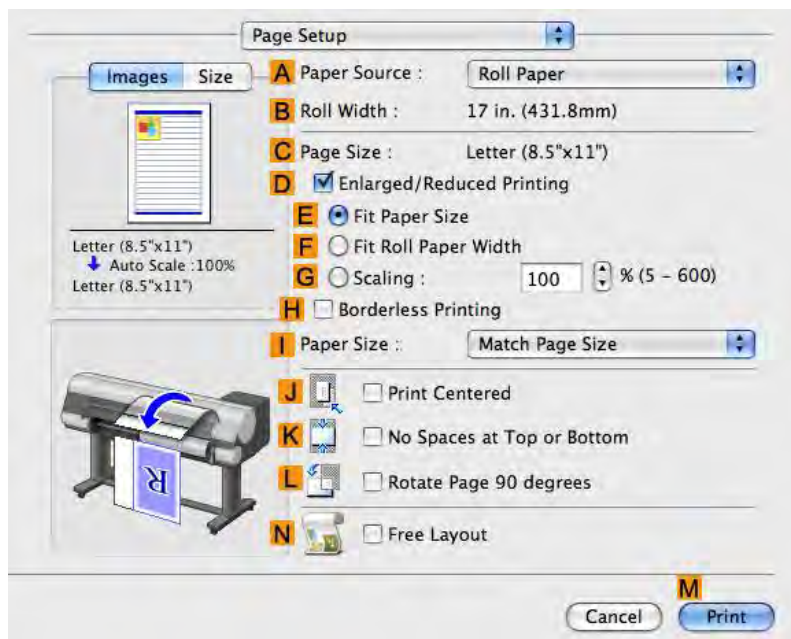


11. Select and click a roll paper in the **A Paper Source** list.


12. Make sure the width of the loaded roll is displayed in the **B Roll Width** list—in this case, **ISO A2/A3 (420.0mm)**.

**Note**

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

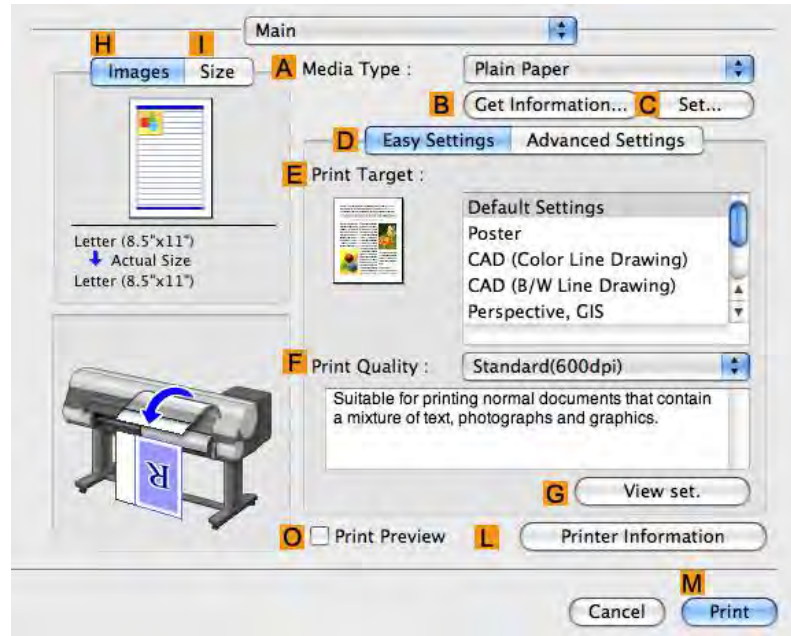

13. Make sure the **C Page Size** setting matches the original size as selected in **C Paper Size** in the **Page Attributes** dialog box—in this case, **ISO A4**.

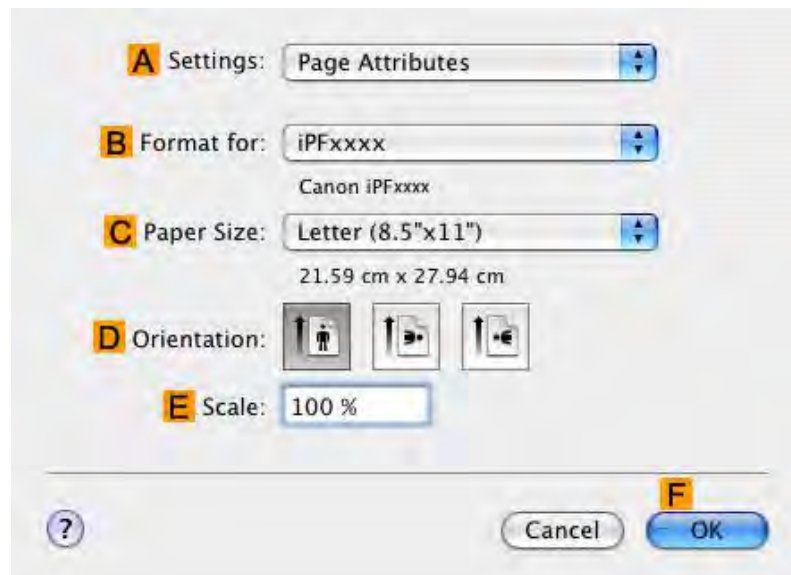

14. Confirm the print settings, and then click **M Print** to start printing.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Using Favorites

You can register print settings as **Favorites** to reuse settings from a particular job that met your expectations, or settings for a particular page size that you will use repeatedly.

### Favorites

Registering a favorite for later use. You can choose the settings you have registered from a list before printing, and you can check the settings details.



#### Note

- You can also save the favorite settings as files. Using these files is a convenient way to print under the same conditions on another computer. (In Windows.)

For instructions on using favorites to print, refer to the following topics, as appropriate for your computer and operating system.

- Using Favorites (Windows) →P.209
- Using Favorites (Mac OS X) →P.432

## Cutting Roll Paper After Printing

Roll paper can be automatically cut after printing.



#### Note

- It may not be possible to cut certain types of paper, such as adhesive paper. For details on types of paper that cannot be used with the auto cut feature, see the Paper Reference Guide. (See "Types of Paper →P.617 ")

### Automatic Cutting

Roll paper is cut automatically after printing. If you prefer, you can print continuously without cutting the roll, or you can print a cut line.

For instructions on cutting roll paper after printing, refer to the following topics, as appropriate for your computer and operating system.

- Cutting Roll Paper After Printing (Windows) →P.196
- Cutting Roll Paper After Printing (Mac OS X) →P.198

## Cutting Roll Paper After Printing (Windows)

This topic describes how to cut roll paper automatically after printing (using the auto cut function), as well as how to print a cut line for manual cutting.




#### Note


- The auto cut function is activated on the printer by default and when the printer driver is installed. Follow the steps below to reactivate the function if it is disabled, or to select the setting for printing a cut line instead.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications (Windows) →P.211 ")

- Click the **Page Setup** tab to display the **Page Setup** sheet.

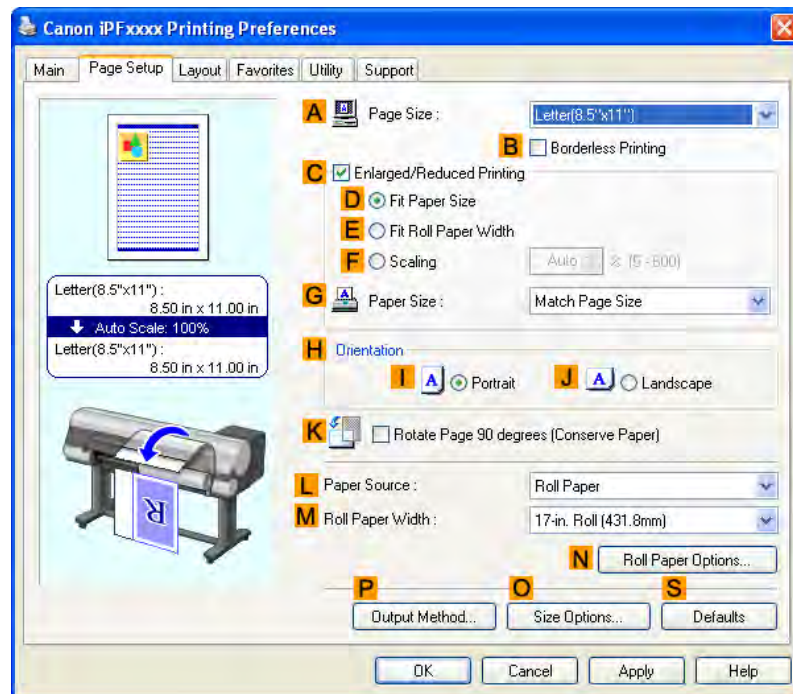

- Select and click a roll paper in the **L Paper Source** list.
- Click **N Roll Paper Options** to display the **Roll Paper Options** dialog box.

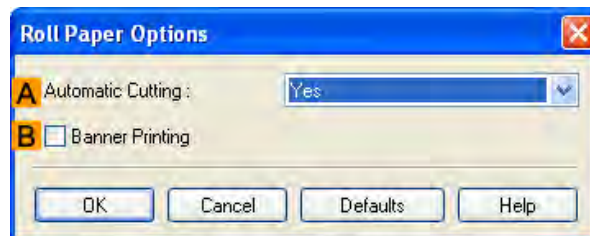

- To enable automatic cutting, click **Yes** in the **A Automatic Cutting** list. If you prefer to cut the paper later yourself, click **Print Cut Guideline**.
- Click **OK** to close the **Roll Paper Options** dialog box.
- Confirm the print settings and print as desired.

**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Windows) →P.206 "

Roll paper will be automatically cut after printing.



## Cutting Roll Paper After Printing (Mac OS X)

This topic describes how to cut roll paper automatically after printing (using the auto cut function), as well as how to print a cut line for manual cutting.



**Note**


- The auto cut function is activated on the printer by default and when the printer driver is installed. Follow the steps below to reactivate the function if it is disabled, or to select the setting for printing a cut line instead.

- This sets the **B Format for** and **C Paper Size**.




**Note**

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

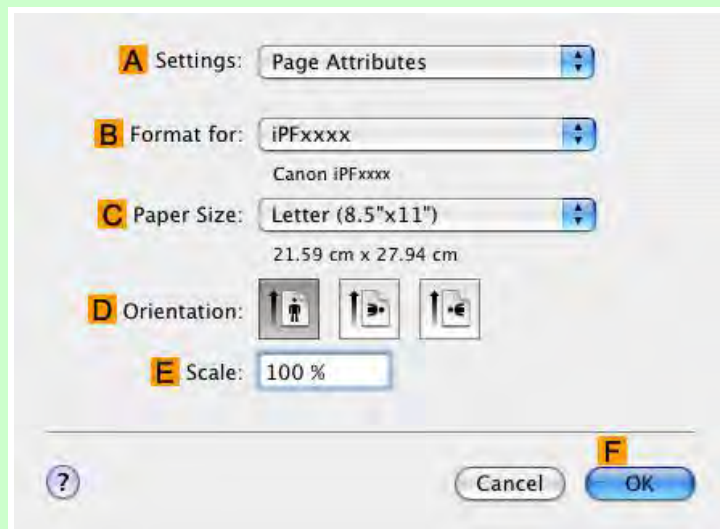


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.

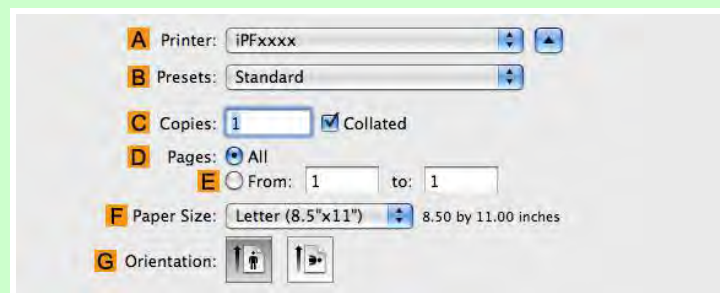


- Select the printer in the **A Printer** list.
- Choose the original size in the **C Paper Size** list.
- If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Page Setup** pane.

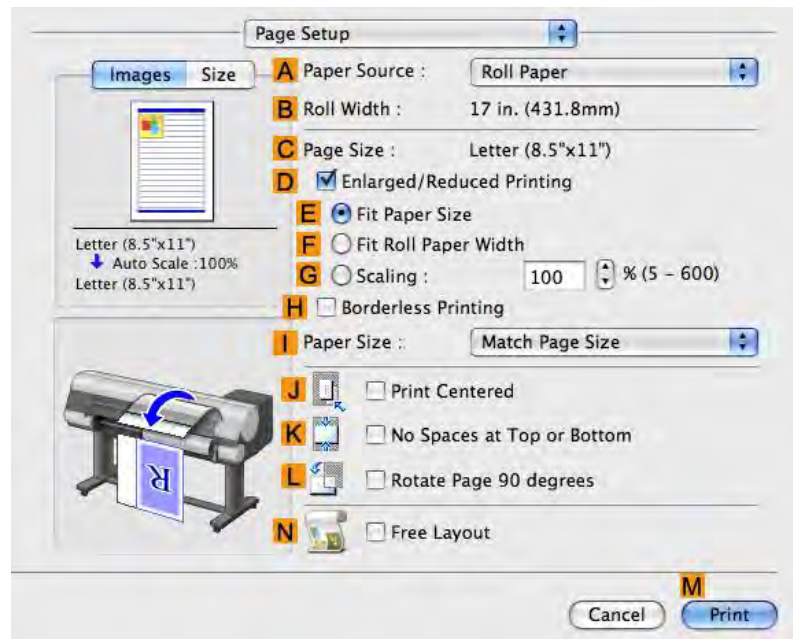


6. Select and click a roll paper in the **A Paper Source** list.

7. Access the **Main** pane.

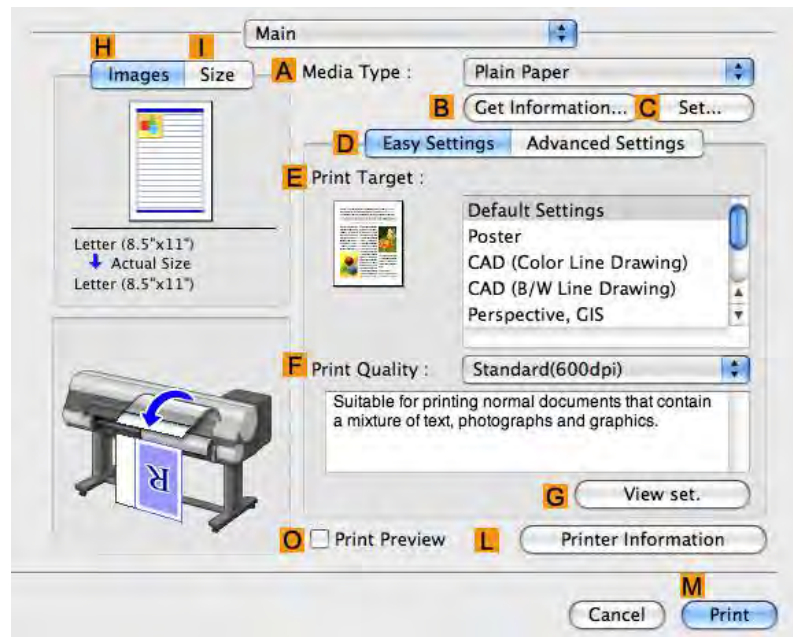

8. In the **A Media Type** list, select the type of paper that is loaded.

9. Click **C Set** to display the **Paper Detailed Settings** dialog box.

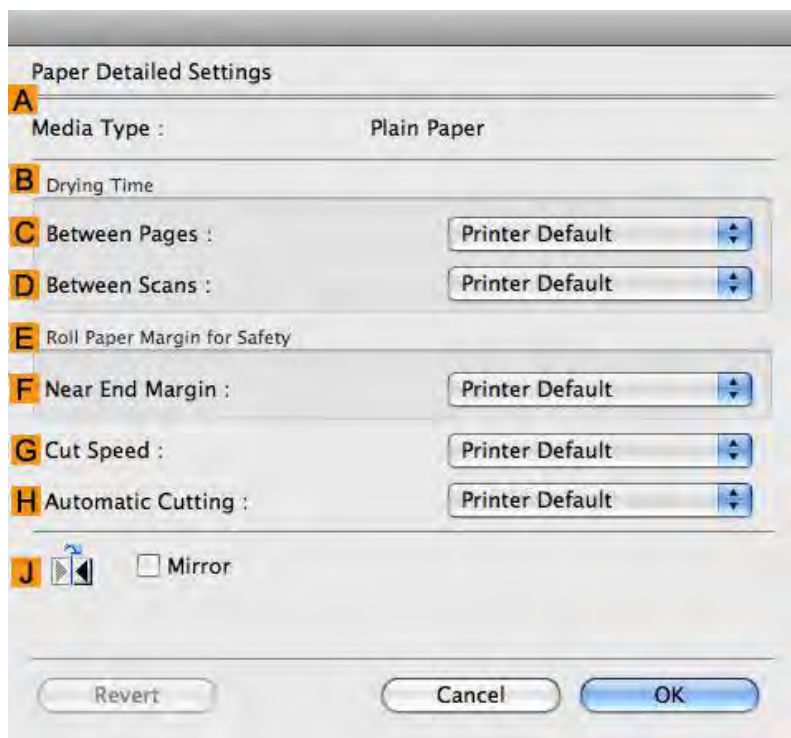

10. To enable automatic cutting, click **Printer Default** in the **H Automatic Cutting** list. If you prefer to cut the paper later yourself, click **Print Cut Guideline**.



**Important**

- If the automatic cut function has been deactivated on the printer, change the auto cut setting on the printer Control Panel.

11. Click **OK** to close the **Paper Detailed Settings** dialog box.

12. Confirm the print settings, and then click **M Print** to start printing.




**Note**

- For tips on confirming print settings, see "Confirming Print Settings (Mac OS X) →P.429 "

## Windows Software

Printer Driver	202
Preview	243
Free Layout	256
Color imageRUNNER Enlargement Copy	286
Print Plug-In for Office	301
HDI Driver	354
Status Monitor	387
Accounting	390
Digital Photo Front-Access	402
Device Setup Utility	403
Media Configuration Tool	406

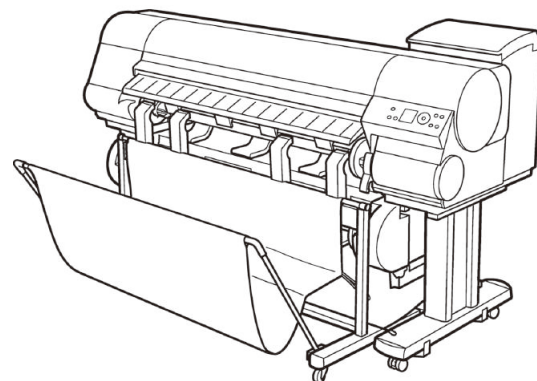

## Printer Driver

Printer Driver Settings .....	202
Specifying Paper in the Printer Driver .....	204
Confirming Print Settings .....	206
Checking the Layout in a Preview Before Printing .....	207
Using Favorites .....	209
Accessing the Printer Driver Dialog Box from Applications .....	211
Accessing the Printer Driver Dialog Box from the Operating System Menu .....	213
Main Sheet .....	215
Paper Information on Printer Dialog Box .....	219
Paper Detailed Settings Dialog Box .....	219
View Settings Dialog Box for the Printing Application .....	221
Color Adjustment Sheet: Color .....	221
Object Adjustment dialog box: Color .....	223
Matching Sheet .....	224
Color Adjustment Sheet: Monochrome .....	226
Object Adjustment dialog box: Monochrome .....	227
Page Setup Sheet .....	228
Output Method dialog box .....	231
Paper Size Options Dialog Box .....	232
Layout Sheet .....	233
Page Options Dialog Box .....	235
Special Settings Dialog Box .....	236
Favorites Sheet .....	237
Utility Sheet .....	239
Support Sheet .....	240
Settings Summaries Dialog Box .....	241
Device Settings Sheet .....	242

4


## Printer Driver Settings

For instructions on accessing the Windows printer driver, refer to the following topics.


- Accessing the Printer Driver Dialog Box from Applications →P.211
- Accessing the Printer Driver Dialog Box from the Operating System Menu →P.213



For information on the Windows printer driver settings, refer to the following topics.

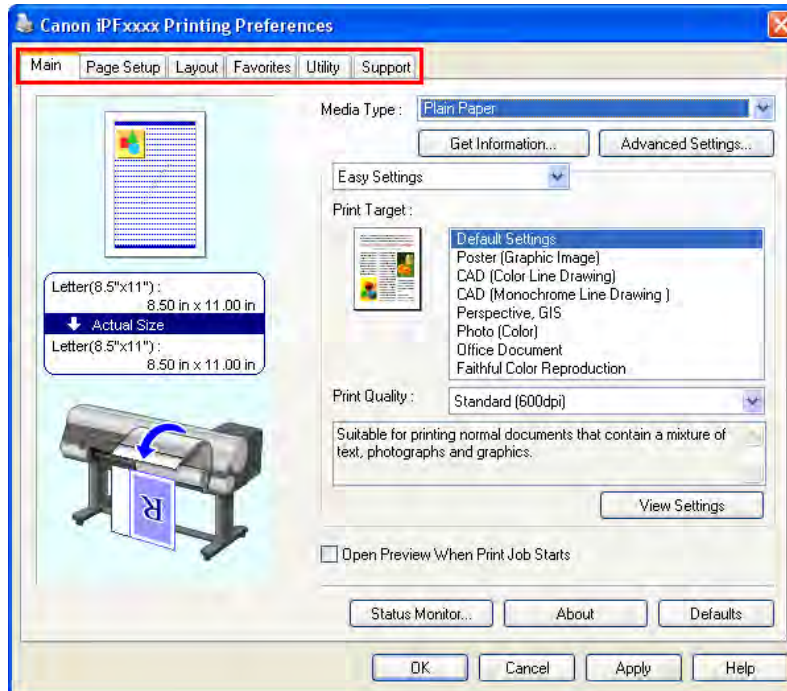

- **Main Sheet** →P.215
  - You can specify the type of paper, color processing, print quality, print preview, and other settings. Choose **Easy Settings** to specify basic print settings based on the printing application or **Advanced Settings** to complete more detailed settings as desired.
    - Paper Detailed Settings Dialog Box →P.219
    - View Settings Dialog Box for the Printing Application →P.221
    - Color Adjustment Sheet: Color →P.221
    - Matching Sheet →P.224
    - Color Adjustment Sheet: Monochrome →P.226
- **Page Setup Sheet** →P.228
  - You can specify the page size of the original, borderless printing, enlargement or reduction, the orientation, the paper size and feed source, and automatic cutting.
    - Output Method dialog box →P.231
    - Paper Size Options Dialog Box →P.232
- **Layout Sheet** →P.233
  - You can specify the page layout, watermarks, the orientation, the number of copies, and print processing options.
    - Page Options Dialog Box →P.235
    - Special Settings Dialog Box →P.236
- **Favorites Sheet** →P.237
  - Groups of print settings you select on each sheet can be saved as a favorite. Favorites you have added can be edited or used at the time of printing as desired.
- **Utility Sheet** →P.239
  - You can specify settings related to maintenance for the Printhead and feed amount, as well as settings for **Color imageRUNNER Enlargement Copy**.
- **Support Sheet** →P.240
  - You can view support information and the user manual.

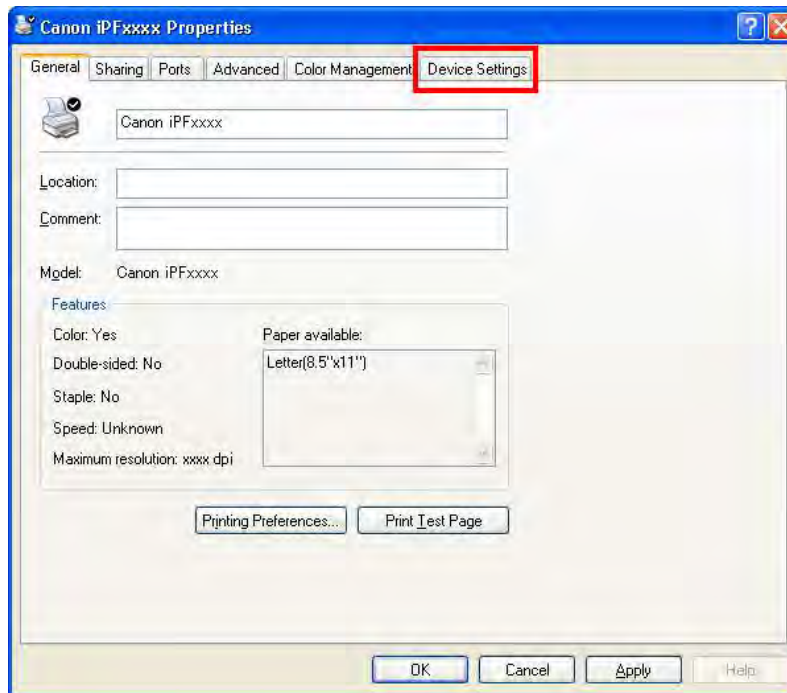

• Device Settings Sheet →P.242

You can display settings for optional equipment installed on the printer and see the version information for the printer driver.

**imagePROGRAF Free Layout** is a feature for freely arranging originals from various source applications on a single page as desired before printing. For details, see **Free Layout** →P.256 .

**Color imageRUNNER Enlargement Copy** is a feature for automatic enlargement and printing of scanned originals from a **Color imageRUNNER**. For details, see **Color imageRUNNER Enlargement Copy** →P.286 .



**Important**

- **Color imageRUNNER Enlargement Copy** and **imagePROGRAF Free Layout** cannot be used on 64-bit version of Windows.

## Specifying Paper in the Printer Driver

If you have replaced the paper, you must complete the following settings in the printer driver.




**Important**

- Always specify the same type and size of paper in the printer menu and printer driver.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box.(See "Accessing the Printer Driver Dialog Box from Applications →P.211 ")

3. Make sure the **Main** sheet is displayed.

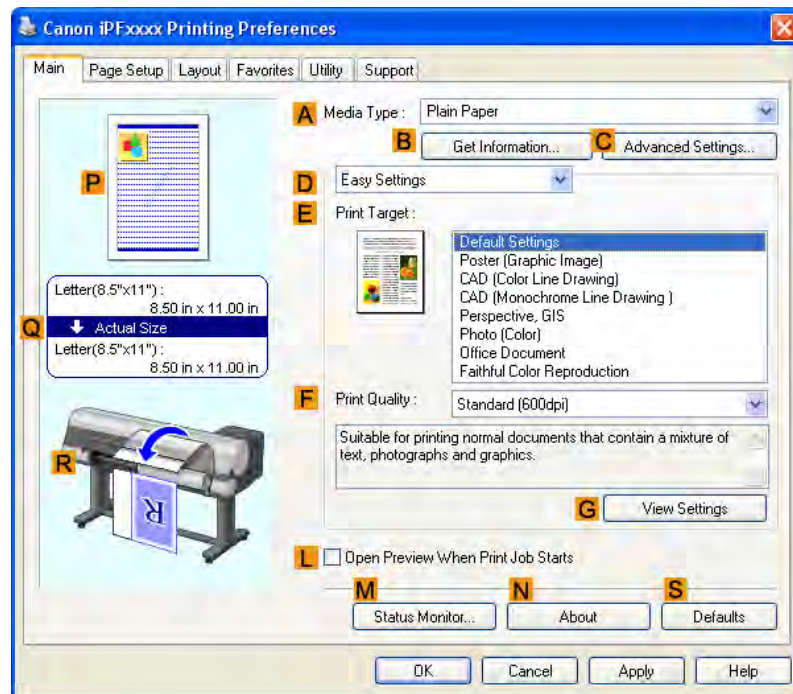


4. In the **A Media Type** list, select the type of paper that is loaded.



**Note**

- Click the **B Get Information** button to display the **Paper Information on Printer** dialog box. On the **Paper Information on Printer** dialog box, you can obtain information on the paper in the printer and configure printer driver settings for the feed source and type of paper. This function requires that the **Status Monitor** be installed.

5. Click the **Page Setup** tab to display the **Page Setup** sheet.

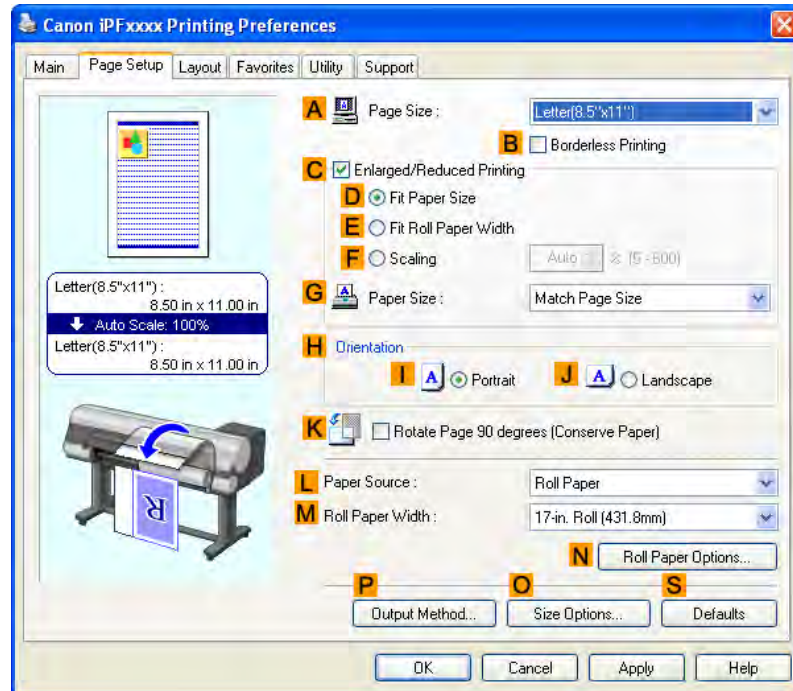

6. In the **A Page Size** list, select the size of the original as specified in the application.

7. In the **L Paper Source** list, select how paper is supplied.

8. If you have selected roll paper in **L Paper Source**, select the width of the loaded roll in **M Roll Paper Width**.



**Note**

- A variety of settings are available in the printer driver to suit different printing applications. For details on available printing conditions, see "Printer Driver Settings →P.202 "


## Confirming Print Settings

There are two ways to confirm the print settings, as follows.

- Checking a preview of the settings
- Checking a print preview

## Checking a preview of the settings

A preview of the settings is displayed on the left side of the **Main**, **Page Setup**, and **Layout** sheets. By checking illustrations and numerical values in the preview, you can confirm current settings for the page size, orientation, paper source, layout, and so on.

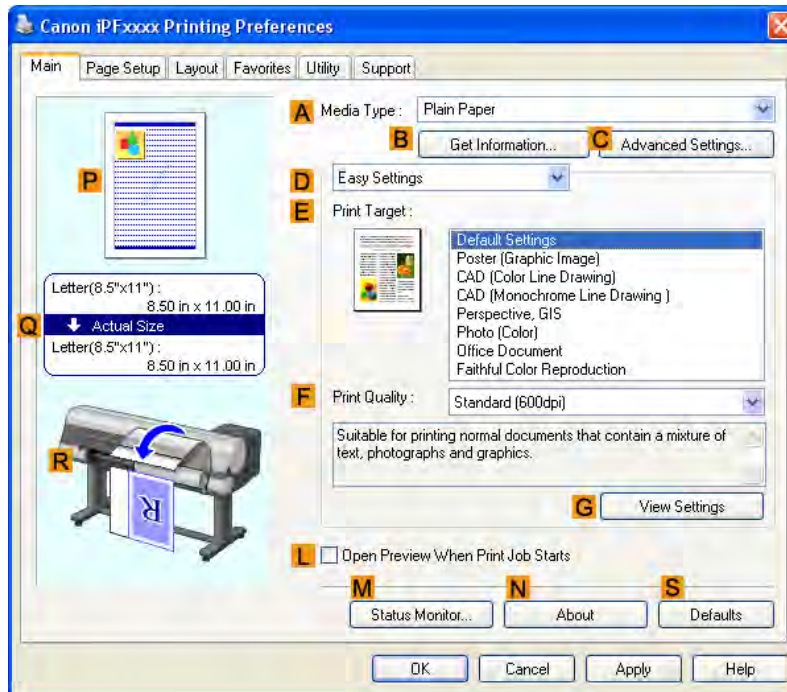

Display Area	Information Displayed
<b>P</b> Top illustrations	Illustrations indicate the orientation, page layout, borderless printing selection, color mode, and other settings information.
<b>Q</b> Middle, bordered area	The page size, paper size, and method and percentage of enlargement or reduction are indicated.
<b>R</b> Bottom illustrations	Illustrations indicate the feed source, orientation, borderless printing selection, and other settings information.



### Note

- To confirm the **Print Target** specified in **Easy Settings**, click **G View Settings** on the **Main** sheet to display the **View Settings** dialog box.

## Checking a print preview

You can check an image of the original just as it will be printed.

When you activate this feature, imagePROGRAF Preview or PageComposer is started before printing. Confirming how documents will be printed this way helps prevent printing errors.

For details on print previews, see "Checking the Layout in a Preview Before Printing →P.184 "


## Checking the Layout in a Preview Before Printing

This topic describes how to preview images of print jobs before actually printing them.


1. Choose **Print** in the application menu.



2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications →P.211 ")
3. Make sure the **Main** sheet is displayed.

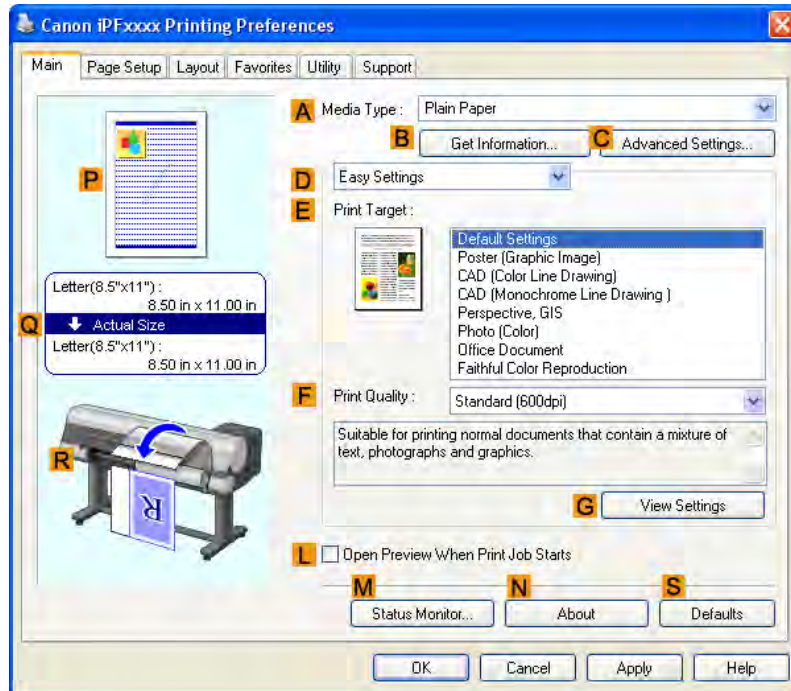

4. Select the **L Open Preview When Print Job Starts** check box.
5. After you click **OK**, when you print a job, the **imagePROGRAF Preview** window will be displayed.

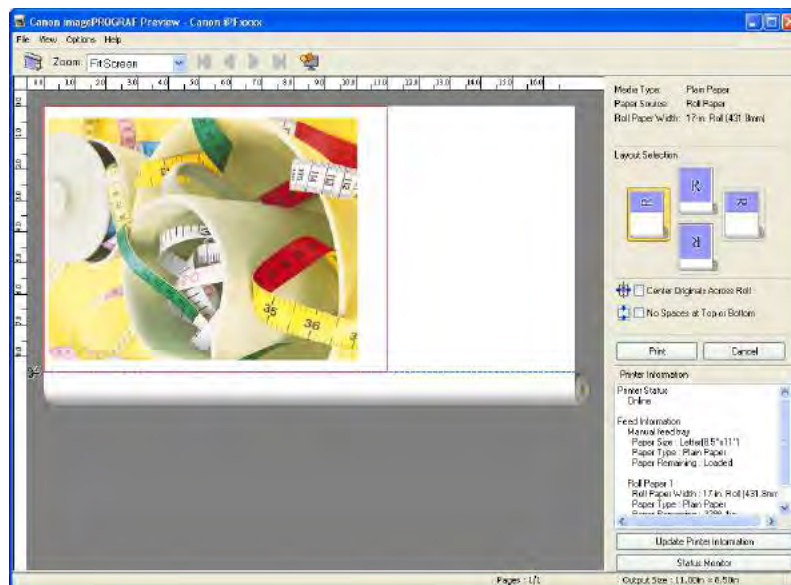

**Note**

- If PageComposer is running, access the **Special Settings** dialog box from the **Layout** sheet and clear **Enable Preview Switching**.

6. On the main window, you can check the layout and change settings as needed.
7. To print, click **Print** in the **File** menu.



#### Note

- For details on **imagePROGRAF Preview** functions, see **Preview** →P.243 .


## Using Favorites

This topic describes how to register favorites and print using favorite settings.


### Registering a favorite

This section describes the procedure for registering printing settings that have been changed in the driver as **Favorites**.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (Refer to "Accessing the Printer Driver Dialog Box from Applications" →P.211 ")
3. Perform normal printing settings.  
The favorite is registered from here.
4. Click the **Favorites** tab to display the **Favorites** sheet.

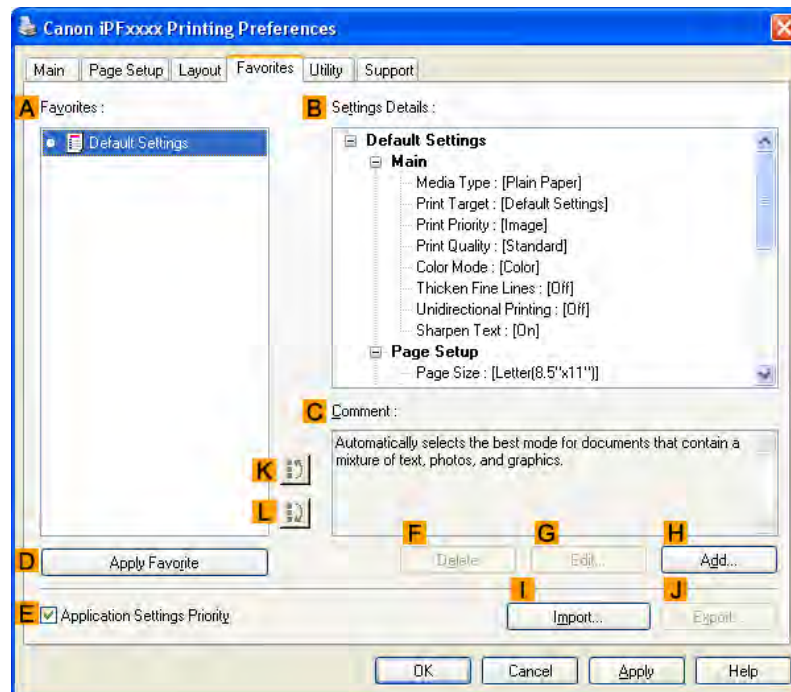

5. Click **H Add** to display the **Add** dialog box.

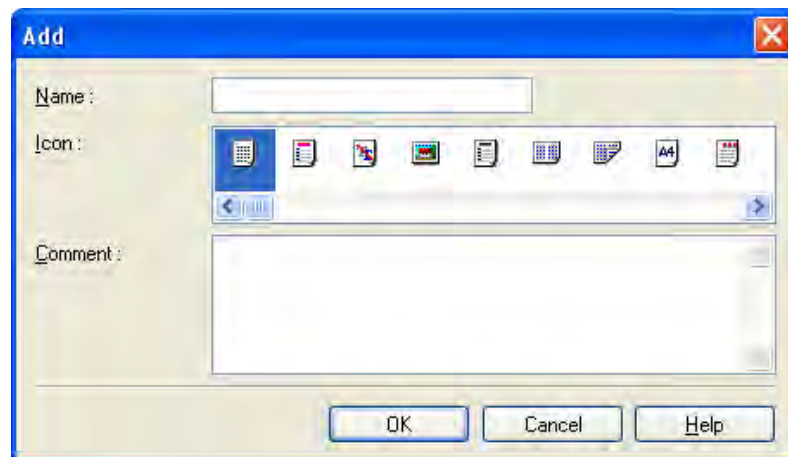

6. Enter a desired name in **Name**, such as **Photos for Presentations** or **Monthly Report**.
7. Choose a fitting icon for these print settings in the **Icon** list.
8. In **Comment**, enter a description of the favorite to be added, as desired.
9. Click **OK** to close the **Add** dialog box.  
The favorite you have added is now displayed in **A Favorites**.



#### Note


- To save a favorite as a file, click **J Export** and specify the file to save.

### Printing using the favorite

Follow the steps below to print using the favorite you have registered.

1. Choose **Print** in the application menu.
2. Select the printer in the dialog box, and then display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from Applications →P.211 ")

- Click the **Favorites** tab to display the **Favorites** sheet.

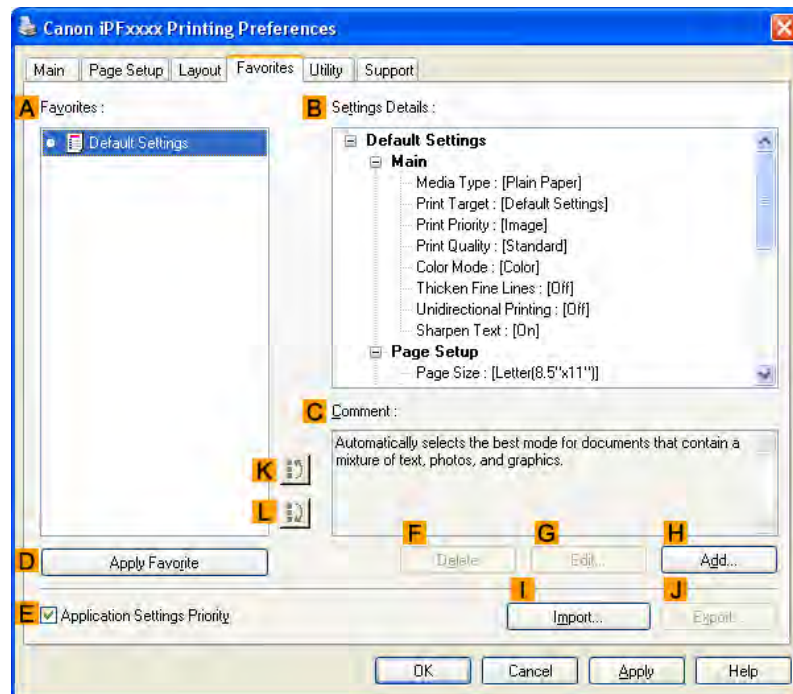

- In the **A Favorites**, choose the favorite you registered.

**Note**

- To import a favorite, click **I Import** and specify the favorite file.

- Click **D Apply Favorite** to replace the favorite settings with the current print settings.

- Confirm the print settings and print as desired.

**Note**

- For instructions on confirming print settings, see "Confirming Print Settings →P.206 "

## Accessing the Printer Driver Dialog Box from Applications


- Choose **Print** from the **File** menu to display the dialog box for printing conditions.
- Select the printer, and then display the printer driver dialog box.

**Note**

- The dialog box for specifying printing conditions varies depending on the source application. In some cases, when you select the printer, a sheet for configuring the printer driver is added to the dialog box. In the following case, click **Preferences**.


- Example: **Print** dialog box displayed by the application software

4

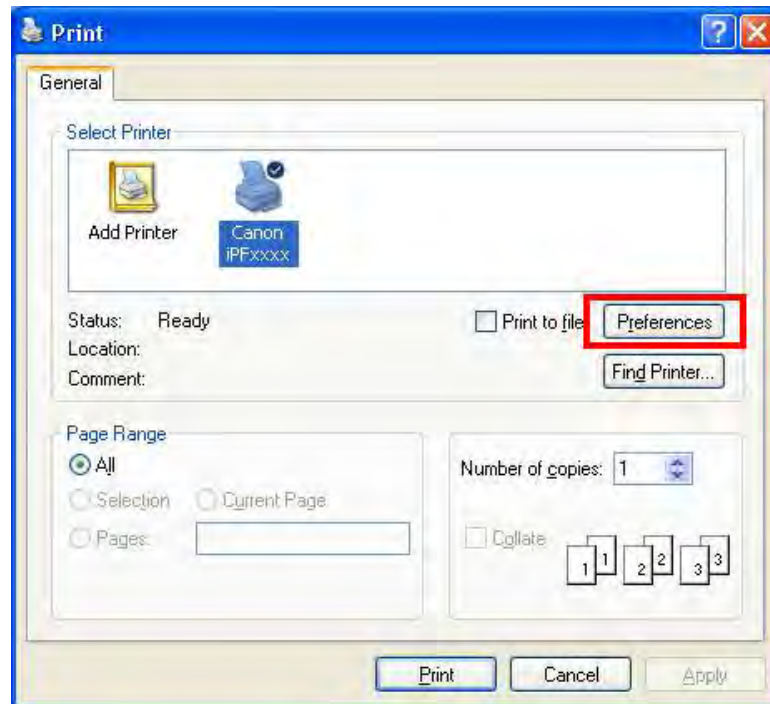

Six sheets of print settings are displayed by the printer driver: **Main**, **Page Setup**, **Layout**, **Favorites**, **Utility**, and **Support**.

212

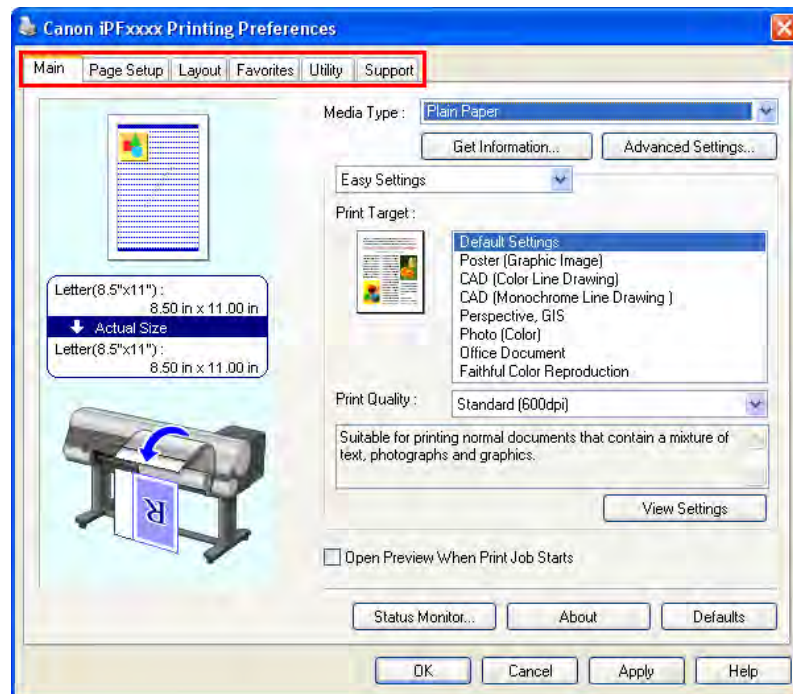

**Note**

- The titles of dialog boxes may vary depending on the application, and sheets other than these six sheets may be displayed.




**Important**


- If you access the printer driver dialog box from the source application, changes you make to the settings will only apply temporarily to that application. Because these are sizes you specify temporarily in the printer driver, the sizes will not be available after you exit the application.
- You can also access the printer driver dialog box from the Windows system menu. To use the settings continuously in all applications, open the printer driver from the system menu to make the settings.  
See "Accessing the Printer Driver Dialog Box from the Operating System Menu →P.213".

## Accessing the Printer Driver Dialog Box from the Operating System Menu

1. Click **start > Printers and Faxes** (or **Printers** ).
2. Select the printer, and then display the printer properties dialog box.

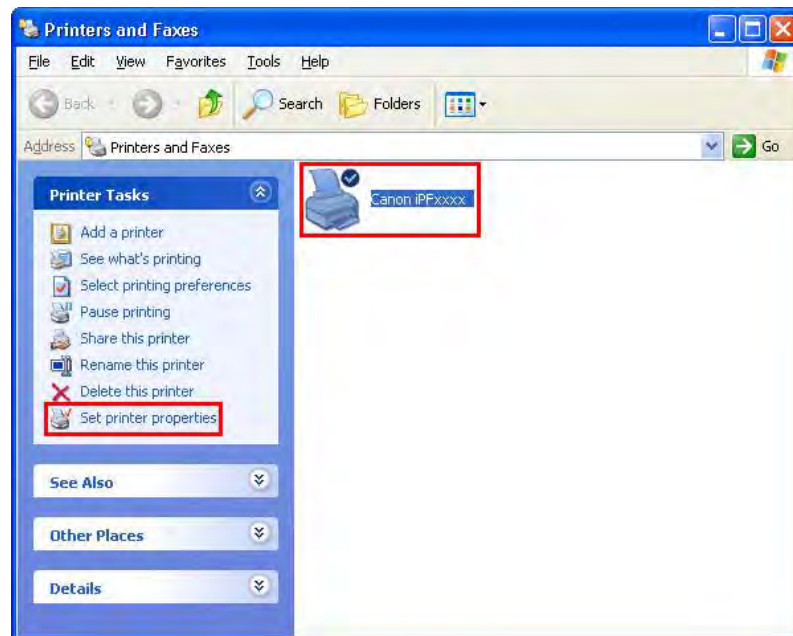

3. Click **Printing Preferences** to display the **Printing Preferences** dialog box, titled with the name of this printer.

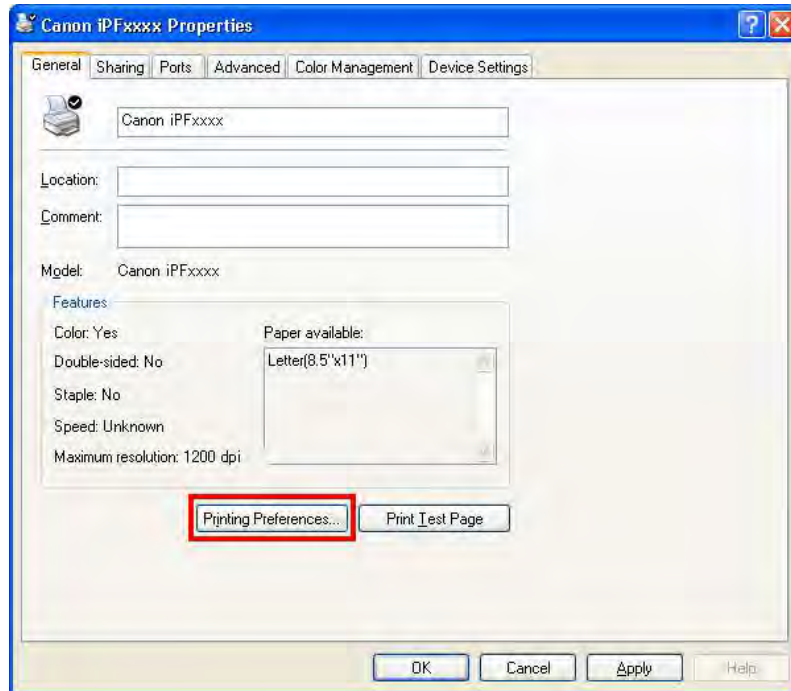


4



**Note**

- The **Device Settings** sheet is also an extension of the printer driver. (See "Device Settings Sheet →P.242 ")

Six sheets of print settings are displayed by the printer driver: **Main**, **Page Setup**, **Layout**, **Favorites**, **Utility**, and **Support**.

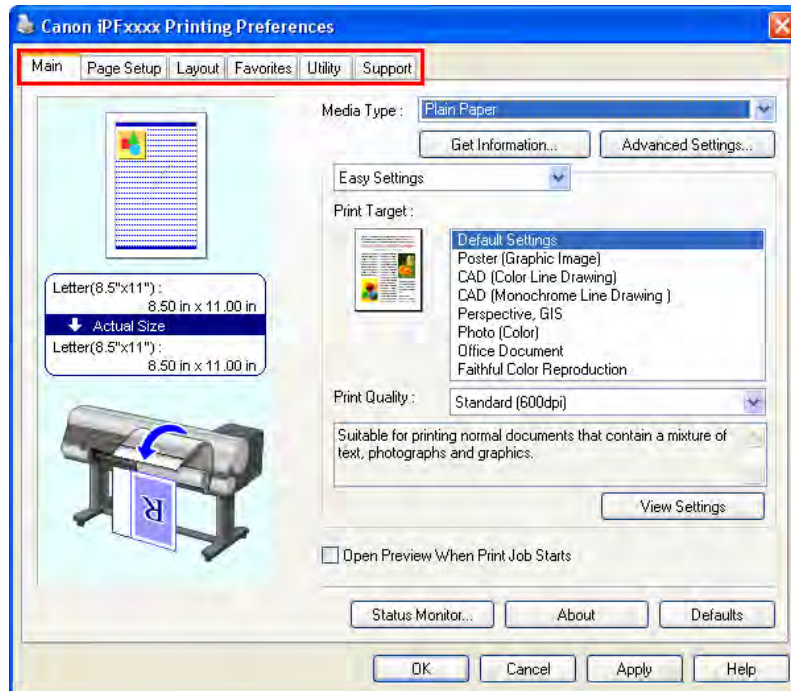

214

**Important**


- If you access the printer driver dialog box from the operating system menu, changes you make to the settings will apply to all applications you use for printing.
- You can also access the printer driver dialog box from applications.  
See "Accessing the Printer Driver Dialog Box from Applications →P.211".

**Main Sheet**

The following settings are available on the **Main** sheet. For details on settings items, refer to the printer driver help file.

**Note**

- On the **Main** sheet, choose **Easy Settings** to specify basic print settings based on the particular printing application, or switch to **Advanced Settings** to complete more detailed settings as desired.

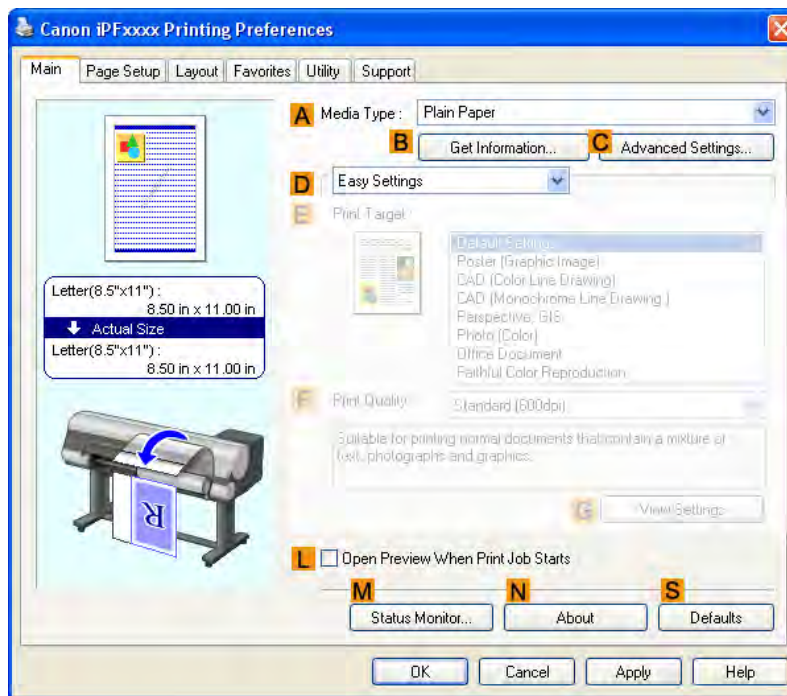**Common Items****A Media Type**

Select the type of paper.

For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper →P.617")

**B Get Information**

Displays **Paper Information on Printer**. You can update the printer driver settings for the feed source, media type, and roll width by selecting the feed source.

- Paper Information on Printer Dialog Box →P.219

## C Advanced Settings

Displays **Paper Detailed Settings**. You can configure the printing settings to match the type of media, such as the ink drying time.

- Paper Detailed Settings Dialog Box →P.219

## L Open Preview When Print Job Starts

If you turn this on, **imagePROGRAF Preview** starts before printing. This allows you to check on-screen previews of documents before printing.

- Checking the Layout in a Preview Before Printing →P.184

## M Status Monitor

Starts imagePROGRAF Status Monitor.

You can check the printer status, job status, and other conditions.

You can also set up email notification if printer errors occur by completing the **Email Notice** settings.

For details, refer to the **Status Monitor** help file.


## N About

Displays version information for the printer driver.

## S Defaults

Restores all settings on the sheet to the default values.

## Configuration using Easy Settings

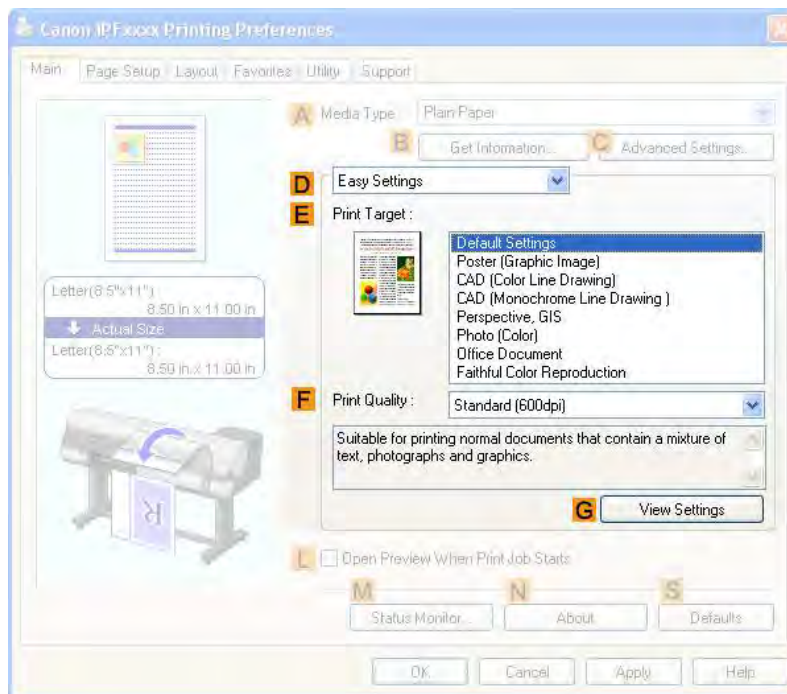

## E Print Target

Choose presets that match the type of document to be printed.

- Printing Photos and Images →P.30
- Printing Line Drawings and Text →P.19
- Printing Office Documents →P.38

Depending on the **A Media Type** setting, some **E Print Target** options may not be available.

## F Print Quality

Choose the level of print quality.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55


## G View Settings

Displays the **Print Target** setting values.

You can view and change the order of **Print Target** setting values.

- View Settings Dialog Box for the Printing Application →P.221

## Configuration using Advanced Settings

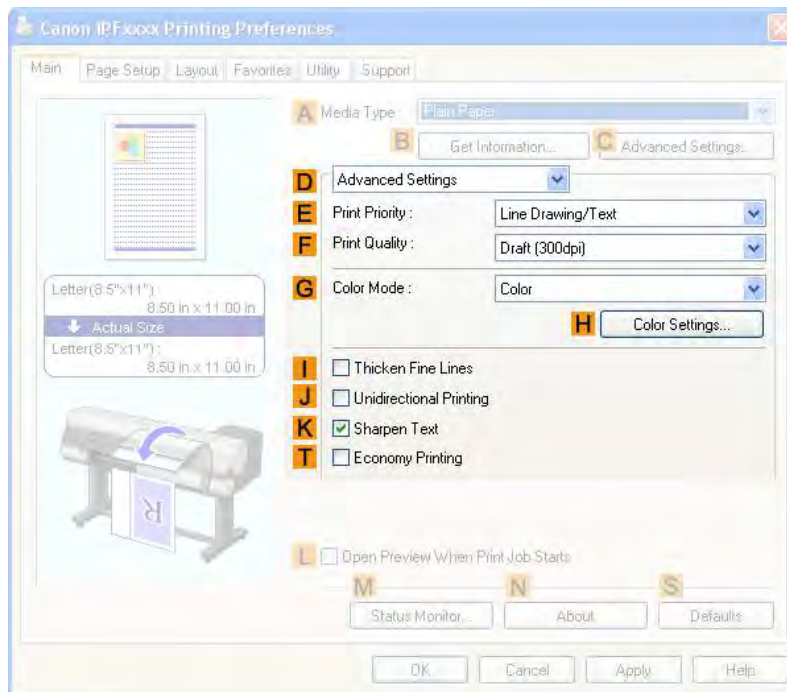

## E Print Priority

Choose the graphic elements that you want to emphasize for printing.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55

## F Print Quality

Choose the level of print quality.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55



## G Color Mode

Choose the color mode.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55



### Note

- Depending on the **A Media Type** setting, some **G Color Mode** options may not be available.

## H Color Settings

Click to display the **Color Settings** dialog box for more advanced color settings.

- Adjusting the Color in the Printer Driver →P.46

## I Thicken Fine Lines

Activate this option to print fine lines more distinctly.

## J Unidirectional Printing

Select this checkbox to prevent problems such as misaligned lines and improve the print quality. However, the printing speed becomes slower.

## K Sharpen Text

Activate this option to print text more sharply.


## T Economy Printing

Select this checkbox to reduce the amount of ink consumed during printing. However, the print quality is worse than for normal printing.

Select this mode if you want to conserve ink when checking drawings, for example. Depending on the **A Media Type** and **F Print Quality** settings, this mode may not be available.

## Paper Information on Printer Dialog Box

On the **Paper Information on Printer** dialog box, you can obtain information on the paper in the printer and configure printer driver settings for the paper source and media type.

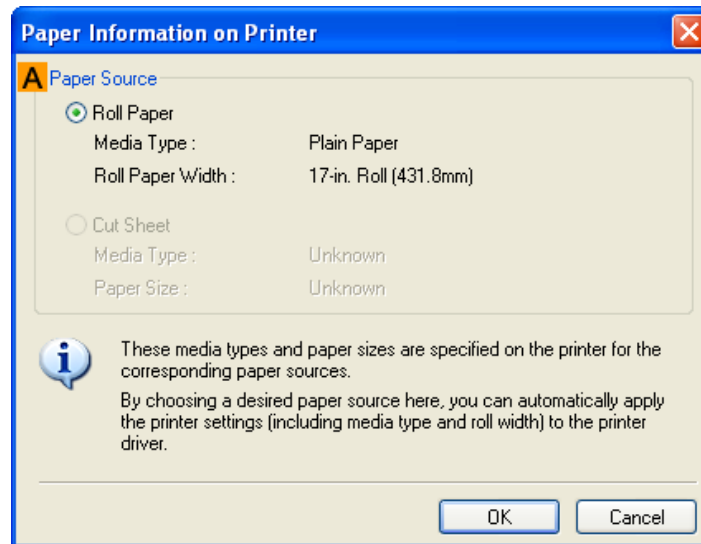

### Note


- To display the **Paper Information on Printer** dialog box, on the **Main** sheet, click **Get Information by Media Type**. (See "Main Sheet →P.215 ")

## A Paper Source

Shows the paper source supported by the printer, as well as information about the loaded paper. To update the paper source and media type settings in the printer driver, select the desired **Paper Source** option and click **OK**.

## Paper Detailed Settings Dialog Box

The **Paper Detailed Settings** dialog box offers the following settings. For details on settings items, refer to the printer driver help.

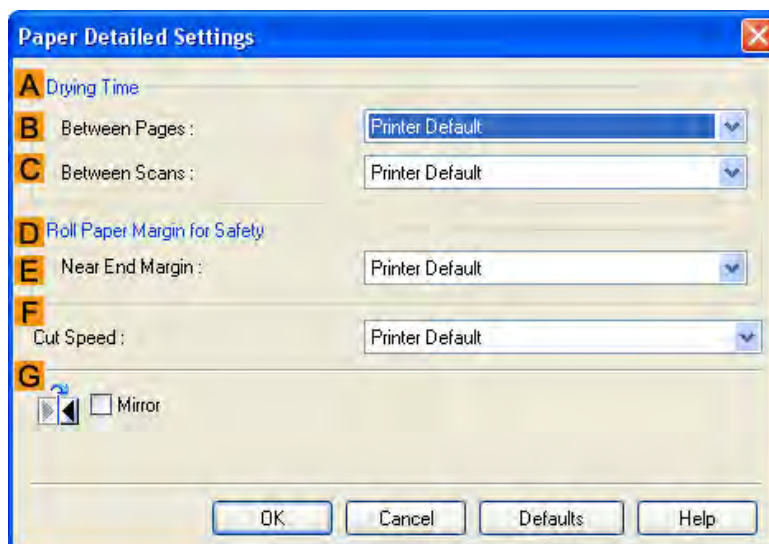



Note

- To display the **Paper Detailed Settings** dialog box, on the **Main** sheet, click **Settings by Media Type**.(See "Main Sheet →P.215 ")

## A Drying Time

Specify the time that the printer waits for ink to dry, as needed. The **Drying Time** setting is only valid for rolls.

- (See "Specifying the Ink Drying Time for Rolls →P.640 ")

## B Between Pages

Specify the time the printer waits after printing a page until ejecting the paper, as needed.

## C Between Scans

Specify the time the printer waits after printing a line on the page until printing the next line, as needed.

## D Roll Paper Margin for Safety

You can specify the length of a margin on the leading edge of paper to ensure that paper susceptible to curling is held firmly against the Platen.

## E Near End Margin

Specify the length of the **Near End Margin** (the leading edge margin) of the roll, as needed.

## F Cut Speed


Select the speed of automatic cutting, as needed. You can adjust this setting if paper is not cut well when automatic cutting is used.

## G Mirror

Specify whether to print a mirror image, as needed. Select this option to print a version of the document or image with the left and right sides inverted.

## View Settings Dialog Box for the Printing Application

In the **View Settings** dialog box, you can check details of the selected printing application.

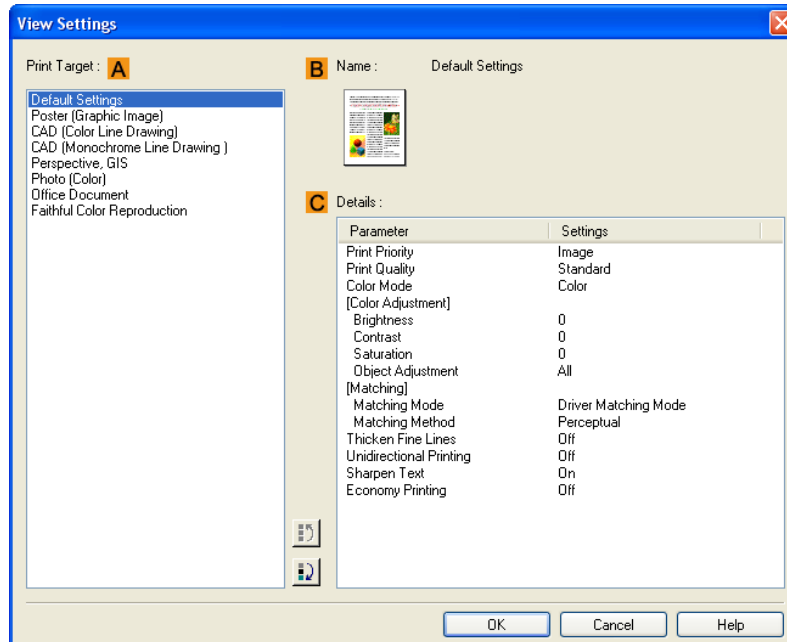

### Note

- To display the **View Settings** dialog box, on the **Main** sheet, click **View Settings** by **Print Target**. (See "Main Sheet → P.215 ")

### A Print Target

Shows all **Print Target** options (settings items for the printing application).

### B Name


Identifies the item selected in **Print Target** by its name and an icon.

### C Details

Here, you can confirm detailed settings values for each listed item for the selected **Print Target**.

## Color Adjustment Sheet: Color

If the color tone as printed is not as you expected, you can adjust it on the **Color Adjustment** sheet.

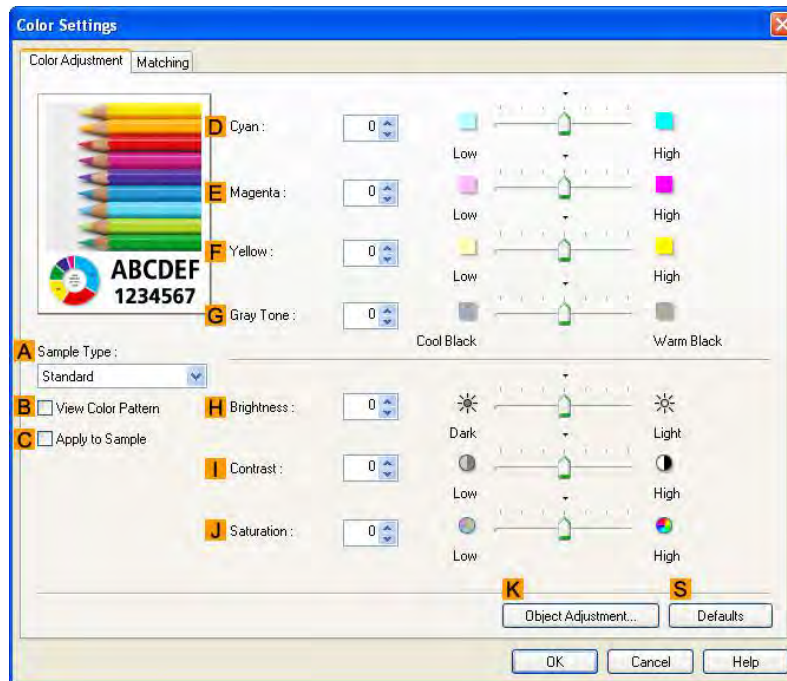**Note**

- To display the **Color Adjustment** sheet, on the **Main** sheet, click **Color Settings** by **Color Mode** in **Advanced Settings**. (See "Main Sheet →P.215 ")

**A Sample Type**

Choose a sample image from **Standard**, **Portrait**, **Landscape**, or **Graphics**.

**B View Color Pattern**

Select this checkbox to display the color pattern.

**C Apply to Sample**

Select this checkbox to apply the changed settings to the sample image.

**D Cyan / E Magenta / F Yellow**

Fine-tune color tones by adjusting the levels of each color.

**G Gray Tone**

Adjust the color tone of grays as desired. Choose **Cool Black** (tinged with blue) or **Warm Black** (tinged with red).

**H Brightness**

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

**I Contrast**

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.



## J Saturation

Adjust the color intensity as desired. Increasing the **Saturation** setting makes colors more vivid, and reducing the **Saturation** makes colors more subdued.

## K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

- Object Adjustment dialog box: Color →P.223

## S Defaults

Click to restore all settings on the sheet to the default values.




### Note

- For details on settings items, see "Adjusting the Color in the Printer Driver →P.46 "

## Object Adjustment dialog box: Color

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

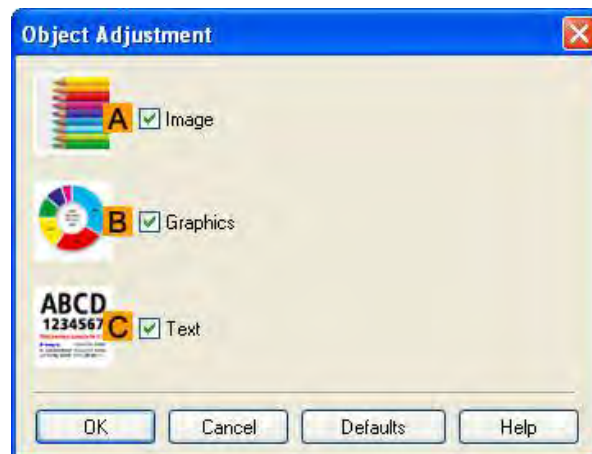

### Note

- To display the **Object Adjustment** dialog box, click **Object Adjustment** on the **Color Adjustment** sheet.

## A Image

Select this option to apply color adjustment to image areas, such as photos.

## B Graphics

Select this option to apply color adjustment to graphics, such as lines and circles.

## C Text

Select this option to apply color adjustment to text.

## Matching Sheet

On the **Matching** sheet, you can specify color matching to compensate for differences in the appearance of colors on various devices.



### Note

- To display the **Matching** sheet, on the **Main** sheet, click **Color Settings** in **Color Mode** in **Advanced Settings**, and then click the **Matching** sheet. (Refer to "Main Sheet →P.215 ")




### Important

- If **No color correction** is selected under **Color Mode**, the **Matching** sheet is not displayed.

## Driver Matching Mode

The following options are available when you select **Driver Matching Mode** in the **A Matching Mode** list.

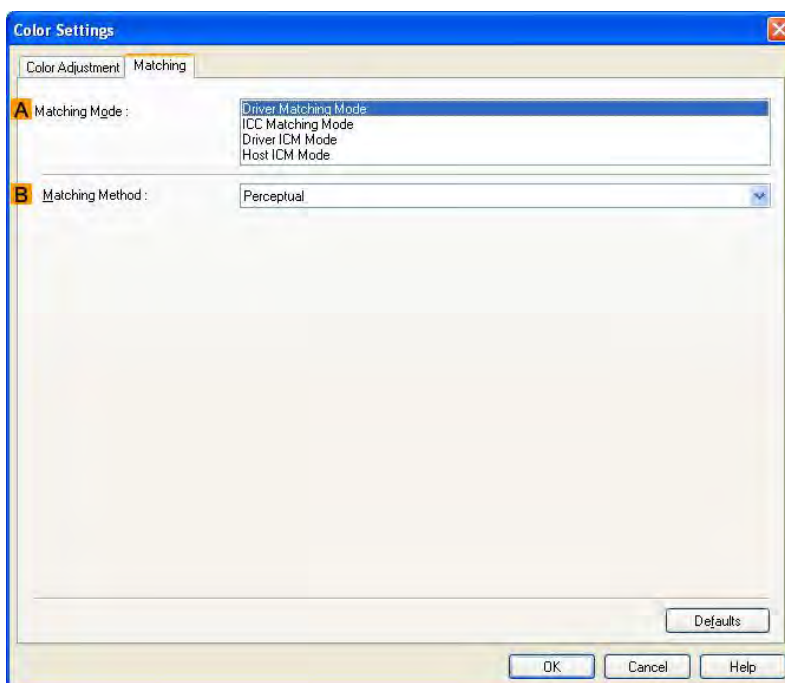

### A Matching Mode

Select the color matching mode to use, as desired.


Normally, select **Driver Matching Mode**. For color matching based on ICC profiles, select **ICC Matching Mode**, **Driver ICM Mode**, or **Host ICM Mode**, depending on your color matching system.

### B Matching Method

Select the color matching method that suits the document to be printed. Various **Matching Method** options are available depending on your selection in **Matching Mode**.

## ICC Matching Mode, Driver ICM Mode and Host ICM Mode

The following options are available when you select **ICC Matching Mode**, **Driver ICM Mode**, or **Host ICM Mode** in the **A Matching Mode** list.

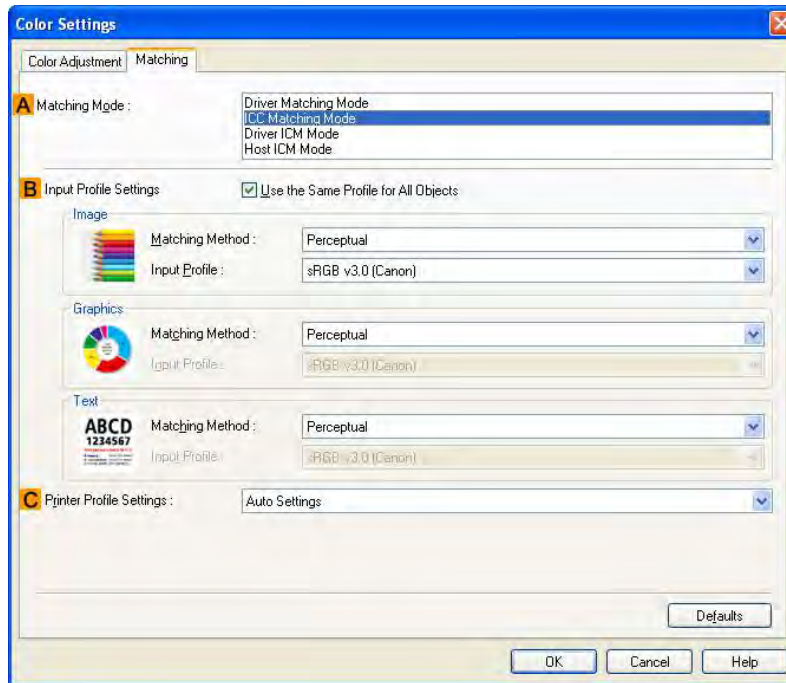

4

### A Matching Mode

Select the color matching mode to use, as desired.

### B Input Profile Settings

You can select **Image**, **Graphics**, or **Text**. You can choose **Matching Method** and **Input Profile**.

Various options are available depending on your selected **Matching Mode**.

To apply the same input profile automatically for **Graphics** and **Text**, select **Use the Same Profile for All Objects**. To apply separate input profiles to **Graphics** and **Text**, clear **Use the Same Profile for All Objects** and specify the individual settings.

### C Printer Profile Settings

Specify the printer profile as desired. Normally, select **Auto Settings**.




#### Note

- For details on settings items, see "Adjusting the Color in the Printer Driver →P.46 "

225

## Color Adjustment Sheet: Monochrome

On the **Color Adjustment** sheet for monochrome printing, you can adjust the brightness and contrast.

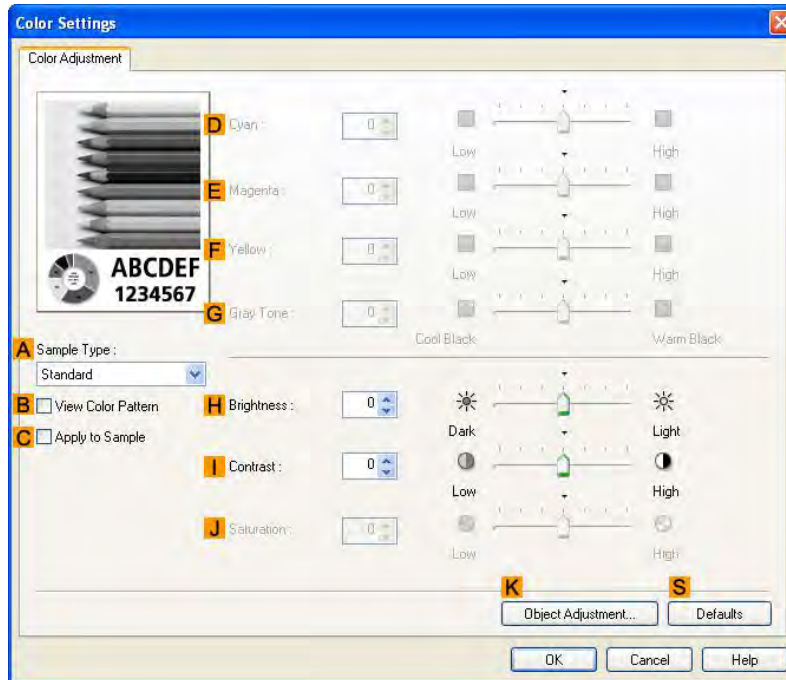

### Note

- To display the **Color Adjustment** sheet, on the **Main** sheet, click **Color Settings** by **Color Mode** in **Advanced Settings**. (See "Main Sheet →P.215 ")

### A Sample Type

Choose a sample image from **Standard**, **Portrait**, **Landscape**, or **Graphics**.

### B View Color Pattern

Select this checkbox to display the color pattern.

### C Apply to Sample

Select this checkbox to apply the changed settings to the sample image.

### D Cyan / E Magenta / F Yellow

Not available.

### G Gray Tone

Not available.

### H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

## I Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.

## J Saturation

Not available.

## K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

- Object Adjustment dialog box: Monochrome →P.227

## S Defaults

Click to restore all settings on the sheet to the default values.




### Note

- For details on settings items, see "Adjusting the Color in the Printer Driver →P.46 "

## Object Adjustment dialog box: Monochrome

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

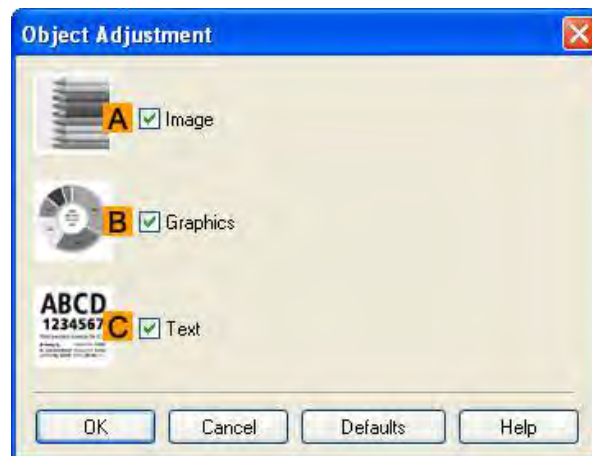

### Note

- To display the **Object Adjustment** dialog box, click **Object Adjustment** on the **Color Adjustment** sheet.

## A Image

Select this option to apply color adjustment to image areas, such as photos.

## B Graphics

Select this option to apply color adjustment to graphics, such as lines and circles.




## C Text

Select this option to apply color adjustment to text.

## Page Setup Sheet

The following settings are available on the **Page Setup** sheet. For details on settings items, refer to the printer driver help file.

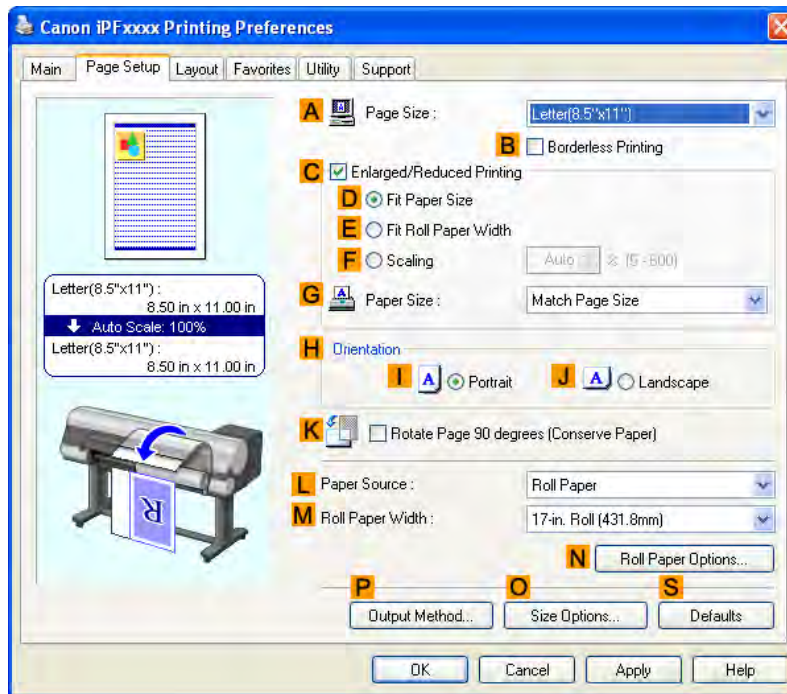


### A Page Size

Select the page size as specified in the source application.

For details on available page sizes, see "Paper Sizes →P.620 "

### B Borderless Printing

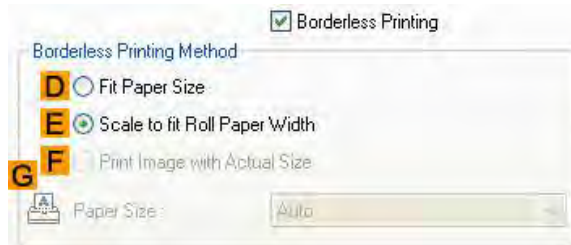

Borderless printing is available if roll paper is selected in the **L Paper Source** list. Choose from the following options when this setting is activated.

- Borderless Printing on Paper of Equivalent Size →P.100
- Borderless Printing by Resizing Originals to Fit the Roll Width →P.107
- Borderless Printing at Actual Size →P.91

## D Fit Paper Size

Scales the document image to match the paper size.

## E Scale to fit Roll Paper Width

Scales the document image to match the roll width.

## F Print Image with Actual Size

Prints documents at their actual size. This function is available when you have selected the size same as the width of **Roll Paper** for either the length or width of the document from the **A Page Size** list.

## G Paper Size


Available when **D Fit Paper Size** is selected.

Choose the size of the paper you will print on.

For details on available paper sizes, see "Paper Sizes →P.620 "

Paper sizes compatible with borderless printing are shown in the list.

## C Enlarged/Reduced Printing

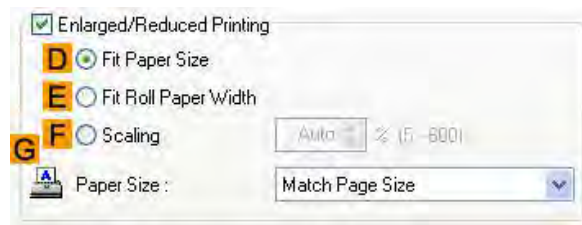

Choose from the following options when this setting is activated.

- Resizing Originals to Match the Paper Size →P.65
- Resizing Originals to Fit the Roll Width →P.71
- Resizing Originals by Entering a Scaling Value →P.77

## D Fit Paper Size

Scales the document image to match the paper size.

## E Fit Roll Paper Width

Scales the document image to match the roll width.

## F Scaling

Resizes the document image based on a specified scaling value. Enter a value in a range of **5–600**.

## G Paper Size

Choose the size of the paper you will print on.

For details on available paper sizes, see "Paper Sizes →P.620 "

## H Orientation

Choose the printing orientation.

- Making the Original Orientation Match the Paper Orientation →P.190

## K Rotate Page 90 degrees (Conserve Paper)

Activate this setting to rotate the document image by 90 degrees before printing.

- Conserving Roll Paper by Rotating Originals 90 Degrees →P.167

## L Paper Source

Choose the feed source, as desired.

Options displayed in the list vary depending on the selection in **Media Type** on the **Main** sheet.


## M Roll Paper Width

Choose the roll width.

For details on available roll widths, see "Paper Sizes →P.620 "

## N Roll Paper Options

Complete optional roll paper settings. Click to display the **Roll Paper Options** dialog box.

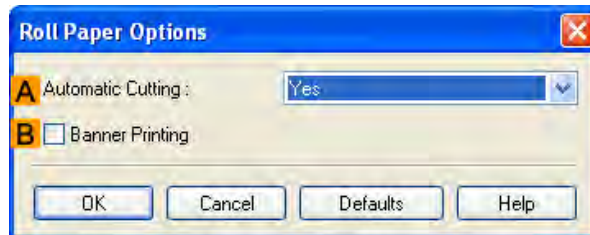

Under **A Automatic Cutting**, you can specify **Yes** or **No** and **Print Cut Guideline**.

- Cutting Roll Paper After Printing →P.196

Select **B Banner Printing** when printing multiple pages continuously.

- Printing Multiple Pages Continuously →P.138

## P Output Method

Click to display the **Output Method** dialog box, which enables you to complete the **Output Method** and **Name of data to be saved** settings.

- Output Method dialog box →P.231

## O Size Options

Click to display the **Paper Size Options** dialog box, which enables you to register additional paper sizes or select the size system for use.


- Paper Size Options Dialog Box →P.232

## S Defaults

Restores all settings on the sheet to the default values.

## Output Method dialog box

The **Output Method** dialog box allows you to select the **Output Method** and set the save settings when saving to the box.

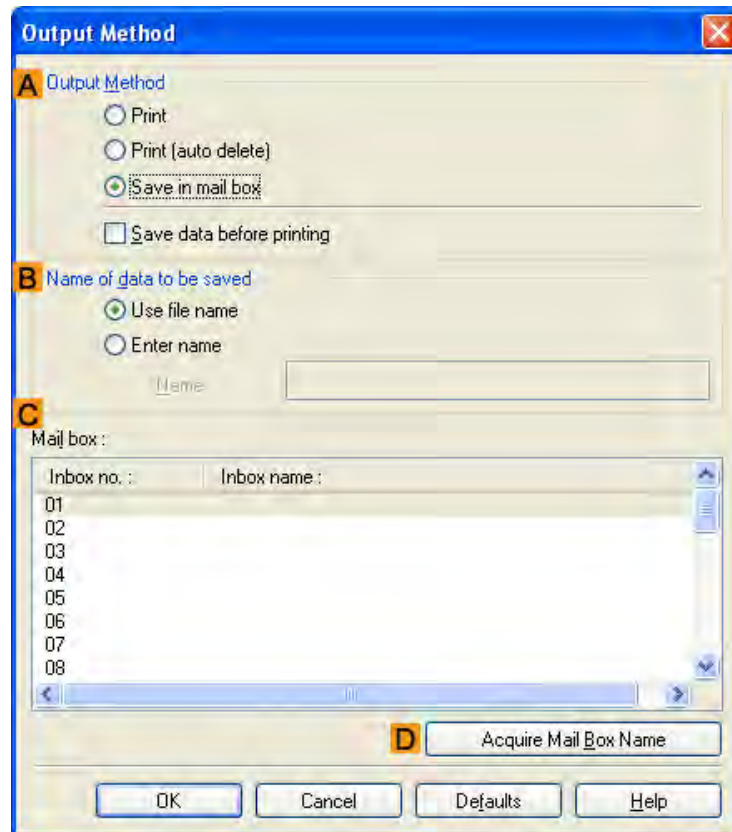

### Note

- To display the **Output Method** dialog box, on the **Page Setup** sheet, click **Output Method**. (Refer to "Page Setup Sheet →P.228 ")

## A Output Method

If **Print** is selected, the print job is saved to the printer hard disk after printing has finished.

If **Print (auto delete)** is selected, the data is deleted immediately after printing has finished.

If **Save in mail box** is selected, the print job is saved to the printer hard disk. If you choose **Save in mail box**, also specify the destination personal box in the **Mail box** list.

If the **Save data before printing** check box is selected, printing starts after the print job has finished being saved in the temporary save box.

## B Name of data to be saved

To use the file name, choose **Use file name**.

Otherwise choose **Enter name** and enter a name in **Name**.

## C Mail box


Displays a list of mail boxes. If you choose **Save in mail box**, also specify the destination personal box from the list.

## D Acquire Mail Box Name

When this is clicked, the box name acquired from the printer main unit is displayed in **Mail box**.

## Paper Size Options Dialog Box

In the **Paper Size Options** dialog box, you can create and register your own Custom Paper Size. The sizes you define are listed with standard paper sizes for selection later as needed.

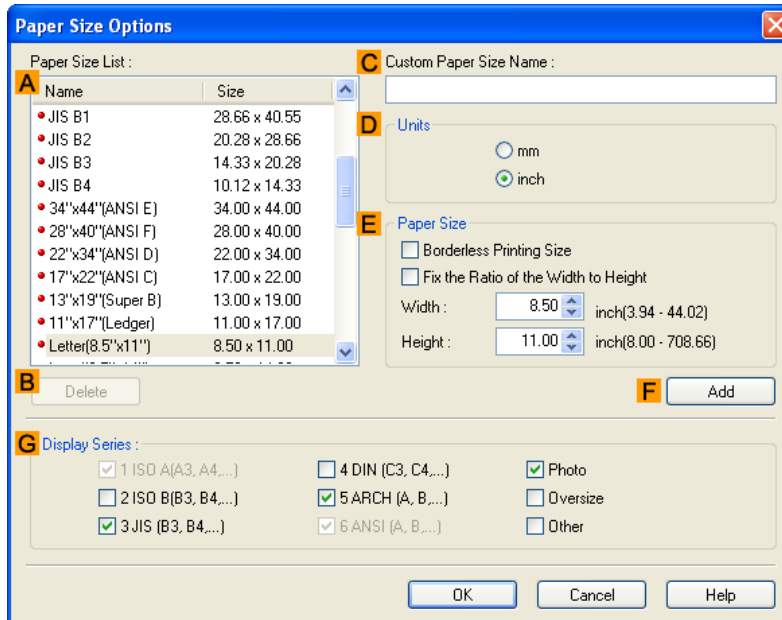

### Note

- To display the **Paper Size Options** dialog box, on the **Page Setup** sheet, click **Paper Size Options**.(See "Page Setup Sheet →P.228 ")

## A Paper Size List

Shows the names and sizes of paper that can be used with the printer driver.

## B Delete

Custom paper sizes created by users can be deleted from the **A Paper Size List**, as needed. However, they cannot be deleted in the following situations.

- If a standard paper size of the printer driver is selected.
- If an oversized paper size is selected.
- If a paper size marked with a red circle is selected.

## C Custom Paper Size Name

You can name Custom Paper Size as desired.

## D Units

Specify the desired unit of measure for the Custom Paper Size height and width.



## E Paper Size

Specify the desired **Width** and **Height**. You can make your selection from sizes that are compatible with **Borderless Printing** by selecting **Borderless Printing Size**. To maintain the aspect ratio of the **Width** and **Height** as you resize the paper, select **Fix the Ratio of the Width to Height**.

## F Add


Enables you to register the custom paper size you have specified or overwrite an existing custom paper size.

## G Display Series

You can limit the number of options shown in **Page Size**, **Paper Size**, and **Paper Size List**.

## Layout Sheet

The following settings are available on the **Layout** sheet. For details on settings items, refer to the printer driver help.

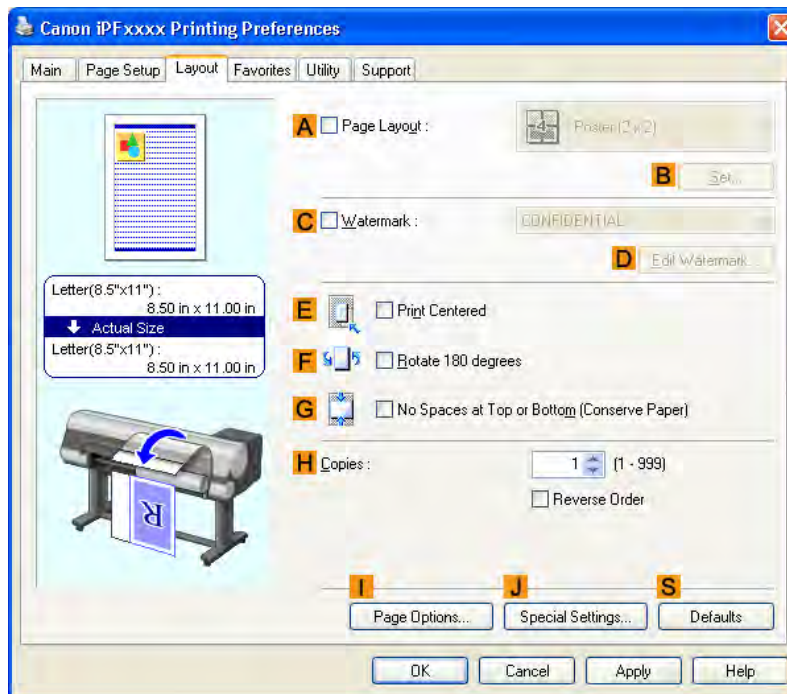

## A Page Layout

Activate this setting to select a particular page layout.

- Printing Multiple Pages Per Sheet →P.143
- Printing Posters in Sections →P.150
- Printing Multiple Originals Next to Each Other →P.133
- Using PosterArtist to Compose Originals →P.181

## B Set

Click to display one of the following dialog boxes depending on the selection in **A Page Layout**. In these dialog boxes, you can specify layout details and which pages to print, as well as other settings.

- **Page Layout Printing**
- **Pages to Print**
- **Free Layout Settings**

## C Watermark

Activating this option makes two settings available, **Watermarks** and **D Edit Watermark**.

- **Printing With Watermarks** →P.186

## Watermarks

Lists the provided watermarks. Choose the watermark to print.

## D Edit Watermark

Click to display the **Edit Watermark** dialog box for creating your own, original watermark.

## E Print Centered

Activate this setting to print document images in the center of the paper.

- **Printing Originals Centered on Rolls** →P.154
- **Printing Originals Centered on Sheets** →P.160

## F Rotate 180 degrees

Activate this option to rotate document images by 180 degrees before printing.

## G No Spaces at Top or Bottom (Conserve Paper)

Activate this setting to print the next image skipping blank areas above and below printable data in documents, which enables you to conserve the paper.

- **Conserving Roll Paper by Printing Originals Without Top and Bottom Margins** →P.173

## H Copies

Enter the number of copies to print, in a range of **1–999**.

## Reverse Order

Activate this option to print pages in reverse order.

## I Page Options

Click to display the **Page Options** dialog box, which enables you to complete settings for printing the user name, date, or page number in the header or footer.

- **Page Options Dialog Box** →P.235

## J Special Settings

If the printing results are not as you expected, click this option to change how printing is processed.


- **Special Settings Dialog Box** →P.236

## S Defaults

Click to restore all settings on the sheet to the default values.

## Page Options Dialog Box

The **Page Options** dialog box offers the following settings.

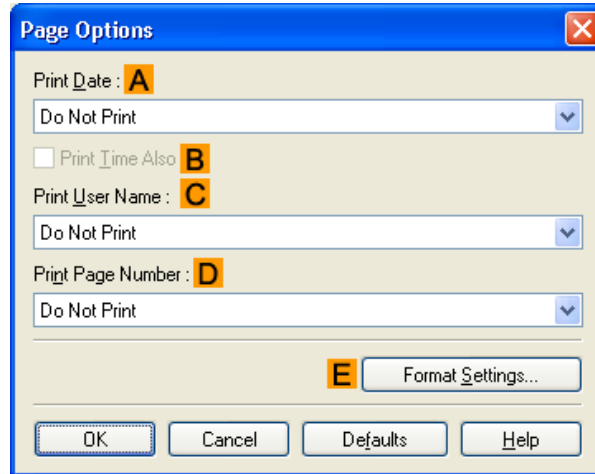

### Note

- To display the **Page Options** dialog box, on the **Layout** sheet, click **Page Options**. (See "Layout Sheet → P.233 ")

## A Print Date

Select where the date is printed, as desired. To print the time as well, select **B Print Time Also**.

## C Print User Name


Select where the user name is printed, as desired.

## D Print Page Number

Select where the page number is printed, as desired.

## E Format Settings

Click to display the **Format Settings** dialog box, which enables you to complete format-related settings.

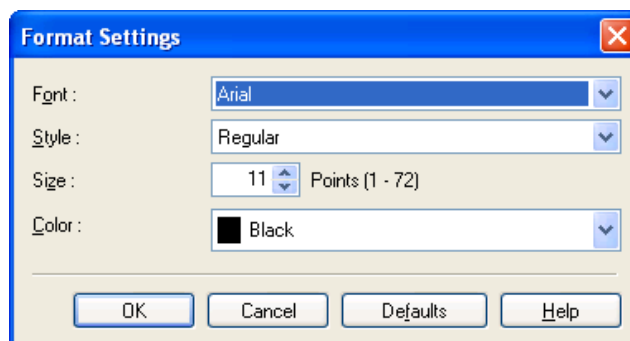


**Note**

- If you specify the same position for multiple items, the items are printed from left to right in this order: date, user name, and page number.
- When you print multiple pages per sheet using **Page Layout Printing** or similar functions, these items will be printed for each page.

## Special Settings Dialog Box

If the printing results are not as you expected, you can change how printing is processed in the **Special Settings** dialog box.

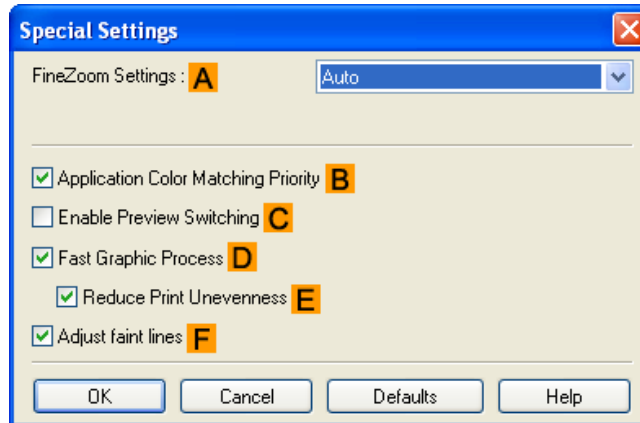**Note**

- To display the **Special Settings** dialog box, on the **Layout** sheet, click **Special Settings**.(See "Layout Sheet →P.233 ")

### A FineZoom Settings

This function is used in large-format printing. Normally, choose **Auto**. If documents are not printed correctly on large-format paper, it may help to select **Yes**, and if fine lines are not visible or if images are distorted when printed, it may help to select **No**.

### B Application Color Matching Priority

You can give applications priority in color management.

### C Enable Preview Switching

When this option is selected, PageComposer starts if you print with **Open Preview When Print Job Starts** selected on the **Main** sheet.

### D Fast Graphic Process

If image colors are inconsistent in printed documents or if lines are printed in varying thicknesses, clearing this option may help produce the expected results.

**Important**

- This function cannot be used on 64-bit version of Windows.

## E Reduce Print Unevenness


If you are concerned about print unevenness, the printing results can be improved by selecting this option. However, printing may take longer for some images.

## F Adjust faint lines

If fine lines are printed in colors that do not match the colors of other shapes, clearing this option may help produce the expected results. However, lines in some colors may appear broken.

## Favorites Sheet

The following settings are available on the **Favorites** sheet. For details on settings items, refer to the printer driver help.

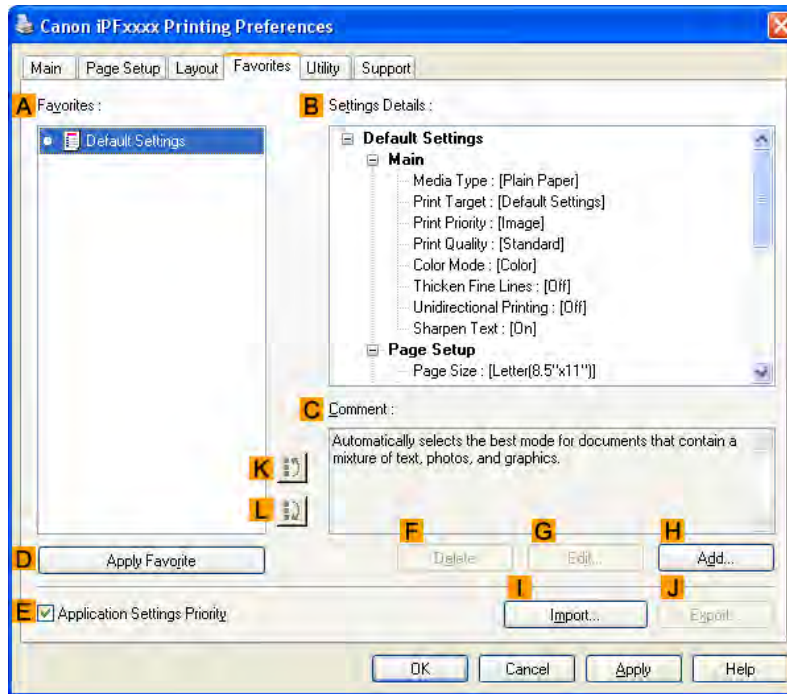

### A Favorites

Printing favorites you have created are listed with **Default Settings** favorites.

- Using Favorites →P.196

### B Settings Details

Displays details of the favorite selected in the **A Favorites**.

### C Comment

Displays notes registered in the favorite.

### D Apply Favorite

Click to change the current print settings to those of the favorite selected in the **A Favorites**.

## E Application Settings Priority

Activate this setting to use settings values specified in the source application in preference to favorite settings selected in the **A Favorites**, when clicking **D Apply Favorite**. For details on the settings items used in preference, refer to the printer driver help.

## F Delete


Click to delete the selected favorite from the **A Favorites** list.

## G Edit

Click to display the **Edit** dialog box, which enables you to change the name and icon for the favorite selected in the **A Favorites** list.

## H Add

Click to display the **Add** dialog box, which enables you to add the current print settings as a favorite.

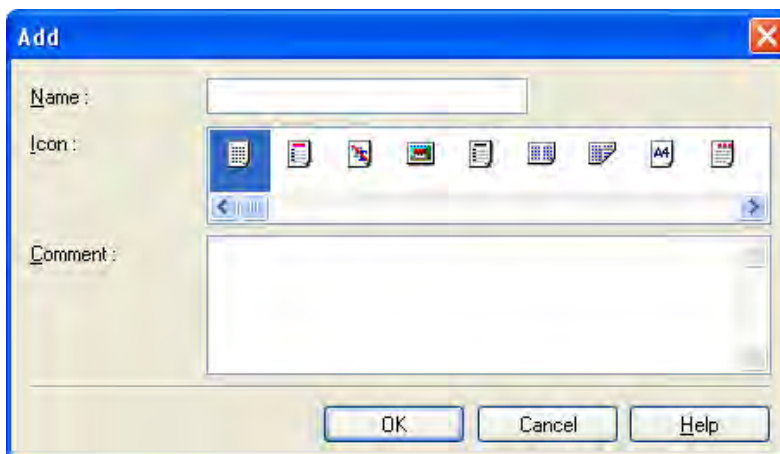

## I Import

Click to display the **Open** dialog box, which enables you to import favorite settings saved as a file.

## J Export

Click to display the **Save As** dialog box, which enables you to save the favorite settings as a file.

## K Up

Click to move the selected favorite up in the **A Favorites** list.


## L Down

Click to move the selected favorite down in the **A Favorites** list.



## Utility Sheet

The following items can be executed on the **Utility** sheet. For details on the utilities, refer to the relevant utility help.

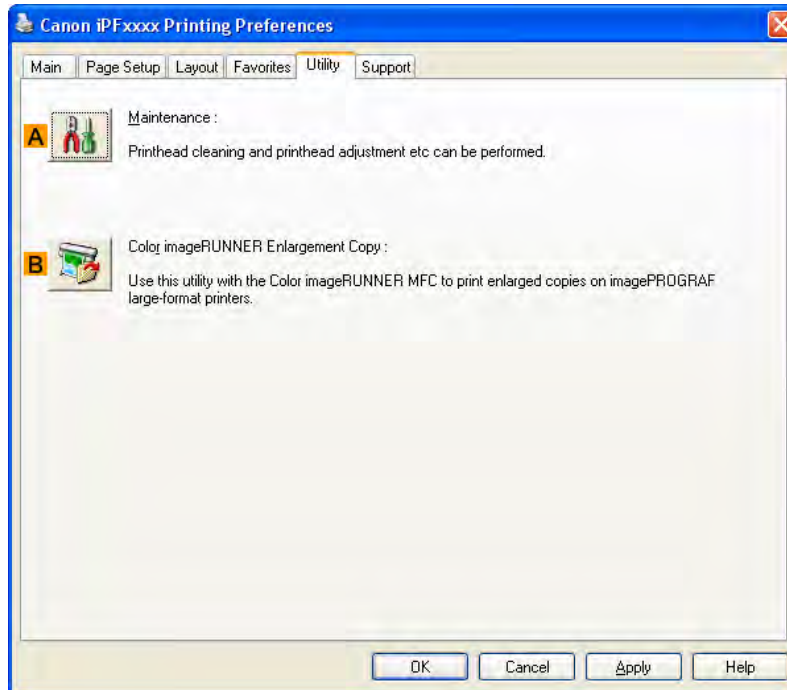

4

### A Maintenance

Click to start the imagePROGRAF Status Monitor, which offers the following maintenance for the printer.

- Nozzle (ink ejecting outlet) check
- Nozzle (ink ejecting outlet) cleaning
- Head alignment adjustment
- Feed amount adjustment

### B Color imageRUNNER Enlargement Copy

Click to launch Color imageRUNNER Enlargement Copy (iR enlargement copy), which enables you to create hot folders used for Color imageRUNNER Enlargement Copy and assign print settings to hot folders.


- Printing Enlargements of Scanned Originals from a Color imageRUNNER →P.298

For details, see Color imageRUNNER Enlargement Copy →P.286 .

239

## Support Sheet

On the **Support** sheet, you can view support information and the user's manual.

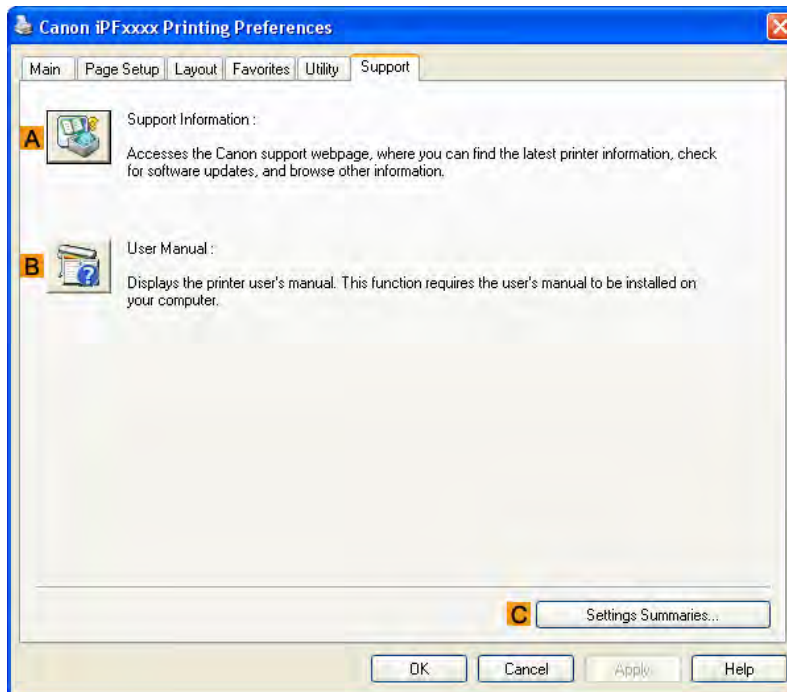

4

### A Support Information

Click to access the Canon support webpage, where you can find the latest information on the printer and consumables, check for printer driver updates, and browse other information.

### B User Manual

Click to view the printer user's manual. This function requires the user's manual to be installed on your computer.


### C Settings Summaries

Click to display the **View Settings** dialog box, which enables you to confirm the settings for the **Main**, **Page Setup**, **Layout**, and **Favorites** sheets.

240

## Settings Summaries Dialog Box

The **Settings Summaries** dialog box enables you to confirm the settings for the **Main**, **Page Setup**, **Layout**, and **Favorites** sheets.

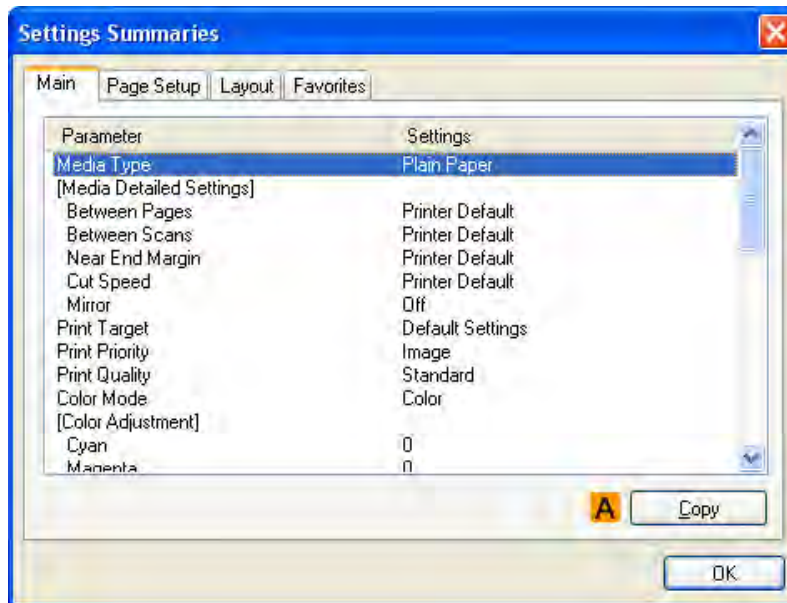


### **A** Copy

Click to copy the settings information to the clipboard. You can paste the settings information into a file created with a text editor or similar application.

## Device Settings Sheet

Many settings items on the printer properties sheets are controlled by Windows applications. However, the **Device Settings** sheet is for configuring the printer, and it is an extension of the printer driver.

The following settings are available on the **Device Settings** sheet.

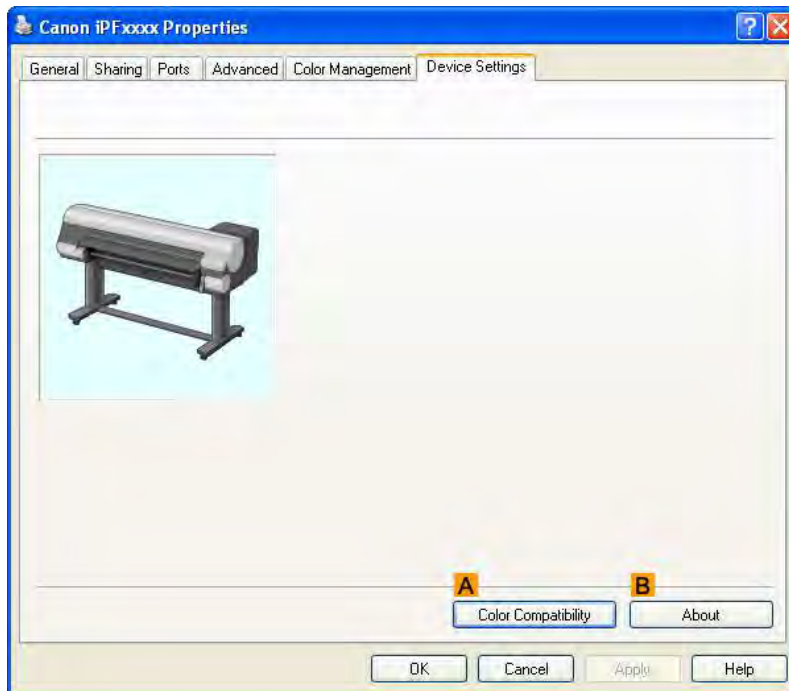

4

### A Color Compatibility

Click to display the **Color Compatibility** dialog box, which enables you to adjust colors if you have selected **Color Mode > Color (CAD)**.



- For details on color settings, see [Specifying Colors and Printing CAD Drawings](#) →P.26 .

### B About

You can display version information for the printer driver.

242

## Preview

The Features of Preview .....	243
Operating Environment .....	243
Starting Preview .....	243
Preview Main Window .....	245
Dialog Area .....	248
Enlarge/Reduce the screen display .....	249
Moving a Page .....	249
Using the ruler .....	250
Priority setting for rotating 90 degrees .....	250
Printing with Selecting the Layout .....	252
Print on the Center .....	254
Not Print Spaces at the Top/Bottom .....	255

## The Features of Preview

4

The main features of Preview are as follows.

- While viewing this screen, you can adjust layout settings of a document created with application software.
- You can not only adjust layout settings but also your changes will be instantly applied on the preview screen, and you can print the preview screen as it is seen.



### Note

- The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Preview settings.

## Operating Environment

You can use the Preview in the following environments.

- Compatible Operating System  
Windows 2000, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7
- Software that requires installation  
imagePROGRAF Printer Driver

## Starting Preview

Follow the procedure below to start the Preview.

243


1. Start the application software which you use.
2. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



### Note

- Normally, select **Print** from the **File** menu.


3. On the **Main** sheet, click on the **Open Preview When Print Job Starts** check box. Click the **OK** button to save the settings.

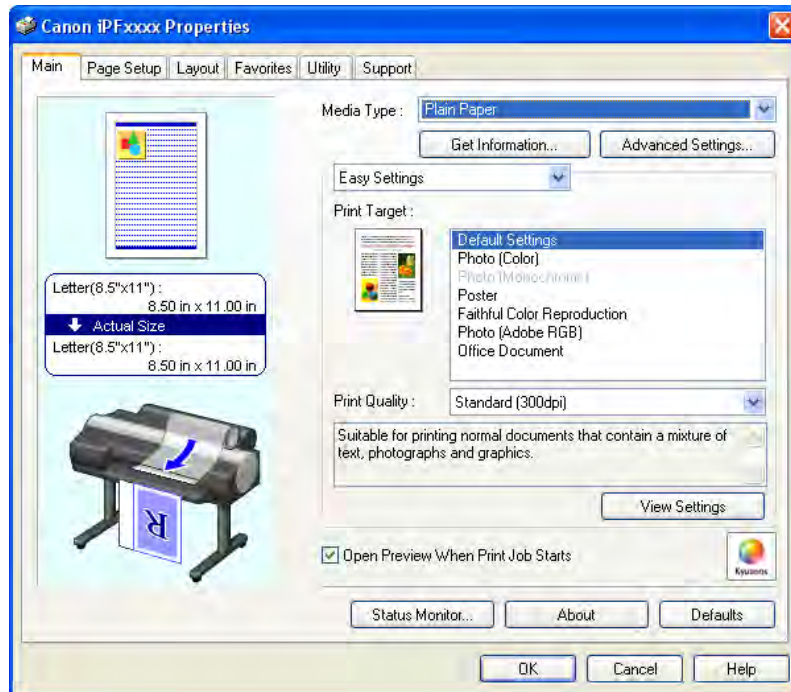

**Note**

- Your printer is depicted in the lower-left area of this screen.


4. On the **Print** dialog box in the application software, click the **Print** button.
5. Preview main window is displayed.

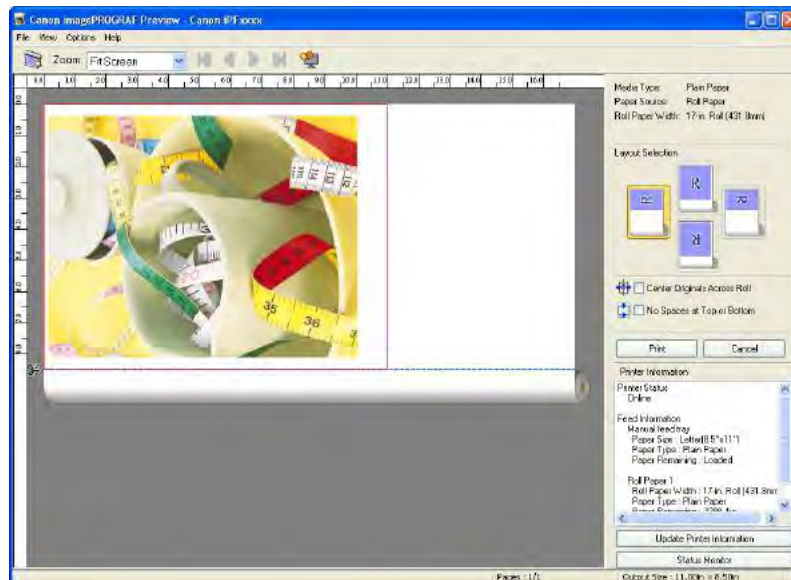



## Preview Main Window

The Preview main window consists of the menu and tool bars, preview and dialog area and status bar.

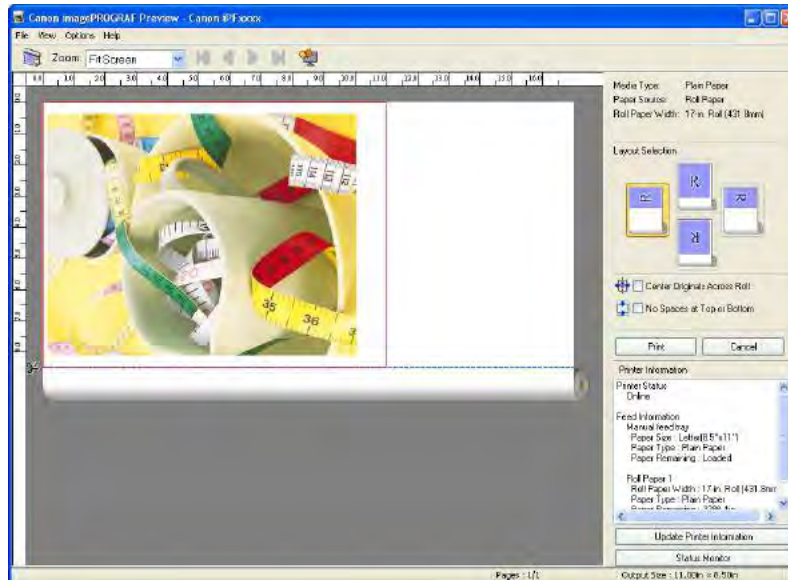


### Note

- You can use the **View** menu to show or hide the tool bar.

## Menu Bar

This allows you to select menus required for operations.




## Tool Bar

This allows you to select tool buttons required for major operations.



### Preview Area

You can check the settings you made in this area.

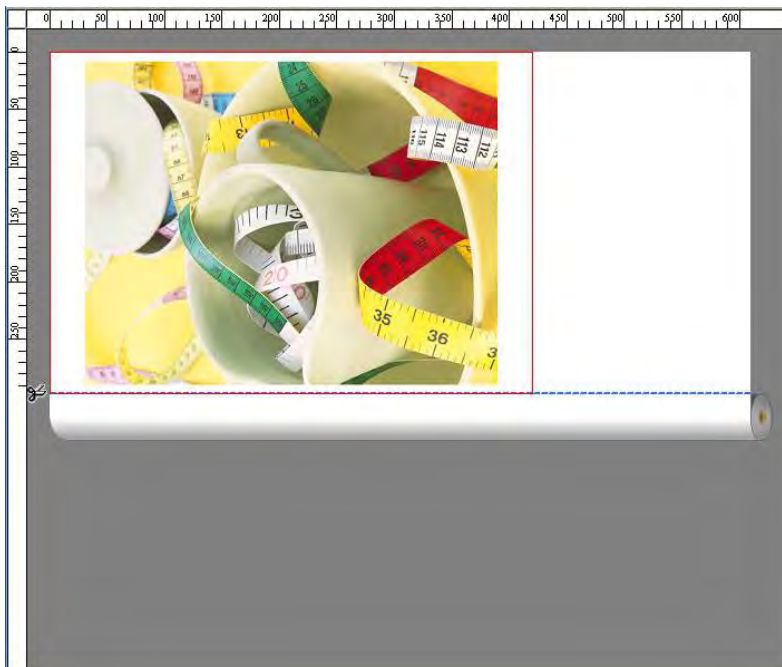


4

### Dialog Area

This allows you to set the print conditions and perform a print job.


For more information about Dialog Area, see "Dialog Area." →P.248

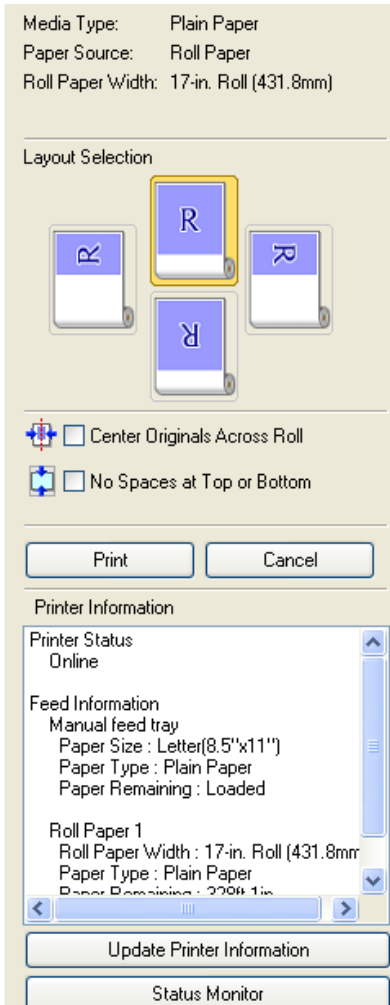

4

## Status Bar


This shows the message, **Pages** and **Output Size**.



247

## Dialog Area

You can select the layout and print on the center.

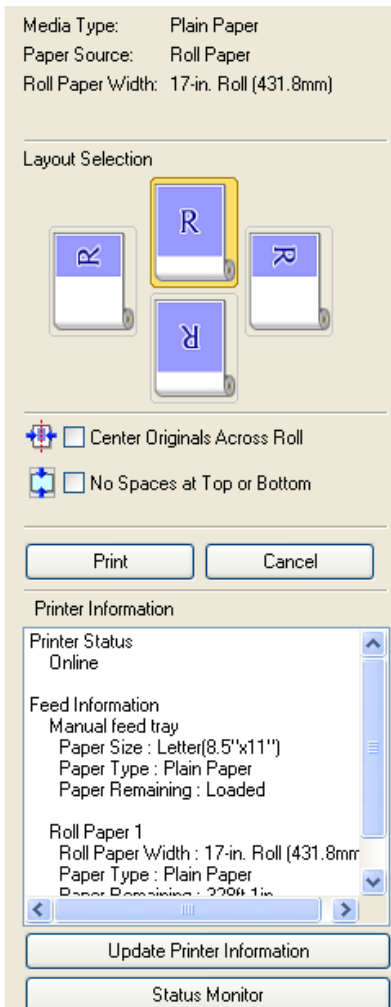

### Media Type / Paper Source / Paper Size

You can confirm the information that is set.

### Layout Selection

You can print which conserves paper by selecting the layout.

For more information about **Layout Selection**, see "Printing with Selecting the Layout." →P.252

### Center Originals Across Roll

You can print on the center of the media loaded in the printer.

For more information about **Center Originals Across Roll**, see "Print on the Center." →P.254



#### Note

- Available only if rolls are selected in **Paper Source**.

## No Spaces at Top or Bottom

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom. For more information about **No Spaces at Top or Bottom**, see "Not Print Spaces at the Top/Bottom." →P.255



### Note

- Available only if rolls are selected in **Paper Source**.

## Print Button

Click the button to start printing.

## Cancel Button

Click the button to stop printing.

## Printer Information

You can confirm the information acquired from the printer.

## Update Printer Information Button

Click the button to update the printer information with connecting to the printer.

## Status Monitor Button

Click the button to start **Status Monitor**.

## Enlarge/Reduce the screen display

You can enlarge or reduce the screen display when you select **Zoom** from the **View** menu.

Setting	Details
<b>Fit Screen</b>	Display all.
<b>Fit to Width</b>	Display to the width of the paper.
<b>Reduce</b>	Display at half of the standard size.
<b>Standard</b>	Display at the standard size.
<b>Enlarge</b>	Display with the double of the standard size.
<b>Enlarge More</b>	Display with the triple of the standard size.



### Note


- This item can be selected even if you have clicked the ▼ button in the toolbar **Zoom**.

## Moving a Page

You can move a page to display when you select **Go to Page** from the **View** menu.

Setting	Details
<b>First Page</b>	Go to the first page.
<b>Previous Page</b>	Go to the previous page.
<b>Next Page</b>	Go to the next page.
<b>Last Page</b>	Go to the last page.
<b>Go To Page</b>	Go to the specified page.

**Note**

- You can also move a page by clicking  on the tool bar.

## Using the ruler


You can confirm the layout with using the ruler.

- Switching the ruler Show/Hide  
In the **View** menu, select **Ruler** to switch the ruler Show/Hide.
- Changing the ruler unit  
You can set the ruler unit when you select **Units** from the **View** menu.

Setting	Details
<b>mm</b>	Use mm as the ruler unit.
<b>inch</b>	Use inches as the ruler unit.

## Priority setting for rotating 90 degrees


You can select **Rotate 90 Degrees If Possible** or **Use Driver Settings** from the **Options** menu.

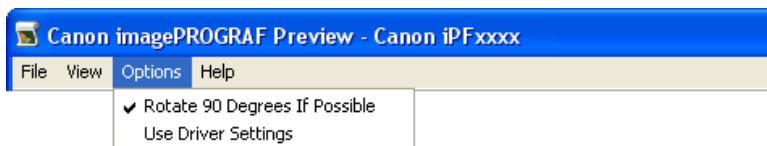

Setting	Details
<b>Rotate 90 Degrees If Possible</b>	Rotates pages in portrait orientation 90 degrees before printing. Pages are only rotated if they can fit lengthwise across the roll.
<b>Use Driver Settings</b>	Follows printer driver settings when determining whether to rotate pages.




Selecting **Rotate 90 Degrees If Possible** or Placing a checkmark for **Rotate Page 90 degrees (Conserve Paper)** on the printer driver

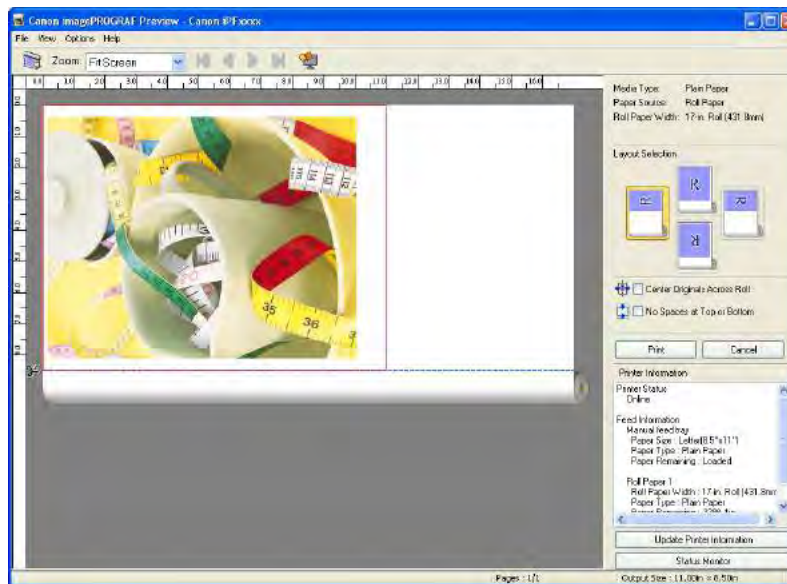

4

Selecting **Use Driver Settings**

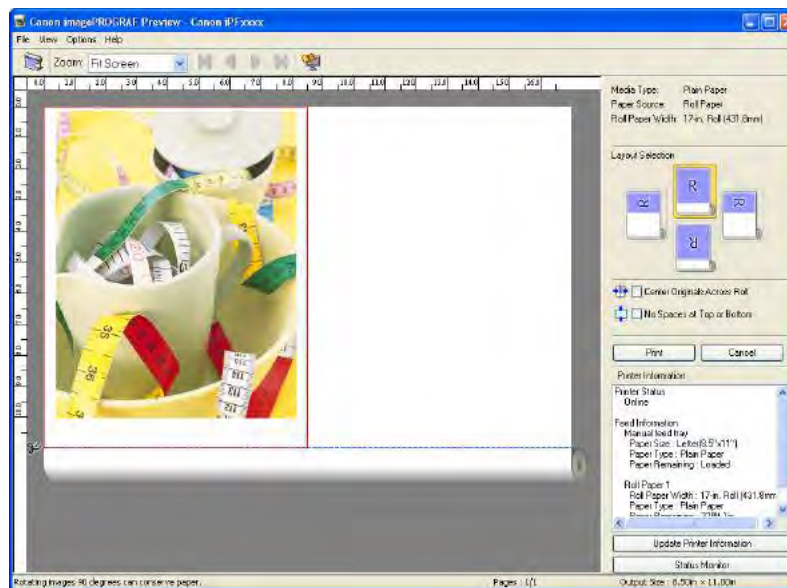

251

## Printing with Selecting the Layout




You can print which conserves paper by selecting the layout.


1. In **Layout Selection**, click the layout button to use.



4


252




Button	Details
<b>Upper Button</b>	 <p>Turn at the position of</p>
<b>Right Button</b>	 <p>Turn at the position of</p>
<b>Left Button</b>	 <p>Turn at the position of</p>

Button	Details
<b>Lower Button</b>	 <p>Turn at the position of .</p>

**Note**

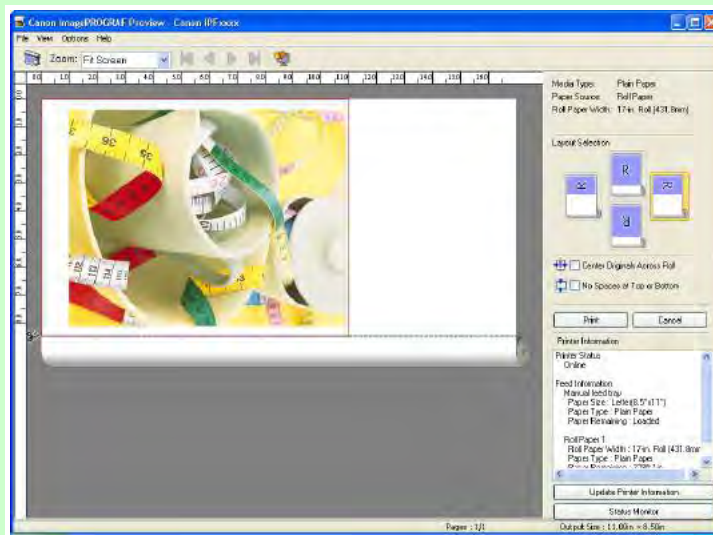- **Right Button** or **Left Button** can be selected only when the rotated pages can fit lengthwise across the roll.
- By clicking **Right Button** or **Left Button**, you can save paper by printing in landscape orientation on roll paper.
- You can select only **Upper Button** or **Lower Button** if **Cut Sheet** is selected.



Button	Details
	The button is selected currently.
	The button can be selected.
	The button can not be selected.


## 2. Click the **Print** Button.

Printing on the selected layout begins.

## Print on the Center

You can print on the center of the media loaded in the printer.

1. Click the **Center Originals Across Roll** check box on.

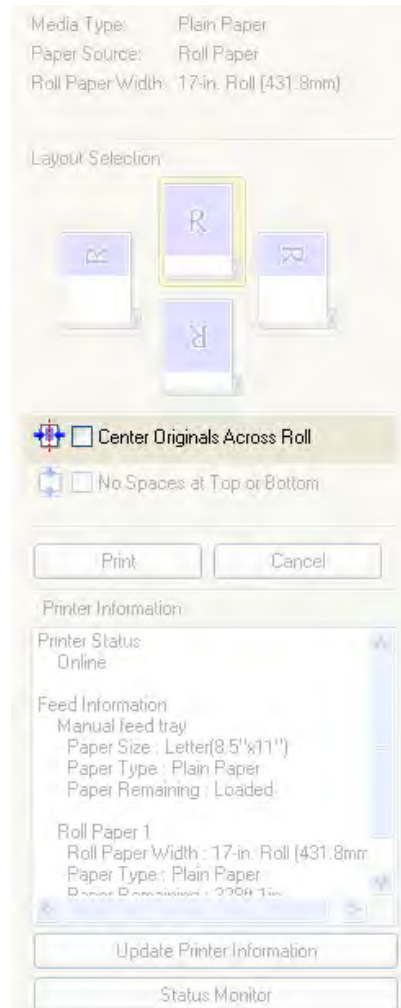

2. Click the **Print** button

Printing on the center begins.



### Note

- Available only if rolls are selected in **Paper Source**.

## Not Print Spaces at the Top/Bottom

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.

1. Click the **No Spaces at Top or Bottom** check box on.



2. Click the **Print** button.

Printing on the settings with no spaces at top or bottom begins.

## Free Layout


The Features of Free Layout .....	256
Operating Environment .....	257
Starting Free Layout .....	257
Free Layout Main Window .....	259
Detailed Settings .....	261
Preferences Dialog Box .....	262
Page Options Dialog Box .....	263
Zoom Dialog Box .....	264
Format Dialog Box .....	265
Laying out a Multiple-File Document on One Page .....	267
Laying out a Document Created with Multiple Application Programs on One Page .....	270
Selecting an Object .....	273
Changing the Object Size .....	274
Moving an Object .....	274
Rotating an Object .....	275
Laying out Objects Automatically .....	276
Aligning Objects .....	276
Changing the Object Overlapping Order .....	278
Pasting a Copied or Cut Object .....	280
Folded Duplex Window .....	281
Finished Size Settings Dialog Box .....	282
Binding Settings Dialog Box .....	283
Prints using Folded Duplex .....	284

4

## The Features of Free Layout

The main features of Free Layout are as follows.

- Allows you to lay out at will and print a document created with application software.
- You can not only lay out multiple pages on one page but also lay out and print a multiple-file document on one page, or lay out and print a document created with multiple application programs on one page.
- Any two pages can be arranged and printed in a layout that becomes duplex on folding. This can be used such as for advertising posters that are suspended from the ceiling.

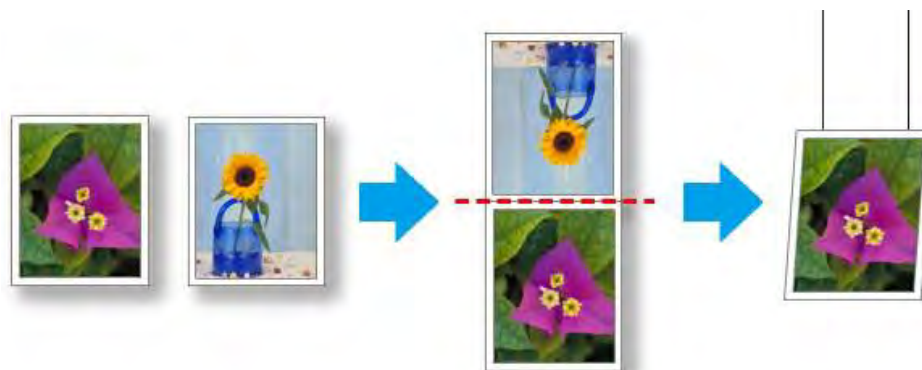

256



**Note**

- The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Free Layout settings.

## Operating Environment

You can use the Free Layout in the following environments.

- Compatible Operating System  
Windows 2000, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7
- Software that requires installation  
imagePROGRAF Printer Driver

**Note**

- This function is not available on 64-bit version of Windows.

## Starting Free Layout


Follow the procedure below to start the Free Layout.

1. Start the application software which you use.
2. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.

**Note**

- Normally, select **Print** from the **File** menu.

3. From the list, select the printer and select the **Layout** sheet.

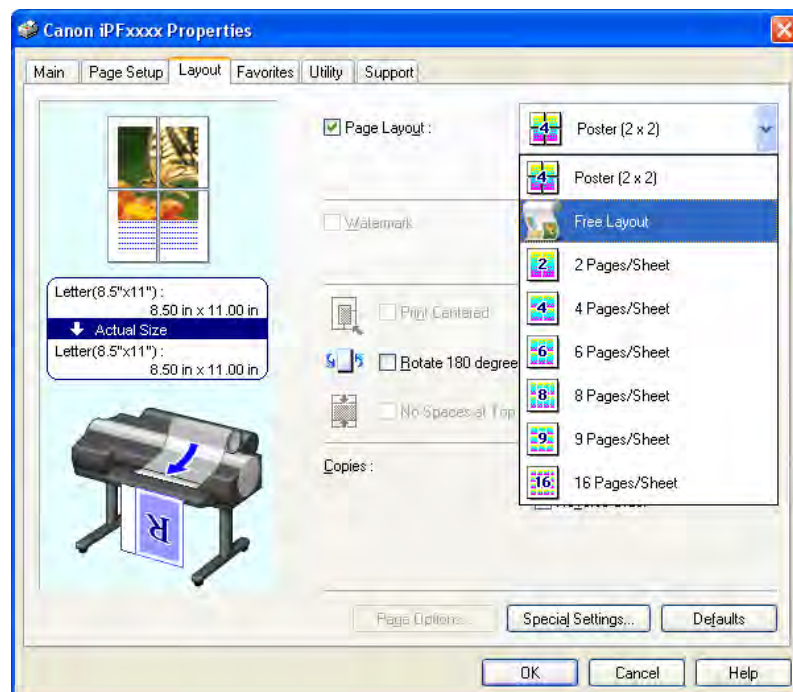



**Note**

- Your printer is depicted in the lower-left area of this screen.

4. In the **Layout** sheet, click on the **Page Layout** check box and select Free Layout from the list. Click the **OK** button to save the settings.



**Note**

- When you select Free Layout, all other setting items will be disabled.

5. On the **Print** dialog box in the application software, click the **Print** button. Free Layout main window is displayed.



## Free Layout Main Window

The Free Layout main window consists of the menu and tool bars, layout area and status bar.



### Note

- You can use the **View** menu to show or hide the tool and status bar.

## Menu Bar

This allows you to select menus required for operations.



## Tool Bar

This allows you to select tool buttons required for major operations.



### Layout Area

This allows you to lay out objects and edit the object size and orientation.



4

### Status Bar

This shows the paper size, unit of length, and number of objects.



260

## Detailed Settings

The printer driver opens when you select **Detailed Settings** from the **File** menu. The printer driver is used to configure basic settings to match the type of media loaded in the printer.



Refer to Printer Driver →P.202 for details on the printer driver.




### Note

- When you select the **Detailed Settings**, the only three sheets displayed are the **Main** sheet, the **Page Setup** sheet, and the **Layout** sheet. Some of the printer driver settings may be disabled.



## Preferences Dialog Box

This dialog box appears when you select **Preferences** from the **File** menu. This allows you to configure the preferences of Free Layout.

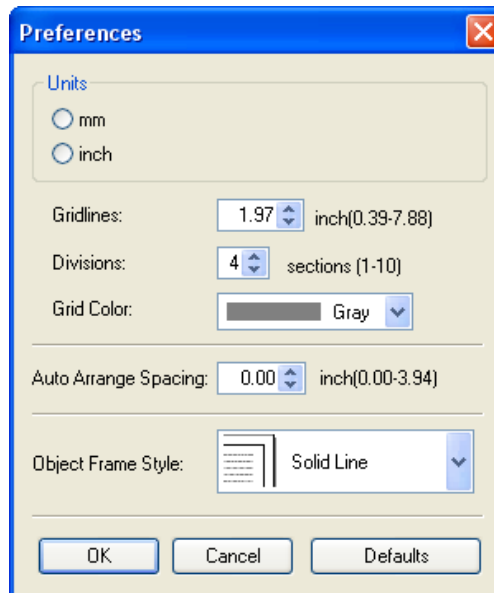

### Units

Set the unit for paper length, margins, and so on.

### Gridlines

You can input a grid line width value in numerical characters so that they serve as a guide to laying out objects.



#### Note

- You can input between 10.0 and 200.0(mm) (between 0.39 and 7.88(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

### Divisions

You can change the number of divisions of grid lines so that they serve as a guide to laying out objects.



#### Note

- You can input between 1 and 10.
- You can change the numbers by clicking either ▲ button or ▼ button.

### Grid Color

Select the grid line color.

### Auto Arrange Spacing

Change the object-to-object spacing to be applied in the operation of laying out objects automatically.



**Note**

- You can input between 0.0 and 100.0(mm) (between 0.00 and 3.94(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Object Frame Style

You can select the object frame style for printing.

The following settings are available for the object frame style.

Setting	Details
<b>None</b>	You can print with no frame style.
<b>Solid Line</b>	You can print the solid line as the frame style.
<b>Dotted Line</b>	You can print the dotted line as the frame style.
<b>Dashed Line</b>	You can print the dashed line as the frame style.
<b>Crop Marks</b>	You can print with the crop marks.

4

## Page Options Dialog Box

This dialog box appears when you select **Page Options** from the **File** menu. This allows you to configure the roll paper length, object layout order, and margins of Free Layout.



263

## Roll Paper Length

Set the length of one page to print on roll paper.

The following settings are available for roll paper length.

Setting	Details
<b>Auto Settings</b>	The one-page length to be printed on roll paper is automatically set so that the laid-out objects are printed on one page.
<b>Manual Settings</b>	You can input the length of one page to print on roll paper in numerical characters.

**Note**

- Available only if rolls are selected in **Paper Source**.
- You can input between 203.2 and 18000.0(mm) (between 8.00 and 708.66(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Order

Set the object layout order.

The following settings are available for order.

Setting	Details
<b>Upper Left to Right</b>	The objects are laid out from upper left to right.
<b>Upper Left to Bottom</b>	The objects are laid out from upper left to bottom.
<b>Upper Right to Left</b>	The objects are laid out from upper right to left.
<b>Lower Left to Top</b>	The objects are laid out from lower left to top.

**Note**

- When you have selected **Roll Paper Length > Auto Settings** and **Paper Orientation > Vertical**, you can choose **Upper Left to Right** or **Upper Right to Left**.
- When you have selected **Roll Paper Length > Auto Settings** and **Paper Orientation > Horizontal**, you can choose **Upper Left to Bottom** or **Lower Left to Top**.

## Margins


You can input the paper margins in numerical characters.

**Note**

- You can input between 0.0 and 50.0(mm) (between 0.00 and 1.97(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Zoom Dialog Box

This dialog box appears when you select **Zoom** from the **View** menu. You can enlarge or reduce the screen display.

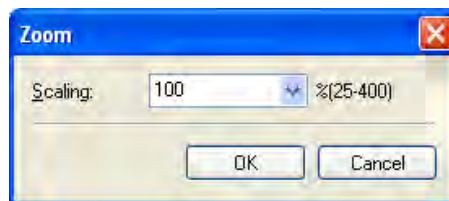

## Scaling

Set the magnification for enlargement or reduction of the screen display.

**Note**


- You can input between 25 and 400.
- You can change the numbers by clicking ▼ button.

## Format Dialog Box

This dialog box appears when you select **Format** from the **Object** menu after you select an object.

### Size Sheet

You can rotate, enlarge, or reduce an object.

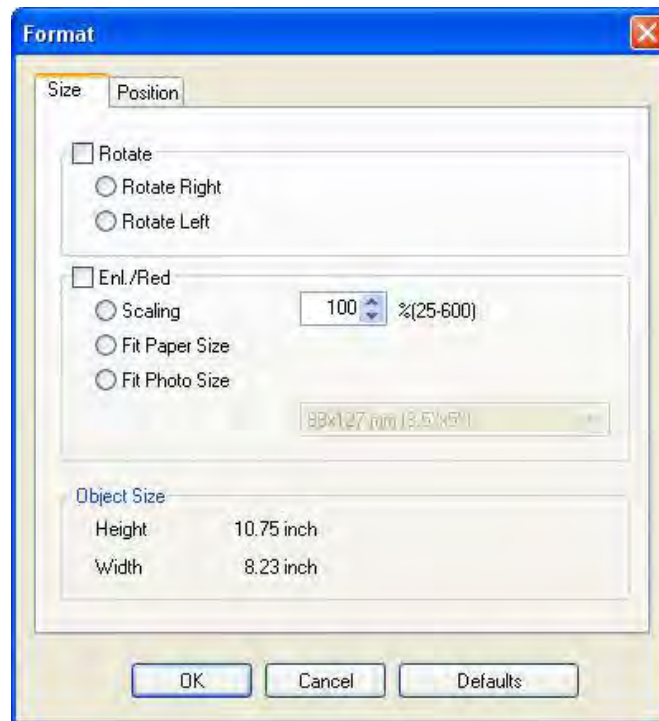**Note**

- When the objects are not selected, you can not select **Format**.

### Rotate

When you place a checkmark here, you can select **Rotate Right** or **Rotate Left**.

Setting	Details
<b>Rotate Right</b>	Rotates the object 90 degrees clockwise.
<b>Rotate Left</b>	Rotates the object 90 degrees counterclockwise.

**Note**

- When several objects are selected, you cannot select **Rotate**.

## Enl./Red.

When you place a checkmark here, you can select **Scaling**, **Fit Paper Size**, or **Fit Photo Size**.

Setting	Details
<b>Scaling</b>	Allows you to input the value of the enlargement or reduction ratio of an object.
<b>Fit Paper Size</b>	Prints by enlarging or reducing each object to match the paper size. If you are using roll paper, objects are enlarged or reduced so that the width of each object matches the width of the roll paper.
<b>Fit Photo Size</b>	Prints all of the objects at the specified photo size.




### Note

- You can input between 25 and 600.
- You can change the numbers by clicking either ▲ button or ▼ button.

## Position Sheet

You can rotate, enlarge, or reduce an object.

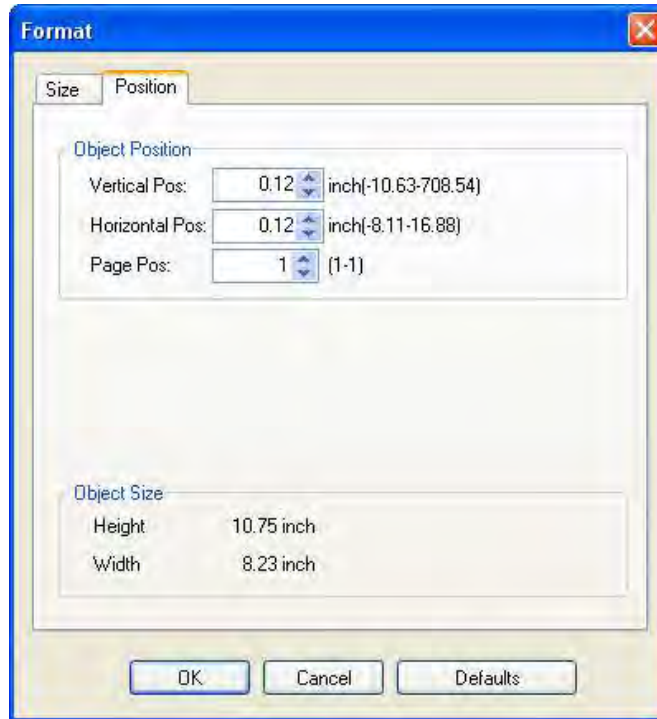

### Note

- When the objects are not selected, you can not select **Format**.

## Object Position

You can move the object position by changing the values.

Setting	Details
<b>Vertical Pos</b>	You can input the number of the vertical position in numerical characters.
<b>Horizontal Pos</b>	You can input the number of the horizontal position in numerical characters.

Setting	Details
Page Pos	You can input the number of the page position in numerical characters.

### Object Size

You can confirm the object size.



**Note**

- When several objects are selected, you cannot display **Object Size**.

## Laying out a Multiple-File Document on One Page

You can lay out and print a multiple-file document on one page.


1. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.




**Note**

- Normally, select **Print** from the **File** menu.

2. Click **Properties** to open the **Properties** dialog box.

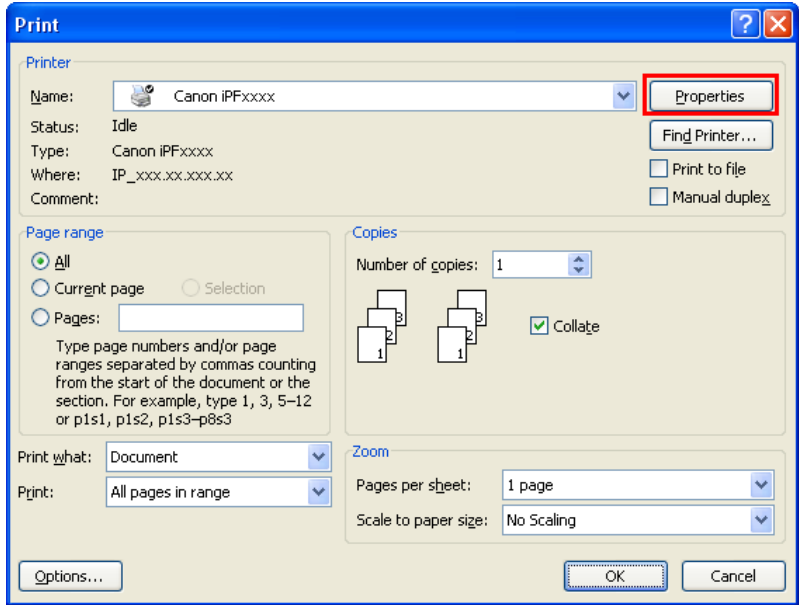

3. In the **Page Setup** sheet, select **Paper Source**.

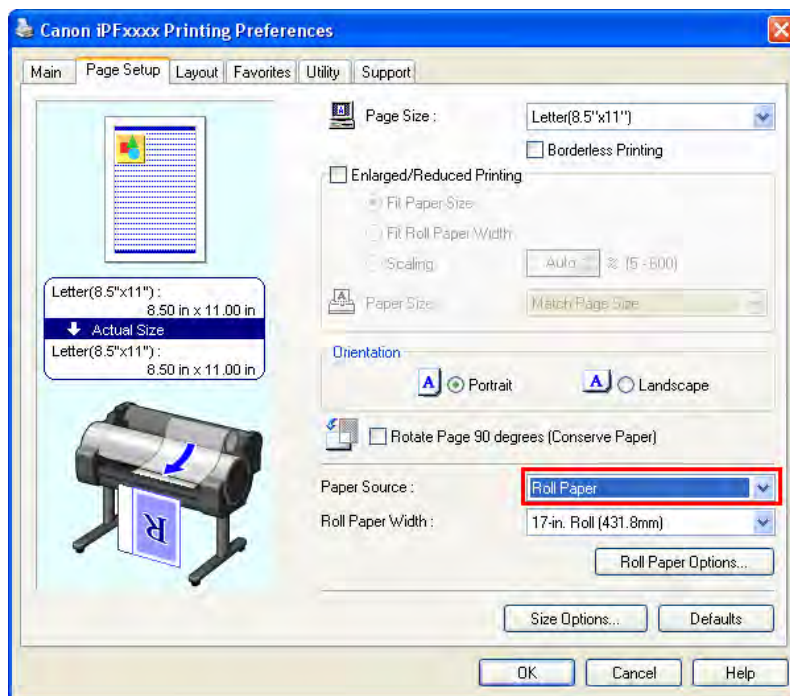


4



**Note**

- Your printer is depicted in the lower-left area of this screen.

4. In the **Layout** sheet, click on the **Page Layout** check box and select Free Layout from the list.

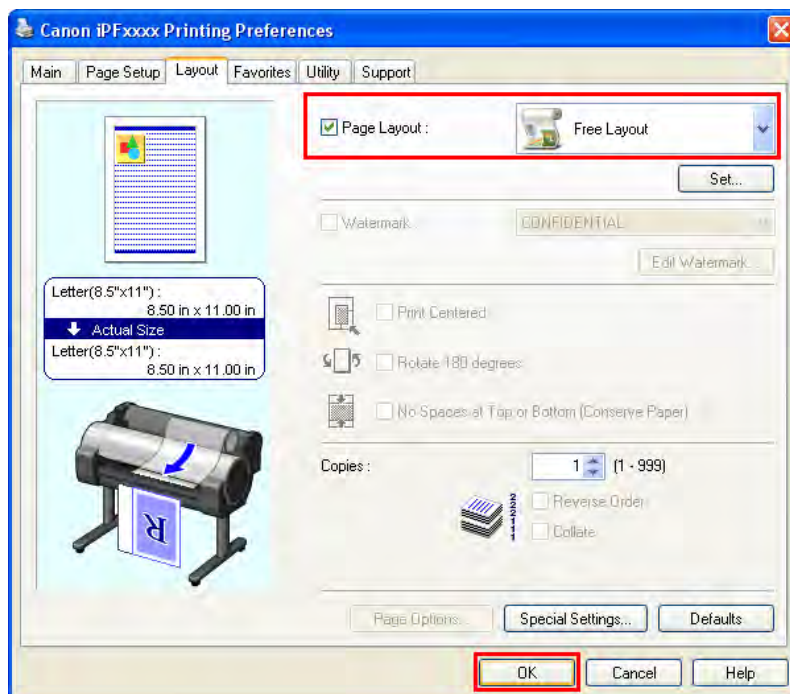

268




**Note**


- Your printer is depicted in the lower-left area of this screen.
- When you select Free Layout, all other setting items will be disabled.

5. Click the **OK** button to save the settings.

6. In the **Print** dialog box, select the pages to print and the number of copies, and click the **OK** button.

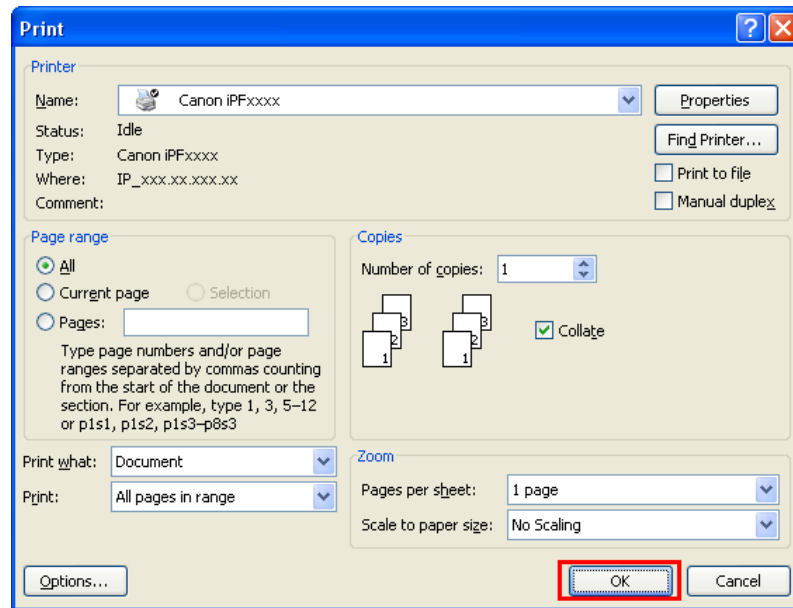

Free Layout starts, laying out the document created with application software in the layout area as an object.

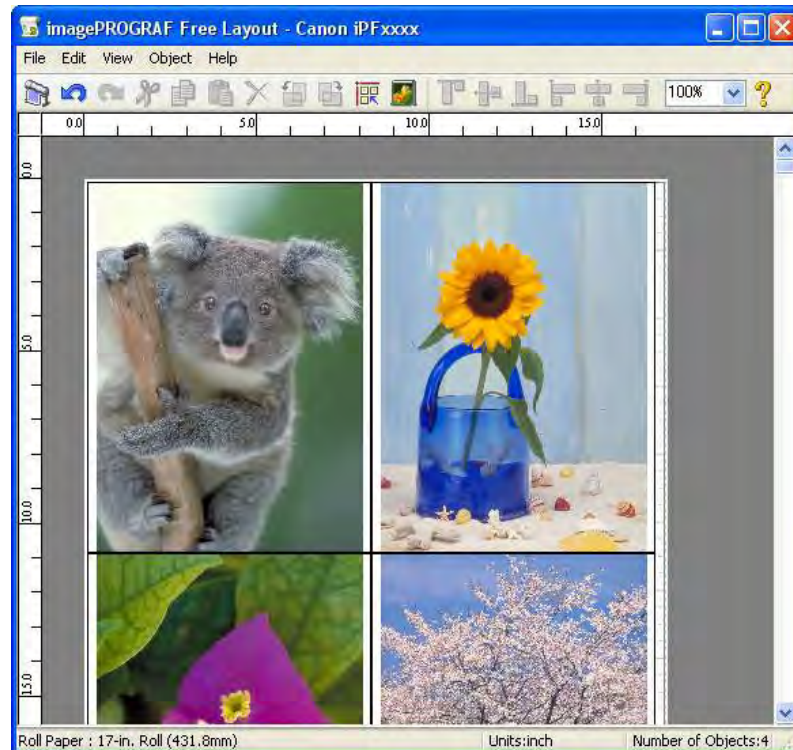

7. Leaving Free Layout running, open other files with the application software and repeat the above steps.

## Laying out a Document Created with Multiple Application Programs on One Page

You can lay out and print a document created with multiple application programs on one page.


1. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.




### Note

- Normally, select **Print** from the **File** menu.

2. Click **Properties** to open the **Properties** dialog box.

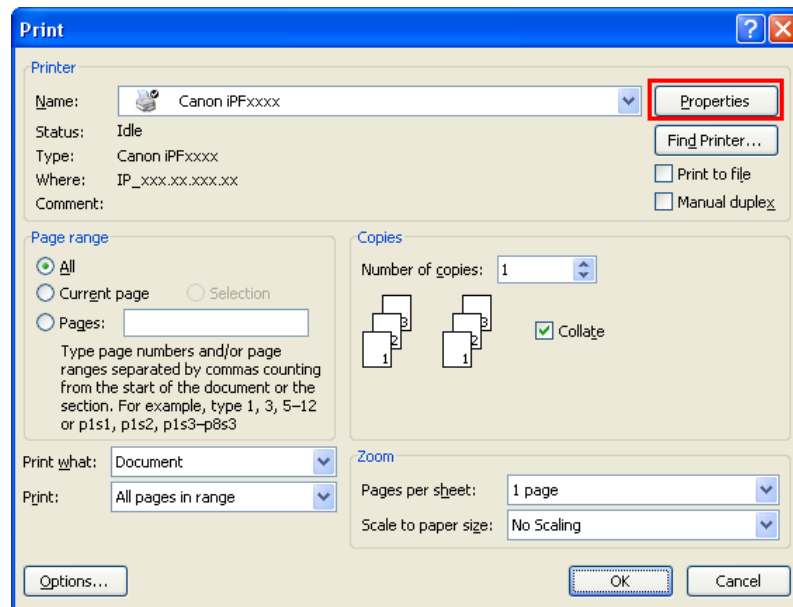


3. In the **Page Setup** sheet, select **Paper Source**.

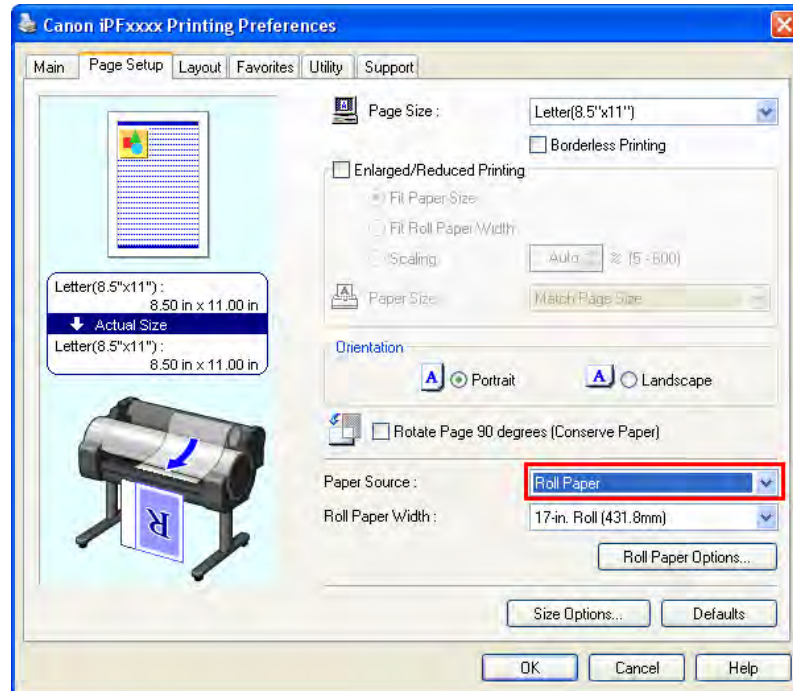

**Note**

- Your printer is depicted in the lower-left area of this screen.

4. In the **Layout** sheet, click on the **Page Layout** check box and select Free Layout from the list.

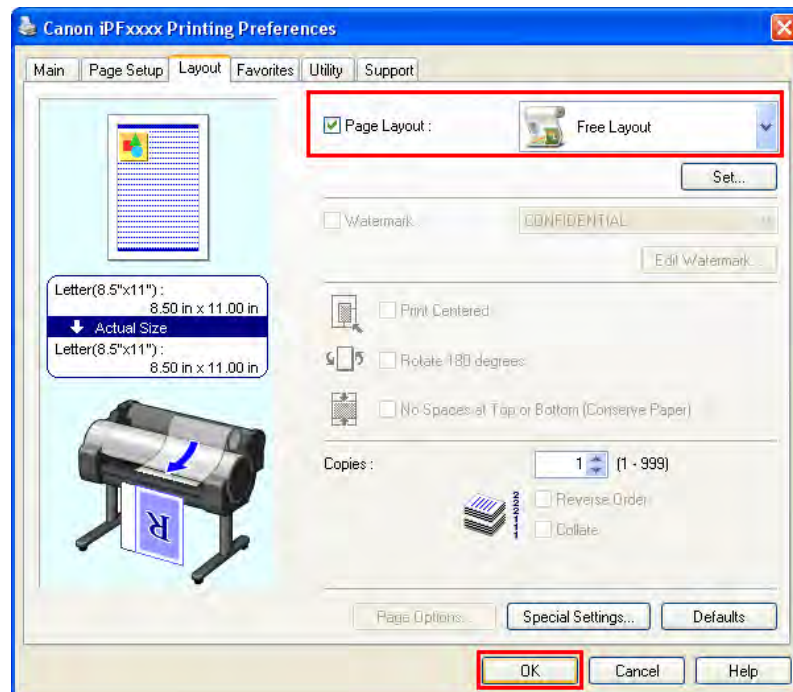


**Note**

- Your printer is depicted in the lower-left area of this screen.
- When you select Free Layout, all other setting items will be disabled.

5. Click the **OK** button to save the settings.

6. In the **Print** dialog box, select the pages to print and the number of copies, and click the **OK** button.

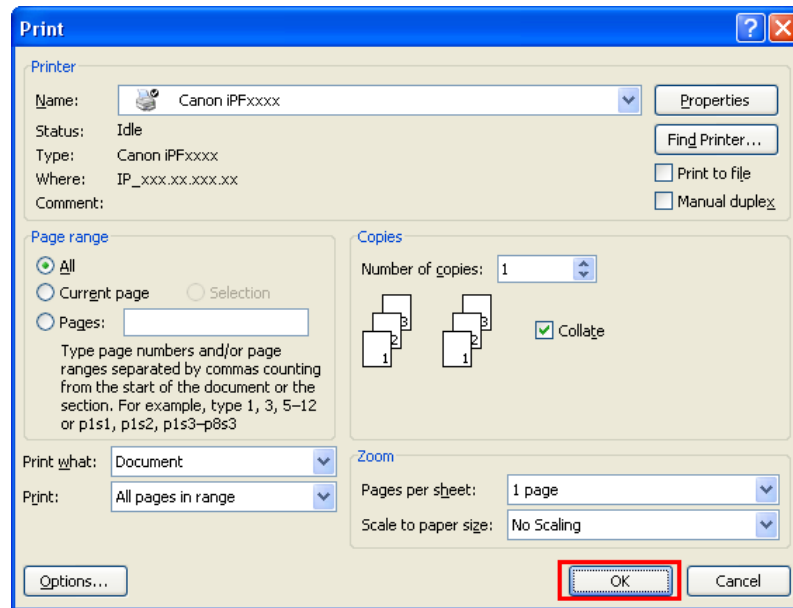

Free Layout starts, laying out the document created with application software in the layout area as an object.





7. Leaving Free Layout running, open other files with other application software and repeat the above steps.


## Selecting an Object

When an object is selected, a select box (blue border) appears around the object.



### Note

- To select an object, click that object.
- To select multiple successive objects, click them while holding down the Shift key.
- To select multiple arbitrary objects, click them while holding down the Ctrl key.
- To select all objects, select **Select All** from the **Edit** menu.
- When you specify the area with dragging the mouse, the object in the area is selected.

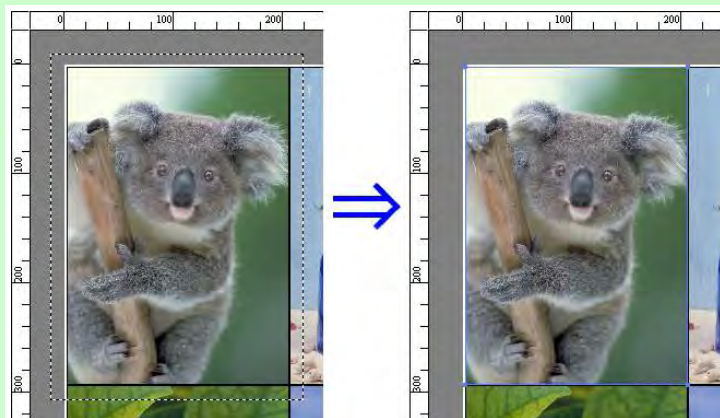

## Changing the Object Size

You can change the object size by means of mouse operation or by specifying a scaling value.




### Note

- The vertical-to-horizontal ratio remains unchanged when the object is enlarged or reduced.

### Resizing by means of mouse operation

1. Select an object.
2. Place the pointer at a corner of the selection box around the object to show the arrow handle, and drag this handle to change the object size.

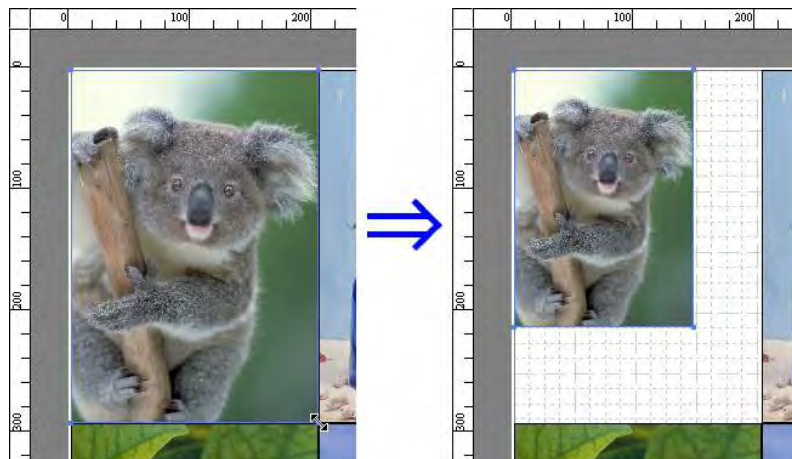

### Resizing by specifying a scaling value

1. Select an object.  
Click on the **Enl./Red.** checkbox in the Format Dialog Box →P.265 and select **Scaling**.
2. You either enter numbers directly.



### Note

- You can input between 25 and 600.
- You can change the numbers by clicking either ▲ button or ▼ button.

3. Click the **OK** button.


## Moving an Object

You can move the object position.

1. Select an object.



- Place the pointer inside the selection box of the object to show the crosshair handle, and drag it to move the object. Alternatively, you can move the **Object Position** by changing the values in **Vertical Pos**, **Horizontal Pos** and **Page Pos** in the Format Dialog Box →P.265 .

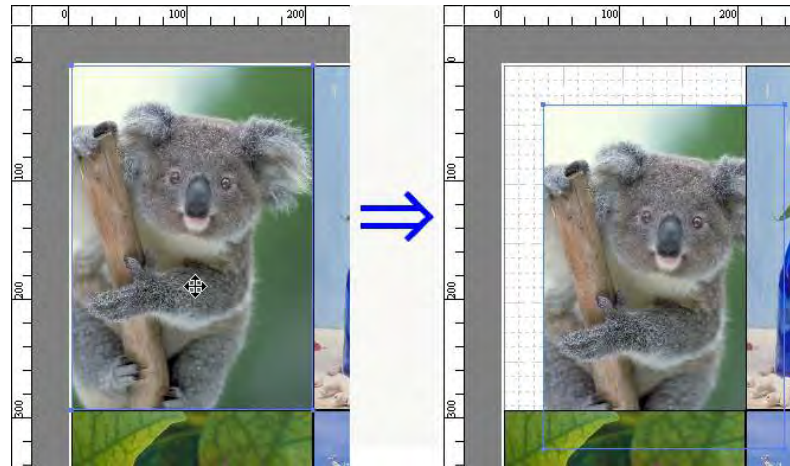


4

## Rotating an Object

You can rotate the object.


- Select an object.
- Select **Rotate Left 90 Degrees** or **Rotate Right 90 Degrees** from the toolbar. Alternatively, you may click on the **Rotate** check box in the Format Dialog Box →P.265 then select **Rotate Right** or **Rotate Left**, and click the **OK** button.

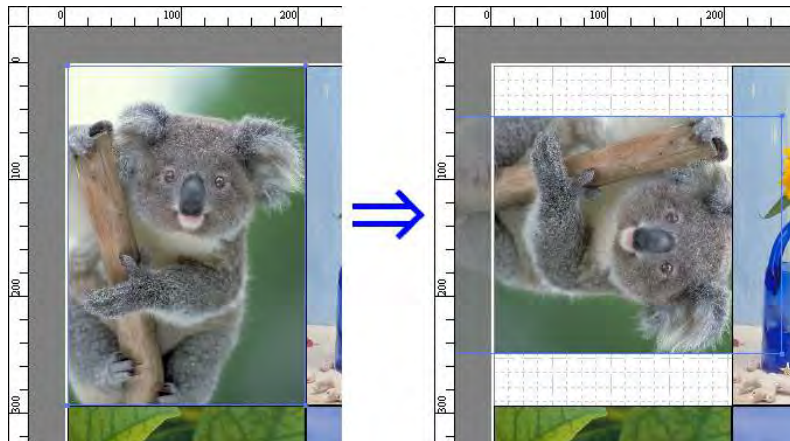

275

## Laying out Objects Automatically

Click **Auto Arrange Object** in the tool bar. This automatically lays out objects. Alternatively, you may select **Auto Arrange Object** from the **Object** menu.

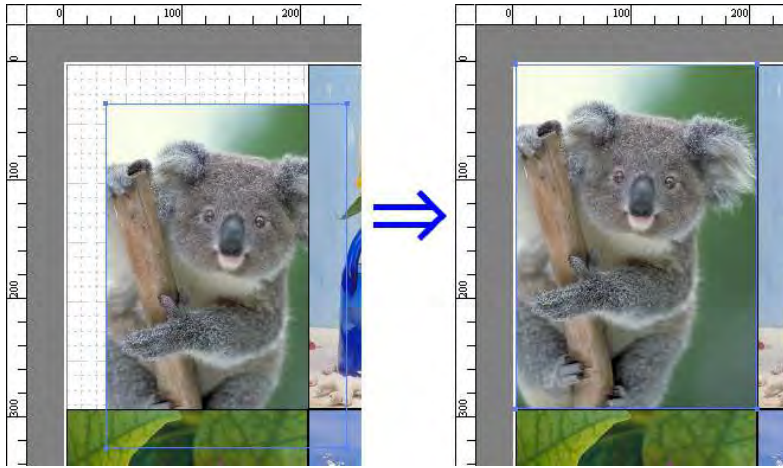

### Note

- The object layout order varies depending on the **Order** setting in the Page Options Dialog Box →P.263 dialog box.


## Aligning Objects

You can align objects systematically.

- Select multiple objects.
- Click the align button from the toolbar.  
Alternatively, you may select the align menu from the **Object** menu.


### Align Top

Lays out the objects, justifying them to the top.

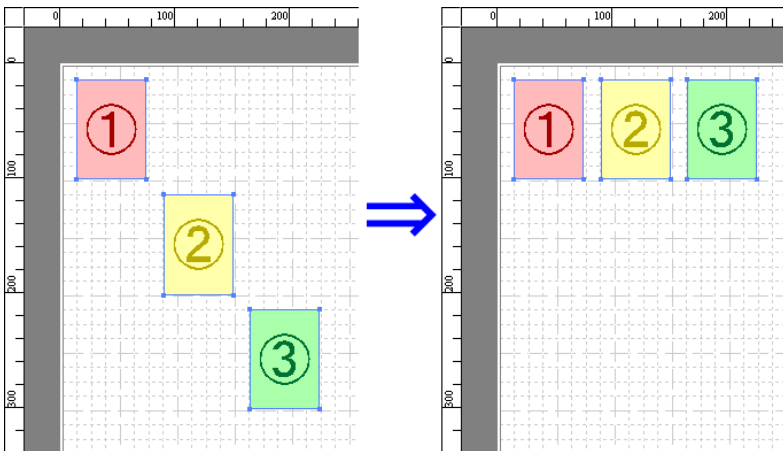


## Center Vertically

Lays out the objects, justifying them to the vertical center.

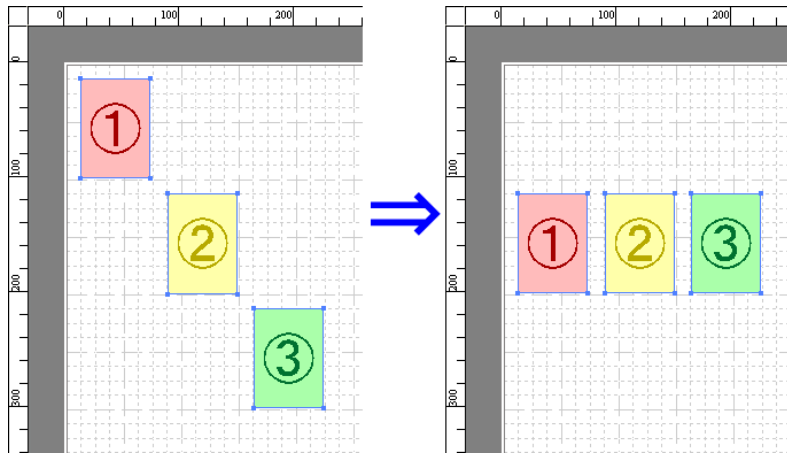


## Align Bottom

Lays out the objects, justifying them to the bottom.

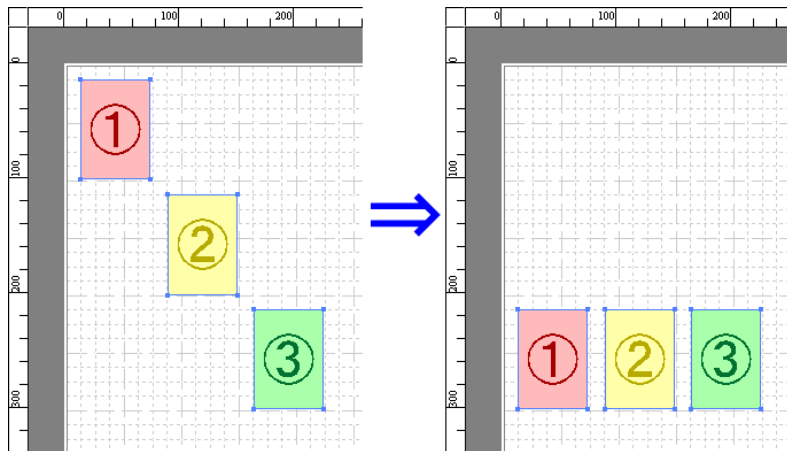


## Align Left

Lays out the objects, justifying them to the left.

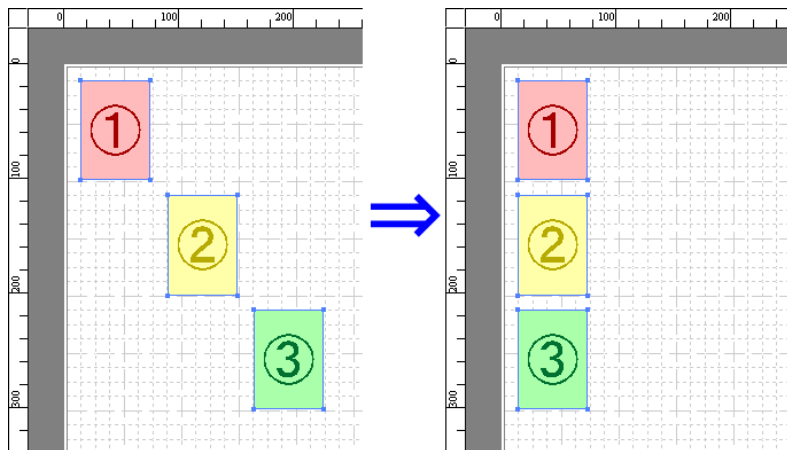

## Center Horizontally


Lays out the objects, justifying them to the horizontal center.

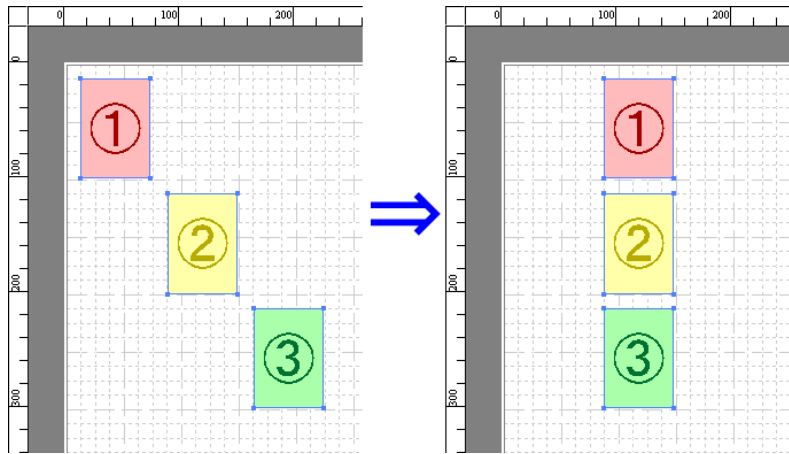

4

## Align Right

Lays out the objects, justifying them to the right.

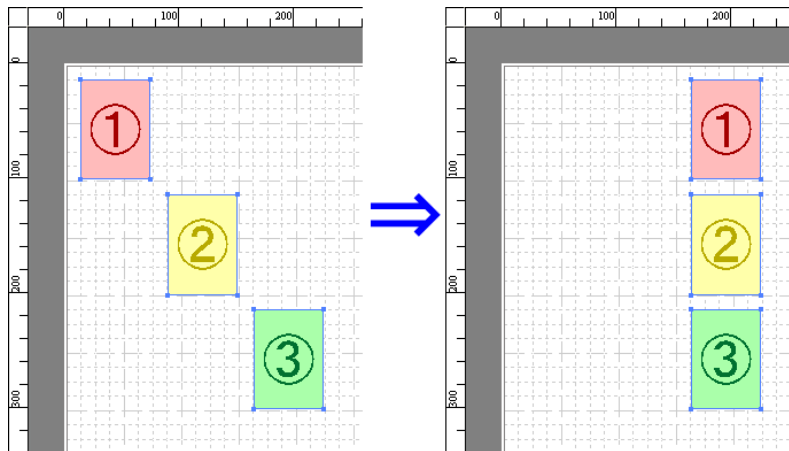

## Changing the Object Overlapping Order

You can change the object overlapping order.

1. Select an object.
2. Select the Overlapping Order menu from the **Object** menu.




### Note


- The order of overlapping affects the order of objects automatically laid out.
- You can also select by clicking the right button of the mouse on an object.

**Bring to Front**


Moves the object to the frontmost position.

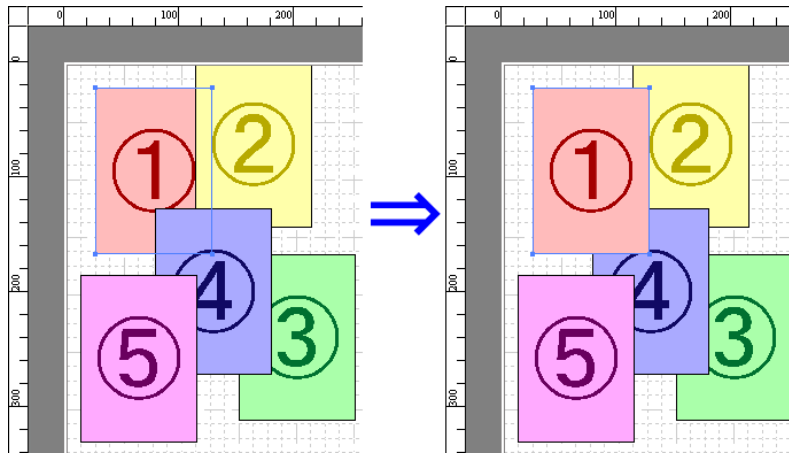**Send to Back**

Moves the object to the backmost position.

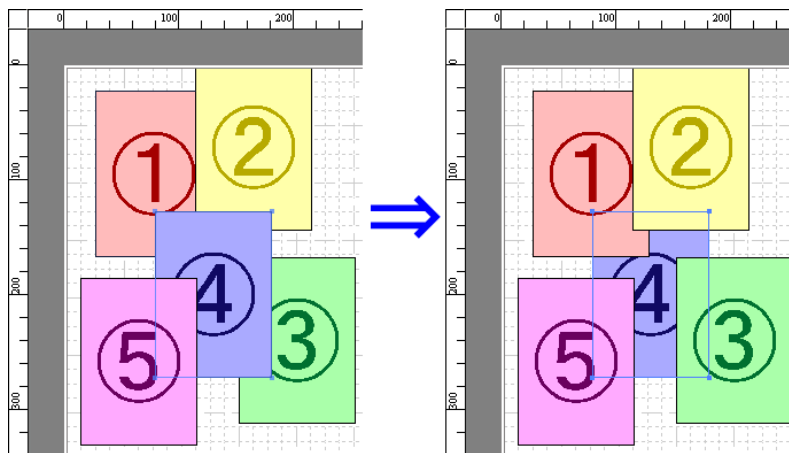
**Bring Forward**

Moves the object one position to the front.

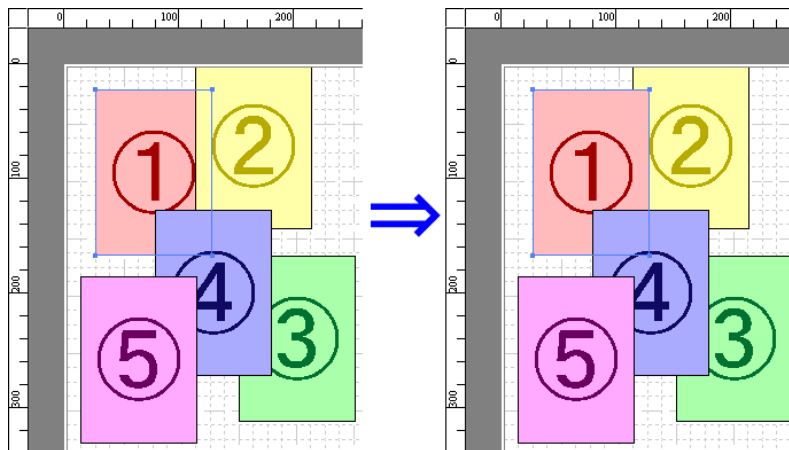

## Send Backward

Moves the object one position to the back.

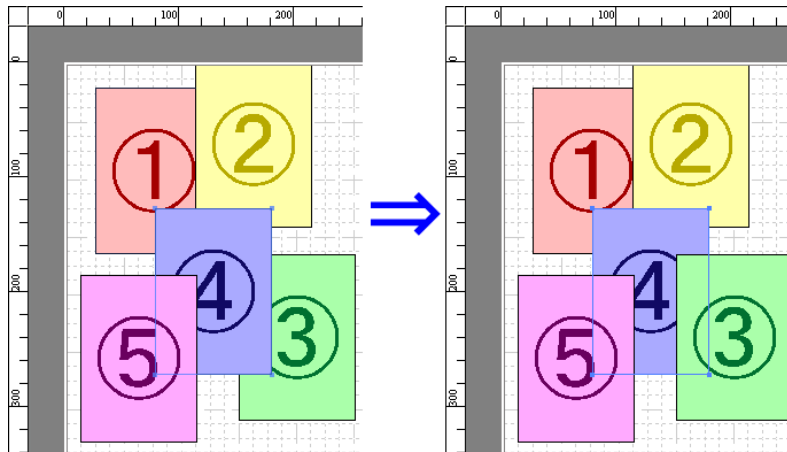

4

## Pasting a Copied or Cut Object

1. Click **Copy** or **Cut** from the toolbar.  
Alternatively, you may select **Copy** or **Cut** from the **Edit** menu.
2. Click **Paste** from the toolbar.  
Alternatively, you may select **Paste** from the **Edit** menu.



### Note


- The copied or cut object is laid out at the end of the page.
- You can also select by clicking the right button of the mouse on an object.
- In order to paste an object on any position that you like, you can paste the object with **Pointed Paste** by clicking the right button of the mouse on any position that you want.



## Folded Duplex Window

This window is displayed if you select **Folded Duplex** from the **Edit** menu after selecting an object. Using the **Folded Duplex** function allows you to print with fold lines added.

The **Folded Duplex** window consists of the menu and tool bars, layout area and status bar.

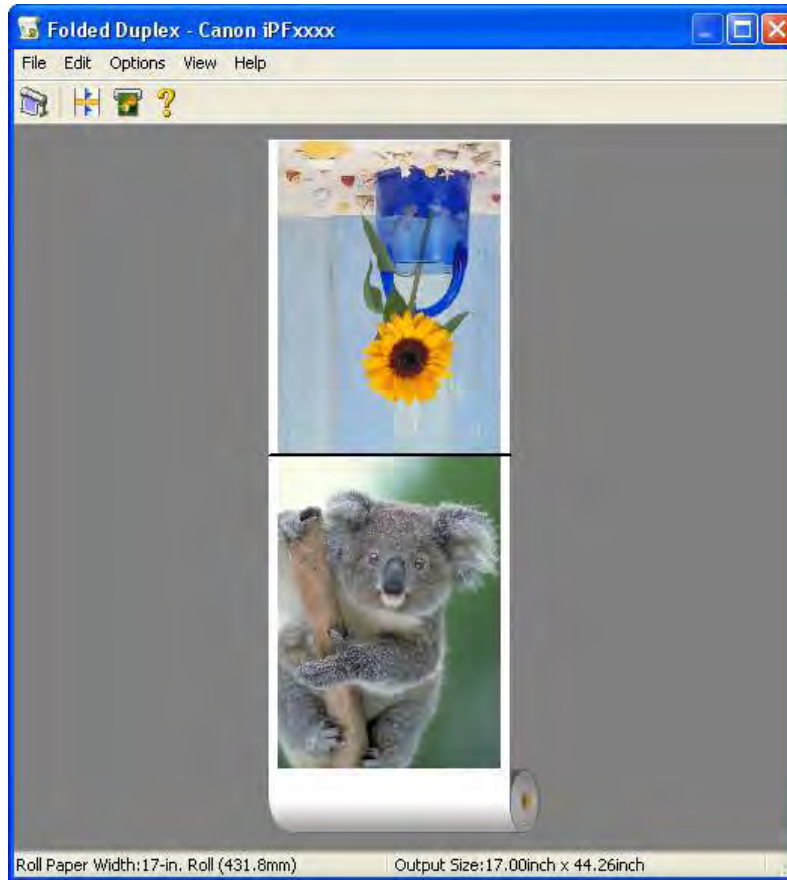

### Note

- The toolbar and status bar can be toggled between hidden and displayed from the **View** menu.

## Menu Bar

This allows you to select menus required for operations.

File Edit Options View Help


## Tool Bar

This allows you to select tool buttons required for major operations.



## Layout Area


This allows you to check the arrangement and orientation of objects.

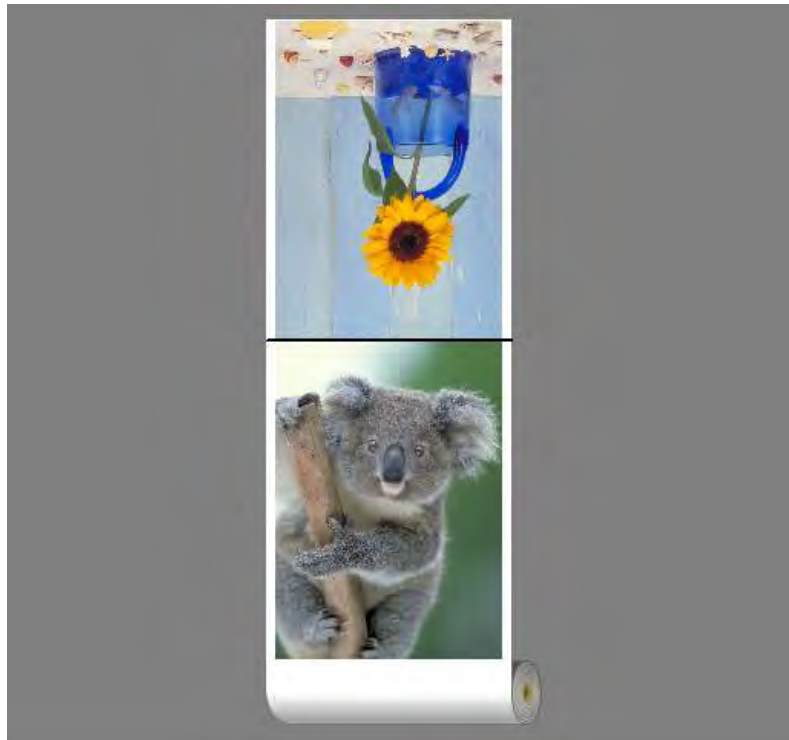

4


## Status Bar

This shows the paper source, roll paper width, and output size.



## Finished Size Settings Dialog Box

This dialog box is displayed when you select **Finished Size Settings** from the **Edit** menu. This allows you to configure finished size settings.

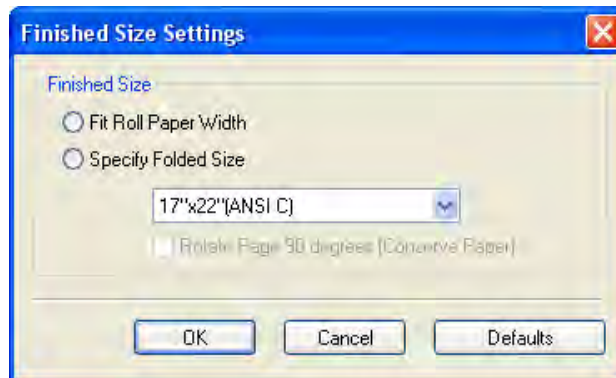

## Finished Size


Selects the method for setting the finished size.

The following settings are available for the finished size.

Setting	Details
<b>Fit Roll Paper Width</b>	Prints by automatically enlarging or reducing the entire document so that the width of the document matches the roll paper width.
<b>Specify Folded Size</b>	Prints by automatically enlarging or reducing the entire document to match the size of the paper. Select the actual size of the paper you want to print on in <b>Fit Paper Size</b> .
<b>Rotate Page 90 degrees (Conserve Paper)</b>	Prints by rotating pages by 90 degrees. Pages are automatically rotated if they will fit within the roll paper width when rotated, and are not rotated if they will not fit within the roll paper width.

## Binding Settings Dialog Box

This is displayed when you select **Binding Settings** from the **Edit** menu. This allows you to configure the binding edge settings.

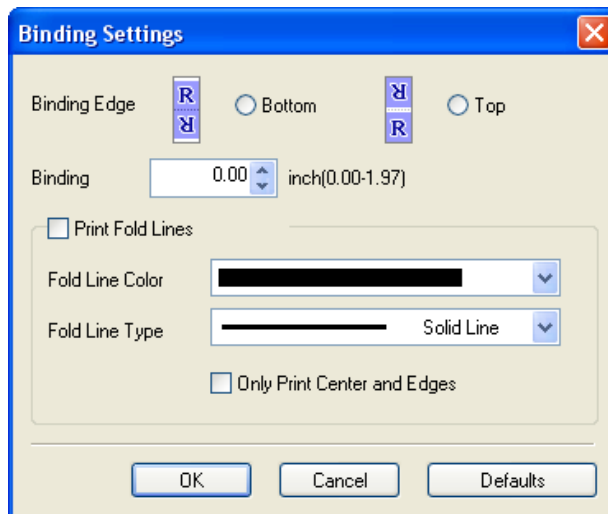

4

## Binding Edge

Configures the binding edge when folding paper.

The following settings are available for the binding edge.

Setting	Details
<b>Bottom</b>	Prints by placing the binding margin (gutter) at the bottom of the document.
<b>Top</b>	Prints by placing the binding margin (gutter) at the top of the document.

## Binding

Configures the binding margin (gutter).

Prints by creating a binding margin (gutter) of the specified size. Enter the margin size as a number.



### Note

- The values that can be entered are 0 to 50 (mm).

283

## Print Fold Lines

Configures the color and type of fold lines.



### Note

- To not print fold lines, clear the **Print Fold Lines** checkbox.

## Fold Line Color

You can select the fold lines.

## Fold Line Type

You can select the fold lines.

The following settings are available for the fold line type.

Setting	Details
<b>Solid Line</b>	You can print the solid line as the frame style.
<b>Dotted Line</b>	You can print the dotted line as the frame style.
<b>Dashed Line</b>	You can print the dashed line as the frame style.

## Only Print Center and Edges

To print fold lines at the center and both edges, select the **Only Print Center and Edges** checkbox.

## Prints using Folded Duplex

Allows you to produce duplex printing by combining two pages and folding them.

1. Select two objects from the layout area of Free Layout.
2. Select **Folded Duplex** from the **Edit** menu of Free Layout.  
Open the **Folded Duplex** window and arrange the selected objects in the layout area.
3. Open the **Finished Size Settings** dialog box from the **Edit** menu.
4. Select **Fit Roll Paper Width** or **Specify Folded Size** in **Finished Size**.



### Note

- **Rotate Page 90 degrees (Conserve Paper)** is also available when **Specify Folded Size** is selected.

5. Click **OK** to save the settings.
6. Open the **Binding Settings** dialog box from the **Edit** menu.
7. Select **Bottom** or **Top** in **Binding Edge**.
8. Specify the **Binding** width in **Binding**.

9. Configure the **Fold Line Color** and **Fold Line Type** from **Print Fold Lines**.



Note

- When the **Only Print Center and Edges** checkbox is selected, fold lines are only printed at the three locations of the center and both edges.

10. Click **OK** to save the settings.

11. Confirm the print setting and begin printing.

## Color imageRUNNER Enlargement Copy

The Features of Color imageRUNNER Enlargement Copy .....	286
Operating Environment .....	286
Starting Color imageRUNNER Enlargement Copy .....	286
Color imageRUNNER Enlargement Copy Dialog Box .....	288
Hot Folder .....	289
Creating a New Hot Folder .....	290
Specifying an Existing Shared Folder as a Hot Folder .....	294
Setting the Print Parameters .....	297
Printing Enlargements of Scanned Originals from a Color imageRUNNER .....	298

### The Features of Color imageRUNNER Enlargement Copy

The main features of Color imageRUNNER Enlargement Copy are as follows.

- Allows the document scanned with the Color imageRUNNER to be automatically enlarged and printed.
- You can perform basic printer settings such as printer selection, media type and output profile selection, and matching methods, in addition to borderless printing and enlargement/reduction process without growing through the printer driver.



#### Note

- The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Color imageRUNNER Enlargement Copy settings.

### Operating Environment

You can use the Color imageRUNNER Enlargement Copy in the following environments.

- Compatible Operating System  
Windows 2000, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7
- Software that requires installation  
imagePROGRAF Printer Driver



#### Note

- This function is not available on 64-bit version of Windows.

### Starting Color imageRUNNER Enlargement Copy


Follow the procedure below to start the Color imageRUNNER Enlargement Copy.

#### To start by selecting **Printers and Faxes** from the **start** button


1. Open the folder of the OS you are using for configuring printers.  
For example, on Windows XP click the **start** button on the desktop, and then select **Printers and Faxes**.



2. Right-click the Printers icon and select **Printing Preferences** to open the **Printing Preferences** dialog box. In the **Utility** sheet, click the **Color imageRUNNER Enlargement Copy** button.

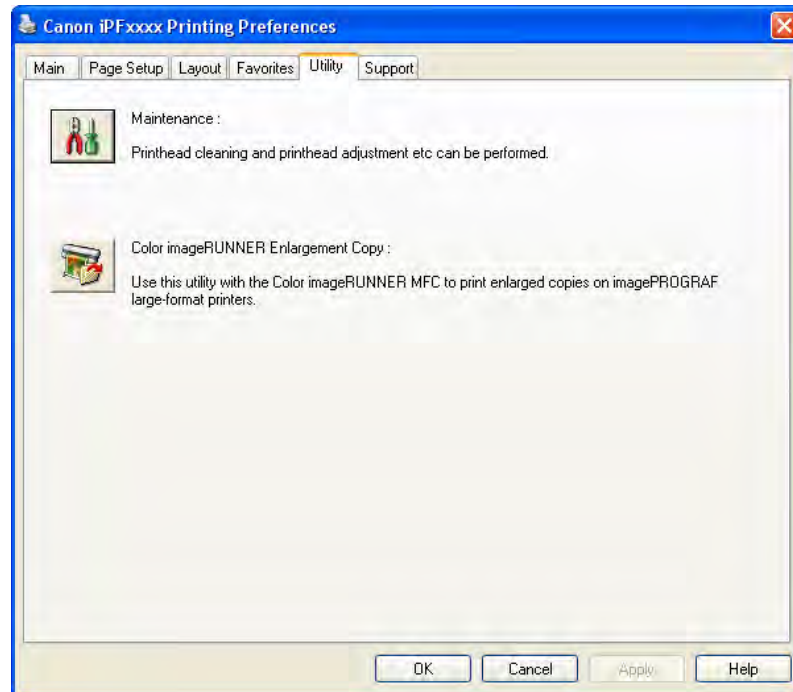

3. The **Color imageRUNNER Enlargement Copy** dialog box displays.

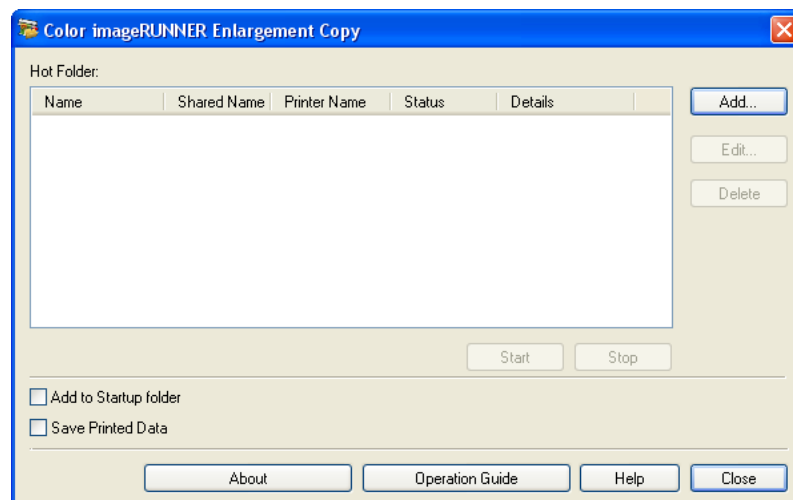


**Note**


- If you click on the **Add to Startup folder** check box in the **Color imageRUNNER Enlargement Copy** dialog box, the icon of Color imageRUNNER Enlargement Copy utility will appear on the task bar when starting Windows thereafter.

To start by selecting **Color imageRUNNER Enlargement Copy** from the **start** button

1. From the Windows **start** button, select **Color imageRUNNER Enlargement Copy**.




2. The **Color imageRUNNER Enlargement Copy** dialog box displays.

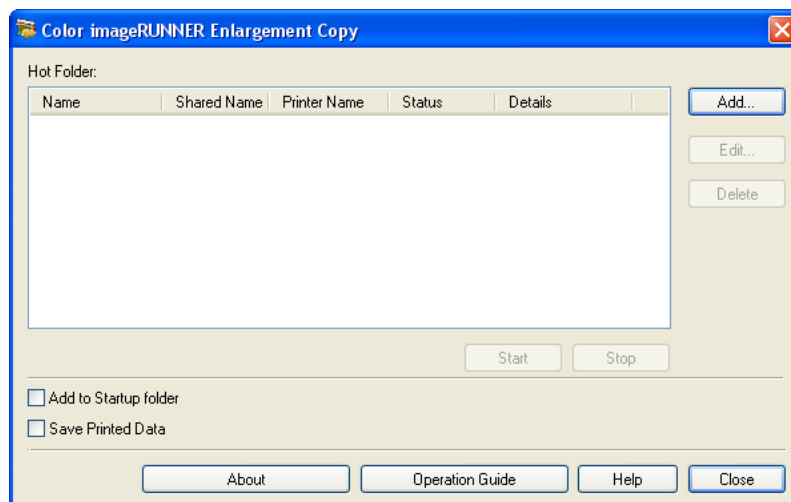

4

## Color imageRUNNER Enlargement Copy Dialog Box

The explanation below is on the **Color imageRUNNER Enlargement Copy** dialog box.

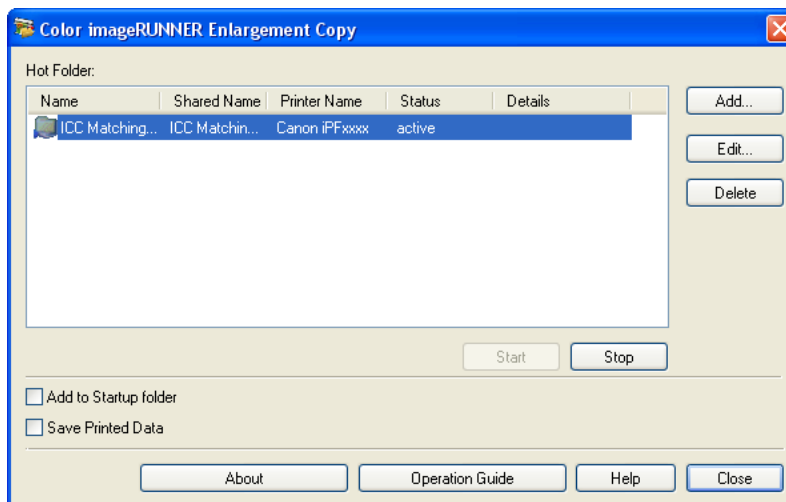

### Note

- For the step to open the **Color imageRUNNER Enlargement Copy** dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.286

## Hot Folder

The hot folder list appears.

### Add Button

Click the button to open the **Easy Setup Wizard** dialog box so that you can add a hot folder.

### Edit Button

From the **Hot Folder** list, select a hot folder and click the button to open the **Add/Edit Hot Folder** dialog box that allows you to edit the hot folder.

### Delete Button

From the **Hot Folder** list, select a hot folder and click the button to delete the hot folder.

### Start Button

Clicking the button changes the status of the selected **inactive** Hot Folder to **active**.

### Stop Button

Clicking the button changes the status of the selected **active** Hot Folder to **inactive**.

### Add to Startup folder

Register the application in the Windows startup menu.

### Save Printed Data

Automatically saves printed data.

### About Button

Click the button to display the name and the version number of the utility.

### Operation Guide Button

Click the button to display the **Color imageRUNNER Enlargement Copy Setup Manual**.

## Hot Folder

Hot folder refers to a folder used for Color imageRUNNER Enlargement Copy.

- When transferred to the PC's hot folder, the document data scanned with the Color imageRUNNER is printed in enlarged size from the printer according to the print conditions set in the hot folder.
- You can create a new hot folder, edit or delete an existing one, and set print conditions at will.




#### Note

- You can create up to 20 hot folders.

## Creating a New Hot Folder


1. Open the **Color imageRUNNER Enlargement Copy** dialog box, and then click the **Add** button.

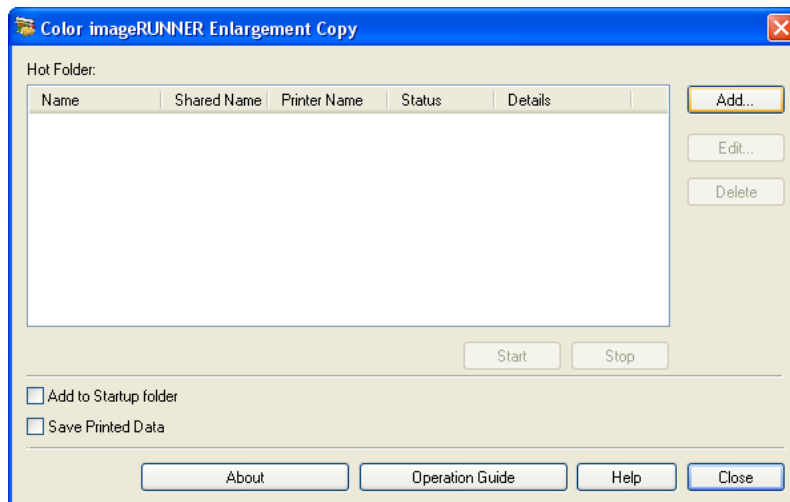


### Note

- For the step to open the **Color imageRUNNER Enlargement Copy** dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.286

2. The **Easy Setup Wizard** dialog box displays. Click the **Next** button.

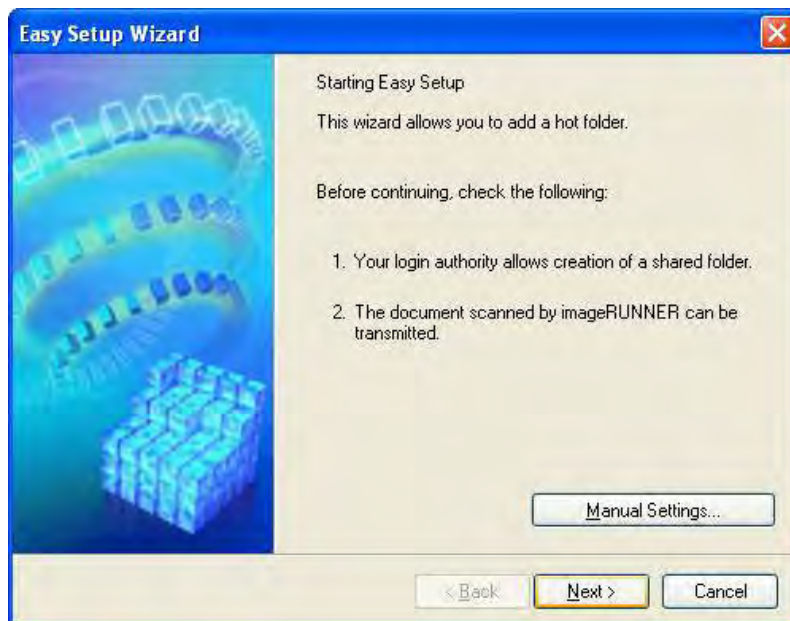

3. Select the type of printer to use.  
Click the **Next** button.

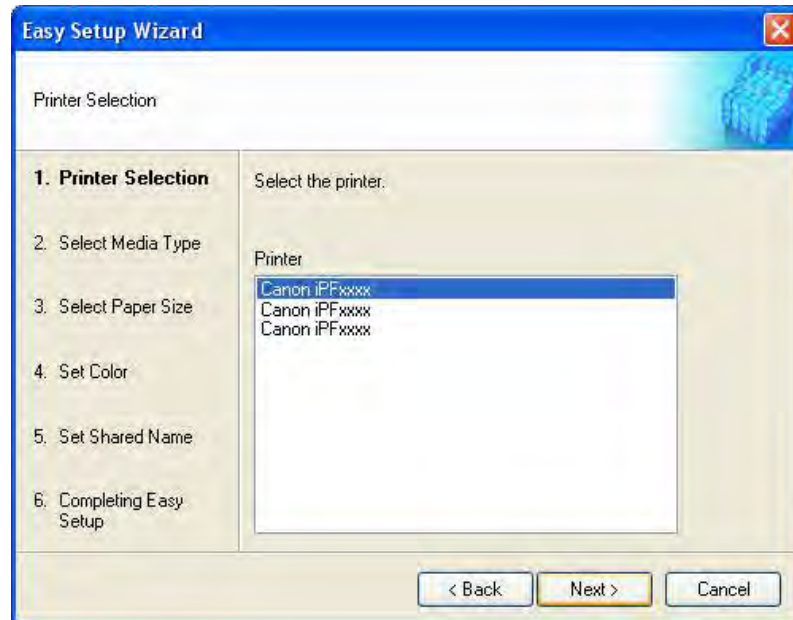


4. Select the media type to print.




**Note**

- If the **Borderless Printing** checkbox is checked, only media types that can be used for borderless printing are displayed in the list.


Click the **Next** button.

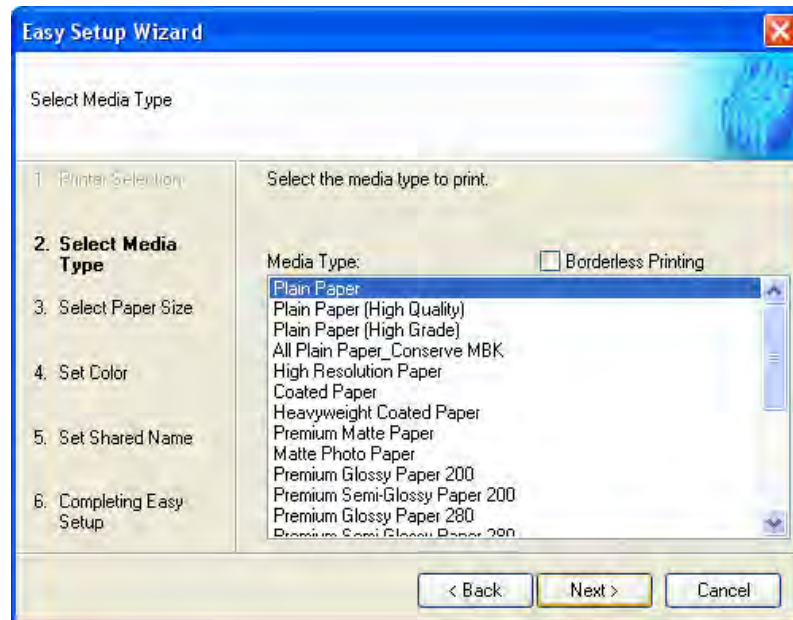

5. Select roll paper or cut sheet to print. Also, select the media size to print.  
Click the **Next** button.

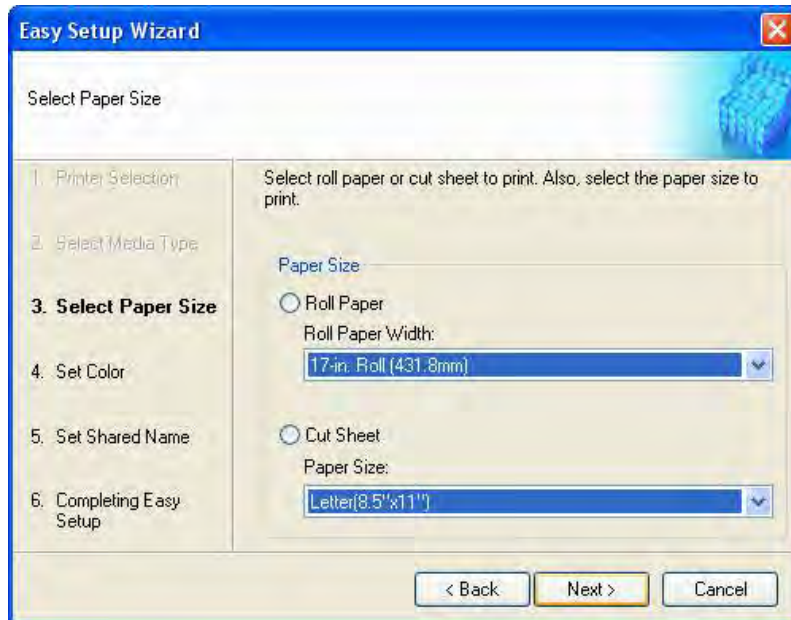

6. Select the color matching method.  
Click the **Next** button.

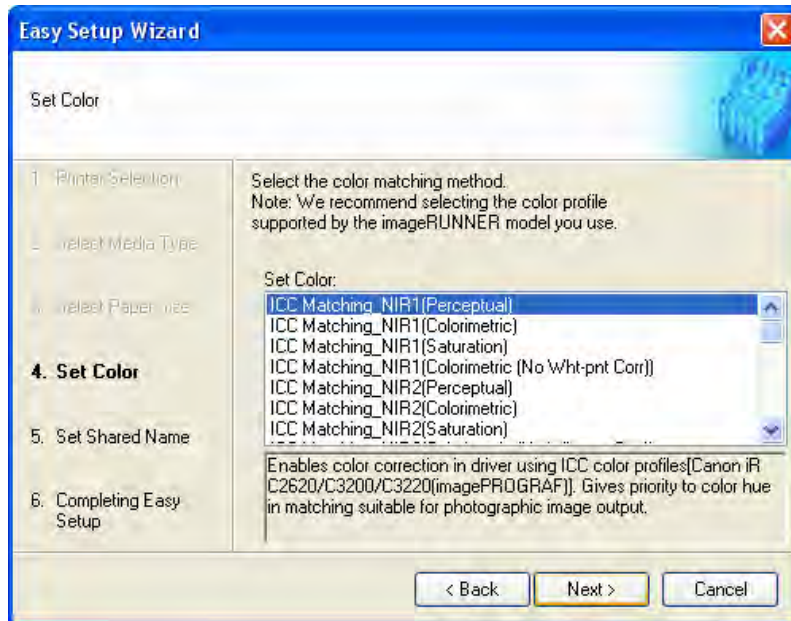


7. To receive a document scanned with the Color imageRUNNER, you need to share a folder. Enter the folder shared name in **Shared Name**.  
Click the **Next** button.



**Note**


- This shared name is used as the name of the hot folder.
- You cannot use the **Back** button, after clicking the **Next** button here.



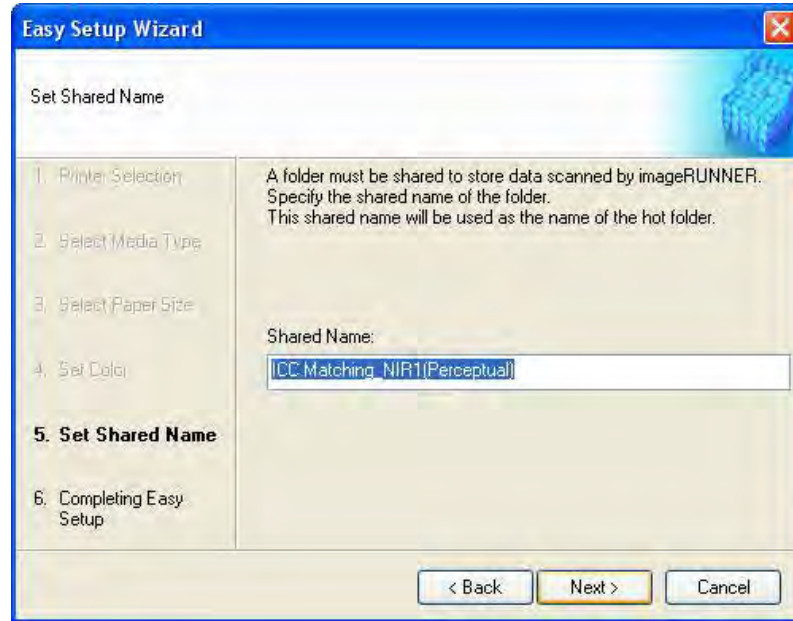


4

8. Click **Finish** button to close the **Easy Setup Wizard** dialog box.

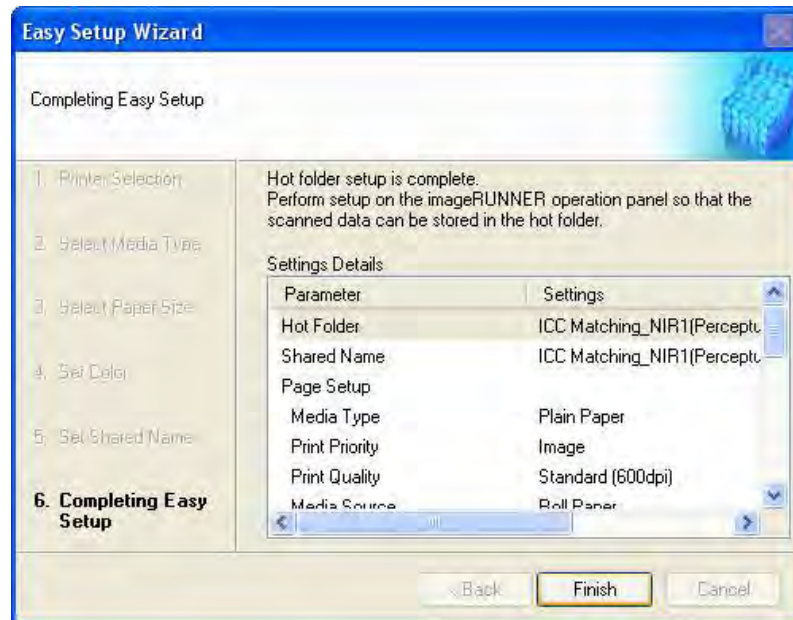

293


The hot folder you have created appears in the **Hot Folder** list in the **Color imageRUNNER Enlargement Copy** dialog box.

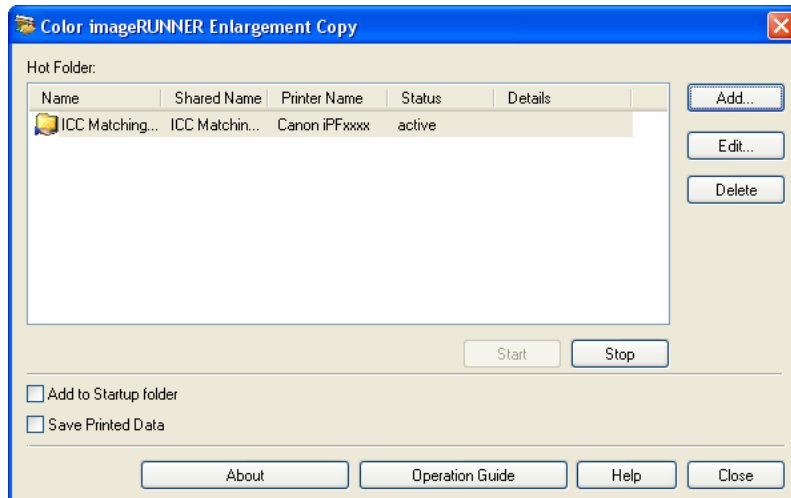

4

### Specifying an Existing Shared Folder as a Hot Folder

1. Share the folder you want to specify as a hot folder.
2. Open the **Color imageRUNNER Enlargement Copy** dialog box, and then click the **Add** button.

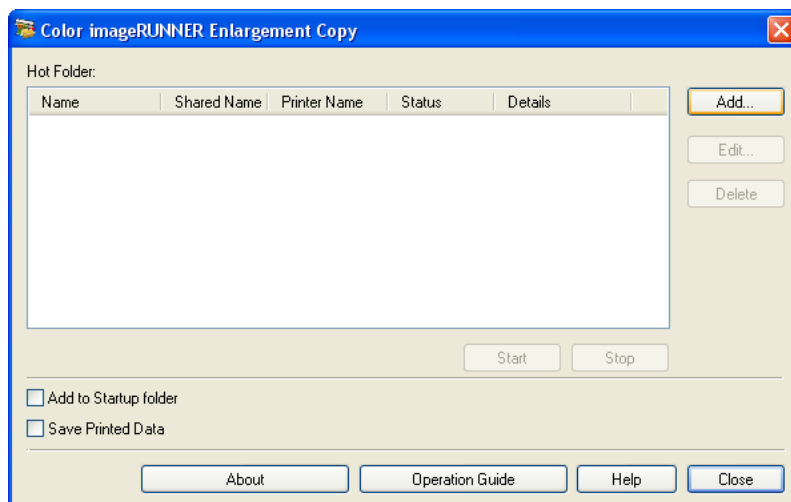

**Note**


- For the step to open the **Color imageRUNNER Enlargement Copy** dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.286

294


3. The **Easy Setup Wizard** dialog box displays.  
Click the **Manual Settings** button.




4. The **Add/Edit Hot Folder** dialog box displays.  
Enter the hot folder name in **Name**.  
Click the **Browse** button, with selecting **Specify a folder**, to set the existing shared folder.

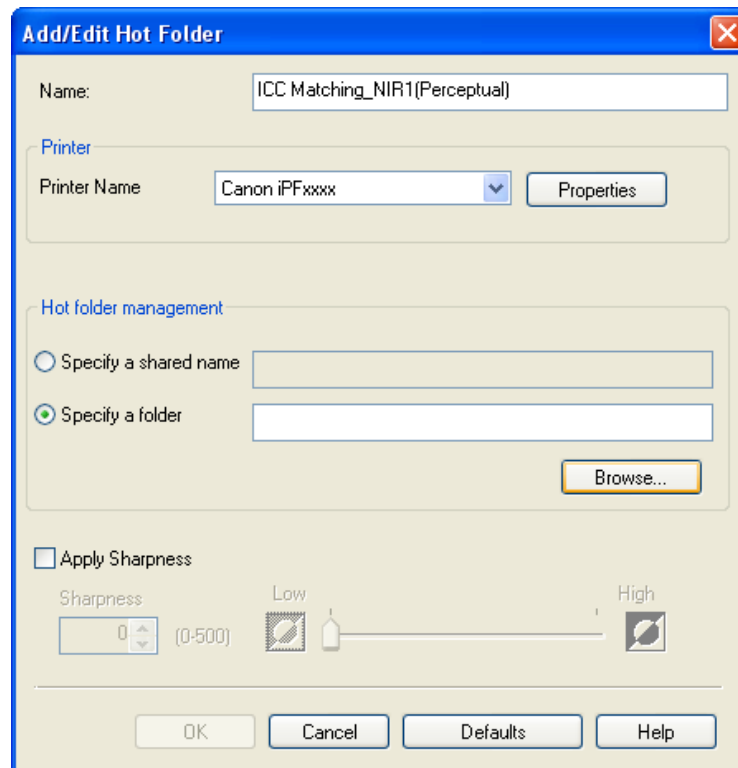


5. The location of the folders will appear.  
Select the folder to specify a hot folder, and click the **OK** button.

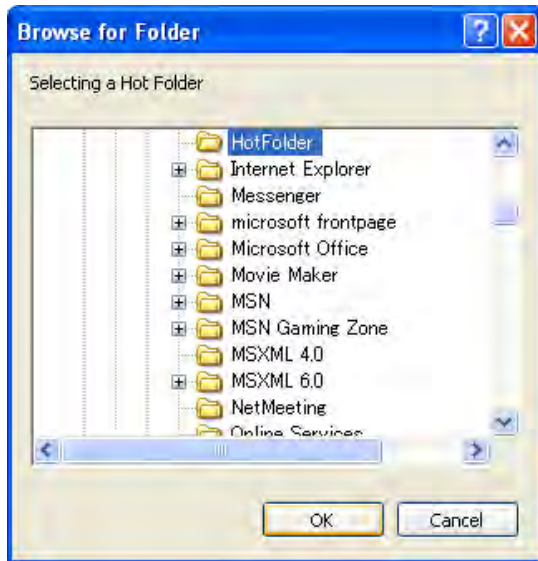

6. As necessary, set the print conditions in the hot folder. (See "Setting the Print Parameters.") →P.297  
Click the **OK** button to close the **Add/Edit Hot Folder** dialog box.

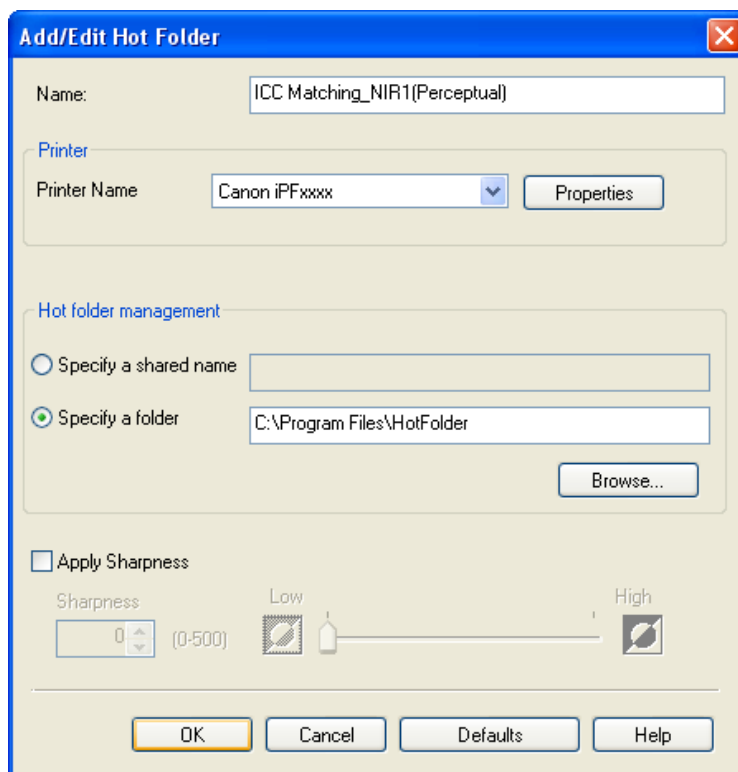


The hot folder you have created appears in the **Hot Folder** list in the **Color imageRUNNER Enlargement Copy** dialog box.

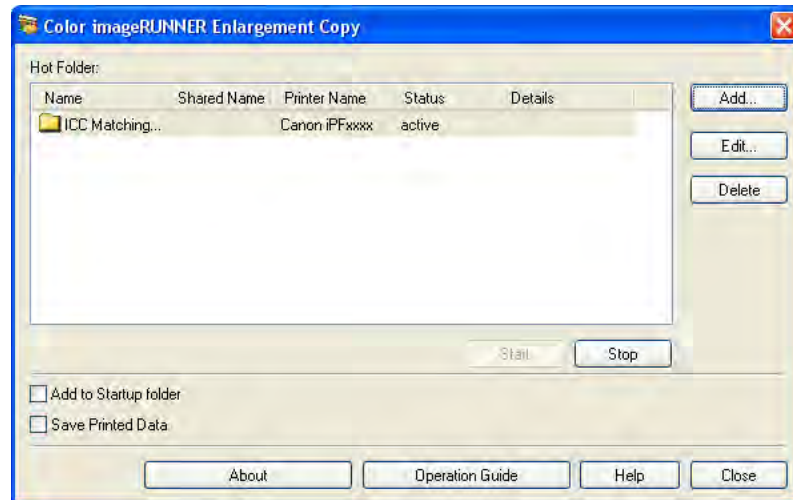

4

## Setting the Print Parameters

The printer driver opens when you click the **Properties** button in the **Add/Edit Hot Folder** dialog box. The printer driver is used to configure basic settings to match the type of media loaded in the printer.

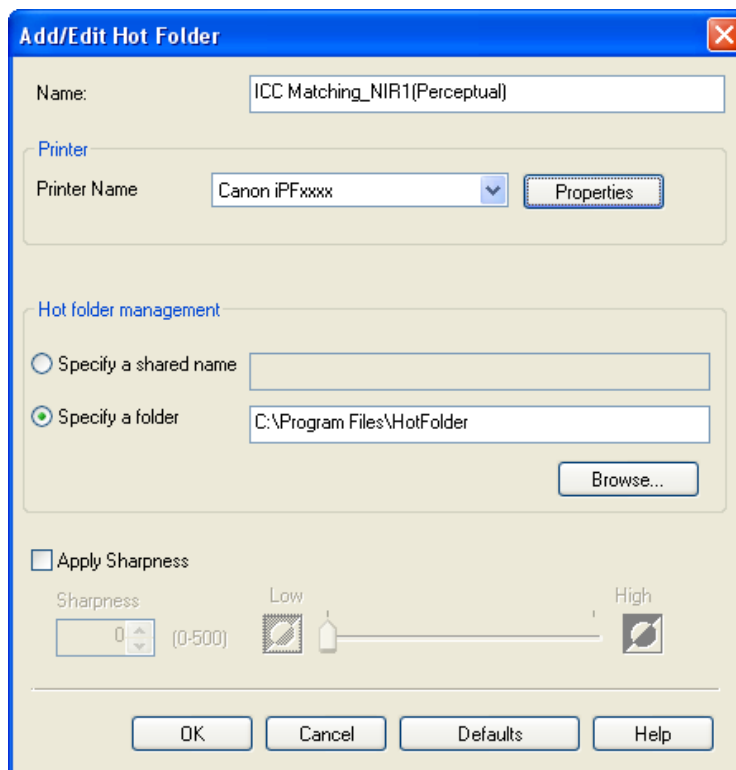

297

Refer to Printer Driver →P.202 for details on the printer driver.



### Note

- The only three sheets displayed are the **Main** sheet, the **Page Setup** sheet, and the **Layout** sheet. Some of the printer driver settings may be disabled.

## Apply Sharpness

Place a checkmark here to set the sharpness.

Drag the slider bar to the left or right to adjust. You can also adjust by directly entering a number in the numeric input field.



### Note

- You can input between 0 and 500.
- You can change the numbers by clicking either ▲ button or ▼ button.
- You cannot be applied to PDF files.

## Printing Enlargements of Scanned Originals from a Color imageRUNNER

Scanned originals from a Color imageRUNNER can be enlarged and printed automatically.

Originals you create by scanning with a Color imageRUNNER are transferred to a "hot folder" and printed automatically after enlargement according to printing conditions you specify for that folder.

This processing sequence is called the Color imageRUNNER Enlargement Copy function.

To use Color imageRUNNER Enlargement Copy, first complete these settings in the following order.

1. Register a hot folder on your computer.  
Register a hot folder on your computer for storing scanned originals from the Color imageRUNNER and complete the settings for enlargement copy.
2. Complete the scanning settings on the Color imageRUNNER.  
Configure the Color imageRUNNER to send scanned originals to the hot folder.

After these settings are complete, you can print enlarged copies of scanned originals from the Color imageRUNNER.


### Registering a hot folder on your computer

Folders used for **Color imageRUNNER Enlargement Copy** (iR enlargement copy) are called hot folders. Register a hot folder on your computer for storing scanned originals from the Color imageRUNNER. You can specify printing conditions (such as the image quality and paper size), based on which originals transferred to the hot folder will be printed. Follow these steps to register and modify hot folders.

1. Display the printer driver dialog box. (See "Accessing the Printer Driver Dialog Box from the Operating System Menu .") →P.213



2. Click the **Utility** tab to display the **Utility** sheet.

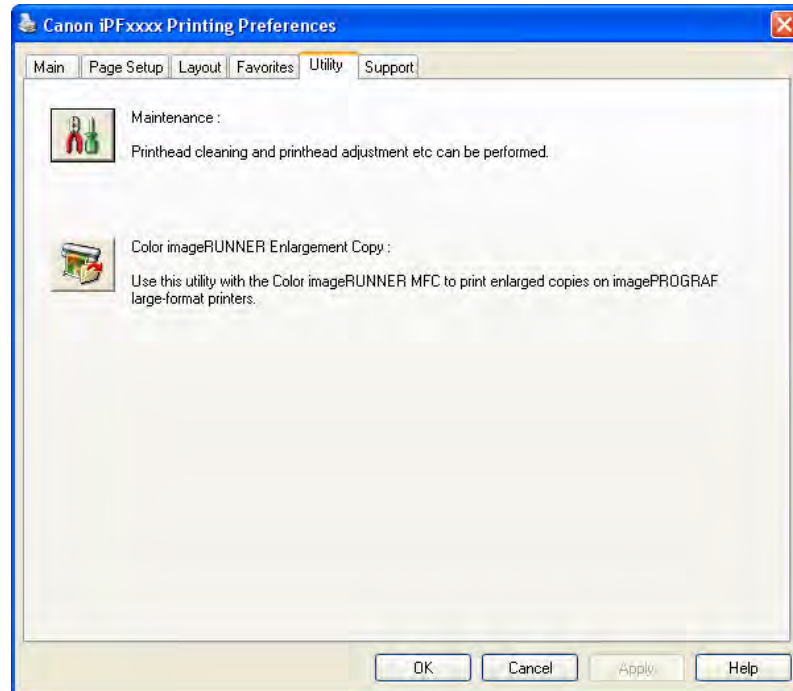

3. Click **Color imageRUNNER Enlargement Copy** to start the Color imageRUNNER Enlargement Copy utility.
4. Use the Color imageRUNNER Enlargement Copy utility to register or modify hot folders.  
For instructions on registering and modifying hot folders, refer to the help file for the Color imageRUNNER Enlargement Copy utility.

### Completing the scanning settings on the Color imageRUNNER.

Configure the Color imageRUNNER to send scanned originals to the hot folder. It is easy to send scanned originals to the hot folder if you assign the scanning settings and destination to a **Favorites** button on the Color imageRUNNER. For instructions on assigning scanning settings and destinations to a **Favorites** button, refer to the setting manual, displayed by clicking **Color imageRUNNER Enlargement Copy Setup Manual** button of Color imageRUNNER Enlargement Copy utility, or refer to the Color imageRUNNER manual.

### Scanning the original and print an enlargement

Follow the steps below to scan an original on the Color imageRUNNER for enlarged printing on the printer. For detailed instructions, refer to the Color imageRUNNER manual.

1. Load the original on the platen glass or document feeder of the Color imageRUNNER.
2. Press **Send** to display the screen for transmission.
3. Press **Favorites**, and then press the **Favorites** button assigned to the hot folder.

4. Press **Start** on the control panel. If you scan originals on the platen glass, after scanning all originals, press **Done** on the touch-panel display.  
Scanned originals are sent to the hot folder and automatically enlarged and printed following the conditions you specified for the folder.

## Print Plug-In for Office

Print Plug-In for Office features .....	301
Operating Environment .....	302
Steps to install .....	302
Steps to uninstall .....	306
When Print Plug-In for Office is not displayed .....	306
To start from Microsoft Word .....	311
Print Matching Roll Width (Word) .....	314
Borderless Printing (Word) .....	316
Multi-Page Printing (Word) .....	319
Register the settings(Word) .....	322
Print Using Registered Settings (Word) .....	323
Portrait Orientation / Landscape Orientation (Word) .....	325
To start from Microsoft PowerPoint .....	327
Print Matching Roll Width (PowerPoint) .....	329
Borderless Printing (PowerPoint) .....	332
Multi-Page Printing (PowerPoint) .....	334
Register the settings(PowerPoint) .....	337
Print Using Registered Settings (PowerPoint) .....	338
Portrait Orientation / Landscape Orientation (PowerPoint) .....	340
To start from Microsoft Excel .....	343
Print Entire Sheet (Excel) .....	345
Print Selected Area (Excel) .....	348
Configuring Binding (Excel) .....	351
Configuring Special Settings .....	352

## Print Plug-In for Office features

**Print Plug-In for Office** is a Plug-In that enables easy printing from **Microsoft Office**.

- It is displayed on the toolbar/ribbon, so it is easily accessible.
- It can be set by just selecting from the Wizard.
- **Large-Format Printing** custom media size can also be set in the Wizard from **Microsoft Word** or **Microsoft PowerPoint**.
- Custom media size can be set automatically from **Microsoft Excel**.
- The layout can be checked before printing by starting the preview screen.



### Important

- The **Print Plug-In for Office** toolbar/ribbon might not be displayed in **Microsoft Office** after installing **imagePROGRAF Print Plug-In for Office**. Refer to the following topic for details on how to display the **imagePROGRAF Print Plug-In for Office** toolbar/ribbon.
  - When Print Plug-In for Office is not displayed →P.306

## Operating Environment

**Print Plug-In for Office** 's operating environment is as below.

- Compatible Operating System  
Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7
- Software that requires installation  
Microsoft Office XP/2003/2007/2010  
imagePROGRAF Printer Driver Ver. 3.95 or later
- Hardware  
CPU 2.0 GHz Pentium 4 or better  
RAM 512 MB or more



### Important

- If you opened the Office document from **Internet Explorer**, the software will not run correctly.
- If you are editing an embedded object or link object, the software will not run correctly.
- If you added the **imagePROGRAF Print Plug-In** ribbon to the **Microsoft Office 2007/2010** Quick Access toolbar, the software will not run correctly.

4

## Steps to install

Below are the steps to install **Print Plug-In for Office**.



### Note

- You must log into Windows as an Administrator before the installation.

1. Insert "User Software CD-ROM" into the CD-ROM drive and start the installer.




### Note

- If the installer screen does not display, open the CD-ROM icon from **My Computer**, click **setup.exe**, and open the icon.


2. Click the **Install Individual Software** button.




3. Click **Install** in **imagePROGRAF Print Plug-In for Office**.

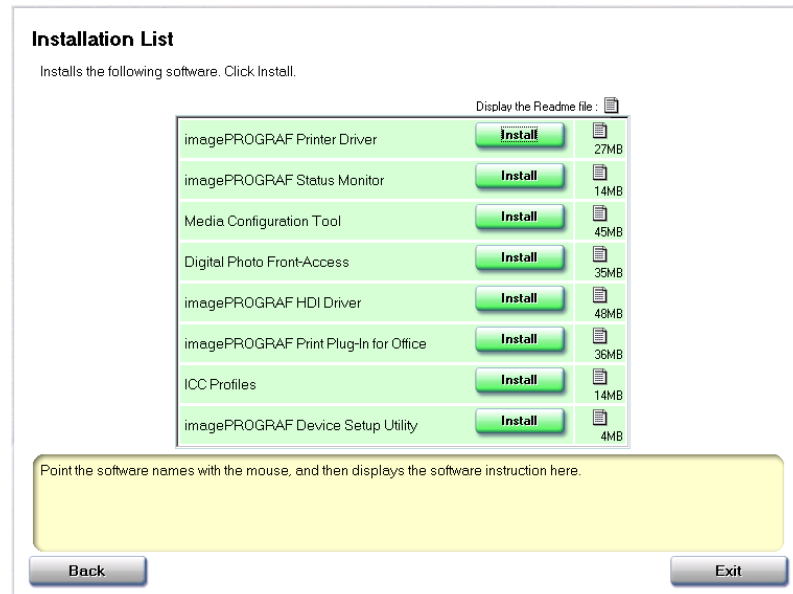

4. Click the **Next** button.

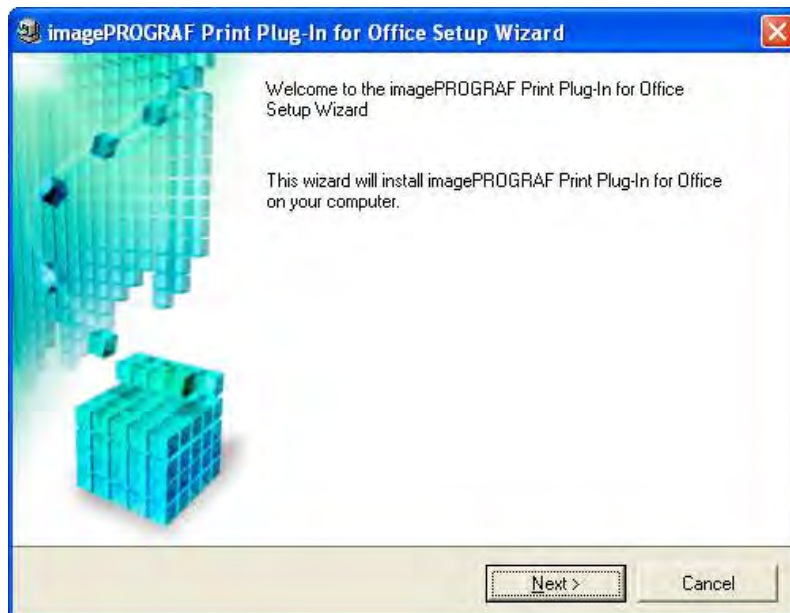


5. Read the **License Agreement**, and click the **Yes** button.

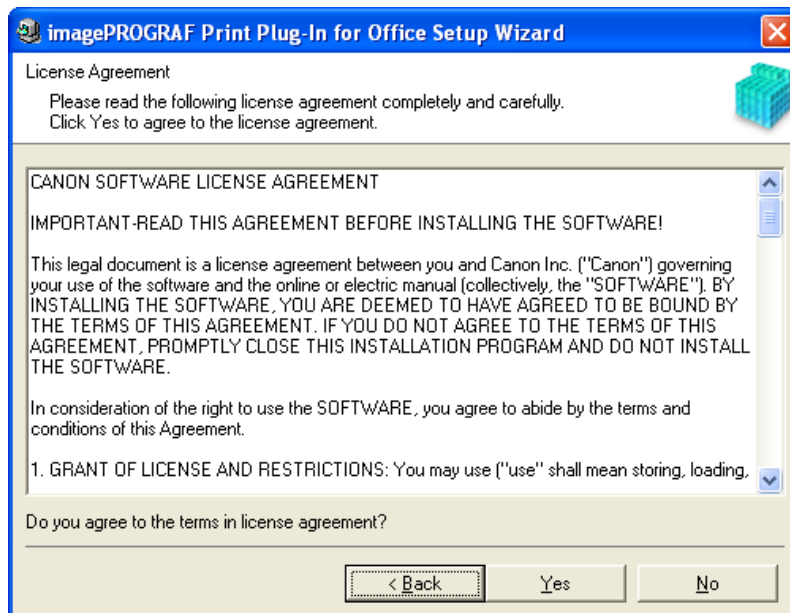



6. Click the **Start** button.

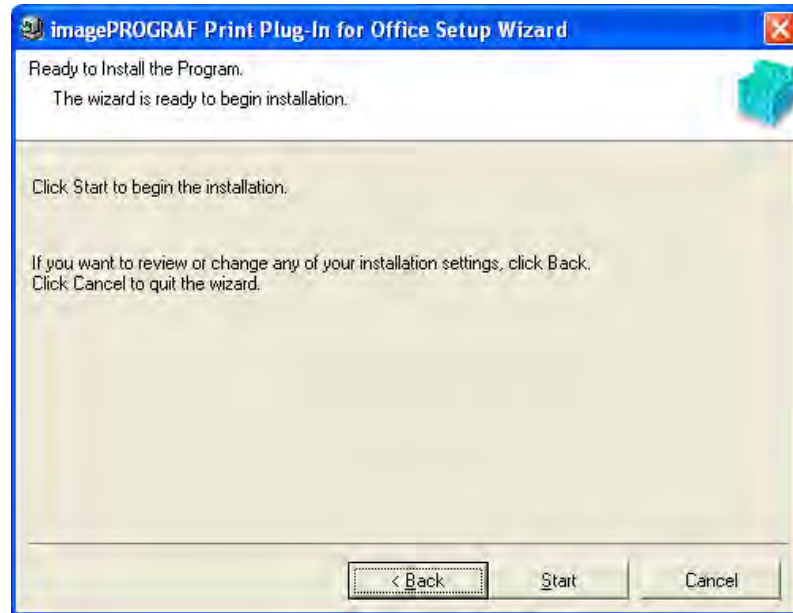


4

7. Click the **Yes** button.



8. Click the **Exit** button.

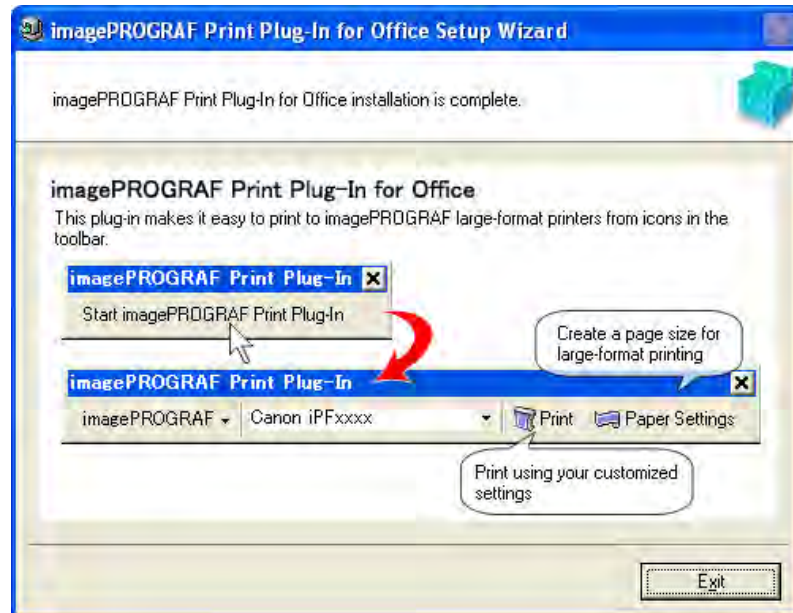

305

The installation for **Print Plug-In for Office** is complete.


**Important**

- When you install this software, the virtual printer **Canon imagePROGRAF PrintPlugIn** may be installed. If you want to use this software, do not uninstall the virtual printer **Canon imagePROGRAF PrintPlugIn**.
- The **Print Plug-In for Office** toolbar/ribbon might not be displayed in **Microsoft Office** after installing **imagePROGRAF Print Plug-In for Office**. Refer to the following topic for details on how to display the **imagePROGRAF Print Plug-In for Office** toolbar/ribbon.
  - When Print Plug-In for Office is not displayed →P.306

**Steps to uninstall**

Below are the steps to uninstall **Print Plug-In for Office**.

1. If **Microsoft Office** is open, close it.
2. Select **Control Panel** from the **start** menu.
3. Open **Add or Remove Programs**.
4. Select **imagePROGRAF Print Plug-In**, and click the **Remove** button.

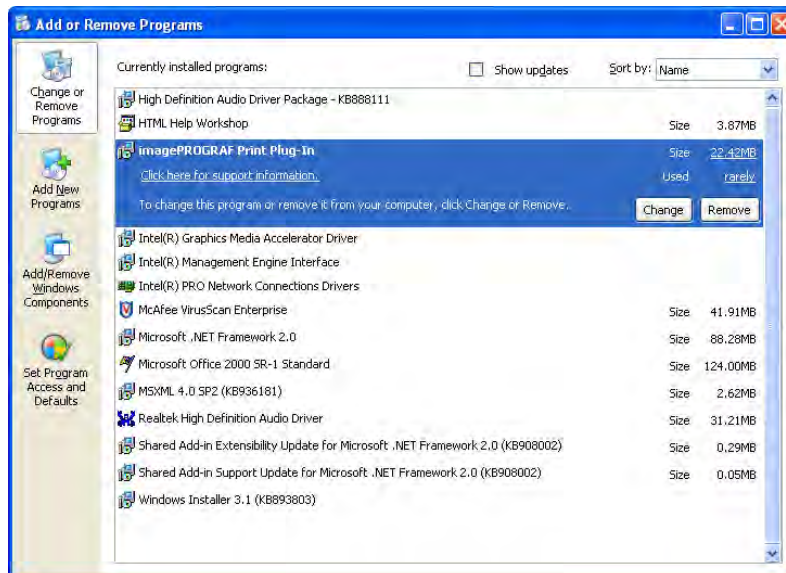**Note**

- You cannot uninstall **Print Plug-In for Office** if an Office application is running. When a message appears, select **Cancel** and close all Office applications that are running.

**When Print Plug-In for Office is not displayed**

Buttons such as **Start imagePROGRAF Print Plug-In** sometimes do not appear in the **Word**, **PowerPoint** and **Excel** Office applications, and the **Print Plug-In for Office** functions are not available. In this event, re-install **Print Plug-In for Office**.

If you are using **Microsoft Office 2003** or later, you can also enable add-ins to display **Print Plug-In for Office**. See below for the procedure for re-installing the plug-in or enabling add-ins.

## Re-installing Print Plug-In for Office

- If a problem occurs, such as the system or an application terminating abnormally, the **Microsoft Office** application disables add-ins as a safety precaution.

In this event, you will need to re-install **Print Plug-In for Office** to display the **imagePROGRAF Print Plug-In** toolbar/ribbon.



### Note

- You cannot re-install **Print Plug-In for Office** once an Office application is running. When the message appears, select **Cancel** and close the active Office application.

Re-install **Print Plug-In for Office** as follows:

1. Close **Microsoft Office** if it is open.
2. Install **Print Plug-In for Office**.  
For information about installing, see "Steps to install." →P.302

4

## Enabling Print Plug-In for Office for items disabled in Office applications


- If a problem occurs, such as the system or an application terminating abnormally, the **Microsoft Office** application disables add-ins as a safety precaution.

In this event, you will need to restore the disabled add-ins in order to display the **imagePROGRAF Print Plug-In** toolbar/ribbon.

Use the procedure below to restore the add-ins disabled by **Microsoft Office**.

For **Microsoft Office 2010**


1. Select **Options** from the **File** menu.

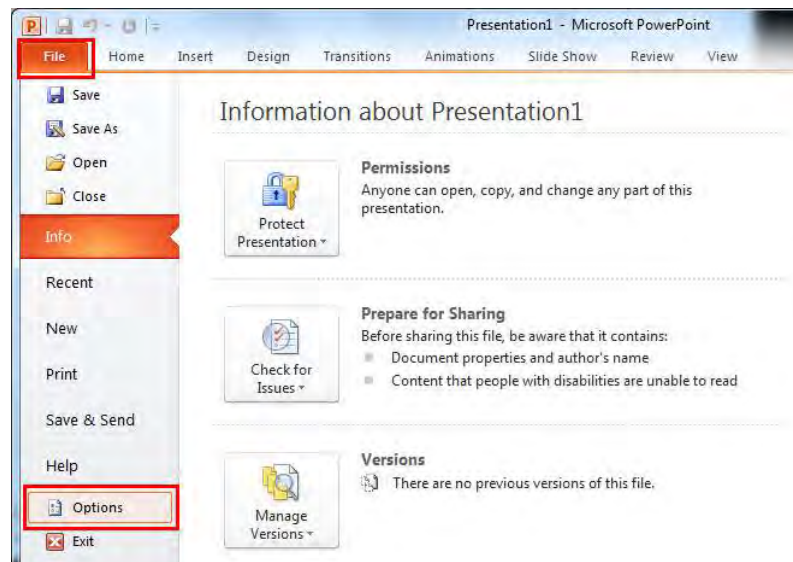


2. From the list on the left side of the <application name> options dialog box, select **Add-ins**.

307

3. Select **Disabled Items** in the **Manage** combo box and click the **Go** button.

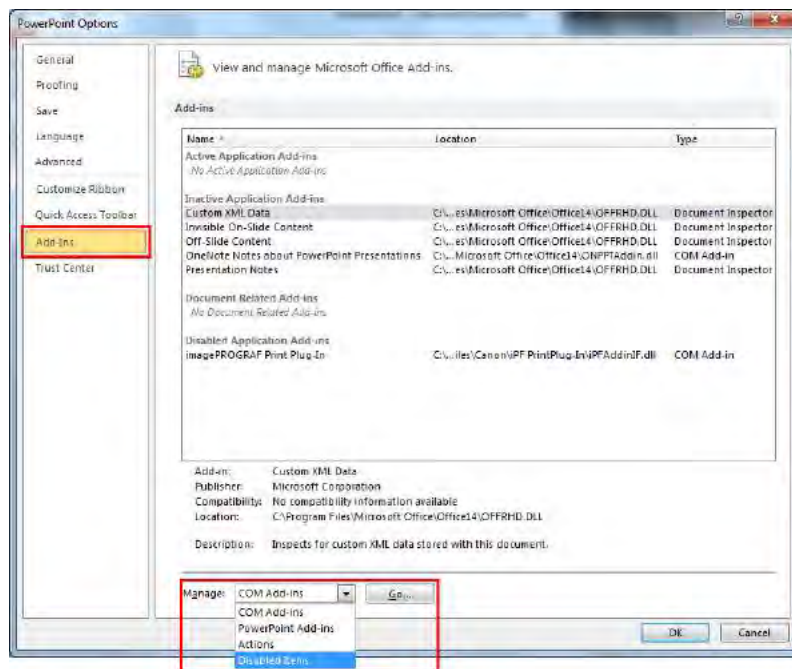

4. If **Addin imageprograf print plug-in (ipfaddinif.dll)** is displayed in the **Disabled Items** dialog box, select it and click the **Enable** button.

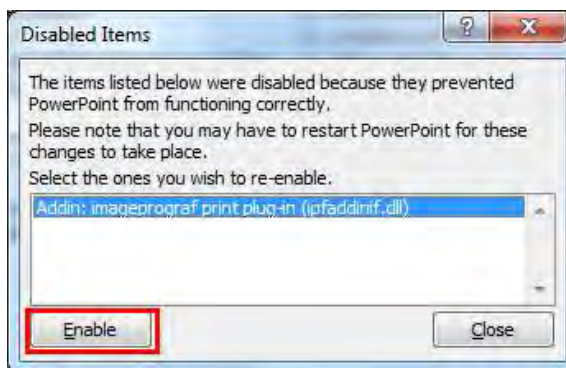


5. Close all the dialog boxes and restart the Office application.

For Microsoft Office 2007

1. Click the **Office** button and then click the **<application name> options** button.




2. From the list on the left side of the **<application name> options** dialog box, select **Add-ins**.
3. Select **Disabled Items** in the **Manage** combo box and click the **Go** button.

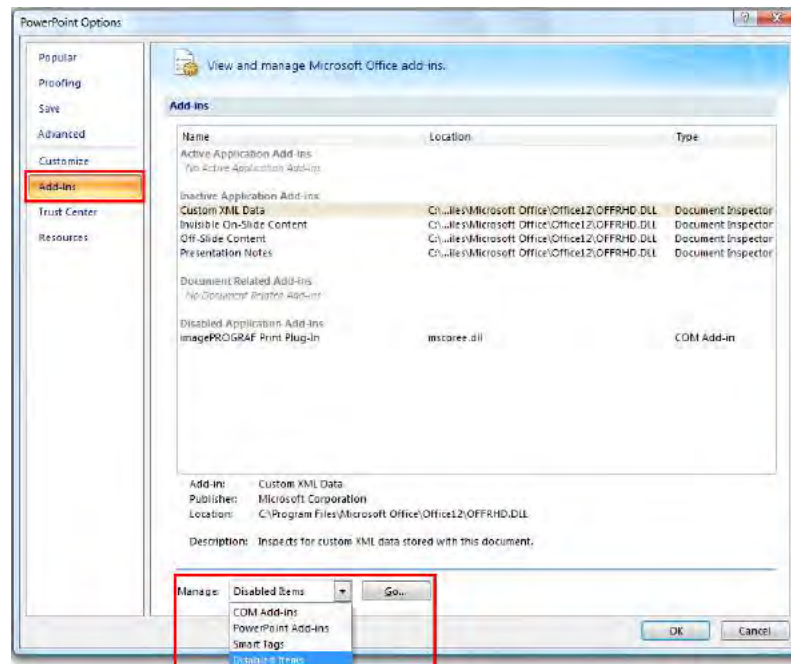




4. If **Addin imageprograf print plug-in (ipfaddinif.dll)** is displayed in the **Disabled Items** dialog box, select it and click the **Enable** button.

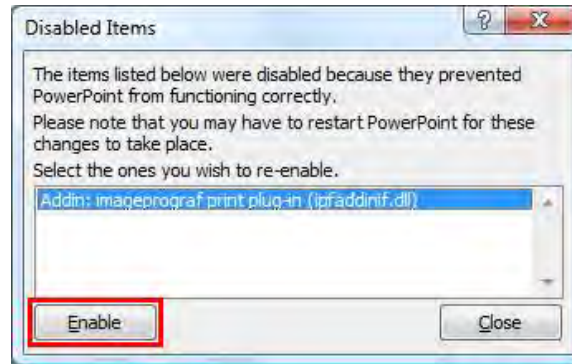

5. Close all the dialog boxes and restart the Office application.


For **Microsoft Office 2003**

1. Click **About <application name>** in the **Help** menu of application.

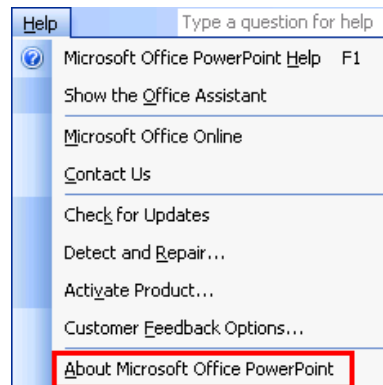




2. Click the **Disabled Items** button in the **About <application name>** dialog box.

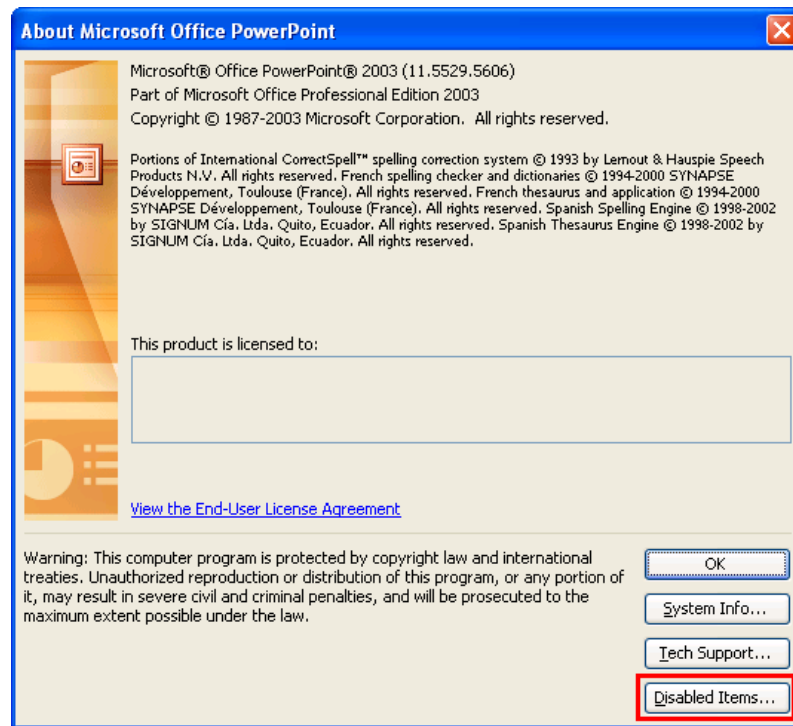

3. If **Addin imageprograf print plug-in (ipfaddinif.dll)** is displayed in the **Disabled Items** dialog box, select it and click the **Enable** button.

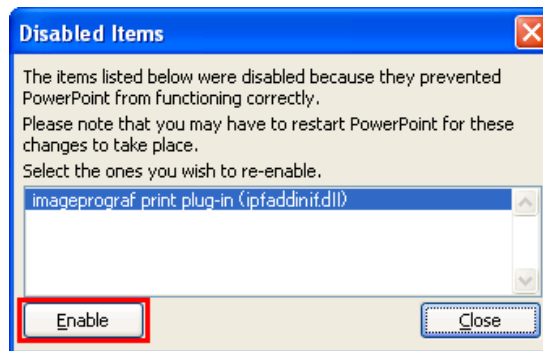


4. Close all the dialog boxes and restart the Office application.

## To start from Microsoft Word

Below are the steps to start **Print Plug-In for Office** from **Microsoft Word**.

1. Start **Microsoft Word**.


2. If **Start imagePROGRAF Print Plug-In** is displayed on the toolbar/ribbon, click it.

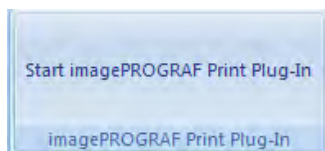




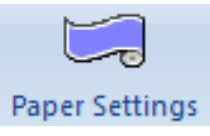
**Important**

- If the **imagePROGRAF Print Plug-In** toolbar/ribbon is not displayed, refer to the following.
  - When Print Plug-In for Office is not displayed →P.306


3. Check that the **imagePROGRAF Print Plug-In** toolbar/ribbon is displayed.

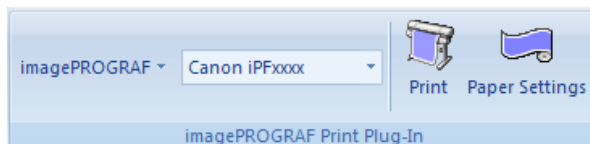


4. Click the buttons on the toolbar/ribbon according to the items you want to set.

Icon	Contents
 Menu	Displays the <b>About</b> , <b>Help</b> , and <b>Special Settings</b> dialog boxes. You can change the settings using the <b>Special Settings</b> dialog box. Refer to Configuring Special Settings →P.352 for details.
 Printer list	Select Printer. If you select <b>Show All Printers</b> , the <b>imagePROGRAF</b> printers will be displayed again. Select this when you want to display all printer drivers or update the display.
 Print Button	The print Wizard is displayed. The settings <b>Print Matching Roll Width</b> , <b>Borderless Printing</b> , <b>Multi-Page Printing</b> , and <b>Print Using Registered Settings</b> can be set.
 Paper Settings Button	Large-Format Wizard is displayed. Settings for Portrait or Landscape Orientation can be set.

4

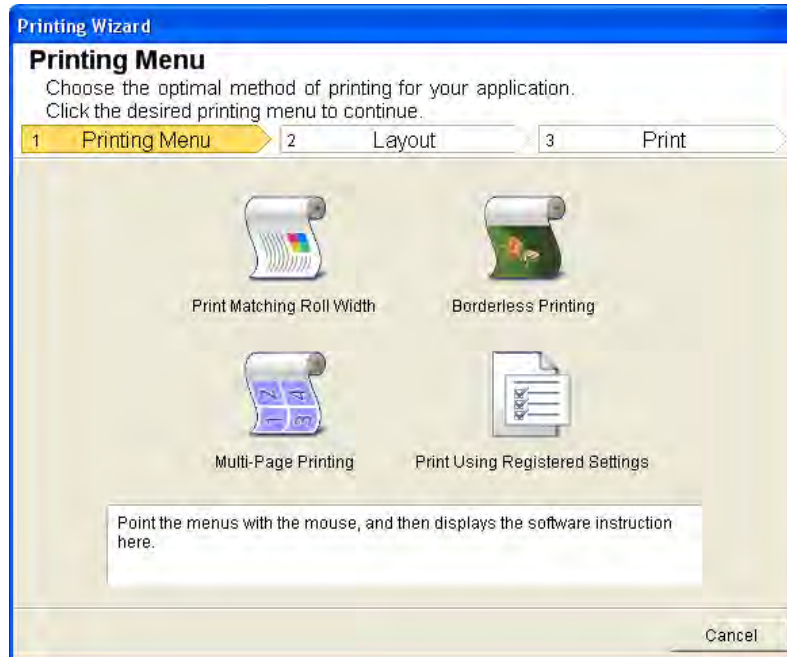**Printing Wizard dialog box****Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar.

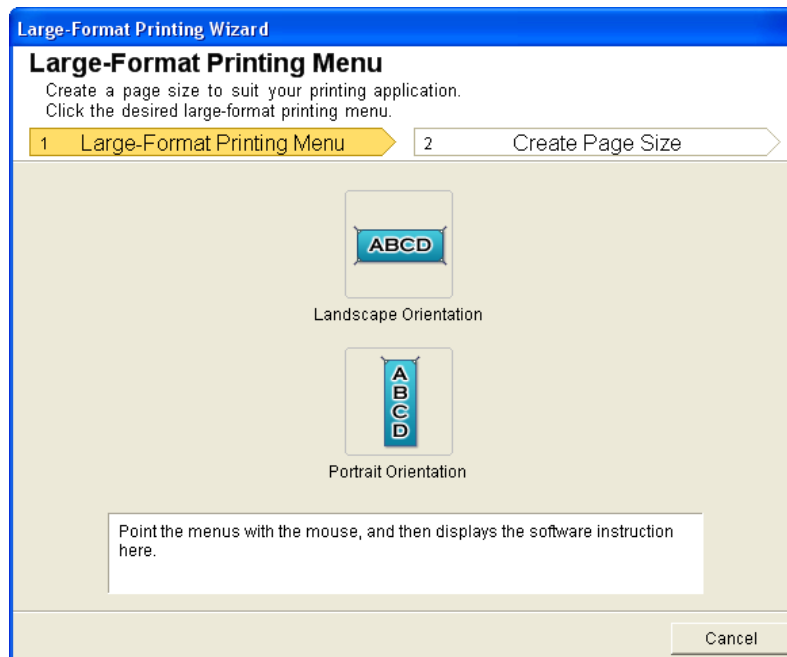**Large-Format Printing Wizard dialog box**


**Important**

- If you want to change the display to another file or application while the **Large-Format Printing Wizard** is open, close the **Large-Format Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- The layout may collapse if you create a form using existing data. If that is the case, modify the data again.


**Print Matching Roll Width (Word)**

Prints to the edge of the roll width. You can print large exhibits and posters, and also print Portrait and Landscape orientations made in **Large-Format Printing Wizard**.

1. Start **Microsoft Word**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

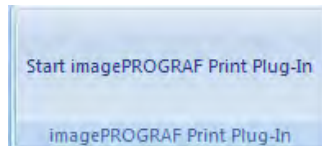


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Printing Wizard** dialog box is displayed.

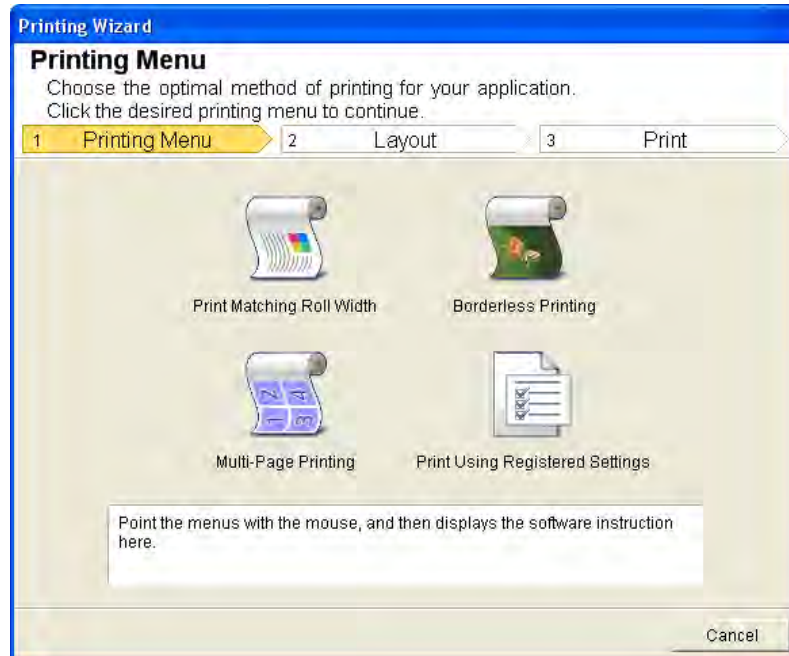**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

**4.** Click **Print Matching Roll Width**.

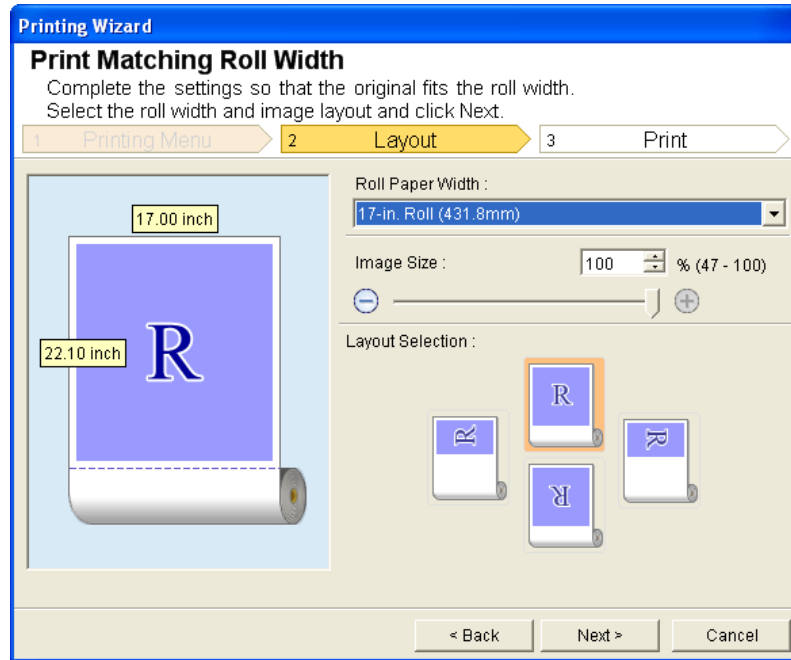


**5.** Select **Roll Paper Width** that is set in the printer.

**6.** Select image size.

**7.** Select layout.

**8.** Select **Next**.

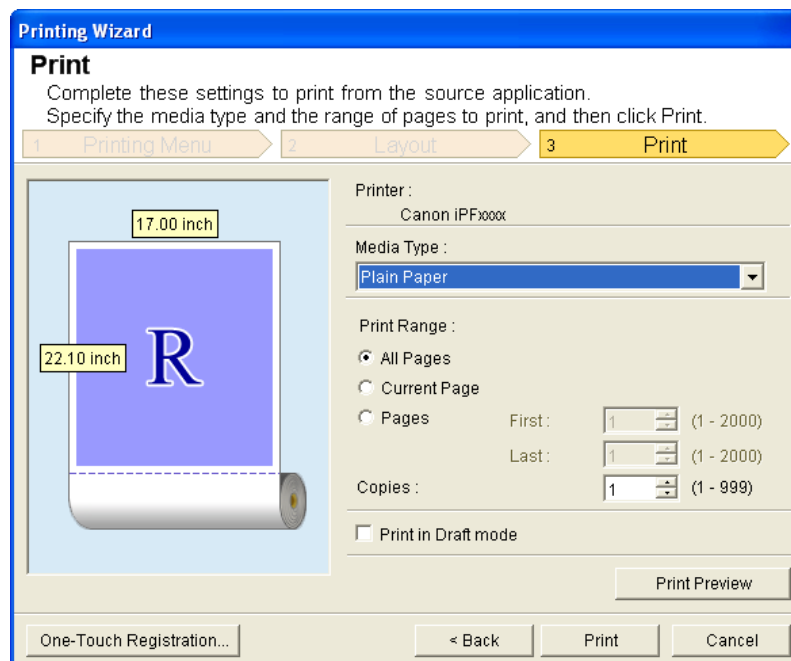

9. Select **Media Type**.

10. Select **Print Range** from **All Pages**, **Current Page**, and **Pages**.  
If **Pages** is selected, enter the number of pages.

11. Enter **Copies**.



**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you need print multiple times using the same setting.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- When you print to the edge of the roll width, the maximum length will be the lesser of 5.587 times the roll paper width, or 18.0m.


4 12. Press **Print** to start printing.

## Borderless Printing (Word)

Prints up to the border of the media. Photos and posters can be printed without worrying about margins.


1. Start **Microsoft Word**.

2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

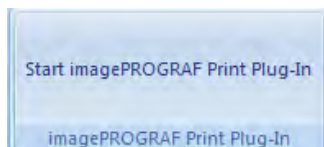




3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Printing Wizard** dialog box is displayed.

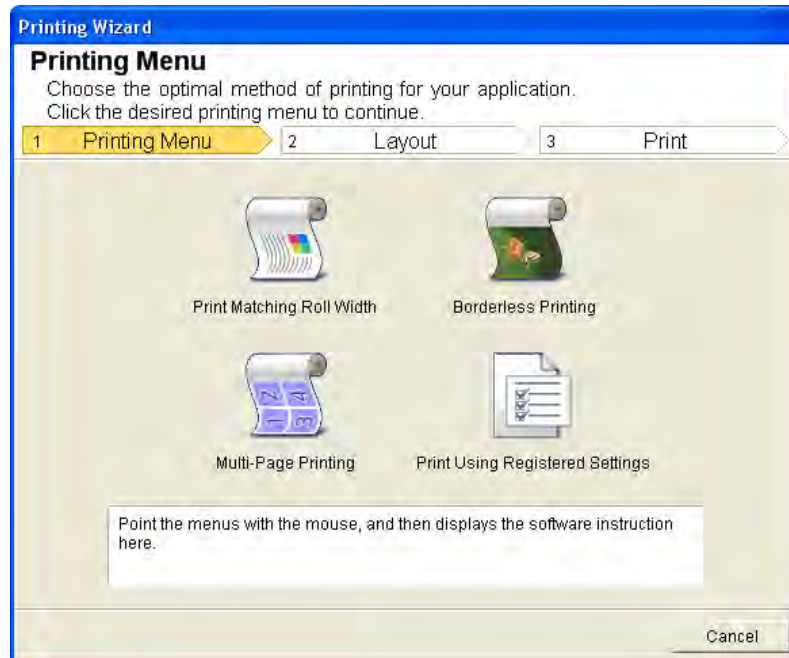

**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

4. Click **Borderless Printing**.

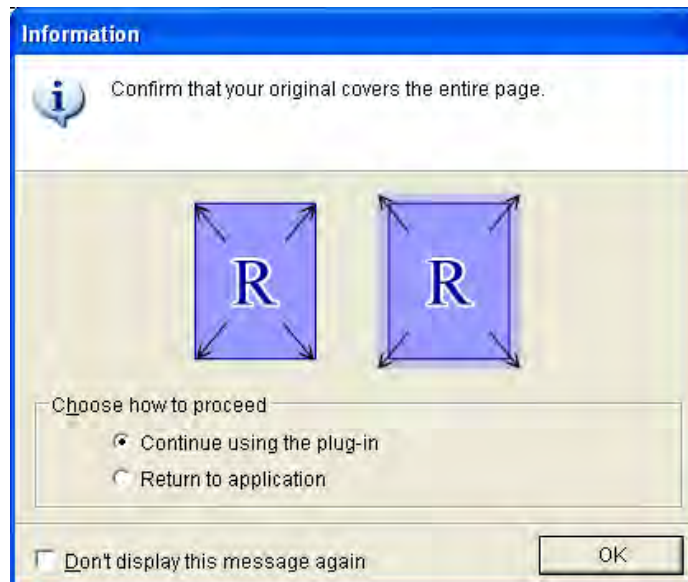


5. A confirmation dialog box is displayed. If the data fills up the page, confirm that **Continue using the plug-in** is selected in **Choose how to proceed** and press **OK**.




**Note**

- To adjust the data, select **Return to application** and press **OK**. Exit **Print Plug-In for Office** and return to the application.

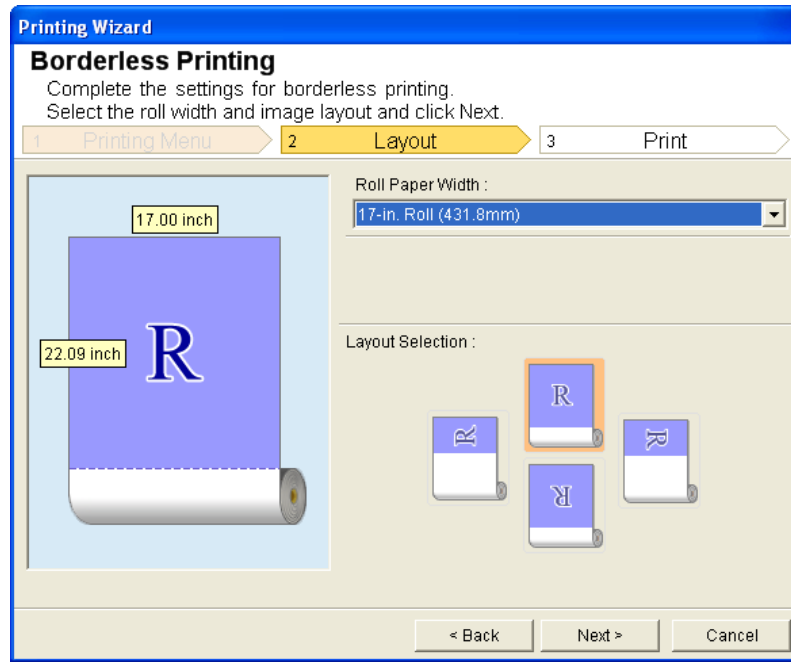

6. Select **Roll Paper Width** that is set in the printer.
7. Select Layout.

4

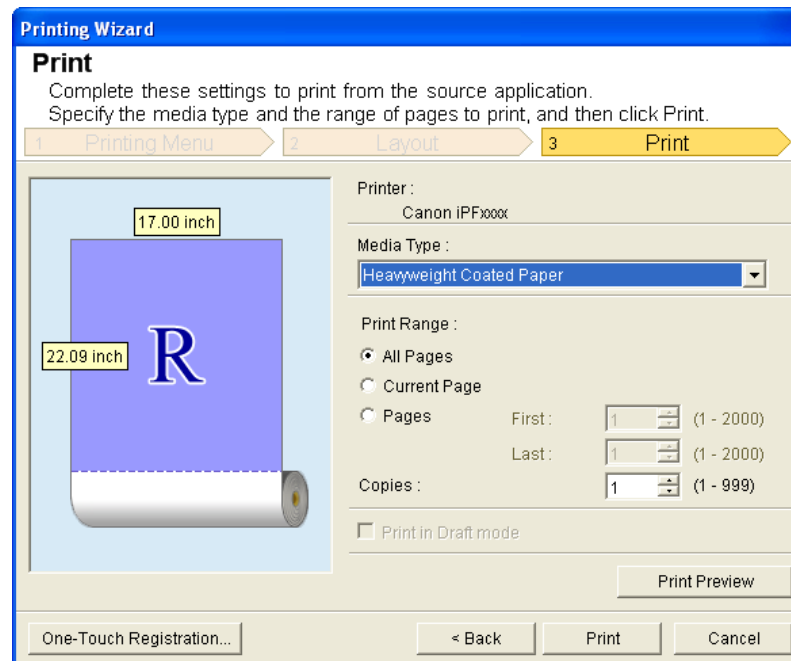**8.** Select **Next**.**9.** Select **Media Type**.**10.** Select **Print Range** from **All Pages**, **Current Page**, and **Pages**.  
For **Pages**, insert the page number.**11.** Enter **Copies**.**Note**


- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Press the **One-Touch Registration** button to register the settings. This is useful for multiple printing using the same settings.
- Press the **Print Preview** button to display the preview screen. You can confirm and make changes to the layout in the preview screen.
- The maximum length for Borderless Printing is the lesser of 5.587 times the roll paper width, or 18.0m.

**12.** Press **Print** to start printing.**Multi-Page Printing (Word)**


Prints multiple pages as one page. You can print handouts into a single page, or print matter with many pages.

**1.** Start **Microsoft Word**.

2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

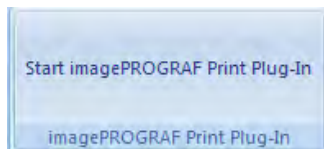

3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Printing Wizard** dialog box is displayed.

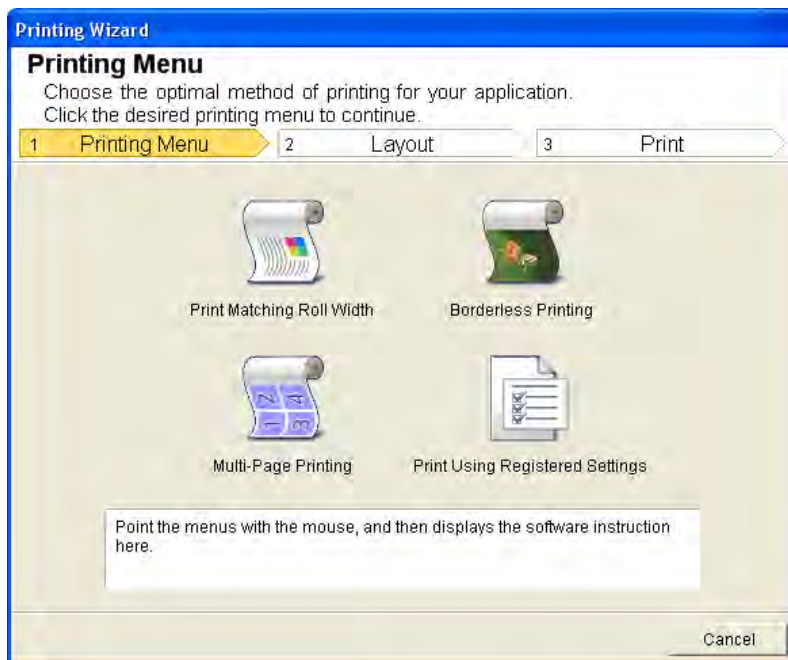


4



**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.


4. Click **Multi-Page Printing**.

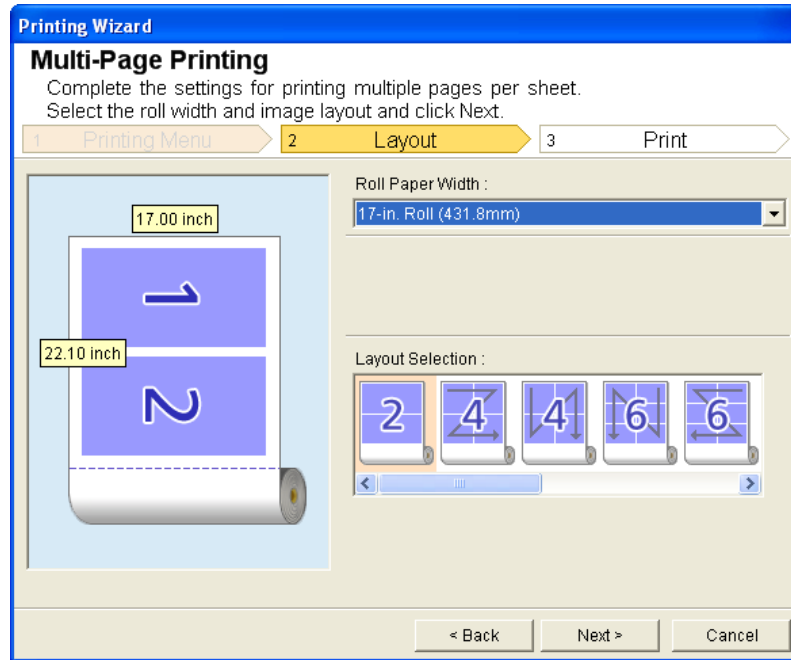

5. Select the **Roll Paper Width** that is set in the printer.

6. Select layout from **Layout Selection**.

7. Select **Next**.

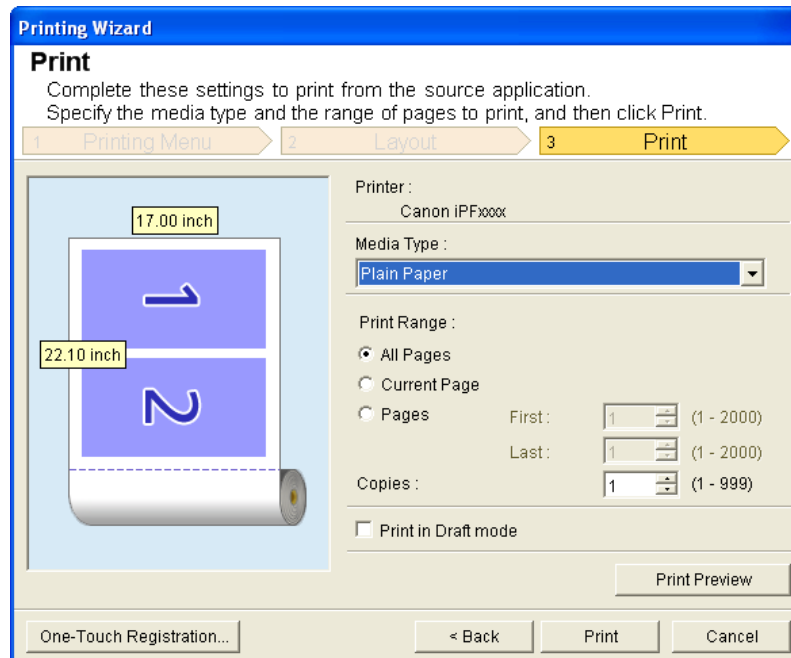

8. Select **Media Type**.

9. Select **Print Range** from **All Pages**, **Current Page**, and **Pages**.  
If **Pages** is selected, enter the number of pages.

10. Enter **Copies**.



**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you need print multiple times using the same setting.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- The maximum length for Multi-Page Printing is the lesser of 5.587 times the roll paper width, or 18.0m.

11. Press **Print** to start printing.

## Register the settings(Word)

If you are going to print multiple times using the same setting, you can select **One-Touch Registration**. Registered settings can be recalled from **Print Using Registered Settings**.


1. Set up to the **Print** screen from **Print Matching Roll Width**, **Borderless Printing** or **Multi-Page Printing** of **Printing Menu**.




**Note**

- Up to 20 items can be registered.
- The available settings are as follows.
  - Print Matching Roll Width (Word) →P.314
  - Borderless Printing (Word) →P.316
  - Multi-Page Printing (Word) →P.319

2. Click the **One-Touch Registration** button.

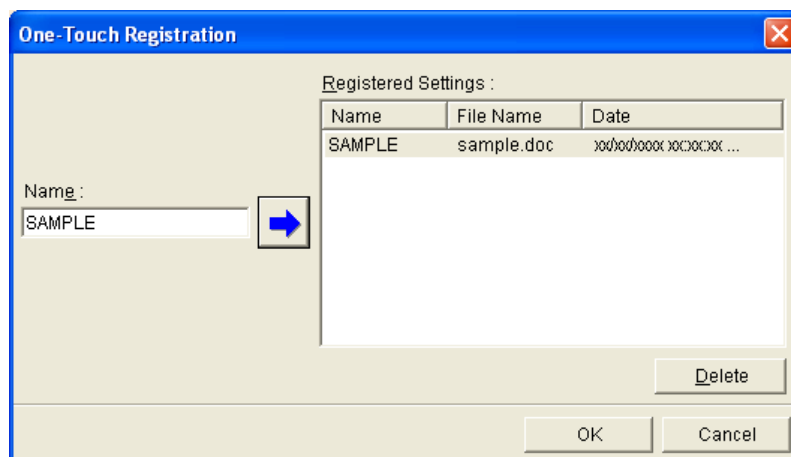



3. Enter name in **Name**.  
Up to 31 characters can be entered.
4. Click . The name you entered is displayed in **Registered Settings**.
5. Click **OK**, and return to the **Print** screen.
6. Click **Print** to print, and click **Cancel** to cancel the print.


**Note**

- Clicking **Cancel** in the **Print** screen will not delete the registered settings.


## Print Using Registered Settings (Word)

Prints using the registered settings.

1. Start **Microsoft Word**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.


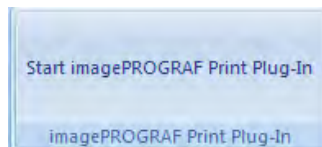


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.  
The **Printing Wizard** dialog box is displayed.

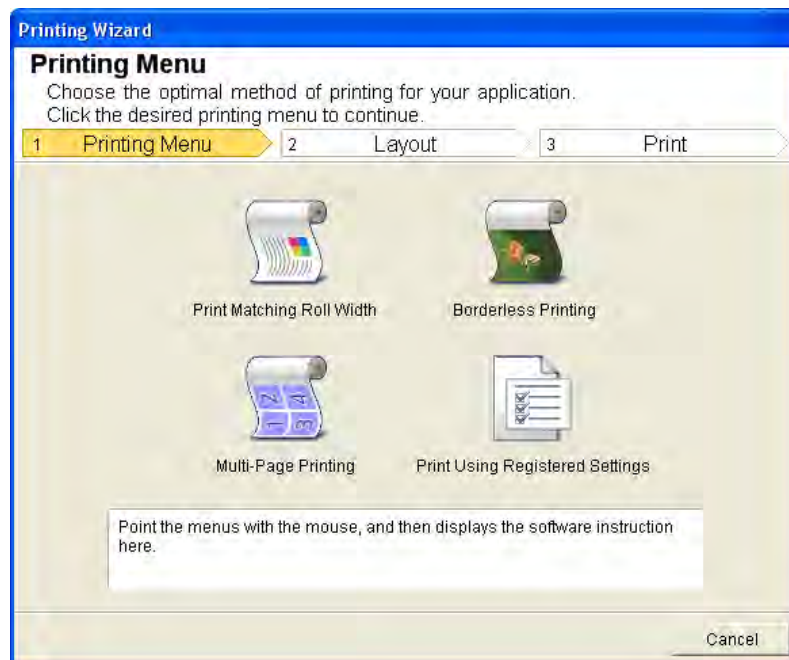

**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

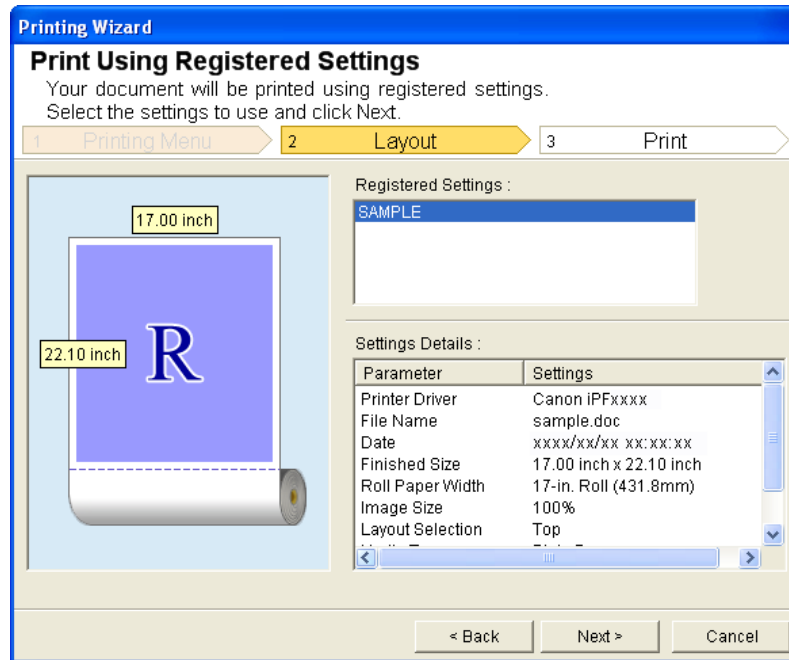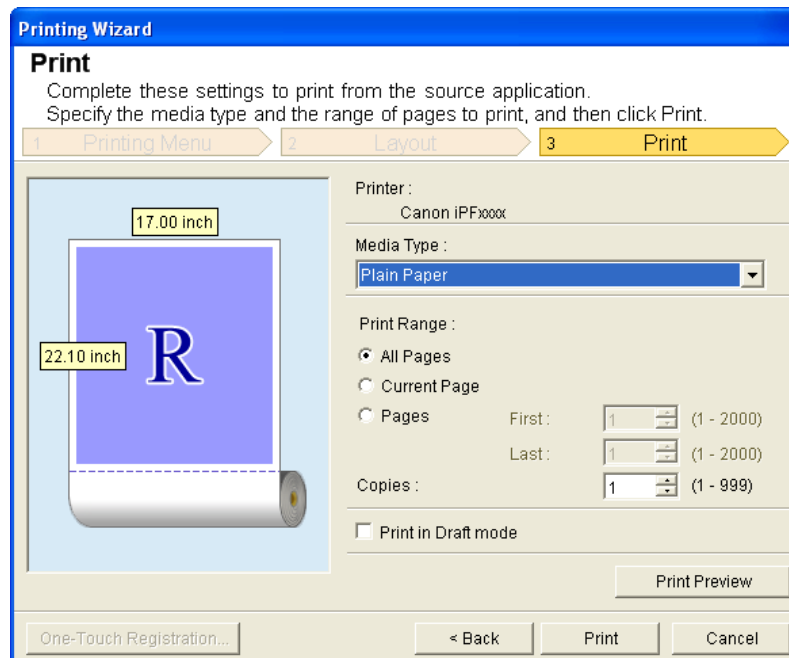**4.** Click **Print Using Registered Settings**.**5.** Click the **Next** button.**6.** Select **Media Type**.

7. Select **Print Range** from **All Pages**, **Current Page**, or **Pages**.  
If **Pages** is selected, enter the number of pages.

8. Enter **Copies**.

**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- The maximum print length when printing with the registered settings is the lesser of 5.587 times the roll paper width, or 18.0m.

9. Press **Print** to start printing.

## Portrait Orientation / Landscape Orientation (Word)


4

Print to the edge of the roll width. You can print large exhibits and posters, or print the Landscape or Portrait Orientation Page Sizes made in the **Large-Format Printing Wizard**.

### Create Page Size in Portrait or Landscape Orientation.

Use the **Large-Format Printing Wizard** to create portrait page sizes for Potrait Orientation, and landscape page sizes for Landscape Orientation.

1. Start **Microsoft Word**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

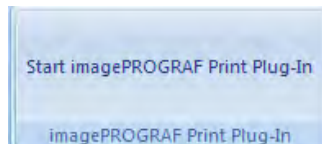


3. Click **Paper Settings** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.  
The **Large-Format Printing Wizard** dialog box is displayed.

**Note**

- If you want to change the display to another file or application while the **Large-Format Printing Wizard** is open, close the **Large-Format Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

325

4

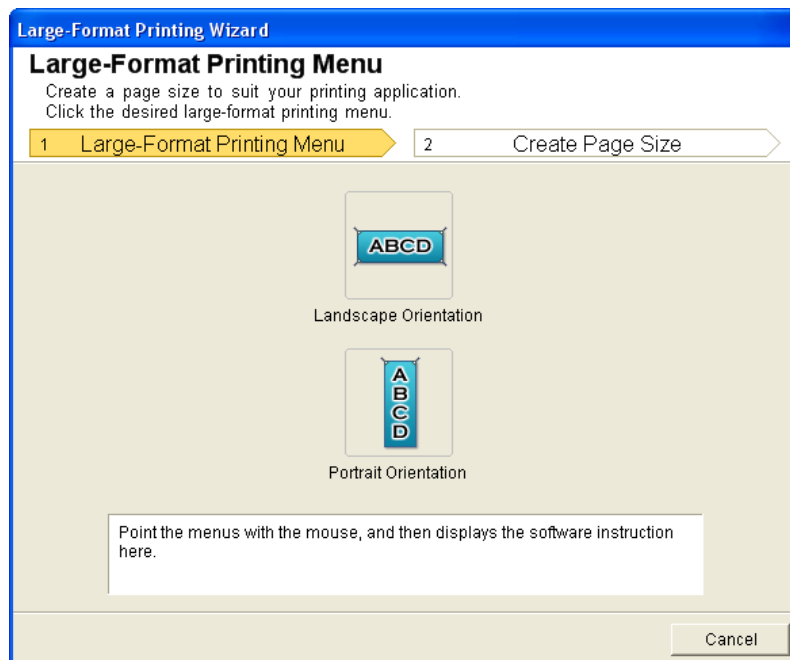


4. Click **Portrait Orientation** or **Landscape Orientation**.



**Note**

- The steps taken to create a Portrait Page Size will be used as an example to explain the procedure.


326

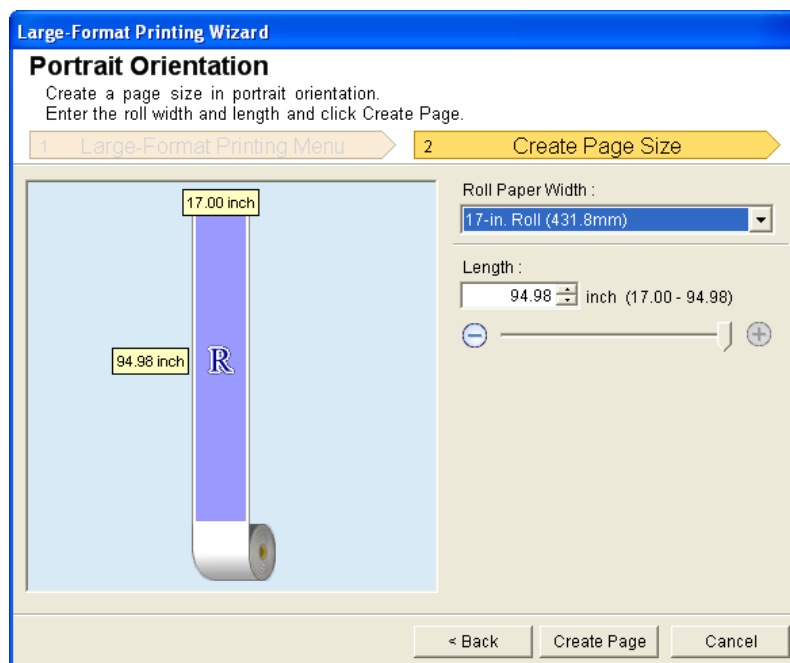

5. Adjust **Length** from the list-box or slide-bar.

6. Click the **Create Page** button.

7. Click **OK** if the message is displayed.

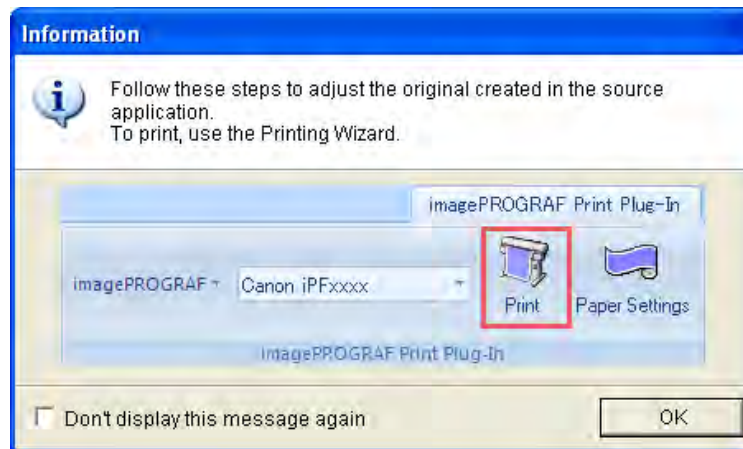

8. Edit and create the document.



**Note**

- Printing is done in **Print Matching Roll Width** of the **Printing Wizard**. For details on **Print Matching Roll Width**, refer to see "Print Matching Roll Width (Word)." →P.314 .




**Important**

- The layout may collapse if you create a form using existing data. If that is the case, modify the data again.

## To start from Microsoft PowerPoint

Below are the steps to start **Print Plug-In for Office** from **Microsoft PowerPoint**.


1. Start **Microsoft PowerPoint**.
2. If **Start imagePROGRAF Print Plug-In** is displayed on the toolbar/ribbon, click it.

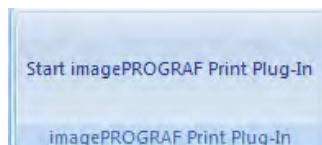





**Important**

- If the **imagePROGRAF Print Plug-In** toolbar/ribbon is not displayed, refer to the following.
  - When **Print Plug-In for Office** is not displayed →P.306

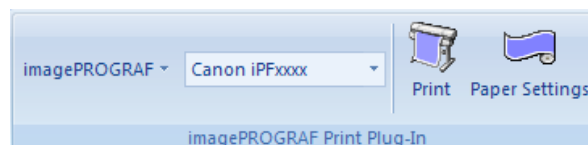
3. Check that the **imagePROGRAF Print Plug-In** toolbar/ribbon is displayed.



4. Click the buttons on the toolbar/ribbon according to the items you want to set.

Icon	Contents
 Menu	Displays the <b>About</b> , <b>Help</b> , and <b>Special Settings</b> dialog boxes. (See "Configuring Special Settings.") →P.352
 Printer list	Select Printer. If you select <b>Show All Printers</b> , the <b>imagePROGRAF</b> printers will be displayed again. Select this when you want to display all printer drivers or update the display.
 Print Button	The print Wizard is displayed. The settings <b>Print Matching Roll Width</b> , <b>Borderless Printing</b> , <b>Multi-Page Printing</b> , and <b>Print Using Registered Settings</b> can be set.
 Paper Settings Button	Large-Format Wizard is displayed. Settings for Portrait or Landscape Orientation can be set.

Printing Wizard dialog box

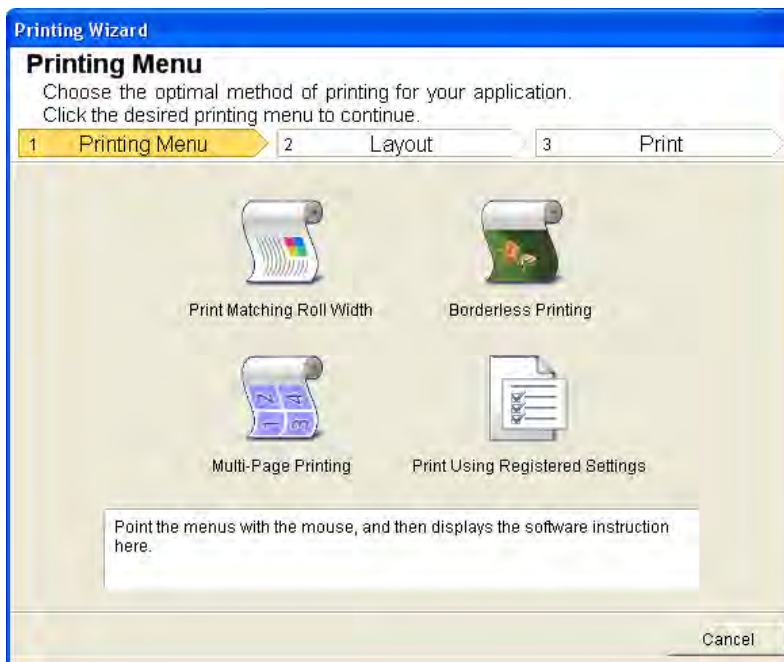

Important


- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.



Note

- If you open a password protected document as read-only, the **Printing Wizard** cannot be run.

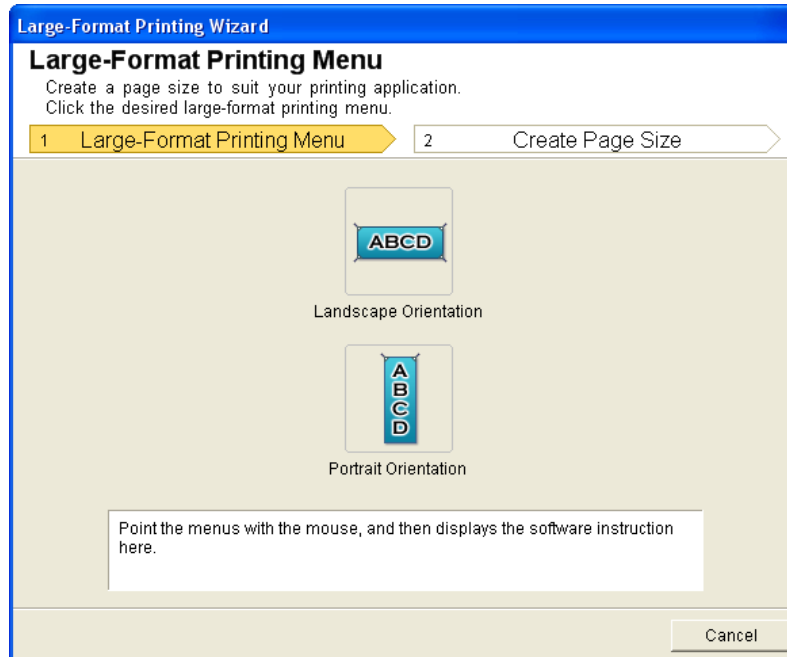

**Large-Format Printing Wizard dialog box****Important**

- If you want to change the display to another file or application while the **Large-Format Printing Wizard** is open, close the **Large-Format Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- The layout may collapse if you create a form using existing data. If that is the case, modify the data again.


**Note**

- If you open a password protected document as read-only, the **Large-Format Printing Wizard** cannot be run. Remove the password protection.


**Print Matching Roll Width (PowerPoint)**

Prints to the edge of the roll width. You can print large exhibits and posters, and also print Portrait and Landscape orientations made in **Large-Format Printing Wizard**.

1. Start **Microsoft PowerPoint**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

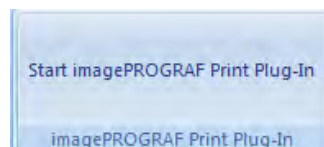

3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Printing Wizard** dialog box is displayed.

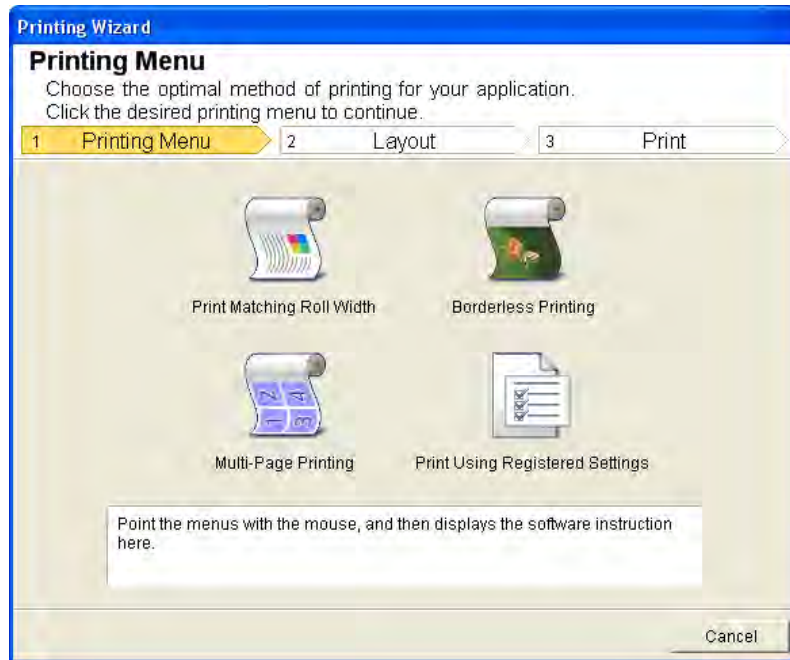


4



**Important**


- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

4. Click **Print Matching Roll Width**.

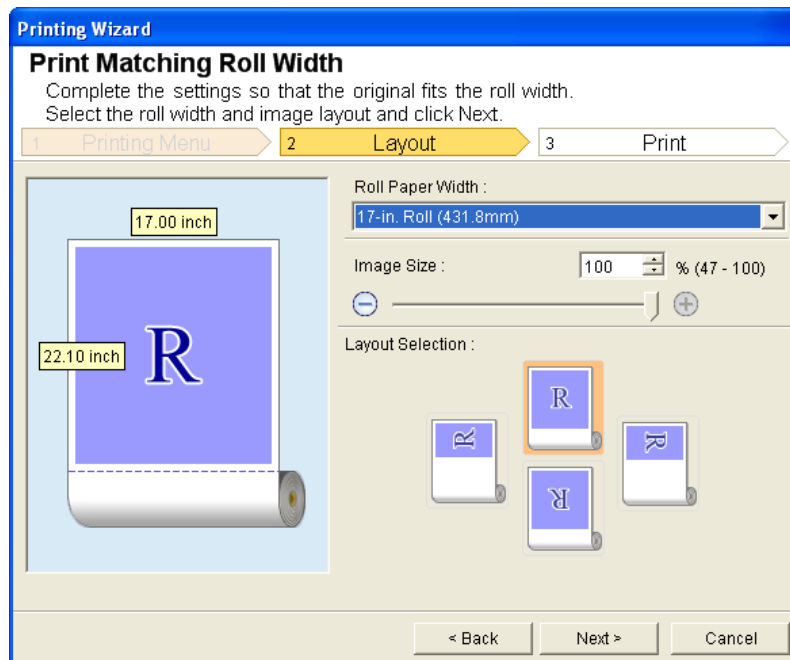

5. Select **Roll Paper Width** that is set in the printer.

6. Select image size.
7. Select layout.
8. Select **Next**.

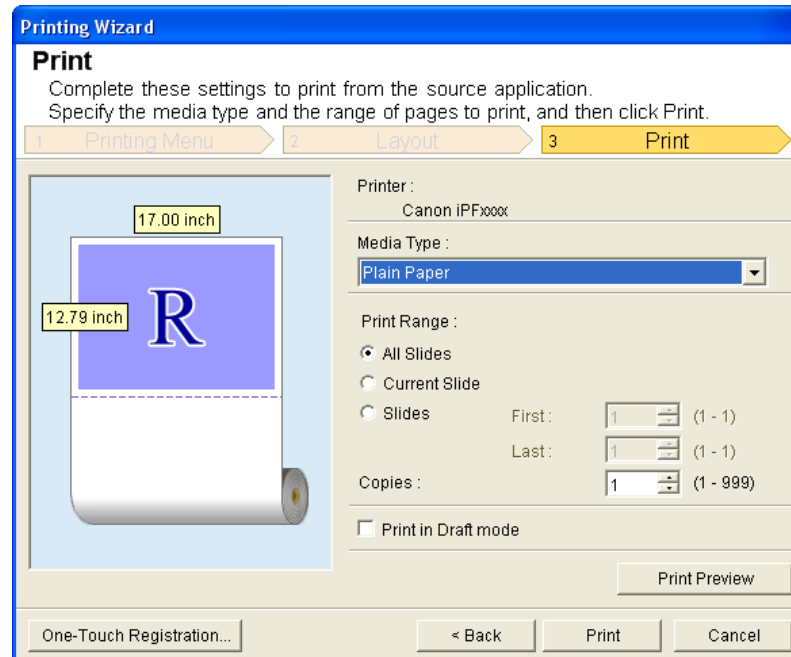

9. Select **Media Type**.
10. Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**.  
If **Slides** is selected, enter the slide number.
11. Enter **Copies**.

**Note**


- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you to need print multiple times using the same setting.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- When you print to the edge of the roll width, the maximum length will be the lesser of 14.22 times the roll paper width, or 18.0m.

12. Press **Print** to start printing.


## Borderless Printing (PowerPoint)

Prints up to the border of the media. Photos and posters can be printed without worrying about margins.

1. Start **Microsoft PowerPoint**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

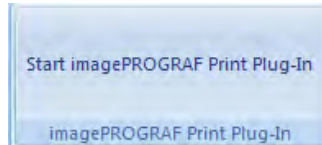


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Printing Wizard** dialog box is displayed.

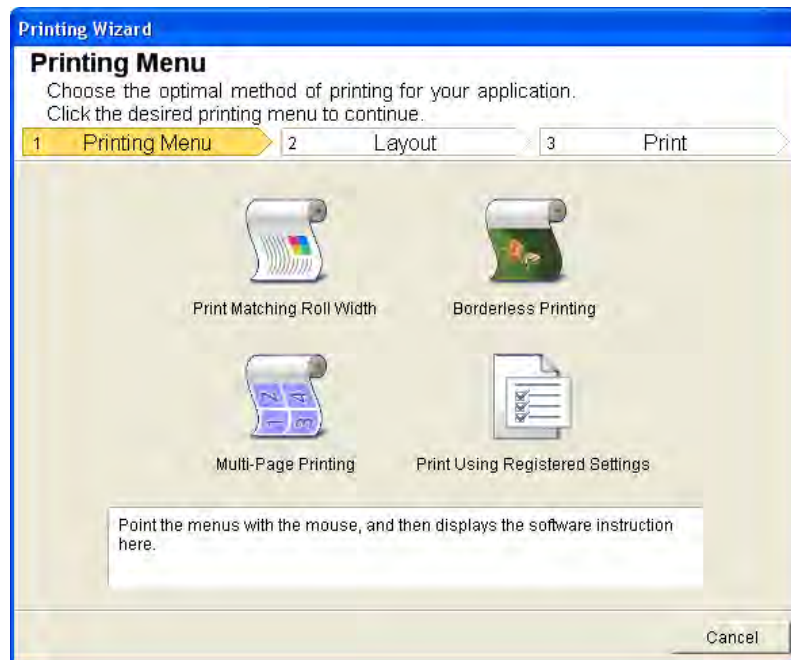

### Important

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

4. Click **Borderless Printing**.

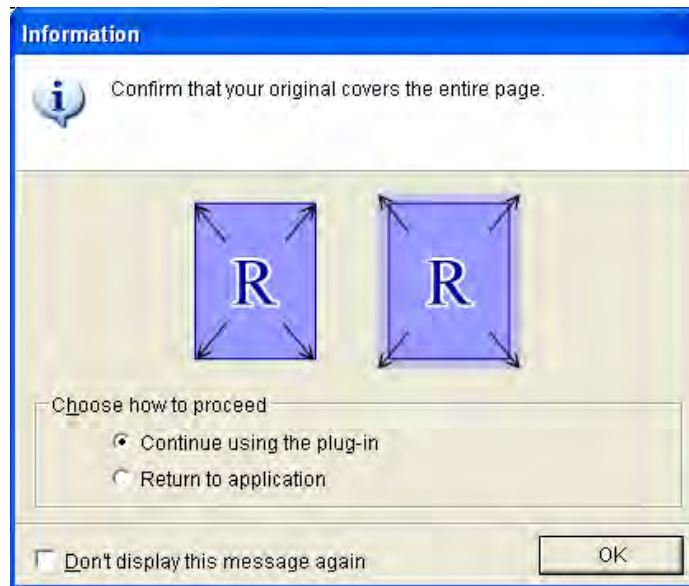


4

5. A confirmation dialog box is displayed. If the data fills up the page, confirm that **Continue using the plug-in** is selected in **Choose how to proceed** and press **OK**.



**Note**


- To adjust the data, select **Return to application** and press **OK**. Exit **Print Plug-In for Office** and return to the application.

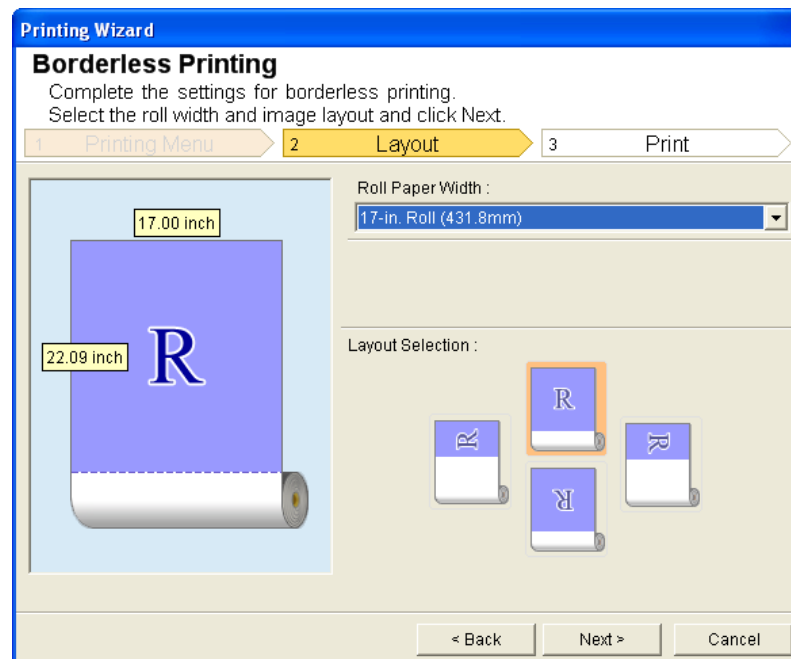

333

6. Select **Roll Paper Width** that is set in the printer.

7. Select Layout.

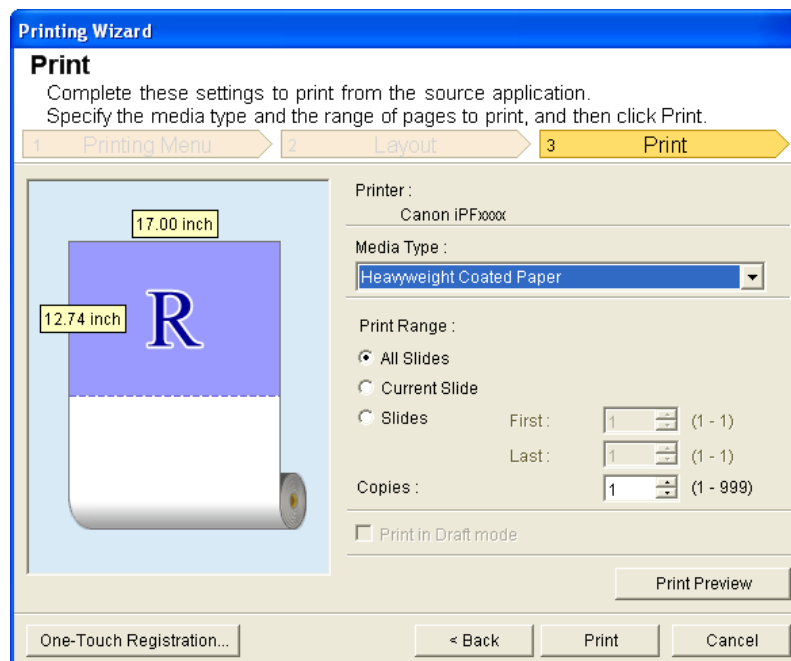**8.** Select **Next**.**9.** Select **Media Type**.**10.** Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**.  
If **Slides** is selected, enter the slide number.**11.** Enter **Copies**.**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Press the **One-Touch Registration** button to register the settings. This is useful for multiple printing using the same settings.
- Press the **Print Preview** button to display the preview screen. You can confirm and make changes to the layout in the preview screen.
- The maximum length for Borderless Printing is the lesser of 14.22 times the roll paper width, or 18.0m.


**12.** Press **Print** to start printing.**Multi-Page Printing (PowerPoint)**

Prints multiple pages as one page. You can print handouts into a single page, or print matter with many pages.


**1.** Start **Microsoft PowerPoint**.



2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

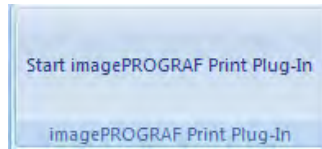


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Printing Wizard** dialog box is displayed.

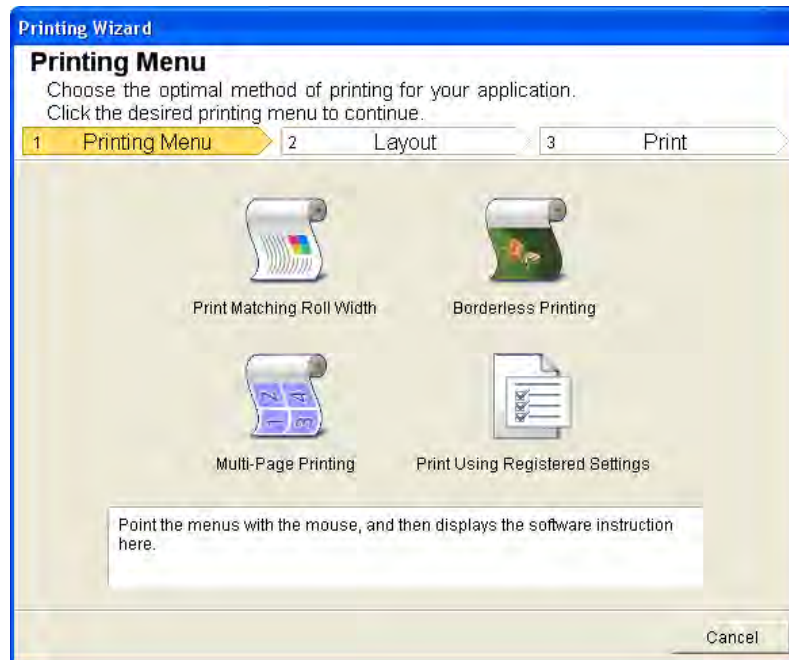

**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.


4. Click **Multi-Page Printing**.

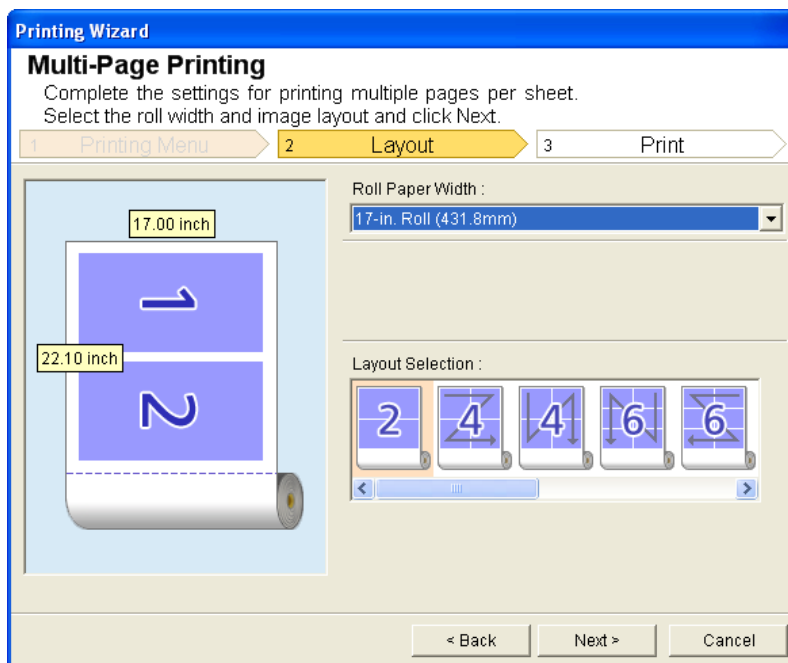

5. Select the **Roll Paper Width** that is set in the printer.

6. Select layout from **Layout Selection**.

7. Select **Next**.

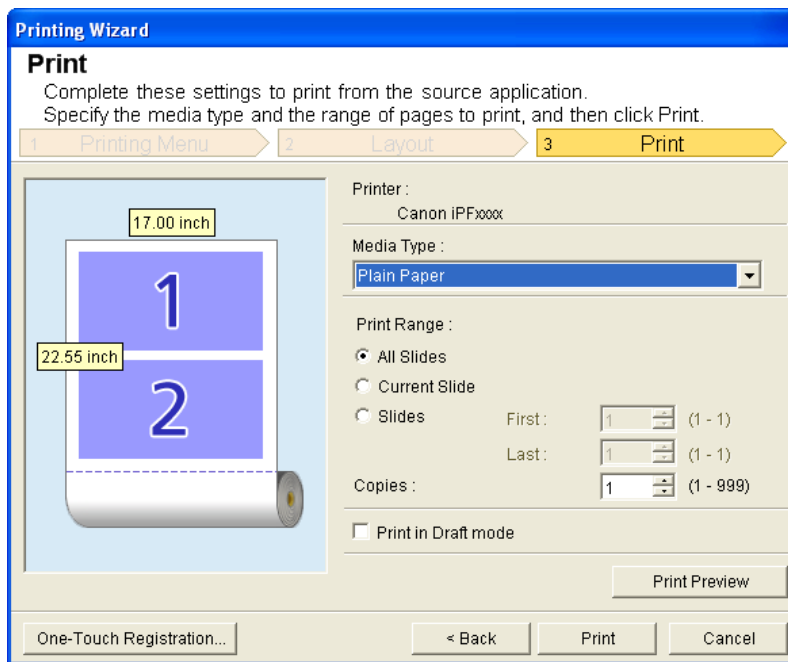

8. Select **Media Type**.

9. Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**.  
If **Slides** is selected, enter the slide number.

10. Enter **Copies**.



**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- The settings are registered when the **One-Touch Registration** is pressed. This is convenient if you need print multiple times using the same setting.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- The maximum length for Multi-Page Printing is the lesser of 14.22 times the roll paper width, or 18.0m.

11. Press **Print** to start printing.

## Register the settings(PowerPoint)

If you are going to print multiple times using the same setting, you can select **One-Touch Registration**. Registered settings can be recalled from **Print Using Registered Settings**.


1. Set up to the **Print** screen from **Print Matching Roll Width**, **Borderless Printing** or **Multi-Page Printing** of **Printing Menu**.




**Note**

- Up to 20 items can be registered.
- The available settings are as follows.
  - Print Matching Roll Width (PowerPoint) →P.329
  - Borderless Printing (PowerPoint) →P.332
  - Multi-Page Printing (PowerPoint) →P.334

2. Click the **One-Touch Registration** button.

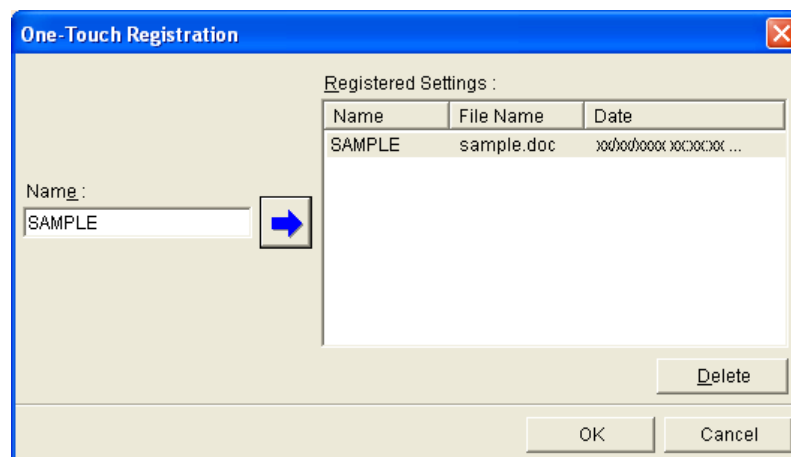

3. Enter name in **Name**.  
Up to 31 characters can be entered.
4. Click . The name you entered is displayed in **Registered Settings**.
5. Click **OK**, and return to the **Print** screen.
6. Click **Print** to print, and click **Cancel** to cancel the print.




**Note**

- Clicking **Cancel** in the **Print** screen will not delete the registered settings.


## Print Using Registered Settings (PowerPoint)

4 Prints using the registered settings.

1. Start **Microsoft PowerPoint**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.


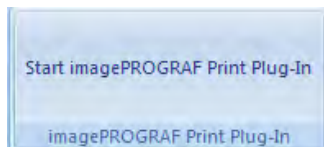


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.  
The **Printing Wizard** dialog box is displayed.

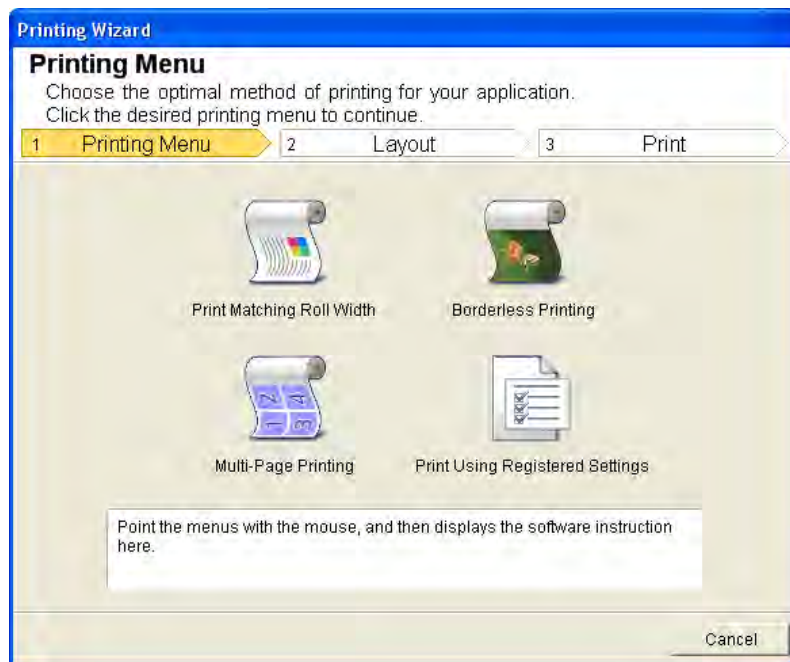

**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.

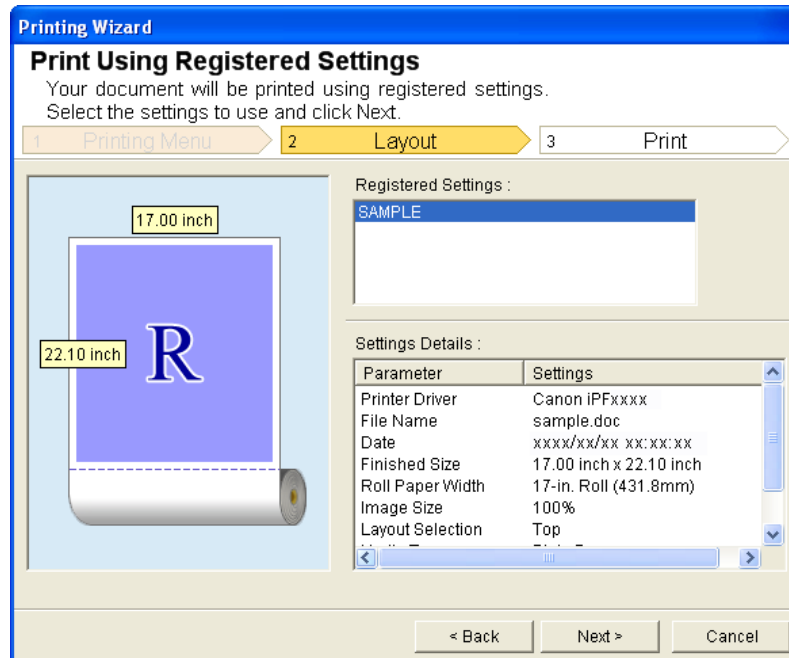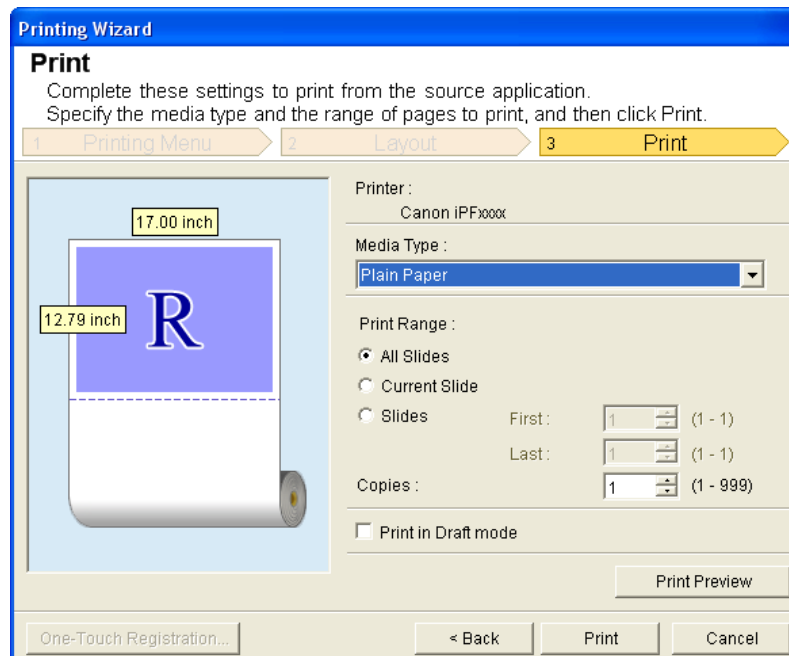**4.** Click **Print Using Registered Settings**.**5.** Click the **Next** button.**6.** Select **Media Type**.

7. Select **Print Range** from **All Slides**, **Current Slide**, and **Slides**.  
If **Slides** is selected, enter the slide number.

8. Enter **Copies**.



**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- The maximum print length when printing with the registered settings is the lesser of 14.22 times the roll paper width, or 18.0m.

9. Press **Print** to start printing.

## Portrait Orientation / Landscape Orientation (PowerPoint)


4

Print to the edge of the roll width. You can print large exhibits and posters, or print the Landscape or Portrait Orientation Page Sizes made in the **Large-Format Printing Wizard**.

### Create Page Size in Portrait or Landscape Orientation.


Use the **Large-Format Printing Wizard** to create portrait page sizes for Potrait Orientation, and landscape page sizes for Landscape Orientation.

1. Start **Microsoft PowerPoint**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

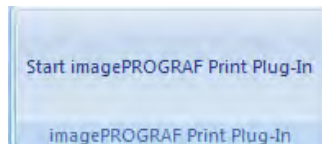



3. Click **Paper Settings** from the **imagePROGRAF Print Plug-In** toolbar/ribbon. The **Large-Format Printing Wizard** dialog box is displayed.

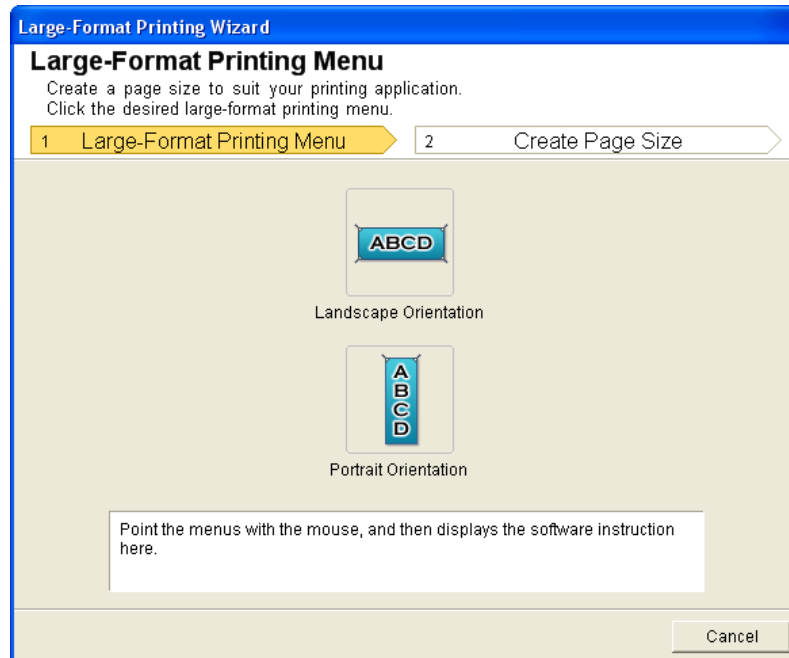
**Important**

- If you want to change the display to another file or application while the **Large-Format Printing Wizard** is open, close the **Large-Format Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.


4. Click **Portrait Orientation** or **Landscape Orientation**.

**Note**

- The steps taken to create a Portrait Page Size will be used as an example to explain the procedure.

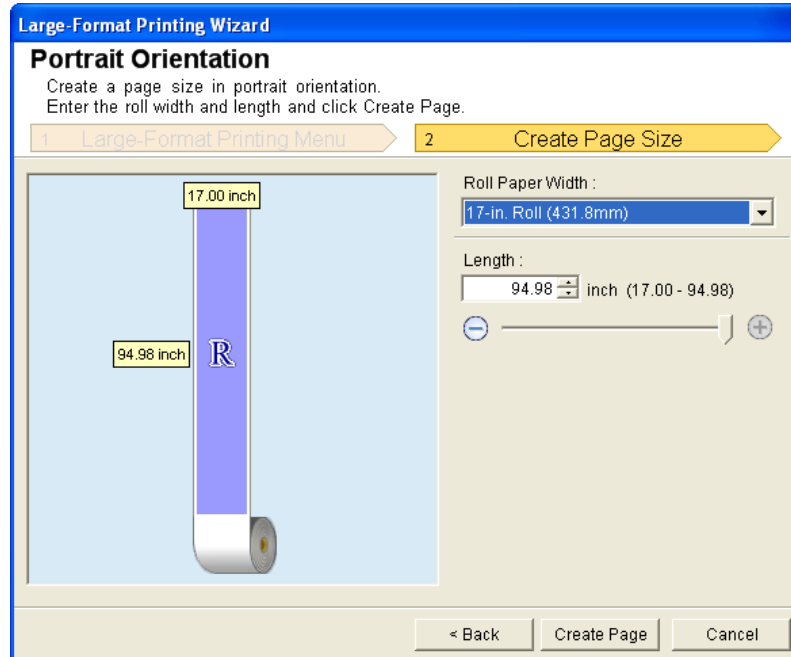

- 4
5. Adjust **Length** from the list-box or slide-bar.
6. Click the **Create Page** button.
7. Click **OK** if the message is displayed.

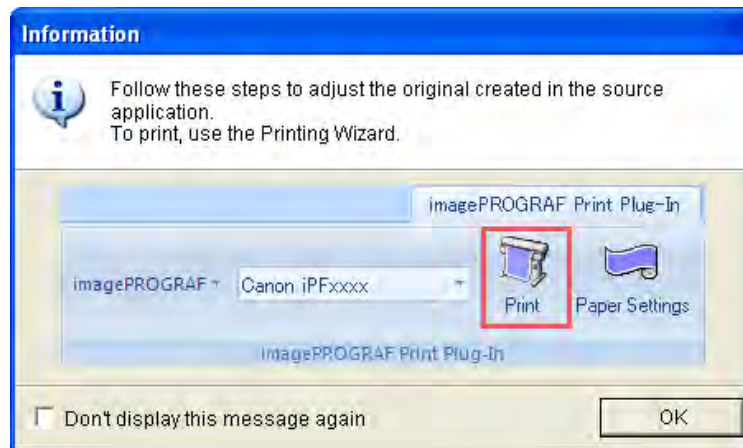

8. Edit and create the document.

**Important**

- The layout may collapse if you create a form using existing data. If that is the case, modify the data again.


**Note**

- Printing is done in **Print Matching Roll Width** of the **Printing Wizard**. For details on **Print Matching Roll Width**, refer to see "Print Matching Roll Width (PowerPoint)." →P.329 .

## To start from Microsoft Excel

Below are the steps to start **Print Plug-In for Office** from **Microsoft Excel**.


1. Start **Microsoft Excel**.
2. If **Start imagePROGRAF Print Plug-In** is displayed on the toolbar/ribbon, click it.

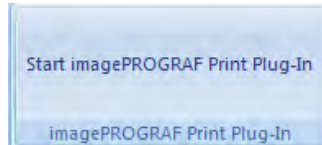




### Important


- If the **imagePROGRAF Print Plug-In** toolbar/ribbon is not displayed, refer to the following.
  - When Print Plug-In for Office is not displayed →P.306

3. Check that the **imagePROGRAF Print Plug-In** toolbar/ribbon is displayed.

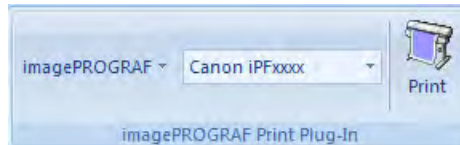

4. Click the buttons on the toolbar/ribbon according to the items you want to set.

Icon	Contents
 Menu	Displays the <b>About</b> , <b>Help</b> , and <b>Special Settings</b> dialog boxes. (See "Configuring Special Settings.") →P.352
 Printer list	Select Printer. If you select <b>Show All Printers</b> , the <b>imagePROGRAF</b> printers will be displayed again. Select this when you want to display all printer drivers or update the display.
 Print Button	The print Wizard is displayed. The settings <b>Print Entire Sheet</b> and <b>Print Selected Area</b> can be set.

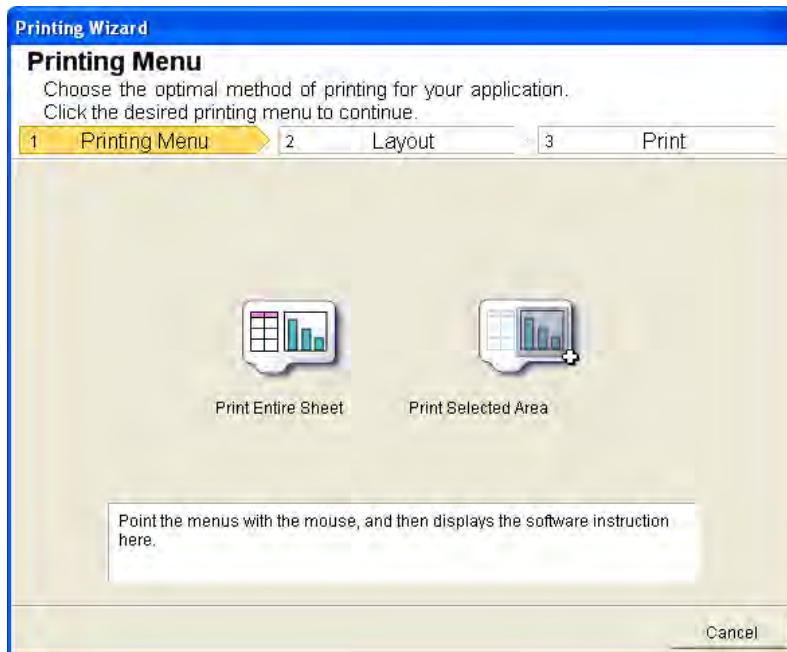**Printing Wizard** dialog box**Important**

- If you want to change the display to another file or application while the **Printing Wizard** is open, close the **Printing Wizard** dialog box. Otherwise, you may not be able to change displays or operate the toolbar/ribbon.
- The **Printing Wizard** will not start if you click the **Print** button on the toolbar/ribbon while editing a cell.
- When more than one worksheet is selected, the **Printing Wizard** cannot be run. Select only one worksheet and click **Print** again.
- When an object is selected, the **Printing Wizard** is not started if you click the **Print** button on the toolbar/ribbon.
- If the paper size in Excel is blank, the **Printing Wizard** cannot be run. From the **File** menu in Excel, select **Page Setup** and check **Paper size**.


**Note**

- If you click the **Print** button with a graph selected, a message dialog box will appear asking if you want to continue printing. If you click **No**, you will return to the application.
- If you click the **Print** button with a page break set, a message dialog box will appear asking if you want to continue printing. If you click **No**, you will return to the application. If you do not use the set page break, check the page break preview and change the setting.
- If you click the **Print** button with a page range set, a message dialog box will appear asking if you want to continue printing. If you click **No**, you will return to the application. If you do not use the set page range, check the page break preview and change the setting.
- If you click the **Print** button with a worksheet or cell protected, a message dialog box will appear asking if you want to continue printing. If you click **No**, you will return to the application. If you want to change the setting, remove the protection from the worksheet or cell.

## Print Entire Sheet (Excel)

For resizing the entire sheet to fit the roll width. Choose this option to enlarge the currently displayed sheet before printing.

1. Start **Microsoft Excel**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

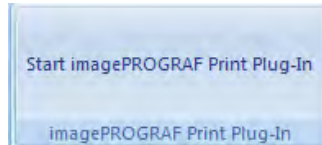


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.




### Important

- When more than one worksheet is selected, the **Printing Wizard** cannot be run. Select only one worksheet and click **Print** again.

If a print area is set, a confirmation message dialog box will appear.  
To print the entire sheet, cancel the setting of the print area.

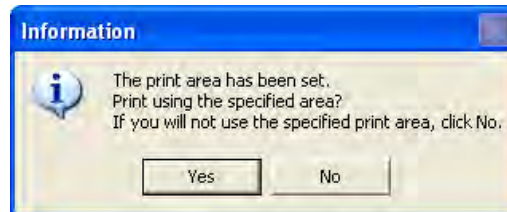


The **Printing Wizard** dialog box is displayed.

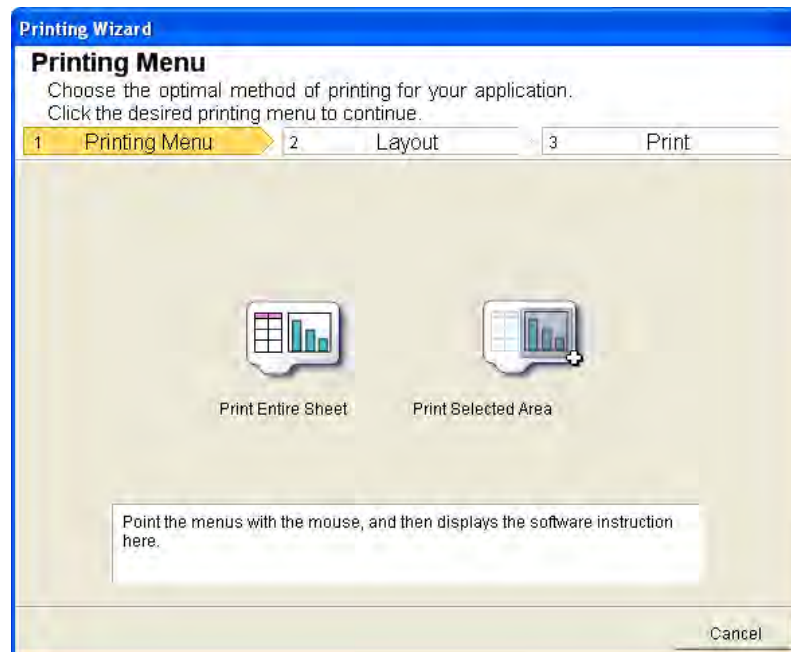


**4.** Click **Print Entire Sheet**.

A message will appear informing you that analysis is in progress.

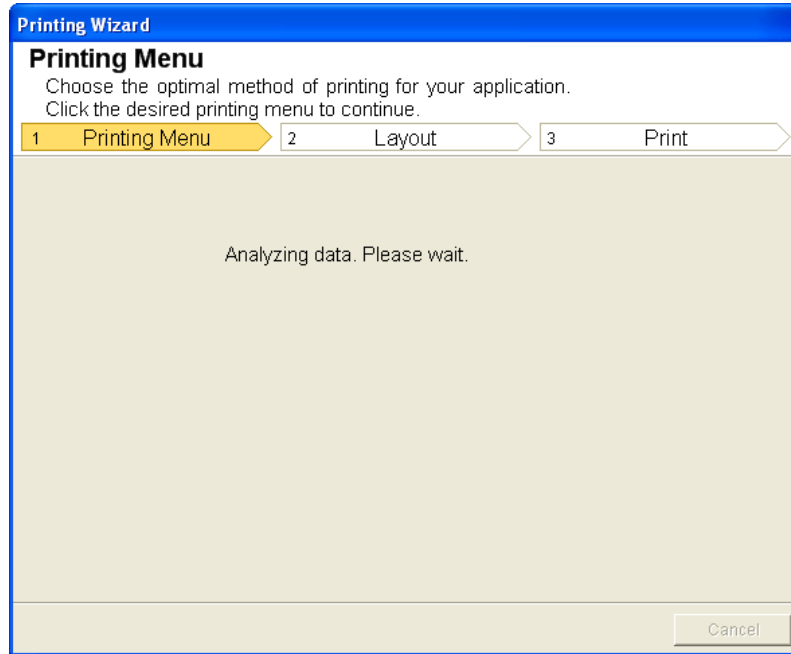

The Layout menu will appear automatically.

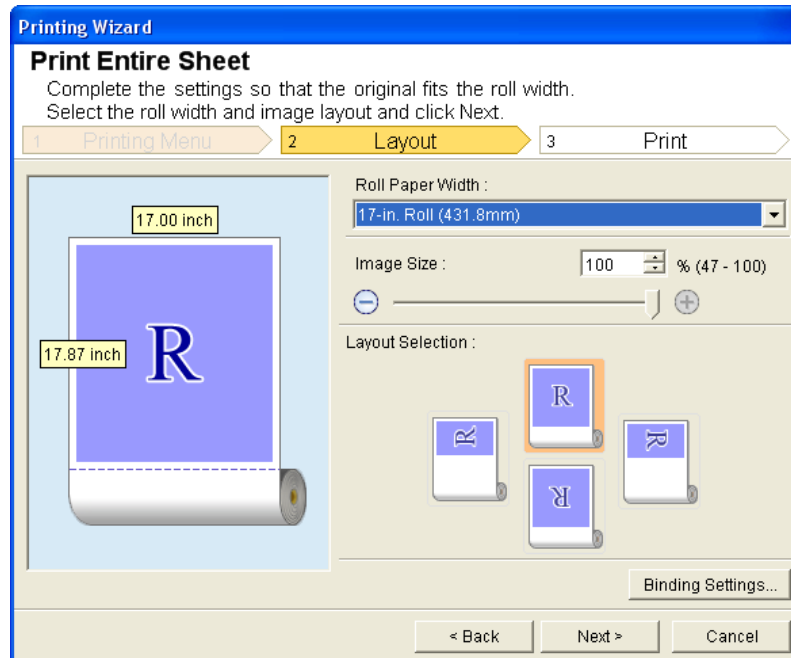


**Note**

- If data analysis requires time, a message dialog will appear. If you select **No**, you will return to the application.

**5.** Select **Roll Paper Width** that is set in the printer.



6. Select image size.
7. Select layout.
8. To configure **Binding**, click the **Binding Settings** button.  
Refer to **Configuring Binding (Excel)** →P.351 for details on the procedure for configuring **Binding**.
9. Select **Next**.

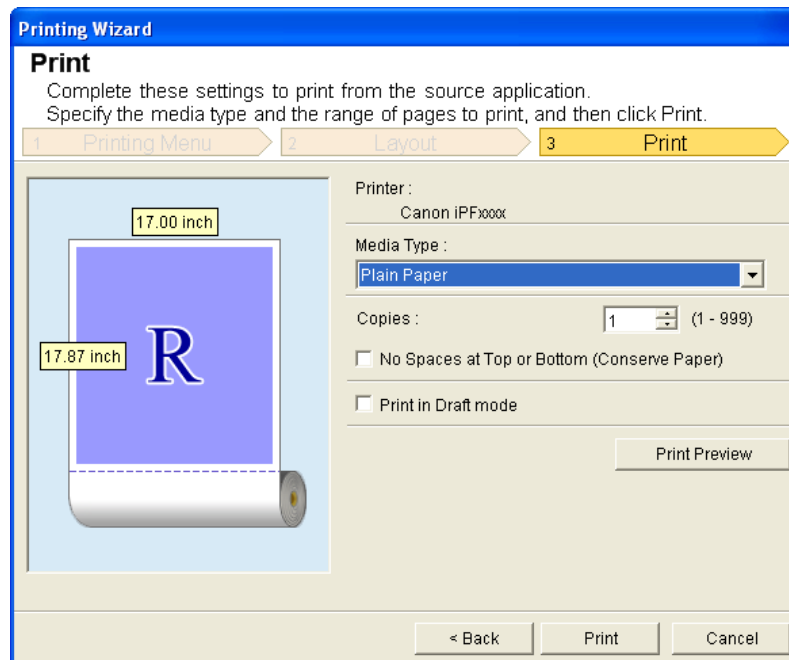

4

10. Select **Media Type**.

11. Enter **Copies**.

**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- When you print to the edge of the roll width, the maximum print length is 18.0m.

12. If the upper and lower margins are too wide, check **No Spaces at Top or Bottom (Conserve Paper)**.  
The upper and lower margins can be checked in **Print Preview**.

347

13. Press **Print** to start printing.


**Important**

- If divided into plural pages, try reducing the data size or the range you select.
- You cannot run **Print** or **Print Preview** if you select it for a worksheet with no data displayed.

## Print Selected Area (Excel)

For resizing the selected range of cells to fit the roll width. Choose this option to enlarge a particular part of the sheet before printing.

1. Start **Microsoft Excel**.
2. If **Start imagePROGRAF Print Plug-In** is displayed, click it.

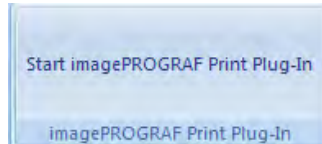


3. Click **Print** from the **imagePROGRAF Print Plug-In** toolbar/ribbon.




### Important

- When more than one worksheet is selected, the **Printing Wizard** cannot be run. Select only one worksheet and click **Print** again.

If a print area is set, a confirmation message dialog box will appear. To print the selected area, cancel the setting of the print area.

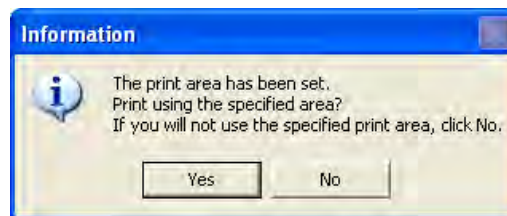

The **Printing Wizard** dialog box is displayed.

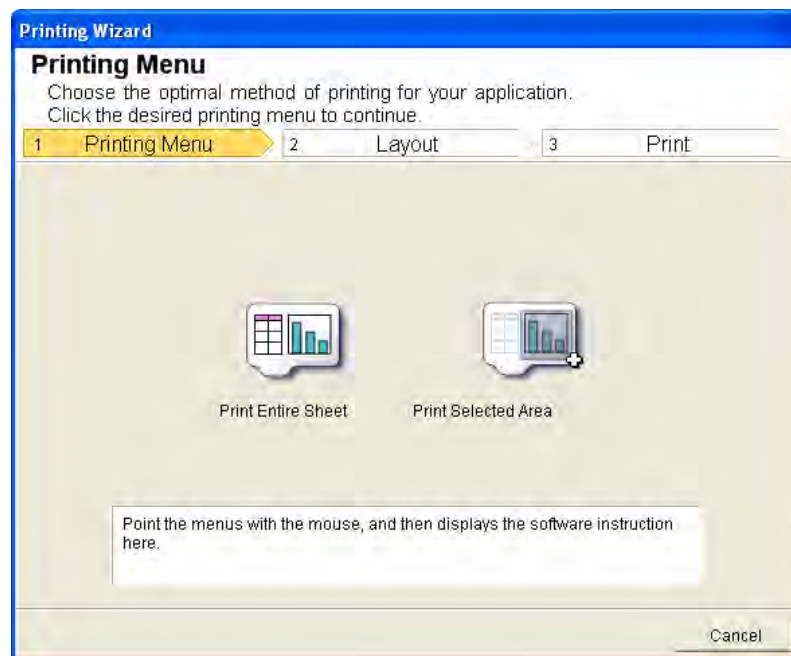


#### 4. Click **Print Selected Area**.




##### Important

- If only one cell is selected, **Print Selected Area** cannot be selected.

A message will appear informing you that analysis is in progress.

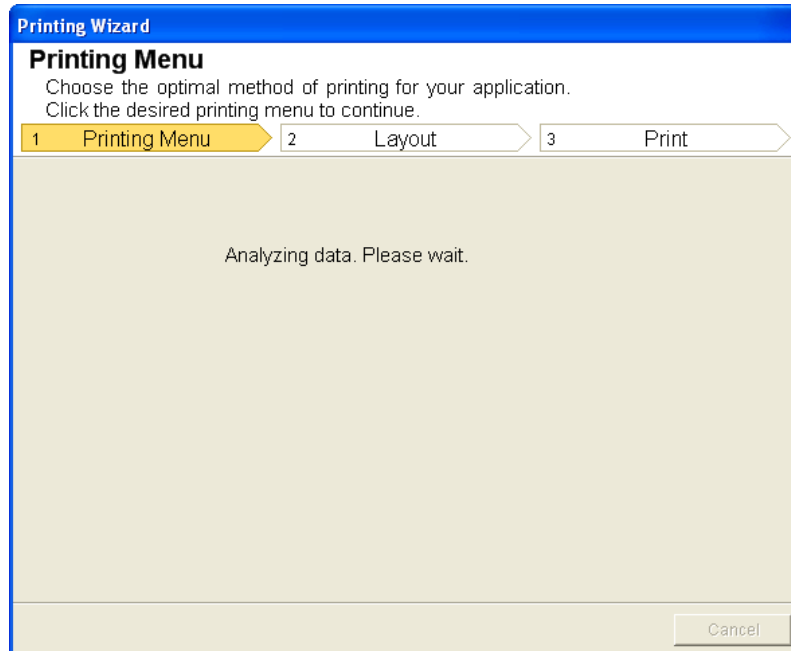

The Layout menu will appear automatically.

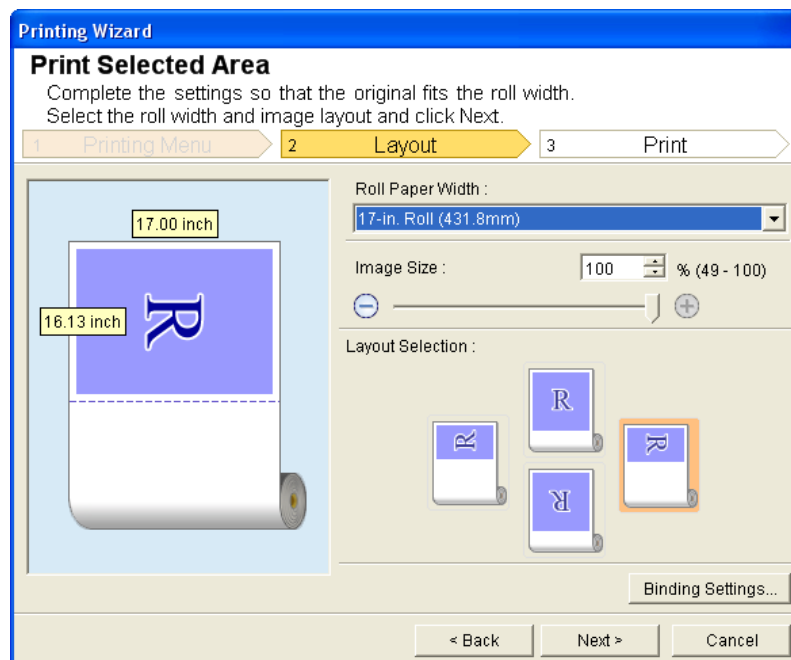


##### Important

- If the range selected in **Excel 2007/2010** is too large, it will not be possible to analyze the data. Select a smaller range and then run the analysis.

**Note**

- If data analysis requires time, a message dialog will appear. If you select **No**, you will return to the application.

5. Select **Roll Paper Width** that is set in the printer.
6. Select image size.
7. Select layout.
8. To configure **Binding**, click the **Binding Settings** button.  
Refer to **Configuring Binding (Excel)** →P.351 for details on the procedure for configuring **Binding**.
9. Select **Next**.

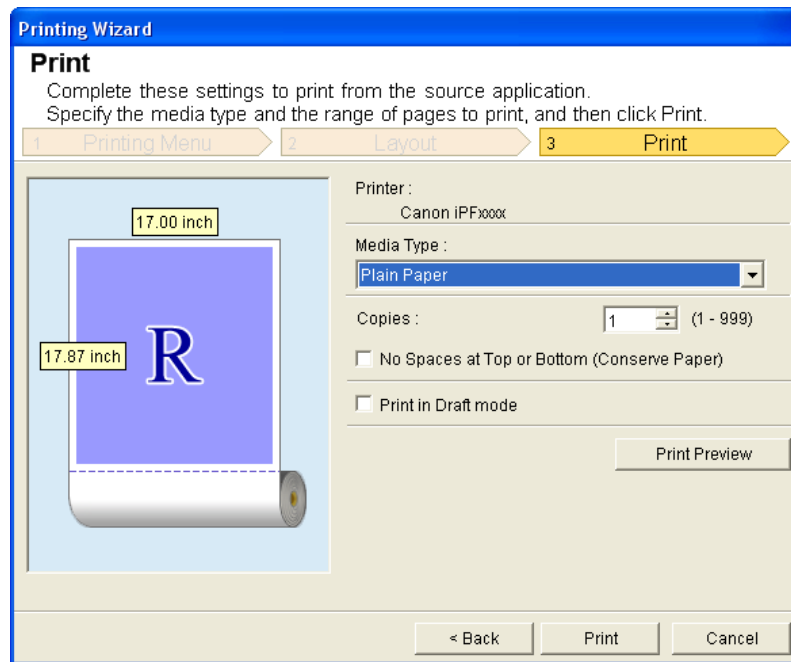

10. Select **Media Type**.

11. Enter **Copies**.

**Note**

- When **Print in Draft mode** is selected, printing is fast but the print quality is poor.
- Press the **Print Preview** button to display the preview screen. You can check and make changes to the layout in the preview screen.
- When you print to the edge of the roll width, the maximum print length is 18.0m.

12. If the upper and lower margins are too wide, check **No Spaces at Top or Bottom (Conserve Paper)**.  
The upper and lower margins can be checked in **Print Preview**.

13. Press **Print** to start printing.



**Important**

- If divided into plural pages, try reducing the data size or the range you select.
- You cannot run **Print** or **Print Preview** if you select it for a worksheet with no data displayed.

## Configuring Binding (Excel)

You can configure **Binding** margins for binding printouts.


1. Configure the settings up to **Layout Selection** in the **Layout** screen in **Print Entire Sheet** or **Print Selected Area**. Refer to **Print Entire Sheet (Excel)** →P.345 and **Print Selected Area (Excel)** →P.348 for the configuration methods.
2. Click the **Binding Settings** button.



**Important**


- You cannot click the **Binding Settings** button in the following situations.
  - When the **Image Size** is set to **100%**
  - When a graph is selected
  - When page breaks have been set
  - When a sheet or cell is protected

Open the **Binding Settings** dialog box.

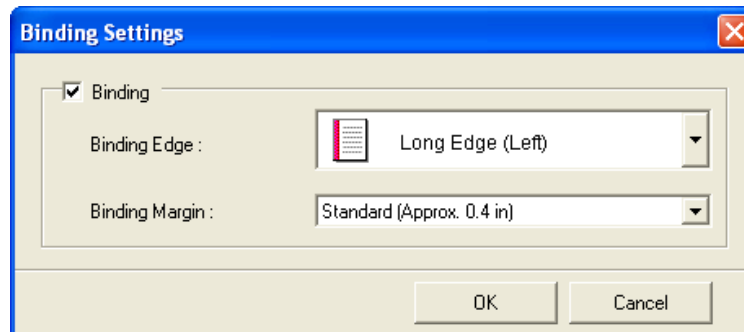

3. If the **Binding** checkbox is not checked, select it to turn binding on.
4. Select **Binding Edge**.
5. Select **Binding Margin**.

- Click the **OK** button.  
Return to the **Layout** screen.

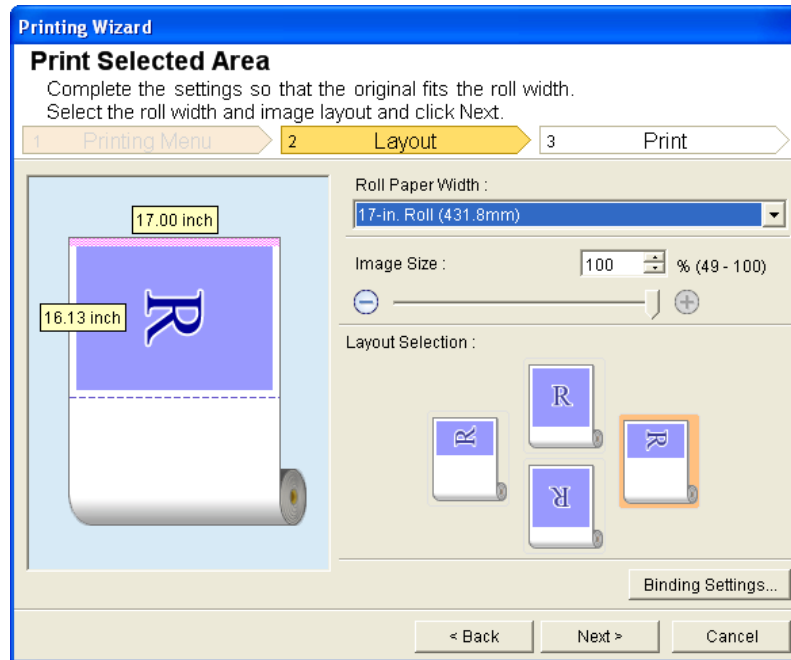


Check that the **Binding** settings are applied in the preview screen.

- Configure the settings in the **Printing Wizard** dialog box.

## Configuring Special Settings

You can configure **Special Settings** from the **imagePROGRAF Print Plug-In** toolbar.

- Click **imagePROGRAF** in the toolbar, and select **Special Settings**.

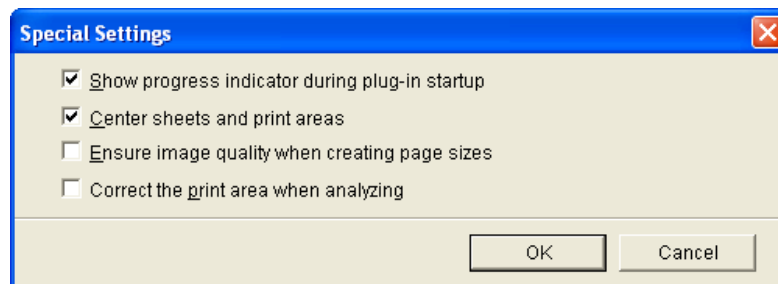

- Turn the checkbox for the item you want to change on or off.

Item	Details
<b>Show progress indicator during plug-in startup</b>	When this setting is off, hides the progress indicator that appears while the plug-in is starting up.
<b>Center sheets and print areas</b>	When this setting is off, printing is performed without changing the position. When this setting is on, printing is performed with the top, bottom, left, and right margins layed out equally. When this setting is off, printing is performed without changing the position.



Item	Details
<b>Center sheets and print areas</b>	This function is only valid in <b>Microsoft Excel</b> .
<b>Ensure image quality when creating page sizes</b>	When this setting is on, documents are created at the maximum size. This reduces the enlargement ratio during actual printing, which minimizes degradation of the quality of photos, etc. This function is only valid in [ <b>Microsoft PowerPoint</b> .
<b>Correct the print area when analyzing</b>	For data that cannot be processed with usual data analysis, the print area is corrected and then the data is processed. When data analysis fails, you may be able to print by turning on this checkbox. This function is only valid in <b>Microsoft Excel</b> .

3. Click **OK** to close the **Special Settings** dialog box.

## HDI Driver

The Features of HDI Driver .....	354
Operating Environment .....	354
Installation Procedure .....	355
Installing with the Canon Installer .....	355
Installing with the Add-A-Plotter Wizard .....	362
Opening the Plotter Configuration Dialog Box .....	367
Opening from the AutoCAD File Menu .....	368
Opening from the Start Menu .....	369
Plotter Configuration Editor Dialog Box .....	371
Media Source and Media Size Settings .....	372
Graphics Settings .....	373
Opening the Custom Properties Dialog Box .....	376
Custom Properties dialog box .....	378
Paper Detailed Settings .....	380
Output Method Dialog Box .....	382
Color Compatibility Dialog Box .....	382
Printing .....	383

4

## The Features of HDI Driver

The main features of HDI Driver are as follows.

- A special HDI (Heidi Device Interface) compatible printer driver for the Autodesk, Inc. software applications for AutoCAD and AutoCAD LT architecture (hereafter referred to together as "AutoCAD").
- You can set up the print job with the most appropriate settings for the media and print clear, sharp printouts of plans and diagrams created with AutoCAD.

## Operating Environment

The HDI driver operating environment is as follows.

- Compatible Operating System  
Windows XP, Windows Vista, Windows 7
- Compatible AutoCAD Version  
AutoCAD 2005, AutoCAD LT2005, AutoCAD 2006, AutoCAD LT2006,  
AutoCAD 2007, AutoCAD LT2007, DWG TrueView 2007, AutoCAD 2008, AutoCAD LT2008, DWG TrueView  
2008,  
AutoCAD 2009, AutoCAD LT2009, DWG TrueView 2009, AutoCAD 2010, AutoCAD LT2010, DWG TrueView  
2010,  
AutoCAD 2011, AutoCAD LT2011, DWG TrueView 2011,  
AutoCAD 2008(x64), DWG TrueView 2008(x64), AutoCAD 2009(x64), AutoCAD LT2009(x64), DWG TrueView  
2009(x64),  
AutoCAD 2010(x64), AutoCAD LT2010(x64), DWG TrueView 2010(x64)  
AutoCAD 2011(x64), AutoCAD LT2011(x64), DWG TrueView 2011(x64)



### Note

- The supported OS version differs for each version of AutoCAD. Check with Autodesk for details.

## Installation Procedure

There are two ways to install the HDI driver.

- Installing with the Canon Installer →P.355
- Installing with the Add-A-Plotter Wizard →P.362

## Installing with the Canon Installer

The Canon installer opens and displays as soon as you start the User Software CD-ROM provided with the printer. Follow the procedure below to perform the installation from this screen.

1. Mount the **User Software CD-ROM** in the CD-ROM drive and start the Canon installer.




### Note

- If the Canon installer screen does not appear, double-click the **CD-ROM** icon from the **My Computer** to open the installer screen.


2. Select **Install Individual Software** in the Canon installer **Setup Menu**.




The **Installation List** appears. Click the **Install** button of the **imagePROGRAF HDI Driver**.

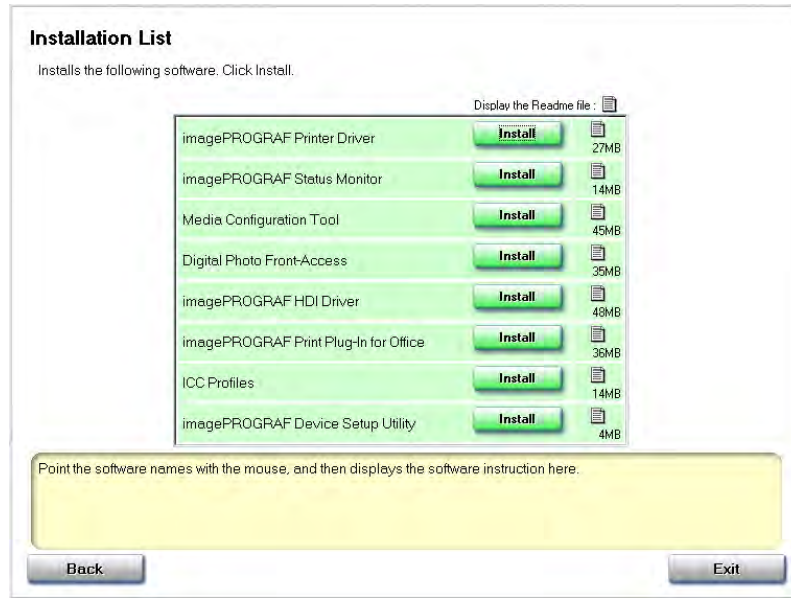

The driver setup screen appears. Click the **Next** button.

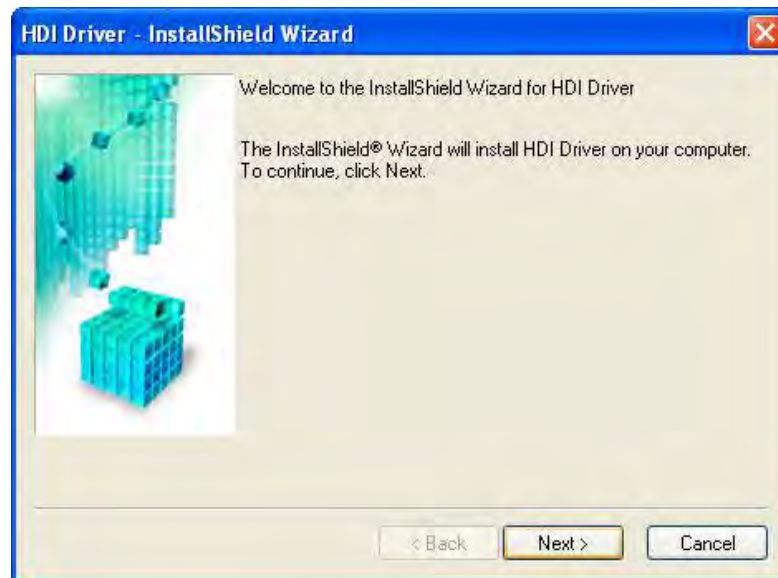

3. After you have read the Licensing Agreement, select **I accept the terms of the license agreement** and click the **Next** button.

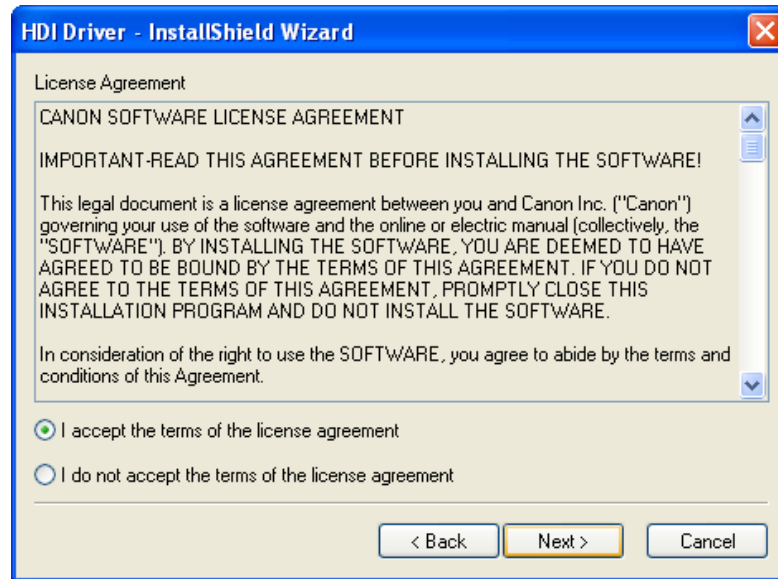


4. Confirm that the installed AutoCAD is compatible with your computer environment. Click the **OK** button.




**Note**

- Confirm that the installed AutoCAD is compatible with your computer environment.


5. The **Ready to Install the Program** screen opens. Click the **Install** button.

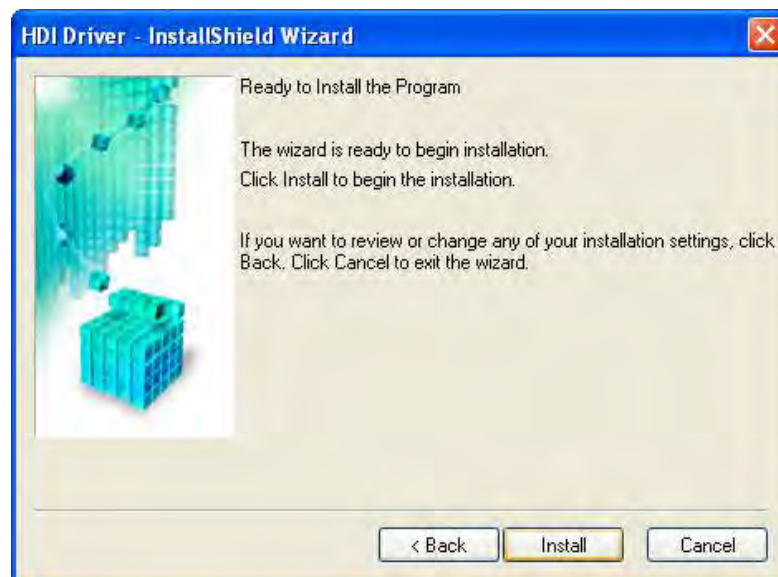

- The HDI driver files are copied to the **Drv** folder where the AutoCAD program files are stored. Click the **Finish** button. This completes the setup of the HDI driver.

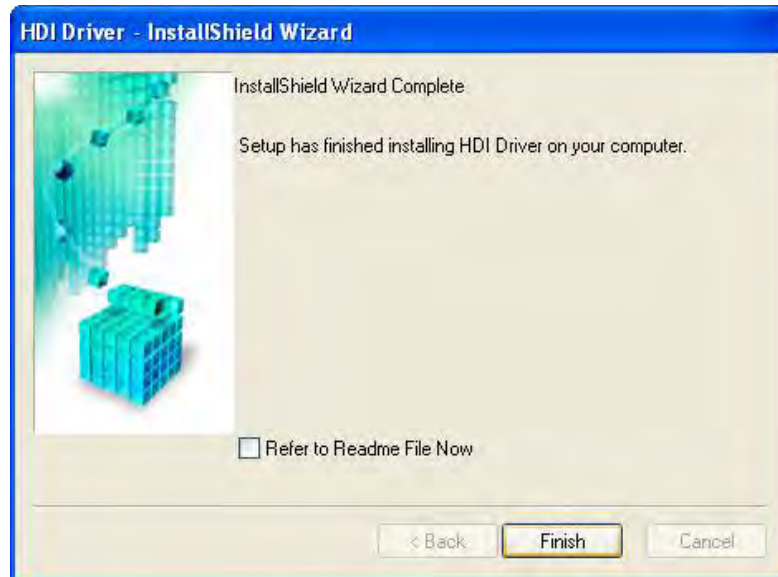

- After AutoCAD starts, select **Plotter Manager** from the **File** menu. The **Plotters** window opens. Click the **Add-A-Plotter Wizard** icon.

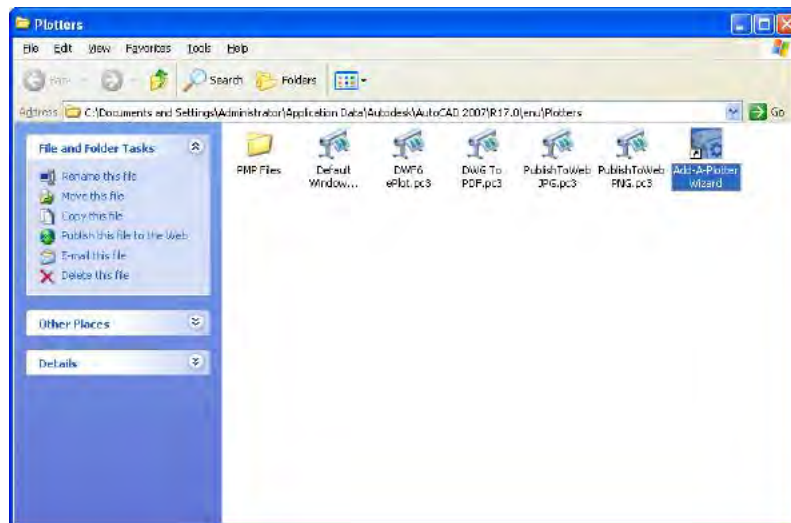


4

358




8. The **Add Plotter - Introduction Page** screen opens. Check the displayed screen and then click the **Next** button.

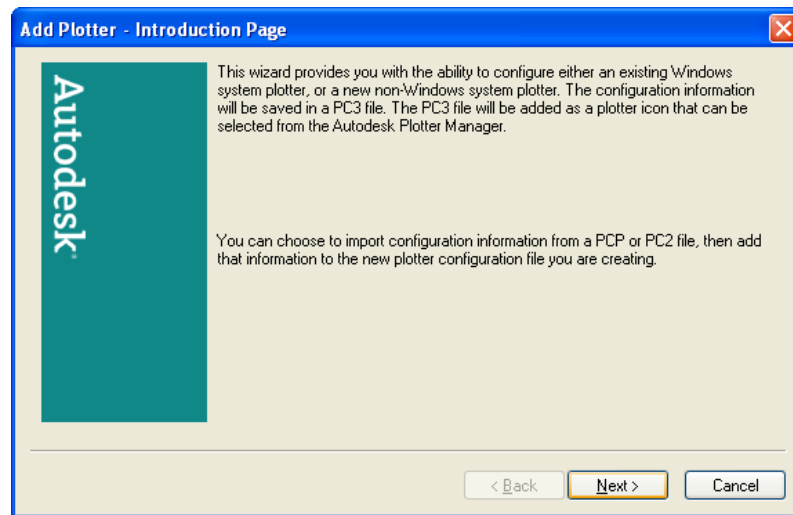


**Note**

- To open the **Add-A-Plotter Wizard** you can also click **Start > Control Panel > Autodesk Plotter Manager >** and then double-click the **Plotter Wizard** icon in the **Plotters** window.


9. **Add Plotter - Begin** screen opens. Select **My Computer** then click the **Next** button.

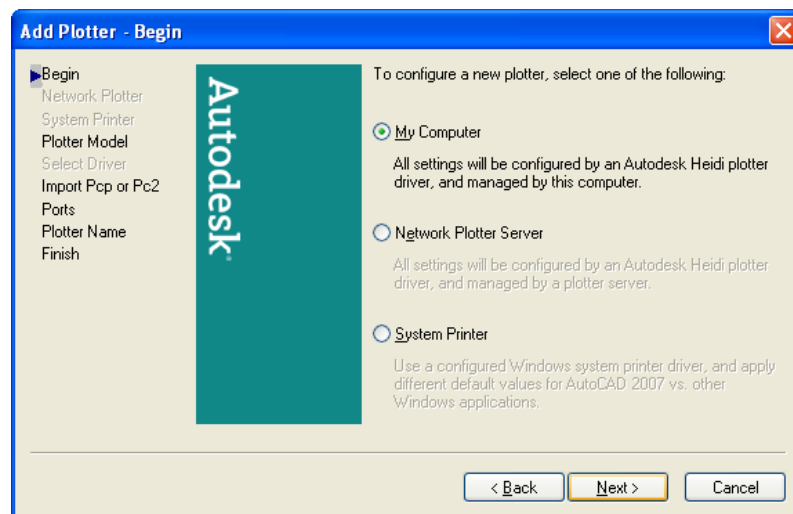

- 10.** The **Add Plotter - Plotter Model** screen opens. Make sure that **Canon Inc.** is selected in the list of **Manufacturers**, and for the **Models** select the name of the printer that you want to install then click the **Next** button.

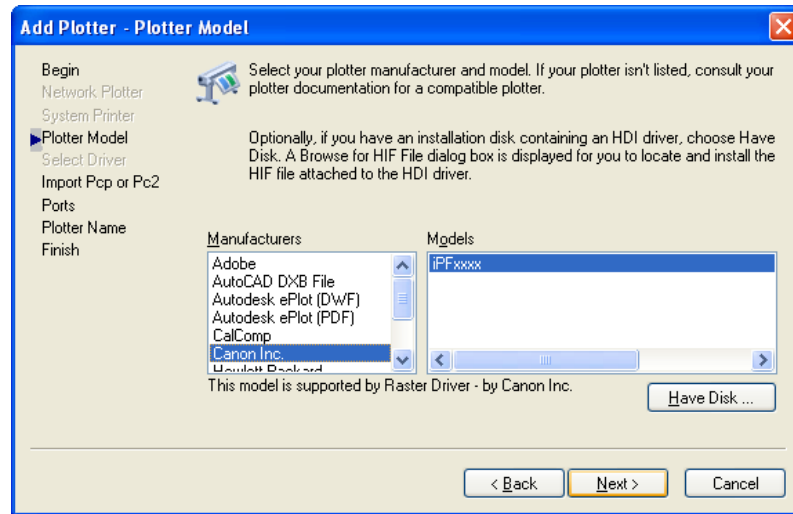


- 11.** The **Add Plotter - Import Pcp or Pc2** screen opens. Click the **Next** button.

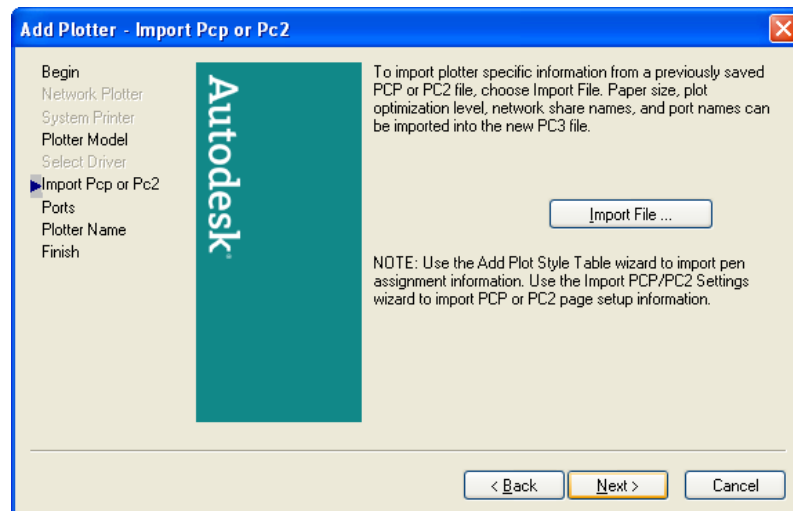**Note**


- If you want the installer to read plotter information from previously stored PCP or PC2 files, click the **Import File** button.

- 12.** The **Add Plotter - Ports** screen opens. Make sure that **Plot to a port** is selected, select the port that you want to use for the plotter, then click the **Next** button.

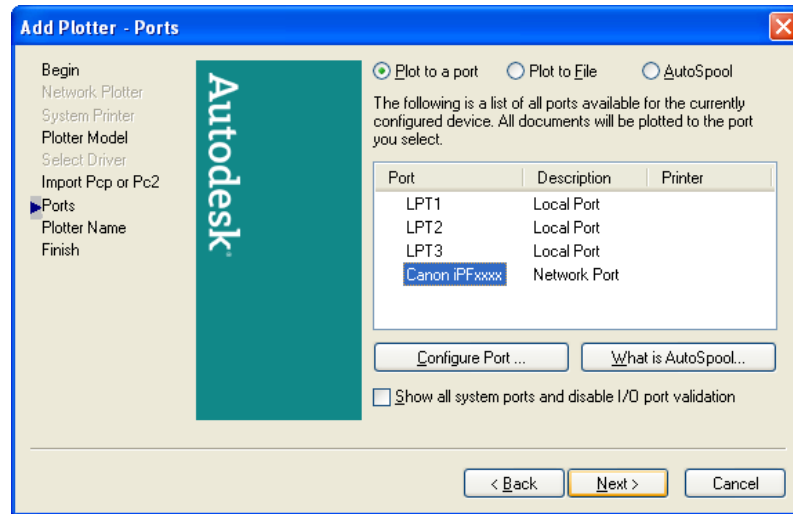**Note**


- In the **Add Plotter - Ports** screen, it is recommended to select **Network Port**. If you select **Local Port**, the AutoCAD warning message may appear when printing.

- 13.** The **Add Plotter - Plotter Name** screen opens. Click the **Next** button.

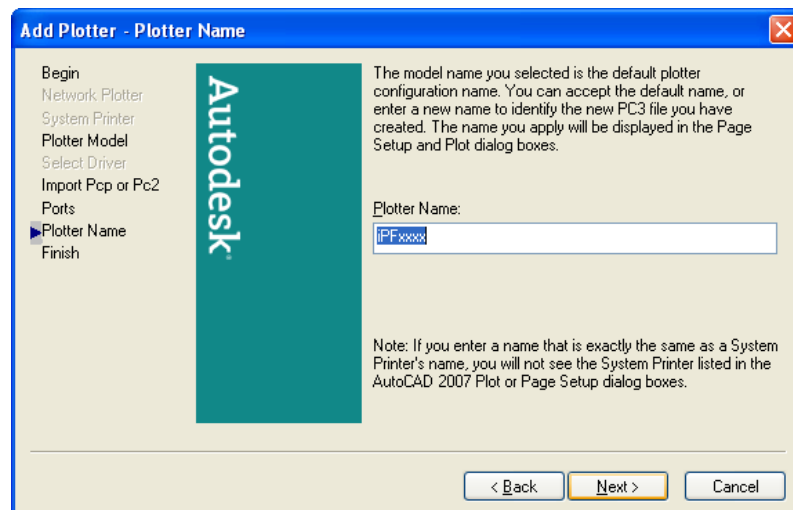**Note**

- You can change the **Plotter Name** setting here, but you will normally leave it as it is and go to Step 14.

- 14.** The **Add Plotter - Finish** screen opens. Click the **Finish** button. This completes the installation of the HDI driver.

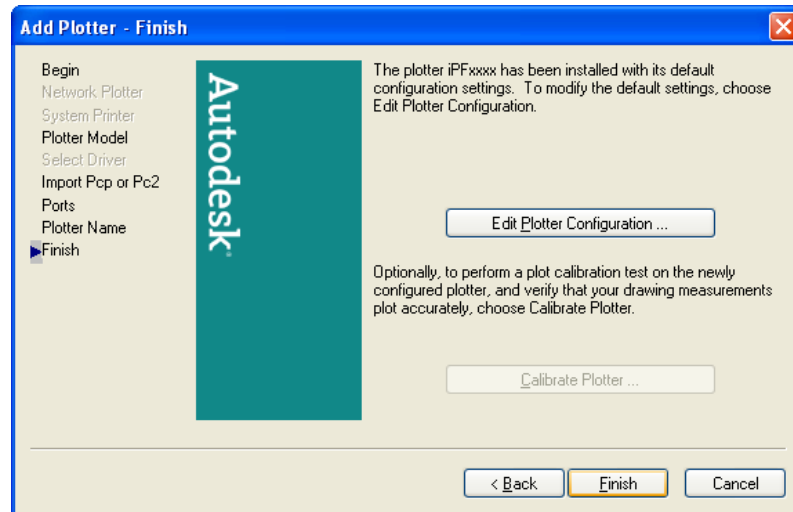


- 15.** Clicking the **Finish** button closes the **Installation List** and **Setup Menu** and ejects the User Software CD-ROM from the CD-ROM drive.


## Installing with the Add-A-Plotter Wizard

Follow the procedure below to use the **Add-A-Plotter Wizard** to install the HDI driver without the Canon installer.

- 1.** After AutoCAD starts, select **Plotter Manager** from the **File** menu. The **Plotters** window opens. Click the **Add-A-Plotter Wizard** icon.

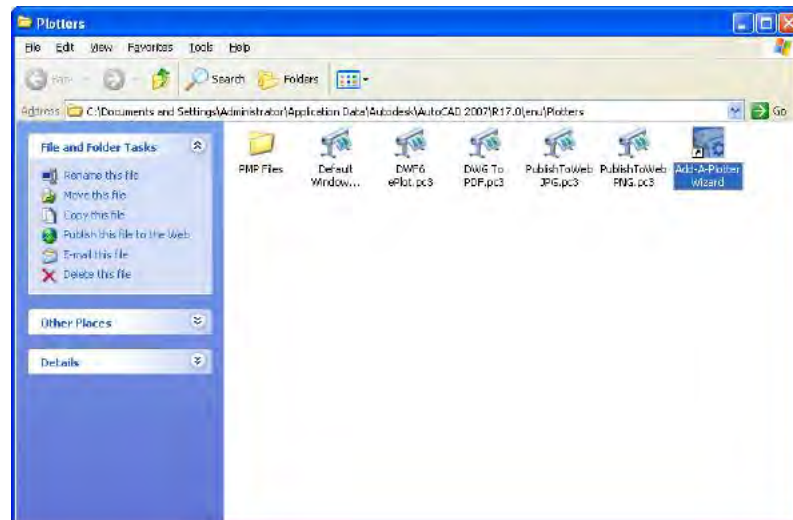

2. The **Add Plotter - Introduction Page** screen opens. Check the displayed screen and then click the **Next** button.

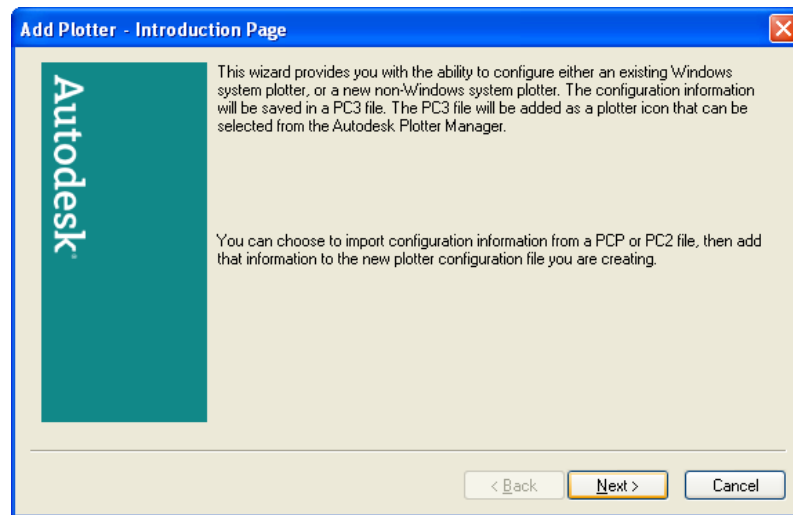


**Note**

- To open the **Add-A-Plotter Wizard** you can also click **Start > Control Panel > Autodesk Plotter Manager >** and then click the **Add-A-Plotter Wizard** icon in the **Plotters** window.

4


3. The **Add Plotter - Begin** screen opens. Select **My Computer** then click the **Next** button.

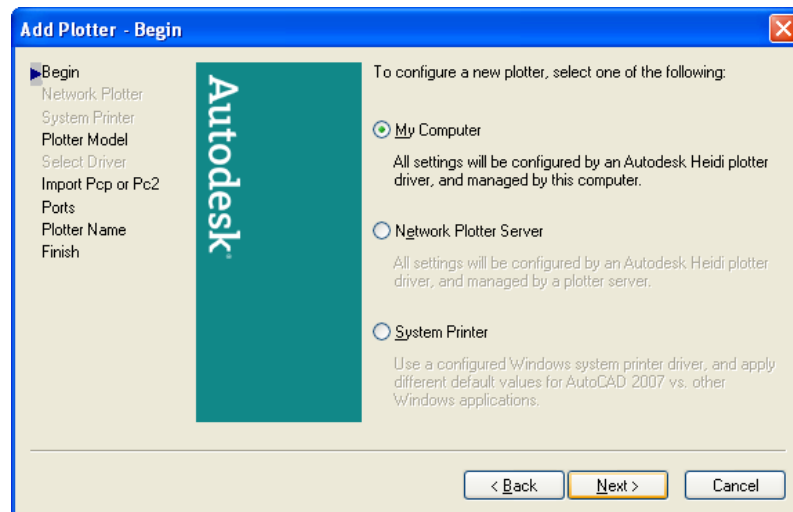

4. The **Add Plotter - Plotter Model** screen opens. Mount the **User Software CD-ROM** in the CD-ROM drive.

363

5. On the **Add Plotter - Plotter Model** screen, click the **Have Disk** button.

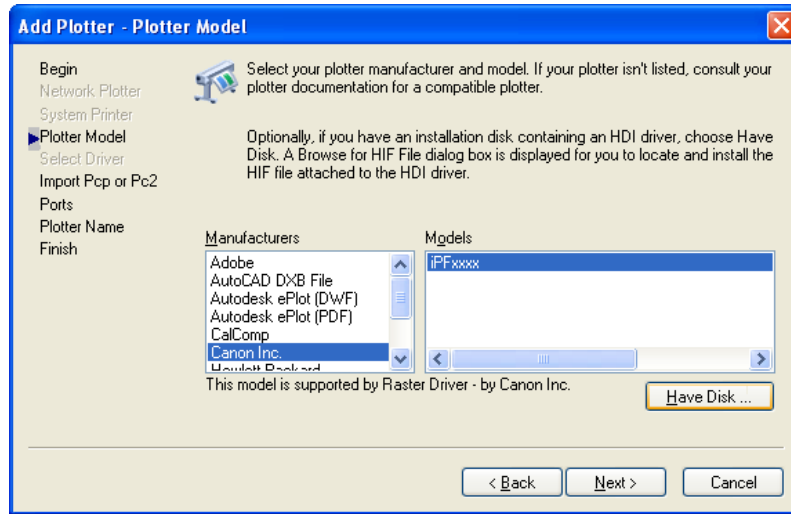

6. The **Open** dialog box opens. From the **Look in** box, select the CD-ROM drive, and then browse to the folder that holds the hif file.  
Select the hif file then click the **Open** button.




**Note**

- The hif format file is contained in the following folder.  
 \HDI Driver\English\2007 (AutoCAD Version 2007)




7. The display returns to the **Add Plotter - Plotter model** screen. Select **Canon Inc.** from the list of **Manufacturers**, select the name of the printer for **Models**, and then click the **Next** button.

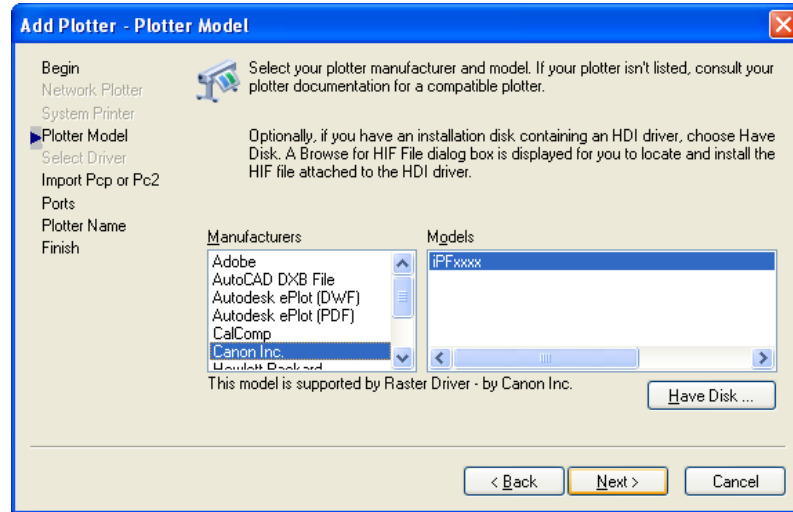

4

8. The **Add Plotter - Import Pcp or Pc2** screen opens. Click the **Next** button.

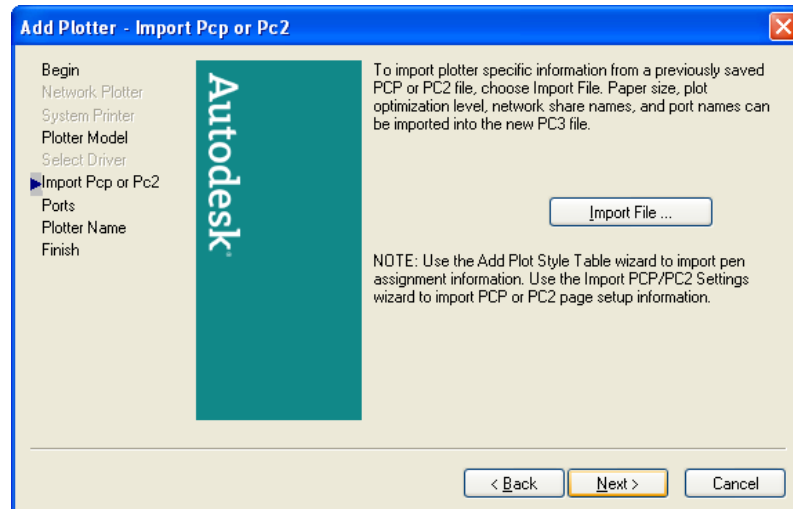


#### Note

- If you want the installer to read plotter information from previously stored PCP or PC2 files, click the **Import File** button.

365

9. The **Add Plotter - Ports** screen opens. Make sure that **Plot to a port** is selected, select the port that you want to use for the plotter, then click the **Next** button.

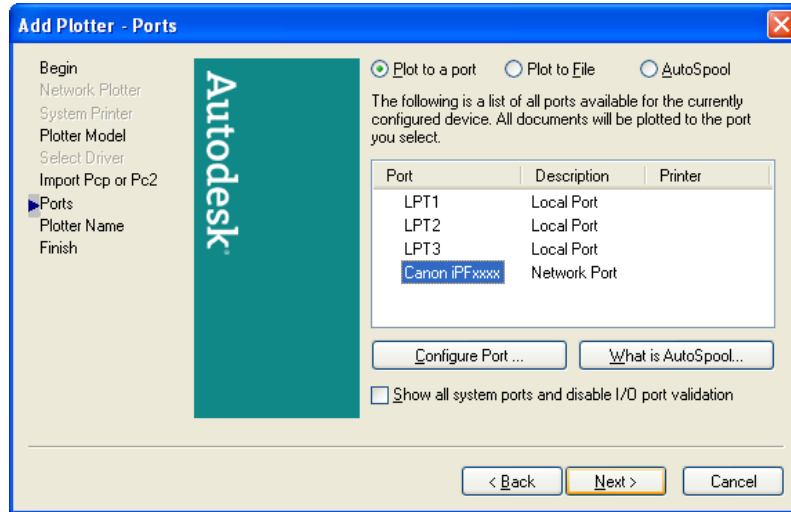**Note**


- In the **Add Plotter - Ports** screen, it is recommended to select **Network Port**. If you select **Local Port**, the AutoCAD warning message may appear when printing.

10. The **Add Plotter - Plotter Name** screen opens. Click the **Next** button.

**Note**

- You can change the **Plotter Name** setting here, but you will normally leave it as is and go to Step 11.

- 11.** The **Add Plotter - Finish** screen opens. Click the **Finish** button. This completes the installation of the HDI driver.

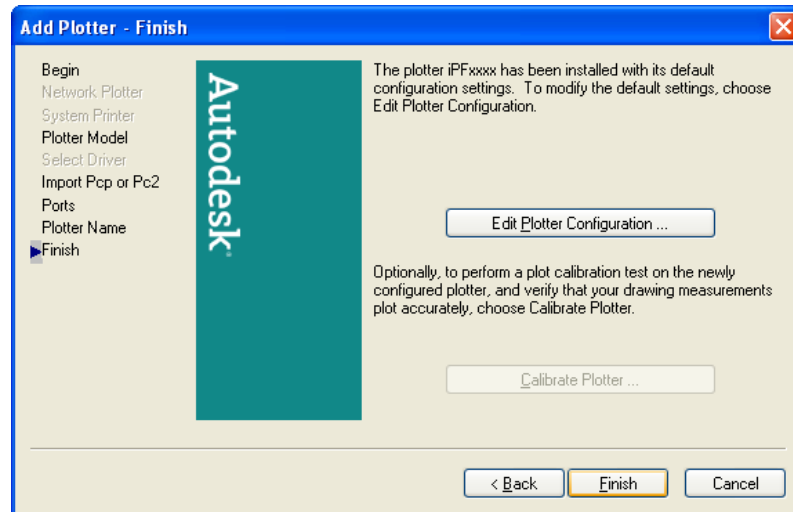

4

- 12.** Remove the User Software CD-ROM from the CD-ROM drive.

## Opening the Plotter Configuration Dialog Box

You can open the **Plotter Configuration Editor** dialog box by two ways.


- Opening from the AutoCAD File Menu →P.368
- Opening from the Start Menu →P.369

367

## Opening from the AutoCAD File Menu

Follow the procedure below to open the **Plotter Configuration Editor** dialog box from the AutoCAD **File** menu.


1. Select **Plot** from the AutoCAD **File** menu. The **Plot** dialog box opens.  
Check the **Name** setting under **Printer/plotter** and confirm that **iPFxxxx.pc3** (the name of the printer you use) is displayed.  
Click the **Properties** button.

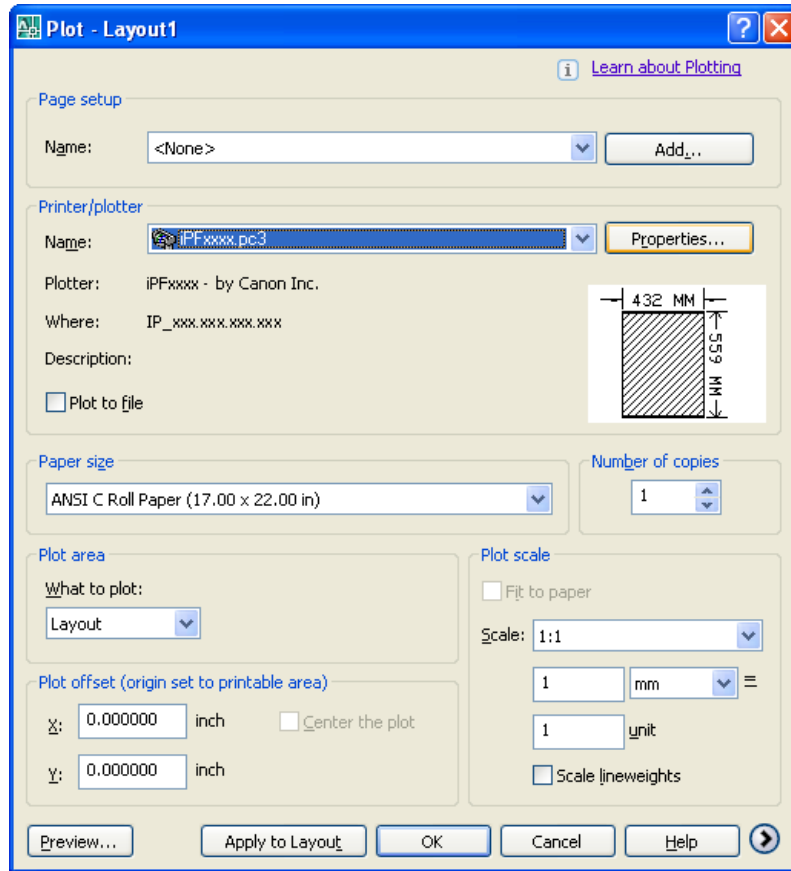

### Note

- If any other printer name is selected, select the name of the printer that you want to use from the **Name** list.
- The names of the printers installed when the HDI driver was installed are in the **Name** list.

2. The **Plotter Configuration Editor** dialog box opens.

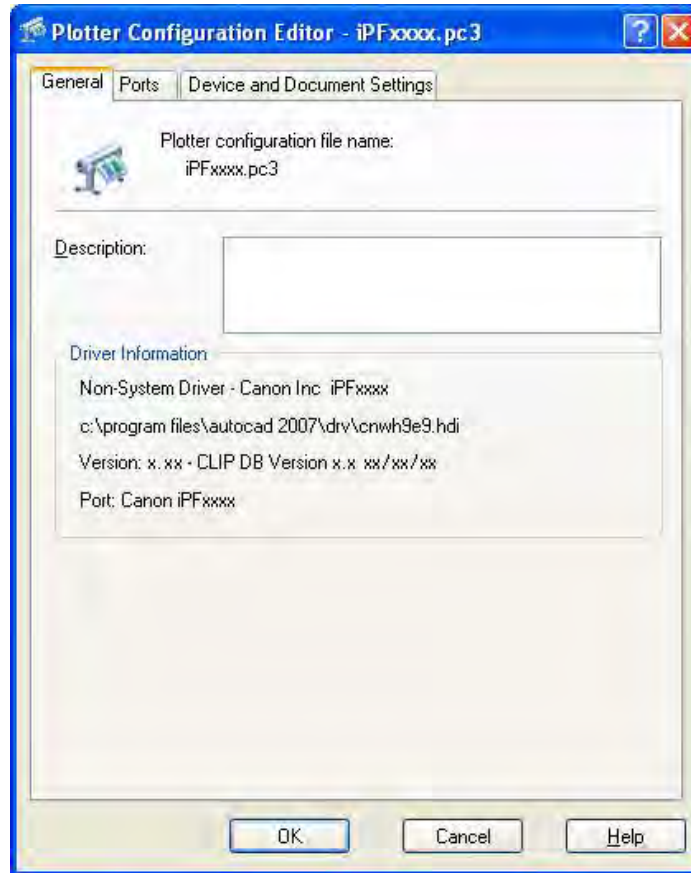

4


## Opening from the Start Menu

Follow the procedure below to open the **Plotter Configuration Editor** dialog box from the **Start** menu.


1. Click the **Start** button then select **Control Panel**.  
The **Control Panel** window opens.

369

2. Double-click the **Autodesk Plotter Manager** icon.  
The **Plotters** window opens.  
Double-click the **iPFxxxx.pc3** icon (the icon name is the name of the printer you use) to open.

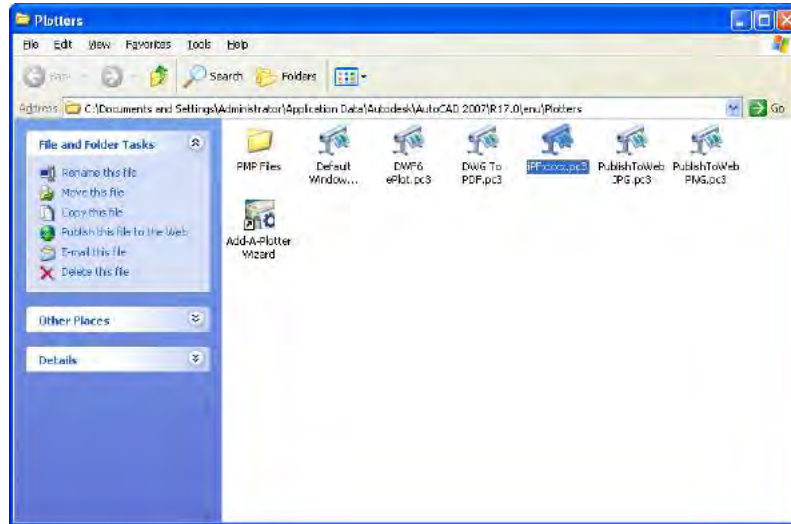

3. The **Plotter Configuration Editor** dialog box opens.

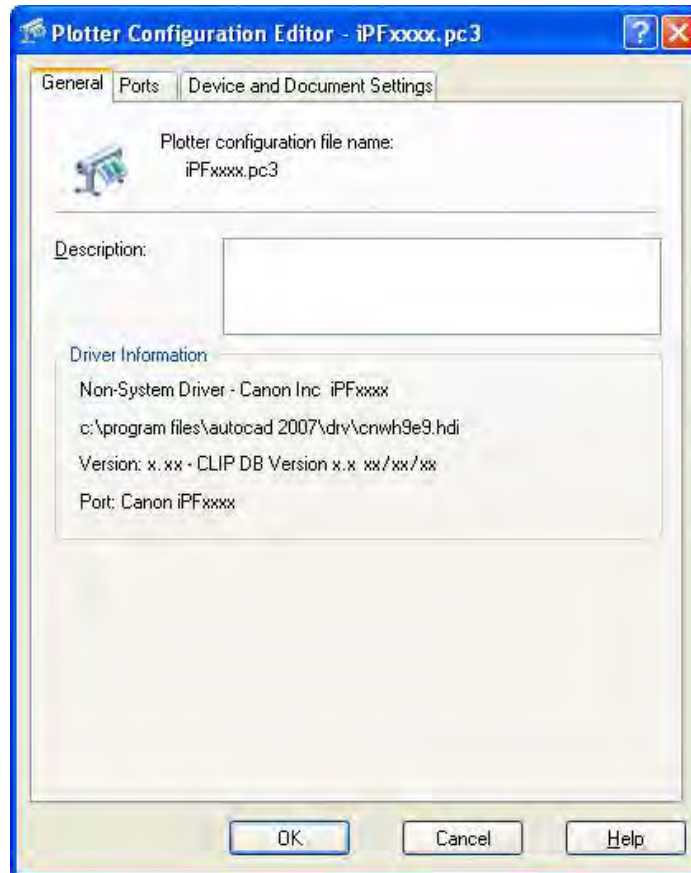

4



## Plotter Configuration Editor Dialog Box

The **Plotter Configuration Editor** dialog box has three sheets.

The **Plotter Configuration Editor** dialog box display can be manipulated by selecting the items on these sheets or in the Explorer tree.




### Note

- For more details about the **General** sheet and the **Ports** sheet, please refer to the AutoCAD manual.

## Device and Document Settings Sheet

Use this sheet to perform the main printing settings. The settings for each item are shown in a tree structure on this sheet. When you select an item the screen display changes so you make changes for the resolution and other graphic settings, the media type, the color matching and **Custom Properties** settings, the drying time and the roll paper margin for safety and other detailed media settings.

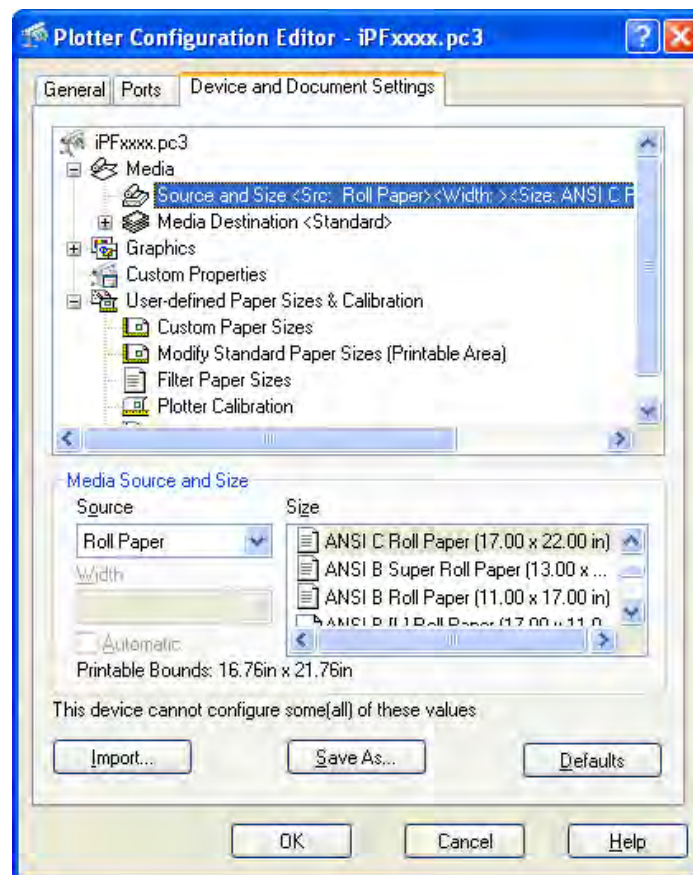


The available settings are as follows.

- Media Source and Media Size Settings →P.372
- Graphics Settings →P.373
- Custom Properties dialog box →P.378

## Media Source and Media Size Settings

Follow this procedure to select the media source and the media size.

1. Press the **Source and Size** below **Media**.  
The **Device and Document Settings** sheet opens and switches to the display that presents the media source and size settings.

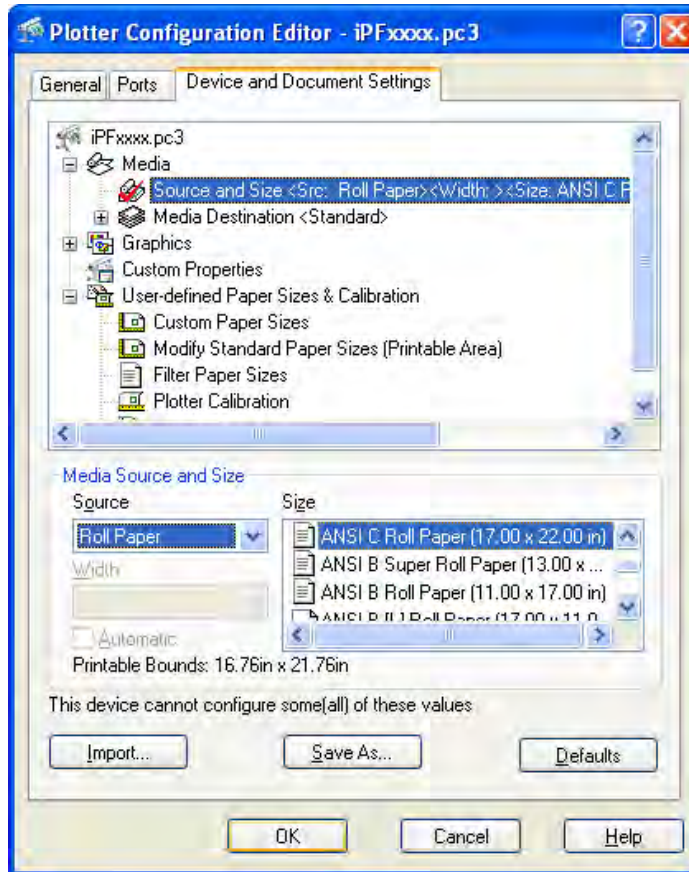

2. From the **Source** list, select the media source.
3. From the **Size** list, select the media size.



### Note

- When you change the **Source** setting, the **Size** setting returns automatically to its default settings. Every time you adjust the **Source** setting, you should also re-adjust the **Size** setting.

4. Click the **OK** button.


## Graphics Settings

You can perform the graphics settings.

### Vector Graphics settings

Use these settings to adjust the print mode and resolution.

1. Click the **Vector Graphics** below **Graphics**.  
The **Device and Document Settings** sheet opens and switches to the Vector Graphics settings.

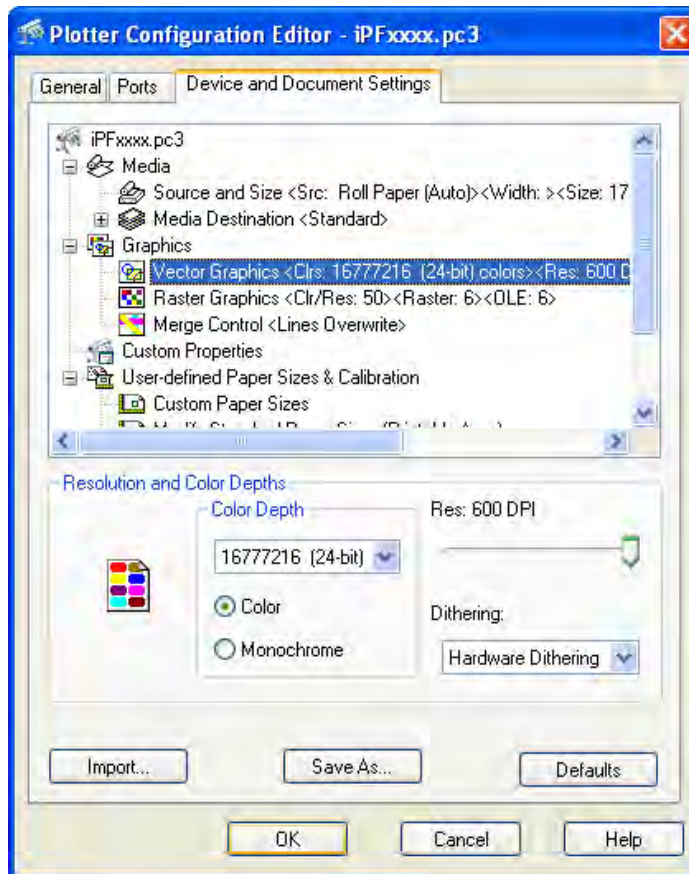

2. Select **Color** or **Monochrome**.
3. Select a setting for **Color Depth** from the list.  
**Color Depth** presents the following items for selection.

Setting	Details
<b>Color</b>	16777216 (24-bit) colors
<b>Monochrome</b>	16777216-Level grayscale

4. Move the **Res** slider to adjust the settings.  
**Res** presents the following items for selection.

Setting	Details
<b>300 DPI</b>	Due to this low resolution, the image will print faster but its texture will appear rough.
<b>600 DPI</b>	This high resolution will achieve the best results.

5. Select **Dithering**.

Setting	Details
<b>Hardware Dithering</b>	Perform dithering on the printer.


6. Click the **OK** button.

4

**Raster Graphics settings**

Use these settings to adjust the balance between the print quality, memory consumption, and the print speed of raster graphics.

1. Click the **Raster Graphics** below **Graphics**.  
 The **Device and Document Settings** sheet opens and switches to the Raster Graphic settings.

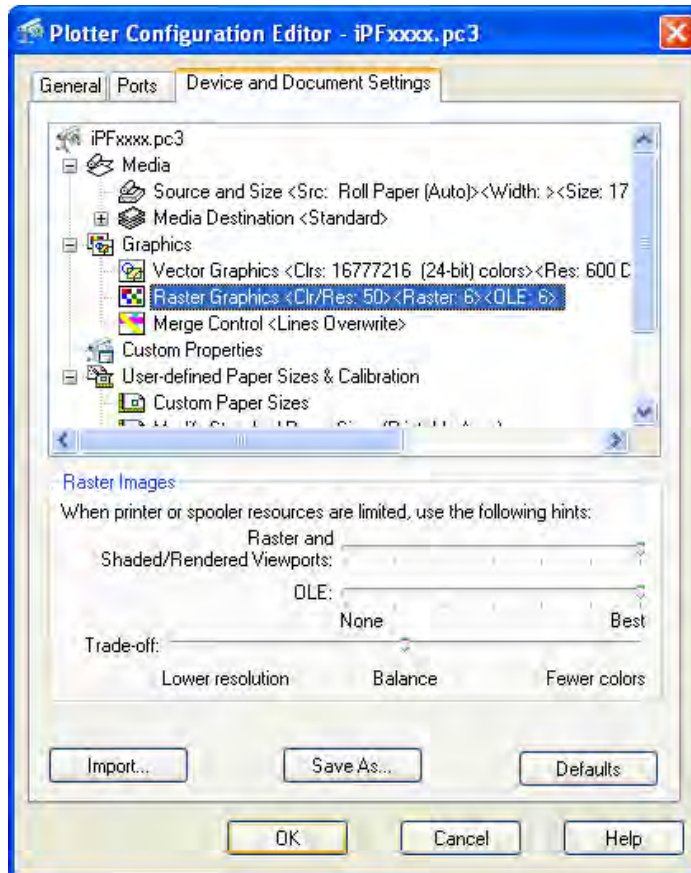

2. Move the slider for each item to the left or right to adjust the settings.


Setting	Details
<b>Raster and Shaded/Rendered Viewports</b>	Use these settings to adjust the balance between print quality, memory consumption, and the print speed. If set to <b>None</b> , you cannot print raster images. Printing time will take longer the higher you set the <b>Best</b> setting.
<b>OLE</b>	Use these settings to adjust the balance between print quality, memory consumption and the print speed when printing a OLE object. If set to <b>None</b> , you cannot print OLE objects. Printing time will take longer the higher you set the <b>Best</b> setting.
<b>Trade-off</b>	Use these settings to lower the print quality by a certain degree if the print job cannot be completed at the best quality.

3. Click the **OK** button.

## Merge Control Settings

Use these settings to merge intersecting lines.

1. Click the **Merge Control** below **Graphics**.  
The **Device and Document Settings** sheet opens and switches to the Merge Control settings.

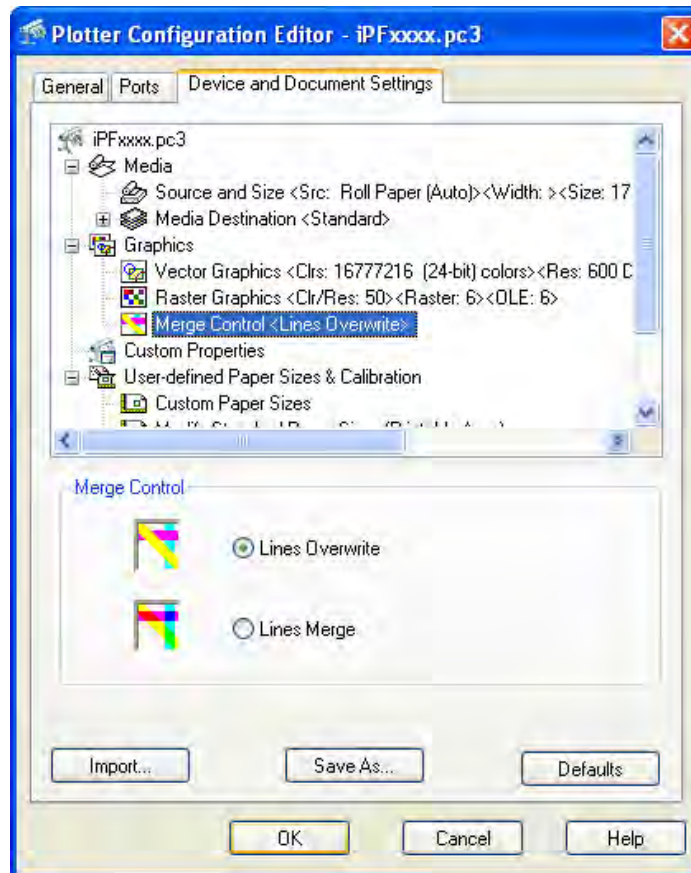

Setting	Details
<b>Lines Overwrite</b>	Where the lines intersect, the line that is printed last is visible, but the lines below it are not visible.



Setting	Details
<b>Lines Merge</b>	Where the lines intersect, the line colors merge.

2. Click the **OK** button.

## Opening the Custom Properties Dialog Box

Follow the procedure below to open the **Custom Properties** dialog box.

1. In the **Plotter Configuration Editor** dialog box, select and open the **Device and Document Settings** sheet.




### Note

- For more details about how to open the **Plotter Configuration Editor** dialog box, see "Opening the Plotter Configuration Dialog Box." →P.367 .


2. Click **Custom Properties**.

3. The **Device and Document Settings** sheet opens and switches to the display that presents the custom properties settings.  
Click the **Custom Properties** button.

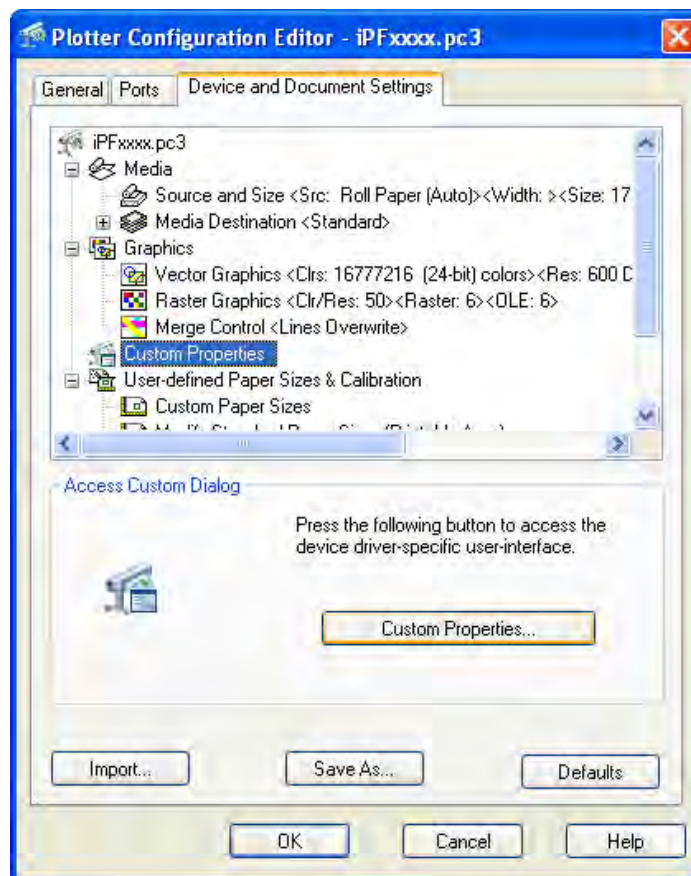




4. The **Custom Properties** dialog box opens.

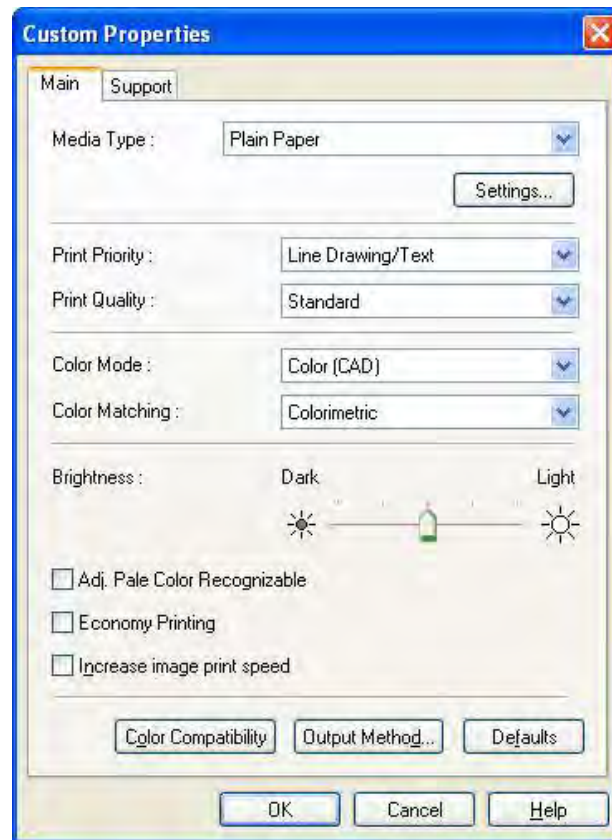

## Custom Properties dialog box

You can perform the settings for the media type, color matching, brightness, and other settings.

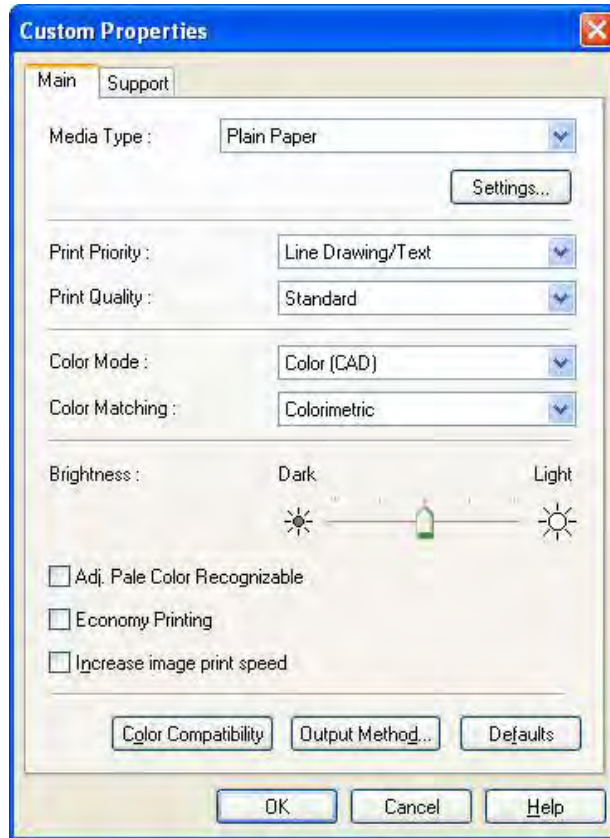

4

### Media Type

This allows you to select the media type.



#### Note

- Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

### Print Priority

Select a print quality to suit the print job.

Setting	Details
<b>Image</b>	This mode achieves the best results for printing photographic images and illustrations.
<b>Line Drawing</b>	This mode is best for printing CAD drawings with fine lines or wall newsheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .



#### Note

- The number of settings available for selection depends on the media type.

## Print Quality

Select a print quality to suit the print job.

Setting	Details
<b>Highest</b>	Gives priority to the highest possible image quality.
<b>High</b>	Prints images of high quality.
<b>Standard</b>	Balances quality with the need for faster printing.
<b>Draft</b>	Gives priority to high speed printing.



### Note

- The availability of settings is determined by the media type and print priority selections.

## Color Mode

You can select a color mode to suit the print job.

Setting	Details
<b>Color</b>	Enables color printing.
<b>Monochrome</b>	Disables color printing and converts image from continuous color to grayscaled monochrome.
<b>Color (CAD)</b>	Prints lines in the best color possible so they are easy to see.
<b>Monochrome (BK ink)</b>	Select to print all lines with black ink.



### Note

- The availability of settings depends on the print priority and media type selections.

## Color Matching

You can select a color matching to suit the print job.

Setting	Details
<b>Perceptual</b>	This item does color matching with priority on color tones to reproduce the best results in printing photographic images.
<b>Colorimetric</b>	This item places priority on reducing the differences between the color tones you seen on the computer screen and those you see in the printout, so the printout more closely resemble the colors of the original.
<b>Saturation</b>	This item does color matching with priority on saturation.
<b>None</b>	Color matching is not performed.



### Note

- Color Matching** is available for selection only when **Color** is selected for **Color Mode**.

## Brightness

Adjust Brightness to achieve the best level of brightness in printed line drawings.

Drag slide bar left and right to adjust the level of brightness.

### Adj. Pale Color Recognizable

When you place a checkmark here, yellow or cyan lines or other portions of images that are difficult to see when printed in white space can become easier to see.

### Economy Printing

You can reduce the amount of ink consumed for printing by placing a checkmark here.

### Increase image print speed (AutoCAD2011 only)

When you print with the resolution configured to 600dpi, you can print data including raster images even faster. However, image quality may deteriorate if high-resolution raster images are included. Remove the check in this case.

### Output Method Button

Click the button to open the **Output Method** dialog box and you can specify the output method for HDI Driver. For more information about the output method, see "Output Method Dialog Box." →P.382


### 4 Color Compatibility button

Click the button to open the **Color Compatibility** dialog box, and you can set color for when **Color (CAD)** is selected in **Color Mode**.

For more information on setting color compatibility, see "Color Compatibility Dialog Box." →P.382

### Paper Detailed Settings

To open the **Paper Detailed Settings** dialog box, click **Settings** button of the **Media Type** in the **Custom Properties** dialog box. You can perform the settings for ink drying time of each media and other features.

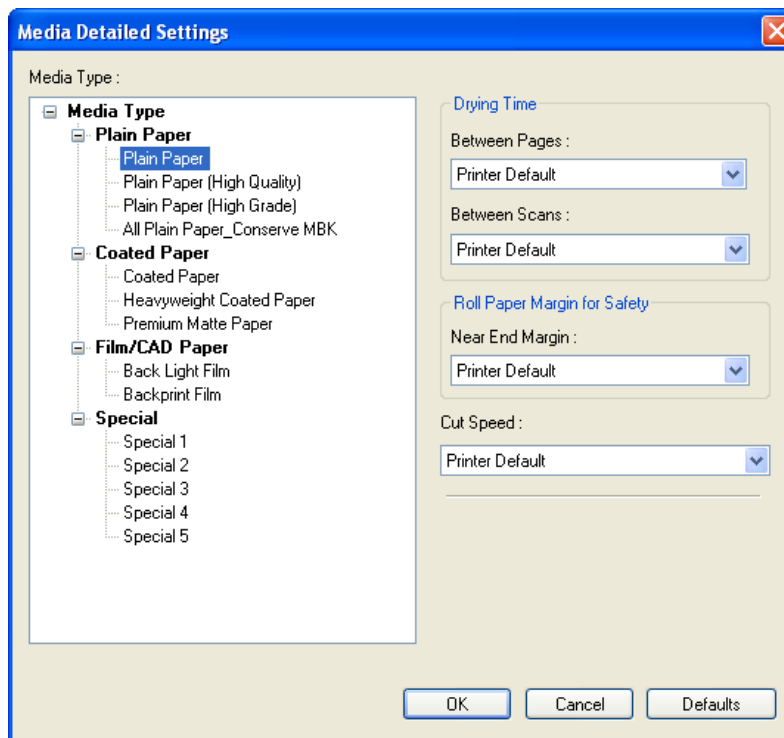

**Note**

- The settings in the **Paper Detailed Settings** dialog box are temporary; after the print job finishes the settings of the printer operation panel are restored.

**Drying Time****Between Pages**

This sets the wait time for the ink to dry between each completely printed sheet and the output of the sheet.

Setting	Details
<b>Printer Default</b>	The settings of the printer operating panel are applied.
<b>None</b>	The paper is ejected immediately after printing.
<b>30sec. / 1min. / 3min. / 5min. / 10min. / 30min. / 60min.</b>	The sheet is ejected when the specified time after printing has elapsed.

**Between Scans**

This sets the wait time between line scans during printing.

Setting	Details
<b>Printer Default</b>	The settings of the printer operating panel are applied.
<b>None</b>	The printing continues to the next line immediately after the last line.
<b>1sec. / 3sec. / 5sec. / 7sec. / 9sec.</b>	The printing continues to the next line after the set time.  *For the media type that has problems, such as ink smears on the page or colors that seem uneven during borderless printing etc., increase the value for this setting.

4

**Roll Paper Margin for Safety****Near End Margin**

This sets the length of the near end margin of the roll paper.

Setting	Details
<b>Printer Default</b>	The settings of the printer operating panel are applied.
<b>3mm</b>	Print at a standard size.  *Select for Media Type that has no problem when printing with a standard size margin.
<b>20mm</b>	This setting sets the margin about 17 mm (in the feed direction) longer than the standard margin for the media size.  *This is for Media Type that has a strong tendency to curl, causing the printhead to scratch the surface.

**Important**

- If you make the margin (white space) too small, this could disturb the print image or cause the printhead to scour the surface of some types of media. If the printhead scours the surface of the media, adjust the height of the printhead.

381

**Cut Speed**

This selects the auto cut speed.

Setting	Details
<b>Printer Default</b>	The settings of the printer operating panel are applied.
<b>Fast</b>	Select this setting if cutting with the <b>Standard</b> setting is not clean.
<b>Standard</b>	Select this setting when you are not experiencing problems.
<b>Slow</b>	Select this setting if cutting with the <b>Standard</b> setting is not clean.

## Output Method Dialog Box


**Output Method** dialog box appears when you click **Output Method** button on the Main sheet in the **Custom Properties** dialog box. You can specify the output method for HDI Driver.



Setting	Details
<b>Print</b>	Normal printing. The print job data is stored temporarily in the box as the job prints
<b>Save in mail box</b>	The print data is saved in the mail box on the HDD without printing. Sets the number of the destination mail box for saving. The name of the data to be saved is displayed.

## Color Compatibility Dialog Box

**Color Compatibility** dialog box appears when you click the **Color Compatibility** button on the **Main** sheet in the **Custom Properties** dialog box. You can set color for when **Color (CAD)** is selected in **Color Mode**. You can print with color approximating the specified model by selecting **Color Compatibility** for printing.

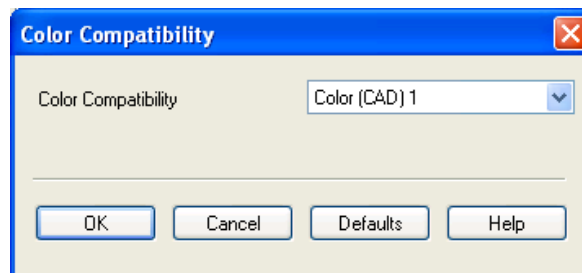

Note

- **Color (CAD)** is displayed by selecting the **Main** sheet, and then **Line Drawing/Text** in **Print Priority**.



**Important**

- The color and quality of the specified model cannot be perfectly matched.

**Color Compatibility**

Color settings and compatible models are listed below.

Color settings	Compatible models
<b>Color (CAD) 1</b>	Standard
<b>Color (CAD) 2</b>	<b>Color (CAD) Light</b>
<b>Color (CAD) 3</b>	Canon BJ-W3000/W3050 (BJ-W3000/W3050 are not sold domestically in Japan.)
<b>Color (CAD) 4</b>	HP Designjet 500/800
<b>Color (CAD) 5</b>	HP Designjet 1000
<b>Color (CAD) 6</b>	HP Designjet 4000/4500

**Printing**


This section describes how to execute a print job with the HDI driver.

**Note**

- The description below uses printing with the AutoCAD 2007 as an example.


1. Start AutoCAD and open the image file.

2. Select **Plot** from the **File** menu. The **Plot** dialog box opens.  
 Check the **Name** setting under **Printer/plotter** and confirm that **iPFxxxx.pc3** (the name of the printer you use) is displayed.  
 Click the **Properties** button.

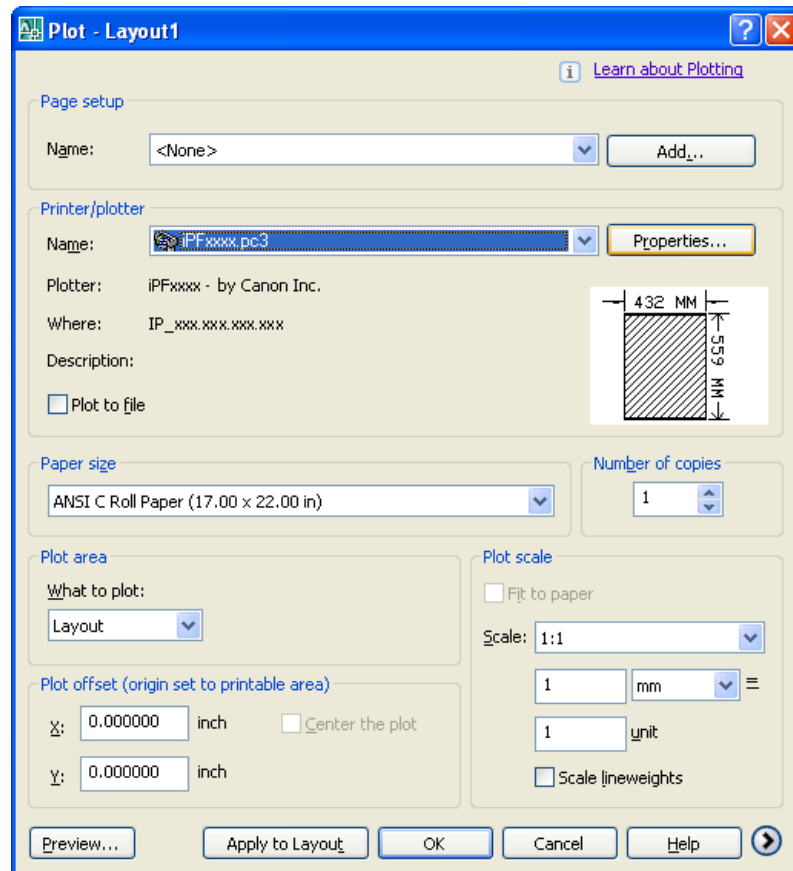**Note**


- If any other printer name is selected, select the name of the printer that you want to use from the **Name** list.
- The names of the printers installed when the HDI driver was installed are in the **Name** list.

3. The **Plotter Configuration Editor** dialog box opens. Perform the settings that you need for the print job. Click the **OK** button to close the **Plotter Configuration Editor** dialog box.

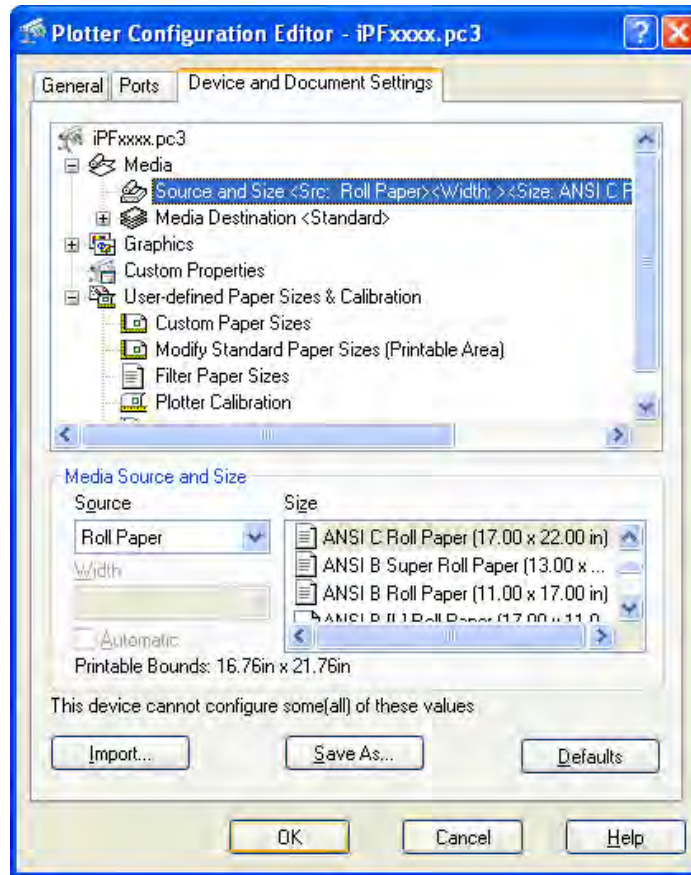**Note**

- For more details about how to perform the settings in the **Plotter Configuration Editor** dialog box, see "Plotter Configuration Editor Dialog Box." →P.371

4. The **Plot** dialog box opens.  
Perform the settings that you need on the **Plot** dialog box, then click the **OK** button.

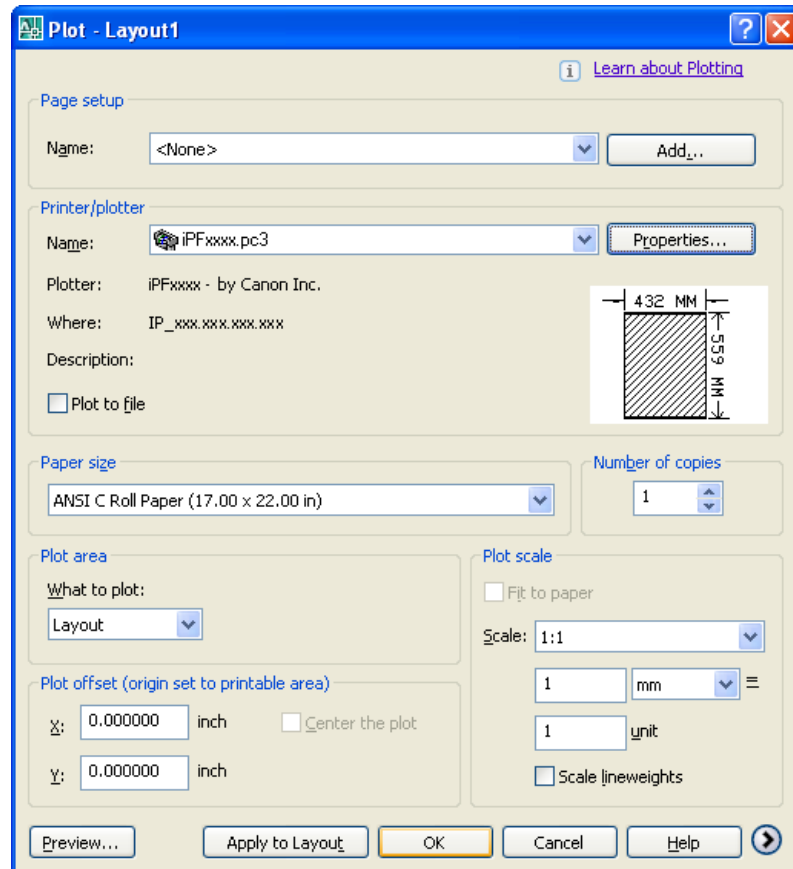**Note**

- The content of the settings done in the **Plotter Configuration Editor** dialog box are reflected in the **Paper size** settings on the **Plot** dialog box.
- For more details about the **Plot** dialog box, please refer to the AutoCAD manual.

5. The print job begins.

**Note**

- If the output exceeds the number of pixels prescribed for the media, in order to prevent AutoCAD from hanging up during the print job a warning dialog box opens and asks if you want to lower the resolution or reduce the number of colors. If this occurs, click the **OK** button to cancel the print job and then lower the resolution or reduce the number of colors.
- Some media may not allow printing with certain resolution settings. If you have selected a resolution setting that cannot be used for printing, then a dialog box will open and prompt you to change the resolution. If this occurs, click the **OK** button to cancel the print job and then lower the resolution.
- A message from AutoCAD is displayed when printing starts. Press the **OK** button to execute the print job. This message display can be disabled with the **Options** setting in the AutoCAD **Tools** menu. For more details, please refer to the AutoCAD manual.



## Status Monitor

The Features of imagePROGRAF Status Monitor .....	387
Job Management Using imagePROGRAF Status Monitor .....	388

## The Features of imagePROGRAF Status Monitor

imagePROGRAF Status Monitor is a utility for checking the printer status and managing print jobs.

Two screens are available in imagePROGRAF Status Monitor : **Printer List** shows a list of printers, and **Status Monitor** shows details for each printer.

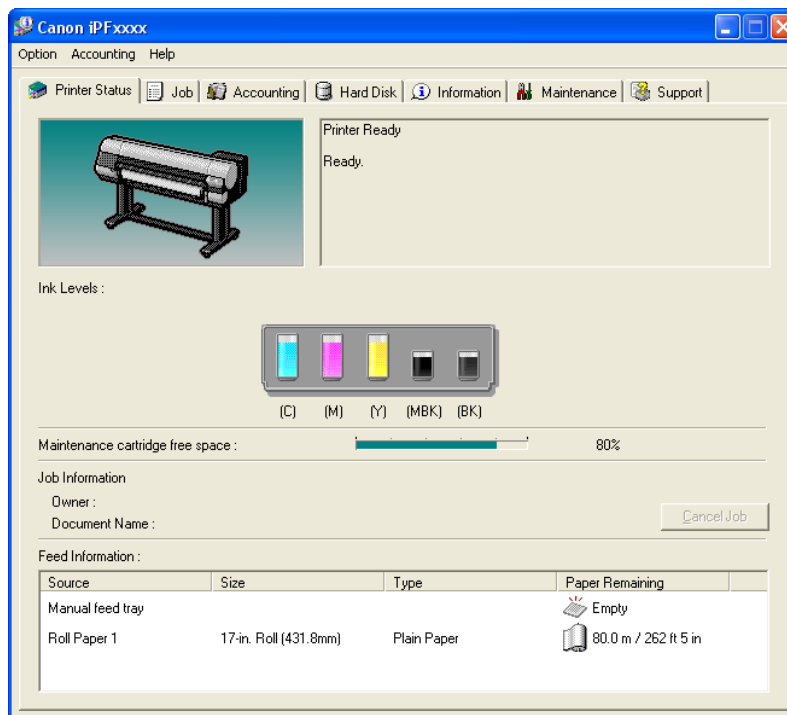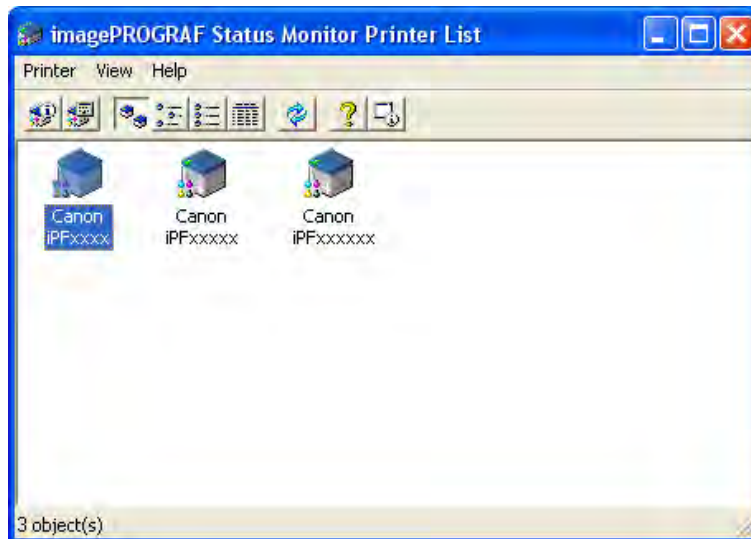

- You can view a list of the printers for which printer drivers have been installed on your computer, printers connected to your computer, and printers found on the network.

- If a printer error occurs, you can investigate the corrective action immediately.
- Printer status can be checked in real time on a computer monitor.
- Displays the ink level of every color in the printer. An icon and warning message will notify you when ink levels are low.
- The type of paper loaded in each media source is identified. You can also check to see if paper has run out.
- This way, the utility enables you to check printer information and take care of printer maintenance for optimal printing results.
- You can also set up automatic email notification of any printer problems or errors to email addresses you designate in advance.
- You can check the status of the hard disk and the documents saved on the hard disk.
- You can use the Accounting Manager to collect the print job logs for the printers and check information such as the printing costs.  
For details of the Accounting Manager, see Accounting Manager →P.390 .


**Note**

- For details, refer to the imagePROGRAF Status Monitor help.

4

## Job Management Using imagePROGRAF Status Monitor

You can use the **Job** sheet in imagePROGRAF Status Monitor for operations such as pausing and canceling print jobs.

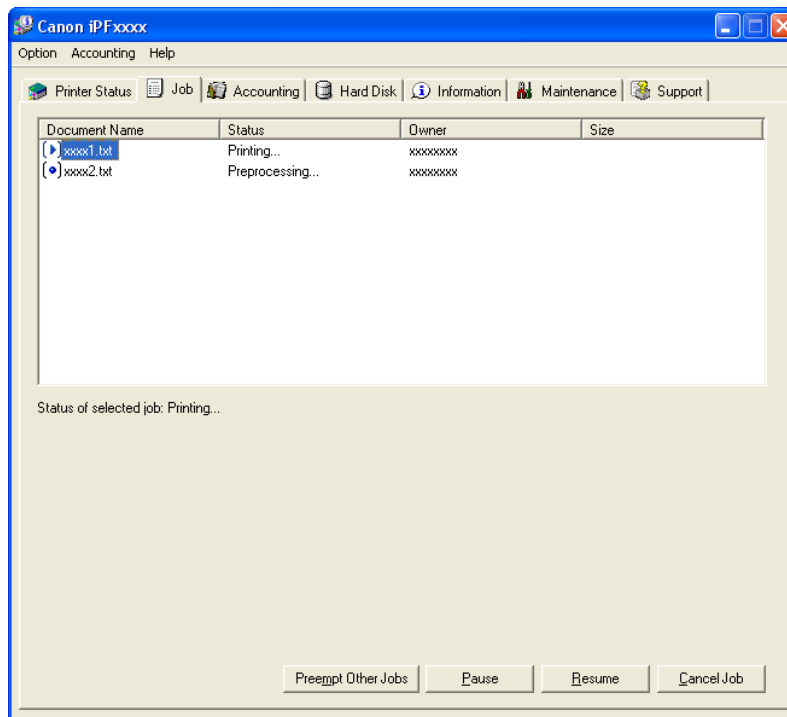

### Preempting Other Jobs

If you select a print job and click the **Preempt Other Jobs** button, the selected job is printed ahead of the job that currently precedes it in the print queue.



## Pausing/Resuming Print Jobs

Selecting a print job and clicking the **Pause** button pauses printing of the selected job. To resume printing of a paused print job, select the print job and click the **Resume** button.



### Note

- Once all the print data for a print job has been sent to the printer, the job can no longer be paused/resumed.

## Canceling Print Jobs

Selecting a print job and clicking the **Cancel Job** button cancels printing of the selected job.



### Note

- You cannot cancel other users' print jobs.

## Accounting

Accounting Manager .....	390
Launching the Accounting Manager .....	391
Accounting Manager Main Window .....	391
Accounting Manager Basic Procedures .....	394
Configuring Unit Costs in Accounting Manager .....	394
Setting the Unit Cost for Ink .....	395
Setting the Unit Cost for Paper .....	396
Setting the Unit Cost for Items Other Than Ink and Paper .....	397
Configuring Units and Display Settings in Accounting Manager .....	398
Automatically Acquiring Print Job Logs at Regular Intervals .....	399
Canceling Regular Print Job Log Acquisition .....	399
Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs .....	399
Exporting Print Job Data as a CSV File .....	400
Showing Job Properties .....	400
Showing, Saving and Loading Selected Unit Cost Data .....	401
Showing the Total Amount of Ink and Paper Consumed .....	401

4

## Accounting Manager

The Accounting Manager stores the printer's print job logs so that you can use the information for checking printing costs, etc.

The benefits of using the Accounting Manager are outlined below.

- **Print Job Log Collection**  
This allows you to check which documents were printed from each printer, who printed them and when.
- **Calculation of the Total Pages Used and the Total Cost**  
This allows you to use the collected print job logs to calculate totals for items such as the number of pages printed, the amount of paper used and the printing costs incurred.
- **Regular Data Acquisition for Print Jobs**  
This automatically logs print jobs at regular intervals.
- **Exporting Print Job Data**  
This allows you to export collected print job data as a CSV file.



### Important


- The Accounting Manager in Status Monitor displays approximate estimates of the amount of paper consumed and the ink consumed per job. Canon cannot guarantee the accuracy of these estimates. These estimates will also vary depending on the conditions of printer use.
- Print job log collection is not performed when **Set./Adj. Menu-> Printer Info-> Show Job Log** of the control panel is **Off**. However,
  - even if **Show Job Log** is set to **Off**, regularly acquired jobs that already have been retrieved at that time are displayed.
  - When **Show Job Log** has been set to **On** again, all jobs within the printer at that time are displayed.

390

## Launching the Accounting Manager

The procedure for launching the Accounting Manager is shown below.


1. Open the imagePROGRAF Status Monitor window.
2. Select **Accounting** in the **Accounting** menu.  
Or, open the **Accounting** sheet and click the **Accounting** button.

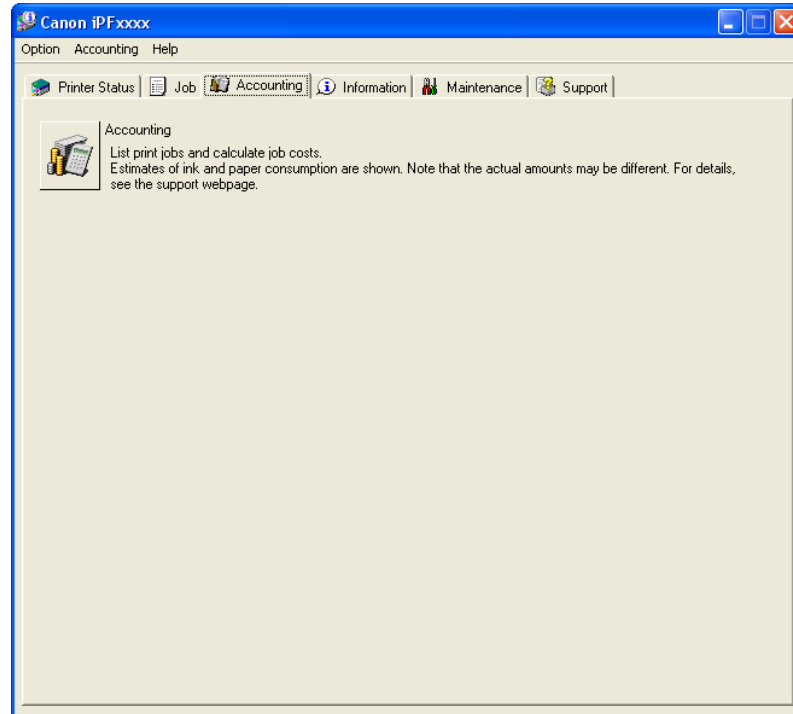

4

## Accounting Manager Main Window

The Accounting Manager main window consists of a title bar, menu bar, toolbars, listed job selection area, job list area, totals area and status bar.

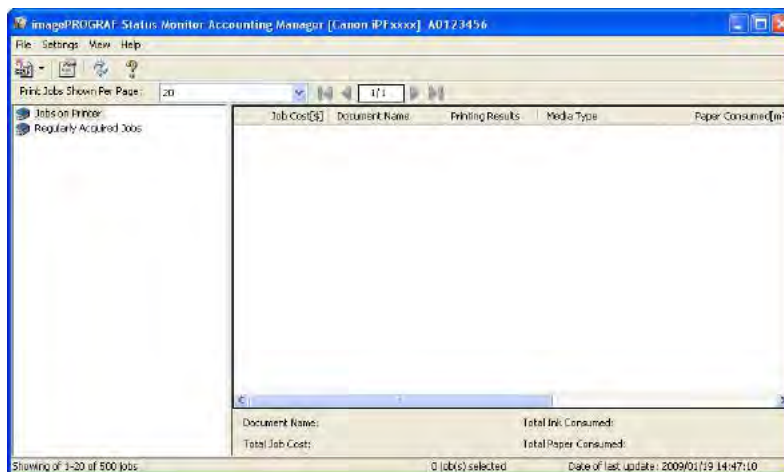

391

### Title Bar

This displays the printer model, its serial number and the port number it is using.




### Menu Bar

Allows you to select the menu options required for operation.



### Toolbars

Provide tool buttons and pull-down menus for the main operations.



#### Note


- You can opt to either show or hide the toolbars in the **View** menu.

4

### Listed Job Selection Area

You can use this area to select which job log is displayed.

If you are using regular data acquisition, this area allows you to view the collective job logs for each specified period.

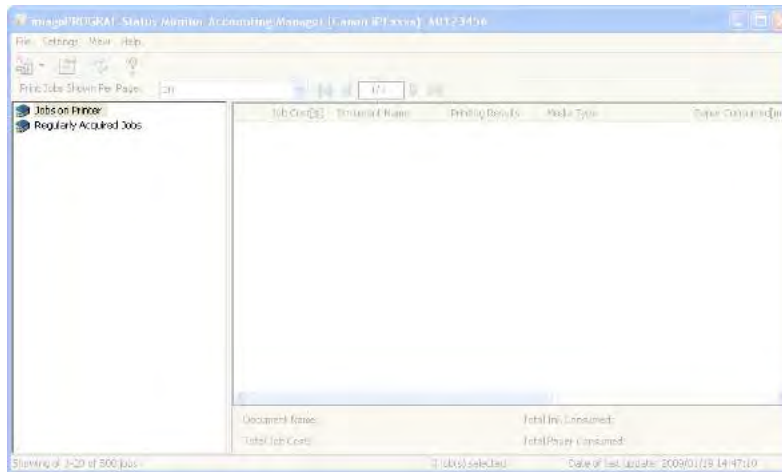

For more information on how to select the job logs displayed, see [Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs](#) →P.399 .

### Job List Area

This area lists the details of acquired jobs.

392

It displays a list of either the print jobs on the printers or the regularly acquired print jobs. The displayed information includes the amounts of paper and ink consumed, the costs, the media type and the time taken for printing.

Job Cost[\$]	Document Name	Printing Results	Media Type	Paper Consumed[m <sup>2</sup> ]
****	ST5 Job600	OK	Durable Backlit Film	0.0525
****	ST5 Job499	OK	Heavyweight Coated Paper	0.6536
****	ST5 Job498	OK	Premium Semi-glossy Pa...	0.3997
****	ST5 Job497	Cancel	Premium Coated Paper	0.8864
****	ST5 Job496	OK	All Plain Paper_Conserve...	0.9987
****	ST5 Job495	OK	Premium RC Photo Luster	0.0500
****	ST5 Job494	OK	Backlit Film	1.1000
****	ST5 Job493	Cancel	Special 4	0.2900
****	ST5 Job492	OK	CAD Clear Film	0.7925
****	ST5 Job491	Cancel	Extra Matt Coated Paper	0.6378
****	ST5 Job490	OK	All Plain Paper_Conserve...	0.0500
****	ST5 Job489	OK	Standard Paper1570B 90g	0.5555
****	ST5 Job488	Cancel	Heavyweight Coated Paper	2.1000
****	ST5 Job487	Cancel	Matte Coated Paper 90gsm	0.9500
****	ST5 Job486	OK	Newsprint for Proofing 1	1.0000
****	ST5 Job485	OK	Newsprint for Proofing 1	0.9000
****	ST5 Job484	OK	Newsprint for Proofing 1	3.0000
****	ST5 Job483	Cancel	Premium Semi-glossy Pa...	1.6500
****	ST5 Job482	OK	Extra Heavyweight Coat...	2.4000
****	ST5 Job481	OK	Unknown	1.0000

Document Name: Total Ink Consumed: 1088.458 ml  
Total Job Cost: Total Paper Consumed: 19.4767 m<sup>2</sup>

Showing of 1-20 of 500 jobs 0 job(s) selected Date of last update: 2009/01/19 14:47:10



#### Note

- If the Unit Cost of Ink or Paper have not been set, \*\*\*\* is displayed in the Job Cost field.

4

## Totals Area

Displays the total costs for the selected job and the amounts of paper and ink consumed.

Job Cost[\$]	Document Name	Printing Results	Media Type	Paper Consumed[m <sup>2</sup> ]
****	ST5 Job600	OK	Unknown	0.0525
77.246	ST5 Job15	OK	Premium RC Photo Luster	0.0525
****	ST5 Job14	OK	Unknown	0.0525
****	ST5 Job13	Cancel	Special 4	0.0525
****	ST5 Job12	OK	Unknown	0.0525
35.994	ST5 Job11	Cancel	Extra Matt Coated Paper	0.0525
****	ST5 Job10	OK	Unknown	0.0525
35.994	ST5 Job9	OK	Standard Paper1570B 90g	0.0525
77.246	ST5 Job8	Cancel	Heavyweight Coated Paper	0.0525
35.994	ST5 Job7	Cancel	Matte Coated Paper 90gsm	0.0525
448.036	ST5 Job6	OK	Newsprint for Proofing 1	0.0525
136.416	ST5 Job5	OK	Newsprint for Proofing 1	0.0525
538.314	ST5 Job4	OK	Newsprint for Proofing 1	0.0525
276.151	ST5 Job3	Cancel	Premium Semi-glossy Paper 200	0.0525
234.119	ST5 Job2	OK	Extra Heavyweight Coated Paper	0.0525
****	ST5 Job1	OK	Unknown	0.0525

Document Name: Total Ink Consumed: 6358.464 [ml]  
Total Job Cost: 2374.155 [\$] Total Paper Consumed: 17.4745 [m<sup>2</sup>]

2008/02/01 - 2008/02/29 15 jobs 0 job(s) selected Date of last update: 2009/01/19 15:09:21




#### Note

- If you are viewing regularly acquired print jobs, selecting a period on the left side of the window displays the total costs for that period and the amounts of paper and ink consumed.

393

## Status Bar

Displays messages and other information.

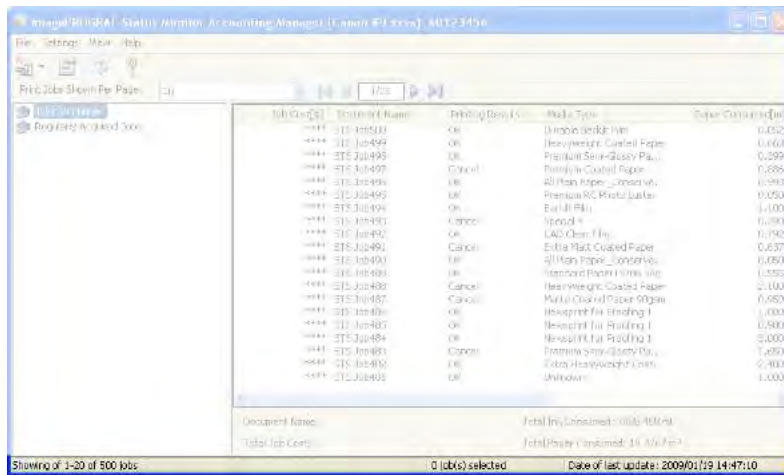

4

## Accounting Manager Basic Procedures

The first time you use the Accounting Manager, use the following procedures to configure the settings.

1. Configure unit costs, including the costs of ink and paper.  
For details of the unit cost settings, see [Configuring Unit Costs in Accounting Manager](#) →P.394 .
2. Set options such as the units displayed.  
For details of the unit settings, see [Configuring Units and Display Settings in Accounting Manager](#) →P.398 .
3. If you are using Regular Data Acquisition, configure the Regular Data Acquisition settings.  
For details of the Regular Data Acquisition settings, see [Automatically Acquiring Print Job Logs at Regular Intervals](#) →P.399 .
4. Specify the jobs to be listed.  
For details of how to select the job logs displayed, see [Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs](#) →P.399 .

This displays the required print job logs and lists the details.

## Configuring Unit Costs in Accounting Manager

Select **Unit Costs** in the **Settings** menu to open the **Unit Costs** dialog box. Configure the unit cost settings in this dialog box.



### Note

- When you select a job and then open the **Unit Costs** dialog box, items with unit costs that have not yet been configured for that job are shown highlighted.

- Setting the Unit Cost for Ink →P.395
- Setting the Unit Cost for Paper →P.396
- Setting the Unit Cost for Items Other Than Ink and Paper →P.397



## Setting the Unit Cost for Ink

Open the **Ink** sheet. Set the unit cost for ink in this sheet.

**Unit Costs**

Ink | Paper | Other

Use same price for all ink

Tank Capacity:  ml    Price:  \$

Price List:

Ink Color	Tank Capacity(ml)	Price[\$]
<span style="color: cyan;">■</span> C (Cyan)	130	Not Specified
<span style="color: magenta;">■</span> M (Magenta)	130	Not Specified
<span style="color: yellow;">■</span> Y (Yellow)	130	Not Specified
<span style="color: gray;">■</span> MBK (Matte Black)	130	Not Specified
<span style="color: gray;">■</span> MBK (Matte Black)	130	Not Specified
<span style="color: black;">■</span> BK (Black)	130	Not Specified

Ink Unit Cost Setting: C (Cyan)

Tank Capacity:  ml    Price:  \$

4

To set the same unit cost for all the inks

1. Select the **Use same price for all ink** checkbox.
2. Enter the **Tank Capacity** and corresponding **Price**.
3. Click the **OK** button.



### Important

- Your settings are not applied until you click the **OK** button.

395

To set different unit costs for each ink color

1. Select the ink color to be costed.
2. Enter the **Tank Capacity** and corresponding **Price**.

3. Click the **Overwrite** button.
4. Repeat steps 1 to 3 for all the inks.
5. Click the **OK** button.

**Important**

- Your settings are not applied until you click the **OK** button.

## Setting the Unit Cost for Paper

Open the **Paper** sheet. Set the unit cost for paper in this sheet.

4
4

Unit Costs
X

Ink
Paper
Other

Price List:
 

Media Type	Width[m]	Length[m]	Price[\$]

Delete

Paper Unit Cost Settings:
 

Media Type: Plain Paper

Width:  m

Length:  m

Price:  \$

Add
Overwrite

OK
Cancel
Help

1. Select a media type from the **Media Type** list.
2. Enter the **Width** and **Length** of the paper, and the **Price** per area for the configured width x height.
3. Click the **Add** button. To change the unit cost for a media type you have already set, click the **Overwrite** button.
4. Click the **OK** button.

**Important**

- Your settings are not applied until you click the **OK** button.

## Setting the Unit Cost for Items Other Than Ink and Paper

Open the **Other** sheet. Use this sheet to set any price for items other than inks and paper.

The screenshot shows the 'Unit Costs' dialog box with the 'Other' tab selected. The 'Price List' table is empty. The input fields are: Name (text box), Unit Cost (text box with '\$' symbol), and Allocated (dropdown menu set to 'Yes'). The 'Add' button is highlighted.

1. Enter any name in the **Name** field.
2. Enter a value in **Unit Cost**.
3. Use **Allocated** to specify whether the costs are allocated as being incurred by the print job.
4. Click the **Add** button. To change the unit cost for a media type you have already set, click the **Overwrite** button.
5. Click the **OK** button.

**Note**

- You can set unit costs for up to 5 items.

**Important**

- Your settings are not applied until you click the **OK** button.

## Configuring Units and Display Settings in Accounting Manager

Select **Units and Display** in the **Settings** menu to open the **Units and Display** dialog box. Use this dialog box to configure the display settings.

### Date Display Format

Use this option to select the display format for dates. "YYYY" indicates the year, "MM" the month and "DD" the day.

### Currency Unit

Enter the currency unit. Enter a text string up to 3 characters long.

### 1000 Separator

Use this option to select the symbol used as a separator in numbers. The symbol is inserted every 3 digits.

### Decimal Symbol

Use this option to select the symbol used as a decimal point.

### Ink Consumed

Use this option to select the unit used for ink consumption.

### Paper Width

Use this to select the unit used for paper width.

## Paper Length

Use this to select the unit used for paper length.

## Area Display Format

Use this to select the unit used for paper area.

## Automatically Acquiring Print Job Logs at Regular Intervals

This feature collects print job logs from the printer at regular intervals and saves the logs on your computer.

1. Select **Regular Data Acquisition** in the **Settings** menu.
2. Select **Acquire print job logs regularly**.
3. Click the **OK** button to close the dialog box.



### Note

- Immediately after you configure Regular Data Acquisition, no print jobs are displayed. Wait a few moments and then select **Refresh** in the **View** menu to display the print jobs.
- A maximum of 10,000 records are saved in a print job log. If this number is exceeded, jobs are deleted from the log starting from the oldest record. To save old data, it is recommended that you export the data as a CSV file. For details of how to export print job logs as CSV files, see [Exporting Print Job Data as a CSV File](#) →P.400 .



### Important

- Print job log collection is not performed when **Set./Adj. Menu-> Printer Info-> Show Job Log** of the control panel is **Off**. However, even if **Show Job Log** is set to **Off**, regularly acquired jobs that already have been retrieved at that time are displayed.

## Canceling Regular Print Job Log Acquisition

You can use this procedure to cancel the regular acquisition of print job logs from printers.

1. Select **Regular Data Acquisition** in the **Settings** menu.
2. Uncheck the **Acquire print job logs regularly** option.
3. Click the **OK** button to close the dialog box.

## Switching Between Displaying Jobs on Printer and Regularly Acquired Jobs

The print job logs displayed by the Status Monitor Accounting Manager contain two types of job: Jobs on Printer and Regularly Acquired Jobs.

You can select whether to display Jobs on Printer or Regularly Acquired Jobs in the Listed Job Selection Area on the left side of the window.

## Jobs on Printer

This shows a list of the print jobs currently held on printers.

You can change the number of jobs displayed per page using the **Print Jobs Shown Per Page** setting in the **View** menu or the toolbar.

You can skip to a particular page using the **Go to** option in the **View** menu or the toolbar.



### Note

- For printers with built-in hard disks, you can view up to 500 print jobs per printer.
- For printers without built-in hard disks, you can view up to 32 print jobs per printer. However, only 10 jobs can be displayed if the printer is switched off.

## Regularly Acquired Jobs

This shows a list of regularly acquired print jobs.

To view all the jobs in a set period, specify the period using **Period** and then **Starting Date** (or **Starting Day of Week** or **Starting Month**) in the **View** menu or the toolbar.

For example, to view monthly job logs starting on the 1st of each month, set **Period** to **Monthly** and set **Starting Date** to **1**.



### Note

- Up to 10,000 regularly acquired jobs are displayed for each printer.

## Exporting Print Job Data as a CSV File

You can export the collected print job data in the form of a CSV file by selecting **Export Job Cost Data** in the **File** menu.



### Note

- You can also select **Export Job Cost Data** using the icon in the toolbar.

## Selected Jobs

Exports the data for the selected print jobs in the job list as a CSV file.



### Note

- You can select multiple jobs by holding down the Shift key or Ctrl key as you click the job names.

## Listed Jobs

Exports the data for the print jobs currently displayed in the list as a CSV file.

## Showing Job Properties

If you select a job in the job list and then select **Show Job Properties** in the **File** menu, the **Job Properties** dialog box appears, allowing you to check information such as detailed cost data.

You can copy text-based information in this dialog box to the clipboard by clicking the **Copy** button.



**Note**

- You can also open this dialog box by right-clicking the selected job and selecting **Show Job Properties**. Or you can also use the toolbar icon to open the dialog box.
- If you select multiple jobs and open the **Job Properties** dialog box, the total costs for the selected jobs are displayed.

## Showing, Saving and Loading Selected Unit Cost Data

### Show Unit Cost Data

Select **Show Unit Cost Data** in the **File** menu to open the **Unit Cost Data** dialog box. This lists the unit costs for items such as the selected ink and paper.

You can copy text-based information in this dialog box to the clipboard by clicking the **Copy** button.

### Save Unit Cost Data

Select a destination folder using **Save Unit Cost Data** in the **File** menu. The unit cost data for items such as the selected ink and paper is saved as a file.

### Load Unit Cost Data

Selecting **Load Unit Cost Data** in the **File** menu loads saved unit cost data.

## Showing the Total Amount of Ink and Paper Consumed

Select **Show Ink and Paper Consumed** in the **File** menu to open the **Show Ink and Paper Consumed** dialog box. This lists the total amounts of ink and paper consumed by the printer so far.

You can copy text-based information in this dialog box to the clipboard by clicking the **Copy** button.

**Note**


- Up to 7 types of media are listed in order of the amount consumed. The total consumption for other media types is shown as **Other**.

## Digital Photo Front-Access

Digital Photo Front-Access ..... 402

### Digital Photo Front-Access

Digital Photo Front-Access is an application that links photos from Canon digital cameras and other image files on your computer with various other applications.

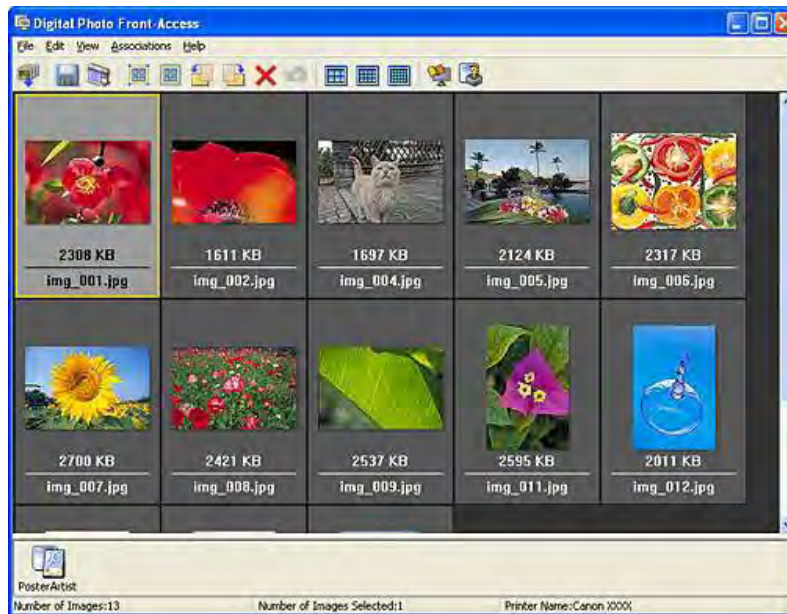

- Simply select an image and click the icon of the application you want to start to launch the application.
- You can also print from Digital Photo Front-Access. In short, Digital Photo Front-Access can help you manage images in many ways from editing to printing as an effective way to work with other applications.
- Digital Photo Front-Access also enables image retouching. For automatic retouching, select an image for retouching and click Image Adjustment.
- Because this application automates the workflow from retouching to display for all of your images, it can save time and work in retouching.



#### Note


- For details, refer to the Digital Photo Front-Access help.

## Device Setup Utility

imagePROGRAF Device Setup Utility .....	403
Installing imagePROGRAF Device Setup Utility .....	403
Configuring the IP Address Using imagePROGRAF Device Setup Utility .....	404

## imagePROGRAF Device Setup Utility

imagePROGRAF Device Setup Utility is a utility to establish communication between the printer and your computer by completing relevant settings. After the printer is installed, for example, you can use imagePROGRAF Device Setup Utility to complete the network settings initially.

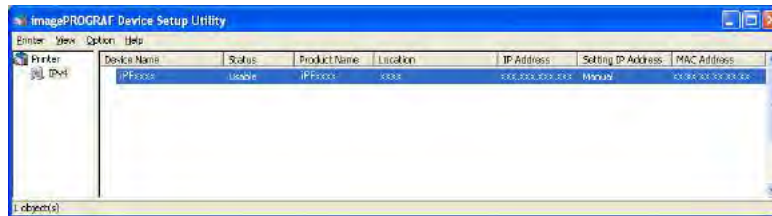

- Starting imagePROGRAF Device Setup Utility will show a list of printers found on the network. In this list, select the printer (specifically, the printer's MAC address) that you want to set up, and then configure the basic settings from your computer, such as the printer's IP address and the network frame type.
- You can see which printers are online in the network by checking the printer list. Communication between your computer and these printers is possible.



### Note

- We recommend that your network or printer administrator complete the setup work using imagePROGRAF Device Setup Utility.
- For details, refer to the imagePROGRAF Device Setup Utility help.

## Installing imagePROGRAF Device Setup Utility

Install imagePROGRAF Device Setup Utility from the User Software CD-ROM provided with the printer as follows:



### Important

- In Windows XP/Windows Server 2003/Windows Vista/Windows Server 2008/Windows 7, you must log on with administrative rights equivalent to the **Administrator** account.

1. Insert the User Software CD-ROM in the CD-ROM drive.
2. On the **Setup Menu** window, click **Install Individual Software**.
3. Click **Install** in imagePROGRAF Device Setup Utility.
4. Follow the instructions on the screen to proceed with the installation.

## Configuring the IP Address Using imagePROGRAF Device Setup Utility


From a computer running Windows, you can use imagePROGRAF Device Setup Utility provided with the printer to configure the printer's IP address. This topic describes how to configure the IP address using imagePROGRAF Device Setup Utility.



### Important

- To configure network settings, you must be logged in with administrative rights such as **Administrator** account. We recommend that your network administrator configure the network settings.
- For instructions on installing imagePROGRAF Device Setup Utility, see "Installing imagePROGRAF Device Setup Utility." →P.403 .

1. Start imagePROGRAF Device Setup Utility from the **start** menu.

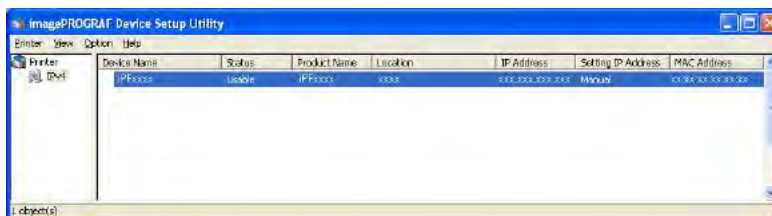

2. In the **Device Name** list displayed, select the printer to configure.

**3.** Choose **Protocol Settings** from the **Printer** menu.

- 4.** In the **Setting IP Address** list, choose **Manual**.
- 5.** Enter the IP address assigned to the printer and click the **Set** button.
- 6.** Click **OK** after the **Confirmation** message dialog box is displayed.
- 7.** Exit imagePROGRAF Device Setup Utility.



**Note**

- To configure the IP address automatically, choose **Auto** in the **Setting IP Address** list and select **DHCP**, **BOOTP**, or **RARP**.
- You can also specify the subnet mask and default gateway.

## Media Configuration Tool

The Features of Media Configuration Tool .....	406
Operating Environment .....	406
Installation Procedures .....	407
Starting the Media Configuration Tool .....	409
Media Configuration Tool Main Window .....	410
Editing Media Type Information .....	411
Adding Media Types .....	412
Changing Media Names .....	414
Deleting Media Types You Have Added .....	416
Switching Media Types Display Show/Hide .....	418
Changing the Display Order of Media Types .....	419
Updating Media Types .....	421

### 4

## The Features of Media Configuration Tool

The Media Configuration Tool offers the following features.

- Enables information about additional media (types of paper) supported by the printer to be registered on the printer control panel and in the printer driver, through the use of relevant media information files (.amf and .med files).
- You can rearrange lists of the types of paper on the printer control panel and in printer driver dialog boxes and rename them, in addition to other functions.



### Important

- The Media Configuration Tool is normally installed when you install the printer driver from the User Software CD-ROM by selecting **Install Printer Driver** and media information is registered at this time. The tool can be used later to add or edit media information as desired.

## Drivers Applicable with Media Configuration Tool

- imagePROGRAF Printer Driver
- imagePROGRAF HDI Driver

## Operating Environment

You can use Media Configuration Tool in the following environments.

- Compatible Operating System  
Windows 2000, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7
- Software that requires installation  
imagePROGRAF Printer Driver



## Installation Procedures


The Media Configuration Tool installation screen appears when you start the installation of a new version of the Media Configuration Tool. The installation procedure started from this screen is described below.



### Important

- The Media Configuration Tool is normally installed when you install the printer driver from the User Software CD-ROM by selecting **Install Printer Driver** and media information is registered at this time.
- You must be logged in as Administrator when installing software in Windows.


1. Start the Media Configuration Tool installer.  
Click the **Next** button.

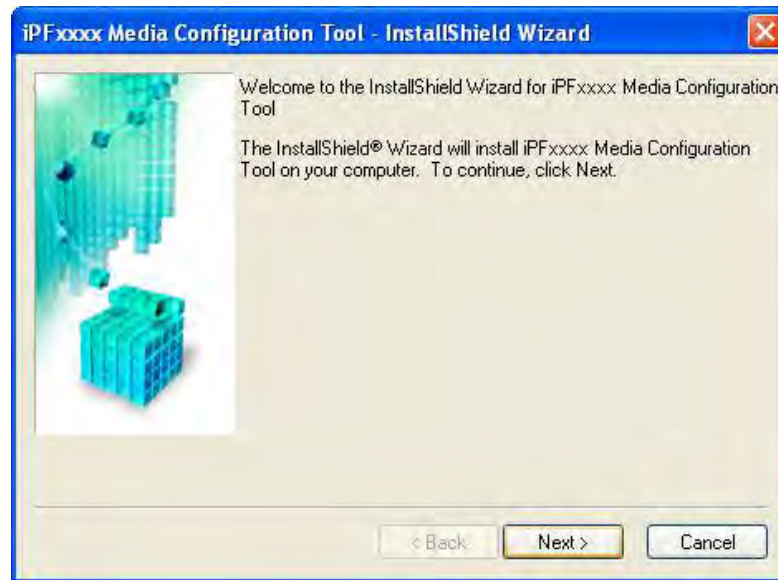


2. The next screen presents selections for the country or area where the printer is used.  
Select a country or territory then click the **Next** button.



- The **License Agreement** is displayed.  
Select **I accept the terms of the license agreement** and click the **Next** button.

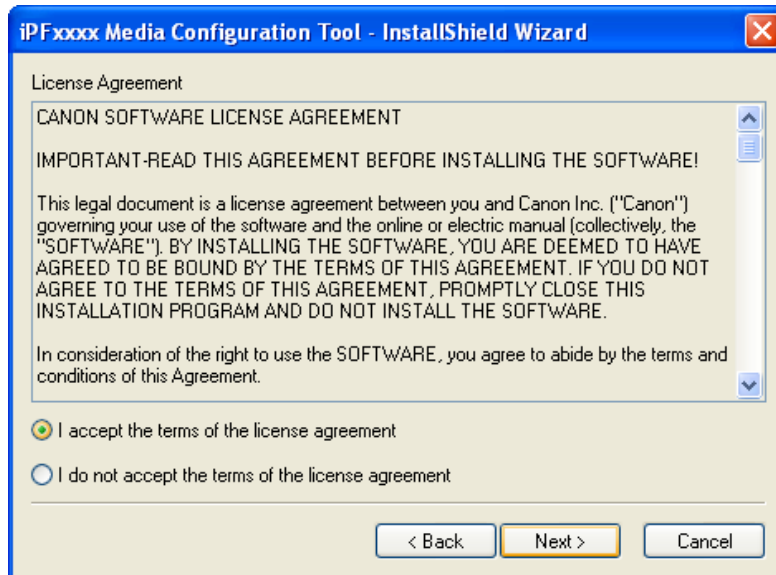

- The **Choose Destination Location** screen appears.  
Select the destination folder then click the **Next** button.

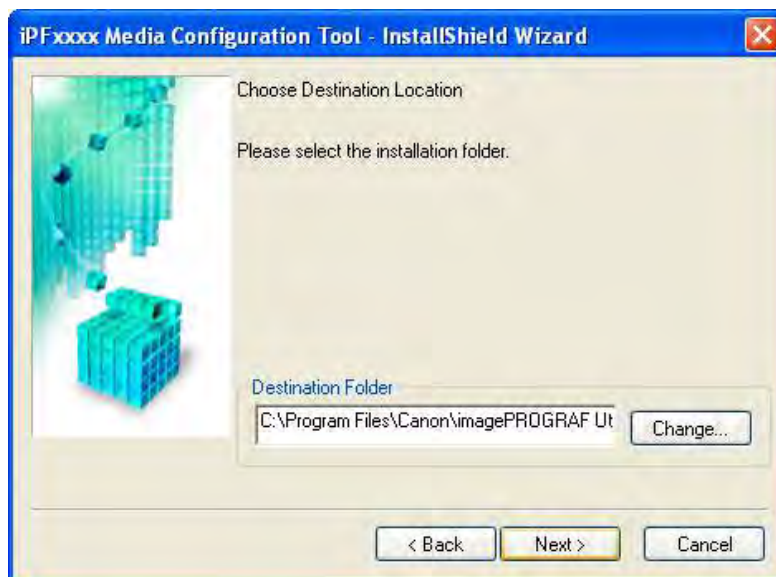


4

5. The **Ready to Install the Program** screen appears.  
Click the **Install** button.



6. All the required files are copied to your computer and **InstallShield Wizard Complete** screen appears.  
Click the **Finish** button.

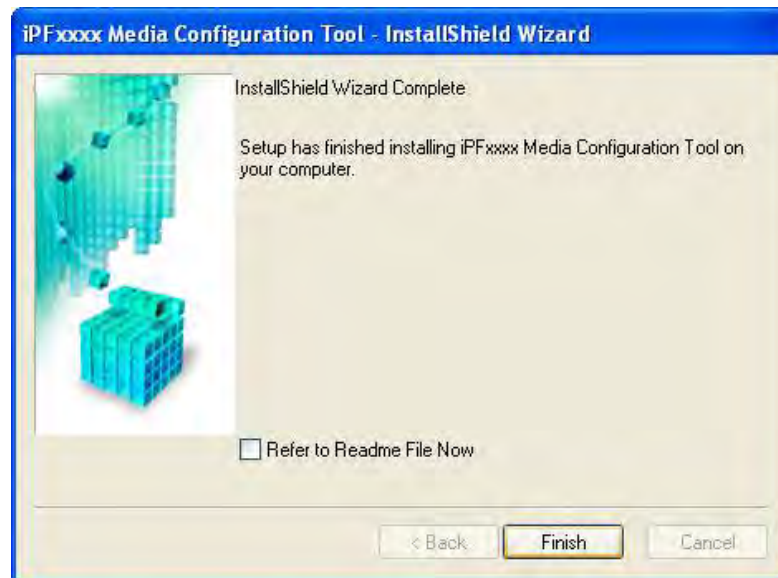


This completes the installation of Media Configuration Tool.

## Starting the Media Configuration Tool

Follow the procedure below to start Media Configuration Tool.

From the **start** menu go to **Programs > iPFxxxx Media Configuration Tool > iPFxxxx Media Configuration Tool**.


Media Configuration Tool main window is displayed.

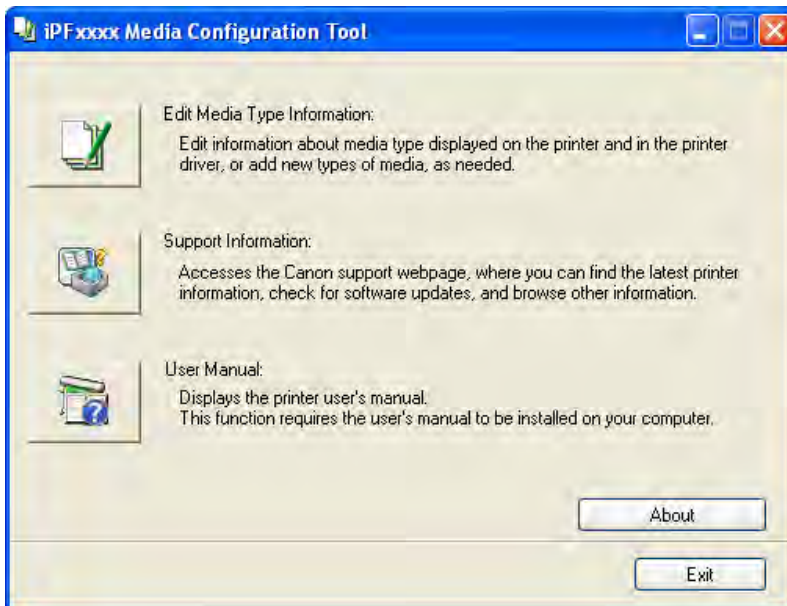

4

## Media Configuration Tool Main Window

The explanation below is on the Media Configuration Tool main window.

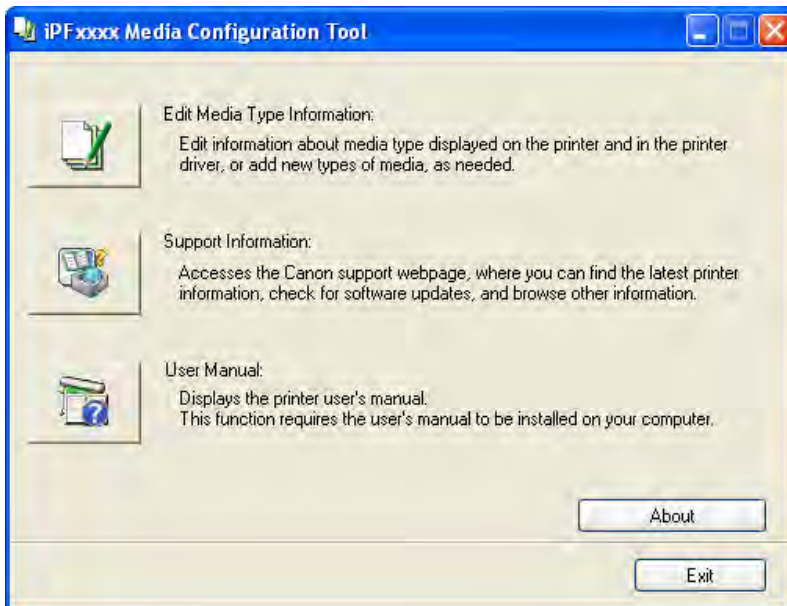

### Note

- For the step to open the Media Configuration Tool main window, see "Starting the Media Configuration Tool." →P.409

## Edit Media Type Information Button

Click the button to open the **Edit Media Types** dialog box and you can edit the media types.

For more information about **Edit Media Type Information**, see "Editing Media Type Information." →P.411

## Support Information Button


Click this button to access the Canon support webpage, where you can find the latest printer information, check for software updates, and browse other information.

## User Manual Button

Click this button to display the printer user manual. This function requires that the user manual be installed on your computer.

## Editing Media Type Information

Click the **Edit Media Type Information** button in the Media Configuration Tool main window to display the **Edit Media Types** dialog box.

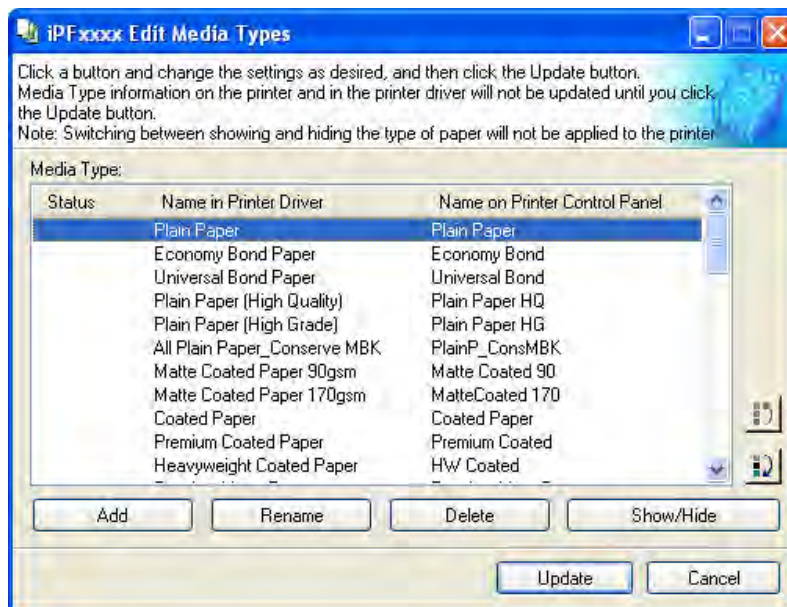

This dialog box presents functions for the following tasks.

- Adding Media Types →P.412
- Changing Media Names →P.414
- Deleting Media Types You Have Added →P.416
- Switching Media Types Display Show/Hide →P.418
- Changing the Display Order of Media Types →P.419




### Note

- It may not be possible to deleting, showing/hiding, and changing the display order under some conditions.




## Adding Media Types

1. Open the **Edit Media Types** dialog box, and then click the **Add** button.

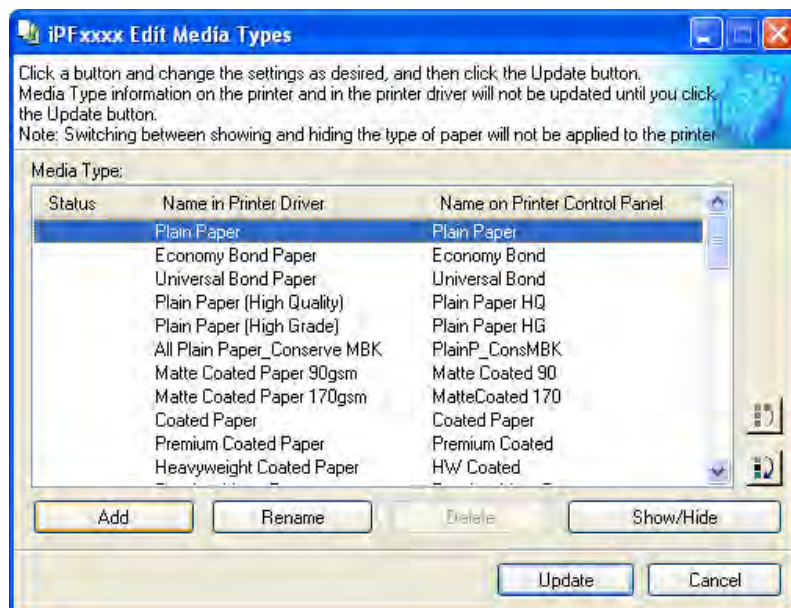


2. The **Add Media Type** dialog box displays. Click the **Browse** button.

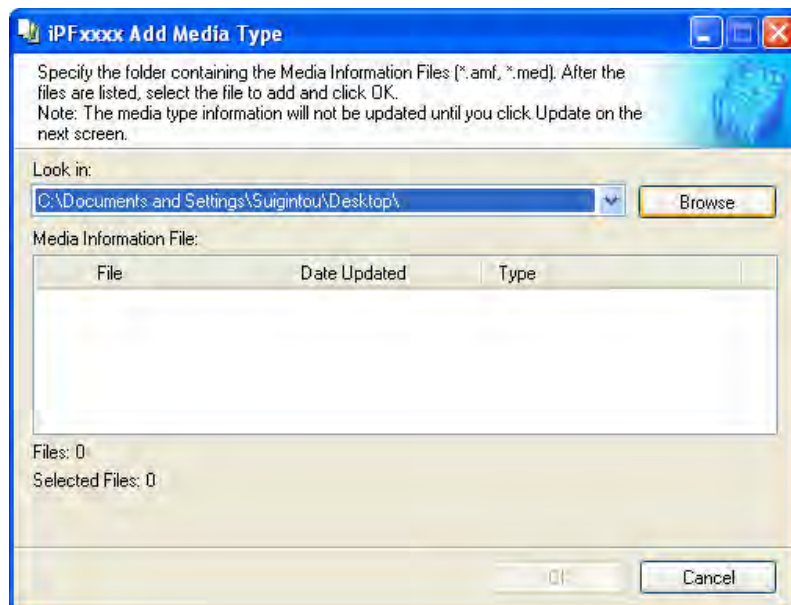




- The **Browse for Folder** dialog box opens.  
Select the folder that contains the media information files (.amf and .med files), and then click the **OK** button.

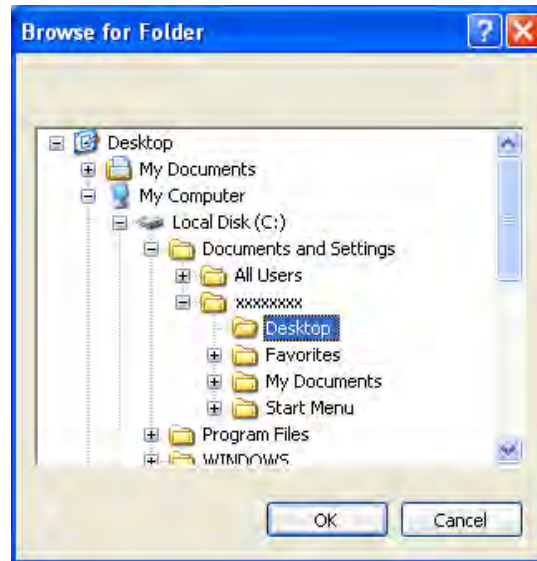


- The names of media information files in the folder you selected in the **Browse for Folder** dialog box are displayed under **Media Information File** in the **Add Media Type** dialog box. Select the check boxes of paper to add and click the **OK** button.

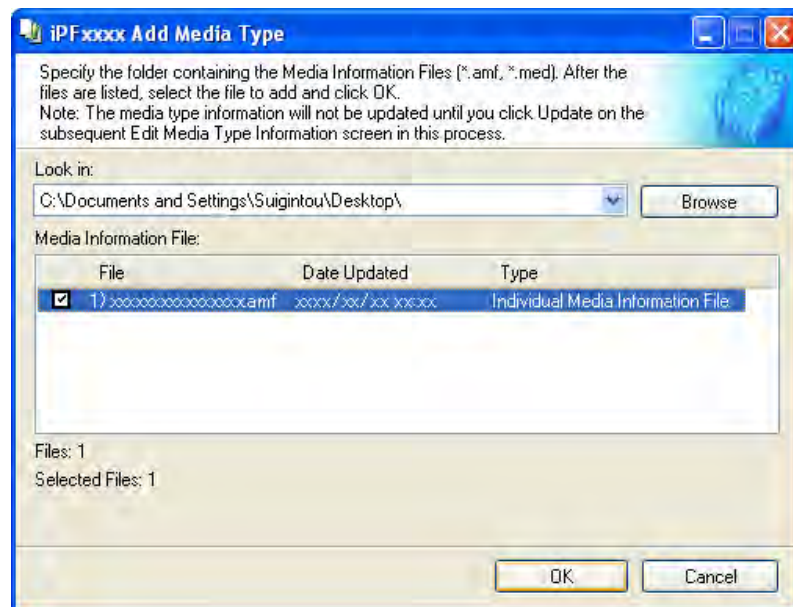

- Click **OK** when the confirmation message is displayed.

6. In the **Edit Media Types** dialog box, click the **Update** button.

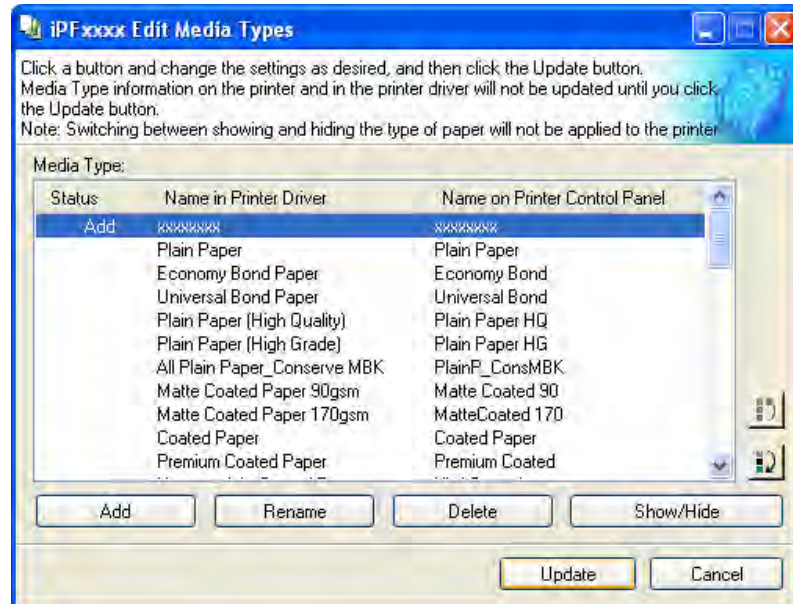

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.421




#### Important


- Be sure to click the **Update** button. If you do not, your changes will not be applied to the printer and printer driver.

## Changing Media Names

1. Open the **Edit Media Types** dialog box.

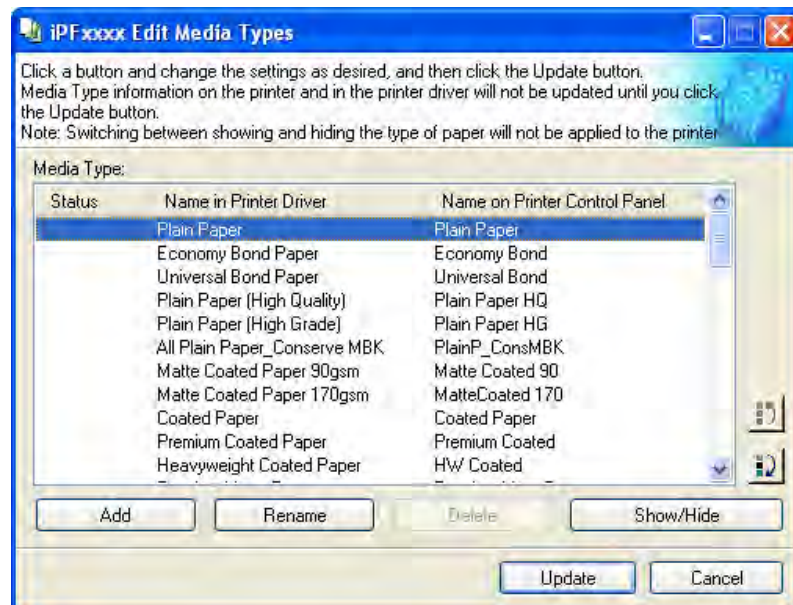


- In the **Media Type** list, select the name to change.  
Click the **Rename** button.

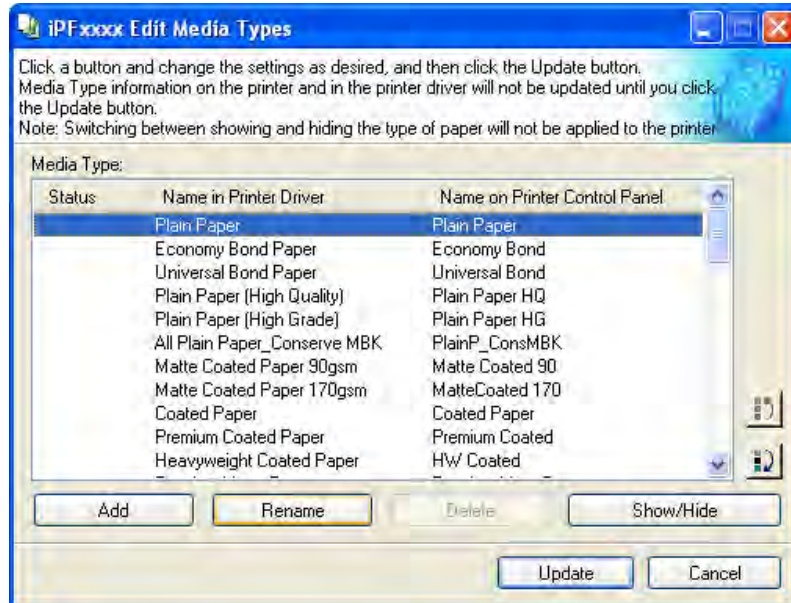

4


- The **Rename Media** dialog box is displayed.  
Edit the names in **Name in Printer Driver** and **Name on Control Panel** and click the **OK** button.

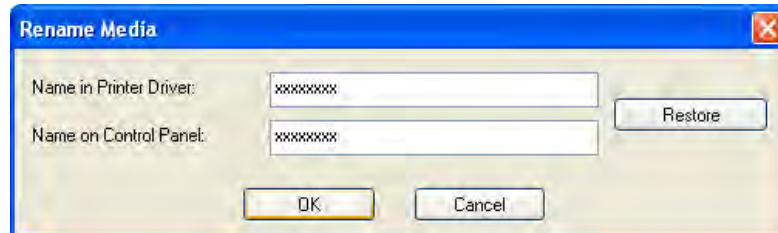**Note**

- To restore the original names, click the **Restore** button.

415

4. In the **Edit Media Types** dialog box, click the **Update** button.

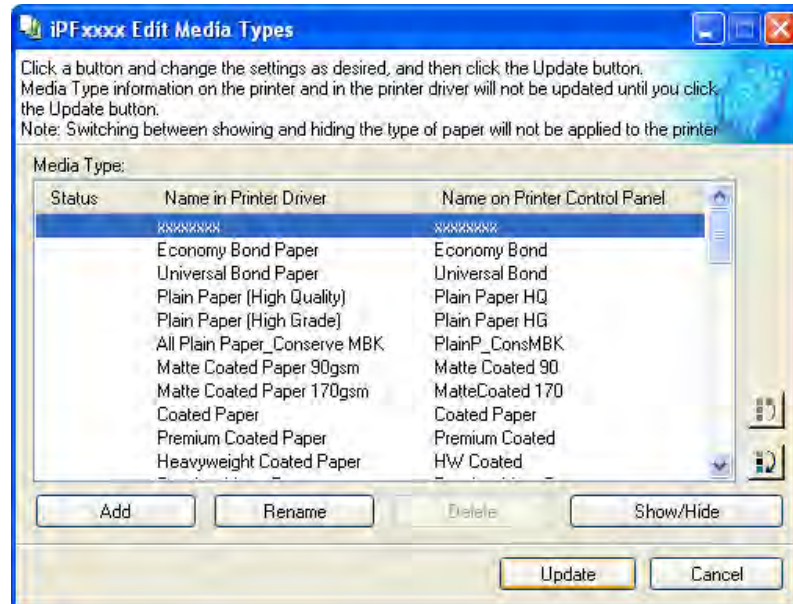

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.421




#### Important

- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.


## Deleting Media Types You Have Added

1. Open the **Edit Media Types** dialog box.

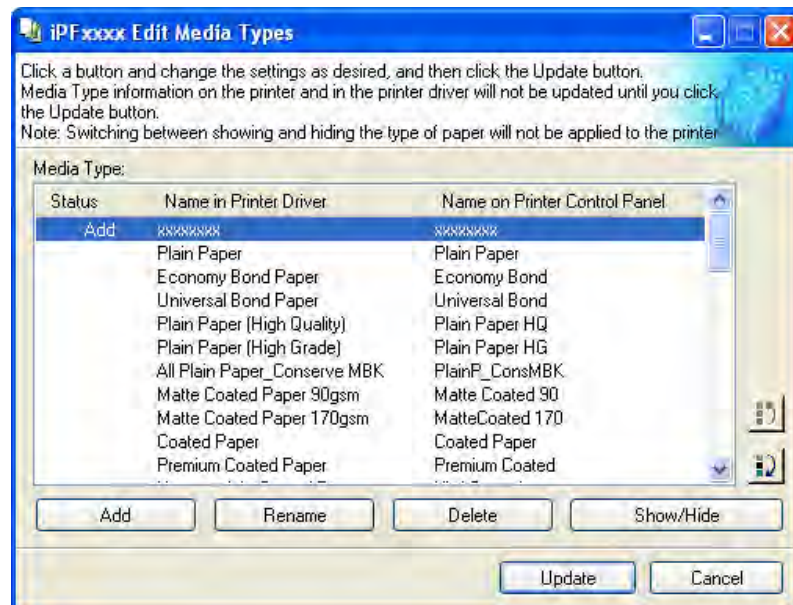




- In the **Media Type** list, select the name of the media to delete.  
Click the **Delete** button.

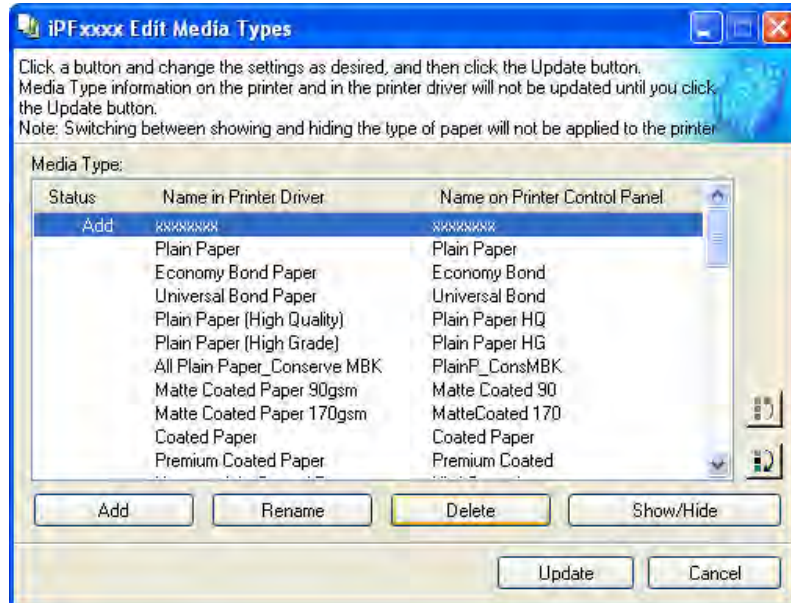**Note**

- Only paper for which **Status** in the **Media Type** is **Add** can be deleted.

- In the **Edit Media Types** dialog box, click the **Update** button.

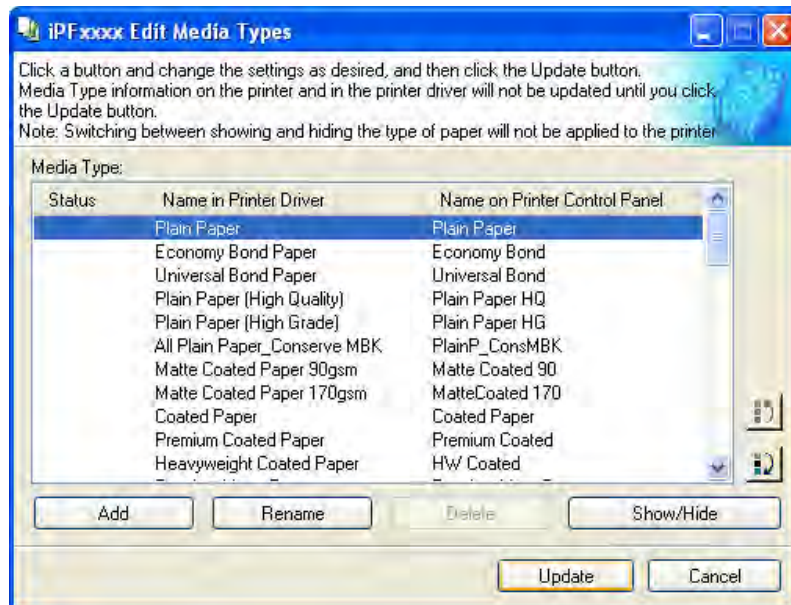


The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.421

**Important**


- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.

## Switching Media Types Display Show/Hide

1. Open the **Edit Media Types** dialog box.

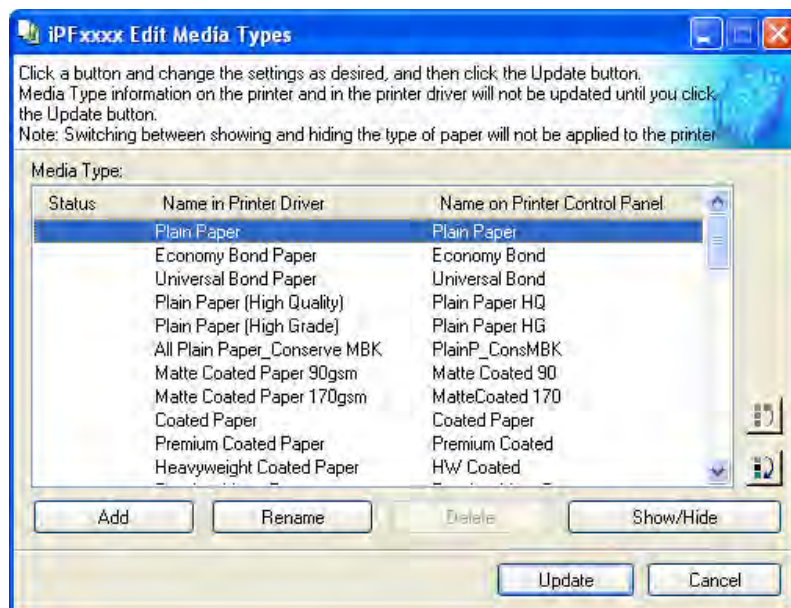

2. In the **Media Type** list, select the name of the media to switch off or on for display. Click the **Show/Hide** button. The selected paper is alternately shown or hidden.

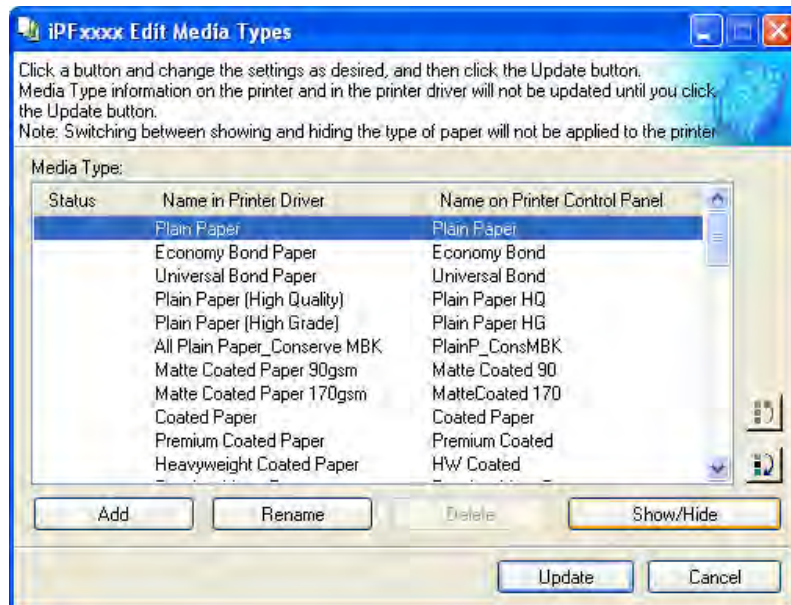


### Note

- The names of media switched for non-display appear grayed out in the **Media Type** list.



3. In the **Edit Media Types** dialog box, click the **Update** button.

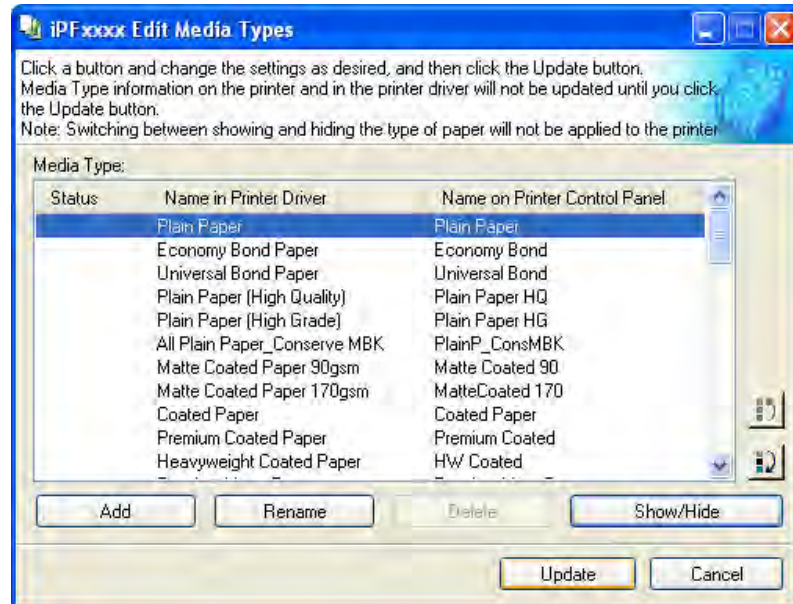

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.421






#### Important


- Be sure to click the **Update** button. If you do not, your changes will not be applied to the printer and printer driver. Switching between showing and hiding the type of paper will not be applied to the printer.

## Changing the Display Order of Media Types

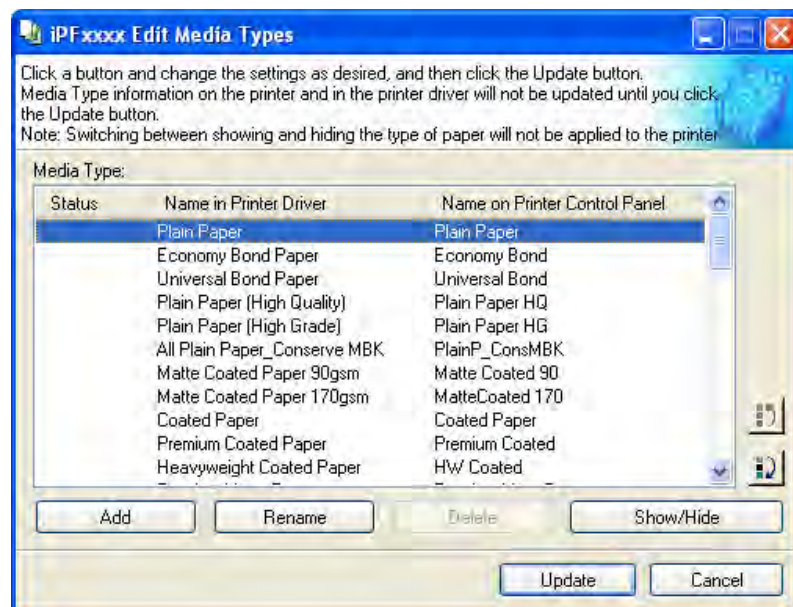
1. Open the **Edit Media Types** dialog box.



2. Select the paper in the **Media Type** list for which to change the display order, and then click the buttons to move the item (  or  ).  
The selected item moves one line up or down for every button click.

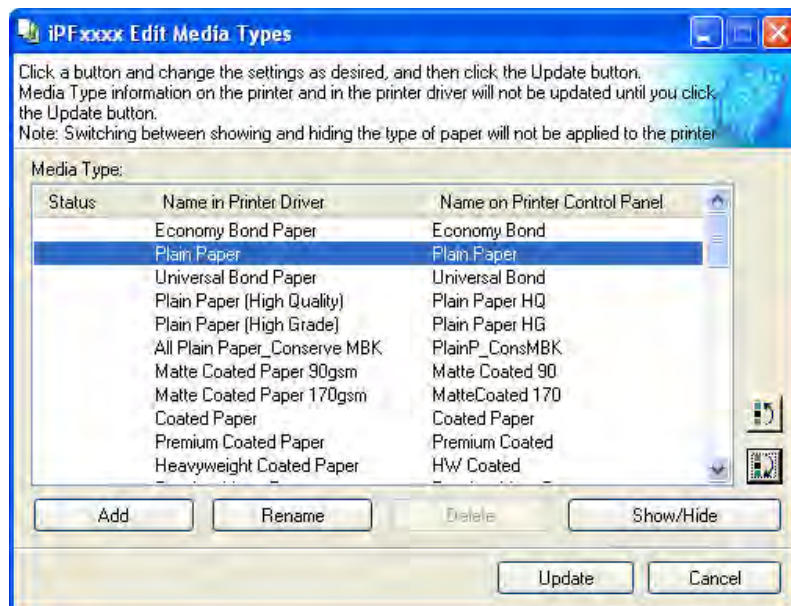

3. In the **Edit Media Types** dialog box, click the **Update** button.

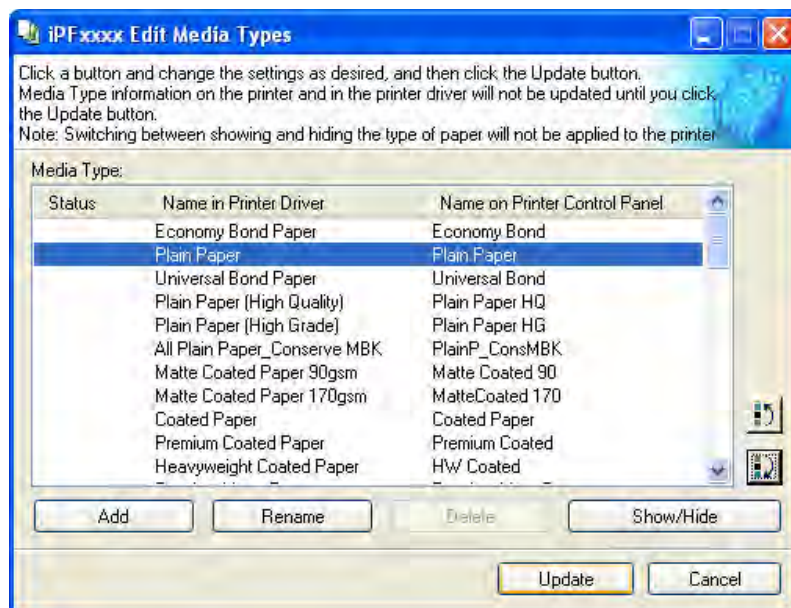

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.421



#### Important

- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.

## Updating Media Types

Clicking the **Update** button on the **Edit Media Types** dialog box opens the **Update Media Types** wizard. You can use this wizard to apply new information about print media in the printer and in the printer driver.


The procedures for updating the media information with the **Update Media Types** wizard are as follows.



### Important


- The use of this procedure is based on the assumption that Media Configuration Tool is updated or you have a media information file for print media that is to be updated.

1. Confirm the printer, where media type information is to be updated, to be displayed in **Printer** in the **Update Media Types - Select Printer** dialog box, and then click the **Next** button.

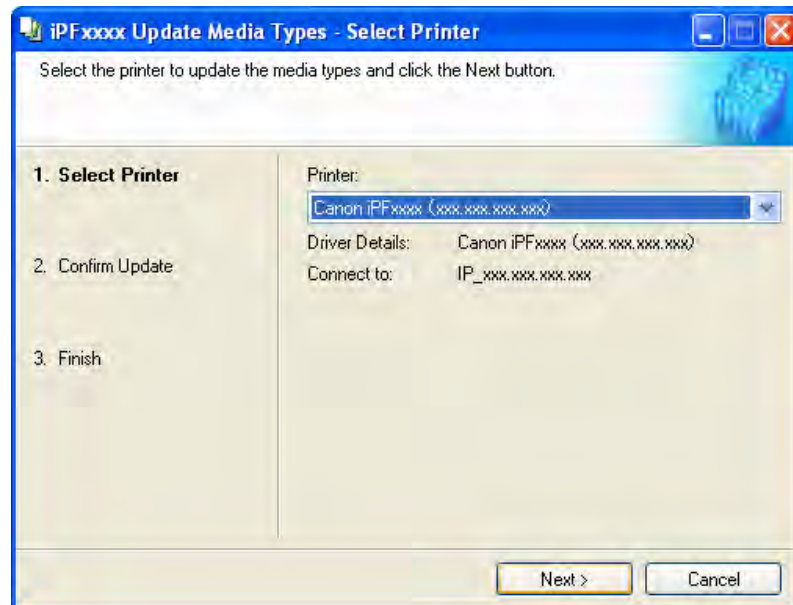


### Note

- If the printer driver is not installed, the following dialog box is displayed. Select how the printer to update is connected.

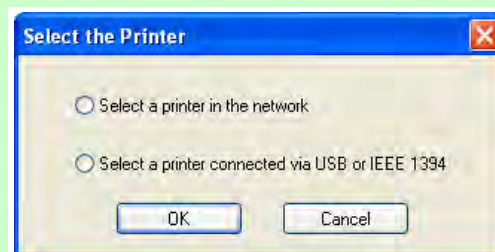


2. Communication with the printer starts and the following dialog box is displayed.

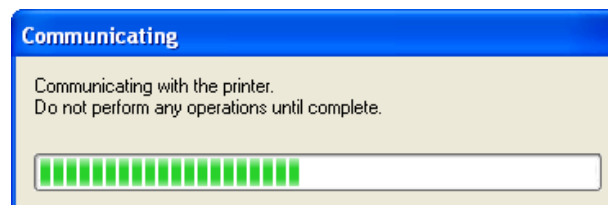




**Important**

- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- When the program cannot communicate with the printer, the following warning message is displayed.

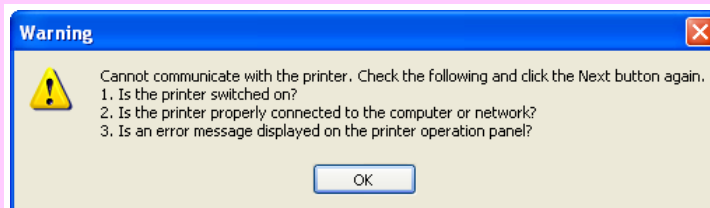

3. When the program has finished communicating with the printer, the screen moves to display **Update Media Types - Confirm Update**. Confirm the information received from the printer. To update click the **Execute** button.


4

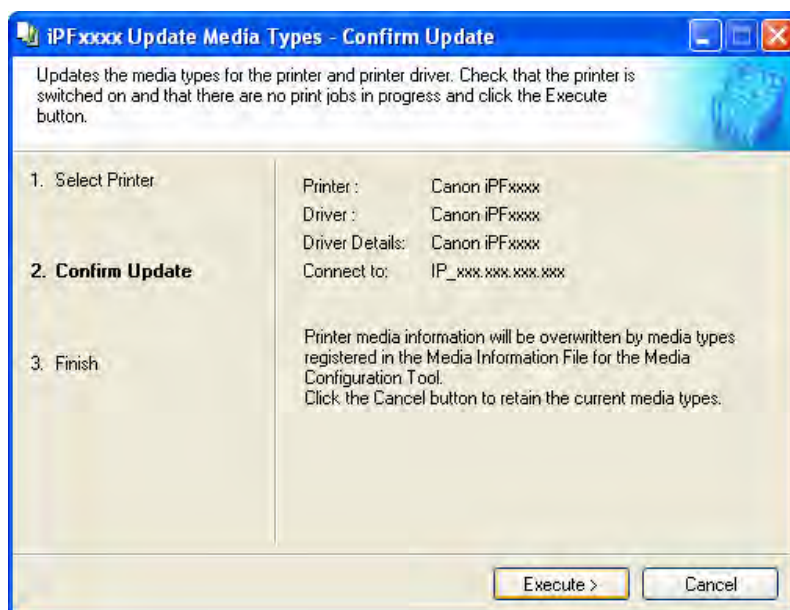

**Important**

- When setting a data to the printer that differs from the data to be updated, the selected media information file is updated. When you would like to remain the data that is set to the printer, click the **Cancel** button.

4. Communication with the printer starts and the following dialog box is displayed.

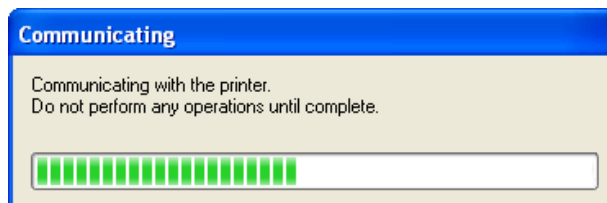


422




**Important**

- Do not attempt to print or turn the printer off while the program is communicating with the printer.
- When the program cannot communicate with the printer, the following warning message is displayed.

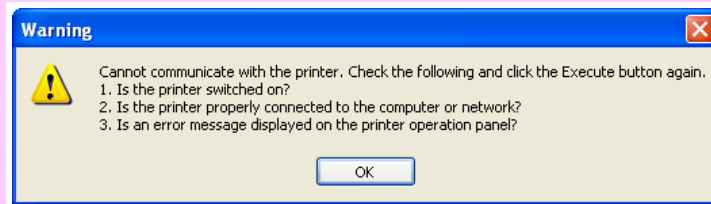


5. After the media information file is updated successfully, the screen switches to the **Update Media Types - Finish** dialog box. Click **Finish** to close the **Update Media Types** wizard.

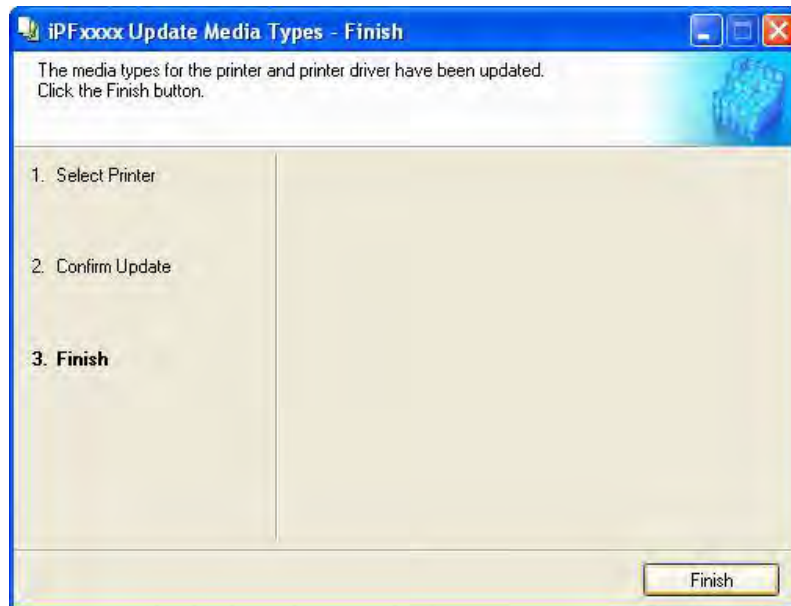

## Mac OS X Software

Printer Driver	425
Preview	452
Free Layout	481
Color imageRUNNER Enlargement Copy	513
Printmonitor	538
Media Configuration Tool	539

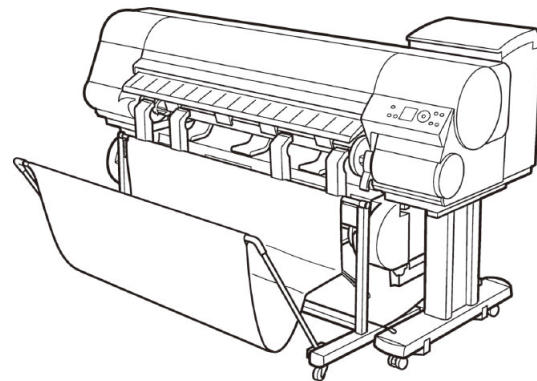




## Printer Driver

Printer Driver Settings .....	425
Specifying Paper in the Printer Driver .....	427
Confirming Print Settings .....	429
Checking the Layout in a Preview Before Printing .....	431
Using Favorites .....	432
Accessing the Printer Driver Dialog Box from Applications .....	432
Main Pane .....	433
Paper Information on Printer Dialog Box .....	437
Paper Detailed Settings Dialog Box .....	438
View settings Dialog Box for the Printing Application .....	439
Matching pane .....	440
Color Settings Pane: Color .....	442
Object Adjustment dialog box: Color .....	443
Color Settings Pane: Monochrome .....	444
Object Adjustment dialog box: Monochrome .....	446
Page Setup Pane .....	447
Utility Pane .....	449
Additional Settings Pane .....	450
Support Pane .....	451

## Printer Driver Settings

For instructions on accessing the Mac OS X printer driver, refer to the following topics.

- Accessing the Printer Driver Dialog Box from Applications →P.432

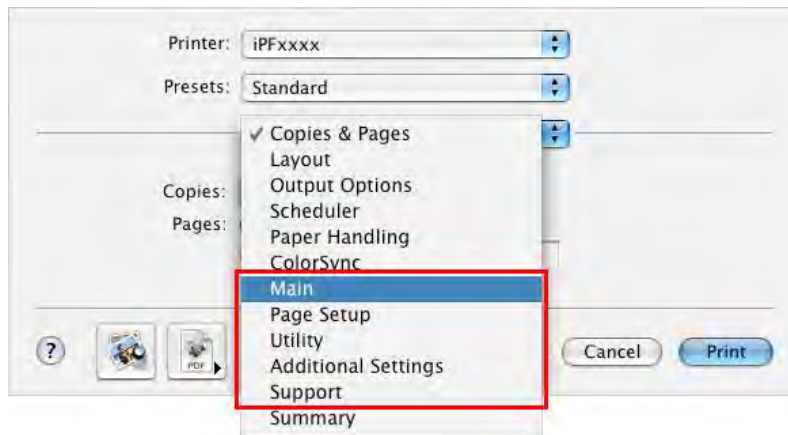

For information on the Mac OS X printer driver settings, refer to the following topics.

- Main Pane →P.433
  - You can specify the media type, color processing, print quality, print preview, and other settings. Choose **Easy Settings** to specify basic print settings based on the printing application or **Advanced Settings** to complete more detailed settings as desired.
  - Paper Detailed Settings Dialog Box →P.438
  - View settings Dialog Box for the Printing Application →P.439
  - Color Settings Pane: Color →P.442

- Color Settings Pane: Monochrome →P.444
- Page Setup Pane →P.447  
You can specify the page size of the original, borderless printing, enlargement or reduction, the orientation, the paper size and source, and automatic cutting.
- Utility Pane →P.449  
You can specify settings related to maintenance for the Printhead and feed amount, as well as settings for **Color imageRUNNER Enlargement Copy**.
- Additional Settings Pane →P.450  
You can specify settings for how print jobs are sent to the printer.
- Support Pane →P.451  
You can view support information and the user's manual.

With the **imagePROGRAF Free Layout** feature, you can arrange originals from various source applications on a single page before printing. For details, see **Free Layout** →P.481 .

With the **imagePROGRAF Preview** feature, you can check the layout before printing and adjust layout or size settings while viewing a preview screen. For details, see **Preview** →P.452 .

With the **Color imageRUNNER Enlargement Copy** feature, you can automatically enlarge and print scanned originals from a **Color imageRUNNER**. For details, see **Color imageRUNNER Enlargement Copy** →P.513 .

## Specifying Paper in the Printer Driver


If you have replaced the paper, you must complete the following settings in the printer driver.

1. This sets the **B Format for** and **C Paper Size**.



### Note

- The configuration method varies depending on the OS and application software you are using. If **Page Setup** is displayed in the application menu, the settings are configured by opening the **Page Attributes** dialog box from **Page Setup**.

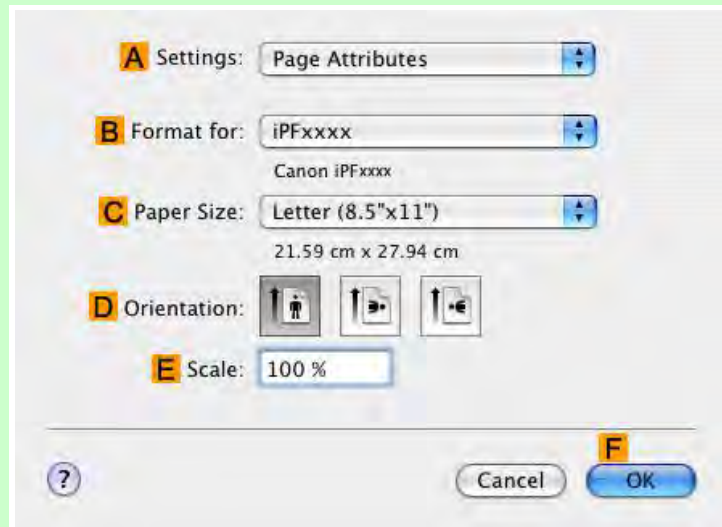


If it is not displayed, the settings are configured in the upper part of the printer driver displayed when you select **Print** from the application software menu.




2. Select the printer in the **A Printer** list.
3. Choose the original size in the **F Paper Size** list.
4. If you configured the settings using the **Page Attributes** dialog box, click **F OK** to close the dialog box, and then select **Print** from the application software menu.

5. Access the **Main** pane.

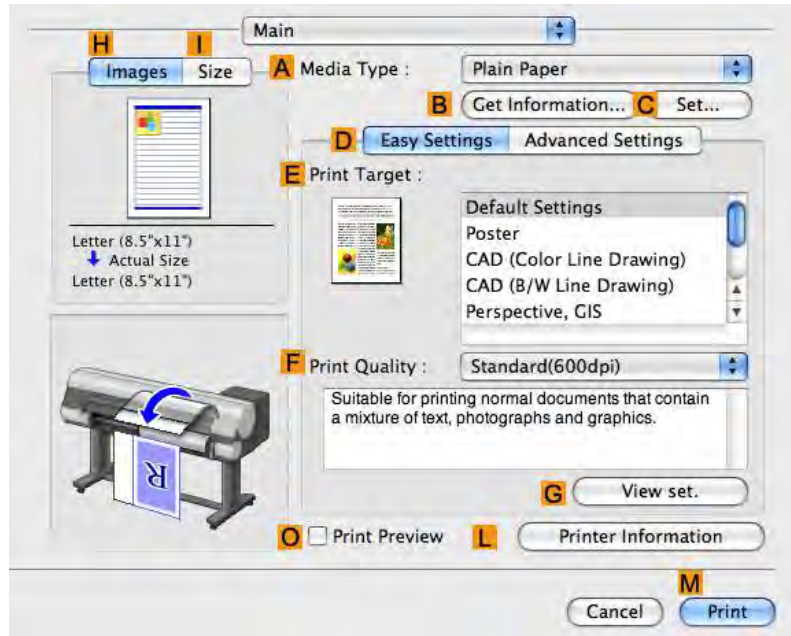

6. In the **A Media Type** list, select the type of paper that is loaded.

7. Access the **Page Setup** pane.

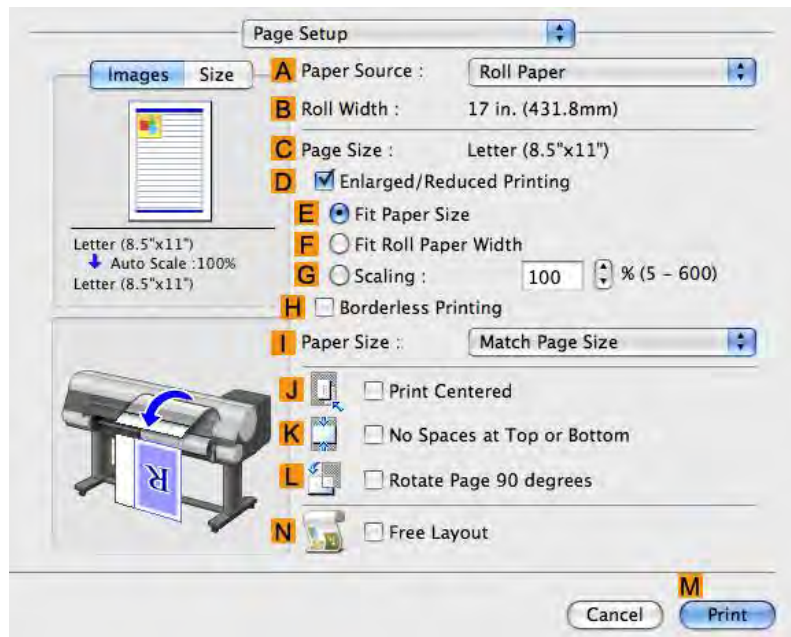


8. In the **A Paper Source** list, select how paper is supplied.

9. If you have selected **Cut Sheet** in **A Paper Source**, make sure the size as selected in **Page Setup** is displayed in **C Page Size**. If you have selected roll paper in **A Paper Source**, make sure the width of the loaded roll is displayed in **B Roll Width**.



#### Note

- If the width of the roll loaded in the printer is not shown in **B Roll Width**, click **L Printer Information** on the **Main** pane to update the printer information.

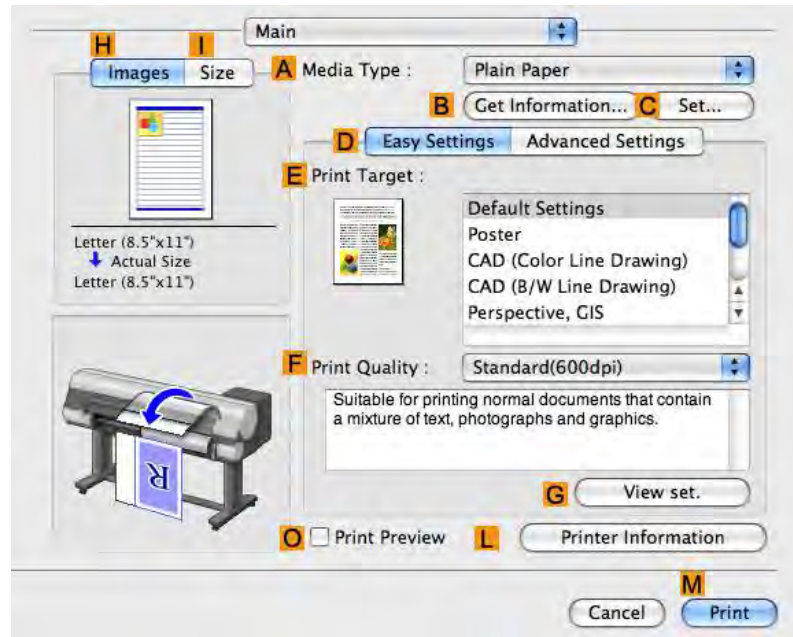

#### Note

- A variety of settings are available in the printer driver to suit different printing applications. For details on available printing conditions, see "Printer Driver Settings →P.425 "


## Confirming Print Settings

There are two ways to confirm what printing conditions have been specified, as follows.

- Checking a preview of the settings
- Checking a print preview

### Checking a preview of the settings

A preview of the settings is displayed on the left side of the **Main**, **Page Setup**, **Utility**, and **Additional Settings** panes. By checking images and numerical values in the preview, you can confirm current settings for the page size, orientation, paper source, and so on.

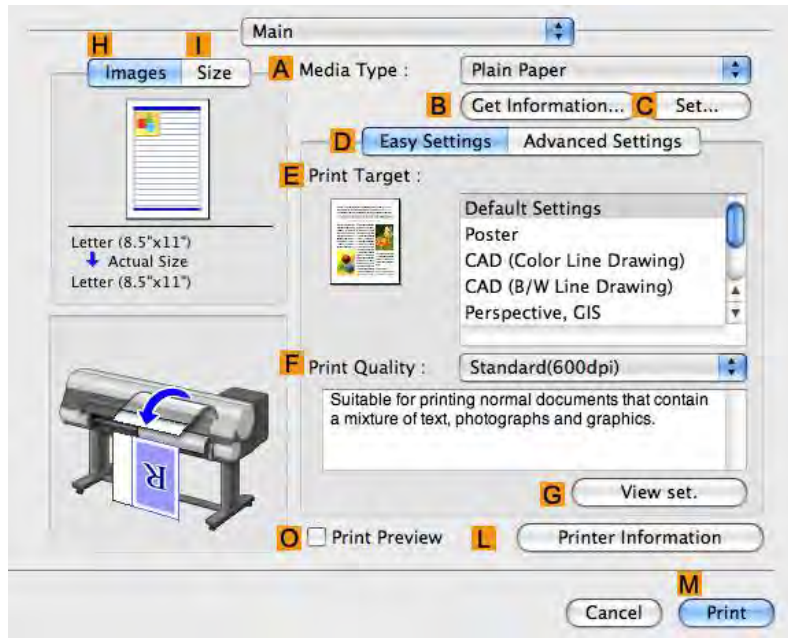

Display Area	Information Displayed
Pane displayed when the <b>H Images</b> tab is clicked	On top, illustrations indicate the page size of the original, the paper size, orientation, layout, borderless printing selection, color mode, and other settings information. Under this, the page size, paper size, and method and percentage of enlargement or reduction is displayed.
Pane displayed when the <b>I Size</b> tab is clicked	Paper size details are indicated numerically.
Pane with printer and paper illustrations	Illustrations indicate the paper source, orientation, borderless printing selection, and other settings information.



**Note**

- To confirm the **Print Target** specified in **Easy Settings**, click **G View set.** on the **Main** pane to display the **View settings** dialog box.

### Checking a print preview

You can check an image of the original just as it will be printed.

Confirming the image of print jobs beforehand helps prevent printing errors.


For details on print previews, see "Checking the Layout in a Preview Before Printing →P.184 "



## Checking the Layout in a Preview Before Printing


This topic describes how to check the layout before printing using the **Canon imagePROGRAF Preview** function.

1. Choose **Print** in the application menu.
2. Access the **Main** pane.

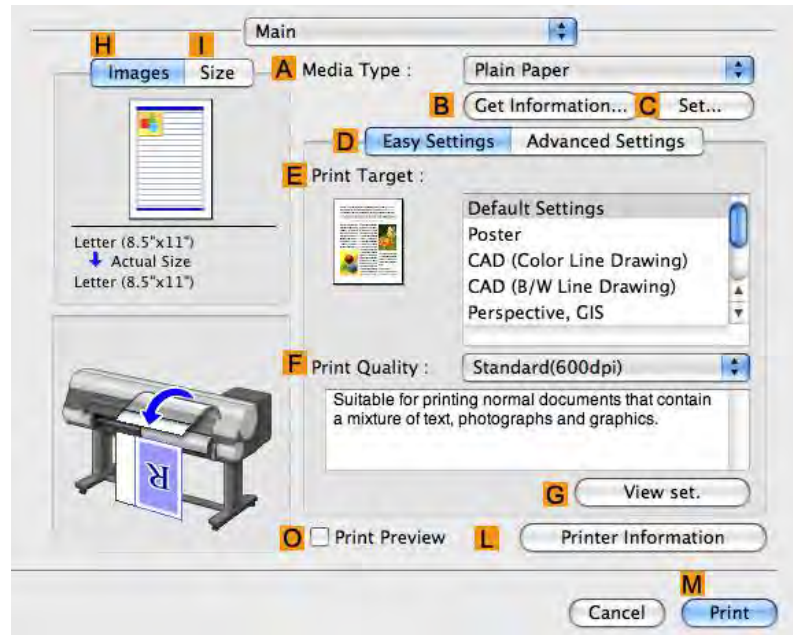

3. Select the  **Print Preview** check box.
4. Click **Print**.

5. The **Canon imagePROGRAF Preview** window is displayed.

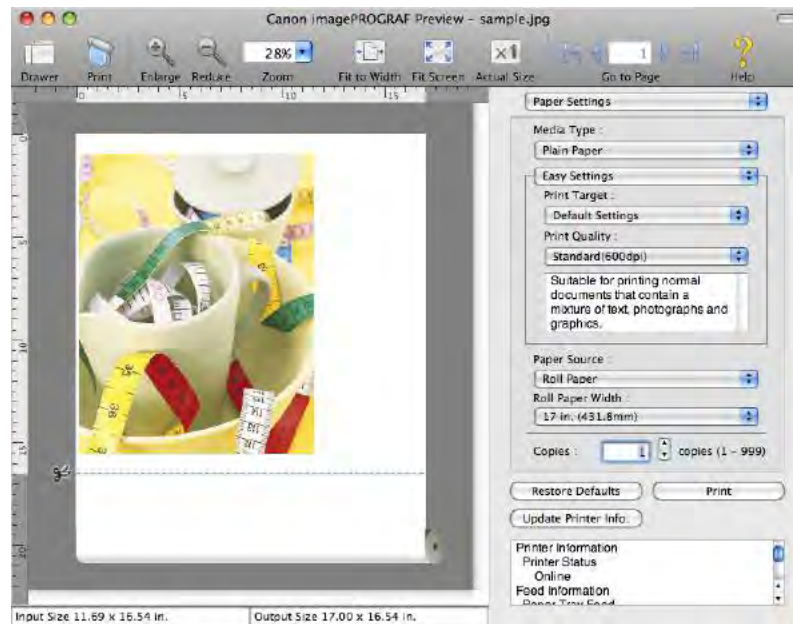

6. Check the layout and adjust settings in the **Canon imagePROGRAF Preview** window as desired.

7. Print from the **Canon imagePROGRAF Preview** menu.



**Note**

- For details on **imagePROGRAF Preview** functions, refer to **Preview** →P.452 .

## Using Favorites

You can use the **Presets** function in Mac OS X for favorite-based printing.



**Note**

- In the printing dialog box, click **Save As** in the **Presets** list to save the current print settings. This is a standard feature of the operating system. For details, refer to the Mac OS documentation.

## Accessing the Printer Driver Dialog Box from Applications


1. In the application software, select **Print** from the **File** menu to display the dialog box for printing conditions.



**Note**


- This dialog box includes basic printing options and enables you to choose the printer, specify the range of pages, number of copies, and so on.

2. Select the printer in the **Printer** list.

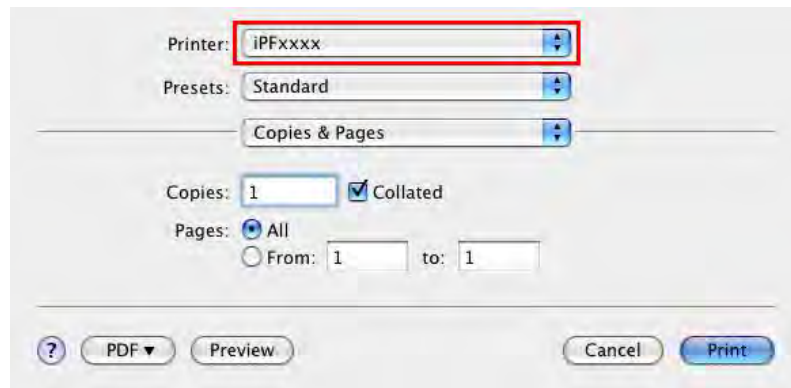

3. Click **Print** to start printing.

As shown in the following illustration, you can switch to other panes in this dialog box to complete settings for various methods of printing, including enlarged and reduced printing, borderless printing, and so on.

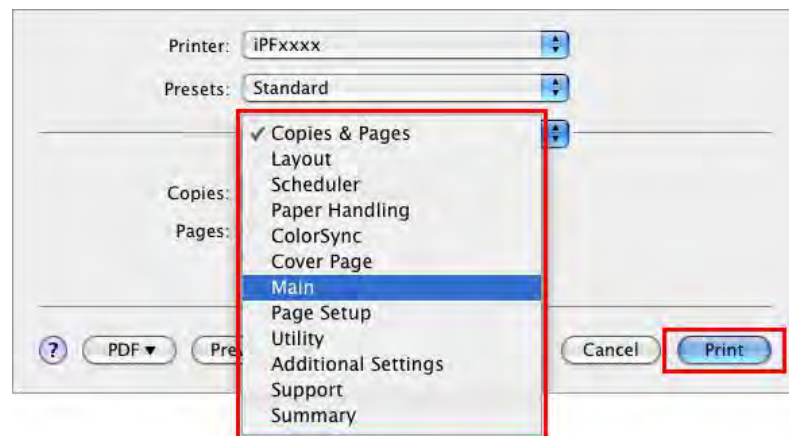

5

## Main Pane

The following settings are available on the **Main** pane. For details on settings items, refer to the printer driver help.




### Note

- On the **Main** pane, choose **Easy Settings** to specify basic print settings based on the print target, or switch to **Advanced Settings** to complete more detailed settings as desired.

433

## Common Items

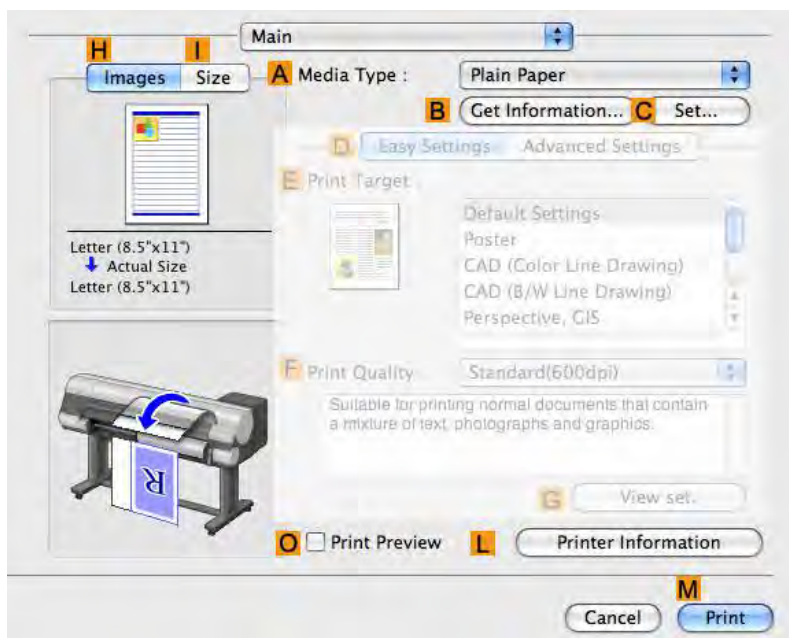**A Media Type**

Select the paper type.

For information on the types of paper the printer supports, refer to the Paper Reference Guide.(See "Types of Paper →P.617 ")

**B Get Information**

Displays **Paper Information on Printer**. You can update the printer driver settings for the feed source, media type, and roll width by selecting the feed source.

- Paper Information on Printer Dialog Box →P.437

**C Set**

Displays **Paper Detailed Settings**. You can configure the printing settings to match the type of media, such as the ink drying time.

- Paper Detailed Settings Dialog Box →P.438

**O Print Preview**

If you turn this on, **imagePROGRAF Preview** starts before printing.

This allows you to check on-screen previews of documents before printing.

**Important**


- This cannot be selected if **Free Layout** is enabled in the **Page Setup** panel.

- Checking the Layout in a Preview Before Printing →P.184

**L Printer**

Displays **Printer**. You can display printer information such as the remaining ink levels.

## Configuration using **Easy Settings**

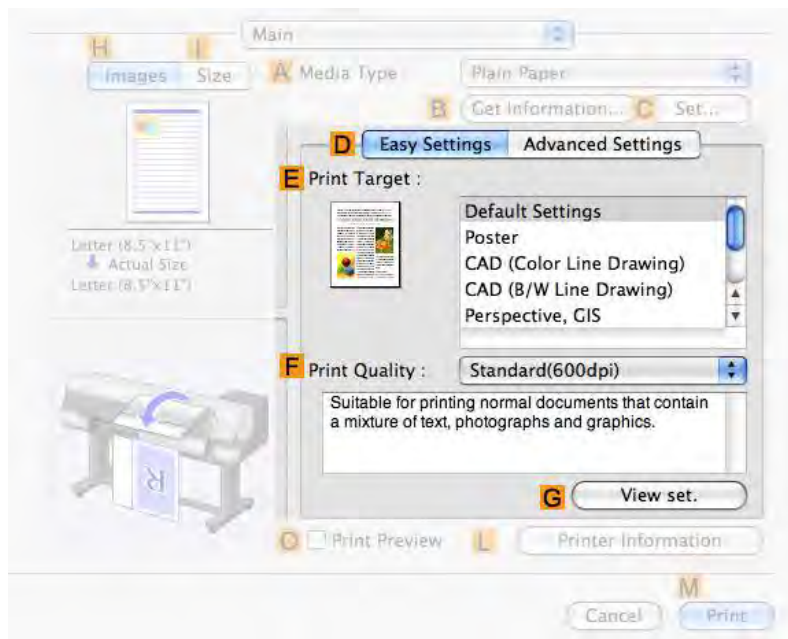

5

### **E Print Target**

Choose presets that match the type of document to be printed.

- Printing Photos and Images →P.30
- Printing Line Drawings and Text →P.19
- Printing Office Documents →P.38

### **F Print Quality**

Choose the level of print quality.


### **G View set.**

Click to display the **View settings** dialog box, which enables you to confirm the settings for the selected item from the **E Print Target** list or change the order of items listed in **E Print Target**.

- View settings Dialog Box for the Printing Application →P.439

435

## Configuration using **Advanced Settings**

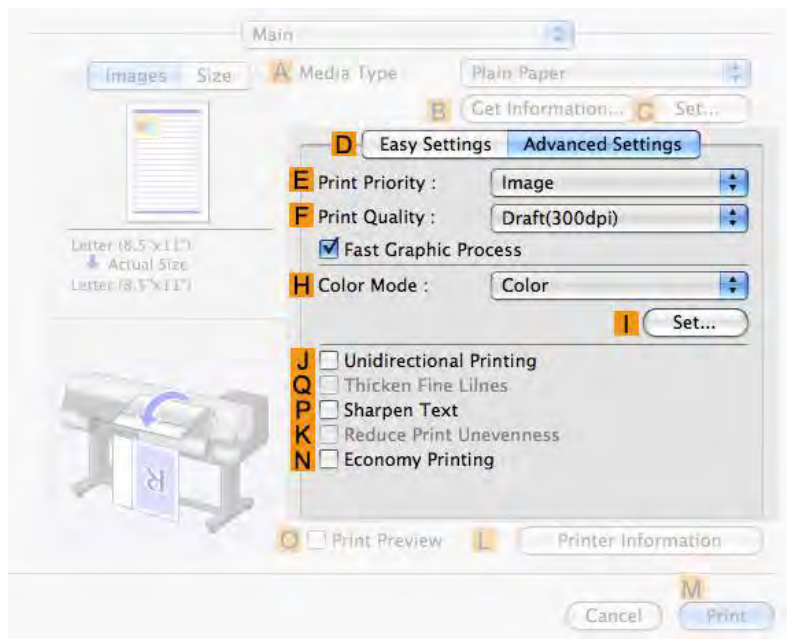

### **E** Print Priority

Choose the graphic elements that you want to emphasize for printing.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55

### **F** Print Quality

Choose the level of print quality.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55

### **H** Color Mode

Choose the color mode.

- Giving Priority to Particular Graphic Elements and Colors for Printing →P.55

### **I** Set

Click to display the **Color Settings** dialog box for more advanced color settings.

- Adjusting the Color in the Printer Driver →P.46

### **J** Unidirectional Printing

Select this checkbox to prevent problems such as misaligned lines and improve the print quality. However, the printing speed becomes slower.

### **Q** Thicken Fine Lines

Activate this option to print fine lines more distinctly.



## P Sharpen Text

Activate this option to print text more sharply.

## K Reduce Print Unevenness

Select this checkbox for two-pass printing to reduce color shading.

This option is displayed if you have selected Plain Paper in **Media Type** and **Office Document** in **Print Priority**.


## N Economy Printing

Select this checkbox to reduce the amount of ink consumed during printing. However, the print quality is worse than for normal printing.

Select this mode if you want to conserve ink when checking drawings, for example. Depending on the **Media Type** and **Print Quality** settings, this mode may not be available.

## Paper Information on Printer Dialog Box

On the **Paper Information on Printer** dialog box, you can obtain information on the paper in the printer and configure printer driver media type setting.

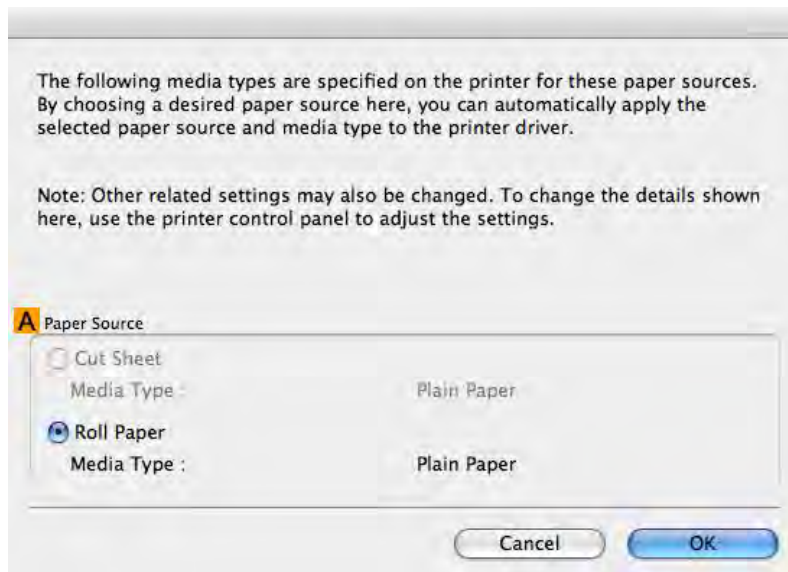

### Note

- To display the **Paper Information on Printer** dialog box, on the **Main** pane, click **Get Information by Media Type**. (See "Main Pane →P.433")

## A Paper Source

Shows the **Paper Source** supported by the printer, as well as the type of paper loaded. To update the media type setting in the printer driver, select the desired **Paper Source** option and click **OK**.

## Paper Detailed Settings Dialog Box

The **Paper Detailed Settings** dialog box offers the following settings. For details on settings items, refer to the printer driver help.



### Note

- To display the **Paper Detailed Settings** dialog box, on the **Main** pane, click **Set** by **Media Type**. (See "Main Pane →P.433 ")

### A Media Type

Select the paper type.

For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper →P.617 ")

### B Drying Time

Specify the time that the printer waits for ink to dry, as needed. The **Drying Time** setting is only valid for rolls.

- (See "Specifying the Ink Drying Time for Rolls →P.640 ")

### C Between Pages

Specify the time the printer waits after printing a page until ejecting the paper, as needed.

### D Between Scans

Specify the time the printer waits after printing a line on the page until printing the next line, as needed.

## E Roll Paper Margin for Safety

You can specify the length of a margin on the leading edge of paper to ensure that paper susceptible to curling is held firmly against the Platen.

## F Near End Margin

Specify the length of the **Near End Margin** (the leading edge margin) of the roll, as needed.

## G Cut Speed

Select the speed of automatic cutting, as needed. You can adjust this setting if paper is not cut well when automatic cutting is used.

## H Automatic Cutting

You can activate or deactivate automatic cutting and printing of cut lines, as desired. In this list, specify **Printer Default**, **None**, or **Print Cut Guideline**.


## J Mirror

Specify whether to print a mirror image, as needed. Select this option to print a version of the document or image with the left and right sides inverted.

5

## View settings Dialog Box for the Printing Application

In the **View settings** dialog box, you can check details of the selected printing application.

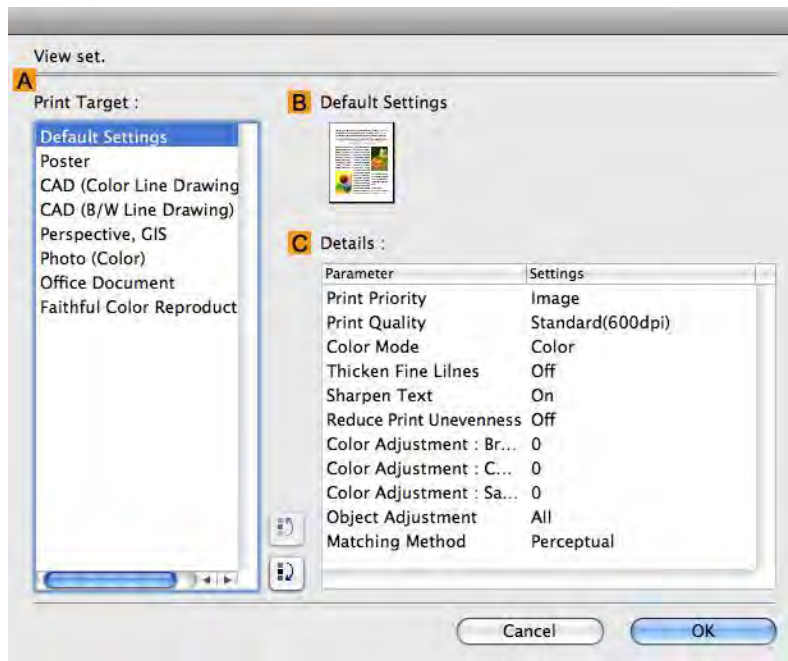

### Note

- To display the **View settings** dialog box, on the **Main** pane, click **View settings** by **Print Target**. (See "Main Pane →P.433")

439

## A Print Target

Shows all **Print Target** options (settings items for the printing application).

## B Name

Identifies the item selected in **Print Target** by its name and an icon.

## C Details

Here, you can confirm detailed settings values for each item selected in the **Print Target** list.

## Matching pane

On the **Matching** pane, you can specify color matching to compensate for differences in the appearance of colors on various devices.



### Important


- If **No color correction** is selected under **Color Mode**, the **Matching** pane is not displayed.



### Note

- To display the **Matching** pane, on the **Main** pane click **Color Settings** in **Color Mode** in **Advanced Settings**, and then click the **Matching** tab. (Refer to "Main Pane →P.433 ")

## Driver Matching Mode

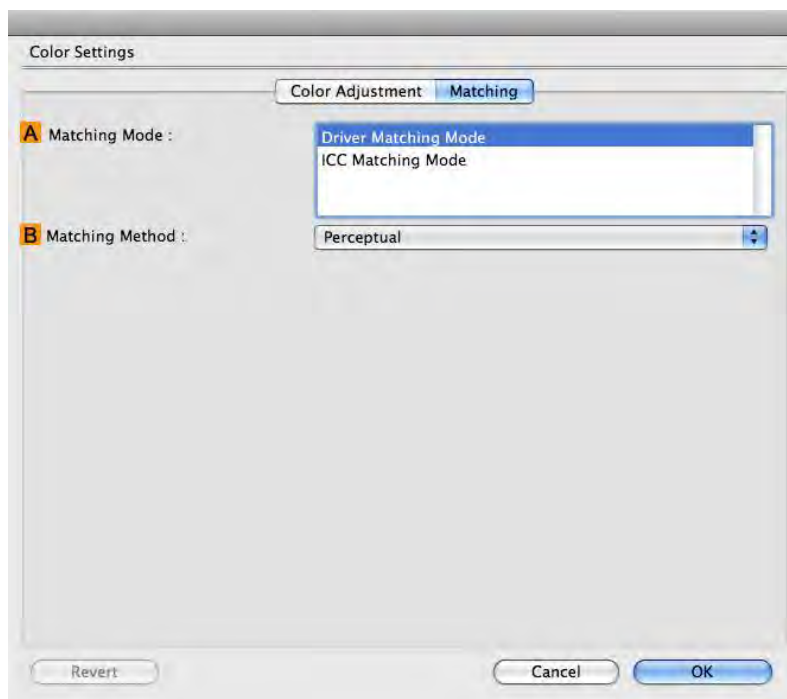

## A Matching Mode


Select the color matching mode to use, as desired.

## B Matching Method

Select the color matching method that suits the document to be printed. Various **B Matching Method** options are available depending on your selection in **A Matching Mode**.

## ICC Matching Mode

The following options are available when you select **ICC Matching Mode**, in the **A Matching Mode** list.

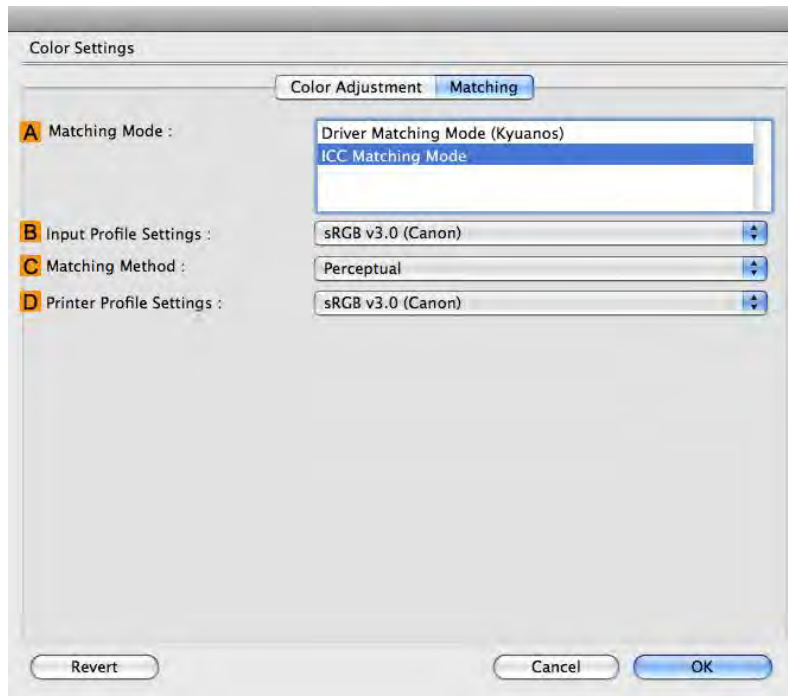

### Note

- To display the **Matching** pane, on the **Main** pane, click **Color Settings** by **Color Mode** in **Advanced Settings**, and then click the **Matching** tab. (See "Main Pane →P.433 ")

## A Matching Mode

Select the color matching mode to use, as desired.

## B Input Profile Settings

You can choose **Input Profile**.

Various options are available depending on your selected **A Matching Mode**.

## C Matching Method

You can choose **C Matching Method**.

Various options are available depending on your selected **A Matching Mode**.

## D Printer Profile Settings

Specify the printer profile as desired.

**Note**


- For details on settings items, see "Adjusting the Color in the Printer Driver →P.46 "

**Color Settings Pane: Color**

In general, make any needed adjustments to the color of documents in the application used to create them. However, if the color tone as printed is not as you expected, you can also adjust the color in the printer driver.

**Color Adjustment pane: color**

If the color tone as printed is not as you expected, you can adjust it on the **Color Adjustment** pane.

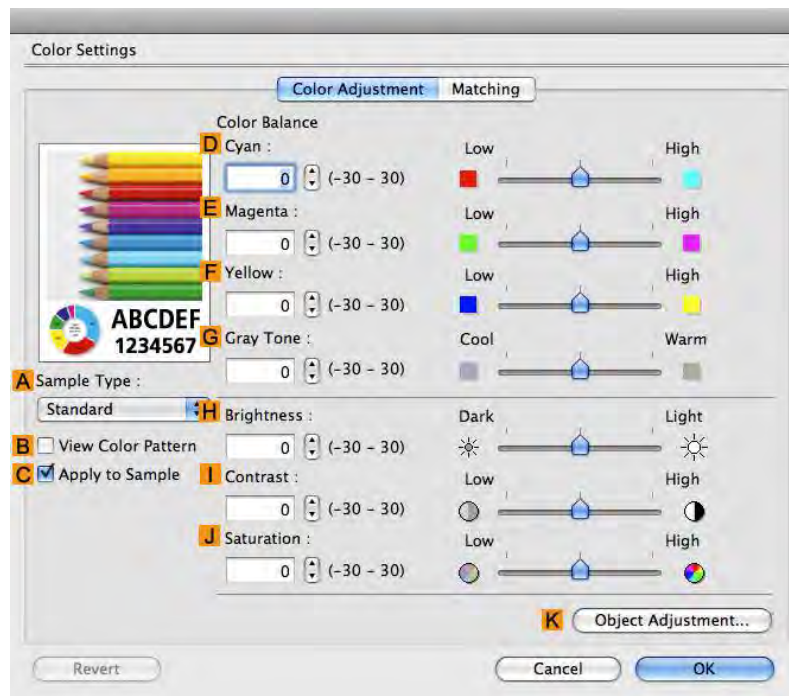**Note**

- To display the **Color Adjustment** pane, on the **Main** pane click **Color Settings** by **Color Mode** in **Advanced Settings**.(See "Main Pane →P.433 ")

**A Sample Type**

Choose a sample image from **Standard**, **Portrait**, **Landscape**, or **Graphics**.

**B View Color Pattern**

Select this checkbox to display the color pattern.

**C Apply to Sample**

Select this checkbox to apply the changed settings to the sample image.

**D Cyan / E Magenta / F Yellow**

Correct color tones by adjusting the levels of each color.



## G Gray Tone

Adjust the color tone of grays as desired. Choose **Cool** (tinged with blue) or **Warm** (tinged with red).

## H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

## I Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **Contrast** makes images sharper, and reducing the **Contrast** softens images.

## J Saturation

Adjust the color intensity as desired. Increasing the **Saturation** setting makes colors more vivid, and reducing the **Saturation** makes colors more subdued.



### Note

- For details on settings items, see "Adjusting the Color in the Printer Driver →P.46 "


## K Object Adjustment

Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

- Object Adjustment dialog box: Color →P.443

### Object Adjustment dialog box: Color

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

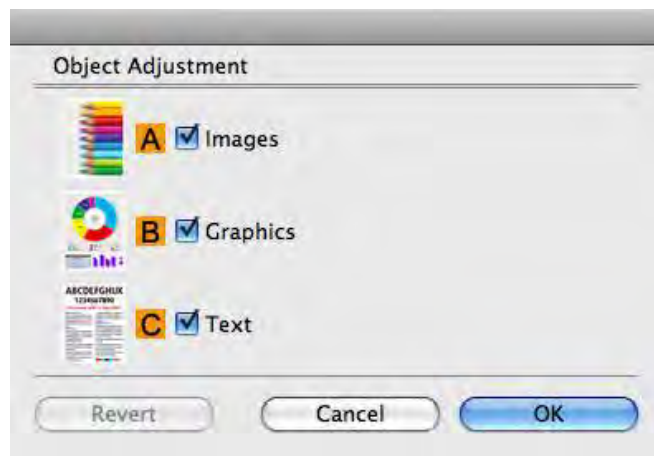

### Note

- To display the **Object Adjustment** dialog box, click **Object Adjustment** on the **Color Adjustment** panel.

## A Images

Select this option to apply color adjustment to image areas, such as photos.

## B Graphics

Select this option to apply color adjustment to graphics, such as lines and circles.

## C Text

Select this option to apply color adjustment to text.


## Color Settings Pane: Monochrome

The following settings are available on the **Color Settings** pane for monochrome printing.

### Color Adjustment pane: Monochrome

On the **Color Adjustment** pane for monochrome printing, you can adjust the brightness and contrast.

5

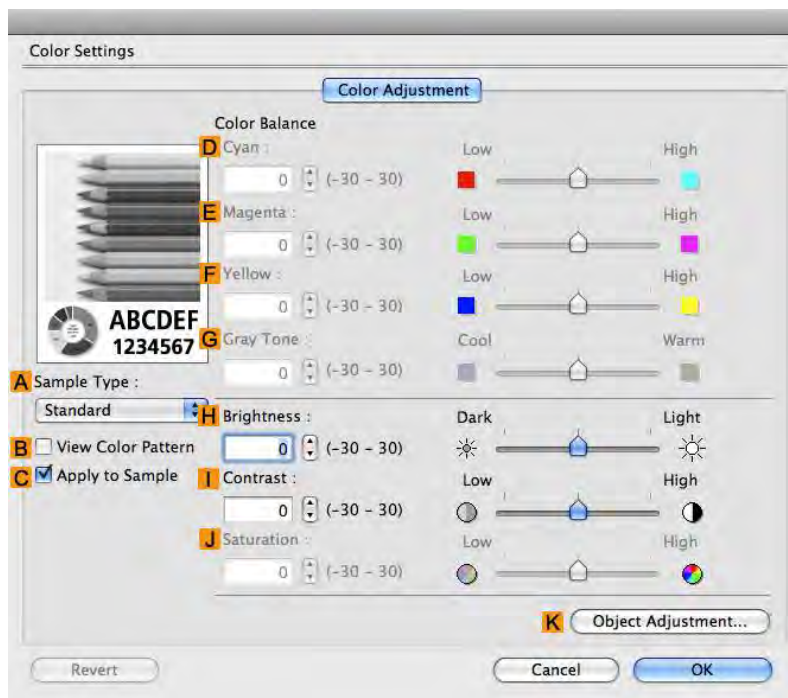

#### Note

- To display the **Color Adjustment** pane, on the **Main** pane, click **Color Settings** in **Advanced Settings**. (See "Main Pane →P.433")

## A Sample Type

Choose a sample image from **Standard**, **Portrait**, **Landscape**, or **Graphics**.

## B View Color Pattern

Select this checkbox to display the color pattern.

### C Apply to Sample

Select this checkbox to apply the changed settings to the sample image.

### D Cyan / E Magenta / F Yellow

Not available.

### G Gray Tone

Not available.

### H Brightness

Adjust the overall image brightness as desired. You can adjust the brightness if the printed document is lighter or darker than the original image (that is, the original photo that was scanned or the original graphic as it appears on the computer screen).

### I Contrast

Adjust the contrast of the darkest and lightest portions relative to each other, as desired. Increasing the **I Contrast** makes images sharper, and reducing the **I Contrast** softens images.

### J Saturation

Not available.



#### Note

- For details on settings items, see "Adjusting the Color in the Printer Driver →P.46 "

### K Object Adjustment


Select this option to display the **Object Adjustment** dialog box, in which you can specify objects subject to color adjustment.

(Only supported in Mac OS X 10.3.9-10.6)

- Object Adjustment dialog box: Monochrome →P.446

## Object Adjustment dialog box: Monochrome

In the **Object Adjustment** dialog box, you can specify what type of print jobs to apply color adjustment to. If an original comprises images, graphics, and text, you can specify which portion to apply color adjustment to.

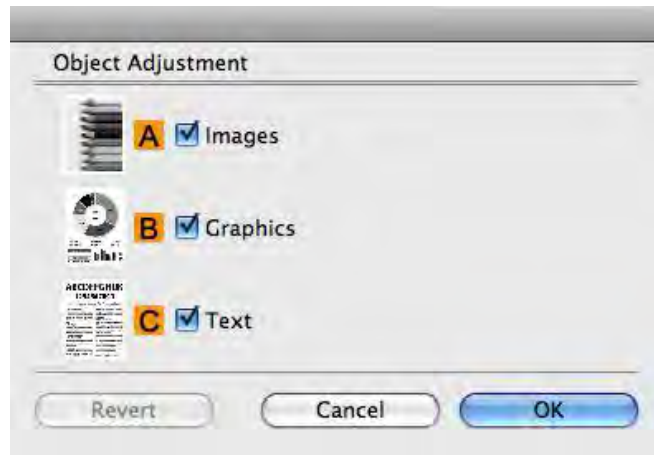

### Note

- To display the **Object Adjustment** dialog box, click **Object Adjustment** on the **Color Adjustment** panel.

### A Images

Select this option to apply color adjustment to image areas, such as photos.

### B Graphics


Select this option to apply color adjustment to graphics, such as lines and circles.

### C Text

Select this option to apply color adjustment to text.

## Page Setup Pane

The following settings are available on the **Page Setup** pane. For details on settings items, refer to the printer driver help.

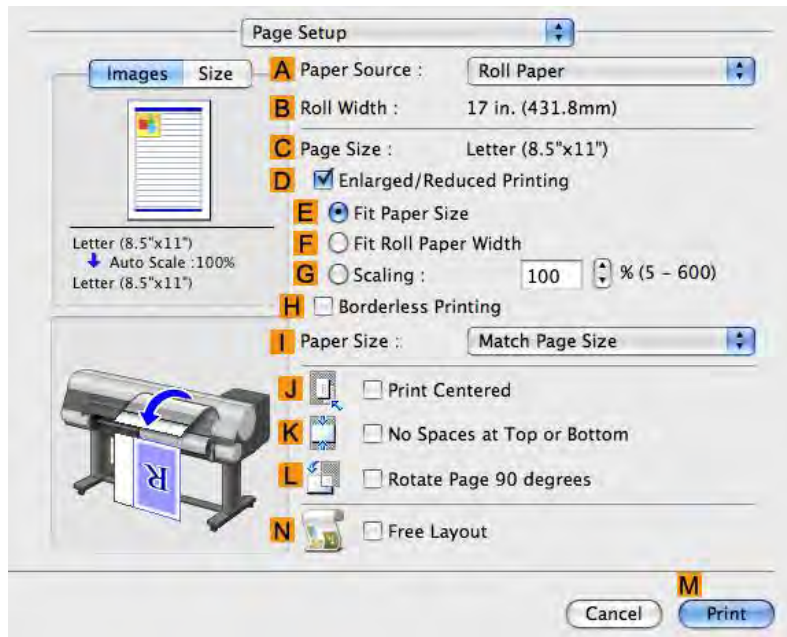

### A Paper Source

Choose how paper is supplied.

Options displayed in the list vary depending on the selection in **A Media Type** in the **Main** pane.

### B Roll Width

Displays the paper width of the roll loaded in the printer. **Unknown** is displayed if the printer cannot detect the roll paper width.

### C Page Size

Displays the size of the original, as specified in the page settings of the application. For details on page sizes available in the application, see "Paper Sizes" →P.620 "

### D Enlarged/Reduced Printing

Select this checkbox to choose the following options.

- Resizing Originals to Match the Paper Size →P.65
- Resizing Originals to Fit the Roll Width →P.71
- Resizing Originals by Entering a Scaling Value →P.77

### E Fit Paper Size

Resizes the document image to match the paper size.

### F Fit Roll Paper Width

Resizes the document image to match the roll width.

## G Scaling

Resizes the document image based on a specified scaling value. Enter a value in a range of **5–600**.

## H Borderless Printing

Borderless printing is available if roll paper is selected in the **A Paper Source** list. Activate this setting for borderless printing to match the size and width of the paper.

- Borderless Printing on Paper of Equivalent Size →P.100
- Borderless Printing by Resizing Originals to Fit the Roll Width →P.107
- Borderless Printing at Actual Size →P.91

## I Paper Size

Choose the size of the paper you will print on. Click **Display all selections for Paper Size** to list available sizes. For details on available paper sizes, see "Paper Sizes →P.620 "

## J Print Centered

Select this checkbox to print document images in the center of the paper.

- Printing Originals Centered on Rolls →P.154
- Printing Originals Centered on Sheets →P.160

## K No Spaces at Top or Bottom

Select this checkbox to print the next image skipping blank areas above and below printable data in documents, which enables you to conserve the paper.

- Conserving Roll Paper by Printing Originals Without Top and Bottom Margins →P.173

## L Rotate Page 90 degrees

Select this checkbox to rotate the document image by 90 degrees before printing.

- Conserving Roll Paper by Rotating Originals 90 Degrees →P.167

## N Free Layout

Select this checkbox to start **imagePROGRAF Free Layout** before printing. This allows you to print multiple documents next to each other.



### Important


- This cannot be selected if **Print Preview** is enabled in the **Main** panel.

- Printing Multiple Originals Next to Each Other →P.133



## Utility Pane

The following settings are available on the **Utility** pane.

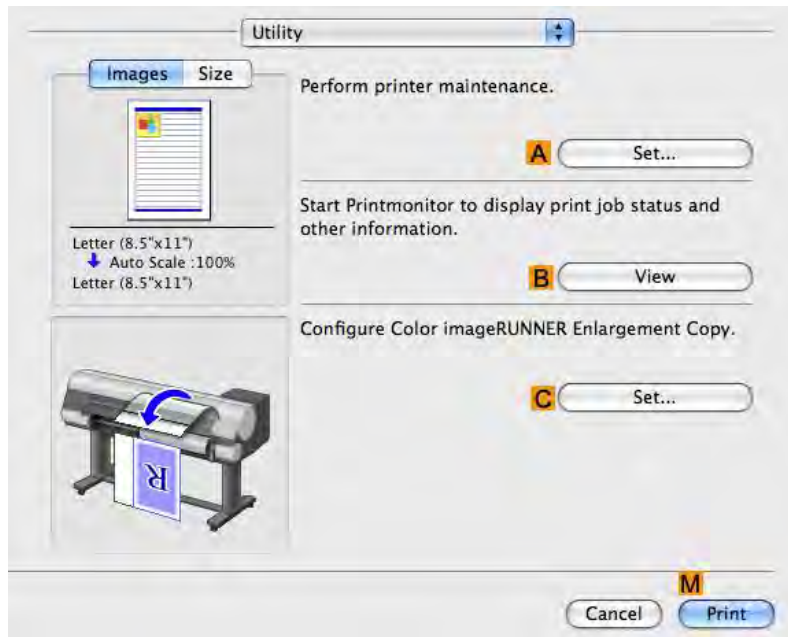

### A Set

Click to display the **Printer** dialog box, which offers the following maintenance for the printer.

- Nozzle (ink ejecting outlet) cleaning
- Head alignment adjustment
- Feed amount adjustment

### B View


Click to start **imagePROGRAF Printmonitor**, which enables you to view the status of print jobs.

### C Set

Click to complete the settings for Color imageRUNNER Enlargement Copy (iR enlargement copy). For details, see Color imageRUNNER Enlargement Copy [→P.513](#).

## Additional Settings Pane

The following settings are available on the **Additional Settings** pane.

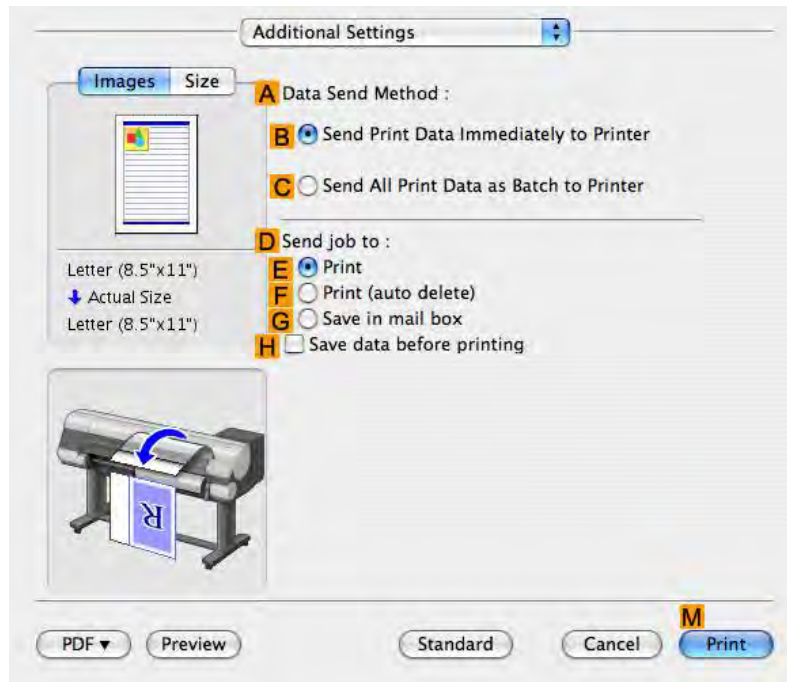

### A Data Send Method

Choose how print data is sent to the printer.

- **B Send Print Data Immediately to Printer**
- **C Send All Print Data as Batch to Printer**

### D Send job to

You can configure the method for saving print jobs to the printer hard disk.

- **E Print**
- **F Print (auto delete)**
- **G Save in mail box**

### H Save data before printing

Jobs are printed after they are saved on the hard disk.

## Support Pane

On the **Support** pane, you can view support information and the user's manual.



### A Support Information

Click to access the Canon support webpage, where you can find the latest information on the printer and consumables, check for printer driver updates, and browse other information.

### B User Manual

Click to view the printer user's manual. This function requires the user's manual to be installed on your computer.

### C Settings

The settings can be saved as a file. Click to display the **Export** dialog box, which enables you to specify where to save the file.

### D About

You can display version information for the printer driver.

## Preview

The Features of Preview .....	452
Operating Environment .....	452
Starting Preview .....	453
Preview Main Window .....	454
Paper Settings Panel .....	457
Easy Settings .....	459
Advanced Settings .....	460
Output Settings Panel .....	462
Color Settings Panel .....	464
Color Adjustment .....	465
Matching .....	468
Driver Matching Mode .....	470
ICC Matching Mode .....	471
ColorSync .....	472
Preferences Dialog Box .....	472
Zoom Dialog Box .....	473
Go to Page Dialog Box .....	473
Print with No Borders .....	473
Print on the Center .....	474
Not Print Spaces at the Top/Bottom .....	475
Print Page Rotated 90 Degrees .....	476
Display with Fitting to the Width of the Paper .....	477
Display with All .....	478
Display with Actual Size .....	479
Moving a Page .....	479

5

## The Features of Preview

The main features of Preview are as follows.

- While viewing this screen, you can adjust layout settings of a document created with application software.
- You can not only adjust layout settings but also your changes will be instantly applied on the preview screen, and you can print the preview screen as it is seen.



### Note

- The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Preview settings.

452

## Operating Environment

You can use the Preview in the following environments.

- Compatible Operating System  
Mac OS X (10.3.9 to 10.6)
- Software that requires installation  
imagePROGRAF Printer Driver

## Starting Preview

Follow the procedure below to start the Preview.


1. Start the application software which you use.
2. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



### Note

- Normally, select **Print** from the **File** menu.


3. Click **Print Preview** in the **Main** panel to attach a checkmark.
4. Click the **Print** button in the **Print** dialog box.

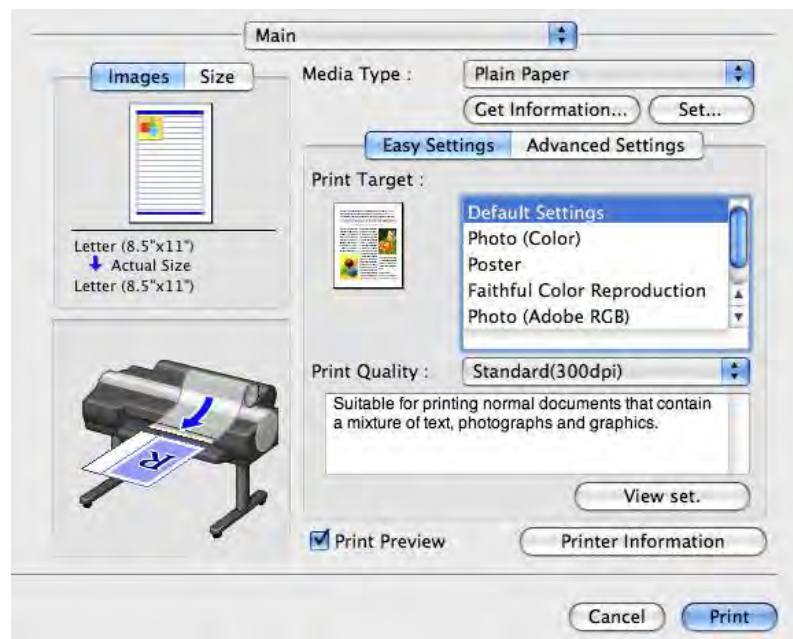

### Note

- Your printer is depicted in the lower-left area of this screen.


### 5. Preview main window is displayed.

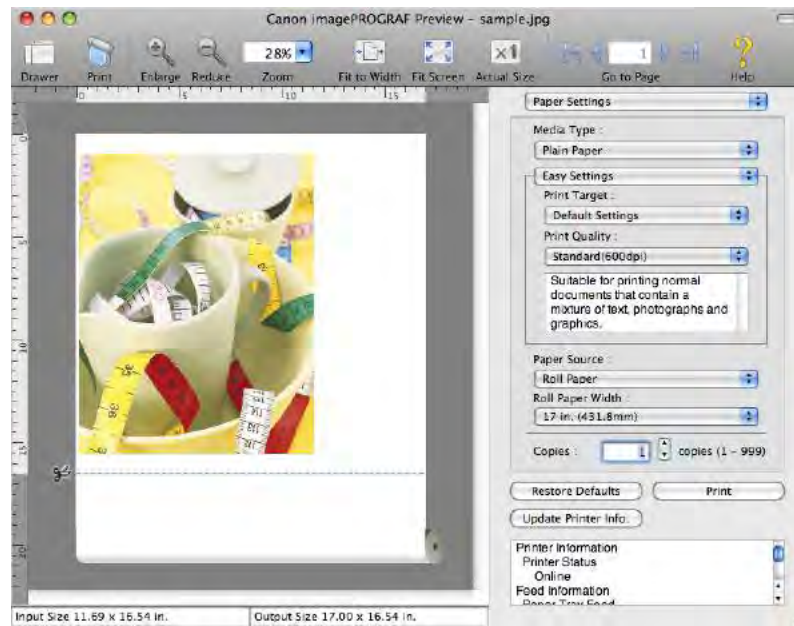

5

## Preview Main Window

The Preview main window consists of the menu and tool bars, and preview, dialog, drawer and status area.

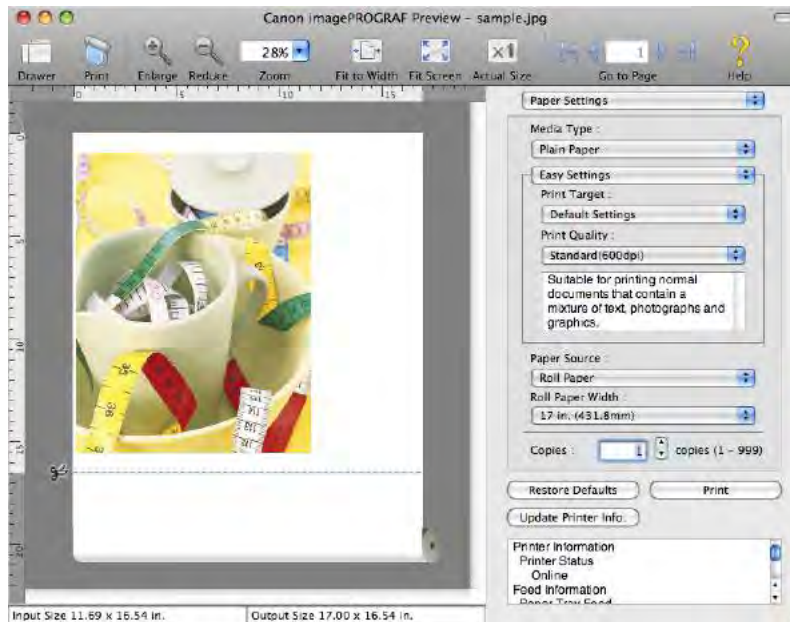

454



#### Note

- You can use the **View** menu to show or hide the tool bar.



## Menu Bar

This allows you to select menus required for operations.



## Tool Bar

This allows you to select tool buttons required for major operations.




## Preview Area

You can check the settings you made in this area.



## Dialog Area

This allows you to set the print conditions and perform a print job.

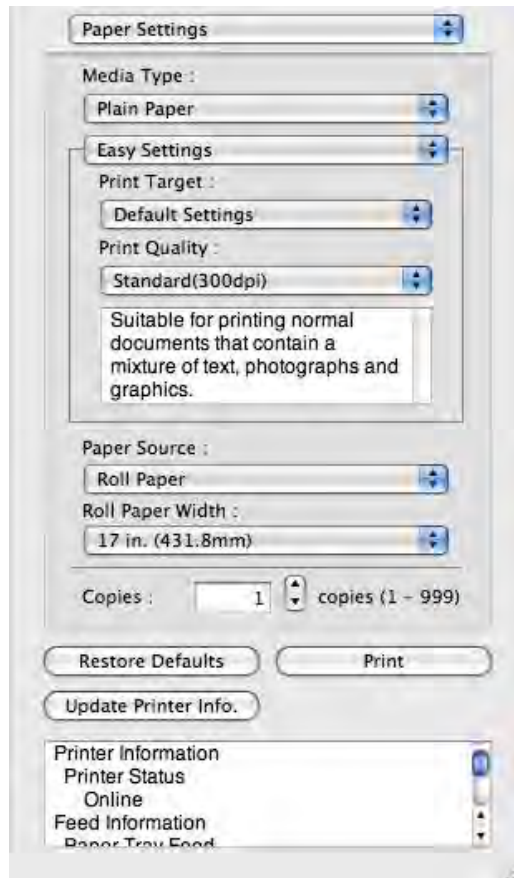


5

## Drawer Area

This allows you to display the thumbnails of a document.

This area appears when you click  **Drawer** from the tool bar. Alternatively, you may select **Drawer** from the **View** menu.

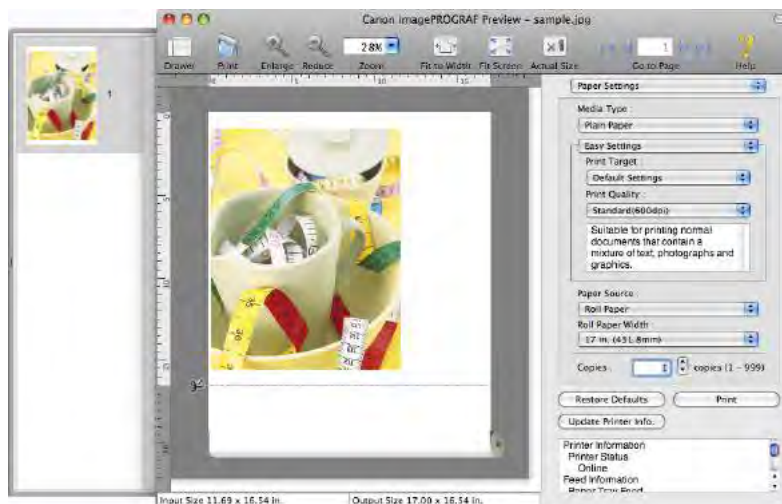

456


## Status Area

This shows **Input Size** and **Output Size**.

Input Size 16.54 x 23.39 in.      Output Size 24.00 x 23.39 in.

## Paper Settings Panel

This panel appears when you select **Paper Settings** in the dialog area.

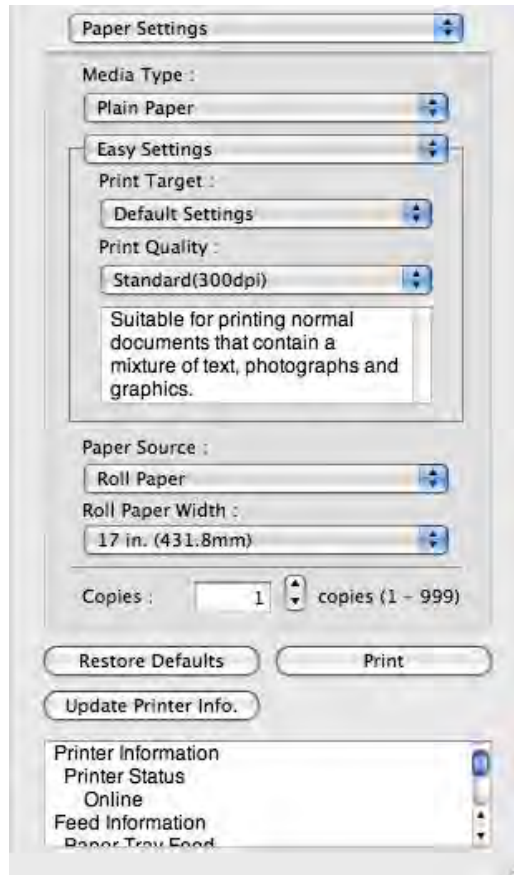

## Media Type

This allows you to select the media type.



### Note

- Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

## Easy Settings / Advanced Settings

Two modes are available to provide the optimum print settings for jobs.

The settings available on each mode are as follows.

- Easy Settings →P.459
- Advanced Settings →P.460

## Paper Source

You can select the paper source.

The following settings are available for paper source.

Setting	Details
<b>Cut Sheet</b>	Select to print on the cut sheet.
<b>Roll Paper</b>	Select to print on roll paper.

## Roll Paper Width

This selects the width of the roll media set to the printer.



### Note

- Available only if rolls are selected in **Paper Source**.

## Copies

You can input the number of print copies in numerical characters.



### Note

- The maximum value is 999.
- You can change the numbers by clicking either ▲ button or ▼ button.

## Restore Defaults Button

Click the button to reset to the setting when starting Preview.

## Print Button

Click the button to begin printing.

## Update Printer Info. Button

Click the button to acquire printer information.

## Easy Settings

You can easily select the best settings for the print job by just selecting an item from the print target list that matches the content of the document.



5

## Print Target

You can easily select the best settings for the print job simply.

If you select each **Print Target** item the corresponding comment for that item is displayed below the list.

Setting	Details
<b>Default Settings</b>	Suitable for printing normal documents that contain a mixture of text, photographs, and graphics.
<b>Office Document</b>	Suitable for printing handouts as well as general office documents for which print clarity is key.
<b>Poster</b>	The best setting for posters. Prints using vivid and high impact colors.
<b>CAD (Color Line Drawing)</b>	Prints the fine lines of CAD drawings and other such documents sharp and clear.
<b>CAD (B/W Line Drawing)</b>	Suitable for printing CAD drawings with sharp, dark lines.
<b>Perspective, GIS</b>	Suitable for attractive printing of 3D-CAD drawings, perspective drawings, and GIS drawings including maps.
<b>Photo (Color)</b>	Suitable for printing photographic images captured with a digital camera.
<b>Faithful Color Reproduction</b>	Prints by faithfully reproducing the colors of the original image.
<b>Custom Settings</b>	Suitable for printing documents for which Advanced Settings have been specified.

459



**Note**

- The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	<b>Highest / High / Standard / Draft</b>
Resolution	<b>1200dpi / 600dpi / 300dpi</b>




**Note**

- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Draft**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Draft** than with **High**, however, print quality is lower.

## Advanced Settings

Presents detailed settings for the print quality, the color mode, and other items so you can select the values for these settings yourself.

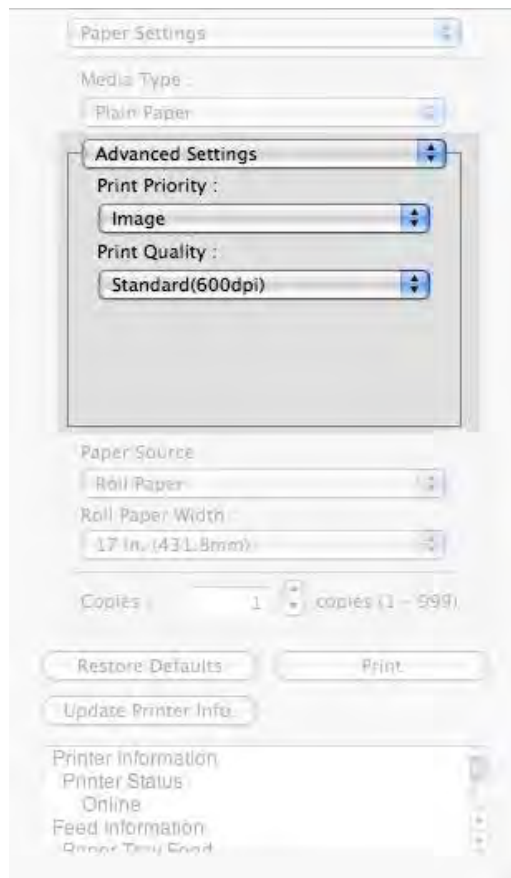



## Print Priority

Select a print quality mode that is appropriate for the print job.

Setting	Details
<b>Image</b>	This mode achieves the best results for printing photographic images and illustrations.
<b>Line Drawing</b>	This mode is best for printing CAD drawings with fine lines or wall newsheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .
<b>Office Document</b>	Prints common office documents, such as proposals, memos for distribution, etc., so they are easy to read.



### Note

- The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	<b>Highest / High / Standard / Draft</b>
Resolution	<b>1200dpi / 600dpi / 300dpi</b>




### Note

- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Draft**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Draft** than with **High**, however, print quality is lower.

## Output Settings Panel

This panel appears when you select **Output Settings** in the dialog area.

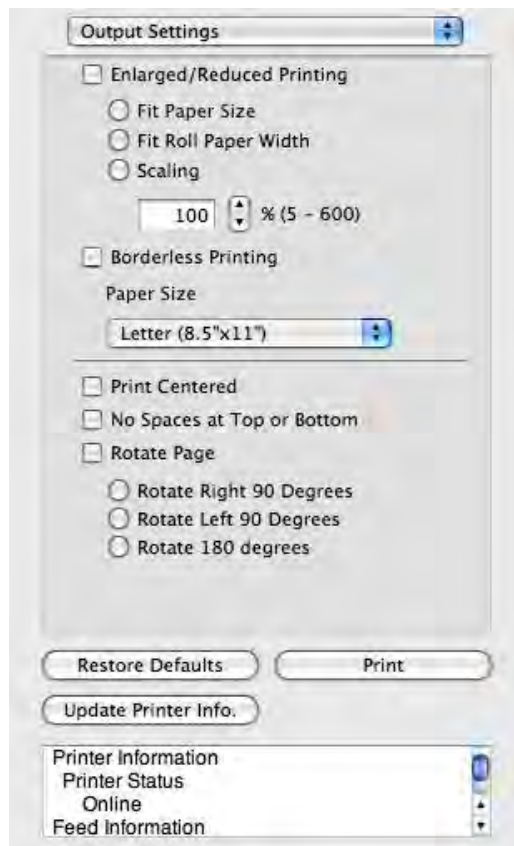

5

### Enlarged/Reduced Printing

Select the method for enlarged/reduced printing.

The following settings are available for enlarged/reduced printing.

Setting	Details
<b>Fit Paper Size</b>	Enlarges/reduces the whole page automatically to fit the media size selected for output. Select the media size to print from <b>Paper Size</b> .
<b>Fit Roll Paper Width</b>	Enlarges/reduces the whole page automatically to fit the width of the roll paper with the page width. *Make sure that the width of the roll paper in the printer is set correctly for <b>Roll Paper Width</b> in the <b>Paper Settings</b> panel. *Displayed only if rolls are selected in <b>Paper Source</b> .
<b>Scaling</b>	Enlarges/reduces the whole page by the scaling rate as specified. Input the scaling value in numerical characters. You can specify a range between 5 and 600%. *You can change the numbers by clicking either ▲ button or ▼ button. *Although Scaling can be set to make the image larger than the media size, the part that does not fit in the media cannot be printed. *This is not displayed when a checkmark is placed in <b>Borderless Printing</b> .

462

## Borderless Printing

You can print the media without margins on all sides when the roll paper with the specific width and the specific media type is used.

For more information about **Borderless Printing**, see "Print with No Borders." →P.473



### Note

- Available only if rolls are selected in **Paper Source**.
- This is not displayed when a checkmark is placed in **Print Centered**.

## Paper Size

You can select the size of the print media.



### Note

- This is not displayed when **Fit Roll Paper Width** is set in **Enlarged/Reduced Printing**.

## Print Centered

You can print on the center of the media loaded in the printer.

For more information about **Print Centered**, see "Print on the Center." →P.474



### Note

- This is not displayed when a checkmark is placed in **Borderless Printing**.

## No Spaces at Top or Bottom

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.

For more information about **No Spaces at Top or Bottom**, see "Not Print Spaces at the Top/Bottom." →P.475



### Note

- Available only if rolls are selected in **Paper Source**.

## Rotate Page

Select the method for rotating page.

The following settings are available for rotating page.

Setting	Details
<b>Rotate Right 90 Degrees</b>	Rotates the portrait page right 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.
<b>Rotate Left 90 Degrees</b>	Rotates the portrait page left 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.
<b>Rotate 180 degrees</b>	Allows you to rotate the image 180 degrees from the vertical to the right.

## Restore Defaults Button

Click the button to reset to the setting when starting Preview.

## Print Button


Click the button to begin printing.

## Update Printer Info. Button

Click the button to acquire printer information.

## Color Settings Panel

This panel appears when you select **Color Settings** in the dialog area.

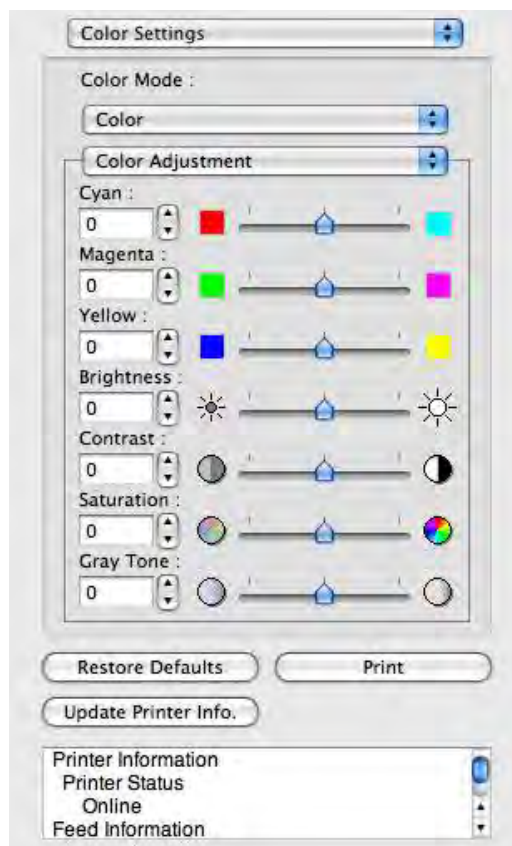

## Color Mode

You can select a color mode to suit the print job.

Setting	Details
<b>Color</b>	Enables color printing.
<b>Monochrome</b>	Disables color printing and converts image from continuous color to grayscaled monochrome.
<b>Color (CAD)</b>	Prints lines in the best color possible so they are easy to see.
<b>Monochrome Bitmap</b>	Prints all colors other than white in black.
<b>Monochrome (BK ink)</b>	Select to print all lines with black ink.

Setting	Details
<b>No color correction</b>	Prints without performing color matching in the printer driver. Select this when color matching is performed by the application such as Adobe Photoshop or when you want to print color charts using the profile creation tool.

**Note**

- The availability of settings depends on the print priority and media type selections.

## Color Adjustment / Matching

You can set the color adjustment and matching.

- Color Adjustment →P.465
- Matching →P.468

### Restore Defaults Button

Click the button to reset to the setting when starting Preview.

### Print Button

Click the button to begin printing.

### Update Printer Info. Button

Click the button to acquire printer information.

## Color Adjustment

You can set the color adjustment.

### Adjusting Color

Normally colors should be adjusted in the software application, but if you see colors in the printout that do not match colors on the screen, you can perform color adjustments.

1. Select **Color** on **Color Mode** in the **Color Settings** panel.

## 2. Select Color Adjustment.



## 3. Drag each slider to the left or right to adjust.

Setting	Details
<b>Cyan</b>	Adjusts the strength of colors to compensate the hues.
<b>Magenta</b>	Adjusts the strength of colors to compensate the hues.
<b>Yellow</b>	Adjusts the strength of colors to compensate the hues.
<b>Brightness</b>	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
<b>Contrast</b>	Adjusts the relative brightness between the brightest and darkest portions of the image.  *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
<b>Saturation</b>	Adjusts the hues for vivid color or dark color.
<b>Gray Tone</b>	Adjusts gray from cool black (bluish tones) to warm black (reddish tones).



**Note**


- You can also click the up or down arrow, or enter the number directly to increase or decrease the value.



## Adjusting Monochrome

Use the monochrome setting to print monochrome images of color photographs captured with a scanner or digital camera or other color images.

1. Select **Monochrome** on **Color Mode** in the **Color Settings** panel.
2. Select **Color Adjustment**.

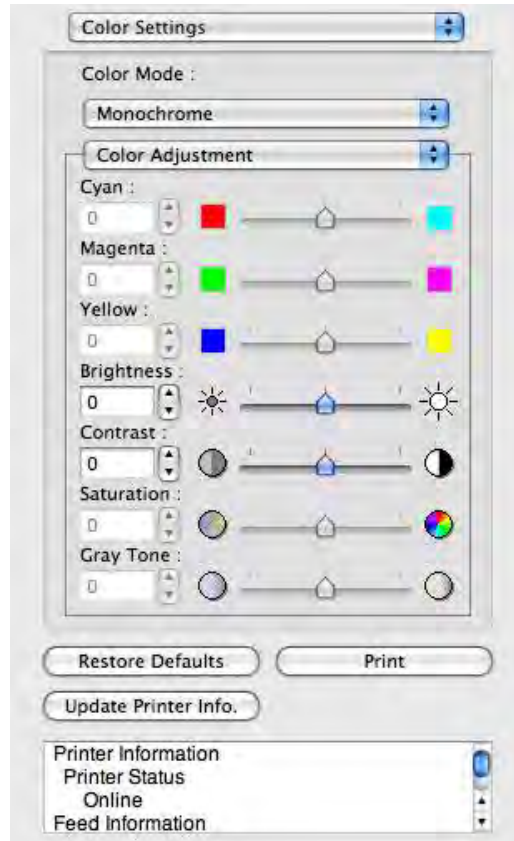

3. Drag each slider to the left or right to adjust.

Setting	Details
<b>Brightness</b>	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
<b>Contrast</b>	Adjusts the relative brightness between the brightest and darkest portions of the image. *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.



### Note

- You can also click the up or down arrow, or enter the number directly to increase or decrease the value.


## Matching

You can set the matching.



### Important

- If **No color correction** is selected under **Color Mode**, the **Matching** is not displayed.

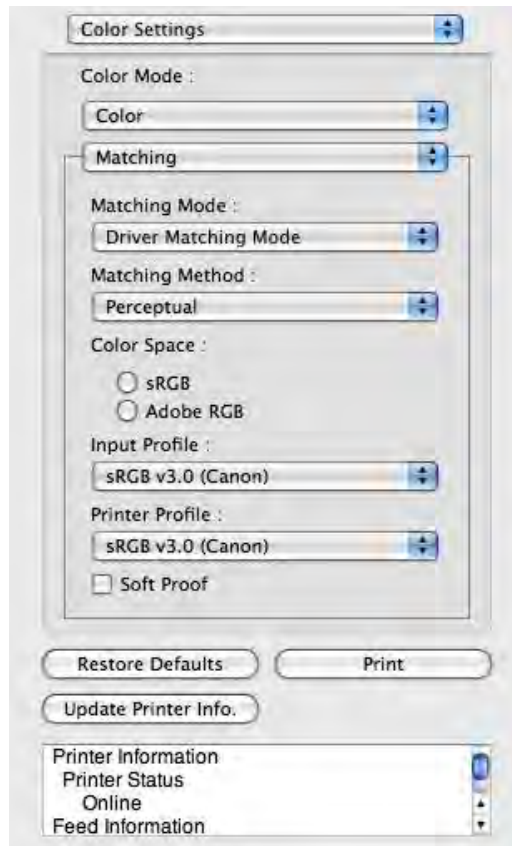

5

## Matching Mode

You can select a matching mode to suit the print job.

Setting	Details
Driver Matching Mode →P.470	Enables printing of optimal color tones using a driver specific color profile. You should normally select this mode.
ICC Matching Mode →P.471	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail. This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.
ColorSync →P.472	Enables color matching by using the ColorSync function of Mac OS. Select this if you want to perform soft proofing using ColorSync before printing.



### Note

- You need to set each correction on the printer driver.
- Using Mac OS X 10.5 or later, **ColorSync** needs to be selected in the **Color Matching** panel of the driver in order to select **ColorSync**.

## Matching Method

You can select a matching method to suit the print job.

## Input Profile

Select the input profile.



### Note

- You can select only after **ICC Matching Mode** has been selected in **Matching Mode**.

## Printer Profile

Select the printer profile.



### Note

- (Using Mac OS X 10.3.9 - 10.4) You can select only after **ICC Matching Mode** or **ColorSync** has been selected in **Matching Mode**.
- (Using Mac OS X 10.5 or later) You can select only after **ICC Matching Mode** has been selected in **Matching Mode**.

## Soft Proof

When you place a checkmark here, **ColorSync** applies to the preview area.




### Note

- You can select only after **ColorSync** has been selected in **Matching Mode**.

## Driver Matching Mode

1. Under **Matching Mode**, select **Driver Matching Mode**.

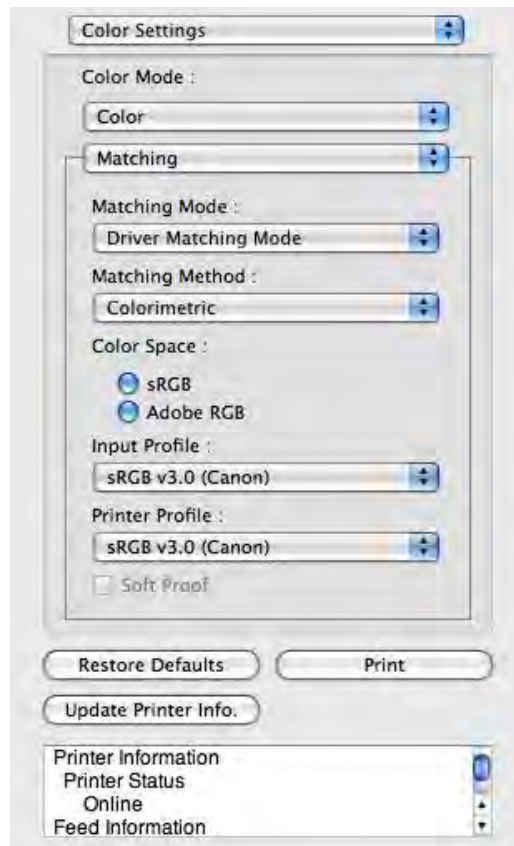

2. Click **Matching Method** list, and then select a setting.


Setting	Details
<b>Auto</b>	Automatically selects the best color matching method for each Image, Graphics, Text.
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.

5

470

## ICC Matching Mode

1. Under **Matching Mode**, select **ICC Matching Mode**.

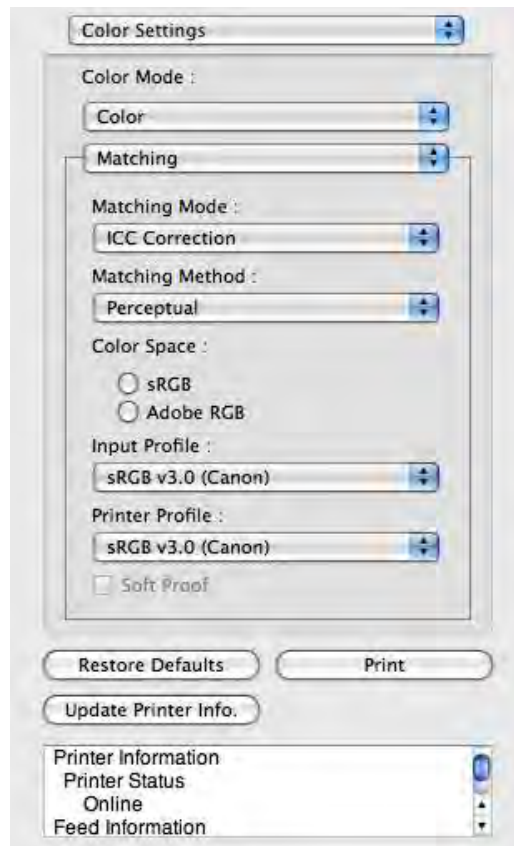


2. Click the **Matching Method** list, and then select a setting.

Setting	Details
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.
<b>Colorimetric (No White-Point Correction)</b>	The processing method of color-matching is identical to <b>Colorimetric</b> . Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.

3. Click the **Input Profile** list and select an input profile.
4. Click the **Printer Profile** list and select a printer profile.

## ColorSync

1. Check that **ColorSync** is selected in **Matching Mode**.

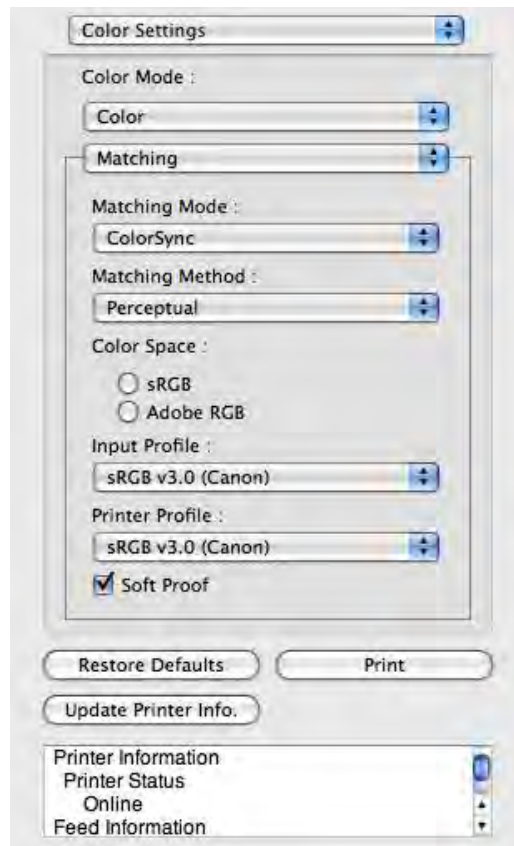

2. To apply **ColorSync** to previews, check the **Soft Proof** check box.

## Preferences Dialog Box

This dialog box appears when you select **Preferences** from the **imagePROGRAF Advanced Preview** menu. You can set the preferences for Preview.




## Units

Set the unit for paper length, margins, and so on.



## Zoom Dialog Box

This dialog box appears when you select **Zoom** from the **View** menu. You can enlarge or reduce the screen display.

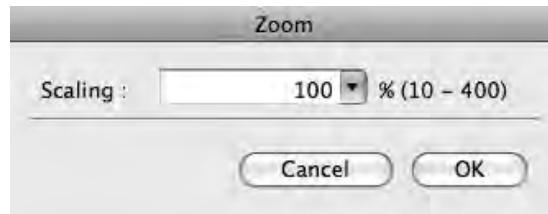

### Scaling

Set the magnification for enlargement or reduction of the screen display.




#### Note

- You can input between 10 and 400.
- You can change the numbers by clicking ▼ button.

## Go to Page Dialog Box

This dialog box appears when you select **Go to Page** from the **View** menu.

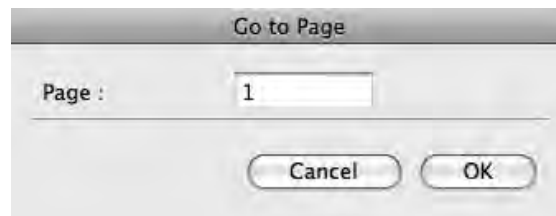

#### Note

- You can not select **Go to Page** if the document is only one page.

### Page

Input the page number in numerical characters to display in the preview area.



#### Note

- You can change the numbers in the range of the page of the documents.

## Print with No Borders

You can use the borderless printing function to print without margins surrounding the image.




#### Note

- With some media borderless printing can be performed only between two edges.
- To use the borderless printing function, the specified media must be set to the printer.

1. On the Paper Settings Panel [→P.457](#) , select **Roll Paper** in **Paper Source**.

2. On the **Output Settings** panel, click the **Enlarged/Reduced Printing** check box on.
3. Select **Fit Roll Paper Width**.
4. Click the **Borderless Printing** check box on.

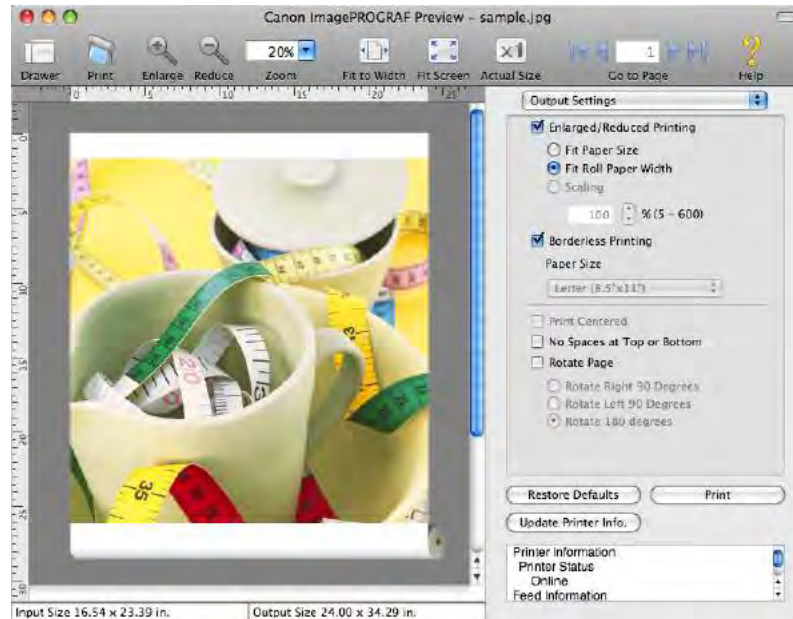

5. Click the **Print** button.  
Borderless printing begins.

## Print on the Center


You can print on the center of the media loaded in the printer.



### Note

- This is not displayed when a checkmark is placed in **Borderless Printing**.

1. On the **Output Settings** panel, click the **Print Centered** check box on.

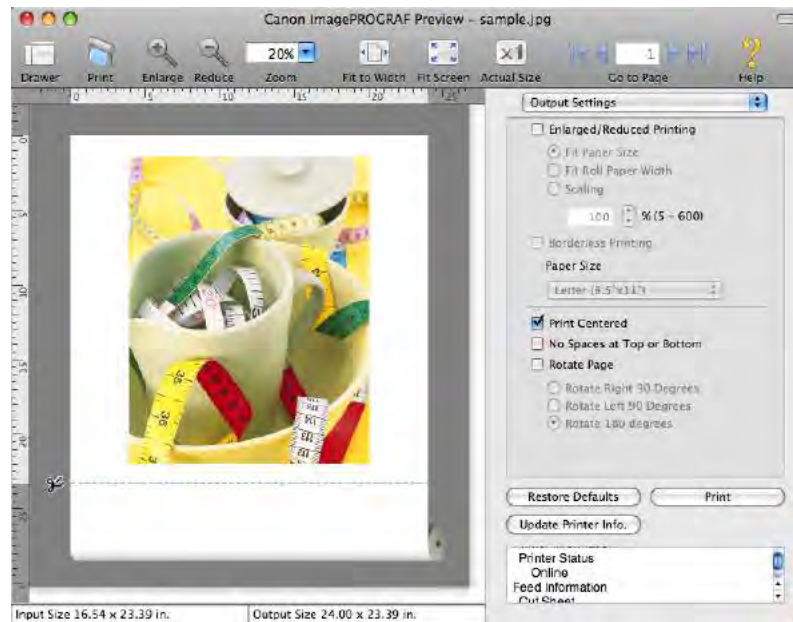

2. Click the **Print** button.  
Printing on the center begins.

## Not Print Spaces at the Top/Bottom

You can save paper on not to feed roll paper for the empty spaces when the print data contains spaces at the top or bottom.




### Note

- This is not displayed when a checkmark is placed in **Borderless Printing**.

1. On the Paper Settings Panel [→P.457](#), select **Roll Paper** in **Paper Source**.

2. On the **Output Settings** panel, click the **No Spaces at Top or Bottom** check box on.

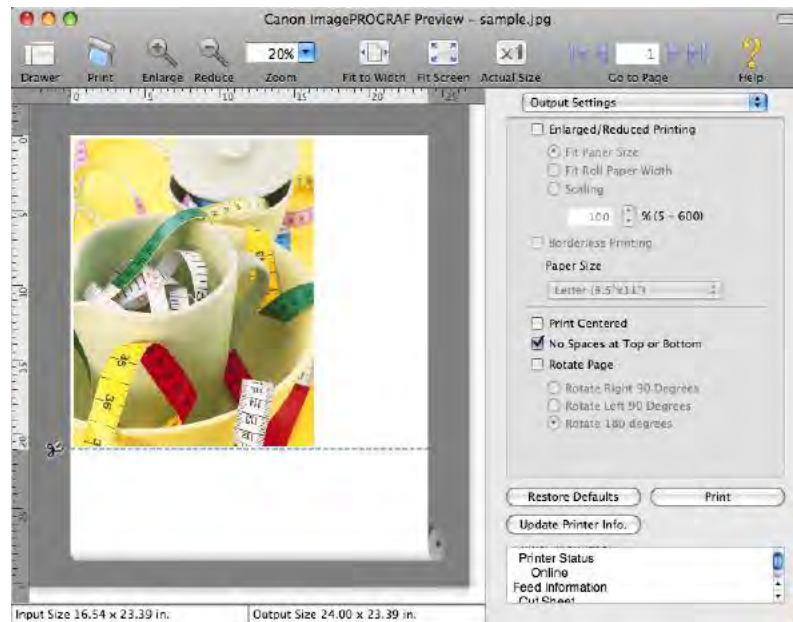


3. Click the **Print** button.  
Printing on the settings with no spaces at top or bottom begins.

## Print Page Rotated 90 Degrees

You can save paper by printing in landscape orientation on roll paper.

1. On the Paper Settings Panel **→P.457**, select **Roll Paper** in **Paper Source**.
2. On the **Output Settings** panel, click the **Rotate Page** check box on.

### 3. Select **Rotate Right 90 Degrees** or **Rotate Left 90 Degrees**.

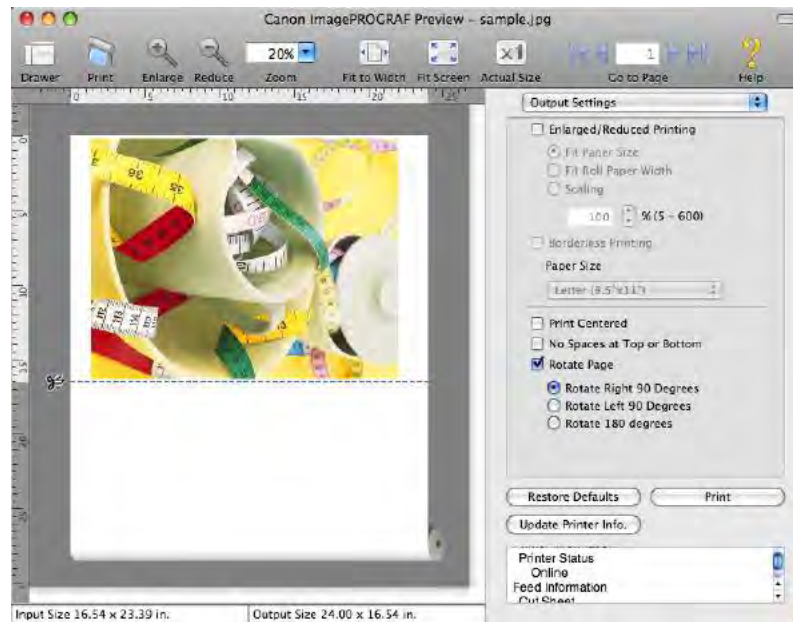

### 4. Click the **Print** button.


Printing on rotating 90 degrees begins.

## Display with Fitting to the Width of the Paper

In the preview area, you can display to the width of the paper.

1. Select  **Fit Roll Paper Width** from the tool bar.


2. Fitting to the width of the paper, it is displayed.

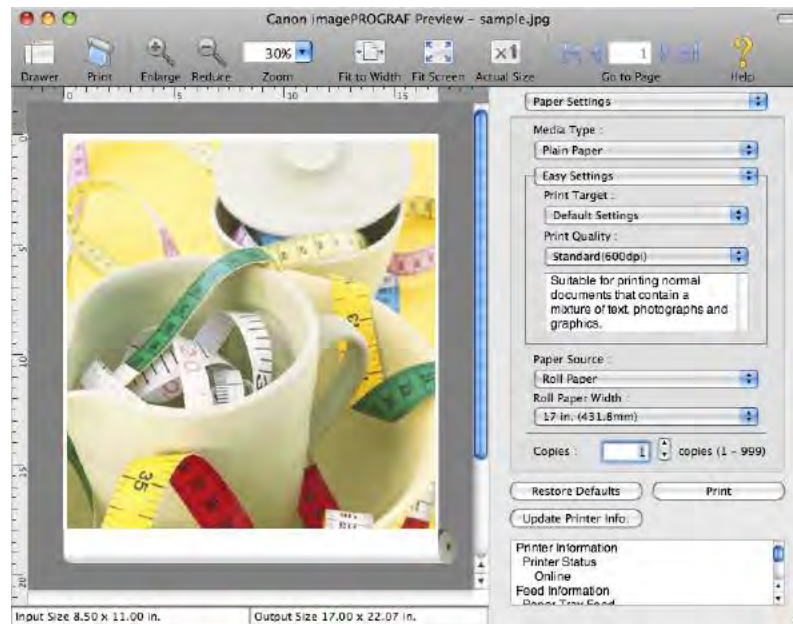


5

### Display with All

In the preview area, you can display all.

1. Select  **Fit Screen** from the tool bar.
2. All is displayed.

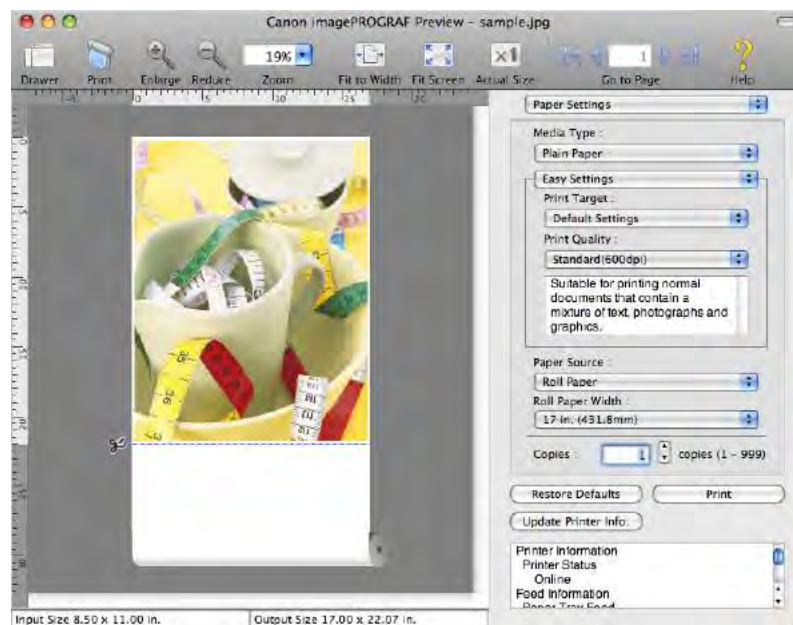


478



## Display with Actual Size

In the preview area, you can display the actual size.

1. Select  **Actual Size** from the tool bar.
2. Actual size is displayed.

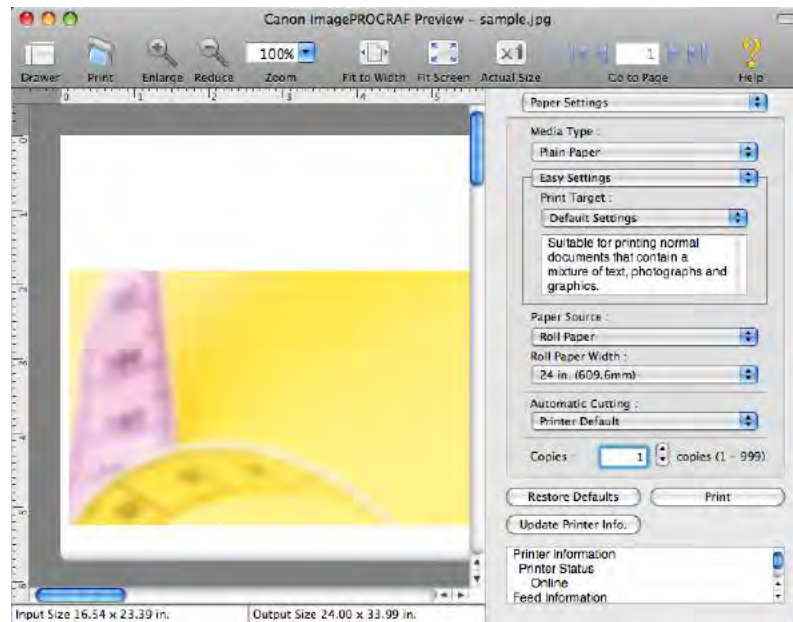





5

## Moving a Page


You can move a page to display in the preview area.

1. Select each button in **Go to Page** on the tool bar.

Setting	Details
	Go to the first page.
	Go to the previous page.
	Go to the next page.
	Go to the last page.

479

2. The target page appears.

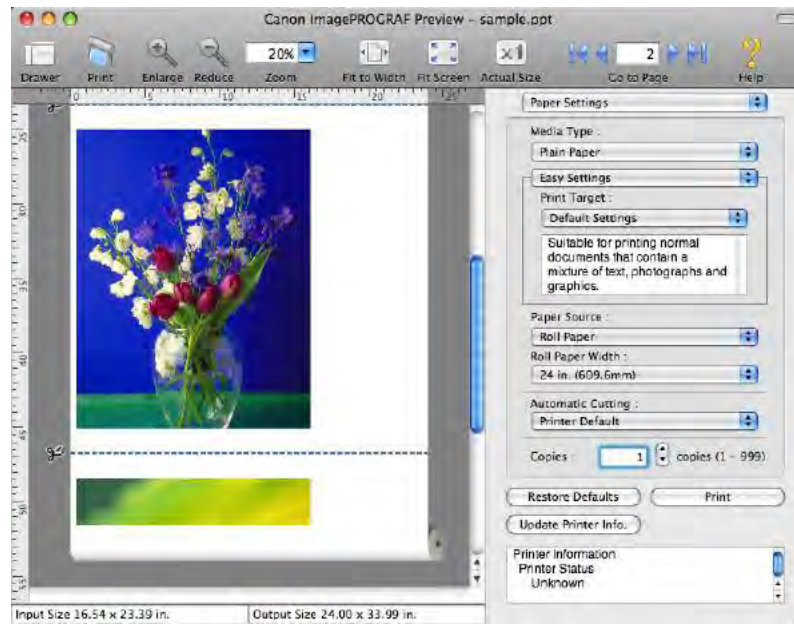

Note

- You can also move a page by clicking the page on the thumbnails.

## Free Layout

The Features of Free Layout .....	481
Operating Environment .....	481
Starting Free Layout .....	482
Free Layout Main Window .....	483
Paper Settings Panel .....	486
Easy Settings .....	488
Advanced Settings .....	489
Color Settings Panel .....	491
Color Adjustment .....	492
Matching .....	495
Driver Matching Mode .....	497
ICC Matching Mode .....	498
ColorSync .....	499
Preferences Dialog Box .....	500
Page Setup Dialog Box .....	501
Zoom Dialog Box .....	502
Format Dialog Box .....	503
Laying out a Multiple-File Document on One Page .....	504
Laying out a Document Created with Multiple Application Programs on One Page .....	504
Selecting an Object .....	505
Changing the Object Size .....	505
Moving an Object .....	506
Rotating an Object .....	507
Laying out Objects Automatically .....	508
Aligning Objects .....	508
Changing the Object Overlapping Order .....	510
Pasting a Copied or Cut Object .....	512

## The Features of Free Layout

The main features of Free Layout are as follows.

- Allows you to lay out at will and print a document created with application software.
- You can not only lay out multiple pages on one page but also lay out and print a multiple-file document on one page, or lay out and print a document created with multiple application programs on one page.



### Note

- The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Free Layout settings.

## Operating Environment

You can use the Free Layout in the following environments.

- Compatible Operating System  
Mac OS X (10.3.9 to 10.6)
- Software that requires installation  
imagePROGRAF Printer Driver

## Starting Free Layout

Follow the procedure below to start the Free Layout.


1. Start the application software which you use.
2. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



### Note

- Normally, select **Print** from the **File** menu.


3. Click on **Free Layout** in the **Page Setup** panel to attach a checkmark.
4. Click the **Print** button in the **Print** dialog box.

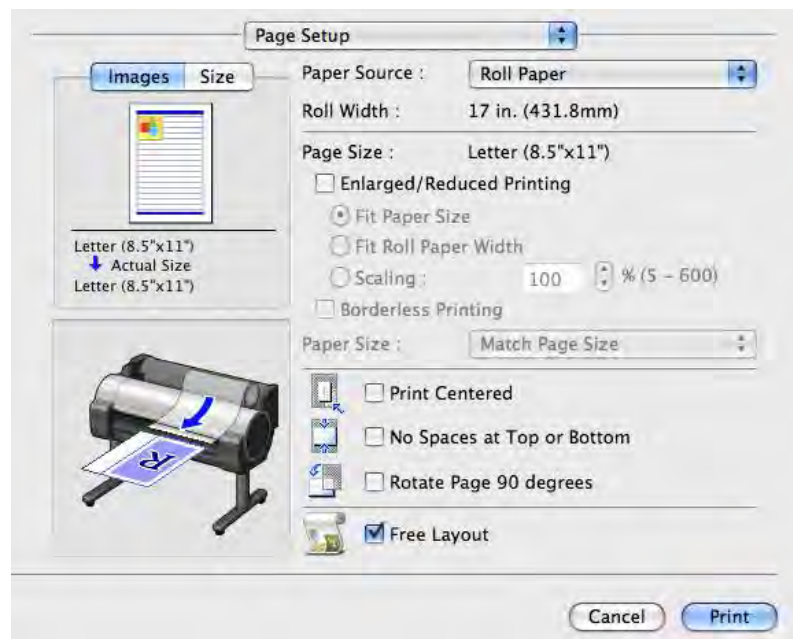

### Note

- Your printer is depicted in the lower-left area of this screen.


## 5. Free Layout main window is displayed.

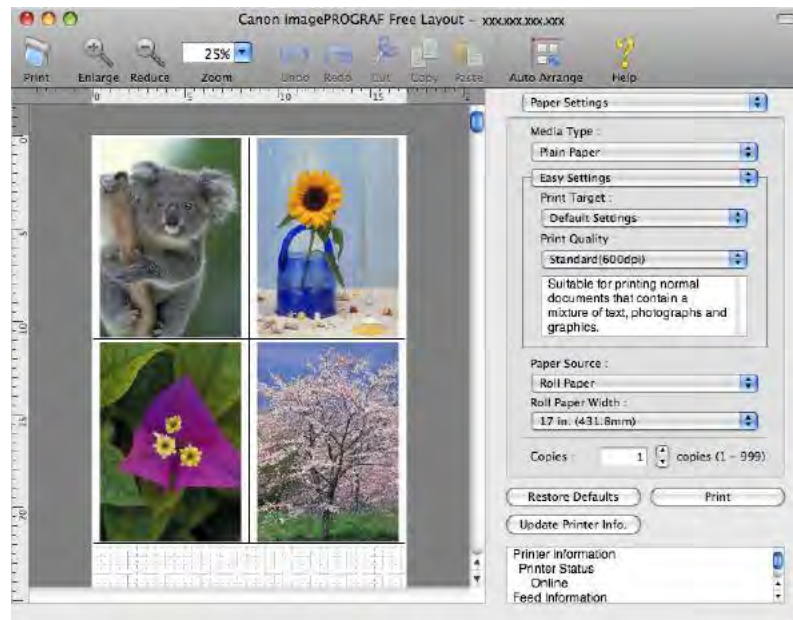

5

## Free Layout Main Window

The Free Layout main window consists of the menu and tool bars, layout area and dialog areas.

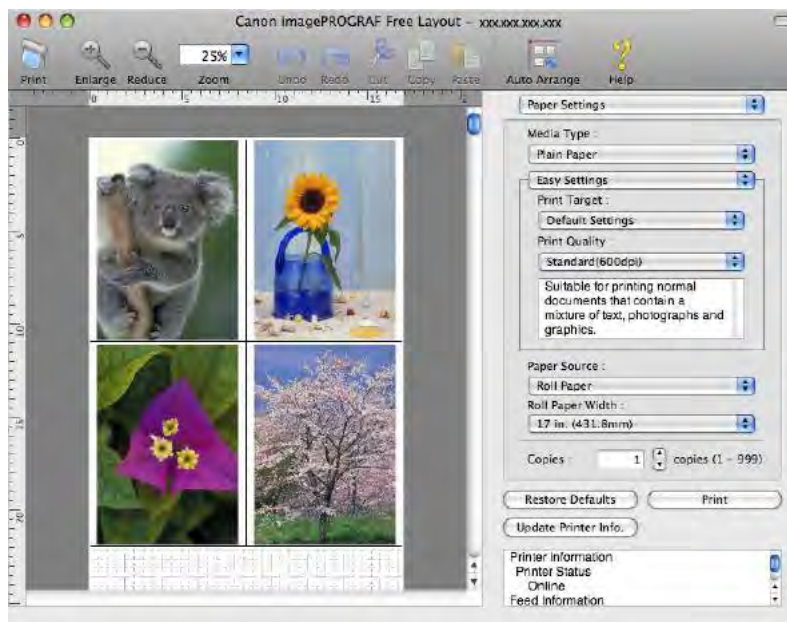

483



### Note

- You can use the **View** menu to show or hide the tool.



## Menu Bar

This allows you to select menus required for operations.




## Tool Bar

This allows you to select tool buttons required for major operations.



## Layout Area


This allows you to lay out objects and edit the object size and orientation.

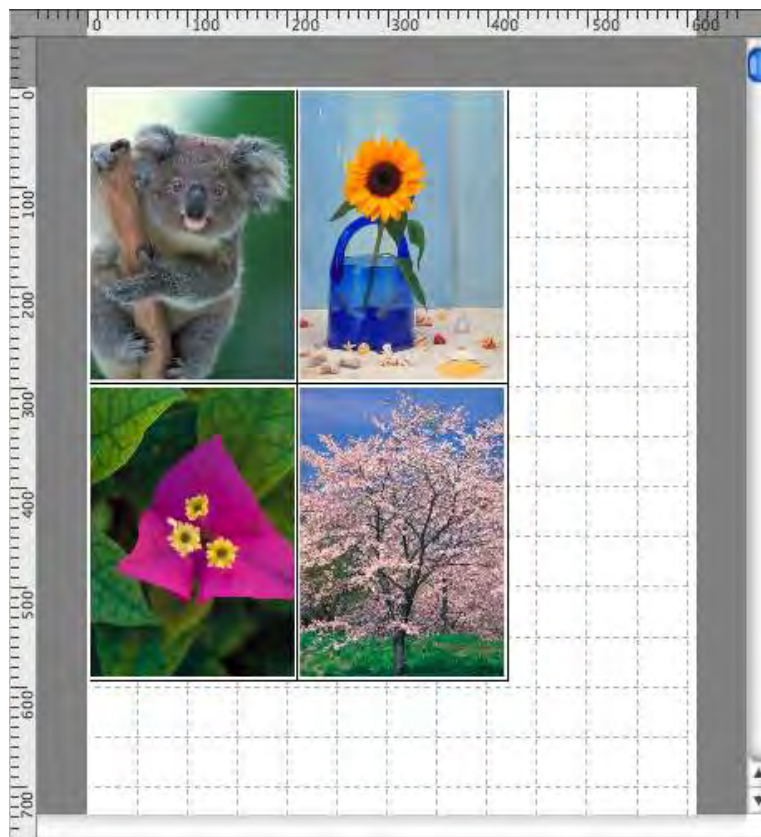




## Dialog Area

This allows you to set the print conditions and perform a print job.

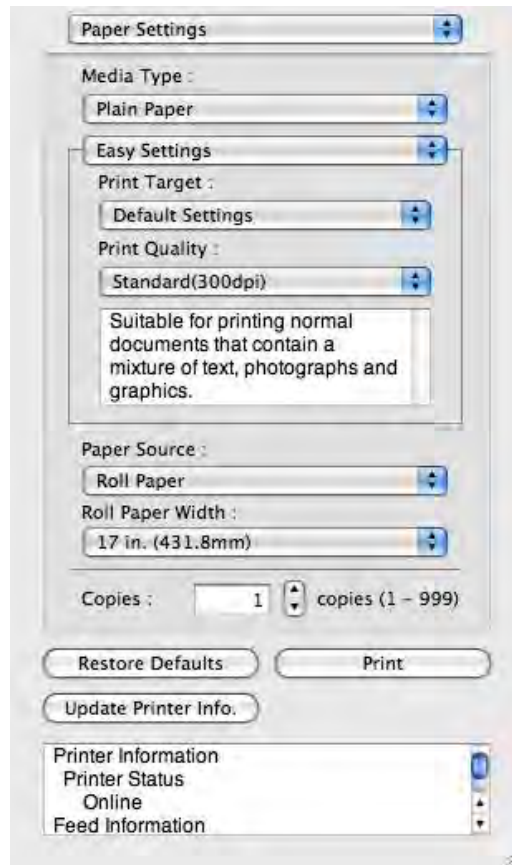

## Paper Settings Panel

This panel appears when you select **Paper Settings** in the dialog area.

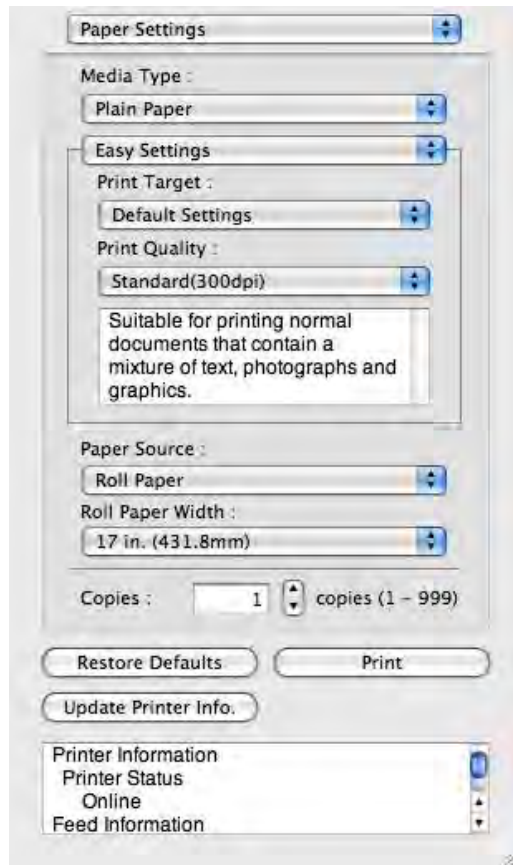

5

### Media Type

This allows you to select the media type.



**Note**

- Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

### Easy Settings / Advanced Settings

Two modes are available to provide the optimum print settings for jobs. The settings available on each mode are as follows.

- Easy Settings →P.488
- Advanced Settings →P.489

### Paper Source

You can select the paper source. The following settings are available for paper source.

Setting	Details
<b>Cut Sheet</b>	Select to print on the cut sheet.

Setting	Details
<b>Roll Paper</b>	Select to print on roll paper.

## Roll Paper Width

This selects the width of the roll media set to the printer.



### Note

- Available only if rolls are selected in **Paper Source**.

## Copies

You can input the number of print copies in numerical characters.



### Note

- The maximum value is 999.
- You can change the numbers by clicking either ▲ button or ▼ button.

## Restore Defaults Button

Click the button to reset to the setting when starting Free Layout.

## Print Button


Click the button to begin printing.

## Update Printer Info. Button

Click the button to acquire printer information.

## Easy Settings

You can easily select the best settings for the print job by just selecting an item from the print target list that matches the content of the document.

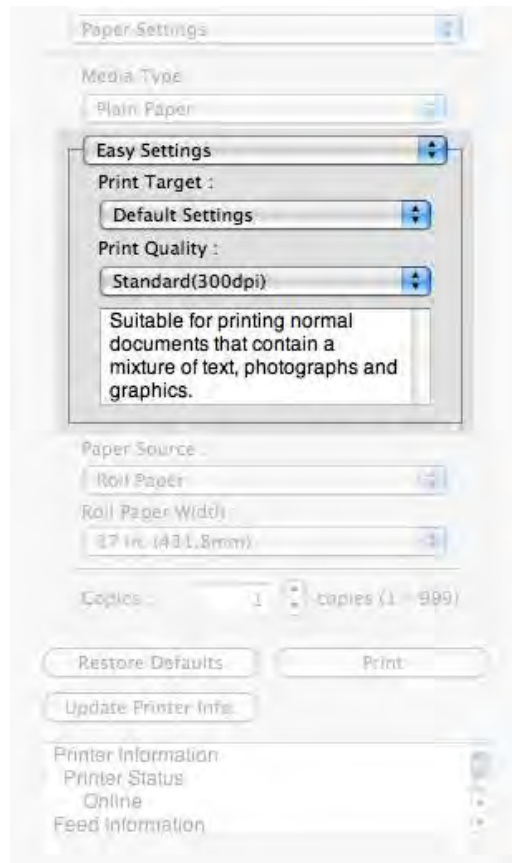

5

## Print Target

You can easily select the best settings for the print job simply.

If you select each **Print Target** item the corresponding comment for that item is displayed below the list.

Setting	Details
<b>Default Settings</b>	Suitable for printing normal documents that contain a mixture of text, photographs, and graphics.
<b>Office Document</b>	Suitable for printing handouts as well as general office documents for which print clarity is key.
<b>Poster</b>	The best setting for posters. Prints using vivid and high impact colors.
<b>CAD (Color Line Drawing)</b>	Prints the fine lines of CAD drawings and other such documents sharp and clear.
<b>CAD (B/W Line Drawing)</b>	Suitable for printing CAD drawings with sharp, dark lines.
<b>Perspective, GIS</b>	Suitable for attractive printing of 3D-CAD drawings, perspective drawings, and GIS drawings including maps.
<b>Photo (Color)</b>	Suitable for printing photographic images captured with a digital camera.
<b>Faithful Color Reproduction</b>	Prints by faithfully reproducing the colors of the original image.
<b>Custom Settings</b>	Suitable for printing documents for which Advanced Settings have been specified.

**Note**

- The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	<b>Highest / High / Standard / Draft</b>
Resolution	<b>1200dpi / 600dpi / 300dpi</b>

**Note**

- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Draft**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Draft** than with **High**, however, print quality is lower.

## Advanced Settings

Presents detailed settings for the print priority, the print quality, and other items so you can select the values for these settings yourself.



## Print Priority

Select a print quality mode that is appropriate for the print job.

Setting	Details
<b>Image</b>	This mode achieves the best results for printing photographic images and illustrations.
<b>Line Drawing</b>	This mode is best for printing CAD drawings with fine lines or wall newsheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .
<b>Office Document</b>	Prints common office documents, such as proposals, memos for distribution, etc., so they are easy to read.



### Note

- The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.

Setting	Details
Print Quality	<b>Highest / High / Standard / Draft</b>
Resolution	<b>1200dpi / 600dpi / 300dpi</b>




### Note

- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Draft**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Draft** than with **High**, however, print quality is lower.



## Color Settings Panel

This panel appears when you select **Color Settings** in the dialog area.

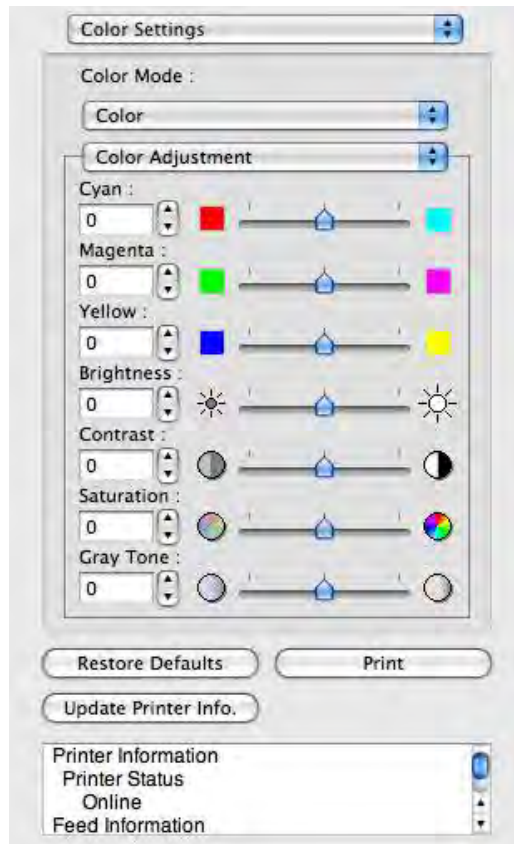

5

### Color Mode

You can select a color mode to suit the print job.

Setting	Details
<b>Color</b>	Enables color printing.
<b>Monochrome</b>	Disables color printing and converts image from continuous color to grayscaled monochrome.
<b>Color (CAD)</b>	Prints lines in the best color possible so they are easy to see.
<b>Monochrome Bitmap</b>	Prints all colors other than white in black.
<b>Monochrome (BK ink)</b>	Select to print all lines with black ink.
<b>No color correction</b>	Prints without performing color matching in the printer driver. Select this when color matching is performed by the application such as Adobe Photoshop or when you want to print color charts using the profile creation tool.

491



#### Note

- The availability of settings depends on the print priority and media type selections.

### Color Adjustment / Matching

You can set the color adjustment and matching.

- Color Adjustment →P.492
- Matching →P.495



Note

- **Matching** is not displayed if **No color correction** has been selected in **Color Mode**.

### Restore Defaults Button

Click the button to reset to the setting when starting Free Layout.

### Print Button

Click the button to begin printing.

### Update Printer Info. Button

Click the button to acquire printer information.

## 5

## Color Adjustment


You can set the color adjustment.

### Adjusting Color

Normally colors should be adjusted in the software application, but if you see colors in the printout that do not match colors on the screen, you can perform color adjustments.

1. Select **Color** on **Color Mode** in the **Color Settings** panel.

## 2. Select Color Adjustment.

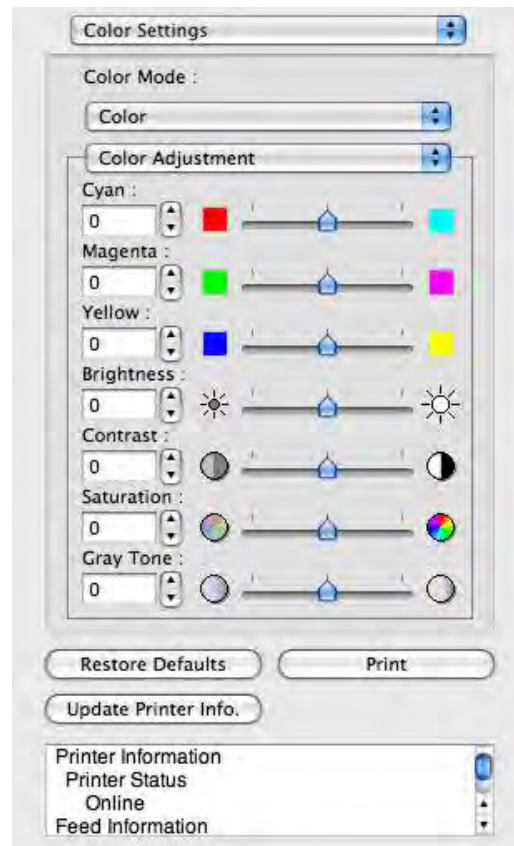

## 3. Drag each slider to the left or right to adjust.

Setting	Details
<b>Cyan</b>	Adjusts the strength of colors to compensate the hues.
<b>Magenta</b>	Adjusts the strength of colors to compensate the hues.
<b>Yellow</b>	Adjusts the strength of colors to compensate the hues.
<b>Brightness</b>	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
<b>Contrast</b>	Adjusts the relative brightness between the brightest and darkest portions of the image.  *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.
<b>Saturation</b>	Adjusts the hues for vivid color or dark color.
<b>Gray Tone</b>	Adjusts gray from cool black (bluish tones) to warm black (reddish tones).




### Note

- You can also click the up or down arrow, or enter the number directly to increase or decrease the value.

## Adjusting Monochrome

Use the monochrome setting to print monochrome images of color photographs captured with a scanner or digital camera or other color images.

1. Select **Monochrome** on **Color Mode** in the **Color Settings** panel.
2. Select **Color Adjustment**.

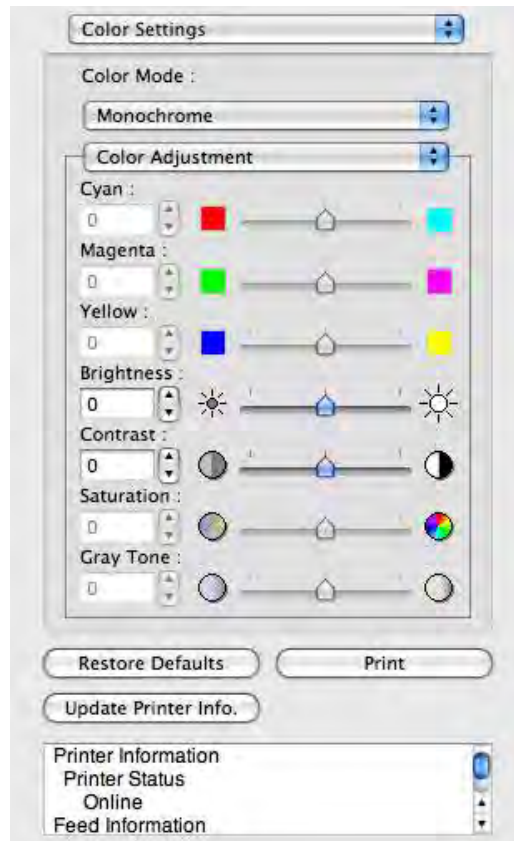

3. Drag each slider to the left or right to adjust.

Setting	Details
<b>Brightness</b>	Adjusts the brightness of the entire image. When the results of the printout are brighter than the original images such as the original photo before scanning and graphics created on the display, or when you want to print in different degrees of brightness, use this feature.
<b>Contrast</b>	Adjusts the relative brightness between the brightest and darkest portions of the image. *For soft gradation, decrease the contrast. For hard gradation, increase the contrast.



**Note**

- You can also click the up or down arrow, or enter the number directly to increase or decrease the value.


## Matching

You can set the matching.



### Important

- If **No color correction** is selected under **Color Mode**, the **Matching** is not displayed.

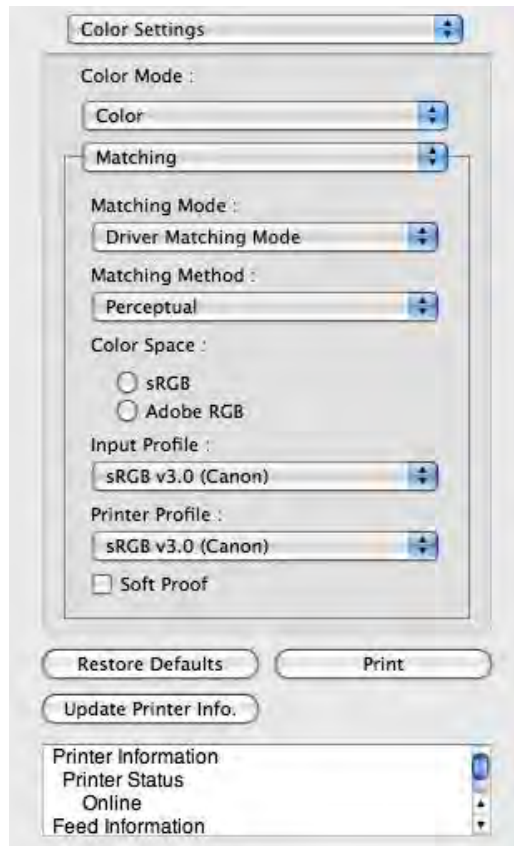

5

## Matching Mode

You can select a matching mode to suit the print job.

Setting	Details
Driver Matching Mode →P.497	Enables printing of optimal color tones using a driver specific color profile. You should normally select this mode.
ICC Matching Mode →P.498	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail. This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.
ColorSync →P.499	Enables color matching by using the ColorSync function of Mac OS. Select this if you want to perform soft proofing using ColorSync before printing.

495



### Note

- You need to set each correction on the printer driver.
- Using Mac OS X 10.5 or later, **ColorSync** needs to be selected in the **Color Matching** panel of the driver in order to select **ColorSync**.

## Matching Method

You can select a matching method to suit the print job.

## Input Profile

Select the input profile.



### Note

- You can select only after **ICC Matching Mode** has been selected in **Matching Mode**.

## Printer Profile

Select the printer profile.



### Note

- (Using Mac OS X 10.3.9 - 10.4) You can select only after **ICC Matching Mode** or **ColorSync** has been selected in **Matching Mode**.
- (Using Mac OS X 10.5 or later) You can select only after **ICC Matching Mode** has been selected in **Matching Mode**.

5

## Soft Proof

When you place a checkmark here, **ColorSync** applies to the layout area.




### Note

- You can select only after **ColorSync** has been selected in **Matching Mode**.



## Driver Matching Mode

1. Under **Matching Mode**, select **Driver Matching Mode**.

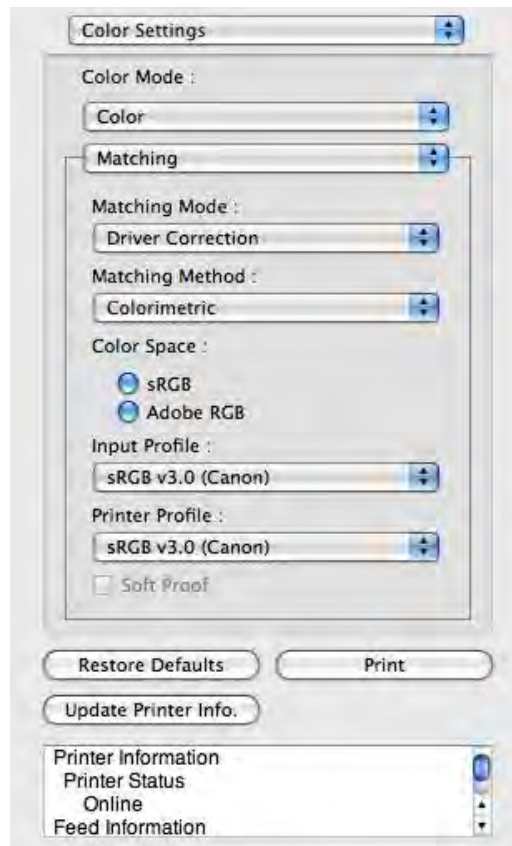


2. Click **Matching Method** list, and then select a setting.

Setting	Details
<b>Auto</b>	Automatically selects the best color matching method for each Image, Graphics, Text.
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.

## ICC Matching Mode

1. Under **Matching Mode**, select **ICC Matching Mode**.

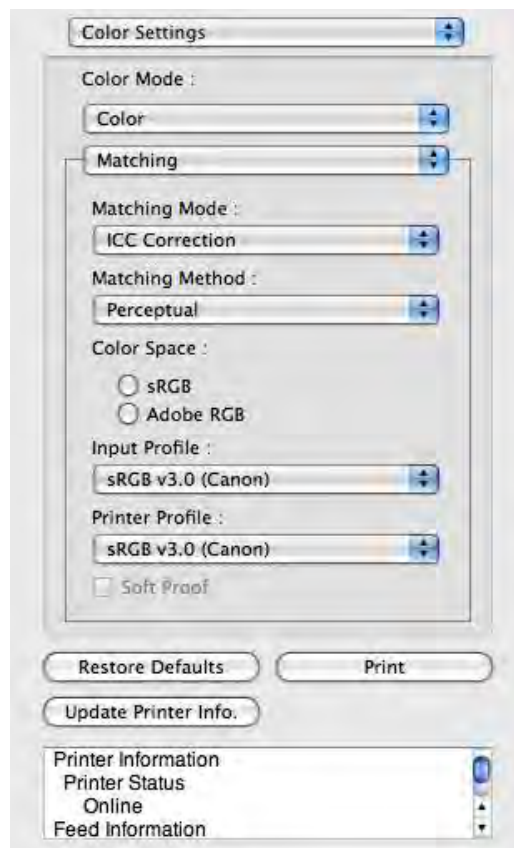


2. Click the **Matching Method** list, and then select a setting.

Setting	Details
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.
<b>Colorimetric (No White-Point Correction)</b>	The processing method of color-matching is identical to <b>Colorimetric</b> . Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.

3. Click the **Input Profile** list and select an input profile.
4. Click the **Printer Profile** list and select a printer profile.

## ColorSync


1. Check that **ColorSync** is selected in **Matching Mode**.

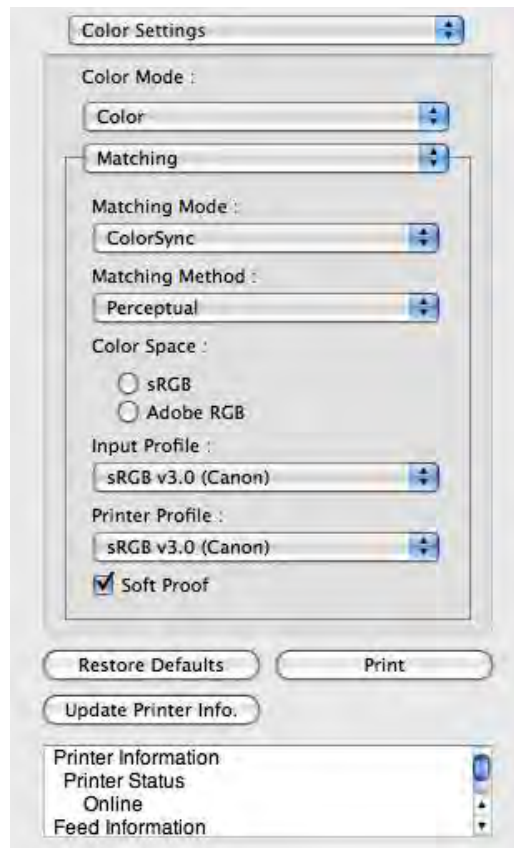

2. Place a checkmark on **Soft Proof** to simulate the output product in Layout Area.

## Preferences Dialog Box

This dialog box appears when you select **Preferences** from the imagePROGRAF Advanced Preview menu. You can set the preferences for Free Layout.

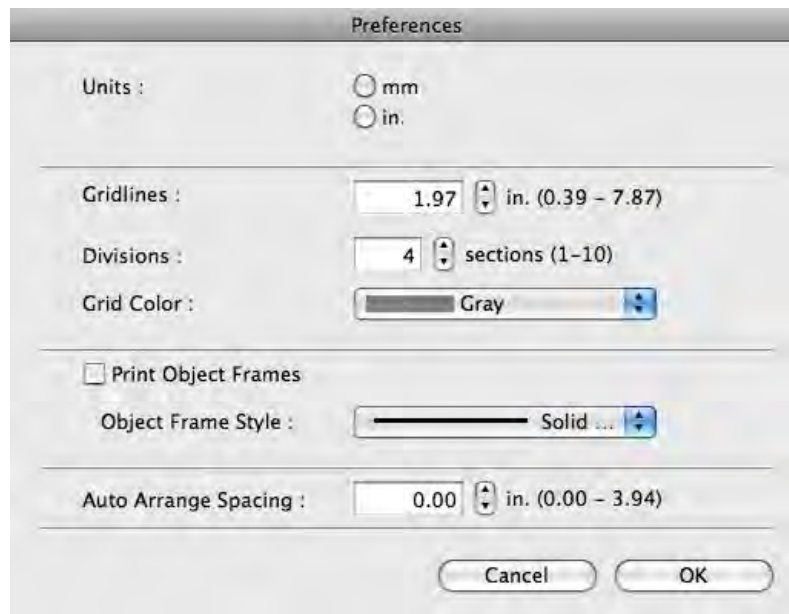

5

### Units

Set the unit for paper length, margins, and so on.

### Gridlines

You can input a grid line width value in numerical characters so that they serve as a guide to laying out objects.



#### Note

- You can input between 10.0 and 200.0(mm) (between 0.39 and 7.87(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

### Divisions

You can change the number of divisions of grid lines so that they serve as a guide to laying out objects.



#### Note

- You can input between 1 and 10.
- You can change the numbers by clicking either ▲ button or ▼ button.

### Grid Color

Select the grid line color.

### Print Object Frames

You can print the object border.

**Note**

- If you do not want to print the object border, deselect the **Print Object Frames** check box.

## Object Frame Style

You can select the object frame style for printing.

The following settings are available for the object frame style.

Setting	Details
<b>Solid Line</b>	You can print the solid line as the frame style.
<b>Dotted Line</b>	You can print the dotted line as the frame style.
<b>Dashed Line</b>	You can print the dashed line as the frame style.

## Auto Arrange Spacing


Change the object-to-object spacing to be applied in the operation of laying out objects automatically.

**Note**

- You can input between 0.0 and 100.0(mm) (between 0.00 and 3.94(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Page Setup Dialog Box

This dialog box appears when you select **Page Setup** from the **File** menu. This dialog box provides selections for setting the media size, orientation and other important features.

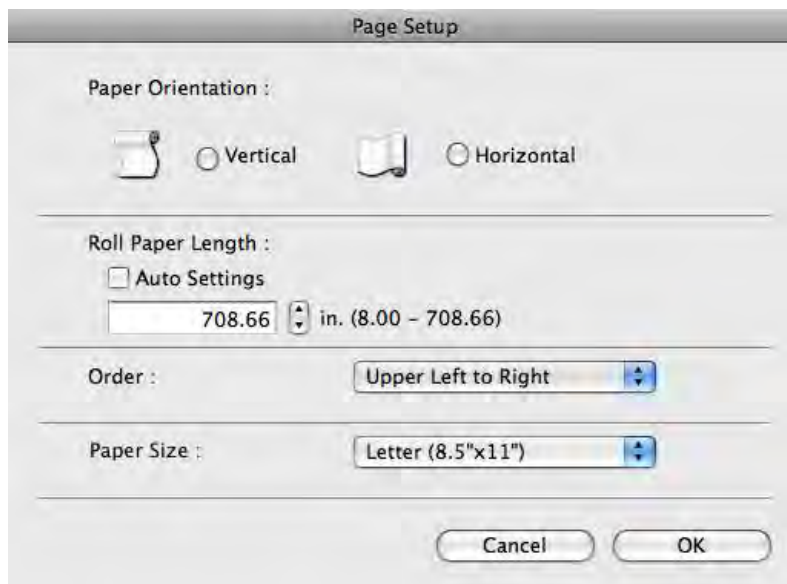

## Paper Orientation

This selects the paper orientation.

The following settings are available for orientation.

Setting	Details
<b>Vertical</b>	Prints the image and text created with the application software in the orientation as it is.
<b>Horizontal</b>	Prints the image and text by rotating sideways 90 degrees from the orientation as specified in the application.

## Roll Paper Length

Set the length of one page to print on roll paper.

When you place a checkmark on **Auto Settings**, the one-page length to be printed on roll paper is automatically set so that the laid-out objects are printed on one page.



### Note

- Available only if rolls are selected in **Paper Source**.
- You can input between 203.2 and 18000.0(mm) (between 8.00 and 708.66(inch)).
- You can change the numbers by clicking either ▲ button or ▼ button.

## Order

Set the object layout order.

The following settings are available for order.

Setting	Details
<b>Upper Left to Right</b>	The objects are laid out from upper left to right.
<b>Upper Left to Bottom</b>	The objects are laid out from upper left to bottom.



### Note

- When you have selected **Roll Paper Length > Auto Settings** and **Paper Orientation > Vertical**, you can choose only **Upper Left to Right**.
- When you have selected **Roll Paper Length > Auto Settings** and **Paper Orientation > Horizontal**, you can choose only **Upper Left to Bottom**.

## Paper Size

You can select the size of the print media.




### Note

- You cannot display this if **Roll Paper** is selected in **Paper Source**.

## Zoom Dialog Box

This dialog box appears when you select **Zoom** from the **View** menu. You can enlarge or reduce the screen display.

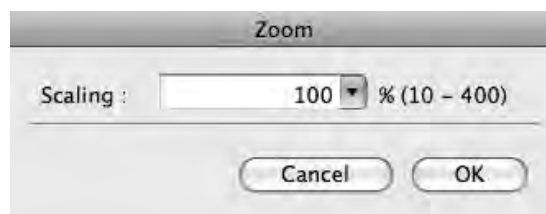



## Scaling

Set the magnification for enlargement or reduction of the screen display.




### Note

- You can input between 10 and 400.
- You can change the numbers by clicking ▼ button.

## Format Dialog Box

This dialog box appears when you select **Format** from the **Object** menu after you select an object. You can rotate, enlarge, or reduce an object.

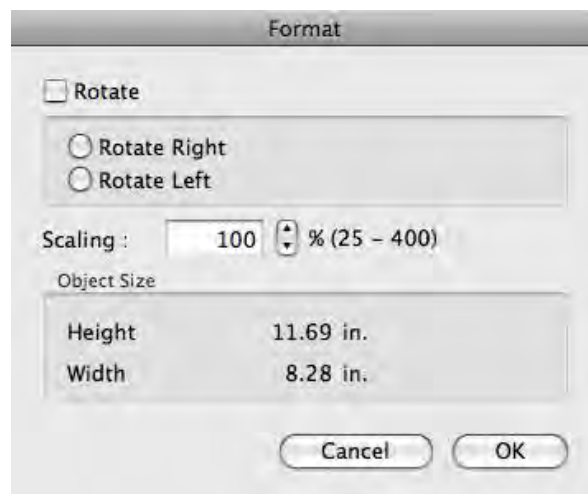

### Note

- When the objects are not selected, you can not select **Format**.

## Rotate

When you place a checkmark here, you can select **Rotate Right** or **Rotate Left**.

Setting	Details
<b>Rotate Right</b>	Rotates the object 90 degrees clockwise.
<b>Rotate Left</b>	Rotates the object 90 degrees counterclockwise.



### Note

- When several objects are selected, you cannot select **Rotate**.

## Scaling

You can input the value for enlargement or reduction of the object in numerical characters.



### Note

- You can input between 25 and 400.
- You can change the numbers by clicking either ▲ button or ▼ button.

## Object Size

You can confirm the object size.



### Note

- When several objects are selected, you cannot display **Object Size**.

## Laying out a Multiple-File Document on One Page

You can lay out and print a multiple-file document on one page.

1. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



### Note

- Normally, select **Print** from the **File** menu.

2. Click on **Free Layout** in the **Page Setup** panel to attach a checkmark.
3. In the **Print** dialog box, select the pages to print and the number of copies, and click the **Print** button.  
Free Layout starts, laying out the document created with application software in the layout area as an object.
4. Leaving Free Layout running, open other files with the application software and repeat the above steps.

5

## Laying out a Document Created with Multiple Application Programs on One Page

You can lay out and print a document created with multiple application programs on one page.

1. From the application software's **File** menu, select the printer setup menu to open the **Print** dialog box.



### Note


- Normally, select **Print** from the **File** menu.

2. Click on **Free Layout** in the **Page Setup** panel to attach a checkmark.
3. In the **Print** dialog box, select the pages to print and the number of copies, and click the **Print** button.  
Free Layout starts, laying out the document created with application software in the layout area as an object.
4. Leaving Free Layout running, open the files with other application software and repeat the above steps.

504

## Selecting an Object

When an object is selected, a select box (blue border) appears around the object.

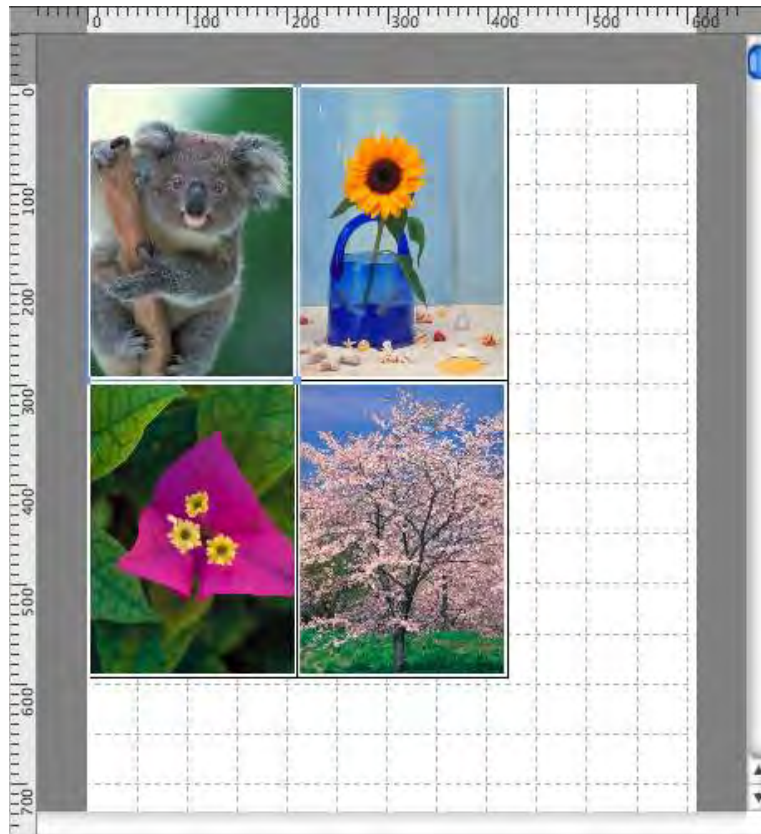

### Note

- To select an object, click that object.
- To select multiple successive objects, click them while holding down the shift key.
- To select multiple arbitrary objects, click them while holding down the command key.
- To select all objects, select **Select All** from the **Edit** menu.

## Changing the Object Size

You can change the object size by means of mouse operation or by specifying a scaling value.




### Note

- The vertical-to-horizontal ratio remains unchanged when the object is enlarged or reduced.

### Resizing by means of mouse operation

1. Select an object.

2. Place the pointer at a corner of the selection box around the object to show the arrow handle, and drag this handle to change the object size.

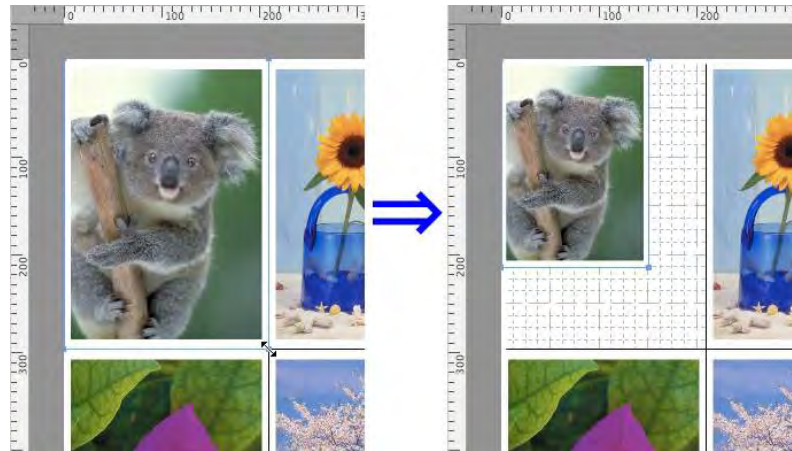

### Resizing by specifying a scaling value

1. Select an object.
2. Open the Format Dialog Box →P.503 .
3. Use **Scaling** to set the magnification for enlargement or reduction. You either enter numbers directly.



#### Note

- You can input between 25 and 400.
- You can change the numbers by clicking either ▲ button or ▼ button.


4. Click the **OK** button.

### Moving an Object

You can move the object position.

1. Select an object.


- Place the pointer inside the selection box of the object to show the crosshair handle, and drag it to move the object.

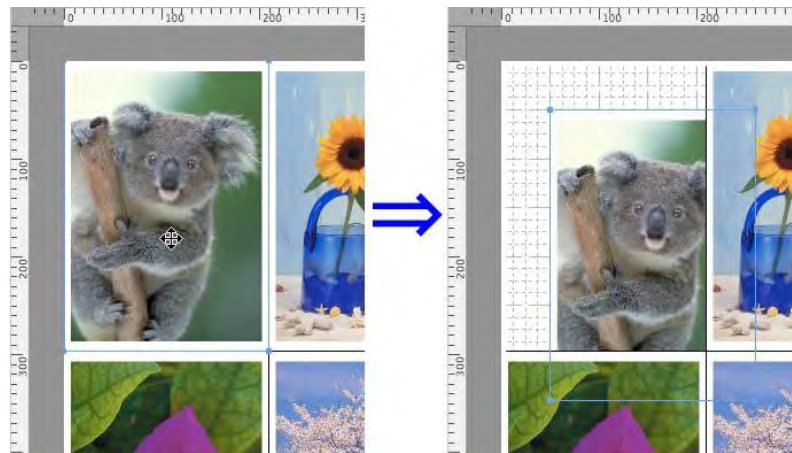

## Rotating an Object

You can rotate the object.

- Select an object.
- Select **Rotate Left** or **Rotate Right** from the toolbar. Alternatively, you may click on the **Rotate** check box in the Format Dialog Box →P.503 then select **Rotate Right** or **Rotate Left**, and click the **OK** button.

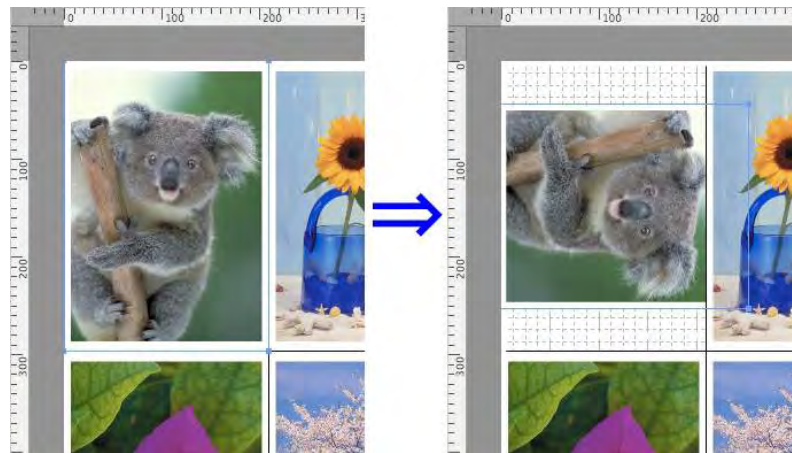


### Note

- When several objects are selected, you cannot select **Rotate**.



## Laying out Objects Automatically

Click **Auto Arrange** in the tool bar. This automatically lays out objects. Alternatively, you may select **Auto Arrange Object** from the **Object** menu.

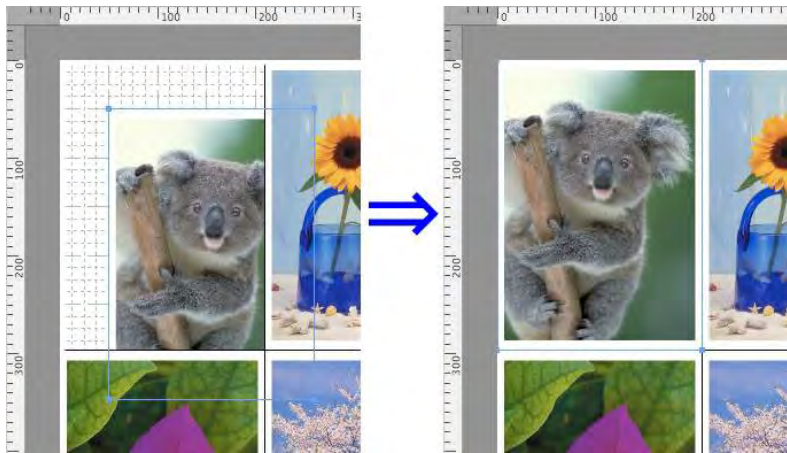

Note

- The object layout order varies depending on the **Order** setting on the Page Setup Dialog Box →P.501 .

5


## Aligning Objects

You can align objects systematically.

1. Select multiple objects.
2. Select the align menu from the **Object** menu.

### Align Top

Lays out the objects, justifying them to the top.

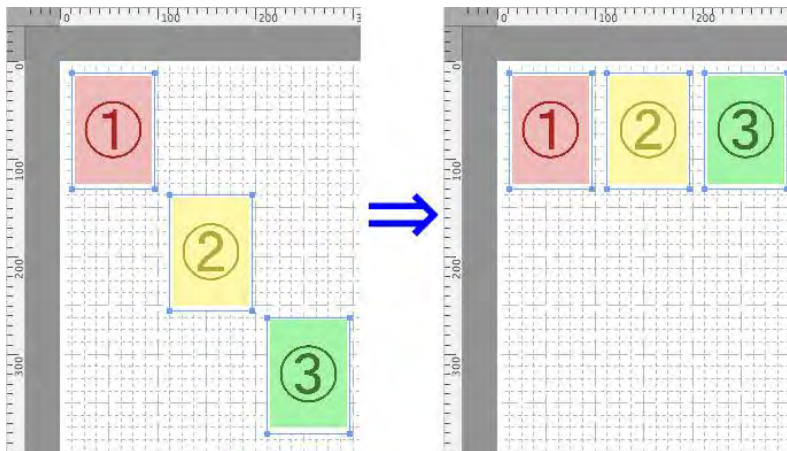


508




## Center Vertically

Lays out the objects, justifying them to the vertical center.

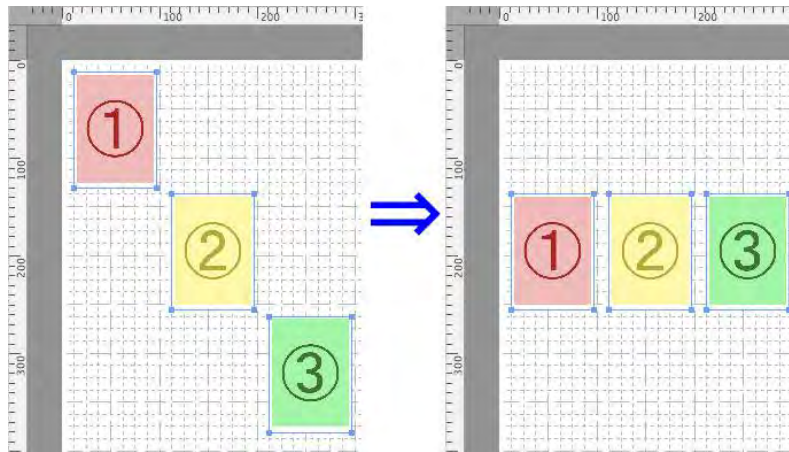


## Align Bottom

Lays out the objects, justifying them to the bottom.

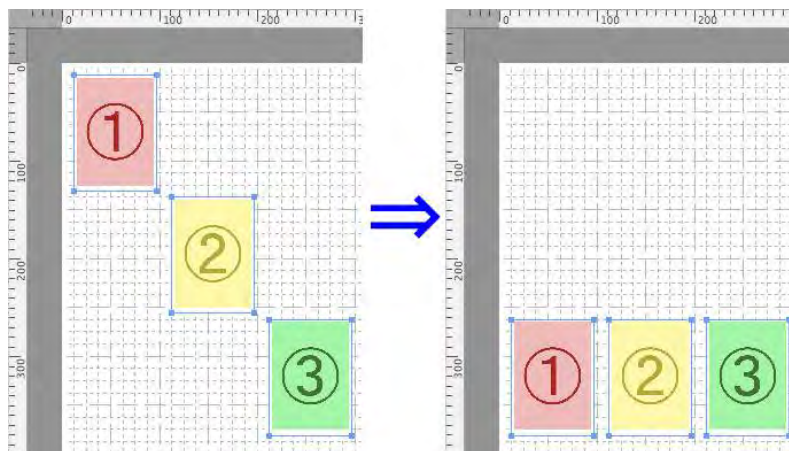


## Align Left

Lays out the objects, justifying them to the left.

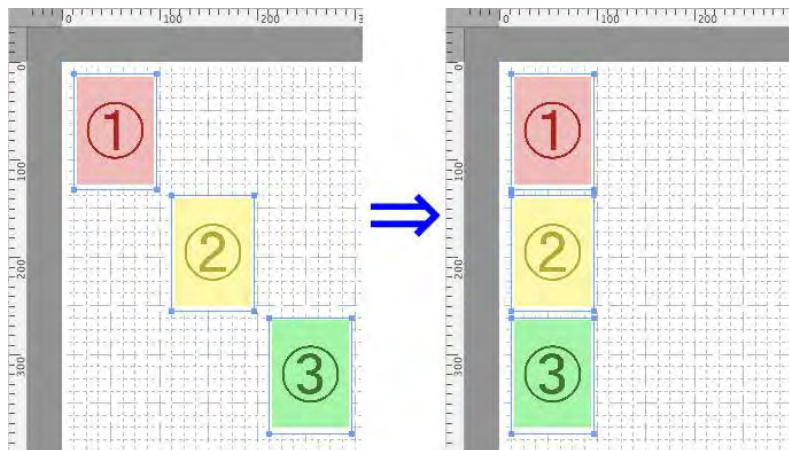


## Center Horizontally

Lays out the objects, justifying them to the horizontal center.

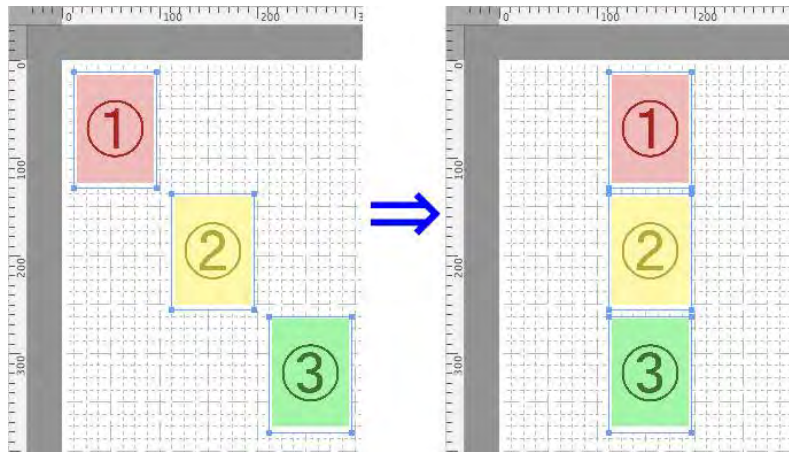

## Align Right

Lays out the objects, justifying them to the right.

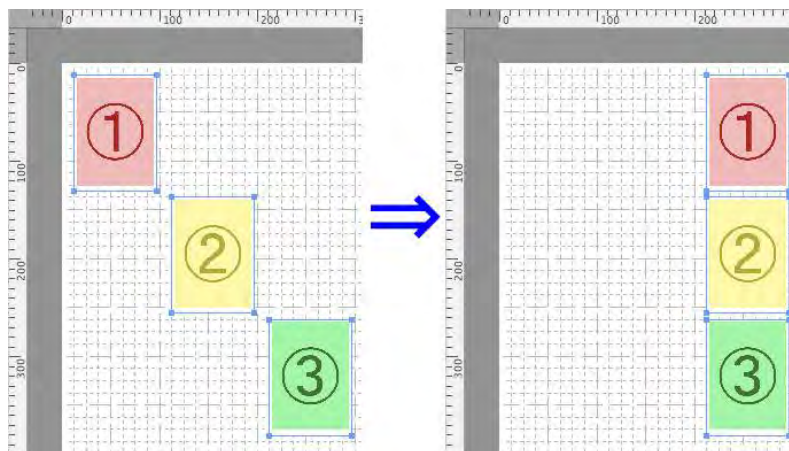


## Changing the Object Overlapping Order

You can change the object overlapping order.

1. Select an object.
2. Select the overlapping order menu from the **Object** menu.


## Bring to Front

Moves the object to the frontmost position.

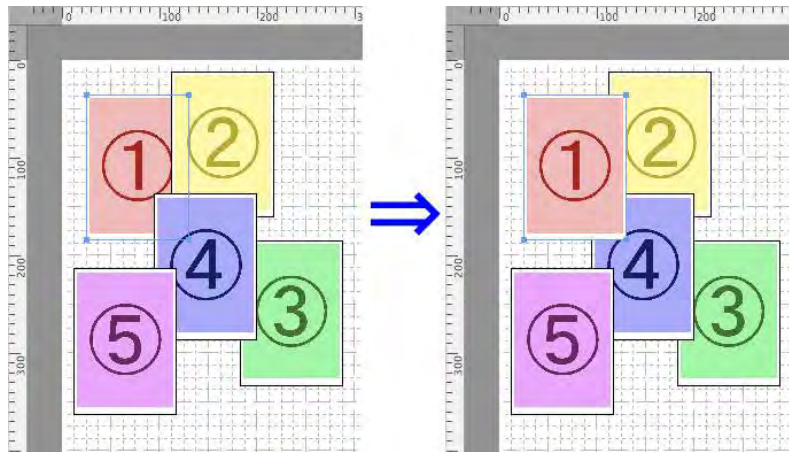


## Send to Back

Moves the object to the backmost position.

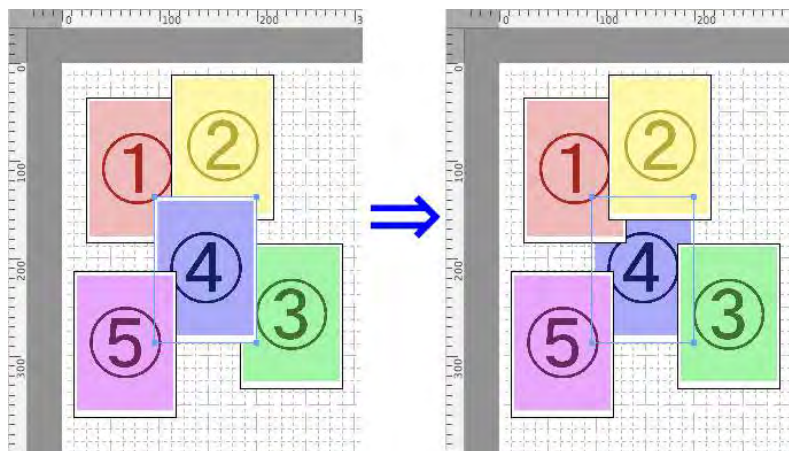

## Bring Forward


Moves the object one position to the front.

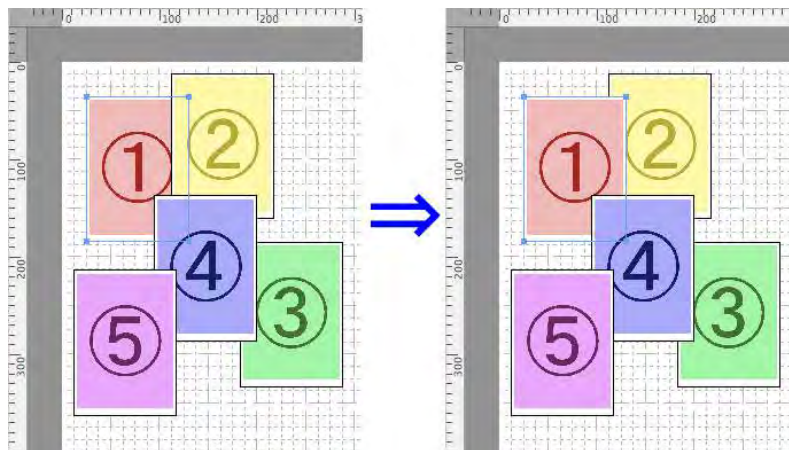



## Send Backward

Moves the object one position to the back.

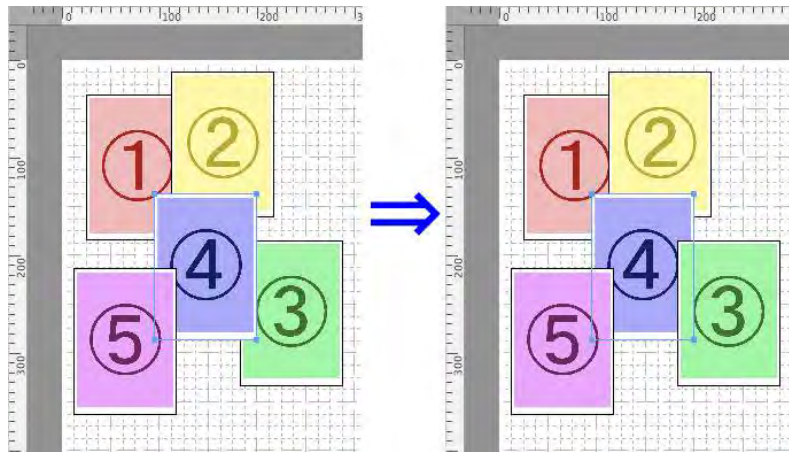

## 5

## Pasting a Copied or Cut Object

1. Click **Copy** or **Cut** from the toolbar.  
Alternatively, you may select **Copy** or **Cut** from the **Edit** menu.
2. Click **Paste** from the toolbar.  
Alternatively, you may select **Paste** from the **Edit** menu.



### Note

- The copied or cut object is laid out at the end of the page.

## Color imageRUNNER Enlargement Copy

The Features of Color imageRUNNER Enlargement Copy .....	513
Operating Environment .....	513
Starting Color imageRUNNER Enlargement Copy .....	514
Color imageRUNNER Enlargement Copy Dialog Box .....	515
Hot Folder .....	516
Creating a New Hot Folder .....	517
Editing a Hot Folder (Setting Print Conditions) .....	519
Deleting a Hot Folder .....	523
Setting the Print Parameters .....	523
Paper Settings Panel .....	524
Easy Settings .....	526
Advanced Settings .....	527
Output Settings Panel .....	529
Color Settings Panel .....	531
Driver Matching Mode .....	533
ICC Matching Mode .....	534
ColorSync .....	535
Printing Enlargements of Scanned Originals from a Color imageRUNNER .....	535

## The Features of Color imageRUNNER Enlargement Copy

The main features of Color imageRUNNER Enlargement Copy are as follows.

- Allows the document scanned with the Color imageRUNNER to be automatically enlarged and printed.
- You can perform basic printer settings such as printer selection, media type and output profile selection, and matching methods, in addition to borderless printing and enlargement/reduction process without growing through the printer driver.



### Note

- The media type, image size, detailed media settings, and the printer settings can cause the actual print output to differ from the Color imageRUNNER Enlargement Copy settings.

## Operating Environment


You can use the Color imageRUNNER Enlargement Copy in the following environments.

- Compatible Operating System  
Mac OS X (10.3.9 to 10.6)
- Software that requires installation  
imagePROGRAF Printer Driver

## Starting Color imageRUNNER Enlargement Copy

Follow the procedure below to start the Color imageRUNNER Enlargement Copy.

1. Open the **Utility** panel of the **Print** dialog box.

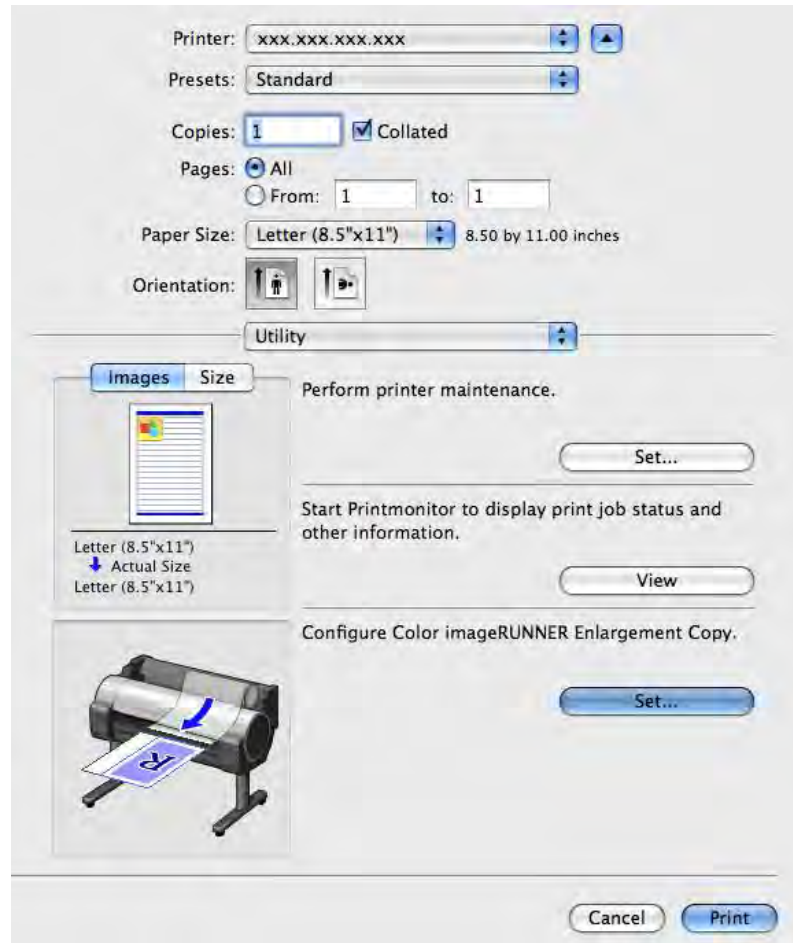


### Note

- Your printer is depicted in the lower-left area of this screen.



2. Click the **Set** button in **Configure Color imageRUNNER Enlargement Copy**, to open the **Color imageRUNNER Enlargement Copy** dialog box.

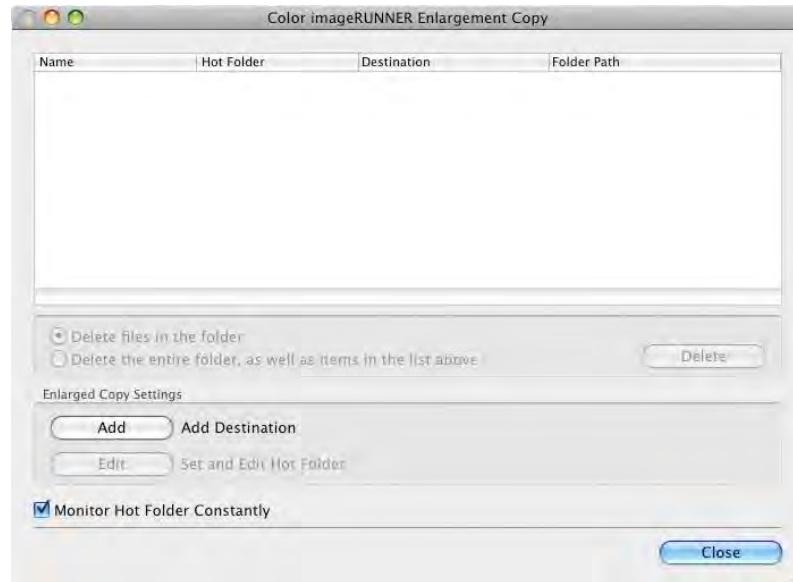

#### Note

- You can also start the utility directly by clicking on the **Color imageRUNNER Enlargement Copy.app** icon in **Applications > Canon Utilities > iR Enlargement Copy**.

## Color imageRUNNER Enlargement Copy Dialog Box

The explanation below is on the **Color imageRUNNER Enlargement Copy** dialog box.



#### Note

- For the step to open the **Color imageRUNNER Enlargement Copy** dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.514

### Delete files in the folder

From the Hot Folder list, select a hot folder and click the **Delete** button to delete only files in the hot folder.

### Delete the entire folder, as well as items in the list above

From the Hot Folder list, select a hot folder and click the **Delete** button to delete the hot folder.

### Delete Button

Select **Delete files in the folder** or **Delete the entire folder, as well as items in the list above** and click this button to delete the hot folder or only files in the hot folder.

### Add Button

Click the button to open the **Destination Selection** dialog box so that you can add a hot folder.

### Edit Button

From the Hot Folder list, select a hot folder and click this button to open the **Add/Edit Hot Folder** dialog box that allows you to edit the hot folder.

5

### Monitor Hot Folder Constantly

If you click on the check box, the icon of Color imageRUNNER Enlargement Copy utility will appear on the Dock when starting OS X thereafter.

## Hot Folder

Hot folder refers to a folder used for Color imageRUNNER Enlargement Copy.

- When transferred to the PC's hot folder, the document data scanned with the Color imageRUNNER is printed in enlarged size from the printer according to the print conditions set in the hot folder.
- You can create a new hot folder, edit or delete an existing one, and set print conditions at will.



#### Note

- You can create up to 10 hot folders.

## Creating a New Hot Folder


1. Open the **Color imageRUNNER Enlargement Copy** dialog box.



### Note


- For the step to open the **Color imageRUNNER Enlargement Copy** dialog box, see "Starting Color imageRUNNER Enlargement Copy." →P.514

2. Click the **Add** button in **Enlarged Copy Settings** to open the **Destination Selection** dialog box.

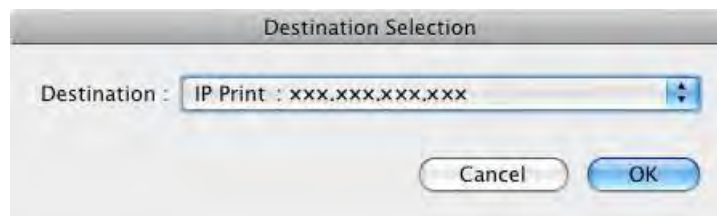

3. From the printer list in **Destination**, select the printer of destination.


4. Click the **OK** button to open the **Add/Edit Hot Folder** dialog box.

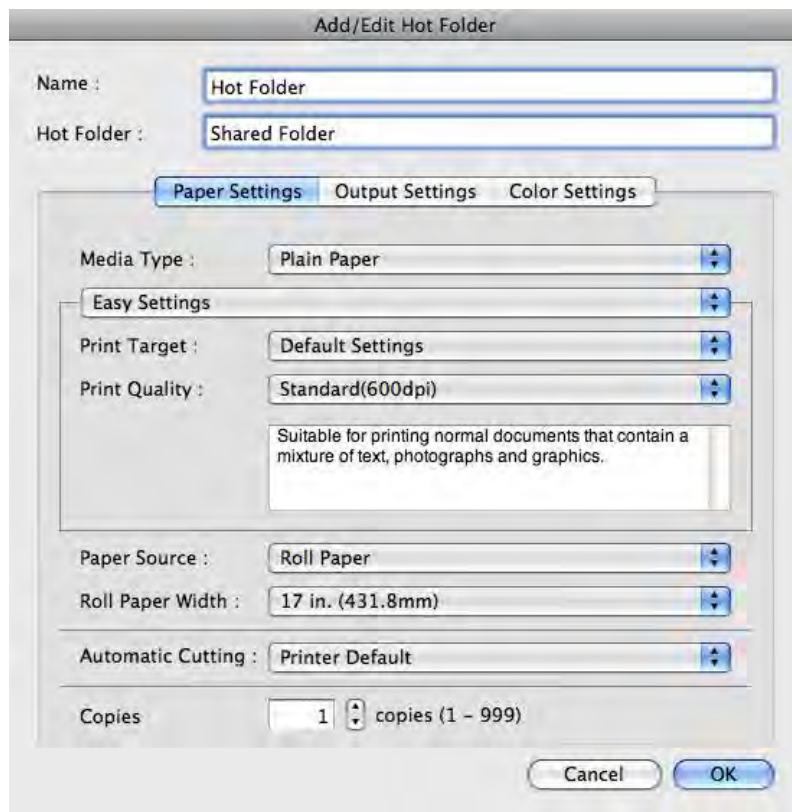

5. In **Name**, enter the name to display in the Hot Folder list.

6. In **Hot Folder**, enter the Hot Folder name.

7. Click the **OK** button. The created Hot Folder is listed in the **Color imageRUNNER Enlargement Copy** dialog box.

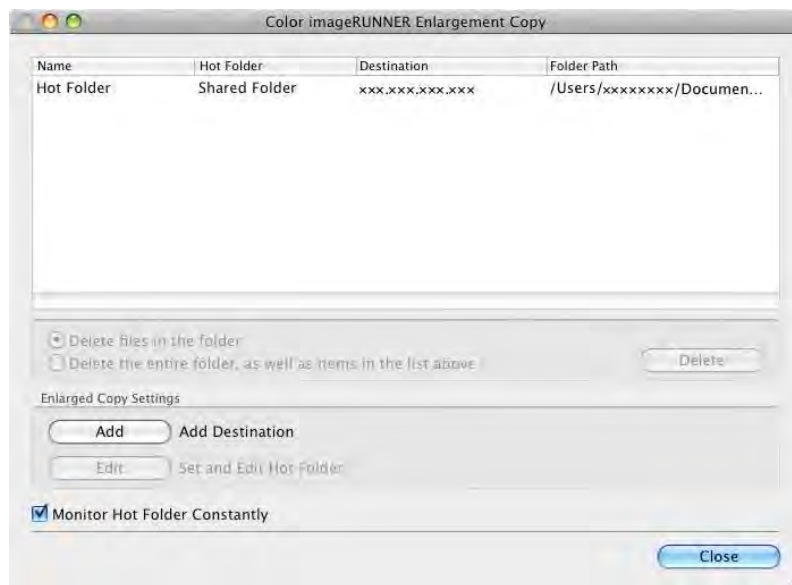

5

518


8. Click the **Close** button to close the **Color imageRUNNER Enlargement Copy** dialog box.
9. From the **Apple** Menu, open the **Sharing** dialog box for **System Preferences**.
10. Select the check box labeled **File Sharing**, and click the **Options** button.
11. Select the check box labeled **Share files and folders using FTP** and **Share files and folders using SMB** to make shared settings.

**Note**

- You can create up to 10 hot folders.


## Editing a Hot Folder (Setting Print Conditions)

1. Open the **Color imageRUNNER Enlargement Copy** dialog box.

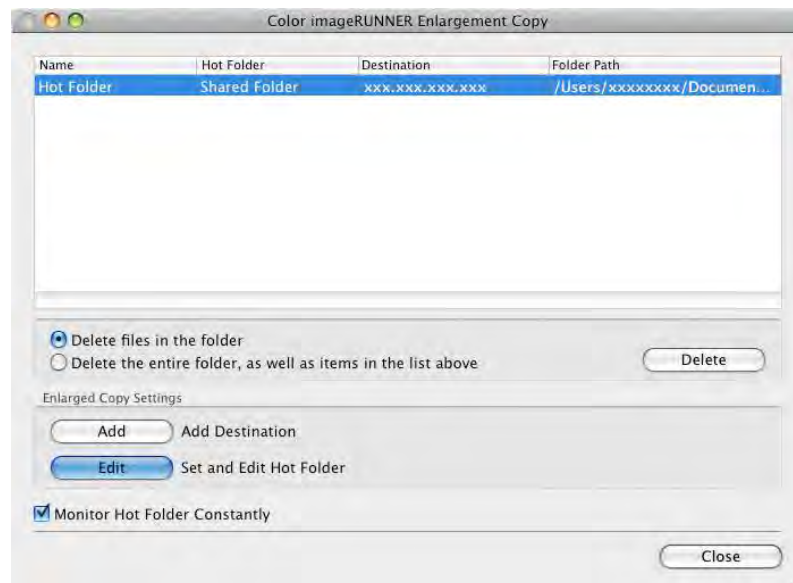


2. Select the Hot Folder from the Hot Folder list.
3. From **Enlarged Copy Settings**, click **Edit** button to open the **Add/Edit Hot Folder** dialog box.

4. Make the necessary settings in the Paper Settings Panel →P.524 .

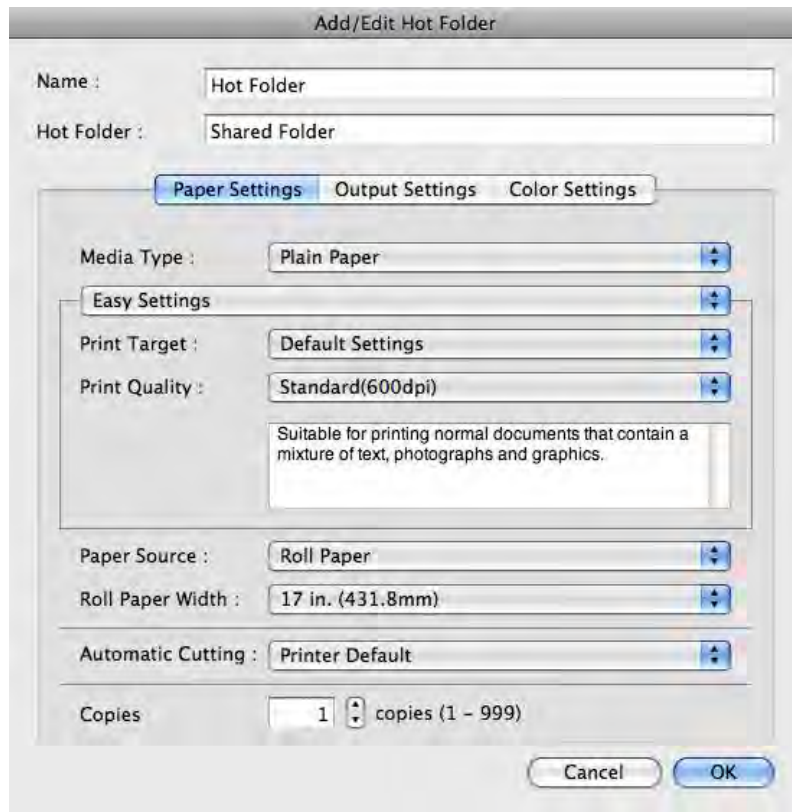


5

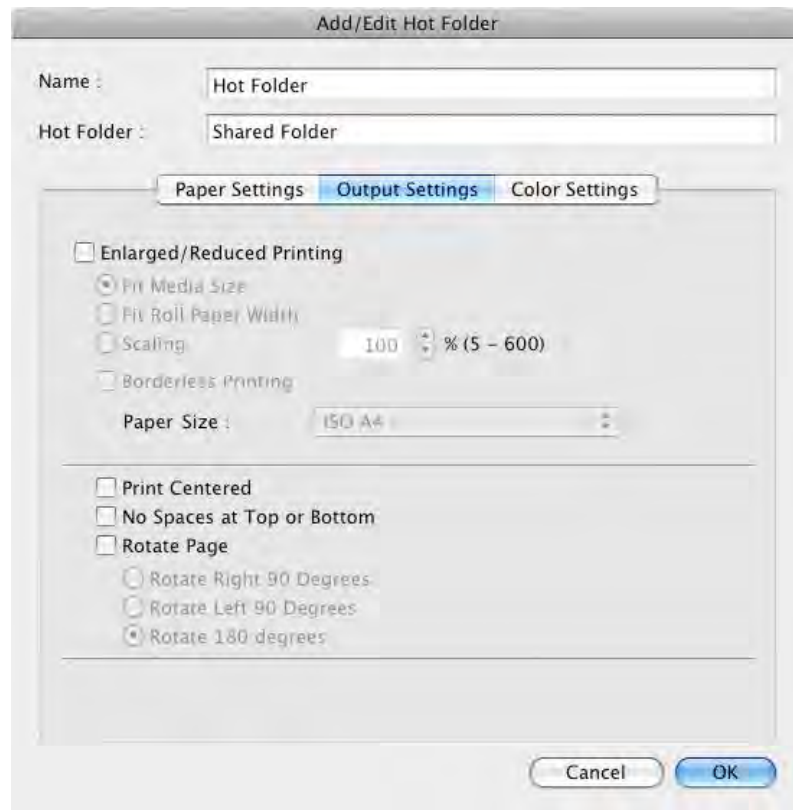

**5.** Make the necessary settings in the Output Settings Panel →P.529 .

6. Make the necessary settings in the Color Settings Panel →P.531 .

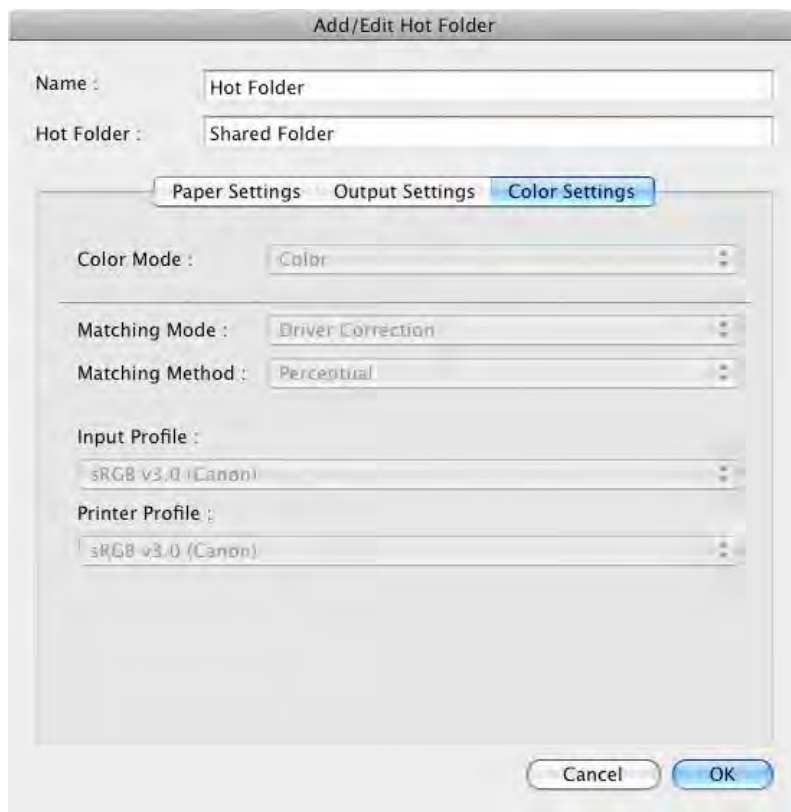

7. Click the **OK** button to close the **Add/Edit Hot Folder** dialog box.

8. From the **Apple Menu**, open the **Sharing** dialog box for **System Preferences**.

9. Select the check box labeled **File Sharing**, and click the **Options** button.

10. Select the check box labeled **Share files and folders using FTP** and **Share files and folders using SMB** to make shared settings.




**Note**


- If you've made shared settings when you created a new Hot Folder, you do not need to execute steps 8 to 10.

## Deleting a Hot Folder

1. Open the **Color imageRUNNER Enlargement Copy** dialog box.

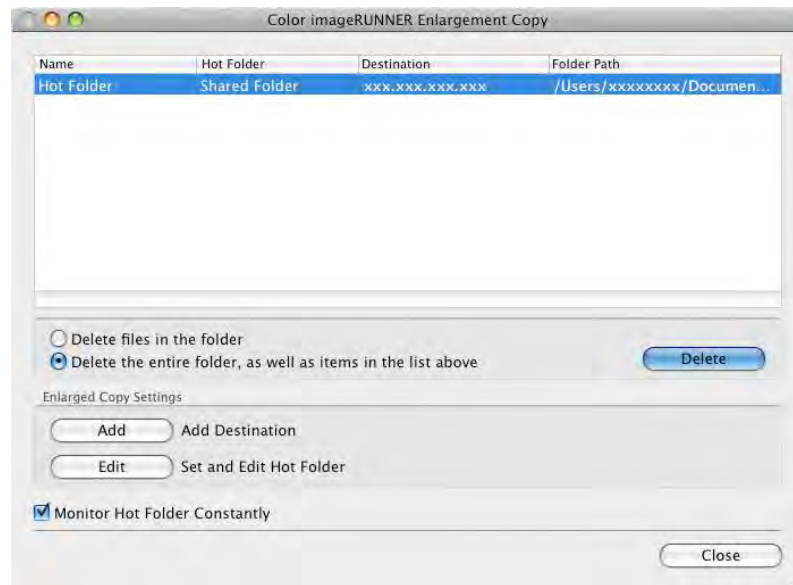

2. Select the Hot Folder you want to delete from the Hot Folder list.
3. Select **Delete the entire folder, as well as items in the list above**, and then click the **Delete** button.

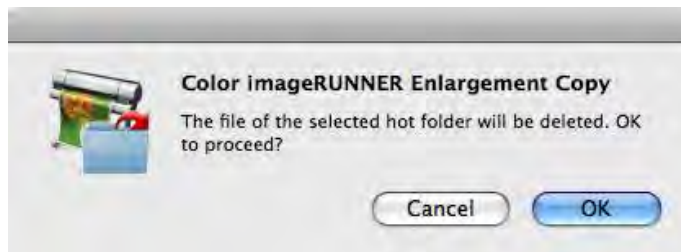

4. Read the message and then click the **OK** button.



### Note


- Select **Delete files in the folder** to delete only files in the hot folder.

## Setting the Print Parameters

You can set the print conditions in the setting panels within the **Add/Edit Hot Folder** dialog box. The settings available on each panel are as follows.

- Paper Settings Panel →P.524
- Output Settings Panel →P.529
- Color Settings Panel →P.531

## Paper Settings Panel

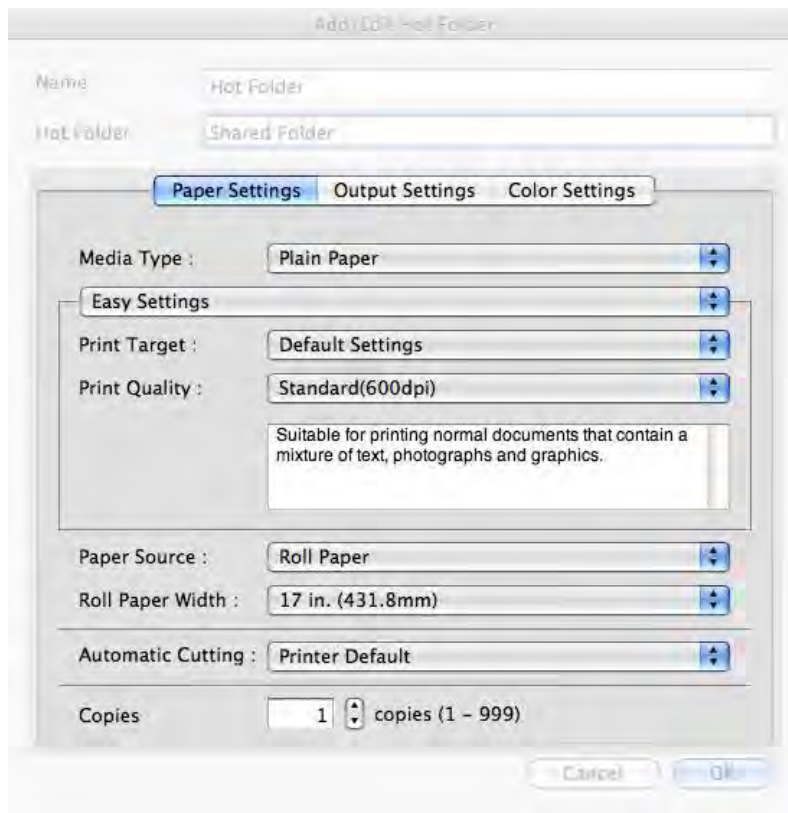

5

### Easy Settings / Advanced Settings

Two modes are available to provide the optimum print settings for jobs. The settings available on each mode are as follows.

- Easy Settings →P.526
- Advanced Settings →P.527

### Media Type

This allows you to select the media type.



**Note**

- Always select media type that is actually set in the printer. When the media you chose is different from the media set in the printer, you may not receive the desired print results.

524

### Paper Source

You can select the paper source. The following settings are available for paper source.

Setting	Details
<b>Cut Sheet</b>	Select to print on the cut sheet.
<b>Roll Paper</b>	Select to print on roll paper.

## Roll Paper Width

This selects the width of the roll media set to the printer.



### Note

- Available only if rolls are selected in **Paper Source**.

## Automatic Cutting

You can set the printer to cut roll paper automatically or print a guideline for cutting.

The following settings are available for automatic cutting.

Setting	Details
<b>Printer Default</b>	The value set on the printer operation panel takes priority.
<b>None</b>	Each page is not cut after it is printed and printing continues without interruption.
<b>Print Cut Guideline</b>	A print cut guideline is printed after each page and printing continues without interruption.



### Note

- Available only if rolls are selected in **Paper Source**.

## Copies

You can input the number of print copies in numerical characters.




### Note

- The maximum value is 999.
- You can change the numbers by clicking either ▲ button or ▼ button.

## Easy Settings

You can easily select the best settings for the print job by just selecting an item from the print target list that matches the content of the document.

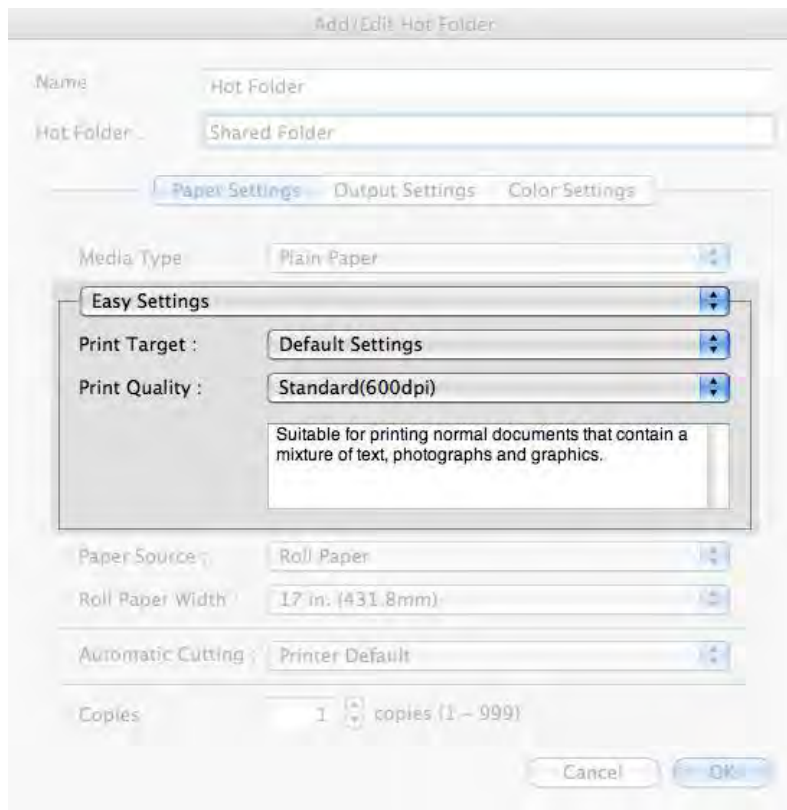

## Print Target

You can easily select the best settings for the print job simply.

If you select each **Print Target** item the corresponding comment for that item is displayed below the list.

Setting	Details
<b>Default Settings</b>	Suitable for printing normal documents that contain a mixture of text, photographs, and graphics.
<b>Office Document</b>	Suitable for printing handouts as well as general office documents for which print clarity is key.
<b>Poster</b>	The best setting for posters. Prints using vivid and high impact colors.
<b>CAD (Color Line Drawing)</b>	Prints the fine lines of CAD drawings and other such documents sharp and clear.
<b>CAD (B/W Line Drawing)</b>	Suitable for printing CAD drawings with sharp, dark lines.
<b>Perspective, GIS</b>	Suitable for attractive printing of 3D-CAD drawings, perspective drawings, and GIS drawings including maps.
<b>Photo (Color)</b>	Suitable for printing photographic images captured with a digital camera.
<b>Faithful Color Reproduction</b>	Prints by faithfully reproducing the colors of the original image.
<b>Custom Settings</b>	Suitable for printing documents for which Advanced Settings have been specified.



**Note**

- The number of settings available for selection depends on the media type.

**Print Quality**

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.


Setting	Details
Print Quality	<b>Highest / High / Standard / Draft</b>
Resolution	<b>1200dpi / 600dpi / 300dpi</b>

**Note**

- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Draft**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Draft** than with **High**, however, print quality is lower.

**Advanced Settings**

Presents detailed settings for the print priority, the print quality, and other items so you can select the values for these settings yourself.

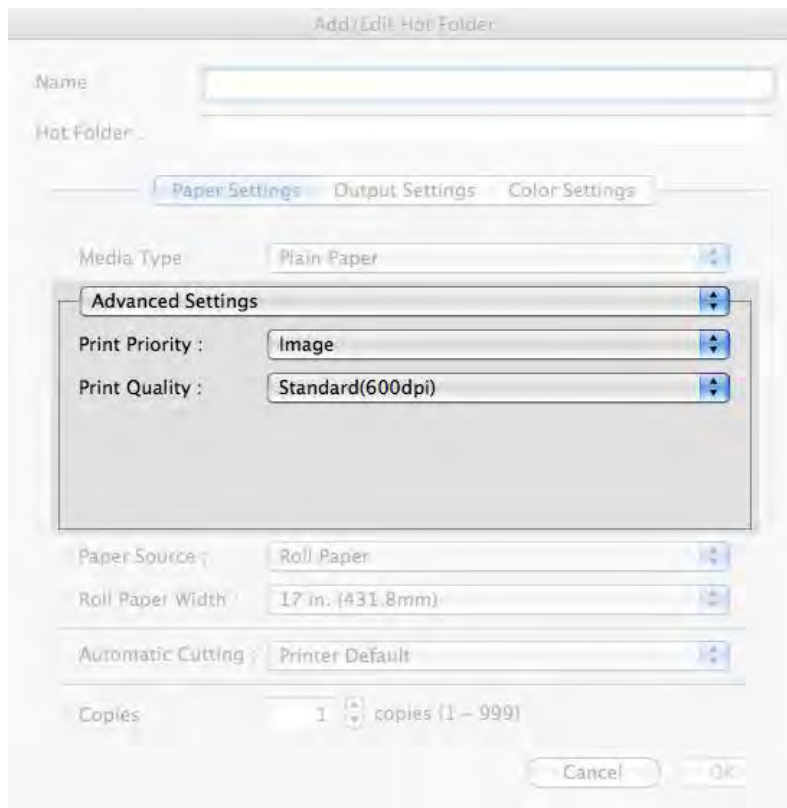

## Print Priority

Select a print quality mode that is appropriate for the print job.

Setting	Details
<b>Image</b>	This mode achieves the best results for printing photographic images and illustrations.
<b>Line Drawing</b>	This mode is best for printing CAD drawings with fine lines or wall newsheet or other documents that contain large amounts of text. However, you may not achieve the quality you expect with printing photographs or other images with many filled areas. For these types of jobs, select <b>Image</b> .
<b>Office Document</b>	Prints common office documents, such as proposals, memos for distribution, etc., so they are easy to read.



### Note

- The number of settings available for selection depends on the media type.

## Print Quality

Selecting print quality strikes a balance between the quality of the printed image and printing speed.

The level of the print quality and resolution settings are displayed in the following combinations.


Setting	Details
Print Quality	<b>Highest / High / Standard / Draft</b>
Resolution	<b>1200dpi / 600dpi / 300dpi</b>



### Note

- The availability of settings is determined by the media type and print priority selections.
- Printing time is longer and more ink is consumed with **High** than with **Draft**, however, print quality is higher.
- Printing time is shorter and less ink is consumed with **Draft** than with **High**, however, print quality is lower.

## Output Settings Panel

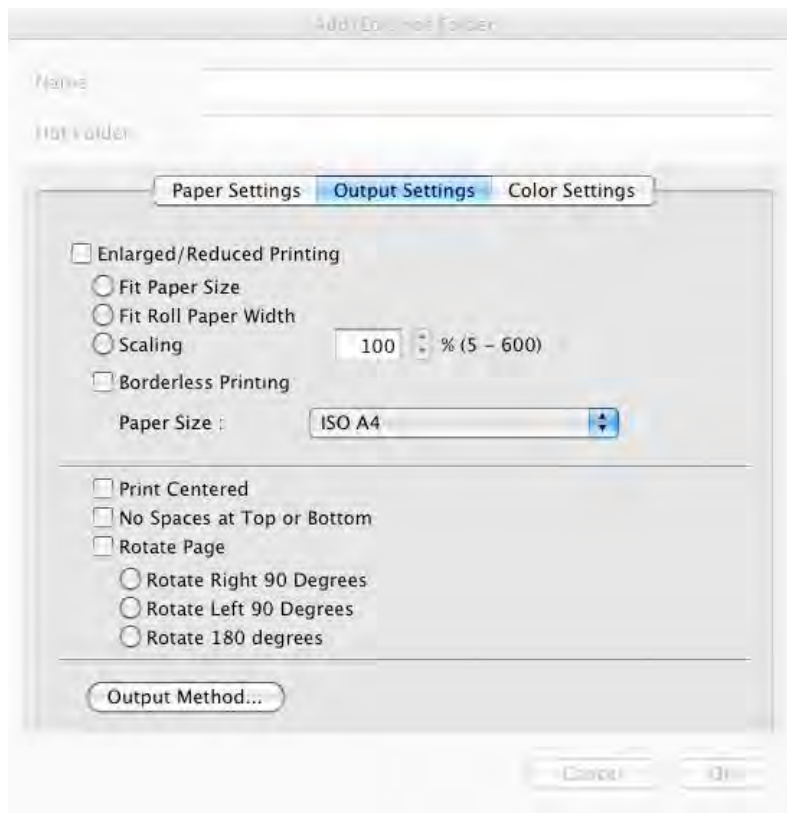

5

### Enlarged/Reduced Printing

Select the method for enlarged/reduced printing.

The following settings are available for enlarged/reduced printing.

Setting	Details
<b>Fit Paper Size</b>	Enlarges/reduces the whole page automatically to fit the media size selected for output. Select the media size to print from <b>Paper Size</b> .
<b>Fit Roll Paper Width</b>	Enlarges/reduces the whole page automatically to fit the width of the roll paper with the page width. *Make sure that the width of the roll paper in the printer is set correctly for <b>Roll Paper Width</b> in the <b>Paper Settings</b> panel. *Displayed only if rolls are selected in <b>Paper Source</b> .
<b>Scaling</b>	Enlarges/reduces the whole page by the scaling rate as specified. Input the scaling value in numerical characters. You can specify a range between 5 and 600%. *You can change the numbers by clicking either ▲ button or ▼ button. *Although Scaling can be set to make the image larger than the media size, the part that does not fit in the media cannot be printed. *This is not displayed when a checkmark is placed in <b>Borderless Printing</b> .

529

### Borderless Printing

You can print the media without margins on all sides when the roll paper with the specific width and the specific media type is used.



**Note**

- Available only if rolls are selected in **Paper Source**.

### Paper Size

You can select the size of the print media.



**Note**

- This is not displayed when **Fit Roll Paper Width** is set in **Enlarged/Reduced Printing**.

### Print Centered

Select this feature to print the image in the center of a cut sheet or to print left and right margins evenly from the edges of roll paper.



**Note**

- This feature is useful when you print the document enlarged or reduced with **Scaling** as well. When an image is scaled, it is always enlarged or reduced in reference to a starting point in the upper left corner of the page. If the image is reduced, the bottom and right margins are enlarged and the top and left margins remain unchanged. At that point, you can set all margins evenly with this feature.

5

### No Spaces at Top or Bottom

You can set the printer to print without any empty area when the print data contains empty area at the top or bottom. Since the printer does not feed paper over the empty area, you can save paper.



**Note**

- Available only if rolls are selected in **Paper Source**.

### Rotate Page

Select the method for rotating page.

The following settings are available for rotating page.

Setting	Details
<b>Rotate Right 90 Degrees</b>	Rotates the portrait page right 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.  *When <b>Fit Roll Paper Width</b> is selected under <b>Enlarged/Reduced Printing</b> , then the image is enlarged or reduced after rotating to fit the width of the roll paper.
<b>Rotate Left 90 Degrees</b>	Rotates the portrait page left 90 degrees and print in landscape orientation. When the rotated page can fit in the width of roll paper, the page is rotated automatically, and when it can not fit in the width of roll paper, the page is not rotated.  *When <b>Fit Roll Paper Width</b> is selected under <b>Enlarged/Reduced Printing</b> , then the image is enlarged or reduced after rotating to fit the width of the roll paper.
<b>Rotate 180 degrees</b>	Allows you to rotate the image 180 degrees from the vertical to the right.



**Note**

- Available only if rolls are selected in **Paper Source**.

## Output Method Button

Click the button to open the **Output Method** dialog box.

In this dialog box, you can specify the object output method.

Setting	Details
<b>Print</b>	Regular printing. Jobs are stored in the temporary storage space before printing.
<b>Print (auto delete)</b>	After printing, jobs are immediately deleted.



### Note

- To print after saving jobs in the temporary storage space, select **Save data before printing**.

## Color Settings Panel



## Color Mode

You can select a color mode to suit the print job.

Setting	Details
<b>Color</b>	Enables color printing.
<b>Monochrome</b>	Disables color printing and converts image from continuous color to grayscale monochrome.
<b>Color (CAD)</b>	Prints lines in the best color possible so they are easy to see.
<b>Monochrome Bitmap</b>	Prints all colors other than white in black.

Setting	Details
<b>Monochrome (BK ink)</b>	Select to print all lines with black ink.

**Note**

- The availability of settings depends on the print priority and media type selections.

## Matching Mode

Under **Matching Mode**, select the matching mode.

Setting	Details
Driver Matching Mode →P.533	Enables printing of optimal color tones using a driver specific color profile. You should normally select this mode.
ICC Matching Mode →P.534	Enables color matching using ICC profiles. Select this if you want to print by specifying the input profile, printer profile, and matching method in detail. This allows you to use ICC profiles for digital cameras and scanners, ICC profiles created using the profile creation tool, etc.
ColorSync →P.535	Enables color matching by using the ColorSync function of Mac OS. Select this if you want to perform soft proofing using ColorSync before printing.
<b>No Correction</b>	No color matching is performed. Select this option when you want to perform color matching in the software application.



## Driver Matching Mode

1. Under **Matching Mode**, select **Driver Matching Mode**.




2. Click **Matching Method** list, and then select a setting.

Setting	Details
<b>Auto</b>	Automatically selects the best color matching method for each Image, Graphics, Text.
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.

## ICC Matching Mode

1. Under **Matching Mode**, select **ICC Matching Mode**.

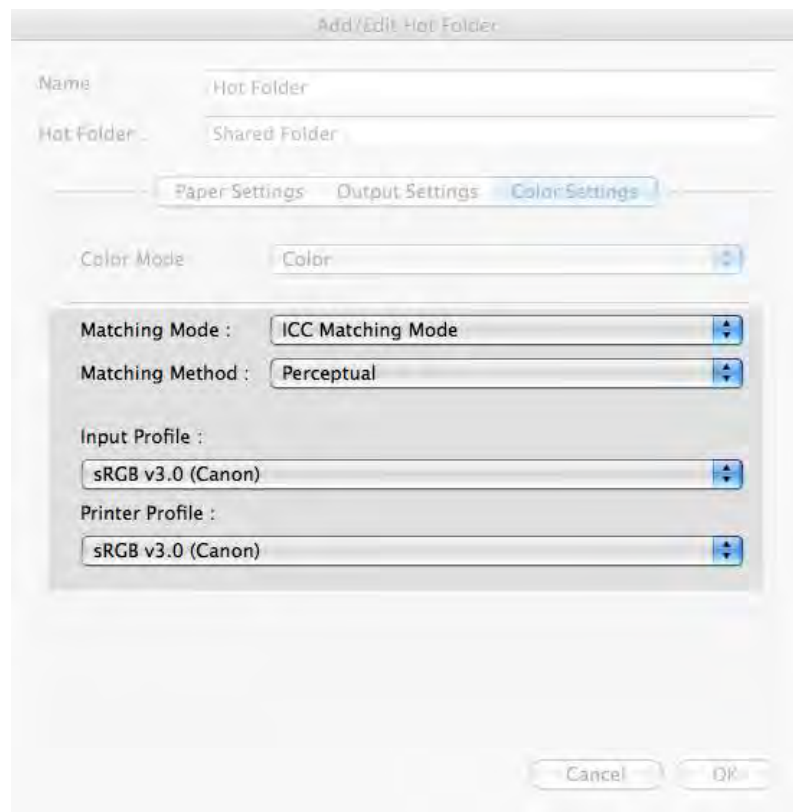

2. Click **Matching Method** list, and then select a setting.

Setting	Details
<b>Perceptual</b>	Color-matching optimized for printing typical photos attractively. Smooth gradation is a feature. This is also an easy-to-use mode when performing color adjustment using application software.
<b>Saturation</b>	Color-matching optimized for printing posters, etc., vividly.
<b>Colorimetric</b>	Color-matching optimized for printing image data with accurate colors in input color space. This is the easiest-to-use mode when you want to adjust the color and print. However, gradation may be lost for colors of wider range than the color reproduction range of the printer. Generally, this is also called relative colorimetric.
<b>Colorimetric (No White-Point Correction)</b>	The processing method of color-matching is identical to <b>Colorimetric</b> . Use this when you want to further reproduce the target paper material color of the image data. Generally, this also is called absolute colorimetric.

3. Click the **Input Profile** list, and then select an input profile.



**Note**

- To match the color on the printing, select the input profile for Color imageRUNNER Enlargement Copy of the Color imageRUNNER type in use.

4. Click the **Printer Profile** list, and then select a printer profile.

## ColorSync

1. Under **Matching Mode**, select **ColorSync**.



2. Click the **Printer Profile** list, and then select a printer profile.



### Note

- Available when using Mac OS X 10.3.9-10.4.

## Printing Enlargements of Scanned Originals from a Color imageRUNNER

Scanned originals from a Color imageRUNNER can be enlarged and printed automatically.

Originals you create by scanning with a Color imageRUNNER are transferred to a "hot folder" and printed automatically after enlargement according to printing conditions you specify for that folder.

This processing sequence is called the Color imageRUNNER Enlargement Copy function.

To use Color imageRUNNER Enlargement Copy, first complete these settings in the following order.


1. Register a hot folder on your computer.  
Register a hot folder on your computer for storing scanned originals from the Color imageRUNNER and complete the settings for enlargement copy.
2. Complete the scanning settings on the Color imageRUNNER.  
Configure the Color imageRUNNER to send scanned originals to the hot folder.

After these settings are complete, you can print enlarged copies of scanned originals from the Color imageRUNNER.

## Registering a hot folder on your computer

Folders used for **Color imageRUNNER Enlargement Copy** (iR enlargement copy) are called hot folders. Register a hot folder on your computer for storing scanned originals from the Color imageRUNNER. You can specify printing conditions (such as the image quality and paper size), based on which originals transferred to the hot folder will be printed. Follow these steps to register and modify hot folders.

1. To display the **Color imageRUNNER Enlargement Copy** dialog box, either double-click the **Color imageRUNNER Enlargement Copy.app** icon after navigating to **Canon Utilities — iR Enlargement Copy** in the **Applications** folder or click **Set** in the **Utility** pane

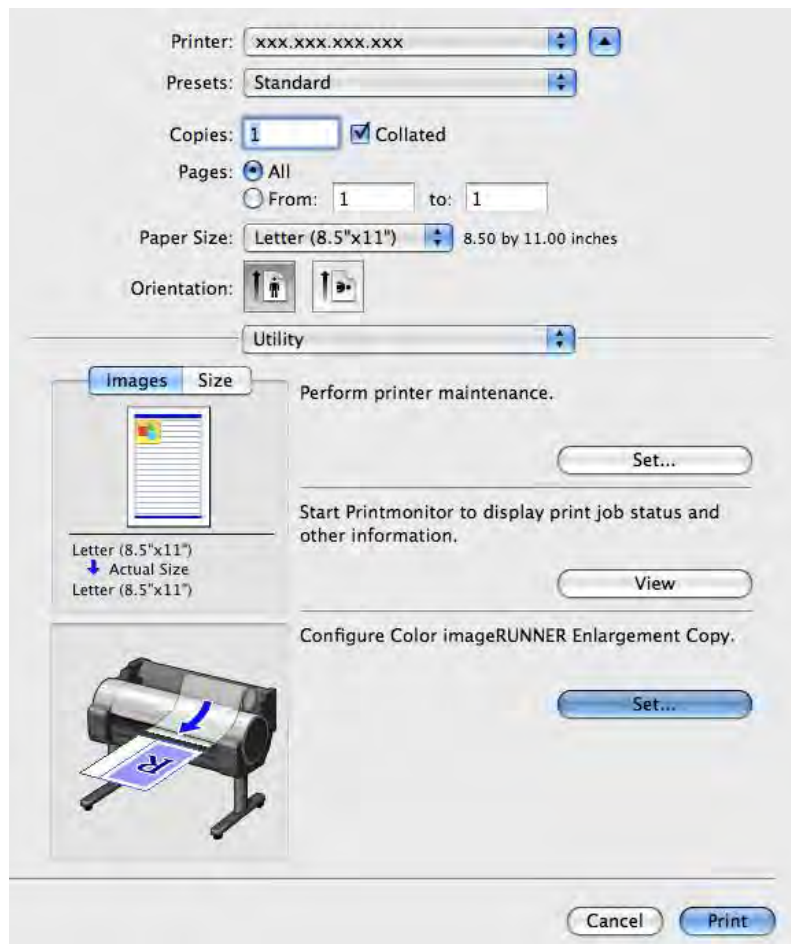

### Note

- Your printer is depicted in the lower-left area of this screen.

2. In **Enlarged Copy Settings**, click **Add** or **Edit** and either create or modify the hot folder. For instructions on registering and modifying hot folders, refer to the help file for **Color imageRUNNER Enlargement Copy**.

## Completing the scanning settings on the Color imageRUNNER.

Configure the Color imageRUNNER to send scanned originals to the hot folder. It is easy to send scanned originals to the hot folder if you assign the scanning settings and destination to a **Favorites** button on the Color imageRUNNER.

For instructions on assigning scanning and sending settings to the **Favorites** button, refer to the Color imageRUNNER manual.

### Scanning the original and print an enlargement

Follow the steps below to scan an original on the Color imageRUNNER for enlarged printing on the printer. For detailed instructions, refer to the Color imageRUNNER manual.


1. Load the original on the platen glass or document feeder of the Color imageRUNNER.
2. Press **Send** to display the screen for transmission.
3. Press **Favorites**, and then press the **Favorites** button assigned to the hot folder.
4. Press **Start** on the control panel. If you scan originals on the platen glass, after scanning all originals, press **Done** on the touch-panel display.  
Scanned originals are sent to the hot folder and automatically enlarged and printed following the conditions you specified for the folder.

## Printmonitor

imagePROGRAF Printmonitor ..... 538

### imagePROGRAF Printmonitor

**imagePROGRAF Printmonitor** is a utility for checking the printer status and managing print jobs.

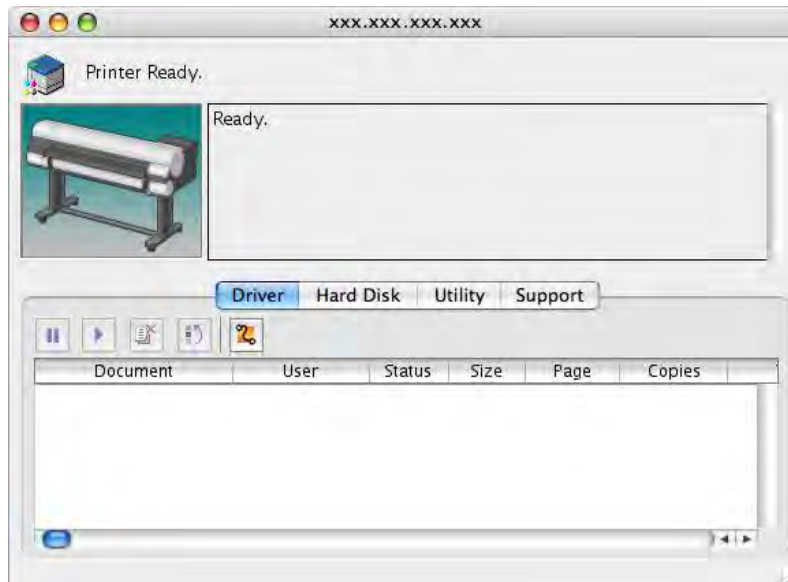

- Printer status can be checked in real time on a computer monitor.
- You can check the status of print jobs, cancel jobs, and manage them as needed.
- If a printer error occurs, you can investigate the corrective action immediately.
- You can also set up automatic email notification of any printer problems or errors to email addresses you designate in advance.



#### Note

- If the status of the desired printer is not shown in **imagePROGRAF Printmonitor**, select the printer again as follows.
  1. Make sure the printer is on and connected to the network or to a local port.
  2. In the **Printer** menu, select the name of the desired printer.  
After the printer is detected, the printer status is shown.
  3. If information about the printer is not shown in step 2, choose **Search Printer** in the **Printer** menu.
  4. Select the zone to search (or select **\*(My Zone)** if no zones have been set up) and click the **Search** button.  
Printer names listed in the **Printer** menu are updated with the printers that are now detected.
  5. In the **Printer** menu, select the name of the desired printer.  
After the printer is detected, the printer status is shown.



## Media Configuration Tool

The Features of Media Configuration Tool .....	539
Operating Environment .....	539
Procedures for Installing .....	540
Procedures for Uninstalling .....	542
Starting the Media Configuration Tool .....	546
Media Configuration Tool main window .....	547
Editing Media Type Information .....	548
Adding Media Types .....	549
Changing Media Names .....	551
Deleting Media Types You Have Added .....	553
Switching Media Types Display Show/Hide .....	555
Changing the Display Order of Media Types .....	557
Updating Media Types .....	559

## The Features of Media Configuration Tool

The Media Configuration Tool offers the following features.

- Enables information about additional media (types of paper) supported by the printer to be registered on the printer control panel and in the printer driver, through the use of relevant media information files (.amf and .med files).
- You can rearrange lists of the types of paper on the printer control panel and in printer driver dialog boxes and rename them, in addition to other functions.



### Important

- The Media Configuration Tool is normally installed when you install the printer driver from the User Software CD-ROM, and media information is configured. The tool can be used later to add or edit media information as desired.

## Drivers Applicable with Media Configuration Tool

- imagePROGRAF Printer Driver

## Operating Environment

You can use Media Configuration Tool in the following environments.

- Compatible Operating System  
Mac OS X (10.2.8 or later)
- Software that requires installation  
imagePROGRAF Printer Driver

## Procedures for Installing

Start the installer in the new version of Media Configuration Tool, and follow procedures below to install the Media Configuration Tool.



### Important

- The Media Configuration Tool is normally installed when you install the printer driver from the User Software CD-ROM, and media information is registered at this time.

1. Double click the **MCT Installer iPFxxxx for X** icon to start the Media Configuration Tool installer.



iPFxxxx MCT Installer X



### Note


- The **iPFxxxx** in the icon will be the printer name in use.

2. Input the administrator name and password, and click the **OK** button.

5




3. The next screen presents selections for the country or area where the printer is used. Select a country or territory then click the **OK** button.

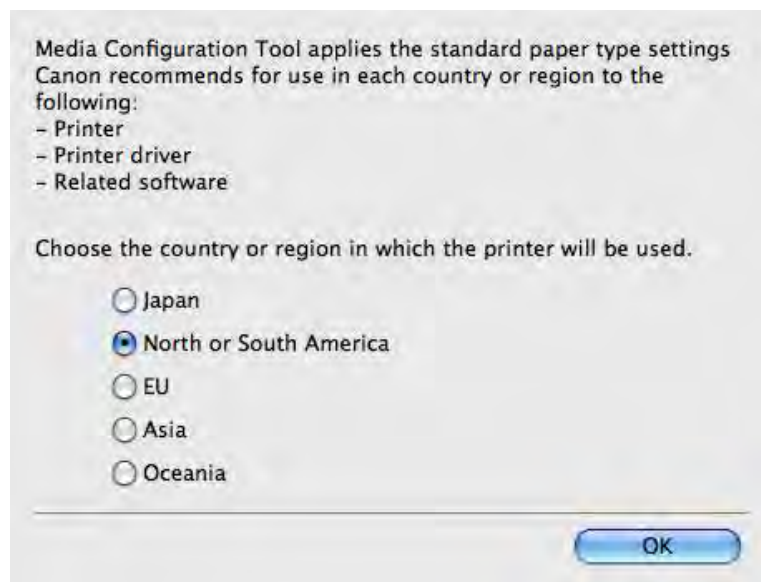

540

4. The **License** is displayed.  
After you have read Canon Software License Agreement, click the **Continue** button.

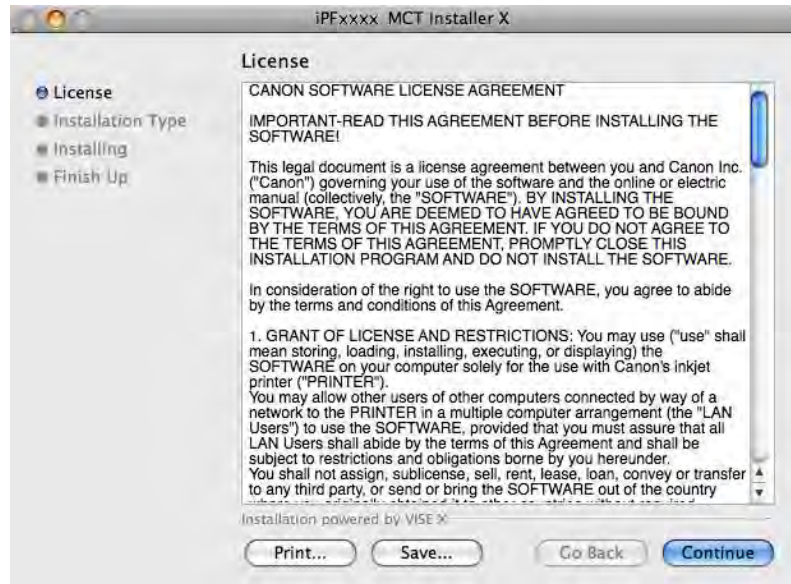


5

5. Click the **Agree** button.




6. Select **Easy Install** then click the **Install** button.

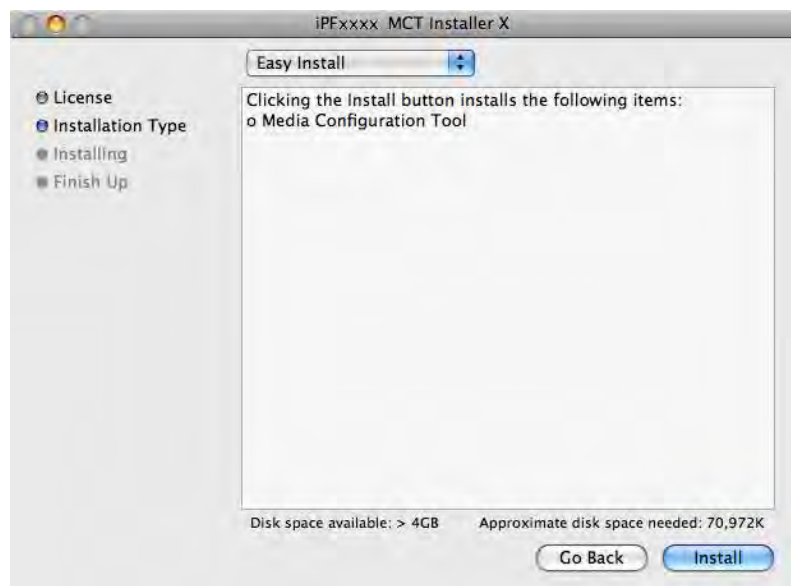

541

7. Click the **Continue** button to quit another application.

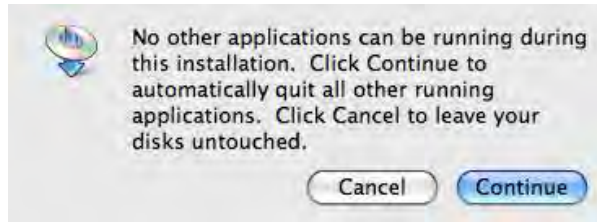

8. When the following message is displayed, click the **Quit** button.



The installation of Media Configuration Tool is complete.



**Note**

- When the installation is completed properly, the **Media Configuration Tool** folder is saved in the following folder.  
**Applications > Canon Utilities > iPFxxxx Media Configuration Tool**
- The **iPFxxxx** in the folder above will be the printer name in use.

## Procedures for Uninstalling

1. Double click the **MCT Installer iPFxxxx for X** icon to start the Media Configuration Tool installer.




**Note**

- The **iPFxxxx** in the icon will be the printer name in use.


2. Input the administrator name and password, and click the **OK** button.



3. The next screen presents selections for the country or area where the printer is used. Select a country or territory then click the **OK** button.

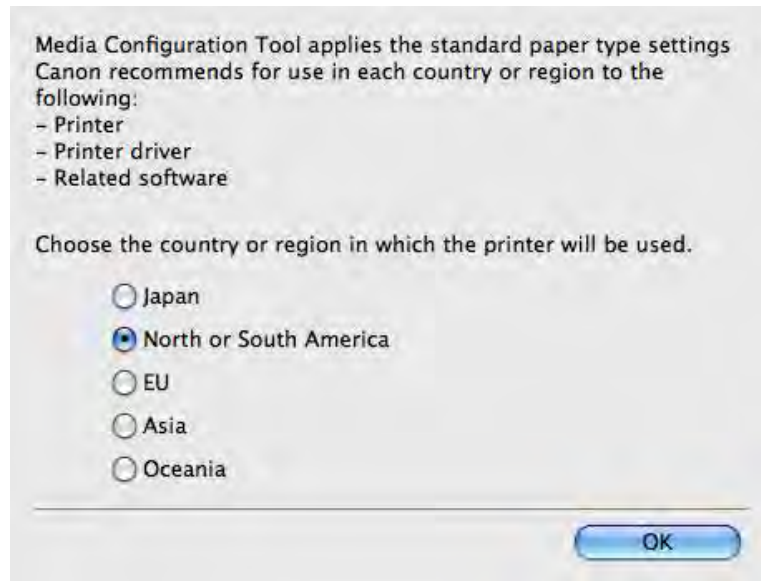


4. The **License** is displayed.  
After you have read Canon Software License Agreement, click the **Continue** button.

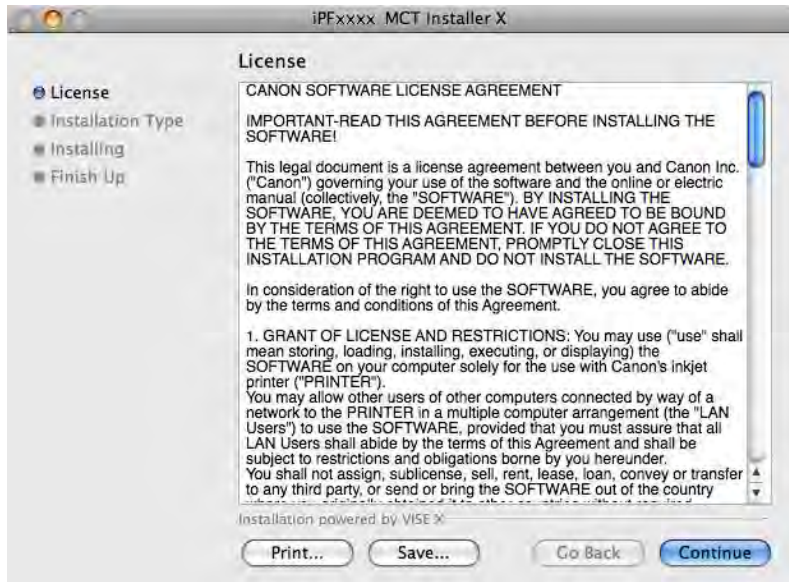

5. Click the **Agree** button.



6. Select **Uninstall**.

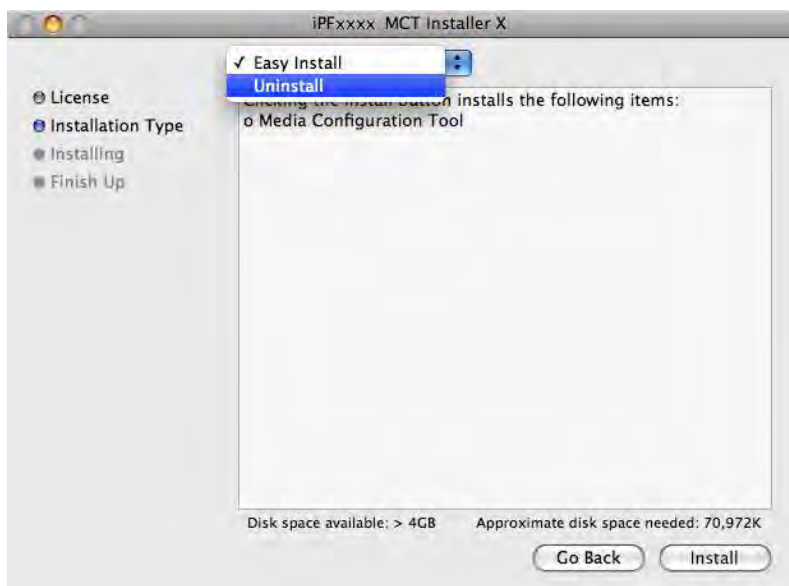


5

544




7. Click the **Uninstall** button.

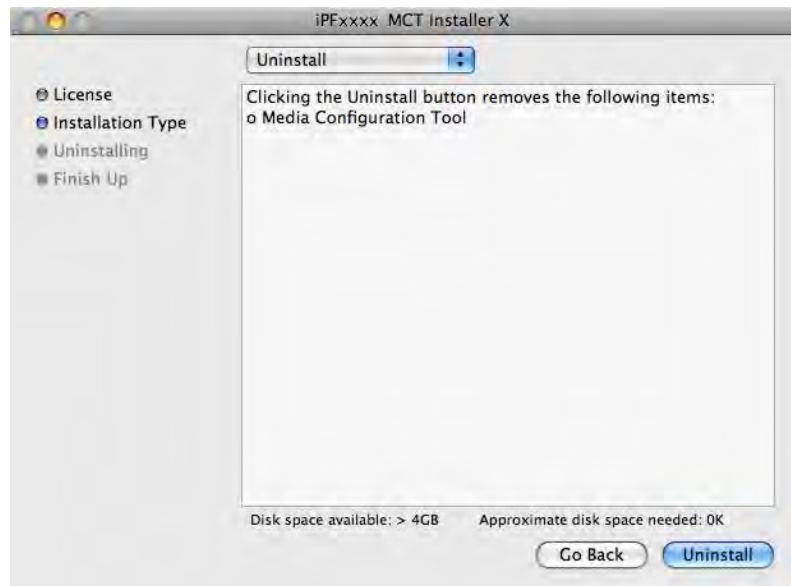

8. Press the **Continue** button when another application is running.



9. When the following message is displayed, click the **Quit** button.

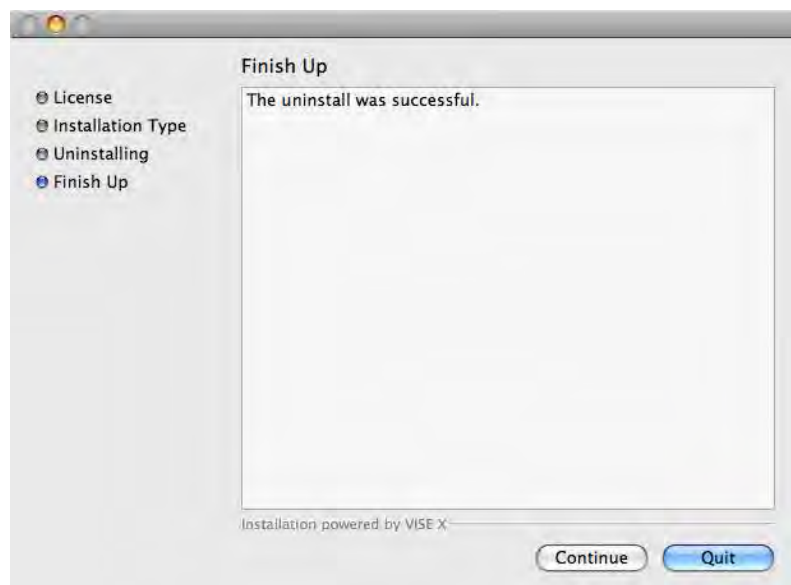


Media Configuration Tool has been uninstalled.

## Starting the Media Configuration Tool

Follow the procedure below to start the Media Configuration Tool.

From the **Applications** menu > **Canon Utilities** > **iPFxxxx Media Configuration Tool** > **MCTxxxx.app**.  
Media Configuration Tool main window is displayed.

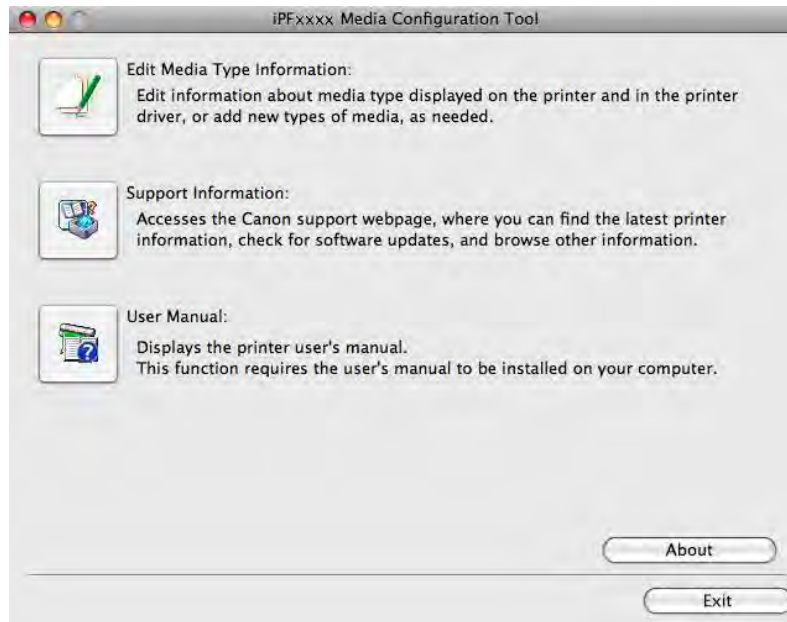


5




### Note

- If a compatible printer driver is not installed, the Media Configuration Tool will not start. If you attempt to start the Media Configuration Tool when a printer driver is not installed, the warning message below is displayed.

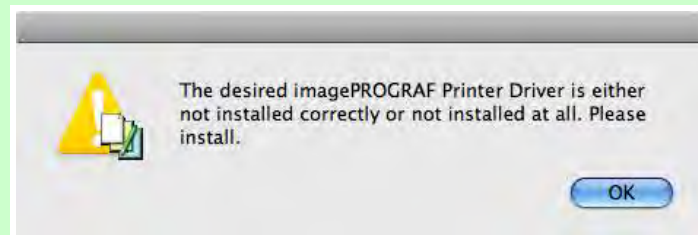

## Media Configuration Tool main window

The explanation below is on the Media Configuration Tool main window.

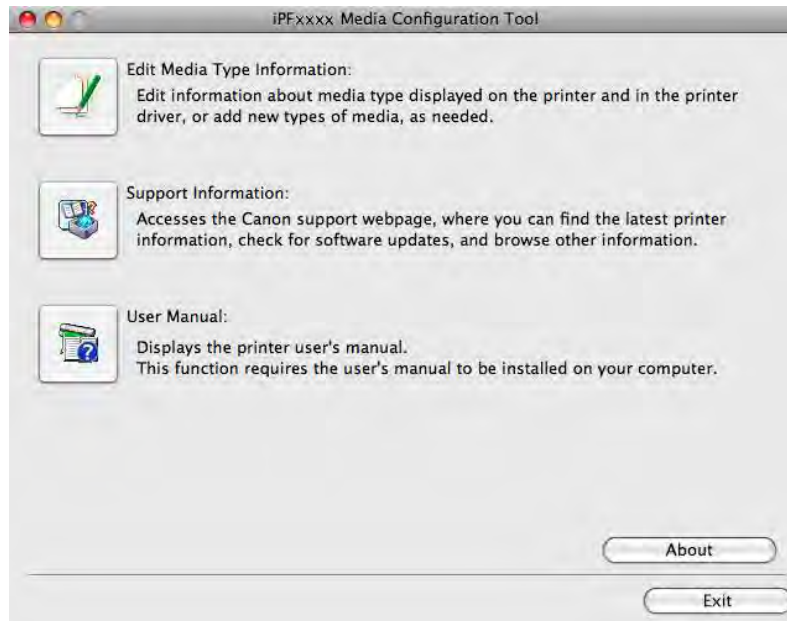

### Note

- For the step to open the Media Configuration Tool main window, see "Starting the Media Configuration Tool." →P.546

## Edit Media Type Information Button

Click the button to open the **Edit Media Types** dialog box and you can edit the media types.

For more information about **Edit Media Type Information**, see "Editing Media Type Information." →P.548

## Support Information Button

Click this button to access the Canon support webpage, where you can find the latest printer information, check for software updates, and browse other information.

## User Manual Button

Click this button to display the printer user manual. This function requires that the user manual be installed on your computer.

## Editing Media Type Information

Click the **Edit Media Type Information** button in the Media Configuration Tool main window to display the **Edit Media Types** dialog box.



This dialog box presents functions for the following tasks.

- Adding Media Types →P.549
- Changing Media Names →P.551
- Deleting Media Types You Have Added →P.553
- Switching Media Types Display Show/Hide →P.555
- Changing the Display Order of Media Types →P.557




### Note


- It may not be possible to deleting, showing/hiding, and changing the display order under some conditions.

## Adding Media Types


1. Open the **Edit Media Types** dialog box, and then click the **Add** button.

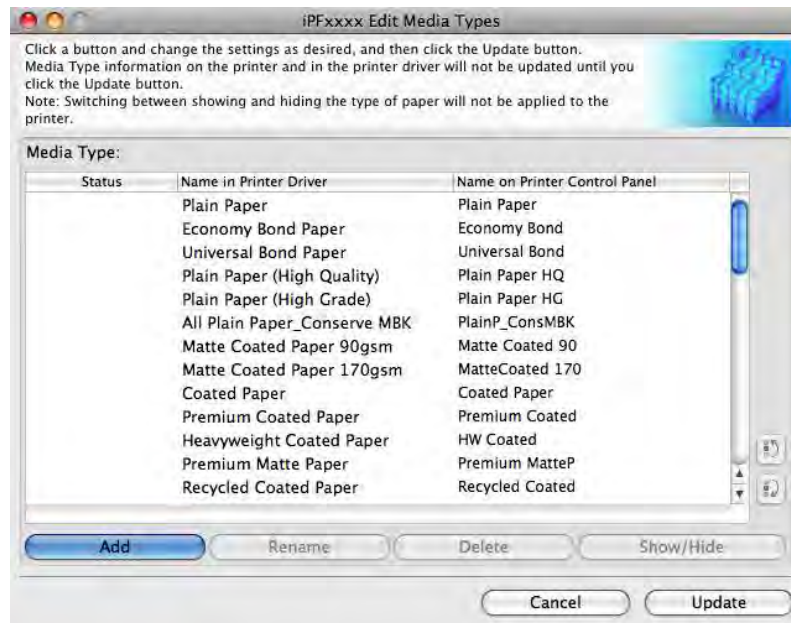


2. The **Add Media Type** dialog box displays. Click the **Browse** button.

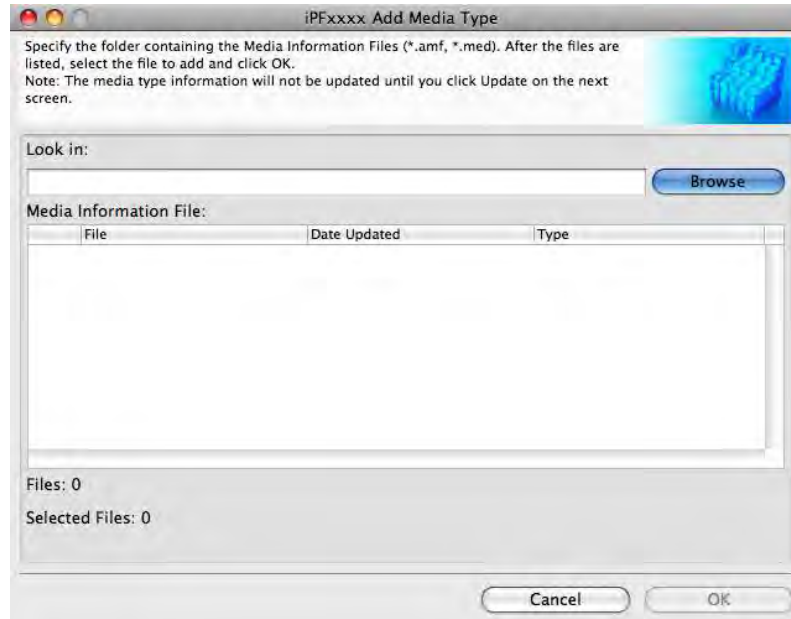

3. Select the folder that contains the media information files (.amf and .med files), and then click the **Open** button.

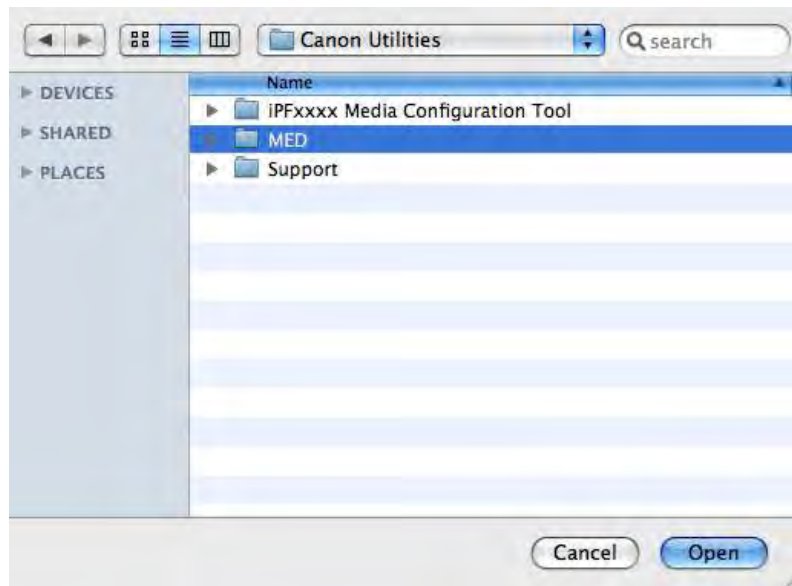

4. The names of media information files in the folder you selected in the **Open** dialog box are displayed under **Media Information File** in the **Add Media Type** dialog box. Select the check boxes of paper to add and click the **OK** button.

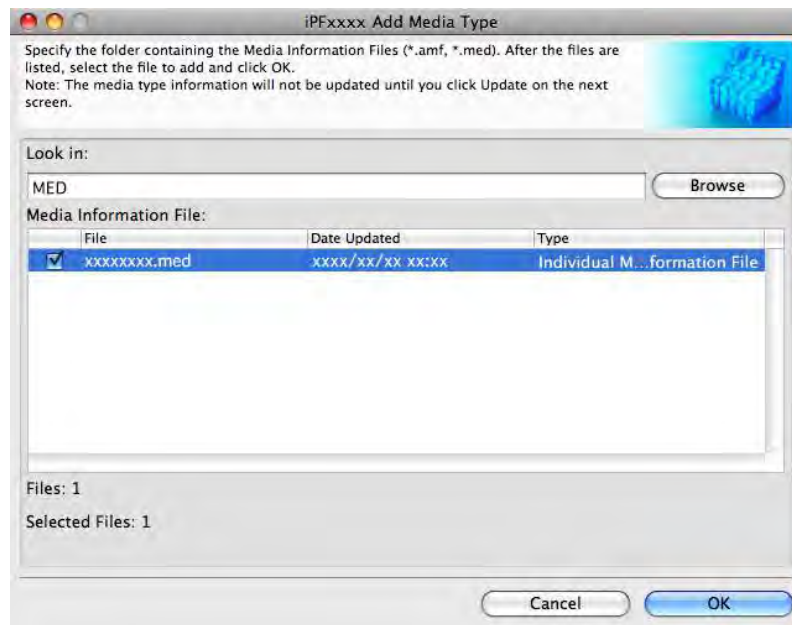


5. Click **OK** when the confirmation message is displayed.

5

550



6. In the **Edit Media Types** dialog box, click the **Update** button.

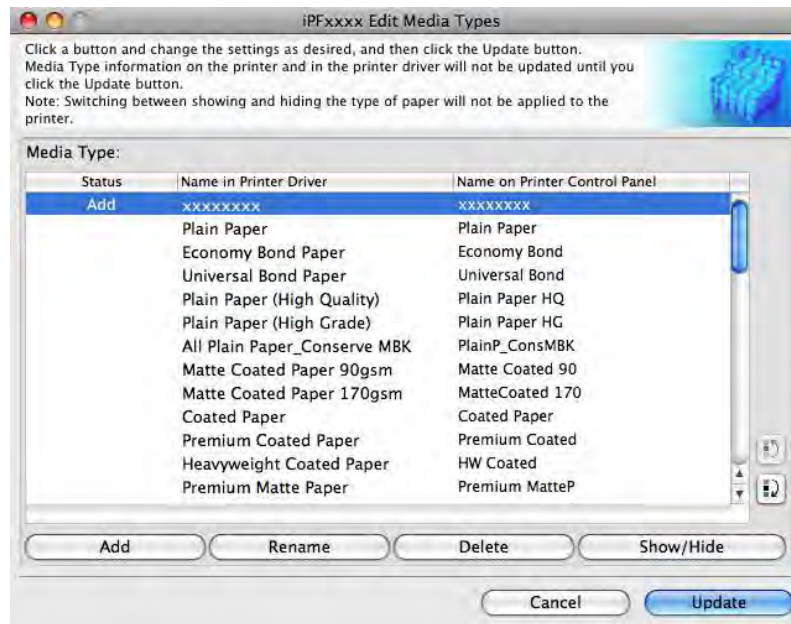

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.559




#### Important


- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.

## Changing Media Names


1. Open the **Edit Media Types** dialog box.

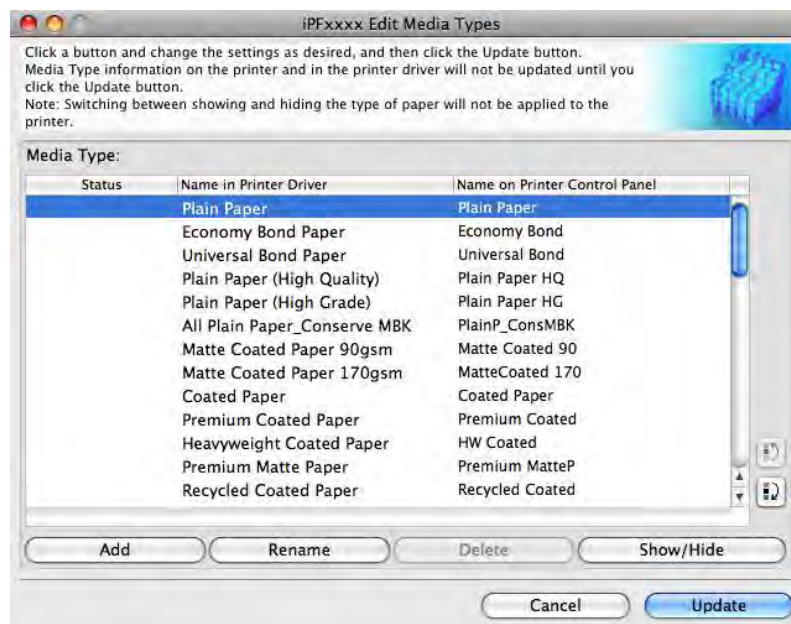

- In the **Media Type** list, select the name to change.  
Click the **Rename** button.

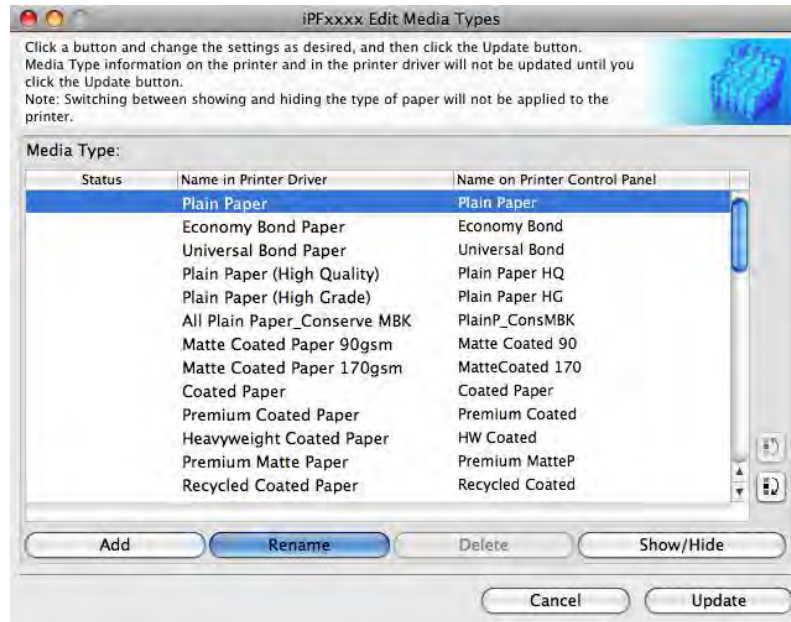


- The **Rename Media** dialog box is displayed.  
Edit the names in **Name in Printer Driver** and **Name on Control Panel** and click the **OK** button.

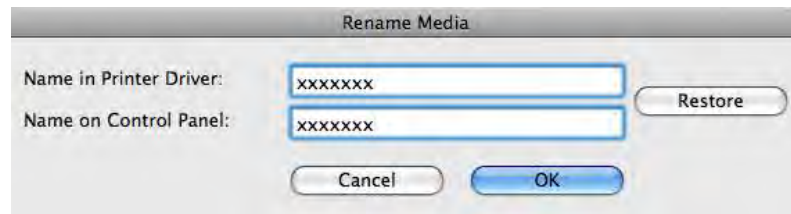

**Note**

- To restore the original names, click the **Restore** button.

4. In the **Edit Media Types** dialog box, click the **Update** button.

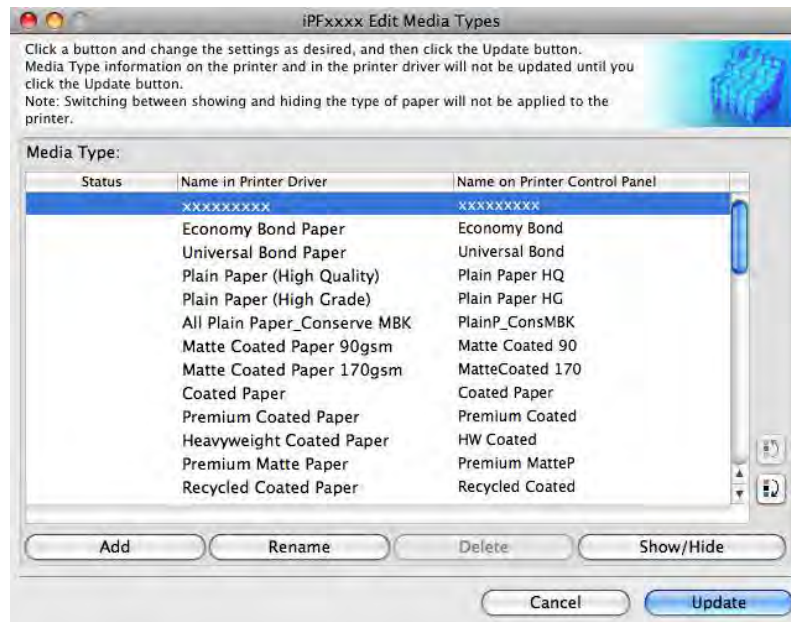

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.559



#### Important

- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.

## Deleting Media Types You Have Added

1. Open the **Edit Media Types** dialog box.




2. In the **Media Type** list, select the name of the media to delete.  
Click the **Delete** button.



**Note**

- Only paper for which **Status** in the **Media Type** is **Add** can be deleted.

3. In the **Edit Media Types** dialog box, click the **Update** button.

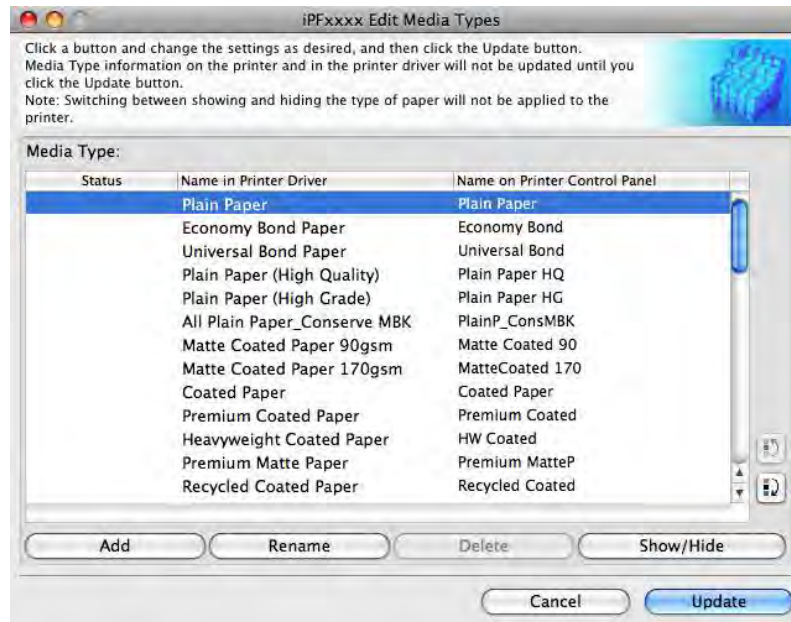



The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.559




#### Important


- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.

## Switching Media Types Display Show/Hide

1. Open the **Edit Media Types** dialog box.

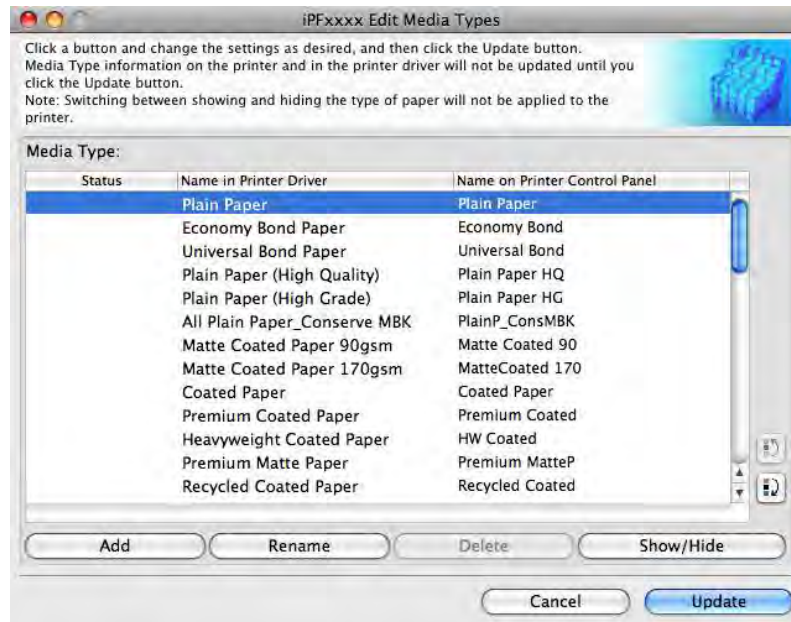


2. In the **Media Type** list, select the name of the media to switch off or on for display. Click the **Show/Hide** button. The selected paper is alternately shown or hidden.

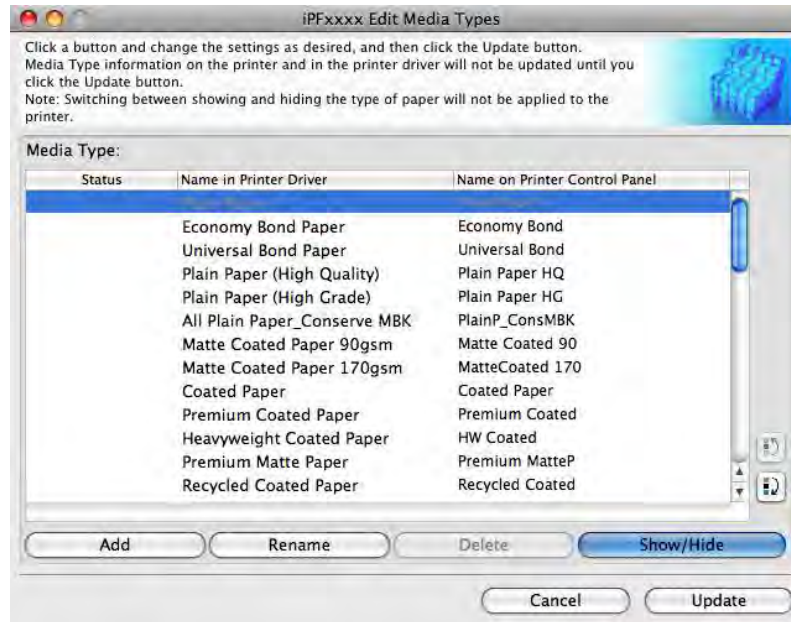

**Note**

- The names of media switched for non-display appear grayed out in the **Media Type** list.

3. In the **Edit Media Types** dialog box, click the **Update** button.

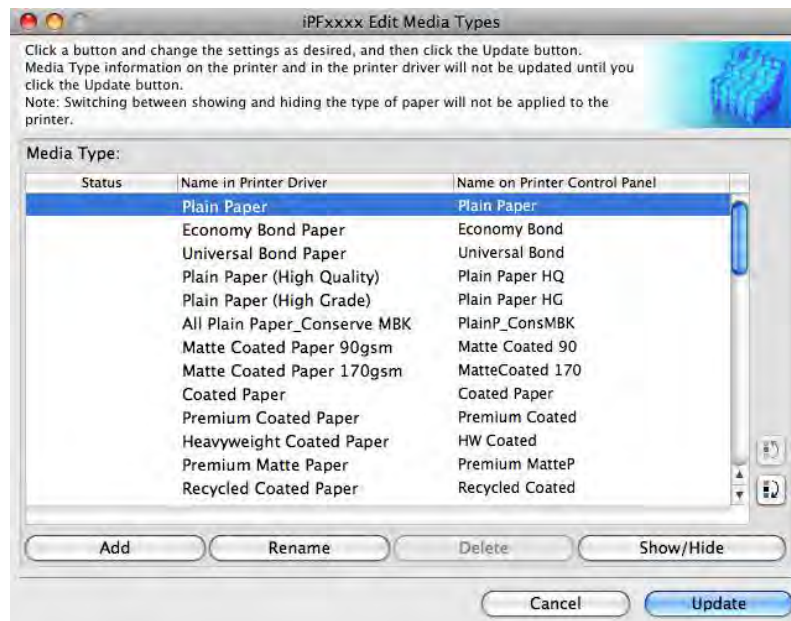



The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." →P.559






### Important


- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver. Switching between showing and hiding the type of paper will not be applied to the printer.

## Changing the Display Order of Media Types

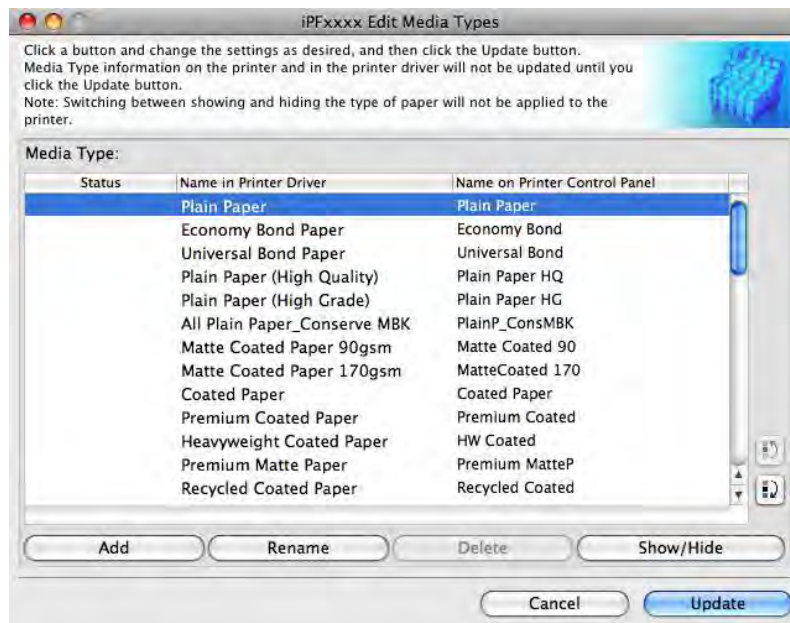
1. Open the **Edit Media Types** dialog box.



2. Select the paper in the **Media Type** list for which to change the display order, and then click the buttons to move the item (  or  ).  
The selected item moves one line up or down for every button click.

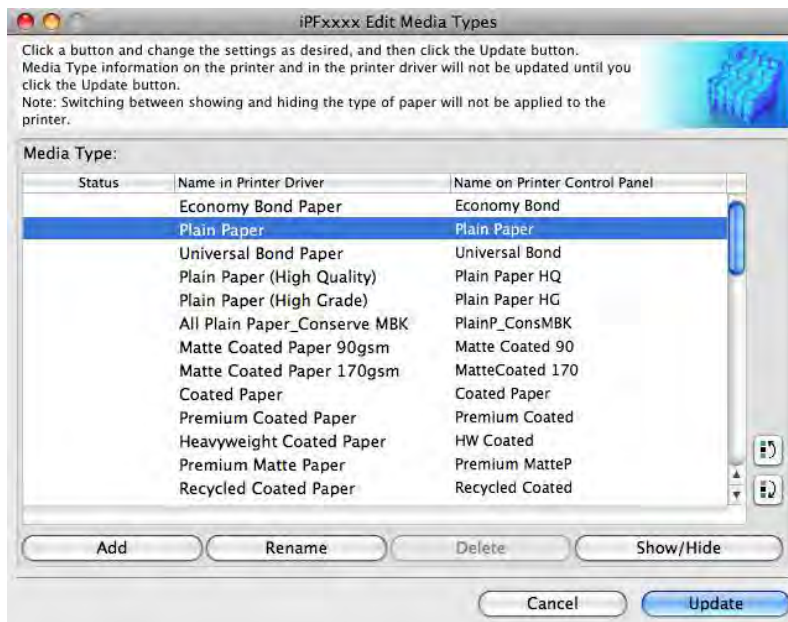

3. In the **Edit Media Types** dialog box, click the **Update** button.

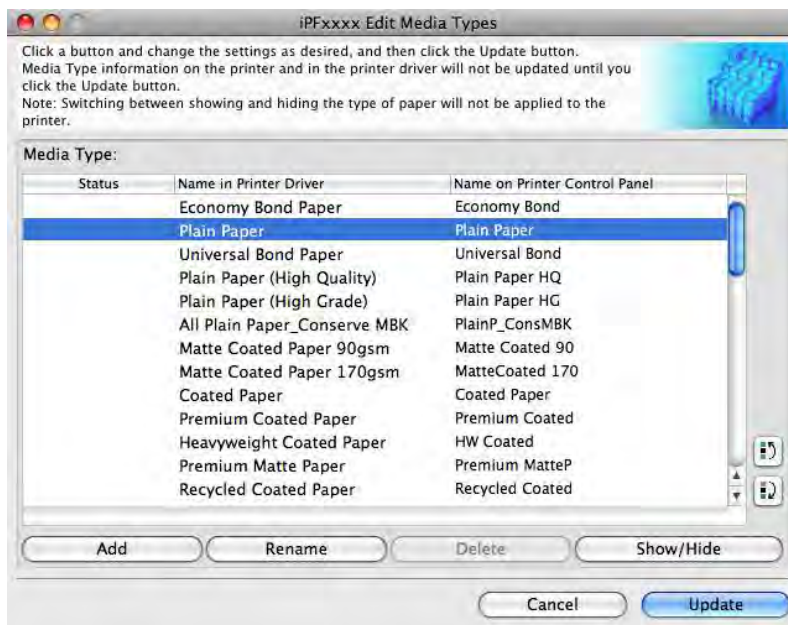

The **Update Media Types** wizard is started at this point. For details on the procedure to update paper information using the **Update Media Types** wizard, see "Updating Media Types." [→P.559](#)



**Important**

- Be sure to click the Update button. If you do not, your changes will not be applied to the printer and printer driver.

## Updating Media Types

Clicking the **Update** button on the **Edit Media Types** dialog box opens the **Update Media Types** wizard. You can use this wizard to apply new information about print media in the printer and in the printer driver.

The procedures for updating the media information with the **Update Media Types** wizard are as follows.




### Important

- The use of this procedure is based on the assumption that Media Configuration Tool is updated or you have a media information file for print media that is to be updated.

1. Confirm the printer, where media type information is to be updated, to be displayed in **Printer** in the **Update Media Types - Select Printer** dialog box, and then click the **Next** button.



2. Communication with the printer starts and the following dialog box is displayed.

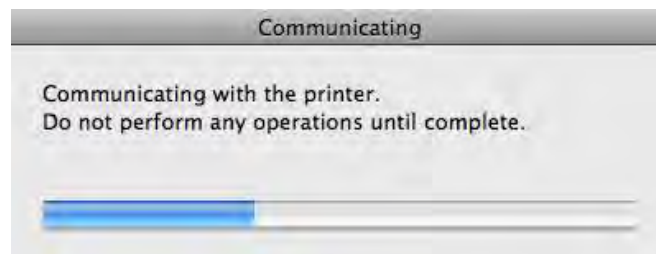


### Important

- Do not attempt to print or turn the printer off while the program is communicating with the printer.



**Caution**

- When the program cannot communicate with the printer, the following warning message is displayed.

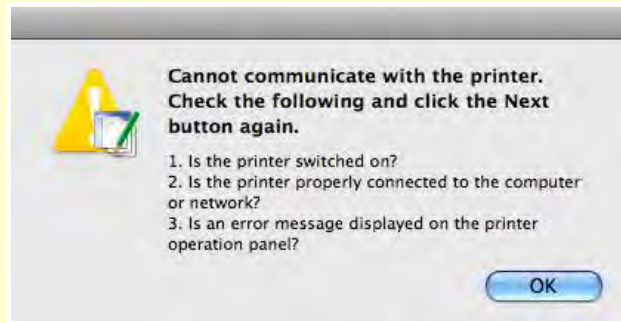

3. When the program has finished communicating with the printer, the screen moves to display **Update Media Types - Confirm Update**. Confirm the information received from the printer. To update click the **Execute** button.


5



**Important**

- When setting a data to the printer that differs from the data to be updated, the selected media information file is updated. When you would like to remain the data that is set to the printer, click the **Cancel** button.

4. Communication with the printer starts and the following dialog box is displayed.

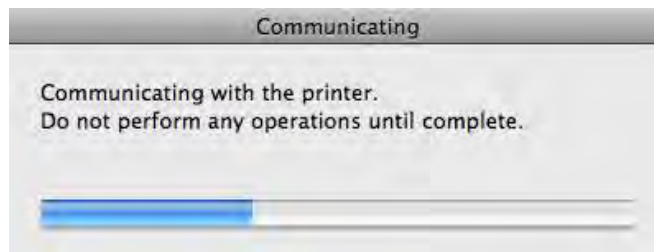

**Important**

- Do not attempt to print or turn the printer off while the program is communicating with the printer.

**Caution**

- When the program cannot communicate with the printer, the following warning message is displayed.



5. After the media information file is updated successfully, the screen switches to the **Update Media Types - Finish** dialog box. Click **Finish** to close the **Update Media Types** wizard.



## Print Jobs


Basic Print Job Operations

563

Advanced Print Job Operations

589

6

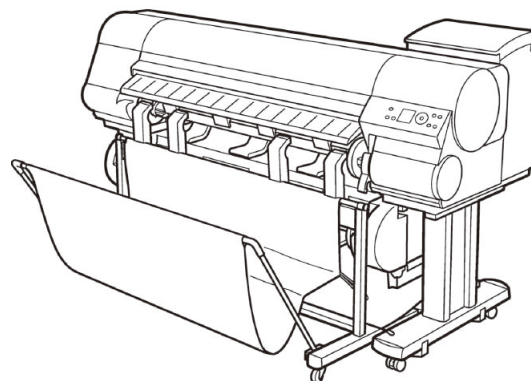

562




## Basic Print Job Operations

Saved Print Jobs .....	563
Saving Print Jobs .....	565
Managing Queued Jobs (Deleting or Preempting Other Jobs) .....	568
Printing Saved Jobs .....	572
Deleting Saved Jobs .....	577
Moving Saved Jobs .....	582

### Saved Print Jobs

Saving print jobs refers to the process of sending print jobs from a computer and storing them on the printer's hard disk. By saving print jobs, you can print them repeatedly as needed without sending them from a computer again.

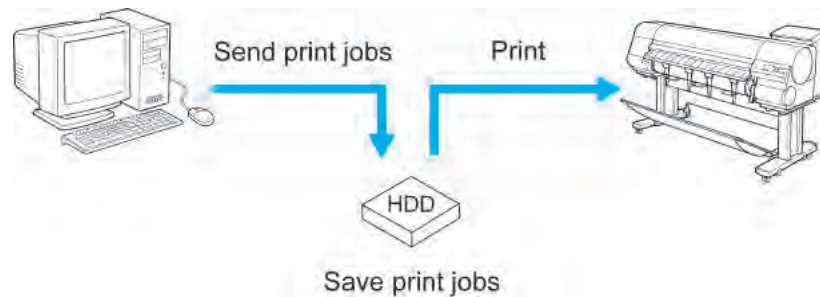


Saving print jobs offers the following benefits.

- Save the time spent using a computer  
When you send a print job to the printer, you can either print it and save it on the printer at the same time or simply save it on the printer without printing it yet. Saved print jobs can be printed in the required quantity later without the need to use a computer again.
- Simplify reprinting, if any errors occur  
If errors occur in the middle of printing (as when paper runs out), you can resume printing after clearing the error without resending the print job from a computer.
- Streamline printing work  
Without using a computer, you can select print jobs and print in the desired quantity. You can also select multiple print jobs to print during the same period. This enables unattended operation at night, for example.

### Output Method

To save print jobs on the printer's hard disk, choose **Output Method** (in Windows) or **Send job to** (in Mac OS X). In **Output Method** (in Windows) or **Send job to** (in Mac OS X), choose from three options: **Print**, **Print (auto delete)**, and **Save in mail box**. You can also choose **Save data before printing**, as desired.

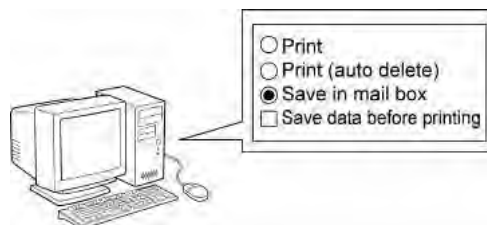

- **Print**  
Save print jobs automatically at the same time they are printed. (This is the default format.)


- **Print (auto delete)**  
Save print jobs temporarily at the same time they are printed and delete them after printing.
- **Save in mail box**  
Save print jobs on the printer.
- **Save data before printing**  
This option is available in combination with **Print**, **Print (auto delete)**, and **Save in mail box**. Print jobs are saved on the hard disk and then printed.

**Note**

- The option in **Output Method** (in Windows) or **Send job to** (in Mac OS X) cannot be specified during HP-GL/2 printing. The option in **Output Method** (in Windows) or **Send job to** (in Mac OS X) is **Print**.

## Storage destination

The storage area on the printer's hard disk is divided into a temporary storage area and a permanent storage area. Print jobs in the job queue or Common Box are saved in the temporary storage area. Jobs in Personal Boxes are saved in the permanent storage area.

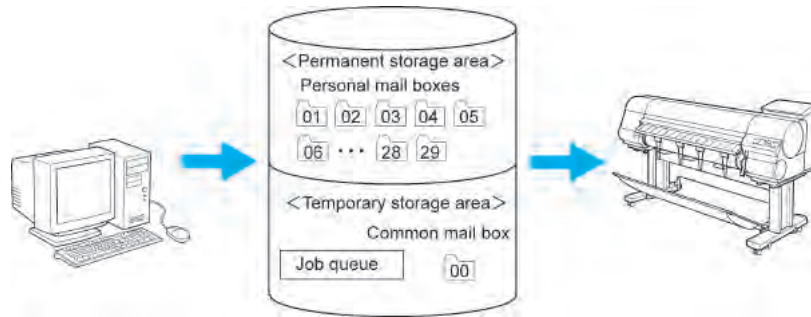

### • Job queue

Print jobs in progress(\*1) are temporarily saved in the job queue, a storage space where jobs are saved in the order they will be printed.

The queue holds up to ten jobs. Subsequent jobs await the processing to add them to the queue.

\*1: Jobs that are being saved, received, prepared for processing, processed, or printed, or jobs that have been interrupted or are being deleted

### • Common Box

Jobs sent from a computer for which you have selected **Print** in **Output Method** (in Windows) or **Send job to** (in Mac OS X) are saved in the common box.

There is one Common Box, numbered **00**. A password cannot be set for the Common Box.

Up to 100 print jobs can be saved here, but they will be deleted one after another starting with the oldest job in the following situations.

- If there are more than 100 jobs in the Common Box and job queue combined
- If no more temporary storage space is available when jobs for which you have selected **Print** or **Print (auto delete)** in **Output Method** (in Windows) or **Send job to** (in Mac OS X) are received
- If there is not enough space in the temporary or permanent storage area when jobs for which you have selected **Save in mail box** in **Output Method** (in Windows) or **Send job to** (in Mac OS X) are received

### • Personal Boxes


You can store jobs in Personal Boxes in either of the following ways.

- By moving a job stored in the Common Box into a Personal Box
- By selecting **Save in mail box** as the option in **Output Method** (in Windows) or **Send job to** (in Mac OS X)

There are 29 Personal Boxes, numbered **01** to **29**. You can specify a name and password for each Personal Box. Up to 100 print jobs can be saved in all Personal Boxes combined.

## Saving Print Jobs

You can save print jobs on the printer's hard disk.

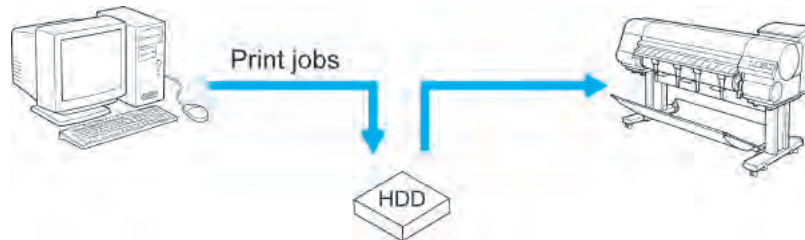


Save print jobs on the printer's hard disk as follows.


- Using the printer driver (Windows) →P.566
- Using HDI Driver →P.354 (Windows)  
See "Output Method Setting."
- Using Free Layout →P.256 (Windows)  
See the section on the **Output Method** dialog box.
- Using Color imageRUNNER Enlargement Copy →P.286 (Windows)  
See the section on the **Output Method** button on the **Output Settings** sheet.
- Using **imagePROGRAF Preview** (Windows)  
Printer driver settings will be used for the format of saved print jobs. (See "Using the printer driver (Windows).")  
→P.566
- Using the printer driver (Mac OS) →P.567
- Using Free Layout (Mac OS)  
Printer driver settings will be used for the format of saved print jobs. (See "Using the printer driver (Mac OS).")  
→P.567
- Using Color imageRUNNER Enlargement Copy →P.513 (Mac OS)  
See the section on the **Output Method** button in the **Output Settings** pane.
- Using **imagePROGRAF Preview** (Mac OS)  
Printer driver settings will be used for the format of saved print jobs. (See "Using the printer driver (Mac OS).")  
→P.567  
However, the document name will be imagePROGRAF.

## Using the printer driver (Windows)

1. Access the **Page Setup** sheet.

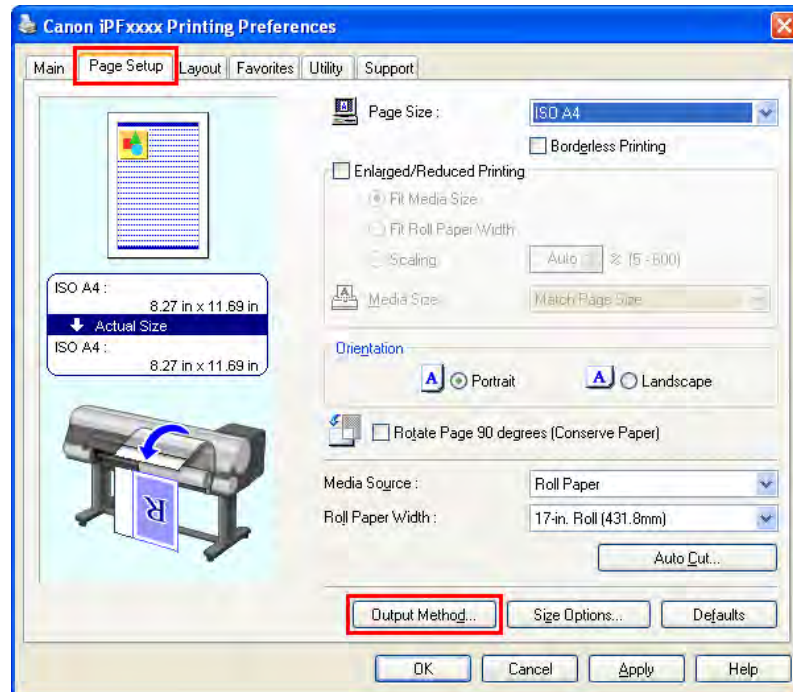

2. Click **Output Method** to display the **Output Method** dialog box.

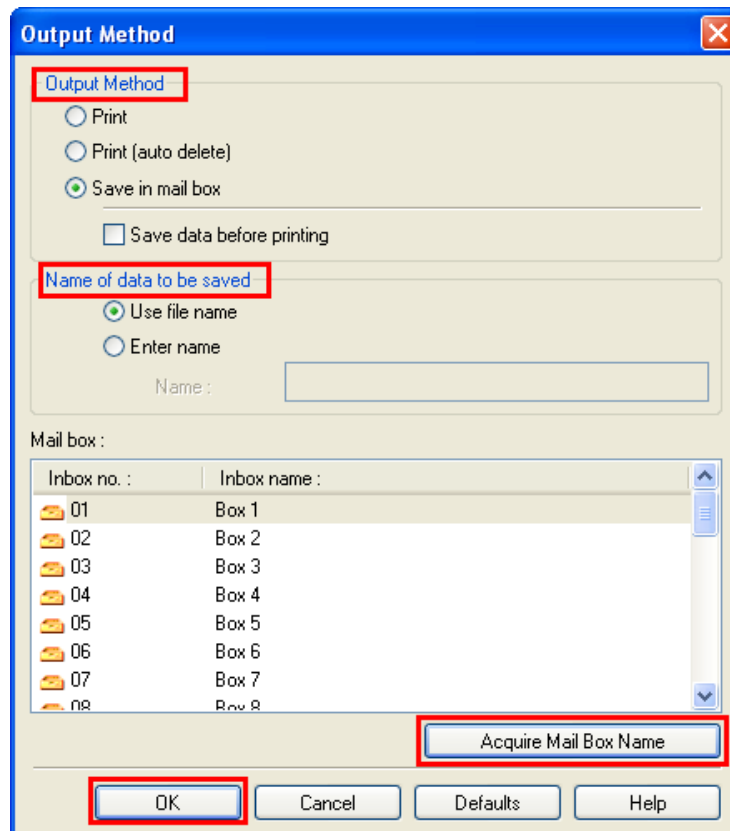

### 3. Choose an **Output Method**.

- **Print**  
Save print jobs automatically at the same time they are printed. (This is the default format.)
- **Print (auto delete)**  
Save print jobs temporarily at the same time they are printed and delete them after printing.
- **Save in mail box**  
Save print jobs on the printer.  
If you choose **Save in mail box**, also specify the destination personal box in the **Mail box** list.



#### Note

- Click **Acquire Mail Box Name** to display personal box names in the **Mail box** list, as acquired from the printer.
- **Save data before printing**  
This option is available in combination with **Print**, **Print (auto delete)**, and **Save in mail box**. Print jobs are saved on the hard disk and then printed.

### 4. In **Name of data to be saved**, specify how to name saved print jobs.

- To use the file name, choose **Use file name**.
- Otherwise choose **Enter name** and enter a name in **Name**.

### 5. Click **OK** to close the **Output Method** dialog box.

## Using the printer driver (Mac OS)


### 1. Access the **Additional Settings** pane.



## 2. Choose an **Send job to**.

- **Print**  
Save print jobs automatically at the same time they are printed.
- **Print (auto delete)**  
Save print jobs temporarily at the same time they are printed and delete them after printing.
- **Save in mail box**  
Save print jobs on the printer.

The **Destination** dialog box is displayed if you select **Save in mail box**. Here, specify the name and personal box number for saved print jobs.

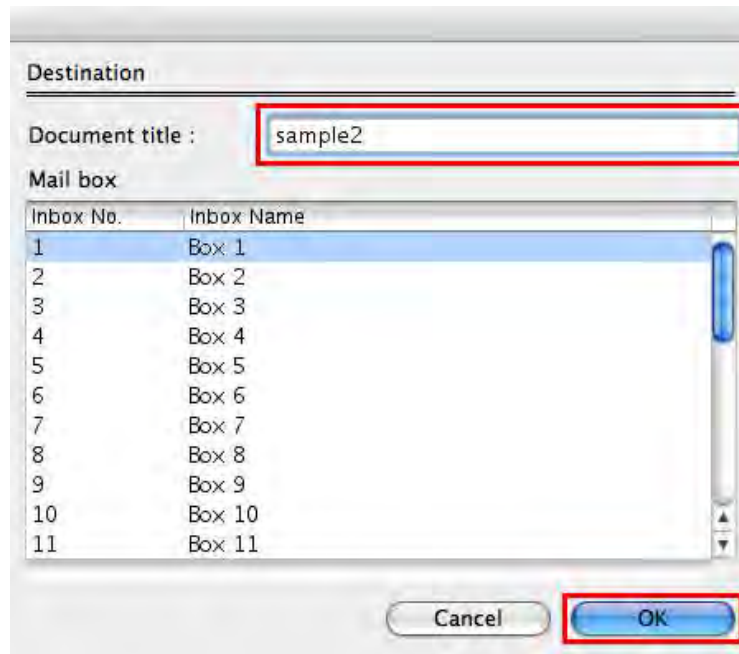

1. In **Document title**, enter a name to identify saved print jobs.
2. Select the personal box number in the **Mail box** list.
3. Click **OK** to close the **Destination** dialog box.



### Note

- **Save data before printing**

This option is available in combination with **Print**, **Print (auto delete)**, and **Save in mail box**. Print jobs are saved on the hard disk and then printed.


## Managing Queued Jobs (Deleting or Preempting Other Jobs)

Print jobs can be deleted or their printing order changed to print them immediately, depending on their status. You can determine the status of print jobs in Windows by checking the Control Panel, RemoteUI, or imagePROGRAF Status Monitor and on a Macintosh computer by checking imagePROGRAF Printmonitor.


- Deleting queued print jobs



You cannot manually delete jobs that are already in the process of being deleted.

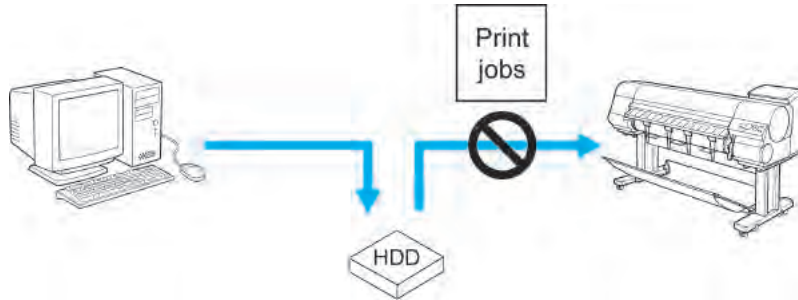

- **Preempting other jobs**  
Print jobs that are being received or prepared for printing can be selected for preemptive printing.

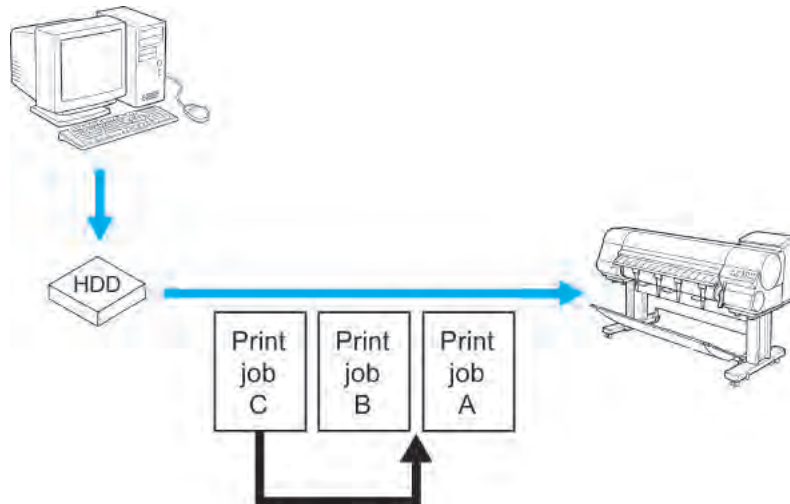

6

You can manage queued print jobs as follows.

- Using the Control Panel →P.569
- Using RemoteUI →P.570
- Using imagePROGRAF Status Monitor (Windows) →P.570
- Using imagePROGRAF Printmonitor (Macintosh) →P.571

### Using the Control Panel

1. Press the **Menu** button to display **Menu Durng Prtng**.



569

2. You can manage queued jobs as follows.

• Deleting queued jobs

1. Press ▲ or ▼ to select **Job Mgmt Menu**, and then press the **OK** button.
2. Press ▲ or ▼ to select **Print Job**, and then press the ► button.
3. Press ▲ or ▼ to select the print job to delete, and then press the ► button.
4. Press ▲ or ▼ to select **Delete**, and then press the **OK** button.


• Changing the order of printing

1. Press ▲ or ▼ to select **Job Mgmt Menu**, and then press the **OK** button.
2. Press ▲ or ▼ to select **Print Job**, and then press the ► button.
3. Press ▲ or ▼ to select the job to print first, and then press the ► button.
4. Press ▲ or ▼ to select **Preempt Jobs**, and then press the **OK** button.

Using RemoteUI

On the **Print Job** page, select the job to manage and how to manage it. For details, refer to the RemoteUI help.

6

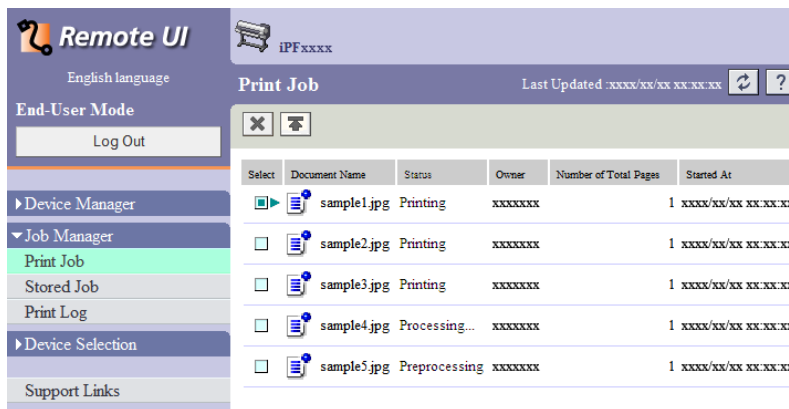


Using imagePROGRAF Status Monitor (Windows)

On the **Job** sheet, select the job and the desired function. The following functions are available.

- Preempting other jobs
- Pausing printing
- Resuming printing
- Canceling print jobs

570

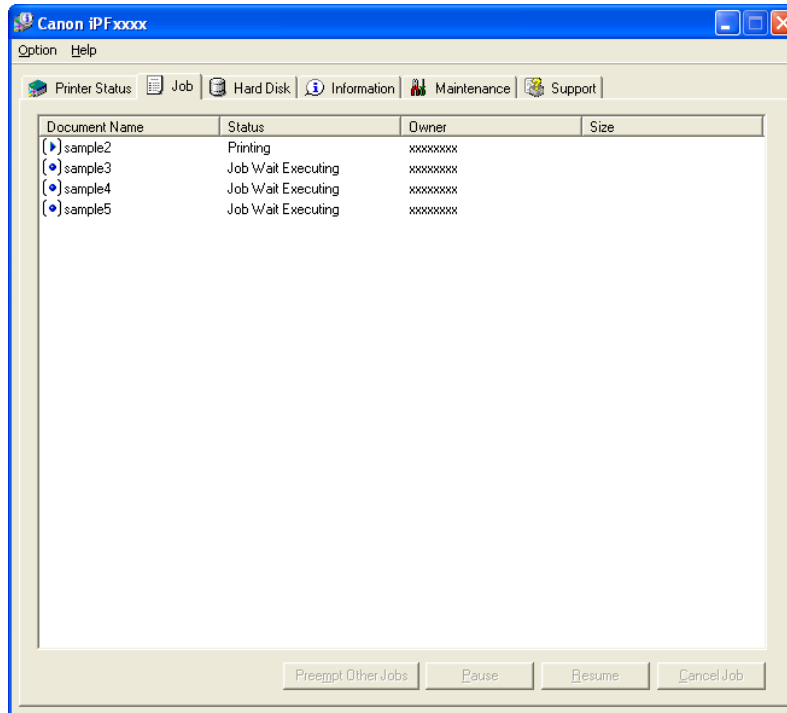


For details, refer to the imagePROGRAF Status Monitor help file.

6

### Using imagePROGRAF Printmonitor (Macintosh)

On the **Driver** pane, select the job and the desired function. The following functions are available.

- Preempting other jobs
- Pausing printing
- Resuming printing
- Canceling print jobs

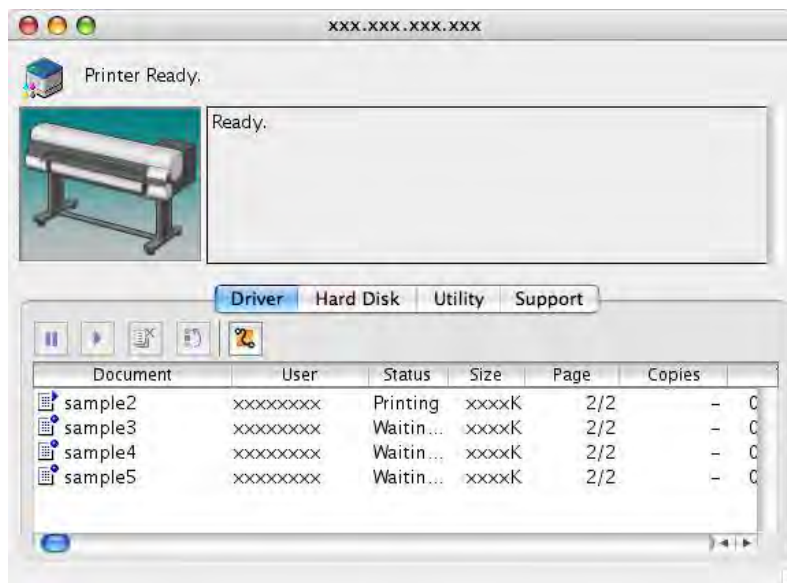


571

For details, refer to the imagePROGRAF Printmonitor help file.

## Printing Saved Jobs

You can print jobs stored on the printer's hard disk as follows.

- Using the Control Panel
- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)

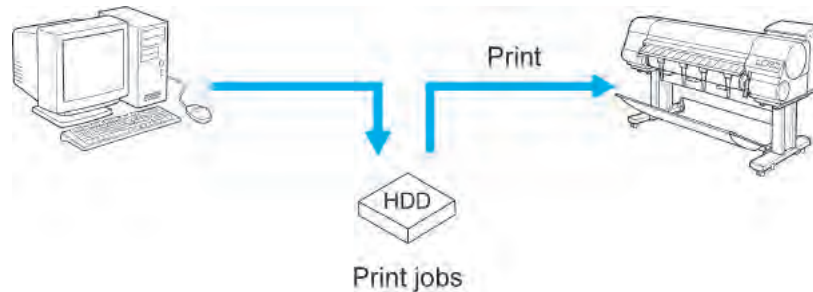

### Using the Control Panel

1. Press the **Menu** button to display **MAIN MENU**.




2. Print the saved job.

1. Press ▲ or ▼ to select **Job Management**, and then press the ► button.
2. Press ▲ or ▼ to select **Stored Job**, and then press the ► button.
3. Press ▲ or ▼ to select the box number (in the range 00–29), and then press the ► button.
4. Enter a password if one has been set, and then press the **OK** button.
5. Press ▲ or ▼ to select **Job List**, and then press the ► button.
6. Press ▲ or ▼ to select the saved job to print, and then press the ► button.
7. Press ▲ or ▼ to select **Print**, and then press the ► button.
8. Specify the number of copies and press the **OK** button.


## Using RemoteUI

1. On the **Stored Job** page, choose the mail box.

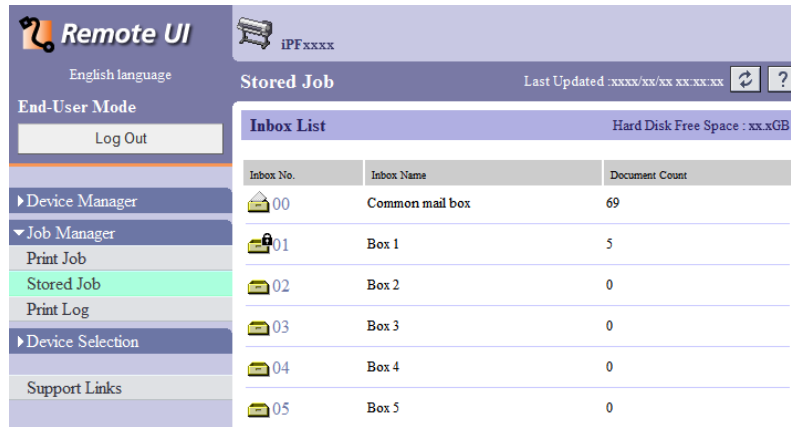


**Note**


- Enter a password if one has been set.

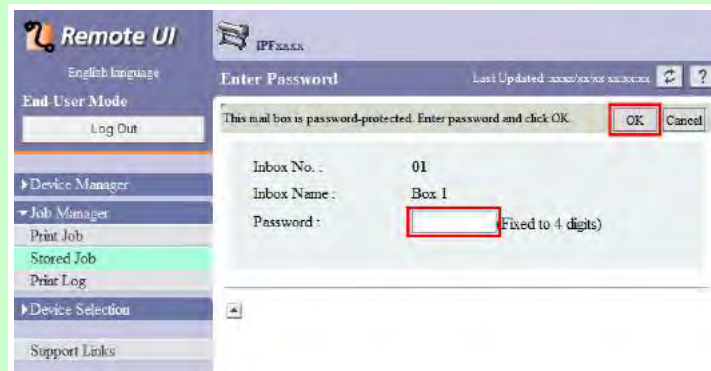

2. Select the print job in the list and click **Print**.

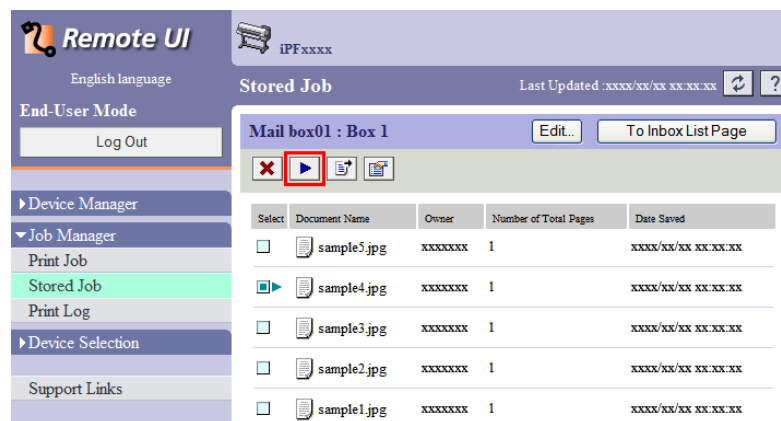


3. On the **Print Saved Document** page, enter the quantity to print in **Copies** and click **OK**.

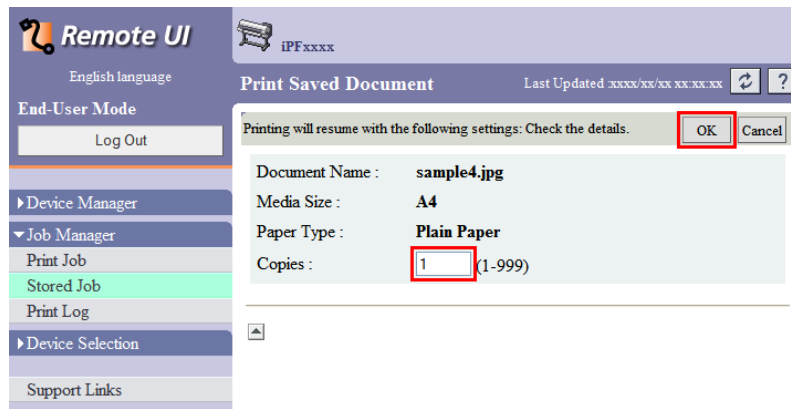

For details, refer to the RemoteUI help.

## Using imagePROGRAF Status Monitor


1. On the **Hard Disk** sheet, select a mail box in the list and click **Open**.

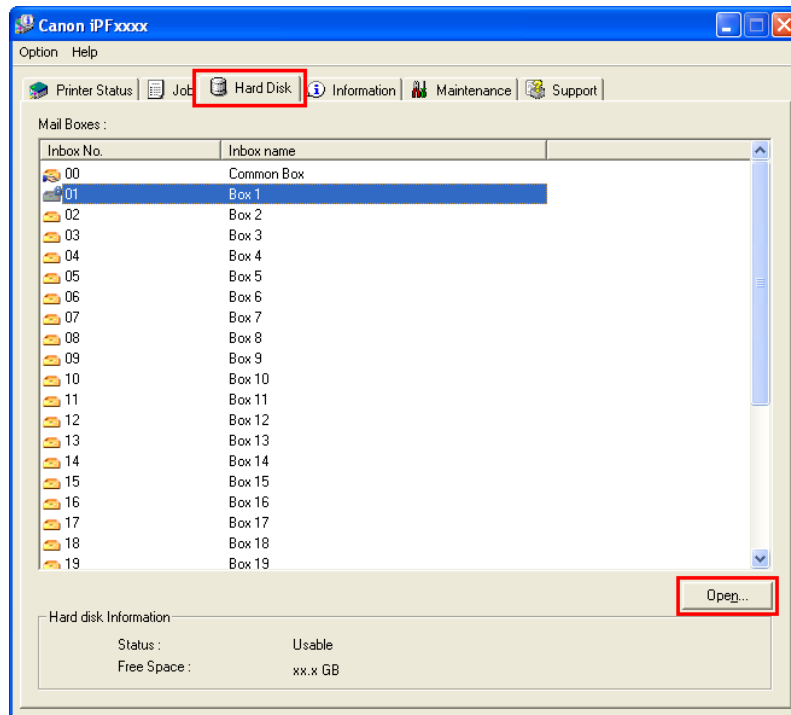




**Note**


- Enter a password if one has been set.

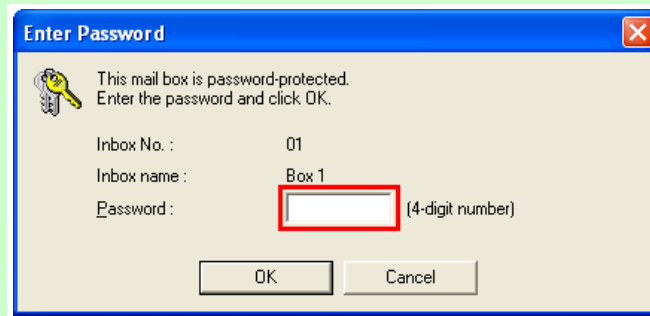

2. In the **Documents** dialog box, select the print job in the list and click **Print**.

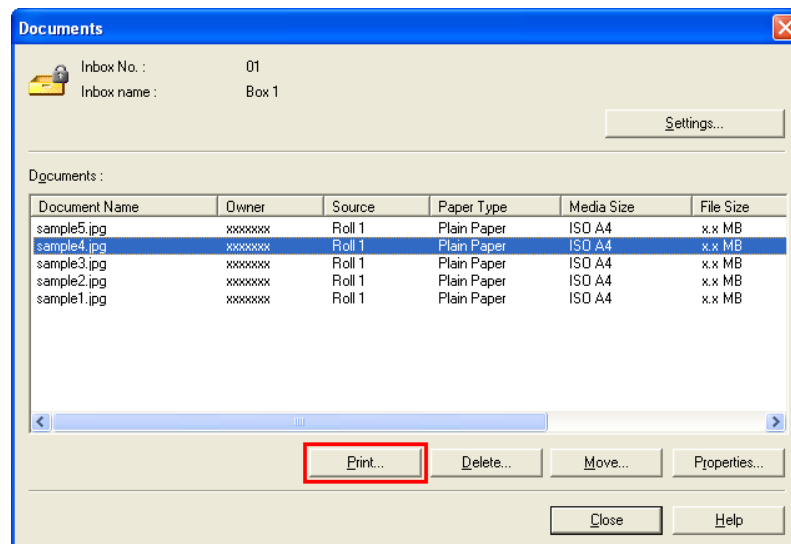

3. In the **Print** dialog box, enter the quantity to print in **Copies** and click **OK**.

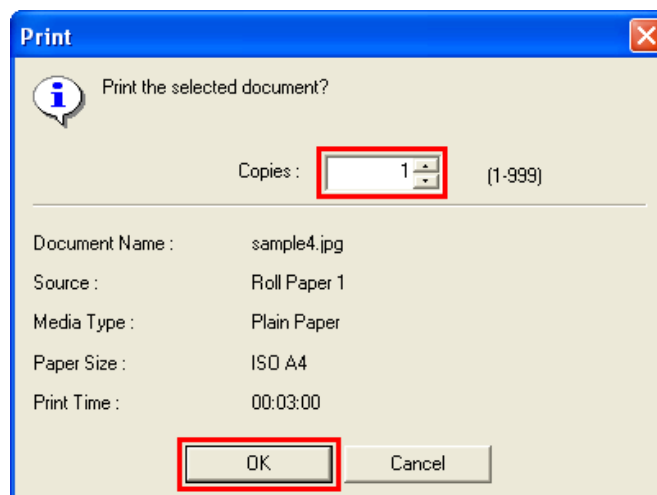




**Note**

- The printing time initially indicates how long it took to finish printing one copy during the previous print job.  
If you change the value in **Copies**, the printing time indicates the time it took to print one copy during the previous print job multiplied by the number of copies.

For details, refer to the imagePROGRAF Status Monitor help file.

Using imagePROGRAF Printmonitor

1. In the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs.

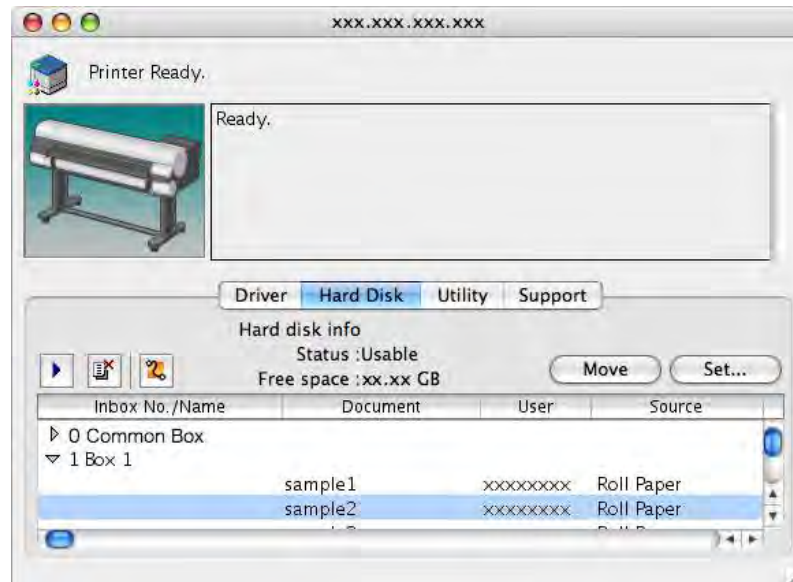

**Note**


- Enter a password if one has been set.



2. Select the saved job in the list and click **Resume Printing** to display the **Resume Printing** dialog box.



3. Specify the number of copies and click the **OK** button.

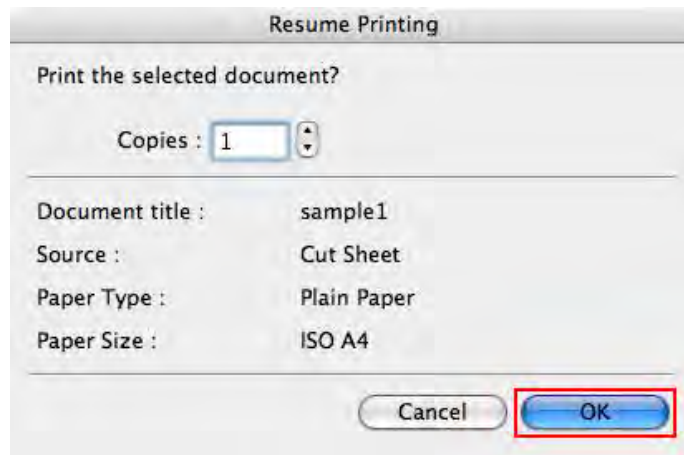

For details, refer to the imagePROGRAF Printmonitor help file.

## Deleting Saved Jobs

You can delete saved jobs in the box shared among all users and in each personal box. Delete stored print jobs as follows.

- Using the Control Panel
- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)

## Using the Control Panel

1. Press the **Menu** button to display **MAIN MENU**.



2. Delete the saved job.

1. Press **▲** or **▼** to select **Job Management**, and then press the **▶** button.
2. Press **▲** or **▼** to select **Stored Job**, and then press the **▶** button.
3. Press **▲** or **▼** to select the box number (in the range 00–29), and then press the **▶** button.
4. Enter a password if one has been set, and then press the **OK** button.
5. Press **▲** or **▼** to select **Job List**, and then press the **▶** button.
6. Press **▲** or **▼** to select the saved job to delete, and then press the **▶** button.
7. Press **▲** or **▼** to select **Delete**, and then press the **▶** button.
8. Confirm the print job for deletion and press the **OK** button.

## Using RemoteUI


1. On the **Stored Job** page, choose the mail box.

Inbox No.	Inbox Name	Document Count
00	Common mail box	69
01	Box 1	5
02	Box 2	0
03	Box 3	0
04	Box 4	0
05	Box 5	0




**Note**

- Enter a password if one has been set.

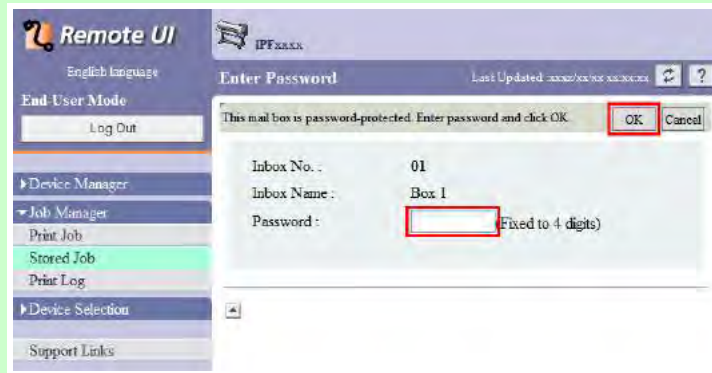


2. Select the saved job in the list and click **Delete**.

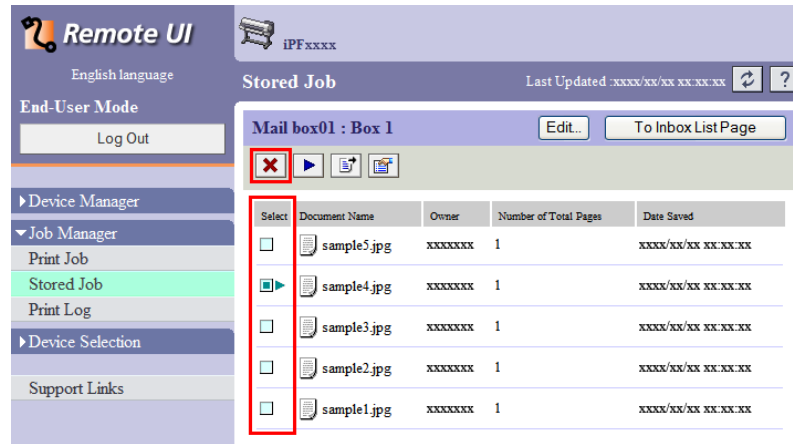

For details, refer to the RemoteUI help.


## Using imagePROGRAF Status Monitor

1. On the **Hard Disk** sheet, select a mail box in the list and click **Open**.

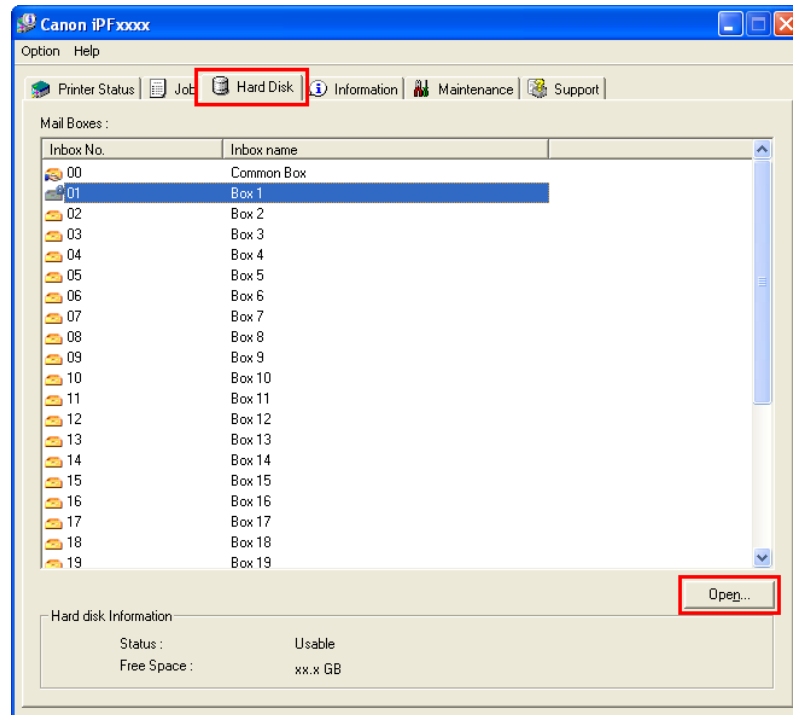


### Note

- Enter a password if one has been set.

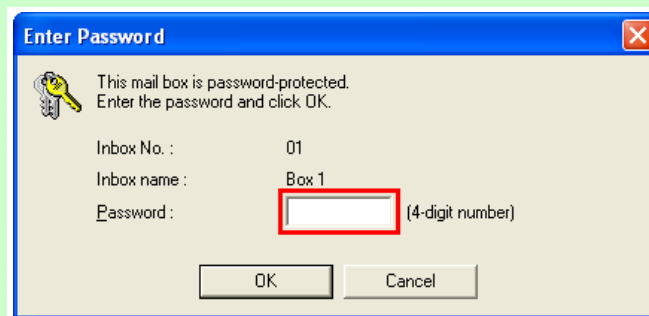



- In the **Documents** dialog box, select the print job in the list and click **Delete**.

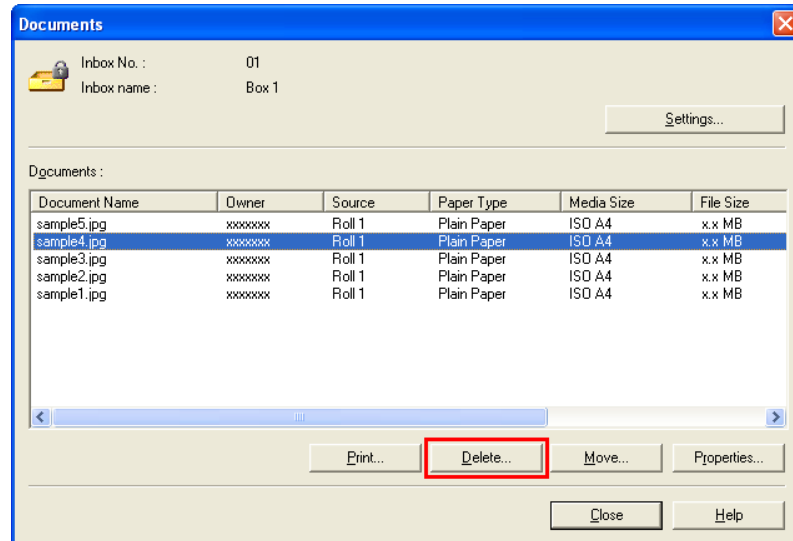


For details, refer to the imagePROGRAF Status Monitor help file.

## Using imagePROGRAF Printmonitor

6

- On the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs.

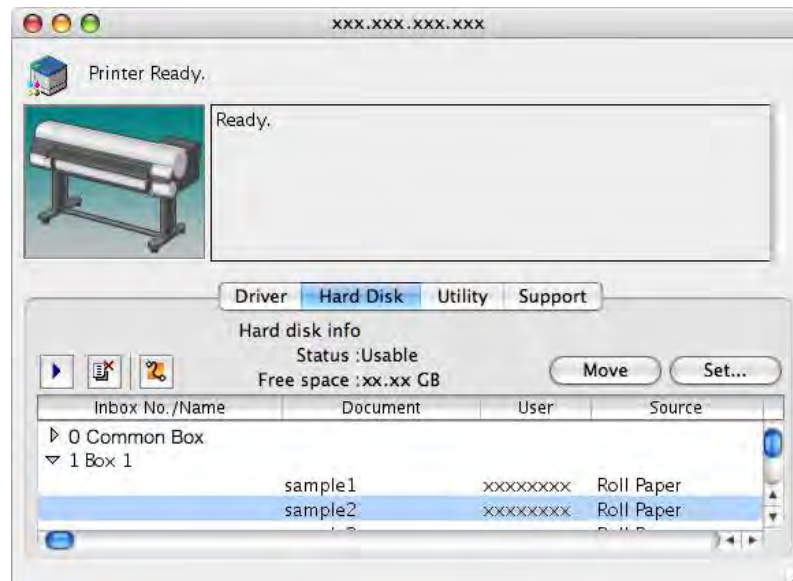

581




**Note**

- Enter a password if one has been set.



2. Select the saved job in the list and click **Delete**.

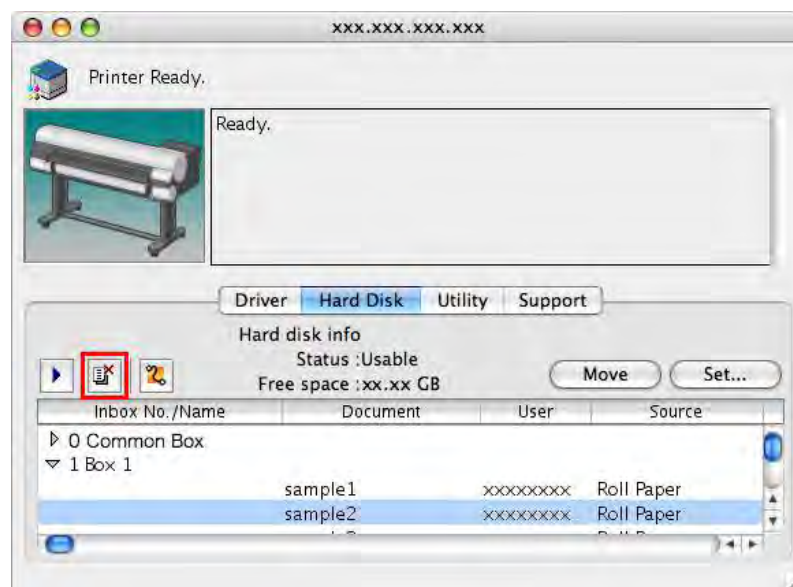

For details, refer to the imagePROGRAF Printmonitor help file.


## Moving Saved Jobs

Print jobs for which **Print** is selected as the format in **Output Method** (in Windows) or **Send job to** (in Mac OS X) are saved in the common box, number **00**. However, jobs in this mail box will be deleted one after another starting with the oldest job in the following situations.

- If there are more than 100 saved jobs in the common box and job queue combined
- If the temporary storage area becomes full during reception of print jobs for which you have selected **Print** or **Print (auto delete)** in **Output Method** (in Windows) or **Send job to** (in Mac OS X)
- If the temporary and permanent storage areas no longer have enough space during reception of print jobs for which you have selected **Save in mail box** in **Output Method** (in Windows) or **Send job to** (in Mac OS X)

You can move jobs to personal boxes **01** to **29** to prevent them from being deleted. (Up to 100 jobs can be stored here.)

You can also move saved jobs from one personal box to another.

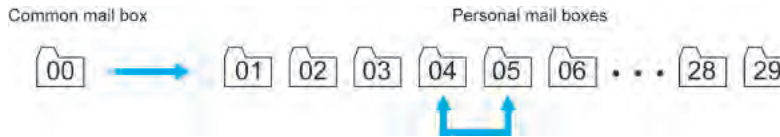

Move stored print jobs as follows.


- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)




**Note**  
• Jobs saved in personal boxes cannot be moved to the common box.

## Using RemoteUI


1. On the **Stored Job** page, choose the mail box.

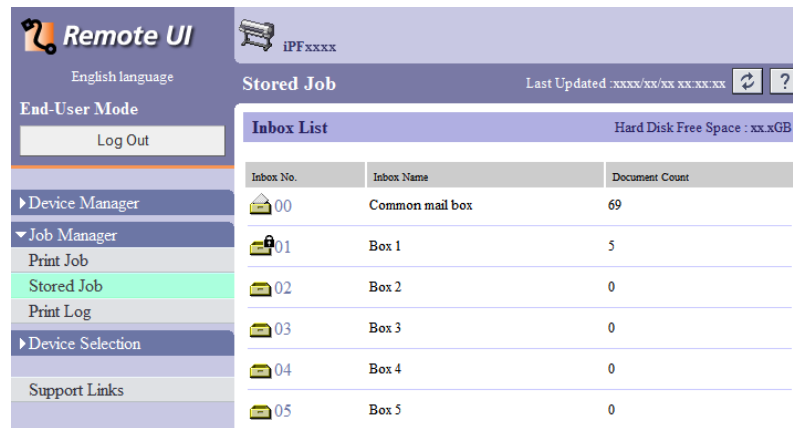


**Note**  
• Enter a password if one has been set.

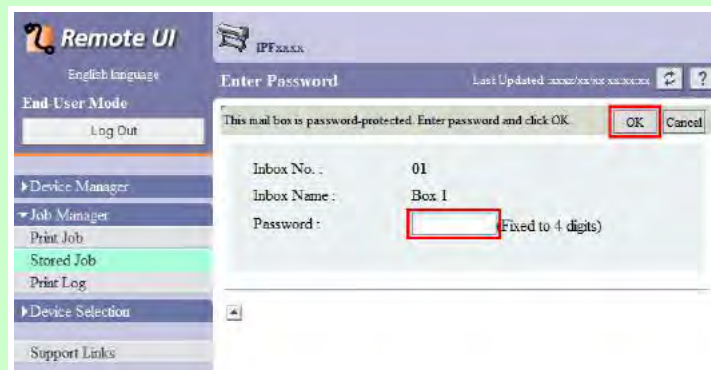

2. Select the print job in the list and click **Move**.

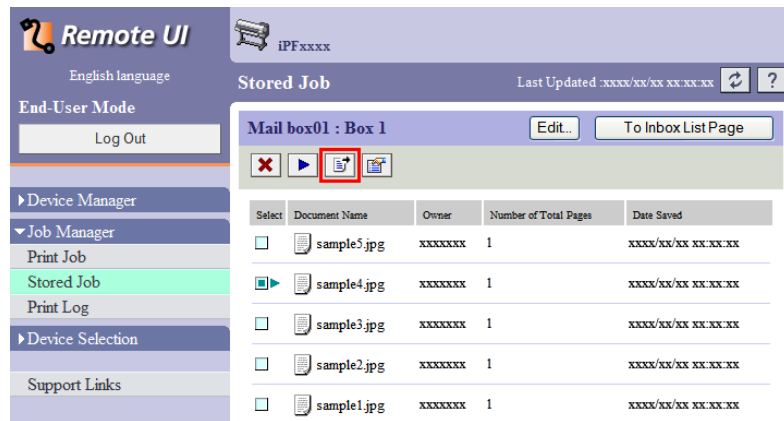

3. On the **Move Document** page, select the name or number of the destination personal box in the **Destination mail box** list and click **OK**.

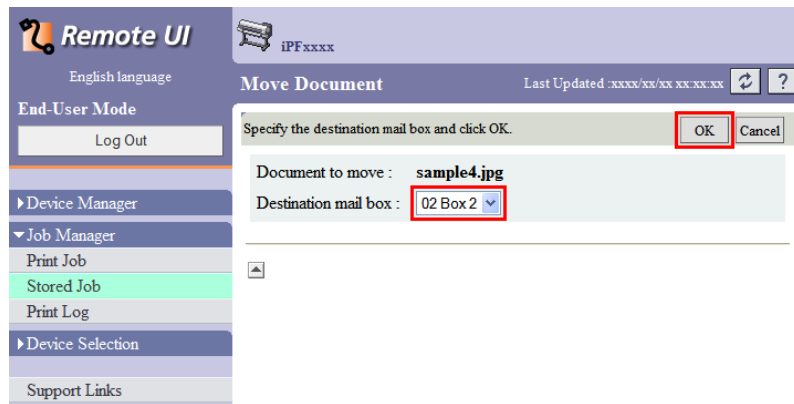


For details, refer to the RemoteUI help file.


6

## Using imagePROGRAF Status Monitor (Windows)


1. On the **Hard Disk** sheet, select a mail box in the list and click **Open**.

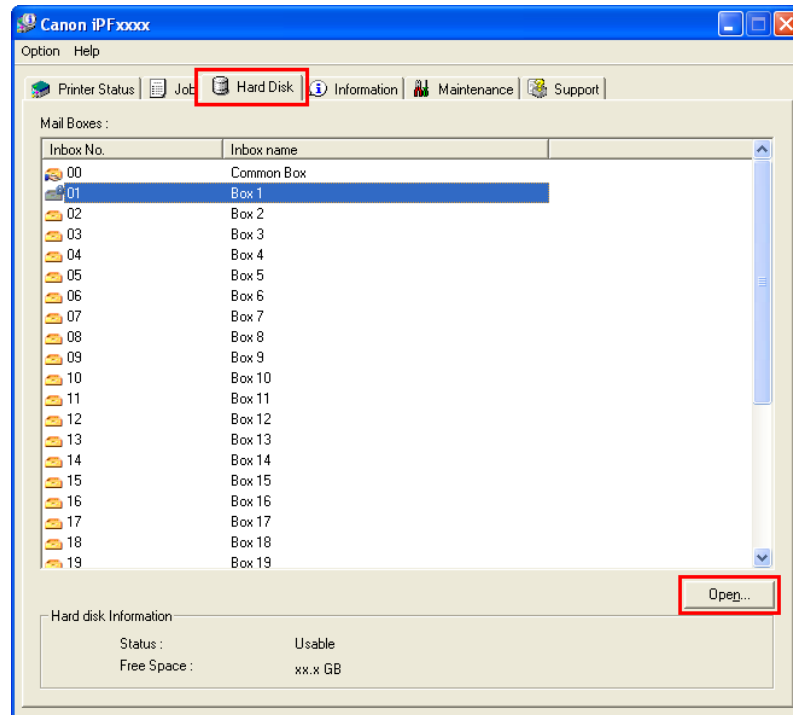**Note**

- Enter a password if one has been set.

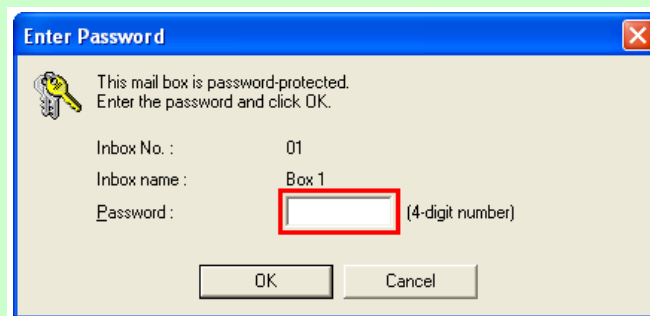


2. In the **Documents** dialog box, select the print job in the list and click **Move**.

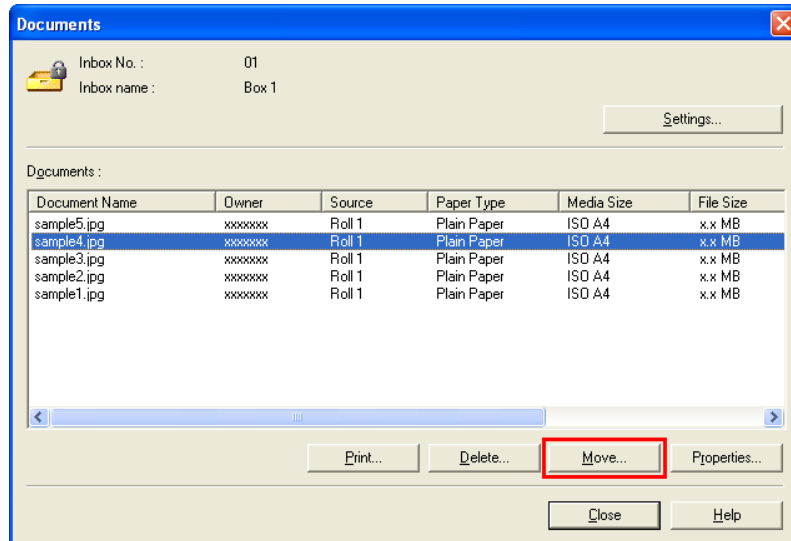

3. In the **Move** dialog box, select the destination personal box and click **OK**.

6

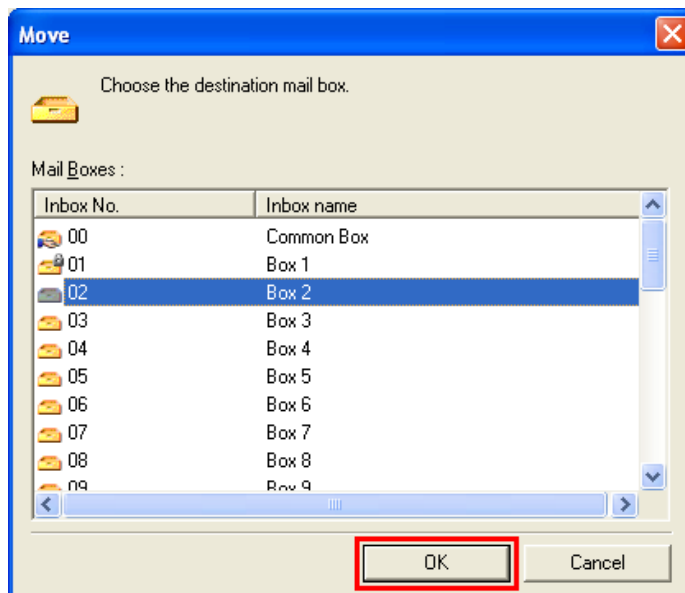


For details, refer to the imagePROGRAF Status Monitor help file.



## Using imagePROGRAF Printmonitor (Mac OS)


1. In the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs.

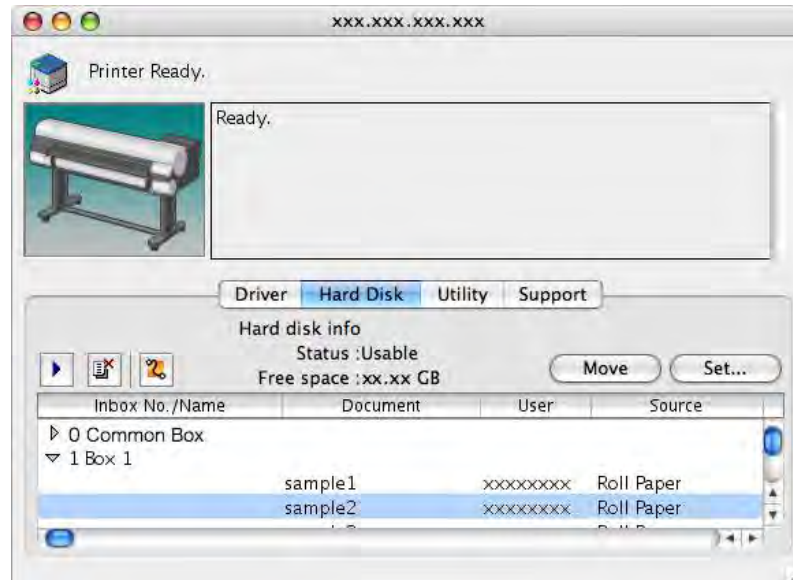**Note**

- Enter a password if one has been set.  
The password is a four-digit number.




2. Select the print job in the list and click **Move**.

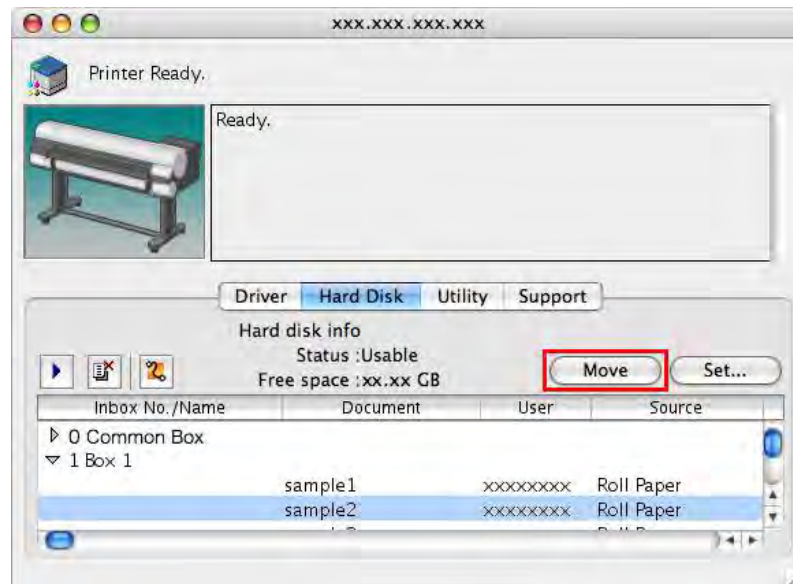

3. In the **Move Document** dialog box, select the destination personal box and click **OK**.

6

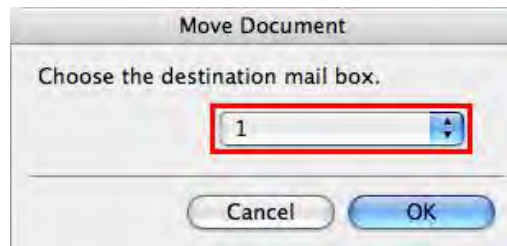


For details, refer to the imagePROGRAF Printmonitor help file.

## Advanced Print Job Operations

Saving Print Jobs Sent from Sources Other than the Printer Driver .....	589
Printing Without Saving Jobs in the Common Box .....	590
Setting Passwords for Personal Boxes .....	591
Naming Personal Boxes .....	596
Displaying a List of Saved Jobs .....	601
Printing a List of Saved Jobs .....	605
Displaying Details of Saved Jobs .....	605
Renaming Saved Jobs .....	609

### Saving Print Jobs Sent from Sources Other than the Printer Driver

To save print jobs sent from software or systems other than the printer driver provided with the printer, complete the **Output Method** and **Save and Print** settings in the printer menu.

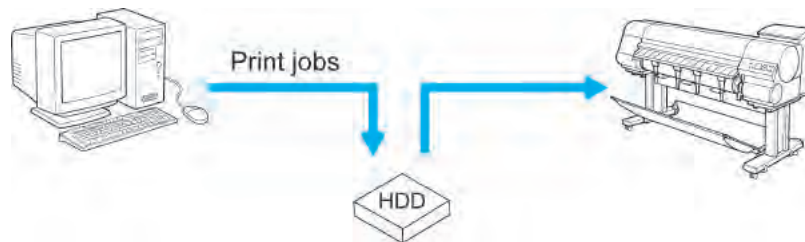

#### Important

- Contact the software or system developer for information about support for this printer function.

### Specifying Output Method

1. Press the **Menu** button to display **MAIN MENU**.



2. Press **▲** or **▼** to select **System Setup**, and then press the **▶** button.
3. Press **▲** or **▼** to select **Output Method**, and then press the **▶** button.
4. Press **▲** or **▼** to select the output method, and then press the **OK** button.

#### • Print

Save print jobs automatically at the same time they are printed. (This is the default format.)

- **Print (Auto Del)**  
Save print jobs temporarily at the same time they are printed and delete them after printing.
- **Save: Box 01** (Here, the number represents a box number)  
Save print jobs on the printer. If you select this option, go to step 5 and select the box for saving print jobs.

5. Press ▲ or ▼ to select the box, and then press the **OK** button.

## Specifying **Save and Print**

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **System Setup**, and then press the ► button.

3. Press ▲ or ▼ to select **Save and Print**, and then press the ► button.

4. Press ▲ or ▼ to select **On**, or **Off**, and then press the **OK** button.  
If you select **On**, print jobs are saved on the hard disk and then printed.

## Printing Without Saving Jobs in the Common Box

If you have selected **Print** in **Output Method** (in Windows) or **Send job to** (in Mac OS X) in the printer driver as the format for print jobs sent from the computer, the jobs are saved in the common box. (See "Saved Print Jobs.") →P.563  
You can select **Save: Shared Box > Off** in the printer menu so that print jobs for which you have selected **Output Method > Print** in the printer driver are deleted from the common box after printing.  
Use this function when printing highly confidential documents.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **System Setup**, and then press the ► button.

- Press ▲ or ▼ to select **Save: Shared Box**, and then press the ► button.


**Note**

- If a password has been set on the printer, the **Logon** screen is displayed. To change the setting, select **Administrator** and press the **OK** button. Enter the password when **Admin.Pswd** is displayed and press the **OK** button before going to the next procedure. If you select **User** and press the **OK** button, you can check settings values but cannot change them.

- Press ▲ or ▼ to select **Off**, and then press the **OK** button.

## Setting Passwords for Personal Boxes

By default, no passwords are set for personal boxes. For greater security, you can set passwords for each personal box. After you set a password, it will be required to modify the personal box settings, as well as to display, print, delete, move, and modify jobs saved in the personal box.

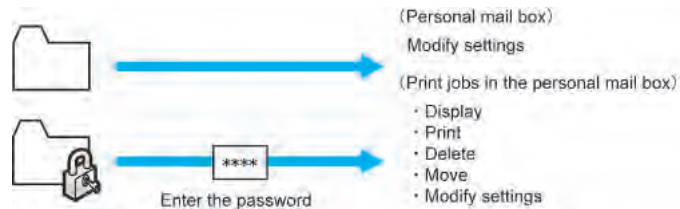**Note**

- A password cannot be set for the common box.
- Enter a four-digit number as the password, in the range 0001–9999.
- Even if you have set passwords, they are not required to access personal boxes in Administrator Mode in RemoteUI.


You can set a password for a personal box as follows.

- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)

### Using RemoteUI

- On the **Stored Job** page, select the personal box for a password.


2. Click **Edit**.

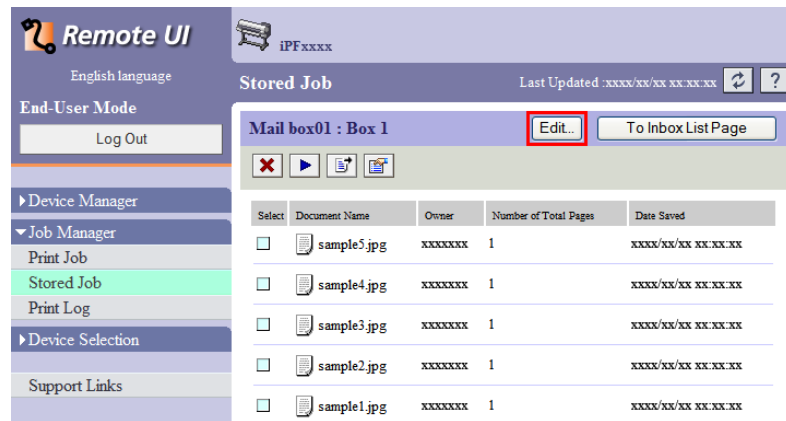

3. In the **Set/Register User's Inbox** dialog box, specify the password and click **OK**.

- **Set Password** : Select the check box.
- **Password** : Enter the password. (This field is limited to four digits in the range 0001–9999.)
- **Confirmation Number** : Re-enter the password to confirm it.

6

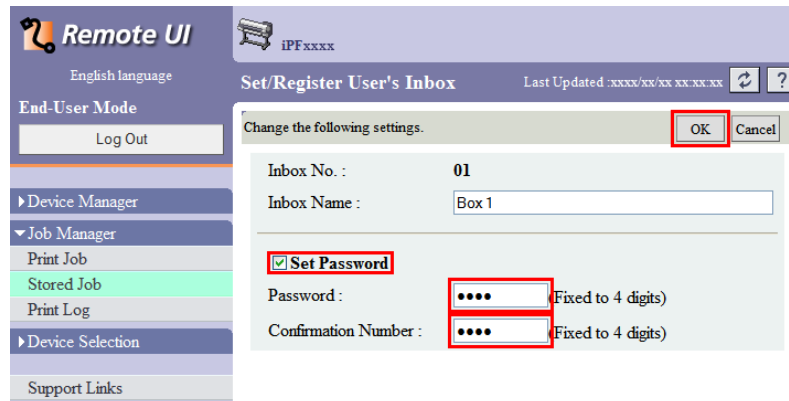


For details, refer to the RemoteUI help.




## Using imagePROGRAF Status Monitor (Windows)


1. On the **Hard Disk** sheet, select a listed personal box for a password and click **Open**.

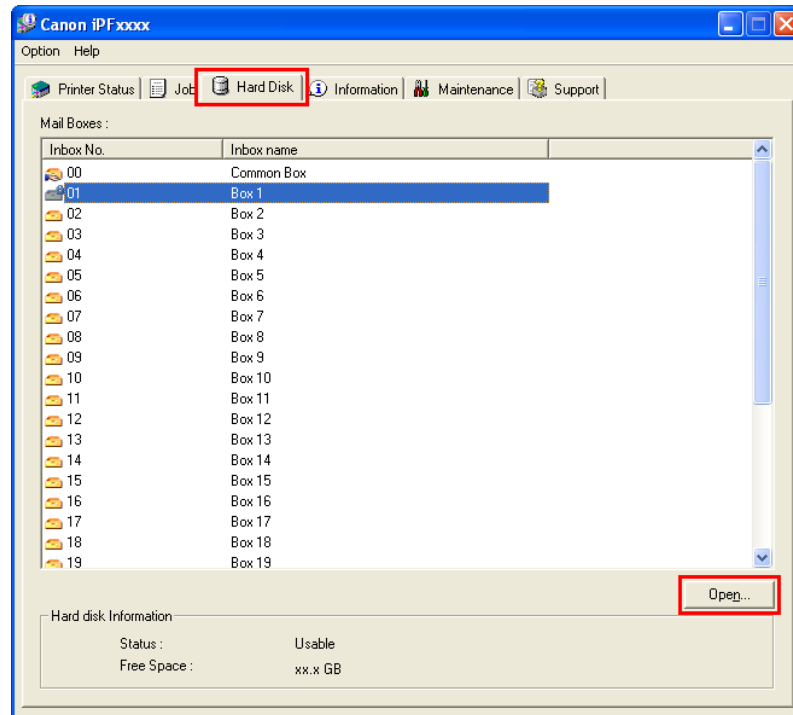**Note**

- Enter a password if one has been set for the personal box.

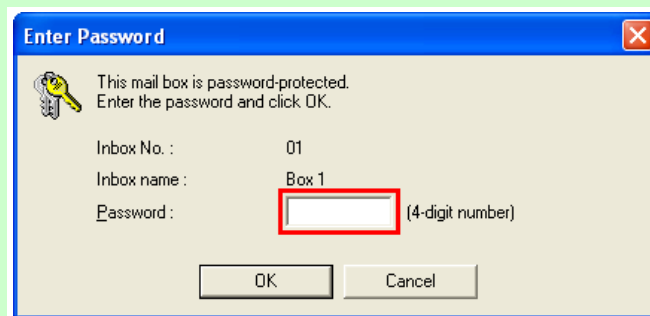


2. In the **Documents** dialog box, click **Settings**.

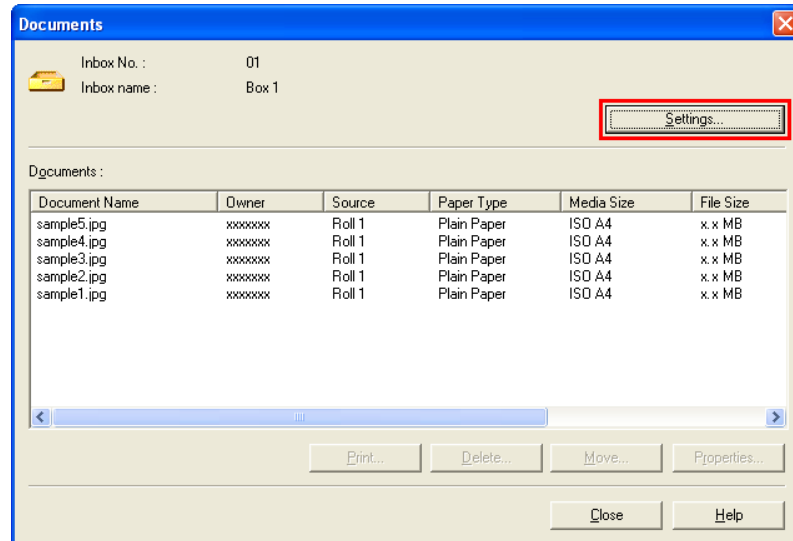

3. In the **Settings** dialog box, specify the password and click **OK**.


- **Set password** : Select the check box.
- **Password** : Enter the password. (This field is limited to four digits in the range 0001–9999.)
- **Re-enter to confirm** : Re-enter the password to confirm it.

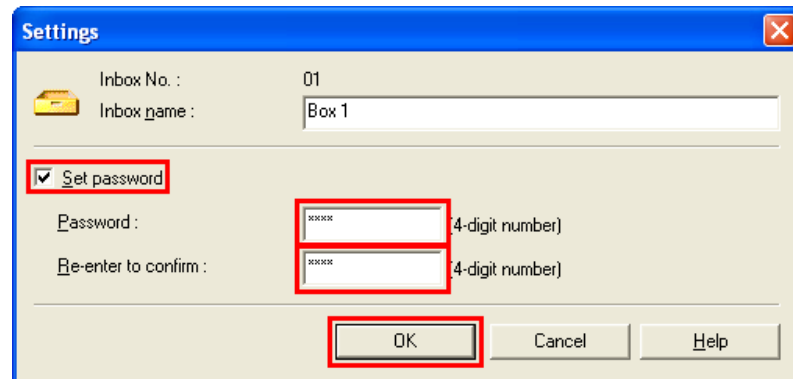

For details, refer to the imagePROGRAF Status Monitor help file.


## Using imagePROGRAF Printmonitor (Mac OS)

1. In the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs. Select a saved job and click **Set**.

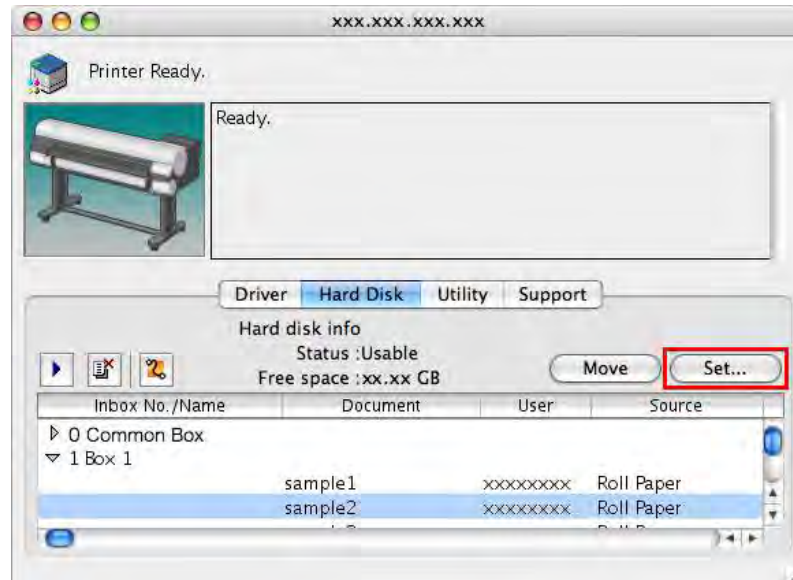

2. In the **Settings** dialog box, specify the password and click **OK**.

- **Set password** : Select the check box.
- **Password** : Enter the password. (This field is limited to four digits in the range 0001–9999.)
- **Verify** : Re-enter the password to confirm it.

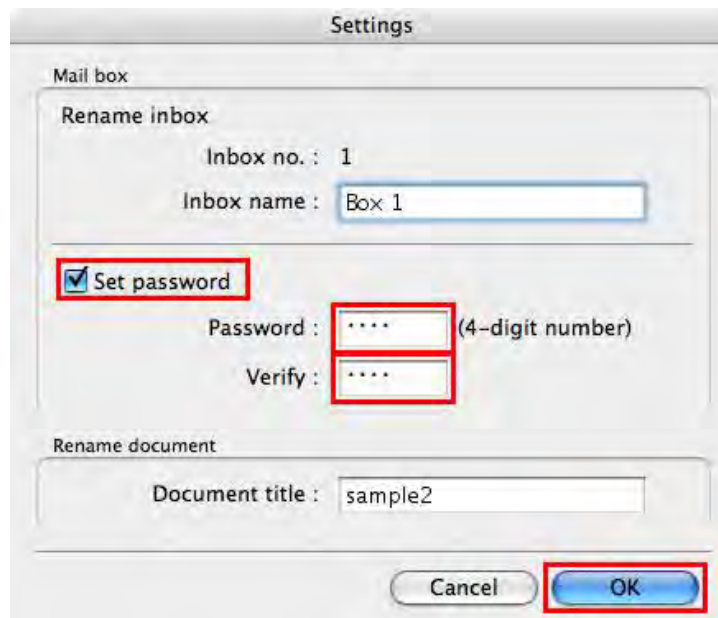

For details, refer to the imagePROGRAF Printmonitor help file.


## Naming Personal Boxes

By default, personal boxes are unnamed. You can name them for easier management. You can assign a name to a personal box as follows.

- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)


### Using RemoteUI

1. On the **Stored Job** page, select the personal box to identify.

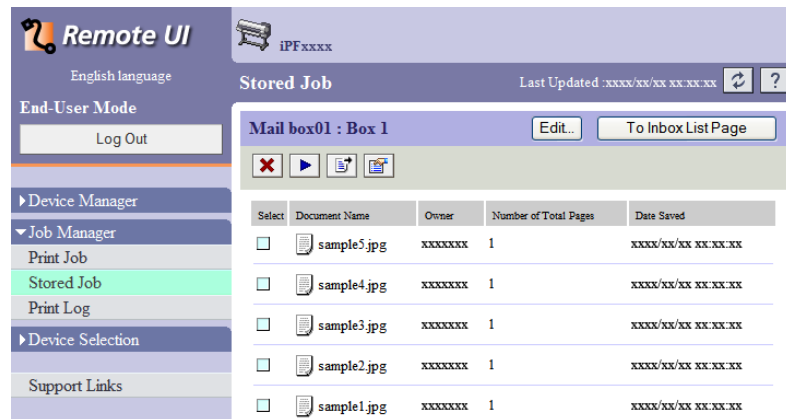


**Note**

- Enter a password if one has been set for the personal box.

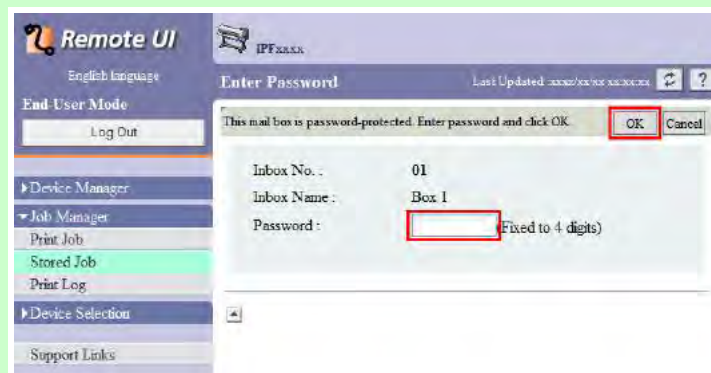

## 2. Click **Edit**.

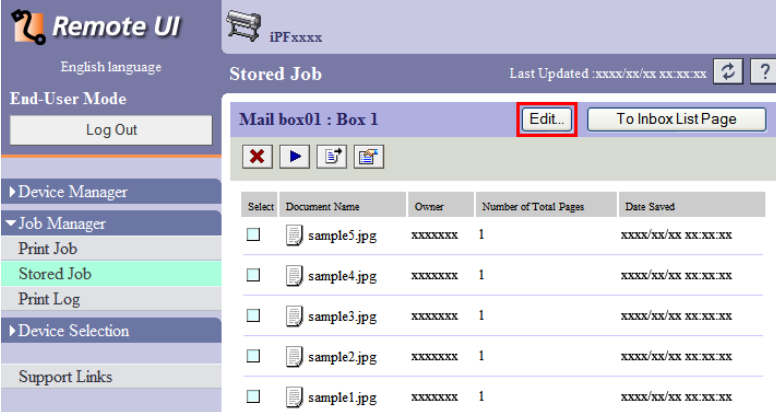


Remote UI English language iPFxxxxx

Stored Job Last Updated :xxxx/xx/xx xx:xx:xx

Mail box01 : Box 1 **Edit..** To Inbox List Page

Select	Document Name	Owner	Number of Total Pages	Date Saved
<input type="checkbox"/>	sample5.jpg	xxxxxxx	1	xxxx/xx/xx xx:xx:xx
<input type="checkbox"/>	sample4.jpg	xxxxxxx	1	xxxx/xx/xx xx:xx:xx
<input type="checkbox"/>	sample3.jpg	xxxxxxx	1	xxxx/xx/xx xx:xx:xx
<input type="checkbox"/>	sample2.jpg	xxxxxxx	1	xxxx/xx/xx xx:xx:xx
<input type="checkbox"/>	sample1.jpg	xxxxxxx	1	xxxx/xx/xx xx:xx:xx

## 3. In the **Set/Register User's Inbox** dialog box, enter the personal box name in **Inbox Name** and click **OK**.

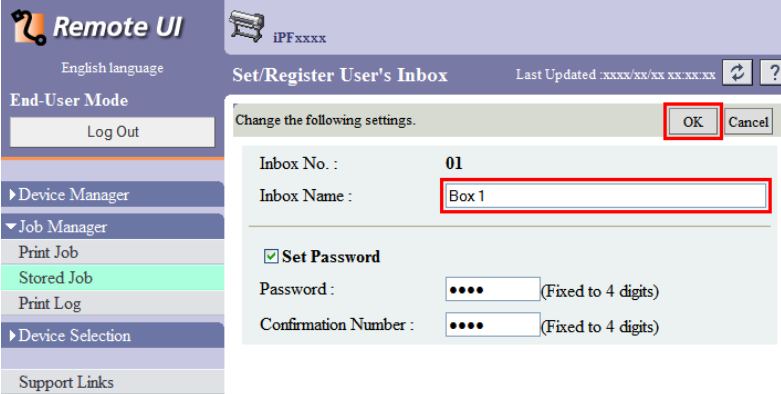

Remote UI English language iPFxxxxx

Set/Register User's Inbox Last Updated :xxxx/xx/xx xx:xx:xx

Change the following settings. **OK** Cancel

Inbox No. : 01

Inbox Name : **Box 1**

**Set Password**


Password : ●●●● (Fixed to 4 digits)

Confirmation Number : ●●●● (Fixed to 4 digits)

For details, refer to the RemoteUI help.


## Using imagePROGRAF Status Monitor (Windows)

1. On the **Hard Disk** sheet, select a listed personal box to identify and click **Open**.

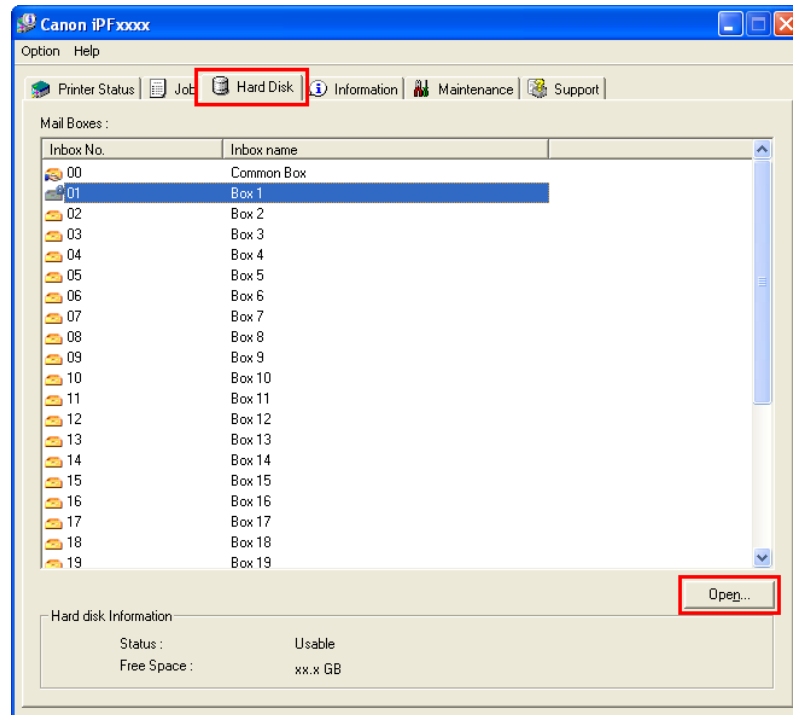


### Note

- Enter a password if one has been set for the personal box.

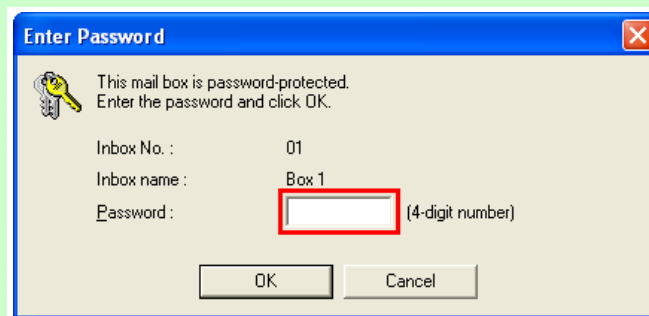




2. In the **Documents** dialog box, click **Settings**.

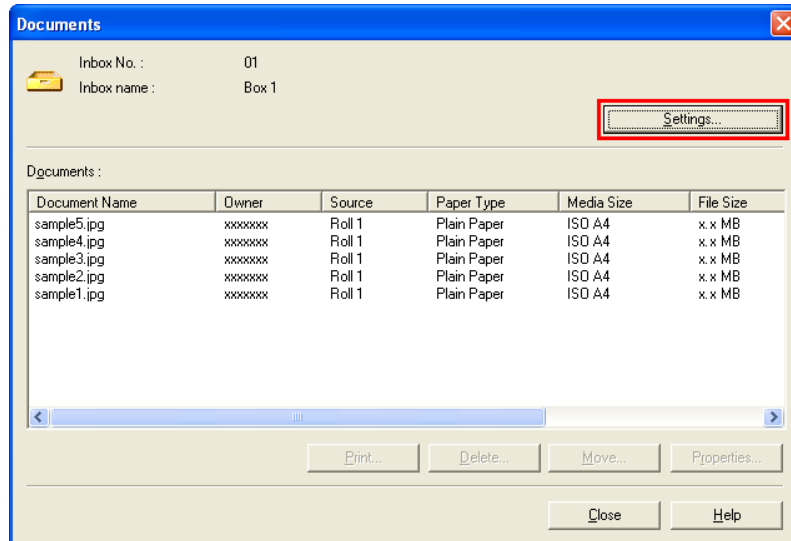


3. In the **Settings** dialog box, enter the personal box name and click **OK**.

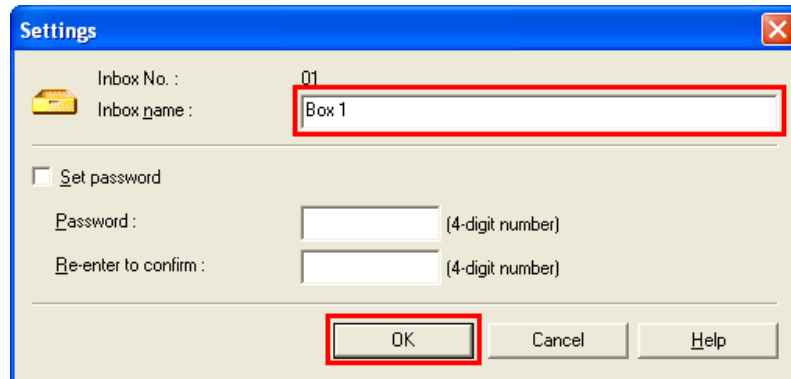

For details, refer to the imagePROGRAF Status Monitor help file.

## Using imagePROGRAF Printmonitor (Mac OS)

1. On the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs. Select a saved job and click **Set**.

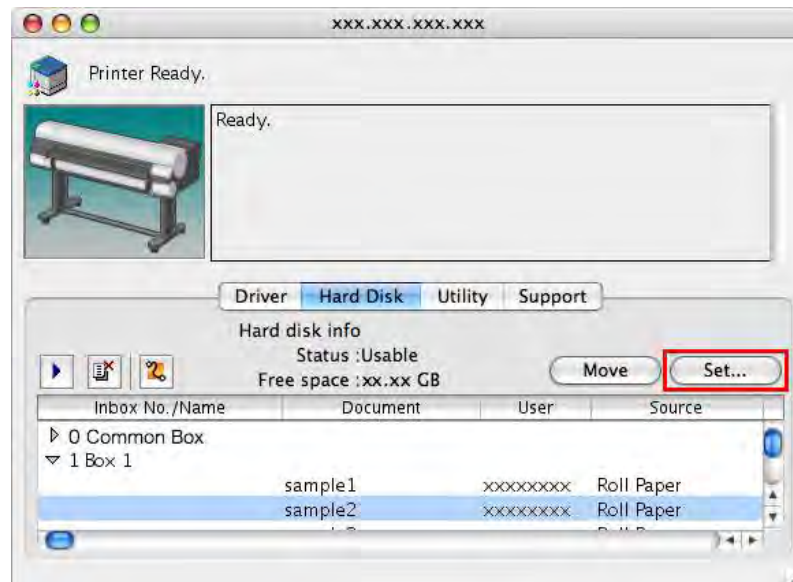

6



### Note

- Enter a password if one has been set.  
The password is a four-digit number.



600

2. In the **Settings** dialog box, enter the personal box name and click **OK**.



For details, refer to the imagePROGRAF Printmonitor help file.

6

## Displaying a List of Saved Jobs

You can display saved print jobs in the box shared among all users and in each personal box. View the list of stored print jobs as follows.

- Using the Control Panel
- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)

### Using the Control Panel

1. Press the **Menu** button to display **MAIN MENU**.




2. Display a list of saved print jobs.
  1. Press ▲ or ▼ to select **Job Management**, and then press the ► button.
  2. Press ▲ or ▼ to select **Stored Job**, and then press the ► button.

601


3. Press ▲ or ▼ to select the box number (in the range 00–29), and then press the ► button.
4. Enter a password if one has been set, and then press the **OK** button.
5. Press the ▲ or ▼ button to select **Job List**.

## Using RemoteUI


Choose a mail box on the **Stored Job** page to display a list of jobs saved in that mail box.

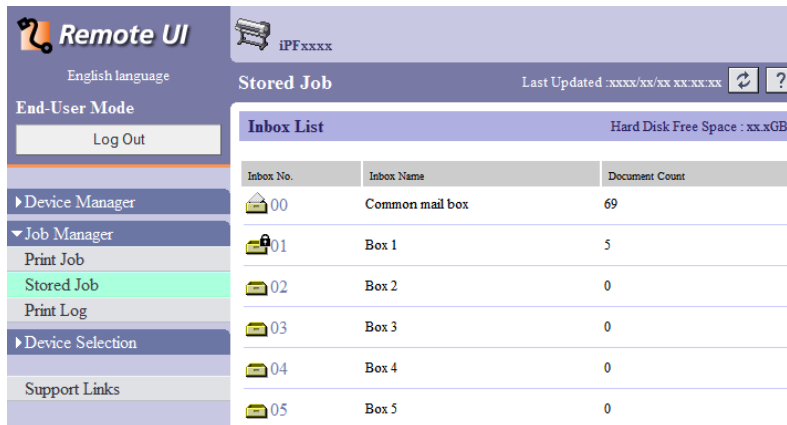

**Note**  
• Enter a password if one has been set.

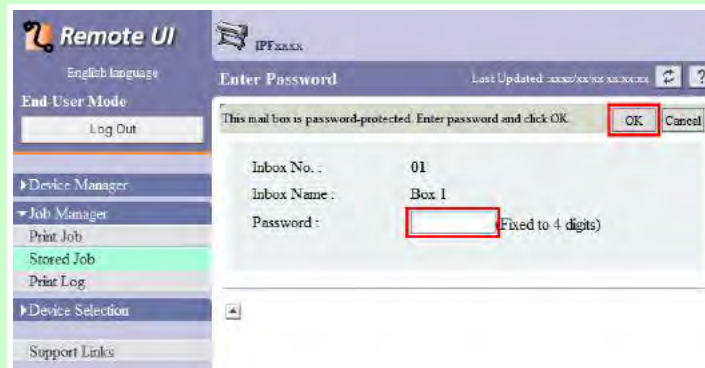


Jobs saved in the mail box are listed.

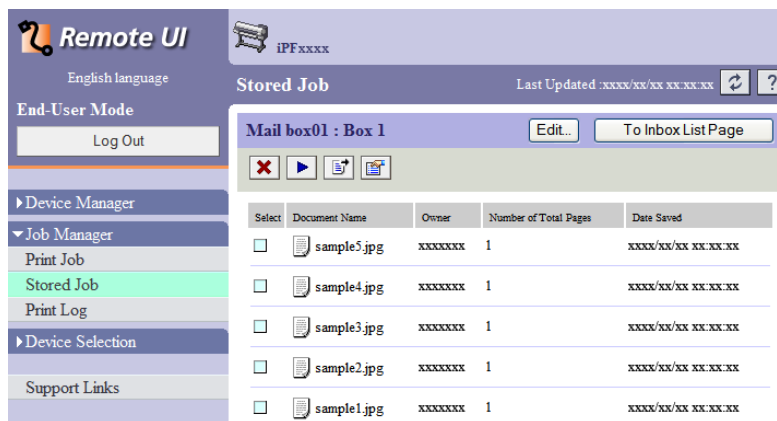

For details, refer to the RemoteUI help.


## Using imagePROGRAF Status Monitor (Windows)

On the **Hard Disk** sheet, select a mail box in the list and click **Open**.

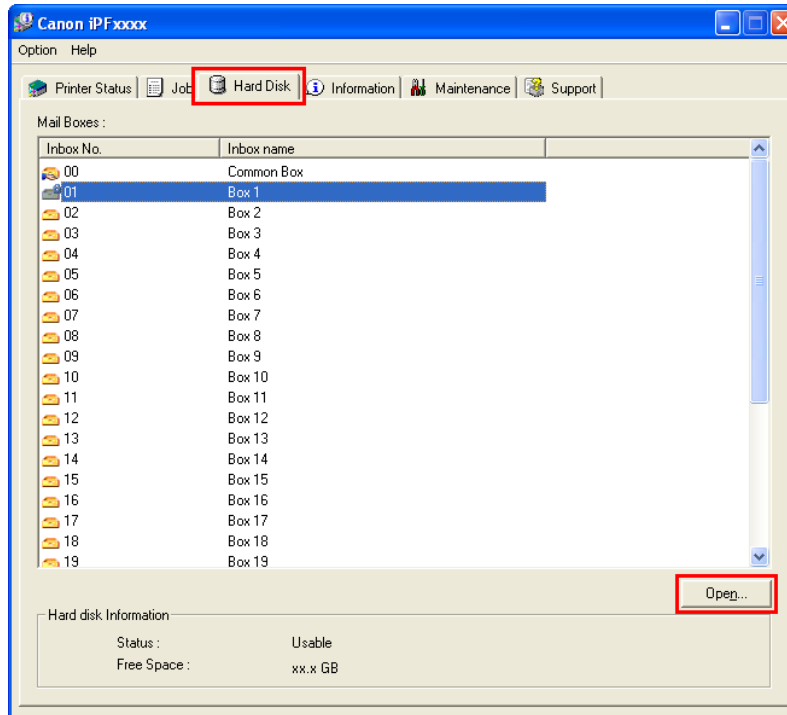


## Note

- Enter a password if one has been set.

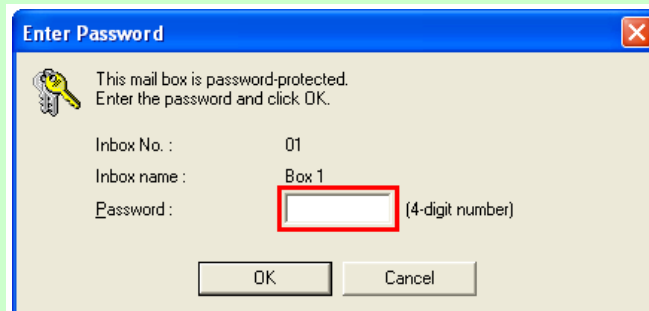


Jobs saved in that mail box are displayed in the **Documents** dialog box.

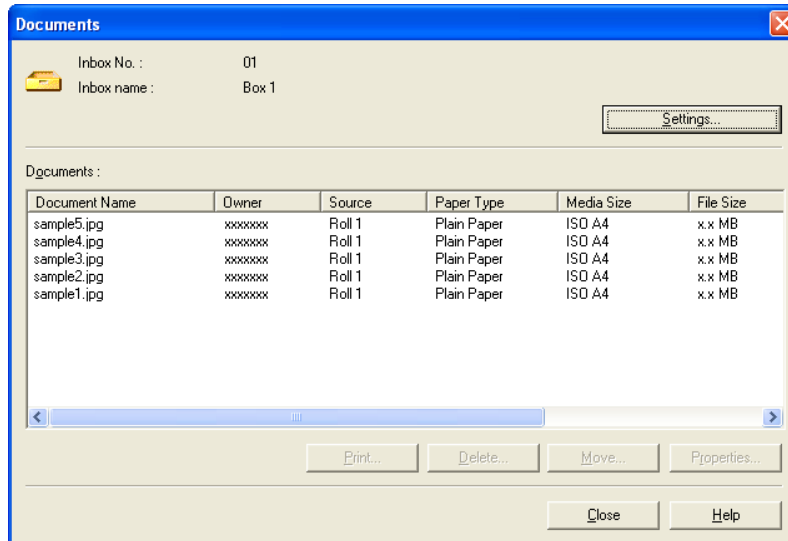

For details, refer to the imagePROGRAF Status Monitor help file.

## 6 Using imagePROGRAF Printmonitor (Mac OS)

On the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs.

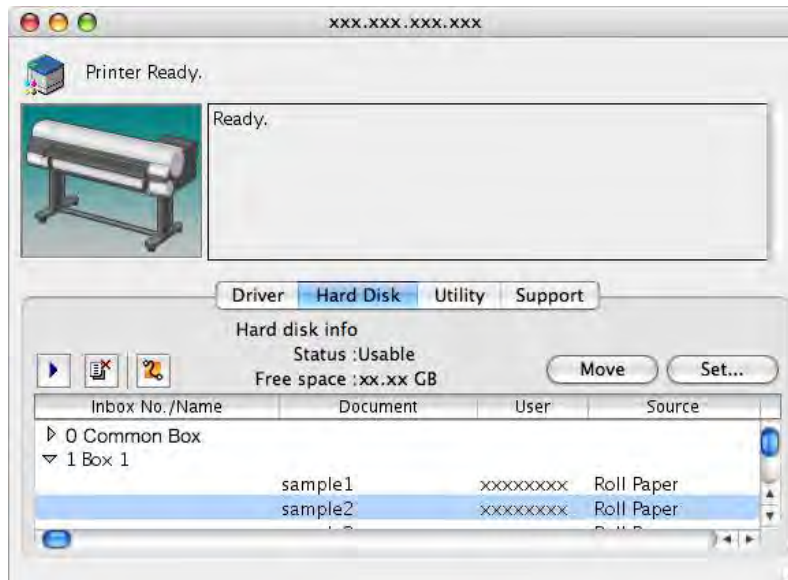



**Note**

- Enter a password if one has been set.  
The password is a four-digit number.



For details, refer to the imagePROGRAF Printmonitor help file.

## Printing a List of Saved Jobs

You can print a list of saved print jobs in the common box and each personal box.  
You can also print a list of print jobs by using the Control Panel.

1. Press the **Menu** button to display **MAIN MENU**.



2. Print a list of saved print jobs.
  1. Press ▲ or ▼ to select **Job Management**, and then press the ► button.
  2. Press ▲ or ▼ to select **Stored Job**, and then press the ► button.
  3. Press ▲ or ▼ to select the box number (in the range 00–29), and then press the ► button.
  4. Enter a password if one has been set, and then press the **OK** button.
  5. Press ▲ or ▼ to select **Print Job List**, and then press the ► button.
  6. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

## Displaying Details of Saved Jobs

You can view details of stored print jobs as follows.

- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)

- Using imagePROGRAF Printmonitor (Mac OS)


## Using RemoteUI

1. On the **Stored Job** page, choose the mail box.




**Note**


- Enter a password if one has been set.

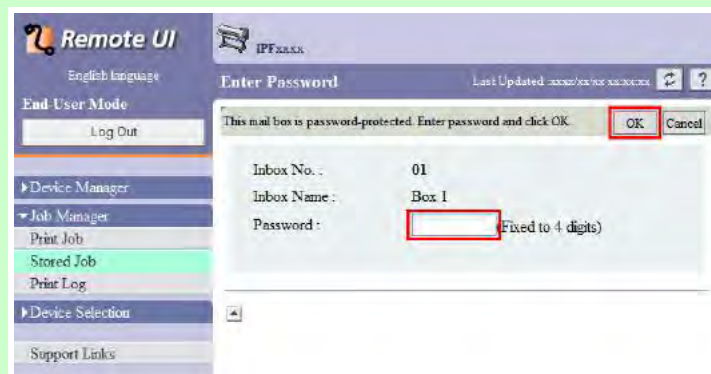

2. Select the saved job in the list and click **Details**.

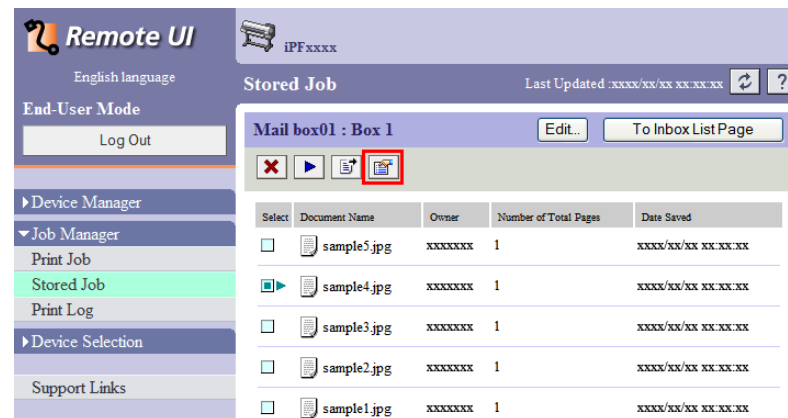


The **Details of the saved document** page is displayed.

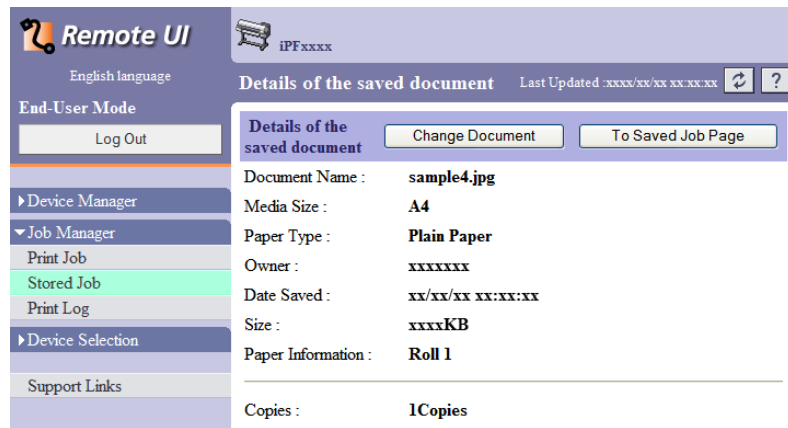

For details, refer to the RemoteUI help.

### Using imagePROGRAF Status Monitor (Windows)


1. On the **Hard Disk** sheet, select a mail box in the list and click **Open**.

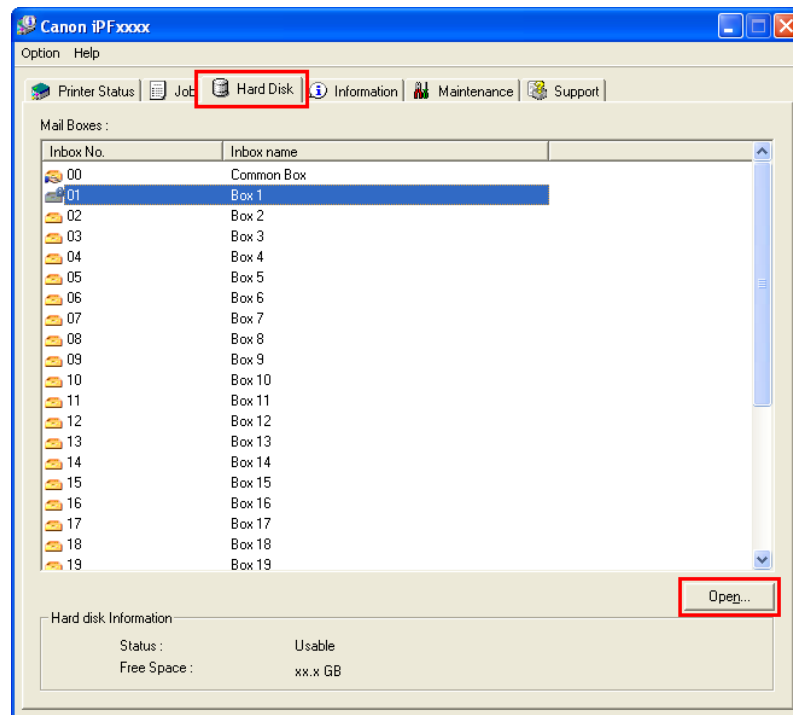




**Note**


- Enter a password if one has been set.

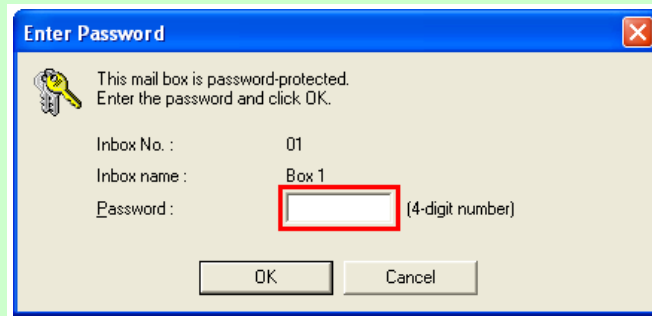

2. In the **Documents** dialog box, select the saved job in the list and click **Properties**.

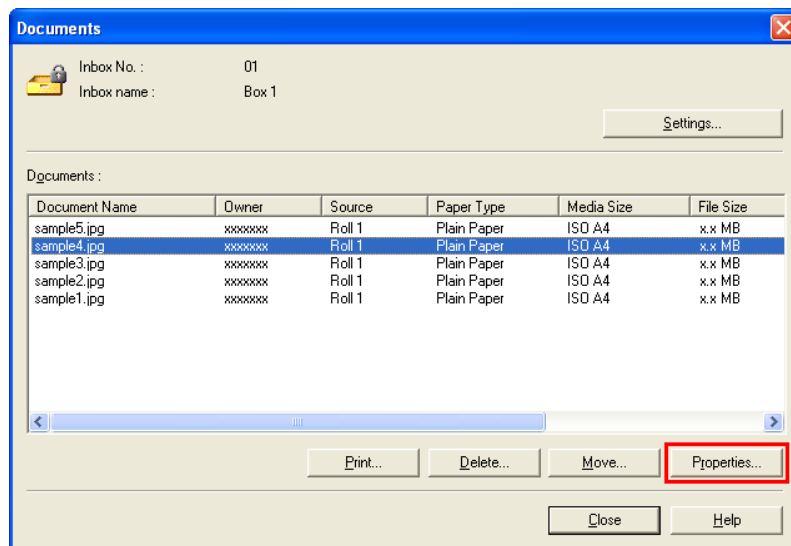


The **Properties** dialog box is displayed.

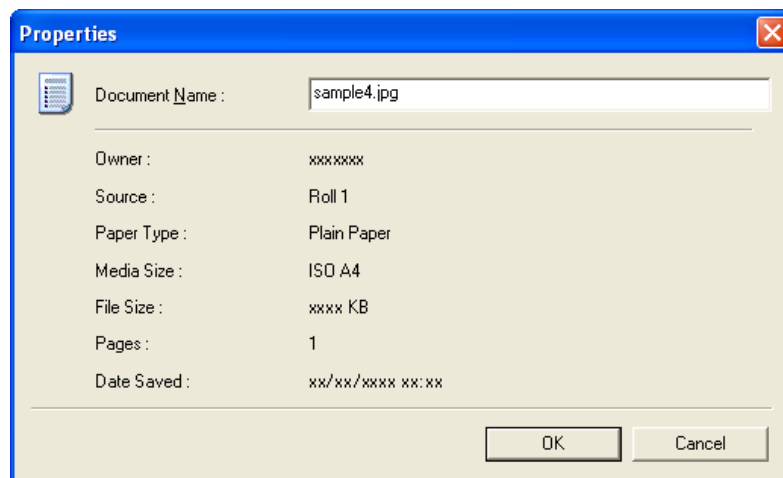

For details, refer to the imagePROGRAF Status Monitor help file.

## Using imagePROGRAF Printmonitor (Mac OS)

1. On the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs.

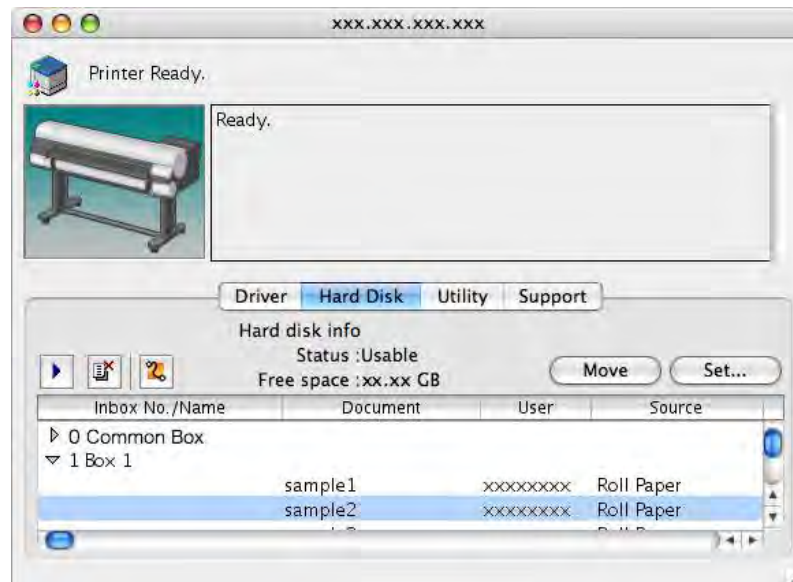

### Note

- Enter a password if one has been set. The password is a four-digit number.



For details, refer to the imagePROGRAF Printmonitor help file.


## Renaming Saved Jobs

You can rename stored print jobs as follows.

- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Mac OS)


## Using RemoteUI

1. On the **Stored Job** page, choose the mail box.

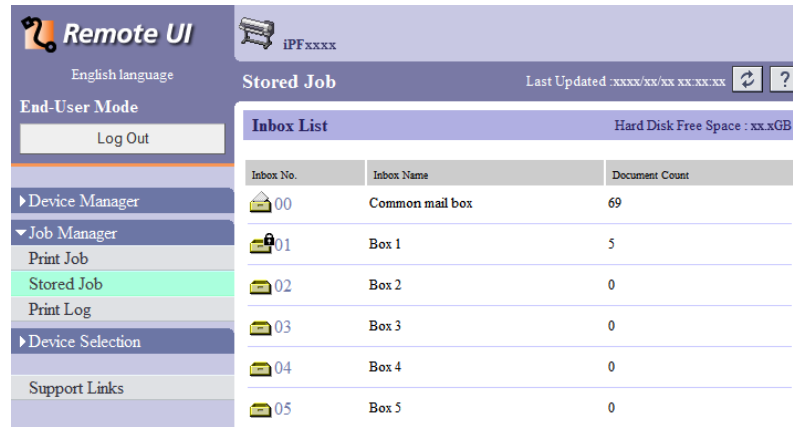


**Note**

- Enter a password if one has been set.

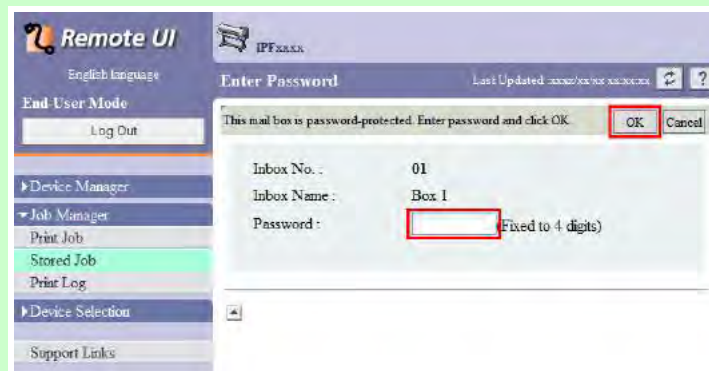


2. Select the saved job in the list and click **Details**.

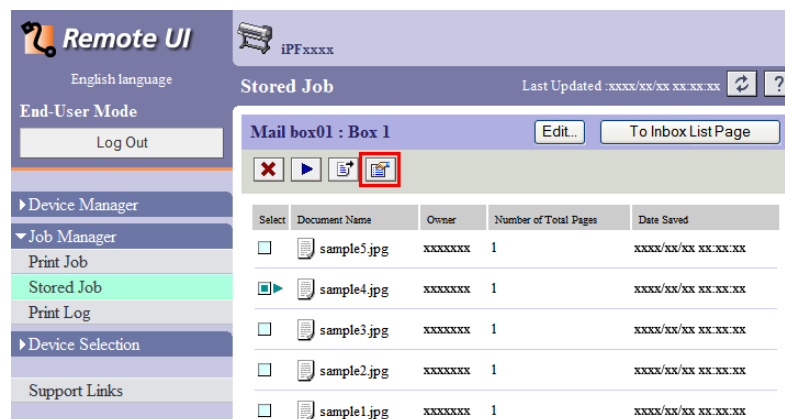




3. On the **Details of the saved document** page, click **Change Document**.

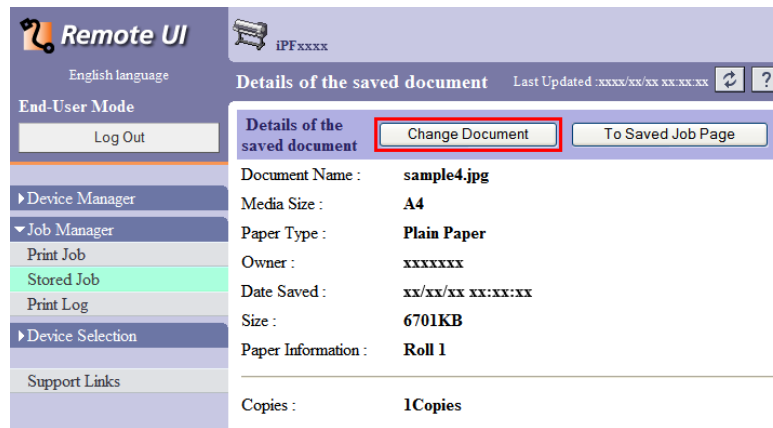


4. On the **Rename Saved Document** page, enter the new job name in **Document Name** and click **OK**.

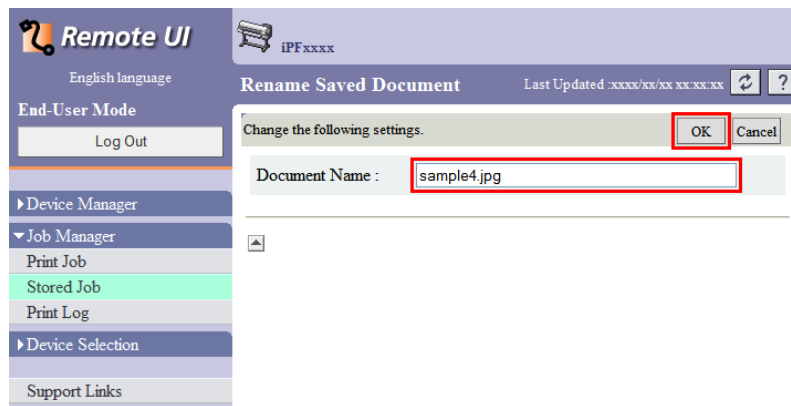

For details, refer to the RemoteUI help.


## Using imagePROGRAF Status Monitor (Windows)

1. On the **Hard Disk** sheet, select a mail box in the list and click **Open**.

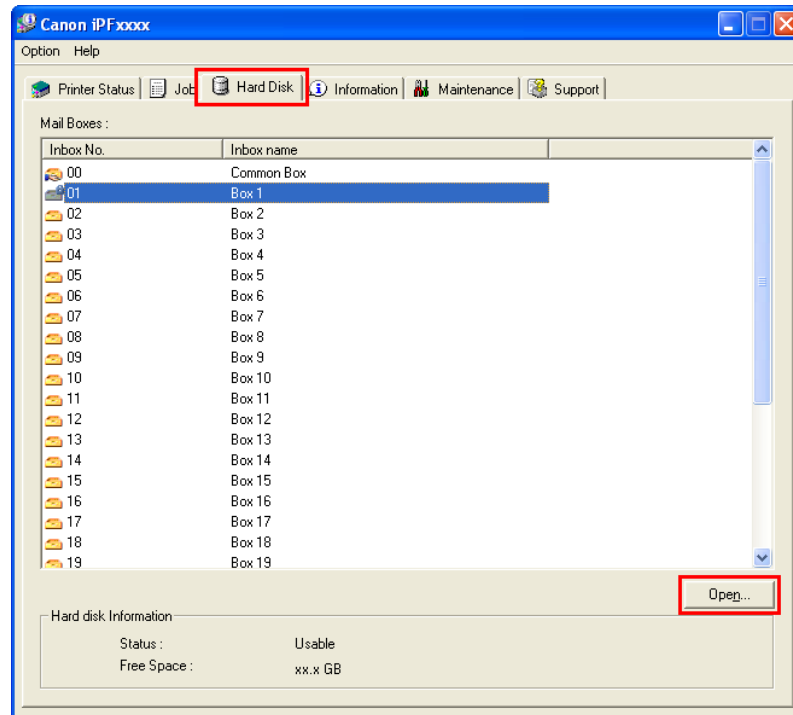


### Note


- Enter a password if one has been set.

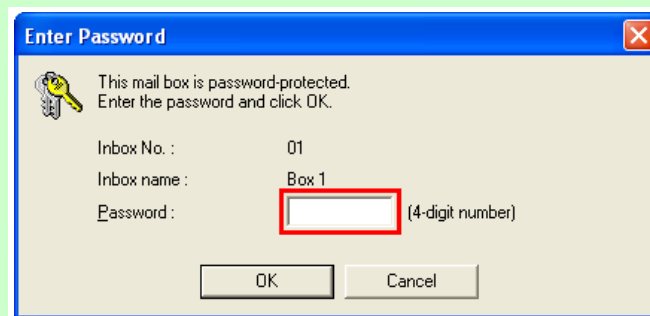

2. In the **Documents** dialog box, select the saved job in the list and click **Properties**.

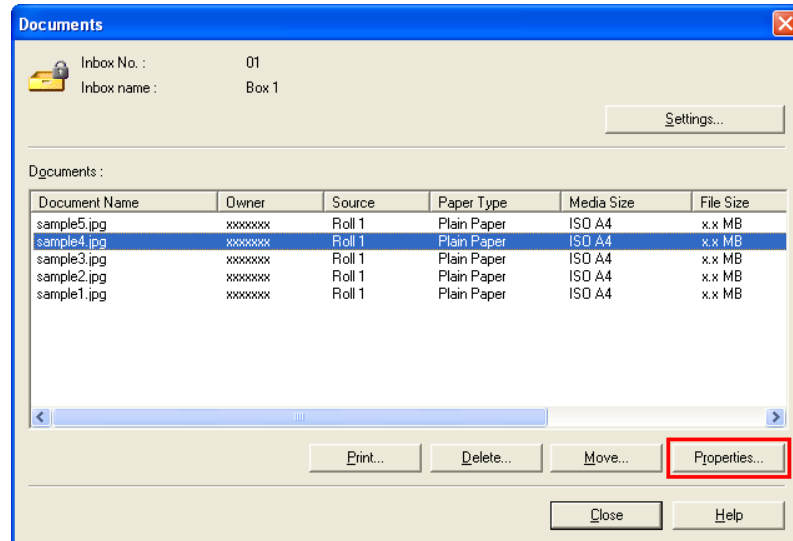

3. In the **Properties** dialog box, enter the new job name and click **OK**.

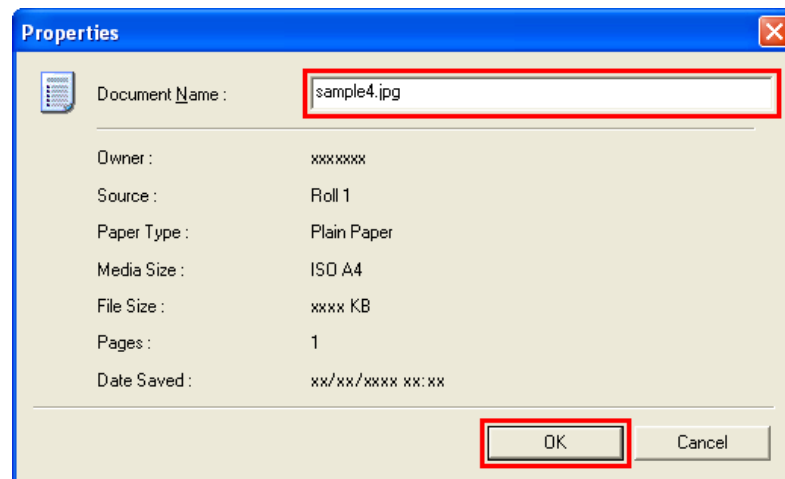

For details, refer to the imagePROGRAF Status Monitor help file.

## Using imagePROGRAF Printmonitor (Mac OS)

1. On the **Hard Disk** pane, click ► next to **Inbox No./Name** to list saved jobs.




### Note


- Enter a password if one has been set.  
The password is a four-digit number.



2. Select the saved job in the list and click **Set**.

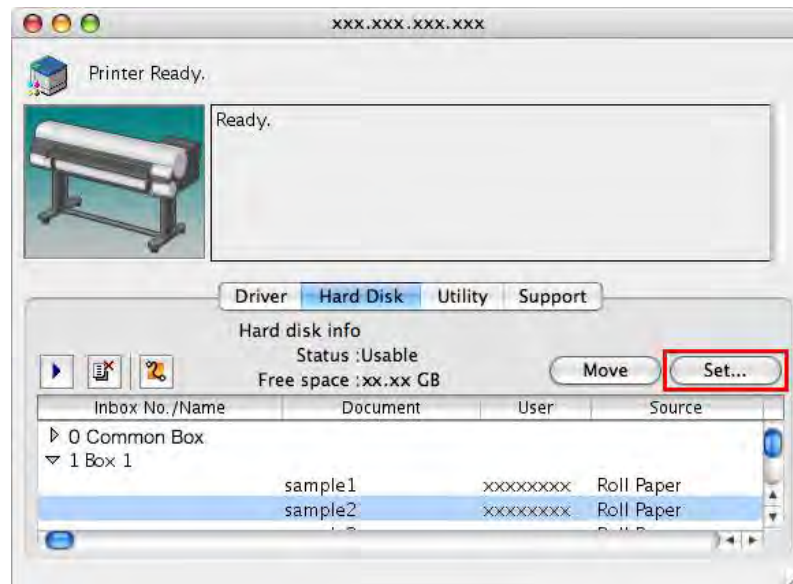


3. In the **Settings** dialog box, enter the new job name and click **OK**. Documents cannot be renamed unless a password has been set. In this case, specify a password. After renaming, you can cancel the password as needed.

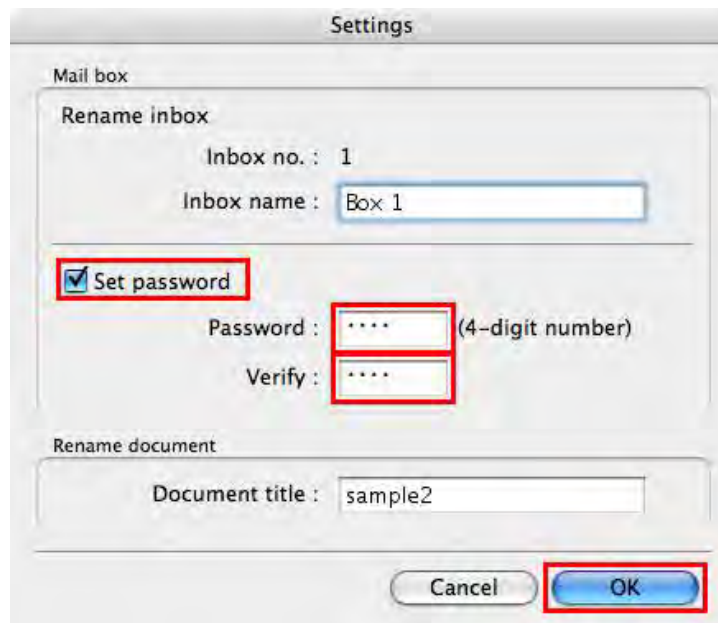

For details, refer to the imagePROGRAF Printmonitor help file.

## Handling Paper

Paper	617
Handling rolls	623
Handling sheets	650
Output Stacker	658

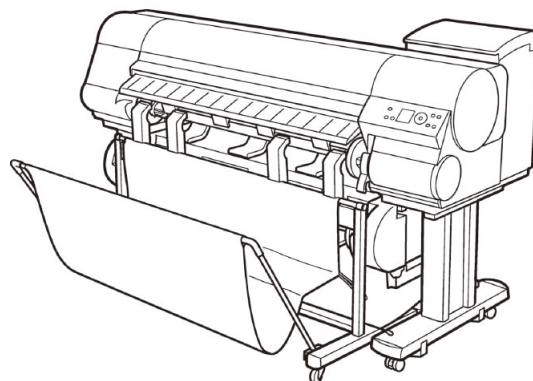



## Paper

Types of Paper .....	617
Paper Sizes .....	620

### Types of Paper

For information on the types of paper the printer supports (such as plain paper, coated paper, glossy photo paper, proofing paper, and CAD paper), refer to the Paper Reference Guide. The Paper Reference Guide identifies types of paper and gives specifications, printer driver settings, and tips on handling paper. (See Paper Reference Guide .)

By downloading the latest version of the Media Configuration Tool from the imagePROGRAF website, you can make sure the paper information indicated in the Paper Reference Guide, on the printer Control Panel, and in the printer driver is up to date.

### Accessing the Paper Reference Guide from imagePROGRAF Support Information

The Paper Reference Guide can also be accessed from **imagePROGRAF Support Information**. Follow these instructions, as appropriate for your operating system.


- Windows

1. Double-click the **iPFxxxx Support** desktop icon. (iPFxxxx indicates the printer model.)




The **imagePROGRAF Support Information** window is displayed.

2. Click the **Paper Reference Guide** button.

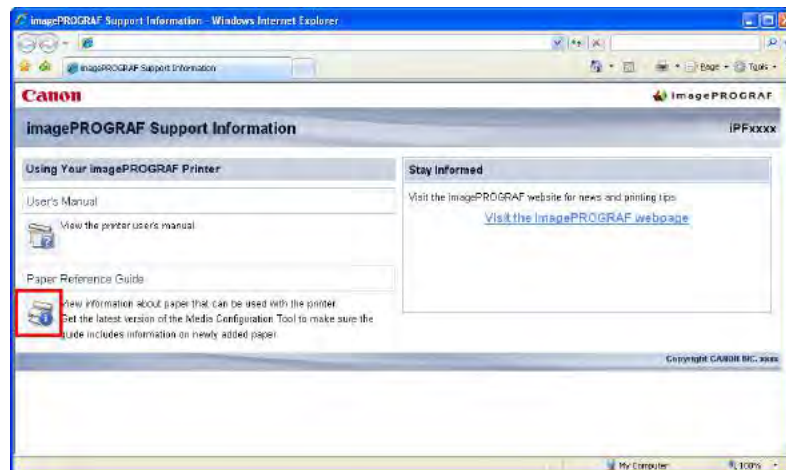

The Paper Reference Guide is displayed.

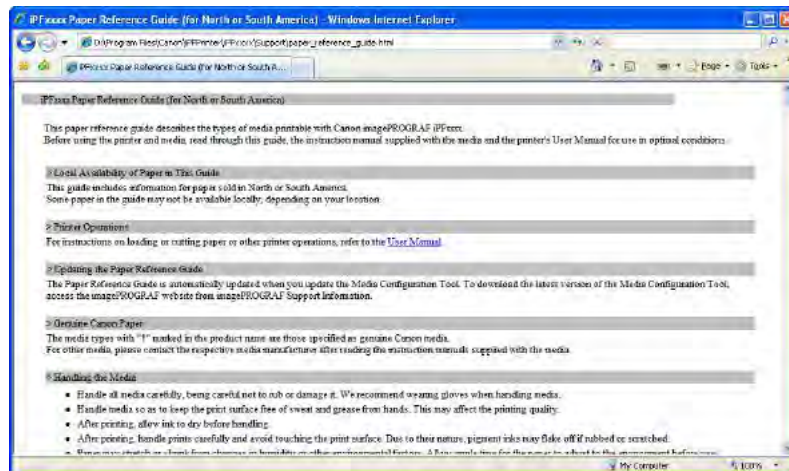

- Mac OS X

1. Click the **iPF Support** icon in the **Dock**.



The **imagePROGRAF Support Information** window is displayed.

2. Click the **Paper Reference Guide** button.



The Paper Reference Guide is displayed.



## Updating paper information

To update the paper information in the Paper Reference Guide and on the printer, download the latest version of the Media Configuration Tool from the imagePROGRAF website. For information about the Media Configuration Tool, see [Media Configuration Tool →P.406](#) (Windows) or [Media Configuration Tool →P.539](#) (Macintosh).

The imagePROGRAF website is accessible from **imagePROGRAF Support Information**.



### Important

- When you use the Media Configuration Tool to update information about paper, the types of paper on the printer Control Panel, in the printer driver, and in related software are updated.


#### • Windows

1. Double-click the **iPFxxxx Support** desktop icon. (iPFxxxx indicates the printer model.)



The **imagePROGRAF Support Information** window is displayed.

2. Click **Visit the imagePROGRAF webpage**.

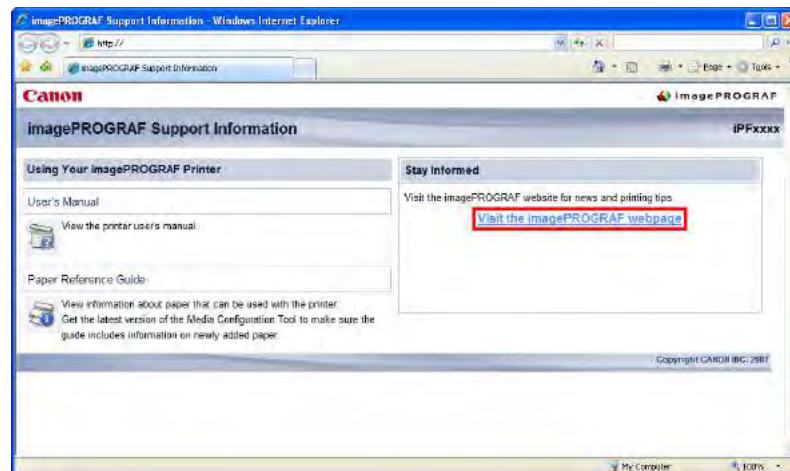

The default browser on your computer is started and the imagePROGRAF webpage is displayed.


#### • Mac OS X

1. Click the **iPF Support** icon in the **Dock**.



The **imagePROGRAF Support Information** window is displayed.

**2. Click Visit the imagePROGRAF webpage.**

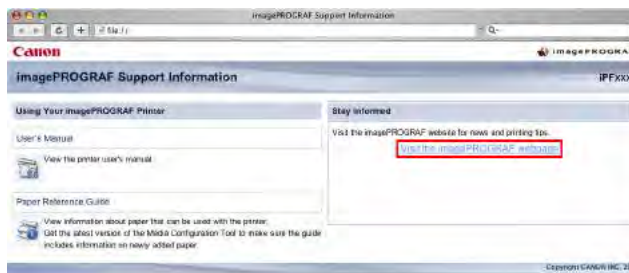

The default browser on your computer is started and the imagePROGRAF webpage is displayed.

## Paper Sizes

### Rolls

Rolls that meet the following conditions are supported.

- Outer diameter: up to 150 mm (6 in.)
- Inner diameter of paper core: 2 or 3 inches
- Printing side out

Roll Width	Roll Paper Width Settings in Printer Driver	Borderless Printing (*1 →P.620 )
1117.6 mm (44.00 in)	<b>44-in. Roll (1117.6mm)</b>	No
1066.8 mm (42.00 in)	<b>42-in. Roll (1066.8mm)</b>	Yes
1030.0 mm (40.55 in)	<b>JIS B0/B1 Roll (1030.0mm)</b>	Yes
914.4 mm (36.00 in)	<b>36-in. Roll (914.4mm)</b>	Yes
841.0 mm (33.11 in)	<b>ISO A0/A1 Roll (841.0mm)</b>	Yes
762.0 mm (30.00 in)	<b>30-in. Roll (762.0mm)</b>	No
728.0 mm (28.66 in)	<b>JIS B1/B2 Roll (728.0mm)</b>	No
609.6 mm (24.00 in)	<b>24-in. Roll (609.6mm)</b>	Yes
594.0 mm (23.39 in)	<b>ISO A1/A2 Roll (594.0mm)</b>	Yes
515.0 mm (20.28 in)	<b>JIS B2/B3 Roll (515.0mm)</b>	Yes
431.8 mm (17.00 in)	<b>17-in. Roll (431.8mm)</b>	Yes
420.0 mm (16.54 in)	<b>ISO A2/A3 Roll (420.0mm)</b>	No
406.4 mm (16.00 in)	<b>16-in. Roll (406.4mm)</b>	No
355.6 mm (14.00 in)	<b>14-in. Roll (355.6mm)</b>	Yes
297.0 mm (11.69 in)	<b>ISO A3/A4 Roll (297.0mm)</b>	No
254.0 mm (10.00 in)	<b>10-in. Roll (254.0mm)</b>	Yes
<b>Custom Paper Size</b>	203.2 mm (8.00 in.) – 1118.0 mm (44.02 in.)	

\*1: For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617

## Sheets

Sheets of the following sizes are supported.

Paper Sizes	Dimensions
<b>ISO A0</b>	841.0 × 1189.0 mm (33.11 × 46.81 in)
<b>ISO A1</b>	594.0 × 841.0 mm (23.39 × 33.11 in)
<b>ISO A2</b>	420.0 × 594.0 mm (16.54 × 23.39 in)
<b>ISO A2+</b>	431.8 × 609.6 mm (17.00 × 24.00 in)
<b>ISO A3</b>	297.0 × 420.0 mm (11.69 × 16.54 in)
<b>ISO A3+</b>	329.0 × 483.0 mm (12.95 × 19.02 in)
<b>ISO A4</b>	210.0 × 297.0 mm (8.27 × 11.69 in)
<b>ISO B0</b>	1000.0 × 1414.0 mm (39.37 × 55.67 in)
<b>ISO B1</b>	707.0 × 1000.0 mm (27.83 × 39.37 in)
<b>ISO B2</b>	500.0 × 707.0 mm (19.69 × 27.83 in)
<b>ISO B3</b>	353.0 × 500.0 mm (13.90 × 19.69 in)
<b>ISO B4</b>	250.0 × 353.0 mm (9.84 × 13.90 in)
<b>JIS B0</b>	1030.0 × 1456.0 mm (40.55 × 57.32 in)
<b>JIS B1</b>	728.0 × 1030.0 mm (28.66 × 40.55 in)
<b>JIS B2</b>	515.0 × 728.0 mm (20.28 × 28.66 in)
<b>JIS B3</b>	364.0 × 515.0 mm (14.33 × 20.28 in)
<b>JIS B4</b>	257.0 × 364.0 mm (10.12 × 14.33 in)
<b>34"x44" (ANSI E)</b>	863.6 × 1117.6 mm (34.00 × 44.00 in)
<b>28"x40" (ANSI F)</b>	711.2 × 1016.0 mm (28.00 × 40.00 in)
<b>22"x34" (ANSI D)</b>	558.8 × 863.6 mm (22.00 × 34.00 in)
<b>17"x22" (ANSI C)</b>	431.8 × 558.8 mm (17.00 × 22.00 in)
<b>11"x17" (Ledger)</b>	279.4 × 431.8 mm (11.00 × 17.00 in)
<b>13"x19" (Super B)</b>	330.2 × 482.6 mm (13.00 × 19.00 in)
<b>Letter (8.5"x11")</b>	215.9 × 279.4 mm (8.50 × 11.00 in)
<b>Legal (8.5"x14")</b>	215.9 × 355.6 mm (8.50 × 14.00 in)
<b>36"x48" (ARCH E)</b>	914.4 × 1219.2 mm (36.00 × 48.00 in)
<b>30"x42" (ARCH E1)</b>	762.0 × 1066.8 mm (30.00 × 42.00 in)
<b>26"x38" (ARCH E2)</b>	660.4 × 965.2 mm (26.00 × 38.00 in)
<b>27"x39" (ARCH E3)</b>	685.8 × 990.6 mm (27.00 × 39.00 in)
<b>24"x36" (ARCH D)</b>	609.6 × 914.4 mm (24.00 × 36.00 in)
<b>18"x24" (ARCH C)</b>	457.2 × 609.6 mm (18.00 × 24.00 in)
<b>12"x18" (ARCH B)</b>	304.8 × 457.2 mm (12.00 × 18.00 in)
<b>9"x12" (ARCH A)</b>	228.6 × 304.8 mm (9.00 × 12.00 in)
<b>DIN C0</b>	917.0 × 1296.0 mm (36.10 × 51.02 in)
<b>DIN C1</b>	648.0 × 917.0 mm (25.51 × 36.10 in)

Paper Sizes	Dimensions
<b>DIN C2</b>	458.0 × 648.0 mm (18.03 × 25.51 in)
<b>DIN C3</b>	324.0 × 458.0 mm (12.76 × 18.03 in)
<b>DIN C4</b>	229.0 × 324.0 mm (9.02 × 12.76 in)
<b>20"x24"</b>	508.0 × 609.6 mm (20.00 × 24.00 in)
<b>18"x22"</b>	457.2 × 558.8 mm (18.00 × 22.00 in)
<b>14"x17"</b>	355.6 × 431.8 mm (14.00 × 17.00 in)
<b>12"x16"</b>	304.8 × 406.4 mm (12.00 × 16.00 in)
<b>10"x12"</b>	254.0 × 304.8 mm (10.00 × 12.00 in)
<b>10"x15"</b>	254.0 × 381.0 mm (10.00 × 15.00 in)
<b>8"x10"</b>	203.2 × 254.0 mm (8.00 × 10.00 in)
<b>US Photo 16"x20"</b>	406.4 × 508.0 mm (16.00 × 20.00 in)
<b>Poster 20"x30"</b>	508.0 × 762.0 mm (20.00 × 30.00 in)
<b>Poster 30"x40"</b>	762.0 × 1016.0 mm (30.00 × 40.00 in)
<b>Poster 42"x60"</b>	1066.8 × 1524.0 mm (42.00 × 60.00 in)
<b>Poster 44"x62"</b>	1117.6 × 1574.8 mm (44.00 × 62.00 in)
<b>13"x22"</b>	329.0 × 558.0 mm (12.95 × 21.97 in)
<b>Poster 300x900mm</b>	300.0 × 900.0 mm (11.81 × 35.43 in)
<b>Custom Paper Size</b>	203.2 × 203.2 mm (8.00 × 8.00 in.) – 1118.0 × 1600.0 mm (44.02 × 62.99 in.)

**Note**

- In the printer driver, paper sizes are categorized into groups based on the **Display Series**, such as ISO A or JIS.  
In Windows, some size systems are not available by default. Follow these steps to make them available.
  1. Display the printer driver dialog box.
  2. Click the **Page Setup** tab to display the **Page Setup** sheet.
  3. Click **Size Options** to display the **Paper Size Options** dialog box.
  4. Select the Display Series check box.
    - For details on non-standard paper sizes, see "Printing on Non-Standard Paper Sizes." →P.124
    - Borderless printing is not supported on sheets.






## Handling rolls

Attaching the Roll Holder to Rolls ..... 623  
 Loading Rolls in the Printer ..... 628  
 Selecting the Paper Source ..... 631  
 Selecting the Paper Type (Roll) ..... 632  
 Specifying the Paper Length (Roll) ..... 633  
 Removing the Roll from the Printer ..... 634  
 Removing the Roll Holder from Rolls ..... 637  
 Feeding Roll Paper Manually ..... 638  
 Keeping Track of the Amount of Roll Paper Left ..... 639  
 Specifying the Ink Drying Time for Rolls ..... 640  
 Specifying the Cutting Method for Rolls ..... 642  
 Cutting the Leading Edge of Roll Paper Automatically ..... 647  
 Reducing Dust from Cutting Rolls ..... 648  
 Roll Holder Set ..... 649

### Attaching the Roll Holder to Rolls

When printing on rolls, attach the Roll Holder to the roll.


Rolls have a two- or three-inch paper core. Use the correct attachment for the paper core. The printer comes equipped with the 2-Inch Paper Core Attachment installed.

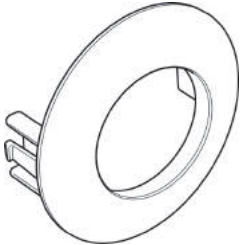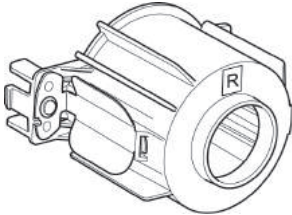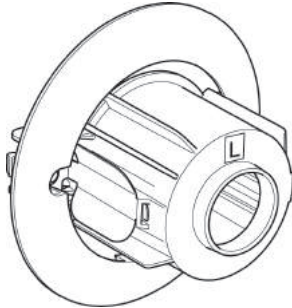Using the 2-Inch Paper Core Attachment		Using the 3-Inch Paper Core Attachment	
Roll Holder Side	Holder Stopper Side	Roll Holder Side	Holder Stopper Side
No Attachment Needed	2-Inch Paper Core Attachment 	3-Inch Paper Core Attachment #1 	3-Inch Paper Core Attachment #2 




**Important**

- Cut the edge of the roll paper if it is uneven, dirty, or has tape residue. Otherwise, it may cause feeding problems and affect the printing quality. Be careful not to cut through any barcodes printed on the roll.

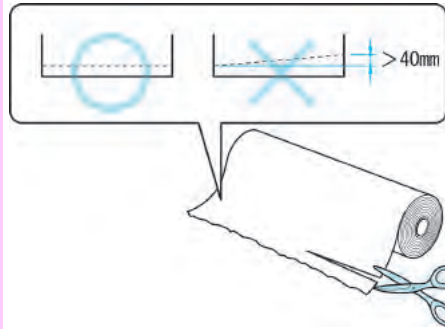

- Align the edges of the paper on both ends of the roll. This may cause feeding problems.

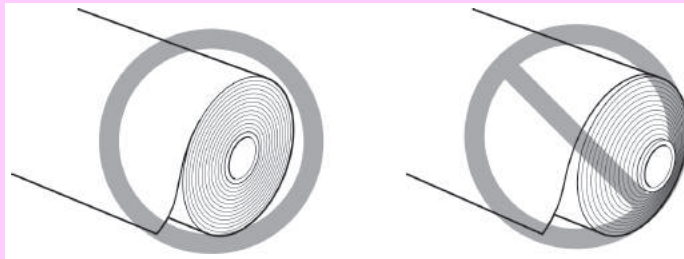

**Caution**


- Set the roll on a table or other flat surface so that it does not roll or fall. Rolls are heavy, and dropping a roll may cause injury.




**Note**

- For details on supported sizes and types of rolls, see **Paper Sizes** or the Paper Reference Guide. (See "Paper Sizes.") →P.620 (See "Types of Paper.") →P.617
- After pressing the **Load/Eject** button, you can refer to instructions on the Display Screen as you load the paper.


1. Lift the Holder Stopper lever (a) from the shaft side to unlock it. Holding the Holder Stopper at the position indicated (b), remove it from the Roll Holder.

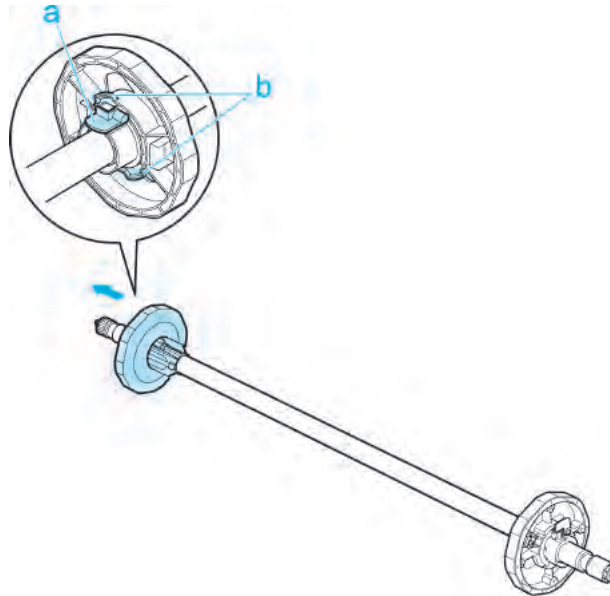

2. When using a 3-inch paper core, align the tips (a) of 3-Inch Paper Core Attachment #1 with the holes (b) of the Roll Holder and insert it firmly.

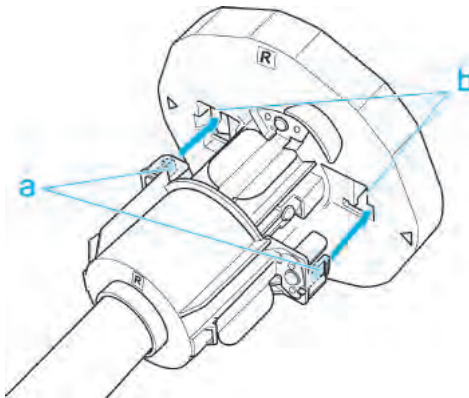


3. With the edge of the roll paper facing forward as shown, insert the Roll Holder from the right of the roll. Insert it firmly until the roll touches the flange (a) of the Roll Holder.

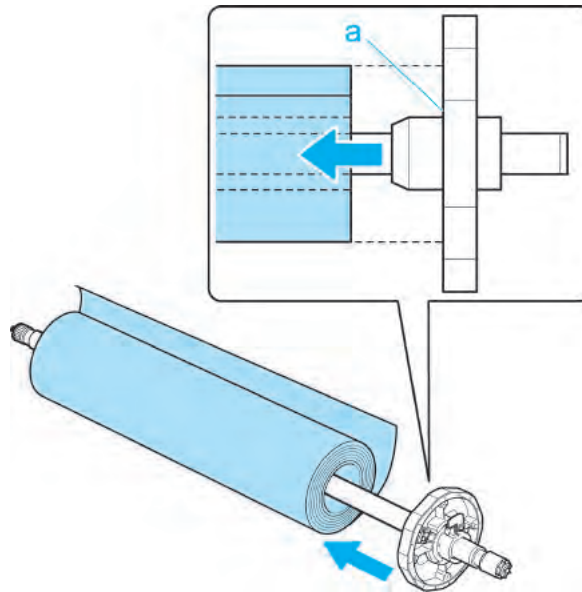


**Important**

- When loading a roll, be careful to avoid hitting the printer hard with the roll. This may damage the Roll Holder.


4. Insert the attachments for the roll paper core on the Holder Stopper. Align the tips (a) of the attachment with the holes (b) of the Holder Stopper and insert it firmly.
  - 3-Inch Paper Core Attachment #2

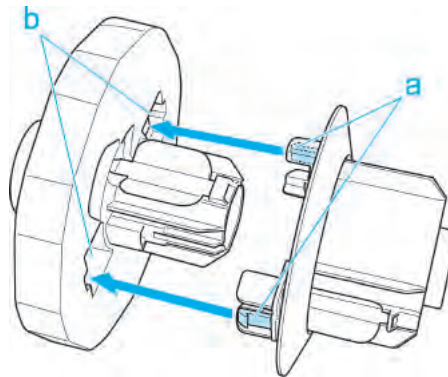

- 2-Inch Paper Core Attachment

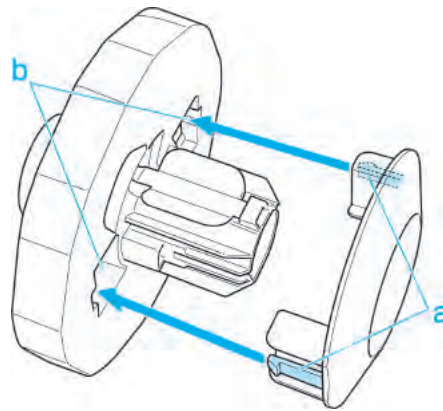

5. Insert the Holder Stopper from the left in the Roll Holder as shown. Holding it at the position shown (b), push it firmly in until the flange (a) of the Holder Stopper touches the roll. Lock the Holder Stopper lever (c) by pushing it down toward the shaft side.

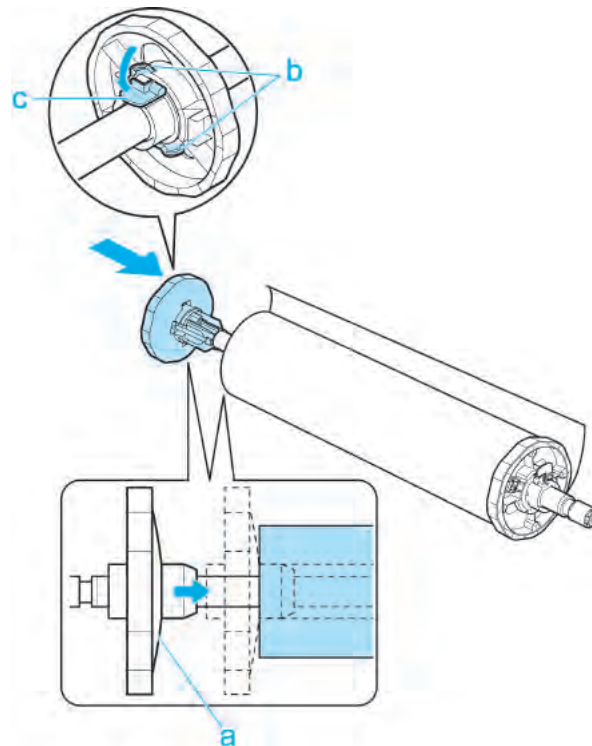

## Loading Rolls in the Printer

Follow these steps to load rolls in the printer.




### Note

- Remove any loaded paper that will not be used.
  - Rolls (See "Removing the Roll from the Printer.") →P.634
  - Sheet (See "Removing Sheets.") →P.656
- If the Platen is dirty, clean inside the Top Cover. (See "Cleaning Inside the Top Cover.") →P.837
- After pressing the **Load/Eject** button, you can refer to instructions on the Display Screen as you load the paper. (See "Checking Instructions During Printer Operations.") →P.743

1. Confirm that a roll is selected as the paper source. (See "Selecting the Paper Source.") →P.631




2. Open the Top Cover and lift the Ejection Guide.

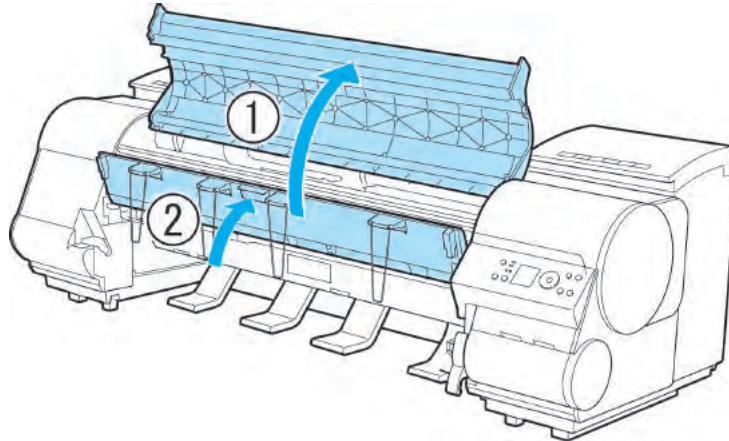



3. Holding the Roll Holder so that the side with the white gear faces the side of the Roll Holder Slot with a white gear, load the Roll Holder shaft (a) into the grooves (b) on both ends of the Roll Holder Slot.

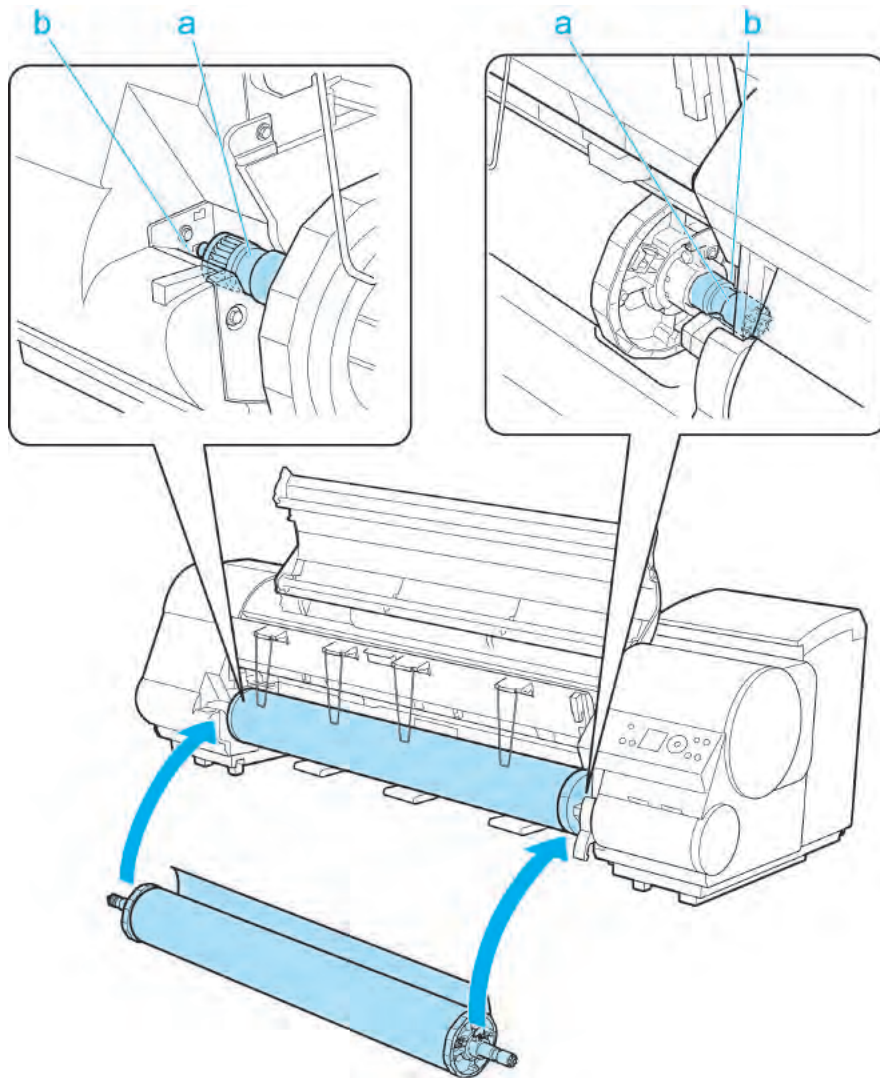

#### Caution

- Be careful not to pinch your fingers between the Roll Holder shaft (a) and the guide grooves (b) when loading rolls.




#### Note

- For instructions on attaching the Roll Holder to rolls, see "Attaching the Roll Holder to Rolls."


→P.623

4. Pull out the roll paper evenly on both ends. Using both hands, insert the roll paper in the Paper Feed Slot and advance it until the buzzer sounds.

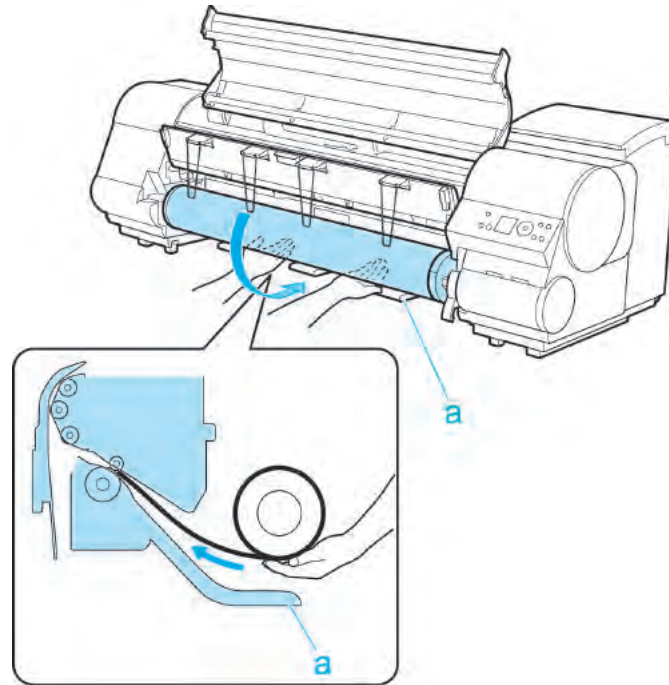


**Important**


- Be careful not to soil the printing surface of roll paper as you insert it in the slot. This may affect the printing quality. We recommend wearing clean cloth gloves when handling rolls to protect the printing surface.
- If the paper is wrinkled or warped, straighten it out before loading it.
- Load the roll so that there is no gap between the right edge of the paper and the Roll Holder.

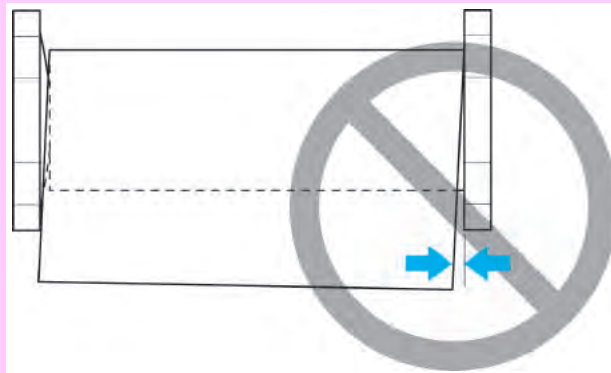

## 5. Lower the Ejection Guide.

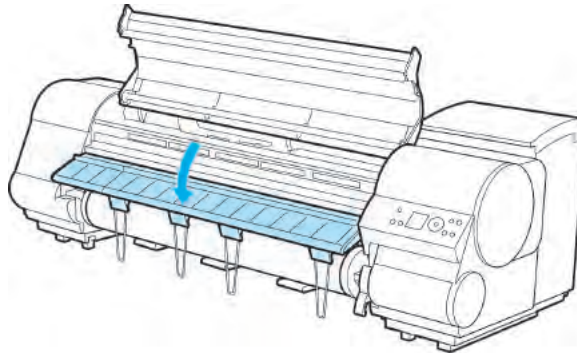

## 6. Close the Top Cover.

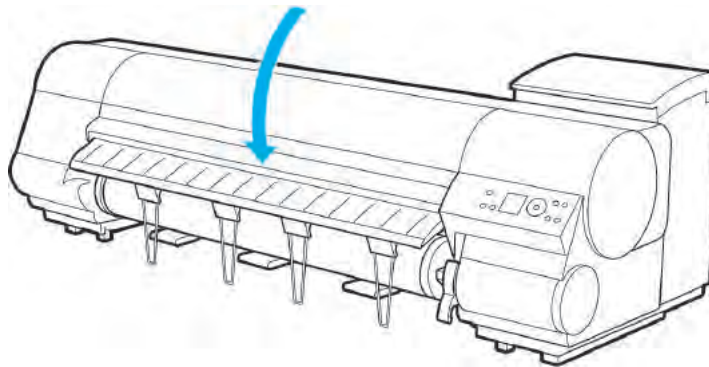

## 7. Press the OK button.

The printer will now advance the paper.


After you load a roll, the printer automatically shows a menu for selection of the type of paper on the Display Screen. At this point, specify the type of paper. (See "Selecting the Paper Type (Roll).") →P.632

## Selecting the Paper Source

When advancing paper, press the **Feeder Selection** button and select the source.

You can determine the selected source by checking which lamp is lit—either the **Roll Media lamp** (a) or the **Cut Sheet lamp** (b).

- **Roll Media lamp** : Selected when printing on Roll Media.
- **Cut Sheet lamp** : Selected when printing on Sheets.

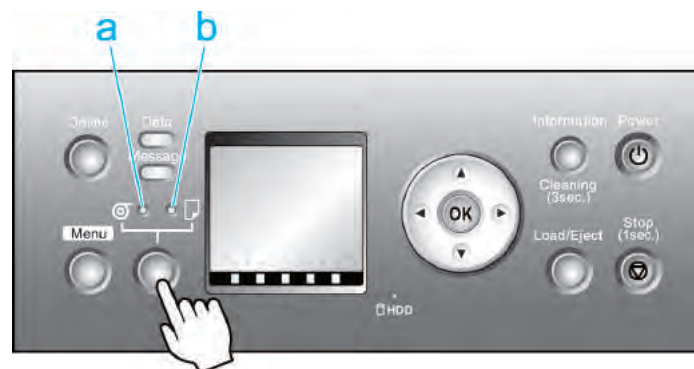



**Note**

- If a sheet is loaded when you change the paper source to a roll, "Eject sheet?" is displayed. Press the **OK** button and remove the sheet.
- You cannot switch the paper source in the following situations:
  - **When the Message lamp is flashing**  
Check the message on the Display Screen and take action as necessary. (See "Error Messages →P.891 .")
  - **When the Data lamp is flashing**  
Select the paper source after printing is finished.
  - **When a printer menu operation is in progress**  
Wait until the operation is finished before selecting the paper source.
  - **When in the process of loading paper**  
Finish loading the paper before selecting the paper source.
  - **When in the process of replacing Ink Tank**  
Finish replacing the Ink Tank before selecting the paper source.
  - **When the Top Cover is open**  
Close the Top Cover before selecting the paper source.

## Selecting the Paper Type (Roll)

7

When changing the type of paper after the paper has been advanced, specify the type of paper as follows.



**Important**

- For best printing results, the printer fine-tunes the feed amount for each type of paper. Be sure to select the type of paper to use correctly before printing.
- Because the printer fine-tunes the feed amount for each type of paper, the margins and the size of printed images may vary depending on the type of paper used. If margins and the size of images are not as you expected, adjust the paper feed amount and Printhead height.  
(See "Adjusting the Feed Amount." →P.676  
(See "Troubleshooting Paper Abrasion and Blurry Images (Head Height)." →P.675



**Note**

- After you load the roll, the printer automatically shows a menu for selection of the paper type on the Display Screen, unless a barcode has been printed on the roll or you have activated automatic monitoring of the remaining roll paper. Select the type of paper, and then press the **OK** button.  
If no barcode has been printed on the roll and you have activated automatic monitoring of the remaining roll paper, specify the roll length after the paper type. (See "Specifying the Paper Length (Roll)." →P.633

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **Media Menu**, and then press the ► button.
3. Press ▲ or ▼ to select **Roll Media Type**, and then press the ► button.
4. Press ▲ or ▼ to select the type of paper loaded in the printer, and then press the **OK** button.

**Note**

- For details on types of paper, see the Paper Reference Guide. (See "Types of Paper.") →P.617 By default, Plain Paper is selected.
- If you move the Release Lever, the setting automatically reverts to the previously selected paper.
- Be sure to select the correct paper type. If this setting does not match the loaded paper, it may cause feed errors and affect printing quality.
- If automatic monitoring of the remaining roll is deactivated ( **Off** is selected) and you have selected a type of paper for which width detection is deactivated ( **Off** is selected), you must advance the paper manually to the position for printing. (See "Manually Loading Paper to the Position for Printing.")

→P.654

5. Press the **Online** button to bring the printer online.



7

## Specifying the Paper Length (Roll)

When changing the length of paper after the paper has been advanced, specify the length as follows.

**Note**

- When you specify the roll length in the printer menu, **ManageRemainRoll** must be set to **On**.
- After you select the type of roll, the printer automatically shows a menu for selection of the roll length on the Display Screen if no barcode has been printed on the roll and you have set **ManageRemainRoll** to **On**. Select the roll length, and then press the **OK** button. The printer will automatically go online.

1. Press the **Menu** button to display **MAIN MENU**.



633

2. Press ▲ or ▼ to select **Media Menu**, and then press the ► button.
3. Press ▲ or ▼ to select **Roll Length Set**, and then press the ► button.
4. Press ▲ or ▼ to select the length of paper loaded in the printer, and then press the **OK** button. Specify the roll length as follows.
  1. Press ◀ or ▶ to move the cursor ( ) to each field for entering numbers.
  2. Press the ▲ or ▼ button to enter the value.
  3. Repeat steps 1 and 2 to finish entering the value, and then press the **OK** button.
5. Press the **Online** button to bring the printer online.




## Removing the Roll from the Printer

Remove rolls from the printer as follows.



### Note

- If you need to cut a printed roll, select **Paper Cutting** in the printer menu and cut the roll at the desired position. (See "Specifying the Cutting Method for Rolls.") →P.642
- If you have selected **Media Menu > ManageRemainRoll > On** in the printer menu, a barcode indicating the amount of paper left is printed on the leading edge of the roll. However, barcodes are not printed on some types of paper, and only a text message indicating paper information is printed.

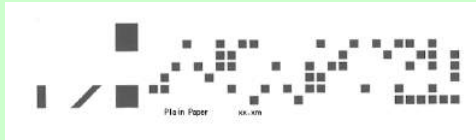

### Caution


- If you have activated automatic monitoring of the remaining roll paper, do not remove the roll before the barcode is printed. You will be unable to keep track of the amount of roll paper left.




1. Press the **Load/Eject** button.  
A confirmation message is displayed regarding removal of the roll.




2. Press the **OK** button.  
The roll can now be removed.
3. Open the Top Cover and lift the Ejection Guide.

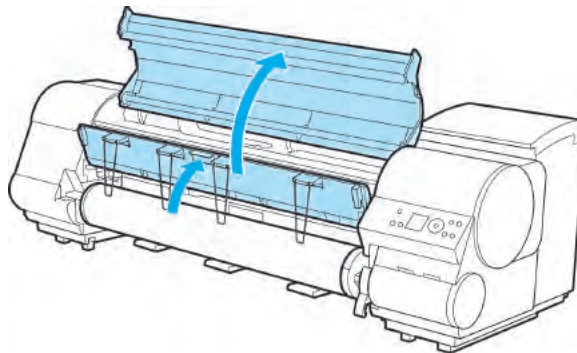

4. Using both hands, rotate the Roll Holder in the direction of the arrow to rewind the roll.

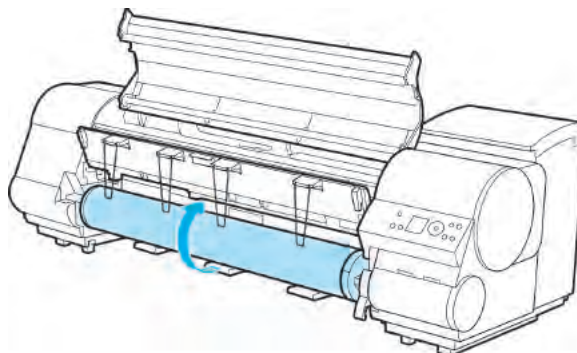


**5.** Remove the Roll Holder from the Roll Holder Slot.

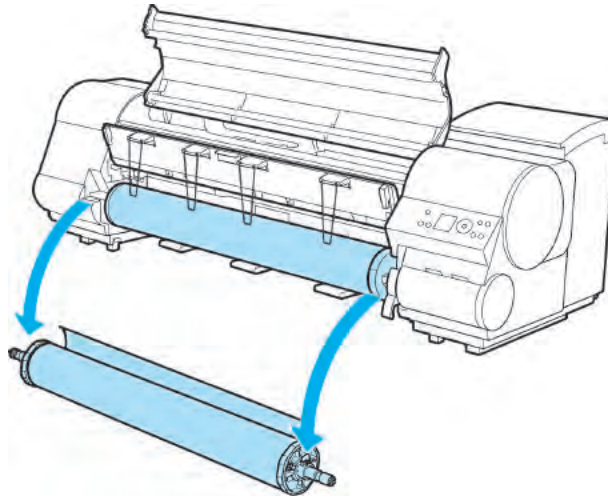

**Note**

- For instructions on removing the Roll Holder from rolls, see "Removing the Roll Holder from Rolls." →P.637

**6.** Lower the Ejection Guide and close the Top Cover.

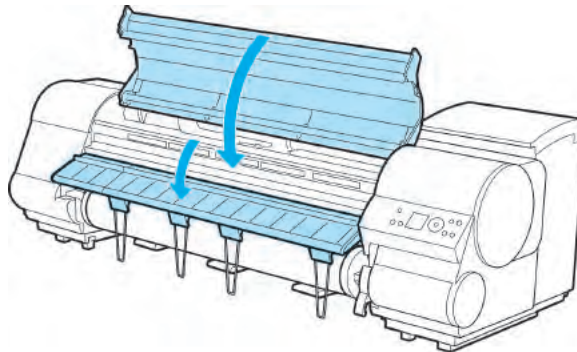


**Note**


- To load new paper in the printer at this point, see "Loading Rolls in the Printer." →P.628

## Removing the Roll Holder from Rolls


1. Lift the Holder Stopper lever (a) from the shaft side to unlock it. Holding the Holder Stopper at the position indicated (b), remove it from the Roll Holder.

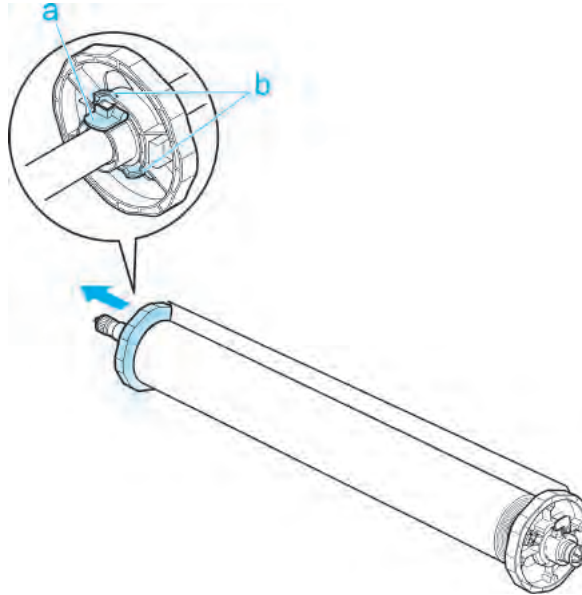


2. Remove the Roll Holder from the roll.

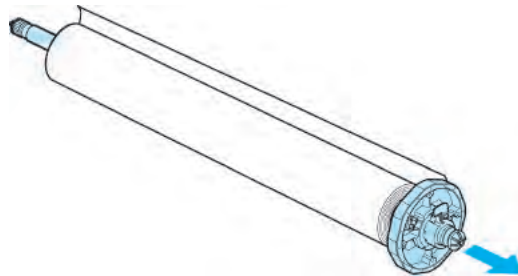


3. When removing attachments, push the tips (a) in as you remove the attachment.
  - 3-Inch Paper Core Attachment #1 ( Roll Holder side)

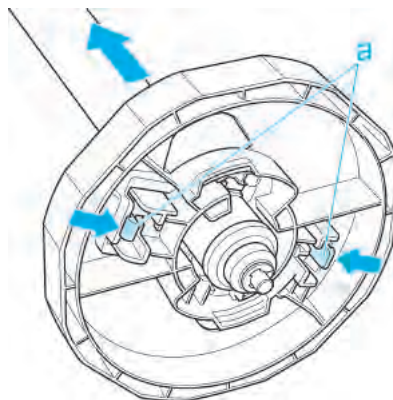

- 3-Inch Paper Core Attachment #2 ( Holder Stopper side)

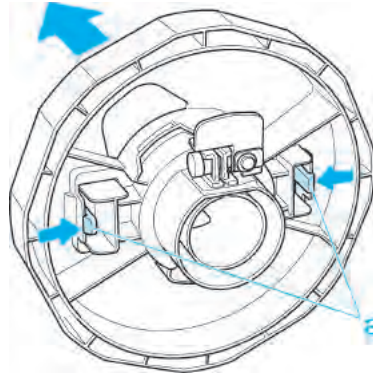

- 2-Inch Paper Core Attachment

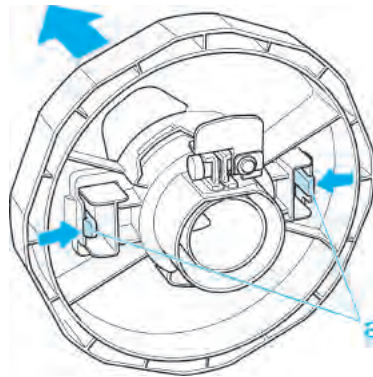


**Important**

- Store the roll in the original bag or box, away from high temperature, humidity, and direct sunlight. If paper is not stored properly, the printing surface may become scratched, which may affect the printing quality when you use it again.

## Feeding Roll Paper Manually

When the printer is offline, you can advance or retract the roll on the Platen by pressing ▲ or ▼.

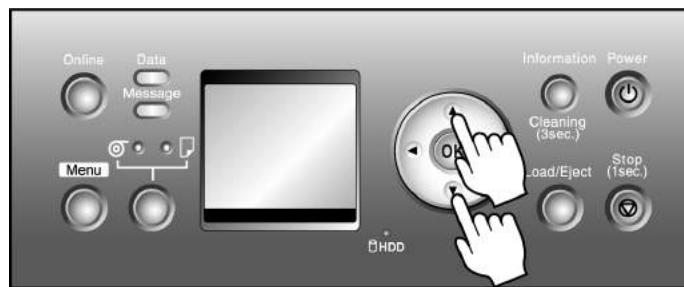

1. Press the **Online** button to bring the printer offline.
2. Confirm that a roll is selected as the paper source. (See "Selecting the Paper Source.") →P.631


- Press the ▲ or ▼ button to advance or retract the roll.  
Press ▲ to retract the roll manually.  
Press ▼ to advance the roll manually.

**Note**

- Holding down ▲ or ▼ for less than a second moves the roll about 1 mm (0.04 in).  
Holding down ▲ or ▼ for more than a second moves the roll until you release the button. Release the button when the Display Screen indicates "End of paper feed. Cannot feed paper more."

## Keeping Track of the Amount of Roll Paper Left

If you have activated automatic monitoring of the remaining roll paper, when the roll is ejected, a barcode with text is printed on the roll paper that identifies the type of paper and amount left. When this function is activated and barcodes are printed on the roll paper, the type of paper and amount left are automatically detected after rolls are loaded. The barcode will be cut off after it has been read.

**Note**

- If the document is not cut but kept in the printer, only the text message is printed.

**Important**

- Because this function is not compatible with clear film, an error message may be displayed ( "The roll is empty." ) after you load clear film. For this reason, deactivate the function before loading clear film.
- If the barcode on the roll is not detected, enter the type and length of paper on the Control Panel.

Follow these steps to activate monitoring of the remaining roll paper.

- Press the **Menu** button to display **MAIN MENU**.




- Press ▲ or ▼ to select **Media Menu**, and then press the ► button.
- Press ▲ or ▼ to select **ManageRemainRoll**, and then press the ► button.
- Press ▲ or ▼ to select the setting, and then press the **OK** button.

## Specifying the Ink Drying Time for Rolls

When you are using paper that takes longer for ink to adhere, if the Cutter touches printed surfaces that are still wet, it may damage the paper or cause rough cut edges. Also, ink may be transferred onto the paper surface during ejection, soiling it. You can prevent problems by adjusting the drying time after printing before the paper is cut.


### Windows

1. Display the printer driver dialog box.  
(See "Accessing the Printer Driver Dialog Box from the Operating System Menu (Windows).") →P.213
2. Select the **Main** sheet and click **C Advanced Settings** in **A Media Type**.

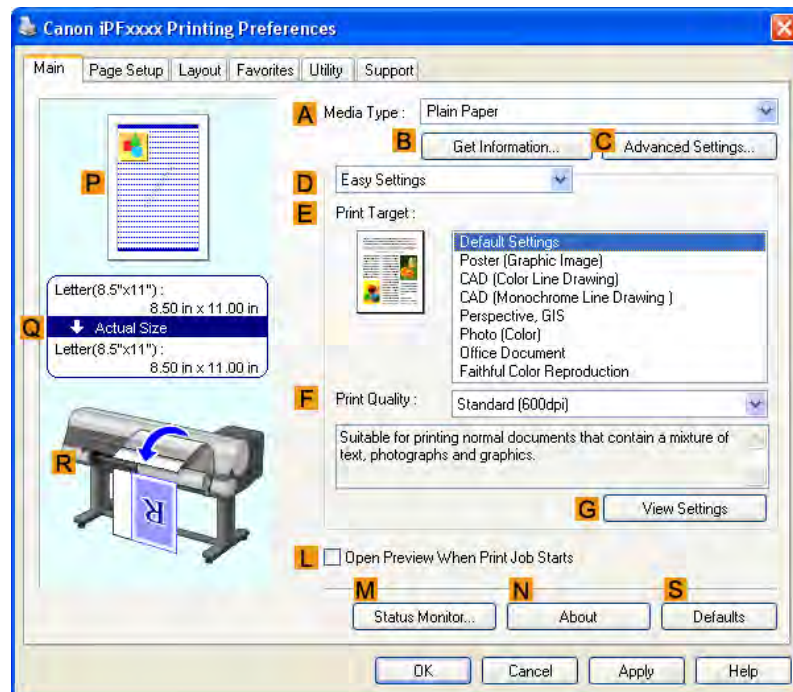




3. In the **Paper Detailed Settings** dialog box displayed next, select the desired settings values in **B Between Pages** and **C Between Scans** in **A Drying Time**, and then click **OK**.  
(See "Paper Detailed Settings Dialog Box (Windows).") →P.219

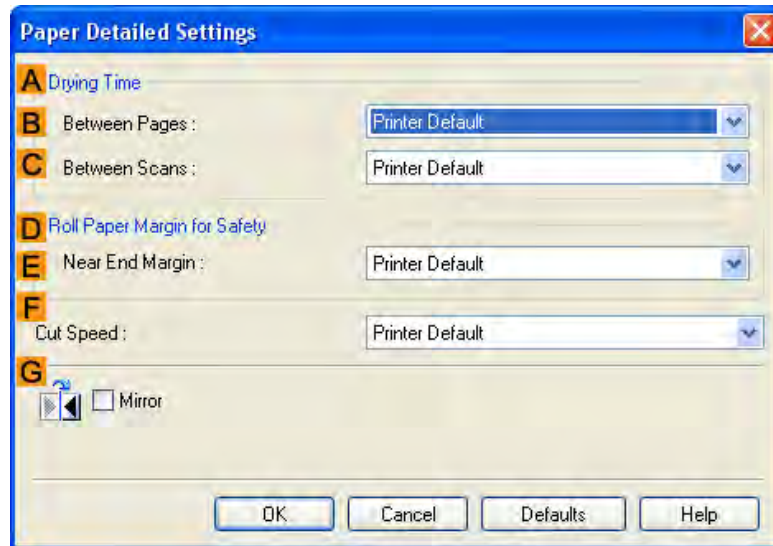

## Mac OS X

1. Choose **Print** in the application menu.
2. Select the **Main** pane and click **C Settings** in **A Media Type**.

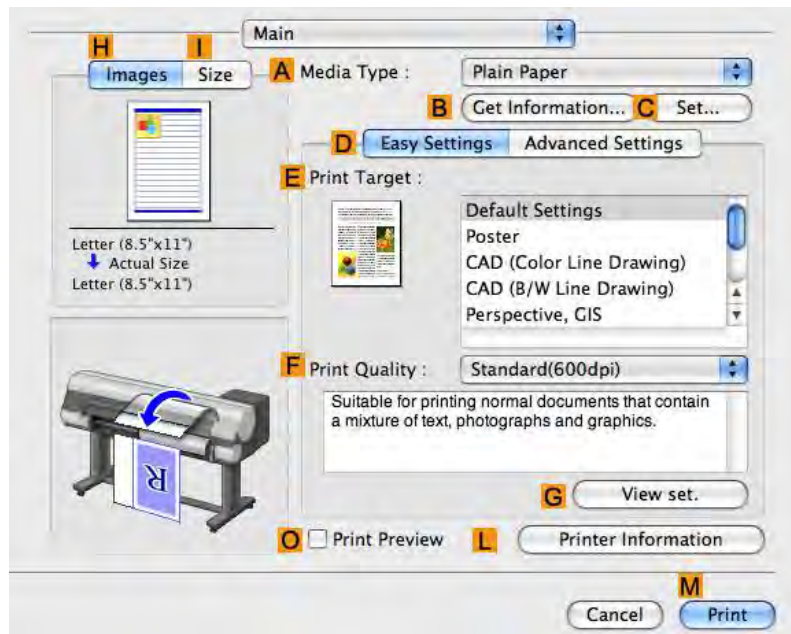

- In the **Paper Detailed Settings** dialog box displayed next, select the desired settings values in **C Between Pages** and **D Between Scans** in **B Drying Time**, and then click **OK**.  
(See "Paper Detailed Settings Dialog Box (Mac OS X).") →P.438



**Note**

- By factory default, **Drying Time** is deactivated (**Off**) for all paper types.
- To have the printer wait for ink to dry immediately after printing without releasing paper, set **Cutting Mode** to **Eject** in the printer menu.  
(See "Specifying the Cutting Method for Rolls.") →P.642

## Specifying the Cutting Method for Rolls

How a roll is cut after ejection varies depending on the printer settings.

Cutting Method		Menu Settings		Driver Setting	
Automatic	The roll is automatically cut by the Cutter Unit following printer driver settings.	<b>Cutting Mode</b>	<b>Automatic</b>	<b>Auto Cut</b>	<b>Yes</b>
<b>Eject</b> →P.643	Choose this setting if you prefer not to have documents dropped immediately after printing, as when waiting for ink to dry. To cut the roll using the Cutter Unit, hold down the <b>Stop</b> button for a second or more.		<b>Eject</b>		<b>Yes</b>
<b>Manual</b> →P.644	Choose this setting when using media that cannot be cut using the Cutter Unit. Cut each page from the roll using scissors. For continuous printing (if you will cut each page later), in <b>Auto Cut</b> , select <b>Yes</b> , or select <b>Print Cut Guideline</b> .		<b>Manual</b>	<b>No Yes Print Cut Guideline</b>	

Cutting Method		Menu Settings		Driver Setting	
Manual →P.644	(See "Cutting Roll Paper After Printing.") →P.196	<b>Cutting Mode</b>	<b>Manual</b>	<b>Auto Cut</b>	<b>No Yes Print Cut Guideline</b>
Paper Cutting →P.646	Choose this option if you want to cut pages by pressing Cutter Unit buttons for manual cutting after printing when the printer driver is configured to <b>Auto Cut &gt; No</b> or <b>Print Cut Guideline</b> . Otherwise choose this option if you want to cut the roll edge after loading a roll.	<b>Paper Cutting</b>	<b>Yes</b>		<b>No Print Cut Guideline</b>




**Note**

- Automatic and Eject are valid only when you have specified **Auto Cut > Yes** in the printer driver.
- With Eject, printing does not resume after a series of jobs have been printed continuously until the roll is cut.

Cut rolls manually in the following cases:

**Eject (waiting for ink to dry after printing)**

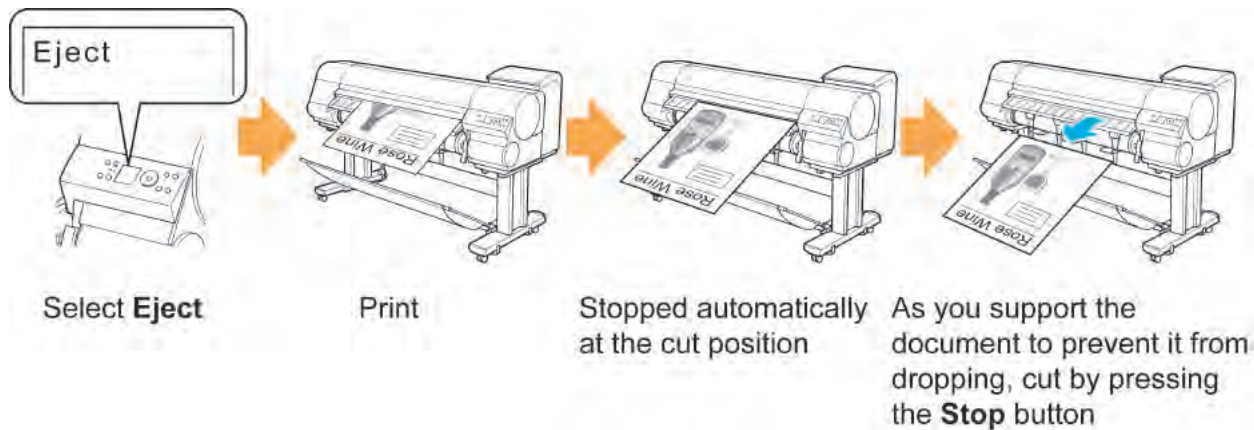

**Important**

- When cutting wide printed documents after ejection, have two people support the documents. If the paper drops, printed documents may be damaged.
- Do not lift the paper when holding printed documents before cutting. If the paper rises, it may affect the printing quality.

**1.** Press the **Menu** button to display **MAIN MENU**.




**2.** Press **▲** or **▼** to select **Paper Details**, and then press the **▶** button.

3. Press ▲ or ▼ to select the type of paper, and then press the ► button.
4. Press ▲ or ▼ to select **Cutting Mode**, and then press the ► button.
5. Press ▲ or ▼ to select **Eject**, and then press the **OK** button.
6. Start printing.  
Roll paper is fed to the specified cut position and then automatically stopped.
7. As you support the printed document to prevent it from dropping, hold down the **Stop** button for at least a second to cut the roll.



7

Manual (when using media that cannot be cut using the Cutter Unit )

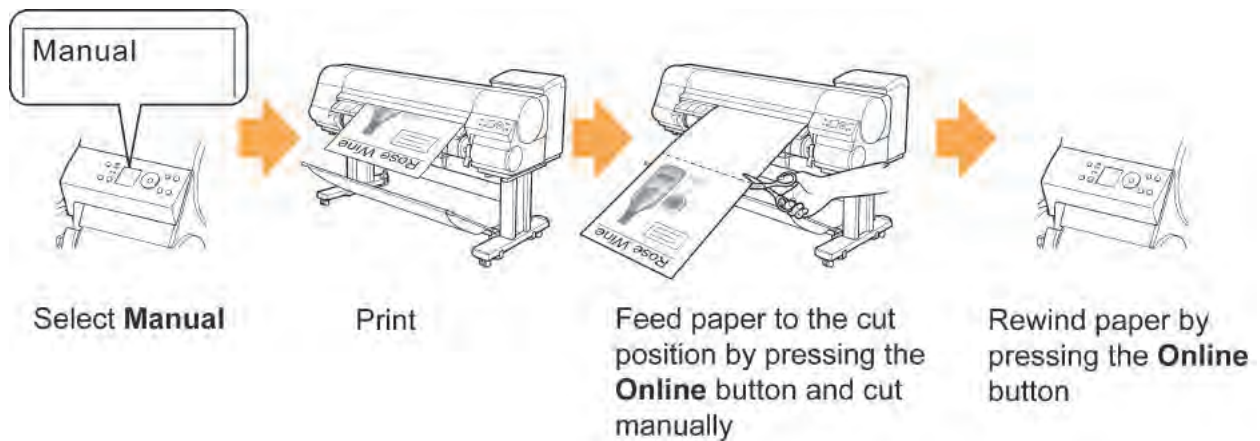

1. Press the **Menu** button to display **MAIN MENU**.




2. Press ▲ or ▼ to select **Paper Details**, and then press the ► button.

3. Press ▲ or ▼ to select the type of paper, and then press the ► button.
4. Press ▲ or ▼ to select **Cutting Mode**, and then press the ► button.
5. Press ▲ or ▼ to select **Manual**, and then press the **OK** button.
6. Start printing.  
The printer stops advancing the paper after printing.
7. Press the **Online** button.



Roll paper is fed to the specified cut position and then automatically stopped.

8. Cut the roll paper manually with scissors or the like.

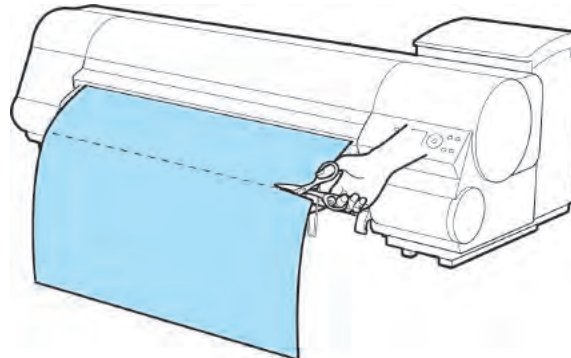


9. Press the **Online** button.




The roll is rewound, and rewinding stops automatically.



Paper Cutting (to have the roll cut at your specified position)

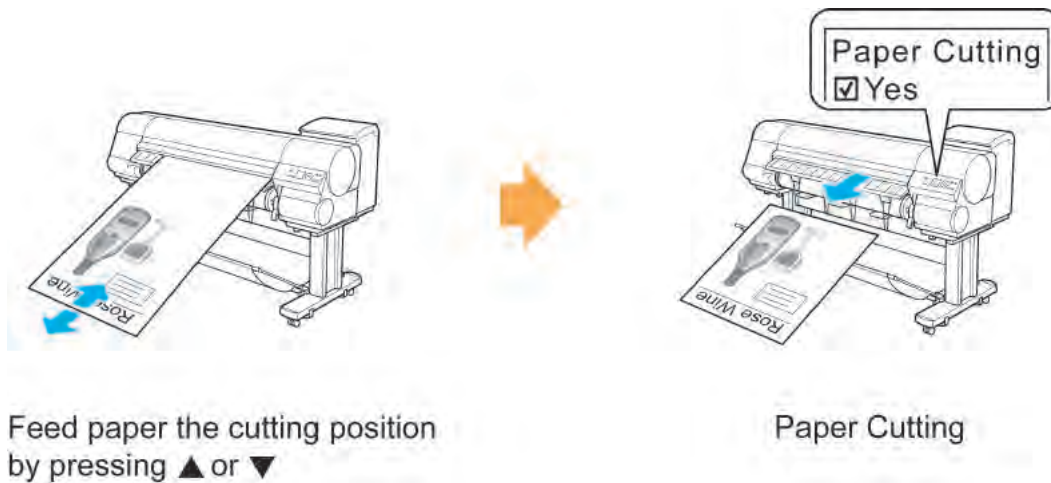


1. After pressing the **Online** button to bring the printer offline, press ▲ or ▼ to advance the roll paper to the position for cutting.

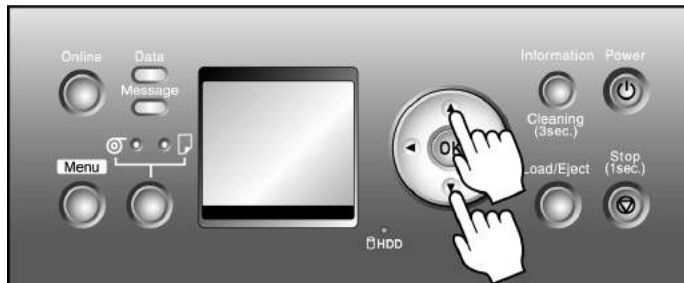

2. Press the **Menu** button to display **MAIN MENU**.



3. Press ▲ or ▼ to select **Paper Cutting**, and then press the ► button.
4. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
After the roll paper is cut, it is rewind automatically.



**Caution**

- If paper would be short when cut at a particular position, the roll may automatically be advanced in some cases before cutting.




## Cutting the Leading Edge of Roll Paper Automatically

If the leading edge of a roll is crooked or warped, it may cause an error message or printing problems. In this case, set **Trim Edge First** to **Automatic** or **On** on the Control Panel to have the printer cut the leading edge to make the edge straight after you load a roll.

**Trim Edge First** offers the following options.

### • Automatic

If the left and right side of the leading edge of the roll ((a) and (b)) are uneven by 40 mm (1.6 in) or more when you load the roll, the edge is cut an amount relative to the slant to ensure a straight edge, and scraps are removed. The edge is not cut if the unevenness is less than 40 mm. However, paper may sometimes be cut, depending on the state of the leading edge.

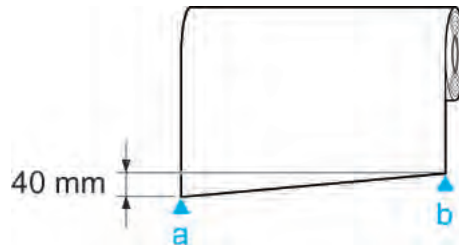


### • Off

The edge is not cut and scraps are not removed. This setting is **Off** for most types of paper, by default. For more information, see the Paper Reference Guide. (See "Types of Paper.") →P.617

### • On

The leading edge is cut off when you load a roll, and scraps are removed. The amount of paper cut off from the leading edge varies depending on the paper type. For more information, see the Paper Reference Guide. (See "Types of Paper.") →P.617

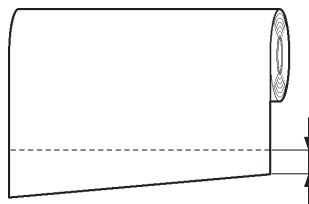

#### Note

- If you print on paper that has an irregular width, set **Skew Check Lv.** to **Loose** for a higher skew detection threshold or to **Off** to disable skew detection. However, if paper is loaded askew when detection is **Off**, note that paper jams or Platen soiling may occur.

Follow these steps to change the **Trim Edge First** setting.

1. Press the **Menu** button to display **MAIN MENU**.




2. Press ▲ or ▼ to select **Paper Details**, and then press the ► button.
3. Press ▲ or ▼ to select the type of paper, and then press the ► button.
4. Press ▲ or ▼ to select **Trim Edge First**, and then press the ► button.
5. Press ▲ or ▼ to select the desired setting option, and then press the **OK** button.  
This setting takes effect the next time you load a roll.

## Reducing Dust from Cutting Rolls

The printer is equipped with a function to reduce cutting dust for media such as Backlit Film that are more likely to generate debris when cut. This may improve printing quality and help prevent Printhead damage. You can set up this function to be activated for some types of paper.

When this function is activated, black lines are printed at the leading and trailing edges of documents.

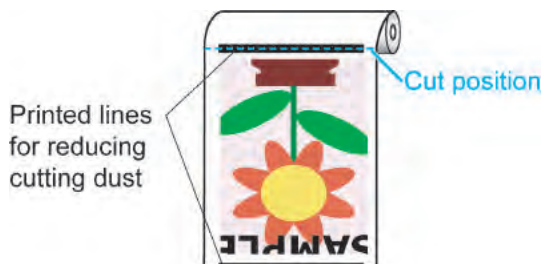

### Important

- Do not activate the function to reduce cutting dust for paper that wrinkles easily, such as Plain Paper or light-weight paper. This may impair cutting and cause paper jams.
- Borderless printing is not available when this function is activated. Deactivate this function before borderless printing.

1. Press the **Menu** button to display **MAIN MENU**.




2. Press ▲ or ▼ to select **Paper Details**, and then press the ► button.
3. Press ▲ or ▼ to select the type of paper loaded in the printer, and then press the ► button.
4. Press ▲ or ▼ to select **CutDustReduct.**, and then press the ► button.

5. Press ▲ or ▼ to select **On**, and then press the **OK** button.  
The function to reduce cutting dust is now activated.




## Roll Holder Set

Load a roll on the roll holder and then load the holder in the printer. The Roll Holder in the Roll Holder Set RH2-44 is for use with both 2-inch and 3-inch paper cores. Use the correct attachment for the particular paper core. (See "Attaching the Roll Holder to Rolls.") →P.623

- Roll Holder Set RH2-44
  - Roll Holder (for 2- and 3-inch paper cores)

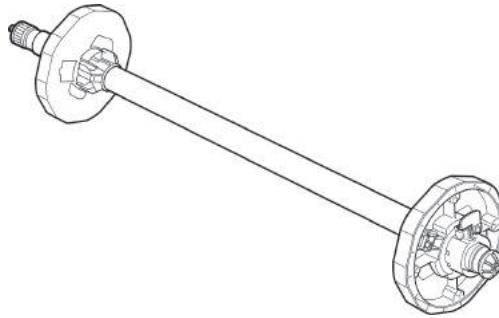

- Attachments

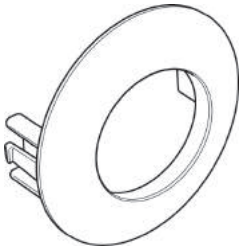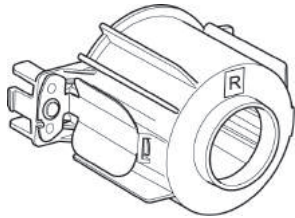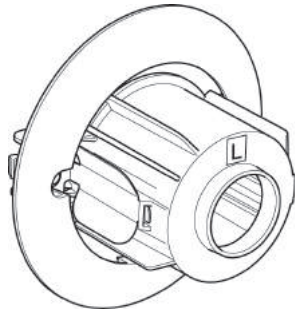Using the 2-Inch Paper Core Attachment	Using the 3-Inch Paper Core Attachment	
2-Inch Paper Core Attachment	3-Inch Paper Core Attachment #1	3-Inch Paper Core Attachment #2
		

## Handling sheets

Selecting the Paper Type (Sheet) .....	650
Loading Sheets in the Printer .....	651
Manually Loading Paper to the Position for Printing .....	654
Removing Sheets .....	656

### Selecting the Paper Type (Sheet)

When changing the type of paper after the paper has been advanced, specify the type of paper as follows.



**Note**

- After you load the sheet, the printer automatically shows a menu for selection of the paper type on the Display Screen. In this case, select the paper type, and then press the **OK** button. The printer will automatically go online.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press **▲** or **▼** to select **Media Menu**, and then press the **▶** button.
3. Press **▲** or **▼** to select **Cut Sheet Type**, and then press the **▶** button.
4. Press **▲** or **▼** to select the type of paper loaded in the printer, and then press the **OK** button.



**Note**

- For details on paper types, see the Paper Reference Guide. (See "Types of Paper.") →P.617 Plain Paper is selected by factory default.  
If you move the Release Lever, the setting automatically reverts to Plain Paper.
- Be sure to select the correct paper type. If this setting does not match the loaded paper, it may cause feed errors and affect the printing quality.
- If you select a type of paper for which Media Width Detection is deactivated ( **Off** is selected), you must advance the paper manually to the position for printing. (See "Manually Loading Paper to the Position for Printing.") →P.654

5. Press the **Online** button to bring the printer online.




## Loading Sheets in the Printer



### Note

- For details on supported types and sizes of paper, see **Paper Sizes** or the Paper Reference Guide. (See "Paper Sizes.") →P.620 (See "Types of Paper.") →P.617
- If the Platen is dirty, clean inside the Top Cover before loading paper. (See "Cleaning Inside the Top Cover.") →P.837
- After pressing the **Load/Eject** button, you can refer to instructions on the Display Screen as you load the paper. (See "Checking Instructions During Printer Operations.") →P.743


1. If you send a print job from a computer beforehand, the type and size of paper are shown on the Display Screen. Lift the Release Lever and open the Top Cover.

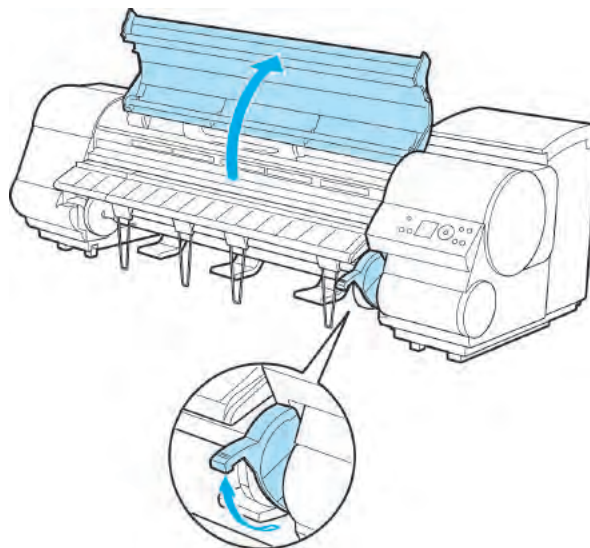




**Important**

- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

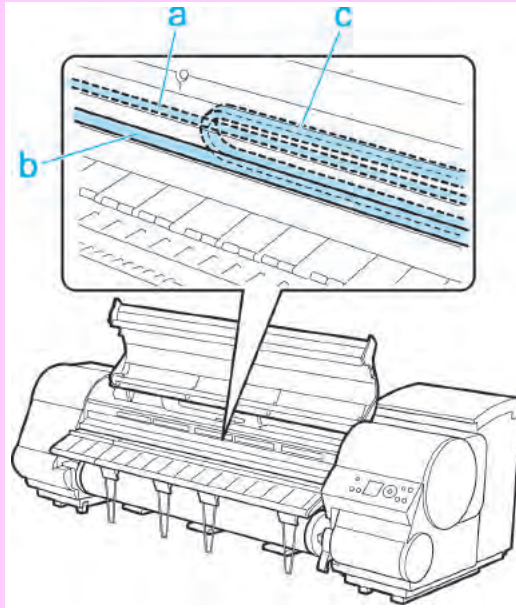

7

2. With a sheet lengthwise and printing-side up, insert it between the Platen (a) and the Paper Retainer (b). Align the edges of the sheet as follows.
  1. Align the sheet with the Paper Alignment Line (c) at right.
  2. Align the inserted edge of the sheet with the leading edge of the Paper Alignment Line (d), as shown.

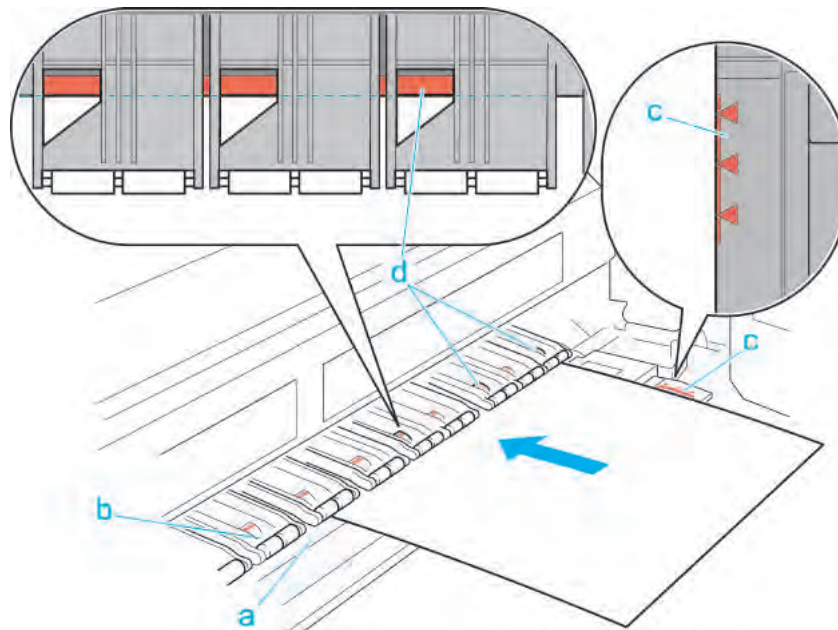

652



When inserted, sheets are automatically held by suction against the Platen.



#### Important


- Load a sheet so that it is parallel to the Paper Alignment Line at right (c). Loading paper askew will cause an error.
- Warped paper may rub against the Printhead. Straighten paper if it is warped before loading it.



#### Note

- You can adjust the strength of suction holding paper against the Platen when the Release Lever is up. If it is difficult to load paper, press the ▲ or ▼ button on the Control Panel to adjust the strength. Set suction stronger by pressing the ▲ button or weaker with the ▼ button. Three settings are available. However, even if you increase the suction, it may not be sufficient to hold some types of paper against the Platen well. In this case, use your hand to load the paper.
- Sheets are held in place by suction through holes on the Platen. Although the suction may produce a noise when paper is loaded in some positions, it does not indicate a problem. If the noise is distracting, try moving the paper over slightly to the left or right (up to 1 mm [0.039 in]) while keeping it parallel to the Paper Alignment Line.
- The suction remains on for about 30 seconds during loading. If you cannot finish loading a sheet during this time, pull the sheet away and reinsert it to start the suction again.

### 3. Lower the Release Lever and close the Top Cover.

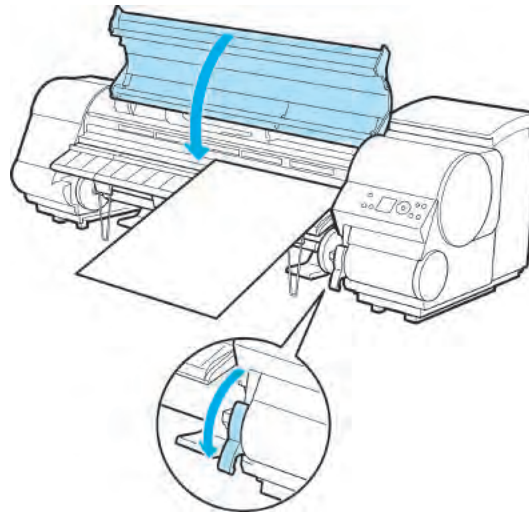

The printer now starts feeding the paper.

After the paper is advanced, the printer automatically goes online and starts printing.

If no print job has been received from the computer beforehand, the printer automatically shows a menu for selection of the type of paper on the Display Screen.

In this case, select the type of paper. (See "Selecting the Paper Type (Sheet).") →P.650



#### Note

- When using the Stationary Output Stacker, if you will print on large, stiff sheets, we recommend adjusting the Stationary Output Stacker into the lowest position to prevent printed sheets from being bent. (See "Using the Stationary Output Stacker.") →P.659


## Manually Loading Paper to the Position for Printing

When printing on non-standard sizes of paper or to specify a particular position to start printing, in the printer menu set **Width Detection** to **Off** for the paper used.

Setting **Width Detection** to **Off** will prevent paper from being automatically advanced to the position for printing. In this case, manually load paper at the position for printing.


Instructions for manually loading paper at the position for printing when **Width Detection** is set to **Off** are as follows.

1. If you send a print job from a computer beforehand, the type and size of paper are shown on the Display Screen. Lift the Release Lever and open the Top Cover.

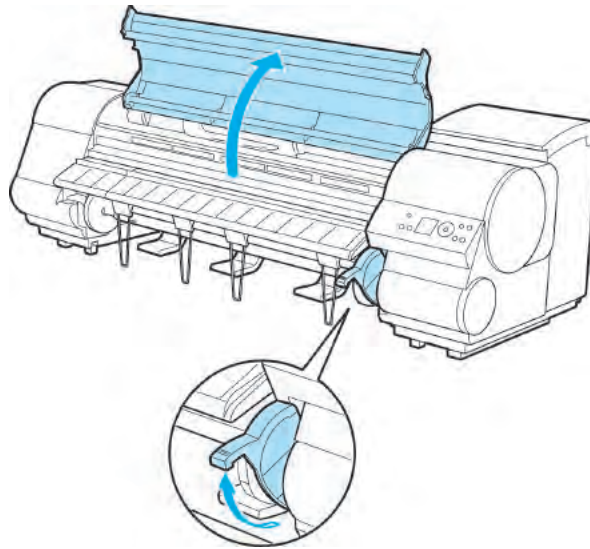


### Important


- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

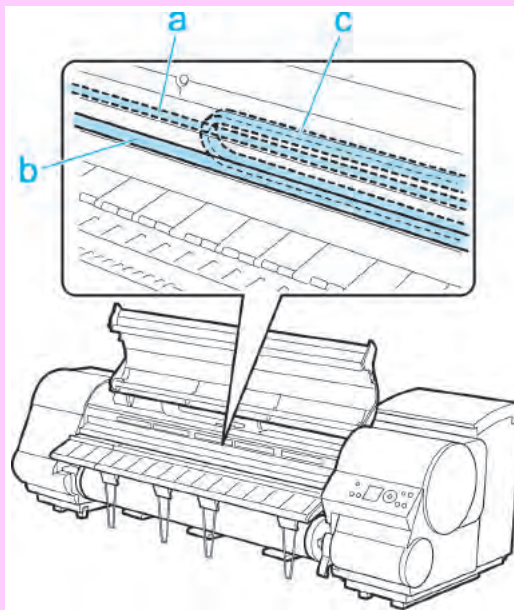


2. Keeping the right edge of the paper aligned with the extended line of the Paper Alignment Line (a) on the right side of the printer, load the paper so that the near edge is aligned with the groove (b) at the far end of the Platen. In this case, advance the paper as far into the paper feed slot as possible because it will be printed starting at that position.

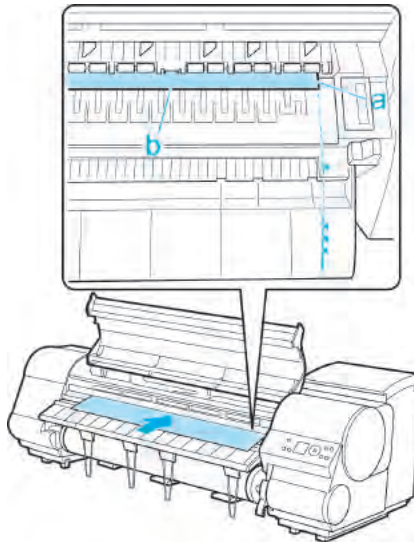

3. Lower the Release Lever and close the Top Cover.
4. If no print job has been received from the computer, press ▲ or ▼ to select of the type of paper loaded, and then press the OK button.
5. When "**Width Detection OFF. OK to continue?**" is shown on the Display Screen, press ▲ or ▼ to select "**Leave OFF**" and then press the OK button.

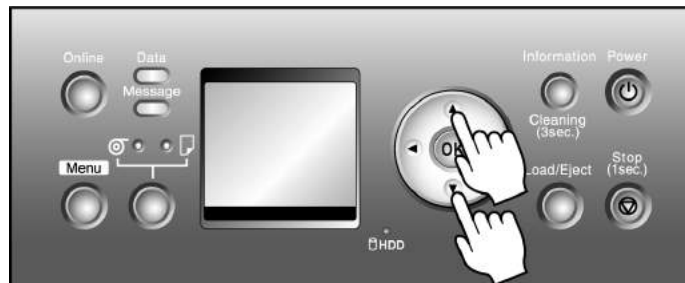

6. Check the position of the loaded paper and press the OK button.
7. Press ▲ or ▼ to select the paper size, and then press the OK button.

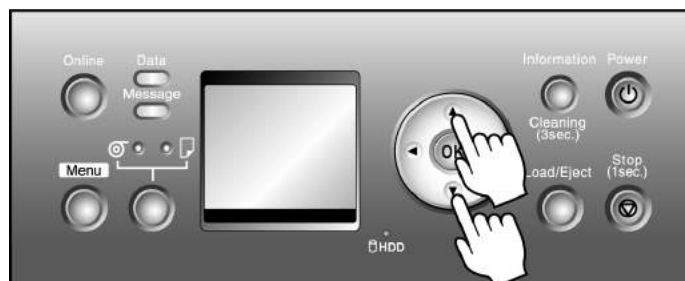



**Note**

- If a print job received requires paper larger than the selected paper, it may soil the Platen.

## Removing Sheets

Remove sheets from the printer as follows.


1. Press the **Load/Eject** button.



**Note**


- Paper cannot be ejected by using the **Load/Eject** button when print jobs are in progress or during the ink drying period. Before ejecting paper, press the **Stop** button to cancel printing, print job processing, or ink drying.

2. Press the **OK** button to eject the paper.

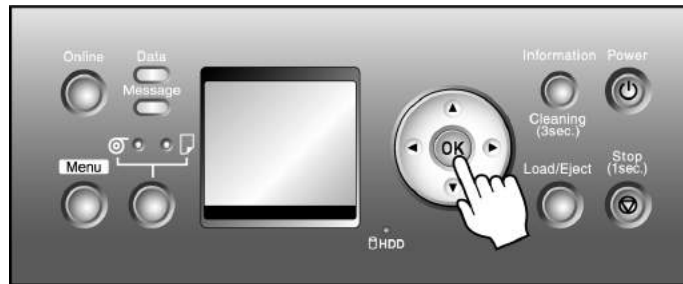


The paper is ejected from the front of the printer.

3. As you hold the sheet, lift the Release Lever and remove the sheet.

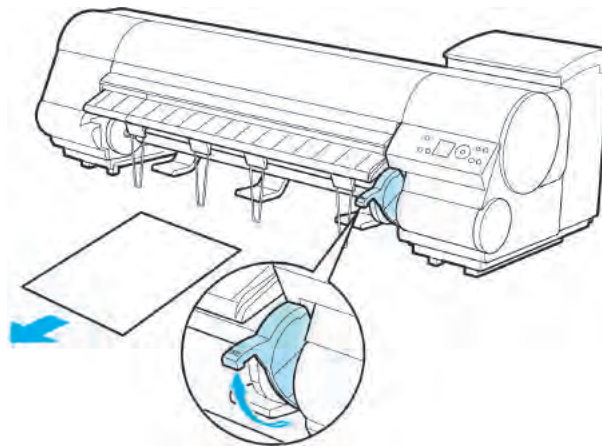


4. Lower the Release Lever.

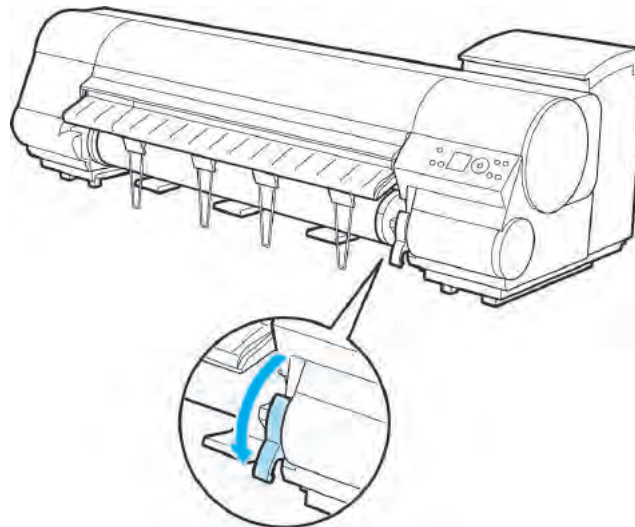

## Output Stacker

Stationary Output Stacker .....	658
Using the Stationary Output Stacker .....	659
Stowing the Stationary Output Stacker .....	661
Wheeled Output Stacker .....	663
Using the Wheeled Output Stacker .....	663

### Stationary Output Stacker

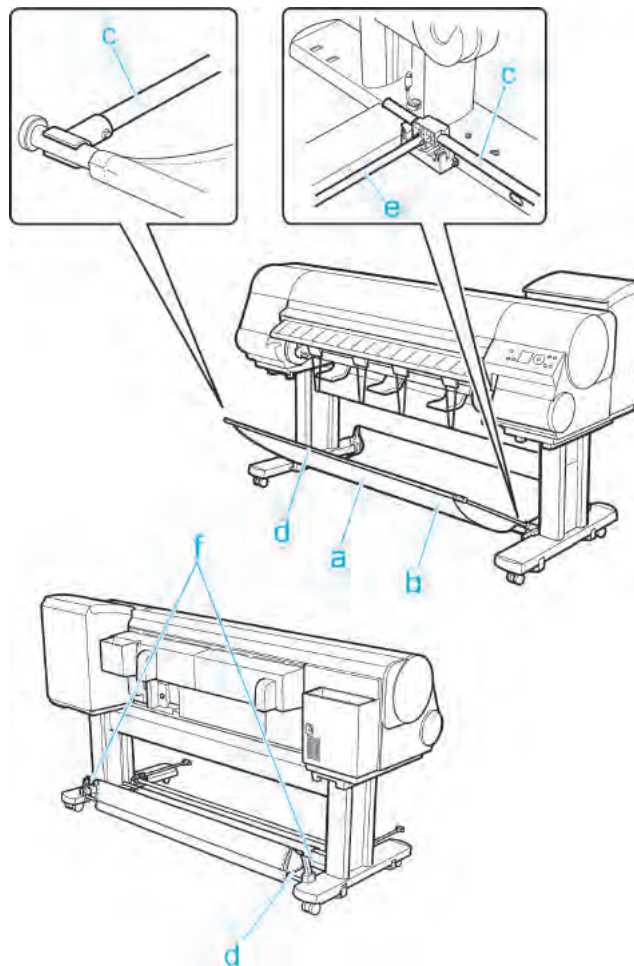

**a. Output Stacker**

A cloth tray that catches ejected documents.

**b. White tag**

A point of reference for attaching the Output Stacker in the right direction.

**c. Basket Arm R and Basket Arm L**

Holds the Basket Rod (tag side) attached to the Output Stacker. When the Output Stacker is not used, push it down and store it next to the Stand Leg.

**d. Basket Rod (tag side) and Basket Rod (cord side)**

Holds the cloth Output Stacker securely in specific positions.



**e. Basket Rod**

Keeps Basket Arm R and Basket Arm L at the same angle.

**f. Rear Holder**

Holds the middle of the Basket Rod (cord side).

(See "Using the Stationary Output Stacker." →P.659)

**Note**


- The printer can be used with either a Stationary Output Stacker or a separate, mobile Wheeled Output Stacker.

The Stationary Output Stacker is normally provided as the standard stacker, but the Wheeled Output Stacker may be the standard stacker in some sales regions. If the Wheeled Output Stacker has been provided as the standard stacker, the Stationary Output Stacker is not included.

For more information about the Wheeled Output Stacker, see "Wheeled Output Stacker." →P.663

## Using the Stationary Output Stacker

The Stationary Output Stacker can be used in three positions, as shown.

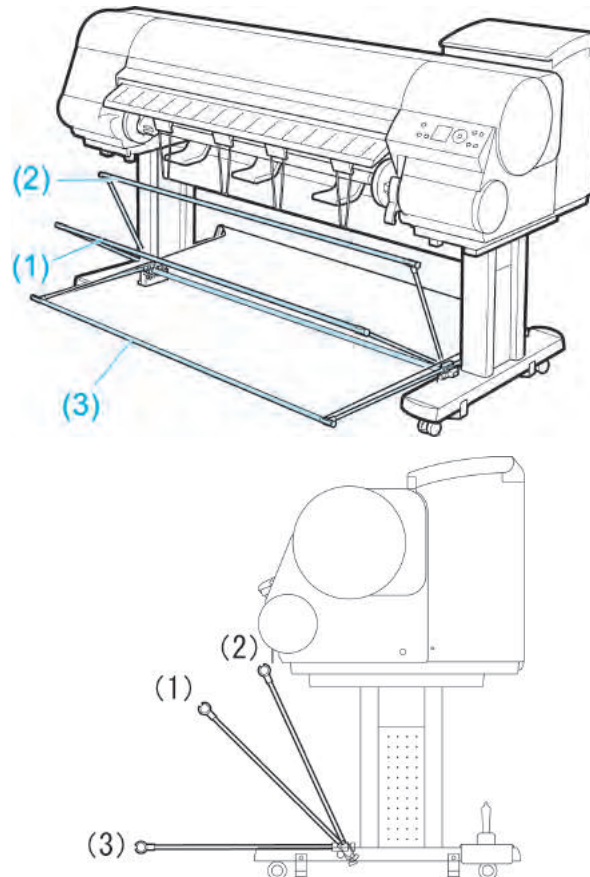

- **When storing printed documents on the Output Stacker**

Use position (1).

- **When the Output Stacker is not used**

Move the stacker into position (2).

- When the Media Take-up Unit is used, or when the Output Stacker is stored for long periods

Lower it to position (3) for storage. (See "Stowing the Stationary Output Stacker.") →P.661

When using the Output Stacker again after storage, reattach the Basket Rod on the front of the Output Stacker to the tips of the left and right basket arms and pull the side rods out completely.

- When printing on large, stiff sheets


Use position (3).



**Important**

- When storing printed documents on the Output Stacker, always use it in position (1). If you do not, printed documents may not be dropped into the Output Stacker, and the printed surface may become soiled.
- The Output Stacker can accommodate one sheet. When printing multiple pages, remove each sheet after it is printed.
- Before using the Output Stacker, remove the Rewind Spool. If you do not, it may prevent printed documents from being held correctly, and they may be scratched.
- The Output Stacker can hold printed documents from rolls that are 62 inches (1,575 mm) long. When printing longer documents, use the optional Media Take-up Unit.


The Output Stacker locks into position if you lift it to position (1) or (2). To lower the Output Stacker, lift the front Basket Rod lightly to release the lock, and then lower the stacker.

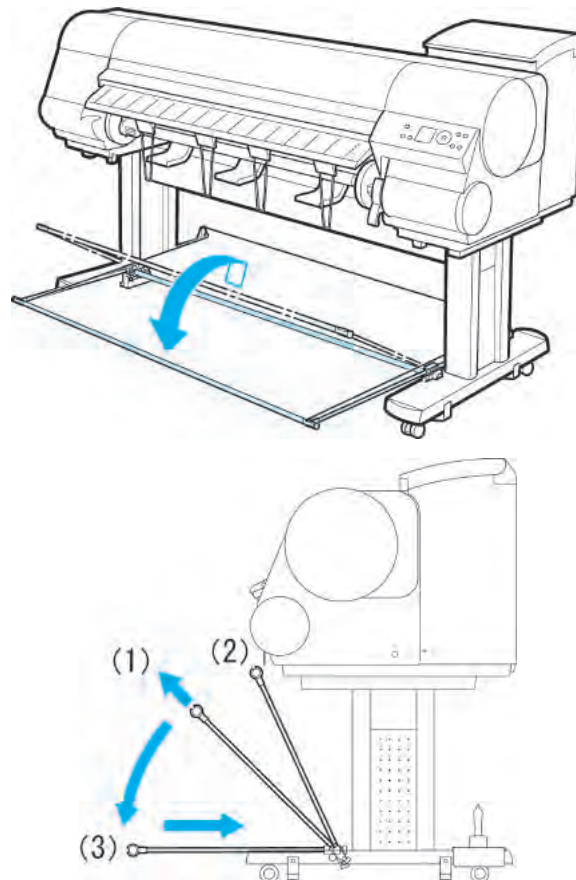


## Stowing the Stationary Output Stacker

Stow the Stationary Output Stacker if you will use the Media Take-up Unit or if you will not use the Stationary Output Stacker for an extended period.

1. When the Output Stacker is in the position used when storing printed documents (a), lift the front Basket Rod gently to release the lock, lower the stacker toward the front (b), and push it all the way back.

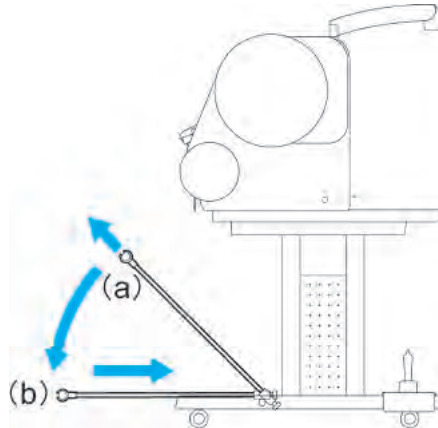


2. Remove the front Basket Rod from the left and right Basket Arms. Roll up the Basket Cloth and put it at the back of the Bottom Stand Stay.

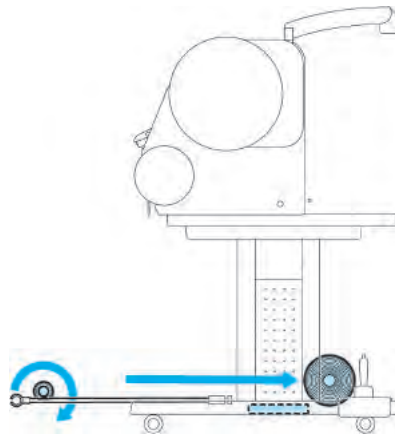




**Important**

- When using the optional Media Take-up Unit, position the Basket Cloth and Basket Rod so they do not interfere with the Media Take-up Sensor (indicated by the dashed line).

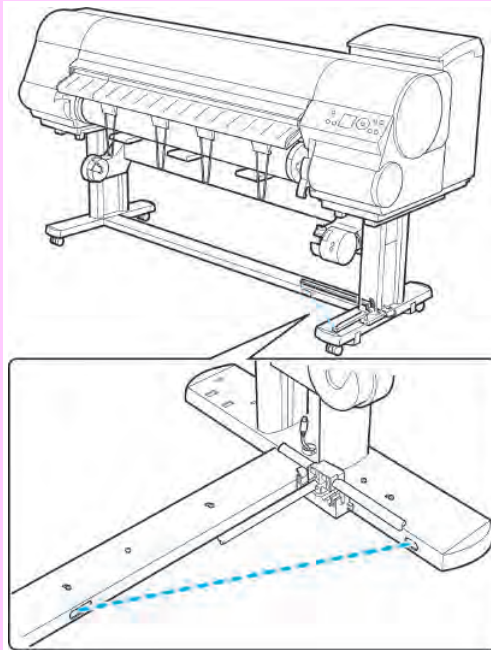


7

3. Push in the left and right Basket Arm toward the back all the way, until they stop.

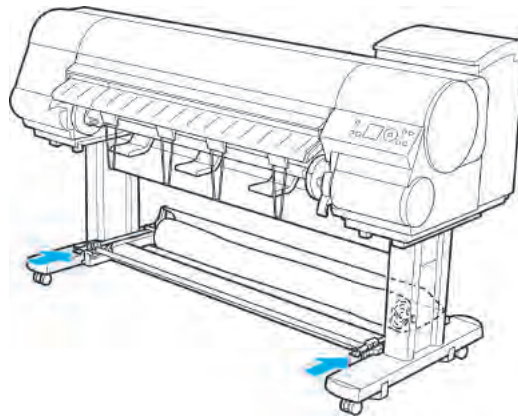

## Wheeled Output Stacker

An output stacker with casters, positioned in front of the printer.

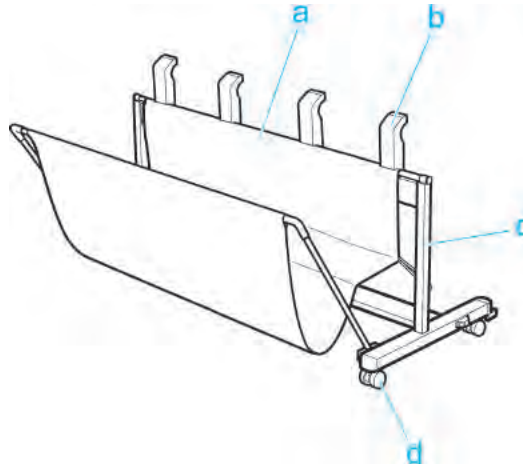

### a. Output Stacker

A cloth tray that catches ejected documents.

The Output Stacker can be opened and closed using the rod in front.

### b. Output Stacker Ejection Guides

Prevent printed documents from winding around the Roll Holder or being drawn into the Paper Feed Slot.

Hold the Wheeled Output Stacker by these guides when moving it.

### c. Output Stacker Foot Stand

Equipped with casters to facilitate moving it.

### d. Stopper

Locks the Stand casters.

Always release the Stopper before moving the printer. Moving the printer while the Stopper is locked may scratch the casters or the floor.



#### Note

- For instructions on assembling the Wheeled Output Stacker, see the setup guide provided with the Wheeled Output Stacker.
- The printer can be used with either a Stationary Output Stacker or a separate, mobile Wheeled Output Stacker. The Wheeled Output Stacker is normally provided as an optional accessory, but it may be the standard stacker in some sales regions. If the Wheeled Output Stacker has been provided as the standard stacker, the Stationary Output Stacker is not included. For more information about the Stationary Output Stacker, see "Stationary Output Stacker." →P.658

## Using the Wheeled Output Stacker

Positioning the Wheeled Output Stacker by the printer will prevent rolls from dropping on the floor after printing. The stacker is equipped with casters to facilitate moving it.




#### Important


- The Output Stacker can accommodate one sheet. When printing multiple pages, remove each sheet after it is printed.

## Positioning the Wheeled Output Stacker by the printer

1. Holding the Output Stacker Ejection Guides (a), move the stacker between the printer Stand.

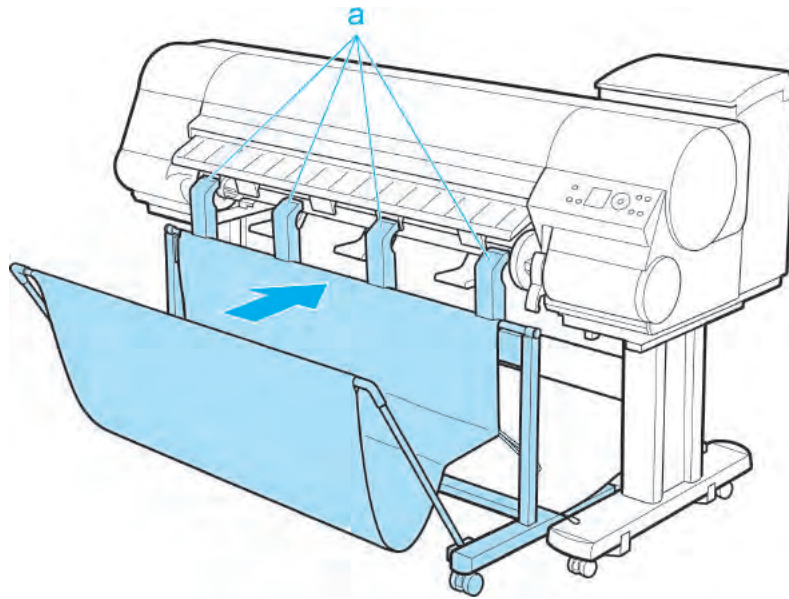

2. Lock the casters.

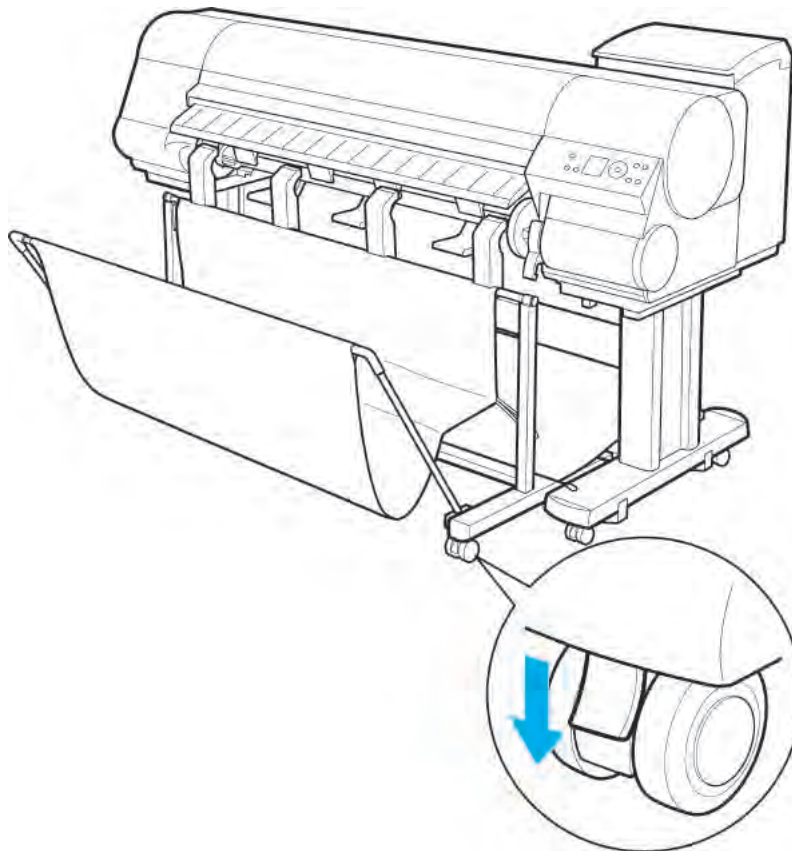




## Removing the Wheeled Output Stacker from the printer




### Note

- If there is not enough space to move the Wheeled Output Stacker, remove any printed documents inside the Output Stacker and fold the Output Stacker up.

1. Release the caster lock.

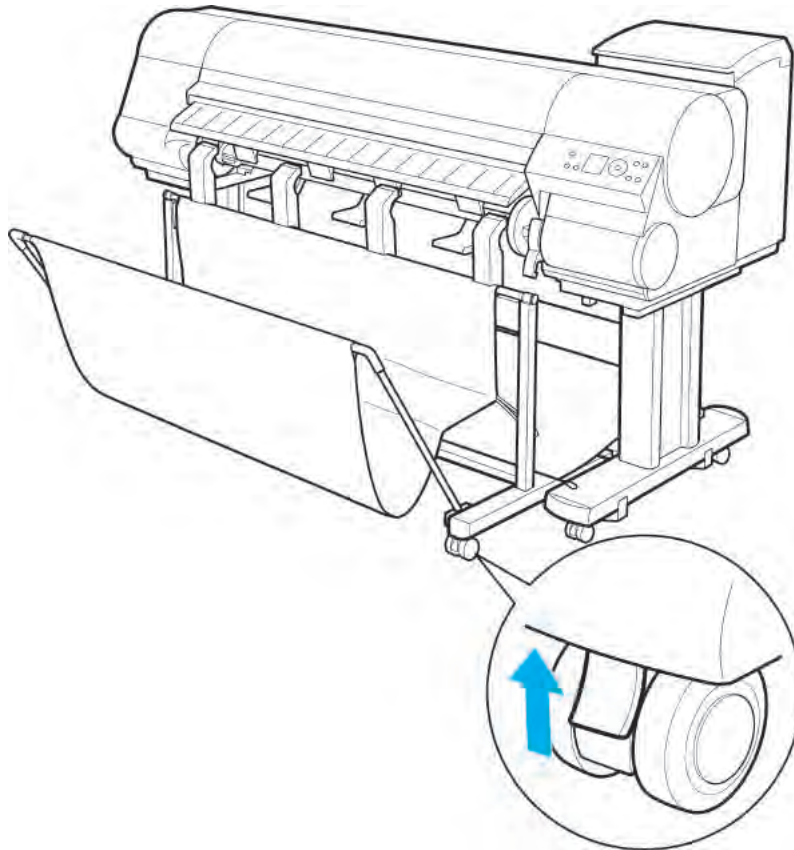

2. Holding the Output Stacker Ejection Guides (a), move the stacker away from the printer.

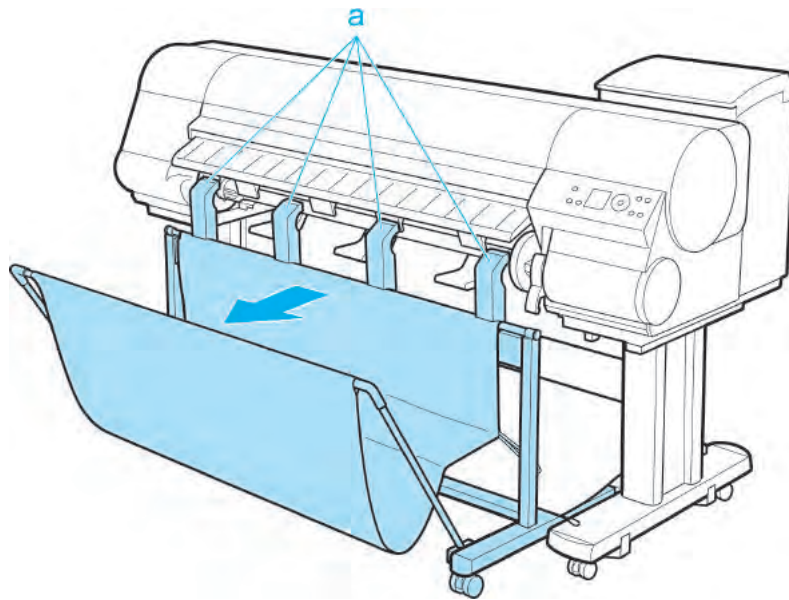


## Adjustments for Better Print Quality

Adjusting the Printhead

668

Adjusting the feed amount

676

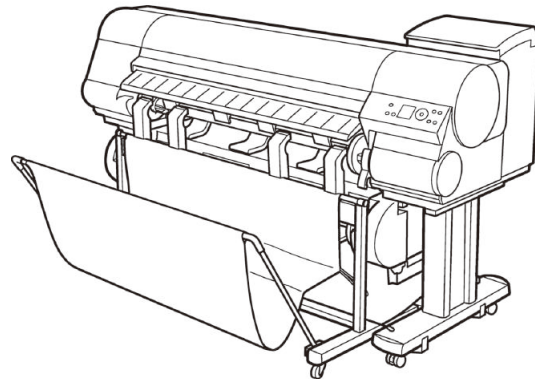

## Adjusting the Printhead

Adjusting the Printhead .....	668
Automatic Straightening of Lines and Colors (Auto Head Adj.) .....	668
Manual Straightening of Lines and Colors (Manual Head Adj.) .....	670
Adjusting Line Misalignment (Head Inc. Adj.) .....	672
Troubleshooting Paper Abrasion and Blurry Images (Head Height) .....	675

## Adjusting the Printhead

If printed documents are affected by the following problems, try adjusting the printhead.

- Printing is faint or affected by banding in different colors  
Execute **Nozzle Check** to check for printhead nozzle clogging.  
For instructions, see "Checking for Nozzle Clogging." →P.817
- Printed vertical lines are warped or colors are out of alignment  
Use **Auto Head Adj.** or **Manual Head Adj.** to adjust the printhead position.  
Normally, use **Auto Head Adj.**. However, when using special paper or if printing is not improved after executing **Advanced Adj.** in **Auto Head Adj.**, try **Manual Head Adj.**  
For adjustment instructions, Automatic Straightening of Lines and Colors (Auto Head Adj.) →P.668 or see "Manual Straightening of Lines and Colors (Manual Head Adj)." →P.670
- Printed lines are misaligned  
Execute **Head Inc. Adj.** to adjust the angle of inclination of the printhead.  
Even slight misalignment can be corrected.  
For adjustment instructions, see "Adjusting Line Misalignment (Head Inc. Adj)." →P.672
- Paper rubs against the printhead, or image edges are blurred  
Executing **Head Height** to adjust the printhead height may improve printing results.  
For adjustment instructions, see "Troubleshooting Paper Abrasion and Blurry Images (Head Height)." →P.675

## Automatic Straightening of Lines and Colors (Auto Head Adj.)

If printed vertical lines are warped or colors are out of alignment, adjust the Printhead alignment.

Use **Auto Head Adj.** to have the printer print and read a test pattern for automatic adjustment of the printhead.

**Auto Head Adj.** offers two modes, **Standard Adj.** and **Advanced Adj.**

**Standard Adj.** will fix most slight image distortion or color misalignment, but if not, try **Advanced Adj.**



**Note**

- If advanced adjustment does not improve printing results, or if you are using special paper, try manual adjustment. For instructions on manual adjustment, see "Manual Straightening of Lines and Colors (Manual Head Adj)." →P.670
- Use **Standard Adj.** if you have switched to another type of paper or if you want the boundaries between colors to appear as attractive as possible.
- Use **Advanced Adj.** to fine-tune the space between nozzles or colors if you have switched the printhead or if you want printed documents to appear as vivid as possible. We recommend using **Advanced Adj.** for printing at a higher level of image quality.
- Always make sure the loaded paper matches the type of paper specified on the printer. Adjustment cannot be completed correctly unless the loaded paper matches the settings.
- We recommend using the type of paper you use most often for adjustment.
- This function is not available with CAD Tracing Paper, CAD Translucent Matte Film, or CAD Clear Film. If adjustment is not possible as expected using highly transparent film or similar media, try another type of paper, or try adjust the Printhead alignment manually. (See "Manual Straightening of Lines and Colors (Manual Head Adj).") →P.670

**Paper to Prepare**

Rolls	An unused roll at least 10 inches wide
Sheets	<b>Standard Adj.</b> : One sheet of unused paper of at least A4/Letter size <b>Advanced Adj.</b> : Five sheets of unused paper of at least A4/Letter size (or one sheet when using A2 or larger, or two sheets when using A3 loaded lengthwise)

Execute **Auto Head Adj.** as follows.

1. Load paper.
  - Attaching the Roll Holder to Rolls →P.623
  - Loading Rolls in the Printer →P.628
  - Loading Sheets in the Printer →P.651
2. Press the **Menu** button to display **MAIN MENU**.



3. Press ▲ or ▼ to select **Adjust Printer**, and then press the ► button.
4. Press ▲ or ▼ to select **Auto Head Adj.**, and then press the ► button.
5. Press ▲ or ▼ to select **Standard Adj.** or **Advanced Adj.**, and then press the ► button.

6. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
A test pattern is printed for printhead adjustment.  
Adjustment is now finished if you have printed on a roll or a sheet of A2 size or larger.
7. If you are printing on sheets smaller than A2 size for **Advanced Adj.**, a confirmation message is displayed asking you whether to continue printing. Press the **OK** button and follow the instructions displayed.


## Manual Straightening of Lines and Colors (Manual Head Adj)

If printed vertical lines are warped or colors are out of alignment, adjust the Printhead alignment.

With **Manual Head Adj**, you can manually adjust the Printhead alignment by printing and reading a test pattern.

You can adjust the Printhead alignment automatically or manually. Normally, choose automatic adjustment. If advanced adjustment does not improve printing results, or if you are using special paper, try manual adjustment. For instructions on straightening lines and colors automatically, see "Automatic Straightening of Lines and Colors (Auto Head Adj.)."

→P.668

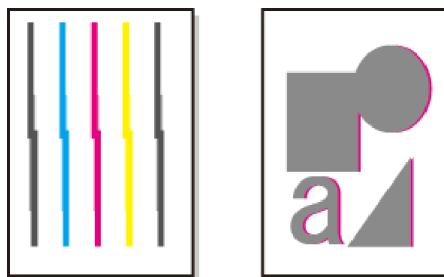

### Note

- If **Manual Head Adj** is not available although displayed in the menu, choose **Advanced Adj.** in **Auto Head Adj.** **Manual Head Adj** is available in the menu after you try **Advanced Adj.** once.
- Always make sure the loaded paper matches the type of paper specified on the printer. Adjustment cannot be completed correctly unless the loaded paper matches the settings.
- We recommend using the type of paper you use most often for adjustment.

### Paper to Prepare

Rolls	An unused roll at least 10 inches wide
Sheets	One sheet of unused paper of at least A4/Letter size

Execute **Manual Head Adj** as follows.


1. Load paper.
  - Attaching the Roll Holder to Rolls →P.623
  - Loading Rolls in the Printer →P.628
  - Loading Sheets in the Printer →P.651



2. Press the **Menu** button to display **MAIN MENU**.



3. Press **▲** or **▼** to select **Adjust Printer**, and then press the **▶** button.
4. Press **▲** or **▼** to select **Manual Head Adj**, and then press the **▶** button.
5. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.  
A test pattern is printed for printhead adjustment.
6. Press **▲** or **▼** to select **D**, and then press the **▶** button.
7. Press **▲** or **▼** to select **D-1**, and then press the **▶** button.
8. Examine test pattern **D-1** for printhead adjustment and determine the number of the pattern with straight lines.

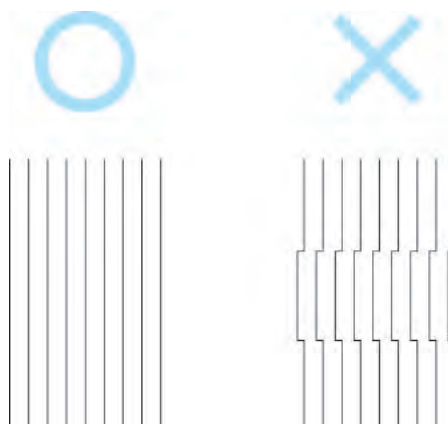**Note**

- If lines seem straightest in two patterns but you cannot decide which one is better, choose an intermediate value. For example, choose 11 if you cannot decide whether pattern 10 or 12 is better.

9. Press **▲** or **▼** to select the pattern number, and then press the **OK** button.
10. Repeat steps 7 and 9 to specify the adjustment value for **D-2** to **D-5** and **D-7** to **D-11**.
11. Press the **◀** button.
12. Press **▲** or **▼** to select **Register Setting**, and then press the **▶** button.

13. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
The adjustment value is now registered, and adjustment is complete.

## Adjusting Line Misalignment (Head Inc. Adj.)

If printed lines are misaligned, try adjusting the angle of the Printhead. Even slight misalignment can be corrected. Adjust the Printhead orientation by printing and reading a test pattern.

### Paper to Prepare

Rolls	An unused roll at least 10 inches wide
Sheets	One sheet of unused paper of at least A4/Letter size

Execute **Head Inc. Adj.** as follows.

1. Load the paper.
  - Attaching the Roll Holder to Rolls →P.623
  - Loading Rolls in the Printer →P.628
  - Loading Sheets in the Printer →P.651



#### Note


- When loading paper, specify the type of paper correctly. Using paper that you have not specified on the printer may cause feeding problems and affect the printing quality.
- We recommend loading a type of paper that you use often.

2. Press the **Menu** button to display **MAIN MENU**.




3. Press ▲ or ▼ to select **Adjust Printer**, and then press the ► button.
4. Press ▲ or ▼ to select **Head Inc. Adj.**, and then press the ► button.
5. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
After the Printhead is moved, a message is displayed requesting you to open the Top Cover.

**6.** Open the Top Cover.

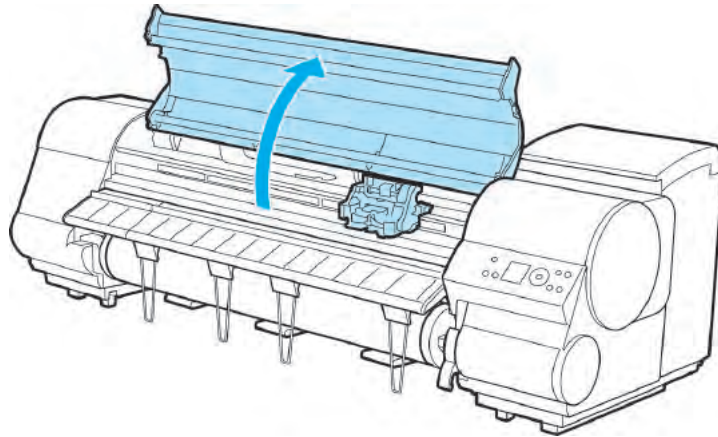

**7.** Align the Angle Adjustment Lever with the red square and close the Top Cover.

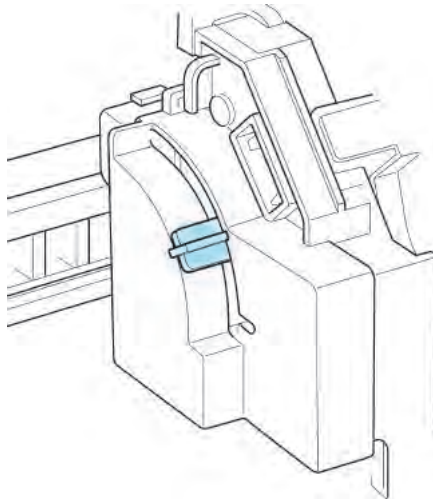


A test pattern is printed for adjustment.




**Important**

- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

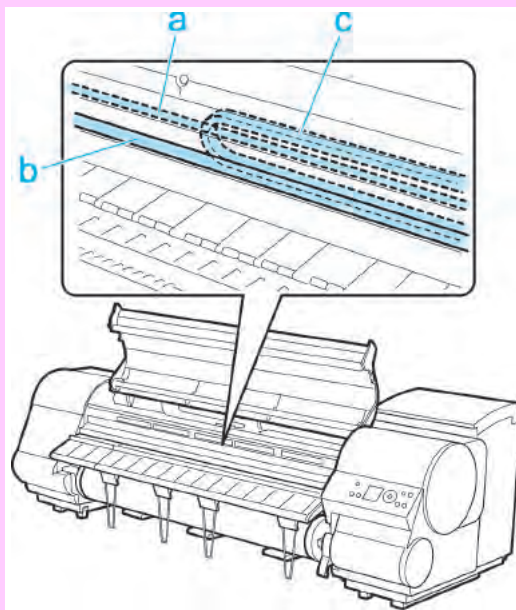


**8.** Examine the test pattern for adjustment. Determine the straightest set of lines.

8




**9.** Open the Top Cover and move the Angle Adjustment Lever to match the number (or the square) of the straightest set of lines.

If no single set of lines is perfectly straight, move the Angle Adjustment Lever to a position between the numbers (or between the number and the square) of the two sets of lines that are least misaligned.

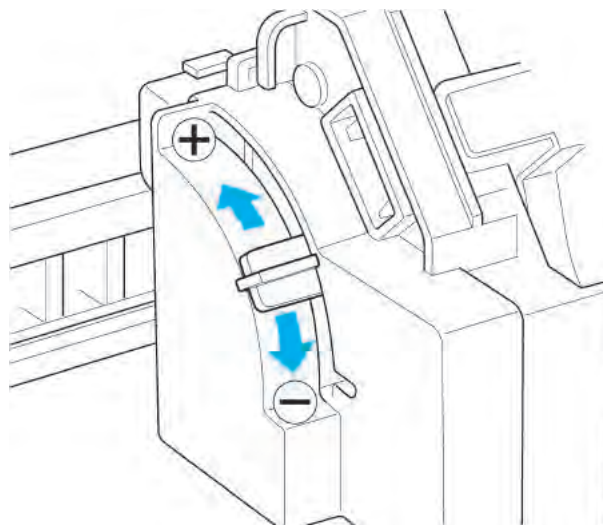

674

- 10.** Close the Top Cover.  
The Printhead is now straight, and adjustment is complete.

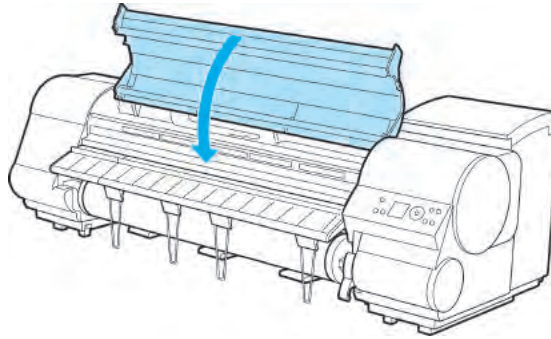

## Troubleshooting Paper Abrasion and Blurry Images (Head Height)

If paper rubs against the printer or the edge is wrinkled from rubbing, adjusting the Printhead height may improve results. If image edges are blurred, it may help to lower the Printhead.

- 1.** Press the **Menu** button to display **MAIN MENU**.



- 2.** Press ▲ or ▼ to select **Paper Details**, and then press the ► button.
- 3.** Press ▲ or ▼ to select the type of paper, and then press the ► button.
- 4.** Press ▲ or ▼ to select **Head Height**, and then press the ► button.
- 5.** Press ▲ or ▼ to select the Printhead height, and then press the **OK** button.

## Adjusting the feed amount

Adjusting the Feed Amount .....	676
Selecting a Feed Amount Adjustment Method (Feed Priority) .....	676
Auto Band Adjustment (Auto Band Adj.) .....	677
Manual Band Adjustment (Manual Band Adj) .....	678
Banding Adjustment During Printing (Fine Band Adj.) .....	680
Adjusting Line Length (Adjust Length) .....	681
Adjusting the Vacuum Strength (VacuumStrngth) .....	683

## Adjusting the Feed Amount

If printed documents are affected by the following problems, try adjusting the feed amount.

- Banding in different colors
- Line length is not accurate in the direction paper is fed

To adjust the feed amount, do the following, in this order.

1. Depending on the issue, change the **Feed Priority** setting for the particular type of paper. (See "Selecting a Feed Amount Adjustment Method (Feed Priority).") →P.676
2. Based on the **Feed Priority** setting, use **Auto Band Adj.**, **Manual Band Adj.**, or **Adjust Length**. (See "Auto Band Adjustment (Auto Band Adj.).") →P.677 (See "Manual Band Adjustment (Manual Band Adj).") →P.678 (See "Adjusting Line Length (Adjust Length).") →P.681
3. If additional fine-tuning is necessary after **Auto Band Adj.** or **Manual Band Adj.**, use **Fine Band Adj.** in the **Menu Durng Prtng.** (See "Banding Adjustment During Printing (Fine Band Adj.).") →P.680

## Selecting a Feed Amount Adjustment Method (Feed Priority)

Methods of adjusting the amount paper is fed are set for each type of paper, in the **Feed Priority** setting. Adjust the **Feed Priority** setting to suit your particular printing application.

- **Band Joint** : Adjusts the feed amount to reduce banding across the sheet in printed documents. The settings of **Auto Band Adj.** or **Manual Band Adj** are applied. If you have executed **Fine Band Adj.**, in addition to the settings of **Auto Band Adj.** or **Manual Band Adj**, the settings of **Fine Band Adj.** are also applied.
- **Print Length** : Adjusts the feed amount for better accuracy of lines in printed documents. The settings of **A:High** or **B:Standard/Draft** in the **Adjust Length** menu are applied.
- **Automatic** : **Band Joint** or **Print Length** is selected, depending on **Print Priority** as selected in the printer driver at the time of printing.  
**Image** or **Office Document** : **Band Joint** is selected.  
**Line Drawing/Text** : **Print Length** is selected.



**Note**

- Use **Manual Band Adj** for transparent media or other paper for which adjustment with **Auto Band Adj.** is not possible.
- Either **B:Standard/Draft** or **A:High** in the **Adjust Length** menu is applied, depending on printer driver settings at the time of printing.
- If you have selected **Easy Settings** in the printer driver, follow these steps to confirm the **Print Priority** setting.
  - Windows: Click **View Settings** on the **Main** tab to display the **View Settings** dialog box.
  - Mac OS X: Click **View set.** on the **Main** pane to display the **View settings** dialog box.

Follow these steps to change the **Feed Priority** setting.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press **▲** or **▼** to select **Paper Details**, and then press the **▶** button.
3. Press **▲** or **▼** to select the type of paper, and then press the **▶** button.
4. Press **▲** or **▼** to select **Feed Priority**, and then press the **▶** button.
5. Press **▲** or **▼** to select **Automatic**, **Band Joint** or **Print Length** and then press the **OK** button.

## Auto Band Adjustment (Auto Band Adj.)

If printed images are affected by banding in different colors, adjust the amount that paper is fed.

**Auto Band Adj.** offers two modes, **Standard Adj.** and **Advanced Adj.**. Use **Advanced Adj.** if **Standard Adj.** does not eliminate banding, or when using paper other than genuine Canon paper or paper for purposes other than checking output. Always check the **Feed Priority** setting before using **Auto Band Adj.**. (See "Selecting a Feed Amount Adjustment Method (Feed Priority).") →P.676

**Note**

- When using highly transparent media not compatible with **Auto Band Adj.**, you must adjust the feed amount manually. (See "Manual Band Adjustment (Manual Band Adj).") →P.678
- If additional fine-tuning is necessary after **Auto Band Adj.**, use **Fine Band Adj.**. (See "Banding Adjustment During Printing (Fine Band Adj.).") →P.680
- To adjust the measurement scale and ensure accuracy (so that lines in CAD drawings are printed at exactly the right length, for example), specify the amount of paper stretching or shrinkage when adjusting the feed amount. (See "Adjusting Line Length (Adjust Length).") →P.681
- This may take some time, depending on the type of paper.
- Use paper of the same type and size for adjustment as you will use for printing.

## Paper to Prepare

Rolls	An unused roll at least 10 inches wide
Sheets	<b>Standard Adj.</b> : One sheet of unused paper of at least A4/Letter size <b>Advanced Adj.</b> : Two sheets of unused paper of at least A4/Letter size (or one sheet when using A2 or larger)

Execute **Auto Band Adj.** as follows.

### 1. Load paper.

- Attaching the Roll Holder to Rolls →P.623
- Loading Rolls in the Printer →P.628
- Loading Sheets in the Printer →P.651



#### Note

- Always make sure the loaded paper matches the type of paper specified. Adjustment cannot be completed correctly unless the setting value matches the loaded paper.

### 2. Press the **Menu** button to display **MAIN MENU**.



### 3. Press ▲ or ▼ to select **Adjust Printer**, and then press the ► button.

### 4. Press ▲ or ▼ to select **Auto Band Adj.**, and then press the ► button.

### 5. Press ▲ or ▼ to select **Standard Adj.** or **Advanced Adj.**, and then press the ► button.

### 6. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

A test pattern is printed for band adjustment.

Adjustment is now finished if you have printed on a roll or on sheets of A2 size or larger.

### 7. If you are printing on sheets smaller than A2 size for **Standard Adj.**, a confirmation message is shown on the Display Screen, requesting you to continue printing. Press the **OK** button and follow the instructions on the Display Screen.

## Manual Band Adjustment (Manual Band Adj)

If printed images are affected by banding in different colors, adjust the amount that paper is fed.

Use **Manual Band Adj** for transparent media or other paper for which adjustment with **Auto Band Adj.** is not possible.

We recommend automatic adjustment for other types of paper. (See "Auto Band Adjustment (Auto Band Adj.)." →P.677)

Always check the **Feed Priority** setting before using **Manual Band Adj.** (See "Selecting a Feed Amount Adjustment Method (Feed Priority)." →P.676)

**Note**

- If additional fine-tuning is necessary after **Manual Band Adj.**, use **Fine Band Adj.**. (See "Banding Adjustment During Printing (Fine Band Adj.).") →P.680
- Use paper of the same type and size for adjustment as you will use for printing.

**Paper to Prepare**

Rolls	An unused roll at least 10 inches wide
Sheets	Two sheets of unused paper of at least A4/Letter size


Execute **Manual Band Adj** as follows.

**1.** Load paper.

- Attaching the Roll Holder to Rolls →P.623
- Loading Rolls in the Printer →P.628
- Loading Sheets in the Printer →P.651

**Note**

- Always make sure the loaded paper matches the type of paper specified. Adjustment cannot be completed correctly unless the setting value matches the loaded paper.

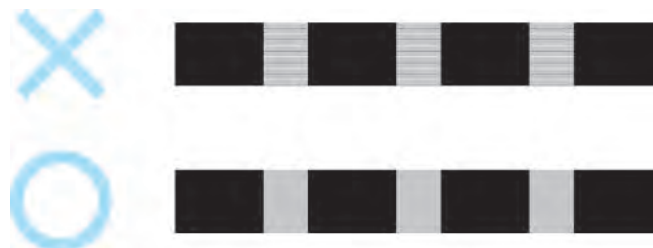**2.** Press the **Menu** button to display **MAIN MENU**.**3.** Press ▲ or ▼ to select **Adjust Printer**, and then press the ► button.**4.** Press ▲ or ▼ to select **Manual Band Adj**, and then press the ► button.**5.** Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
Test pattern A is printed for band adjustment.**6.** Examine test pattern A for band adjustment. Determine the pattern in which streaks are least noticeable.

**Note**

- If streaks seem least noticeable in two patterns but you cannot decide which one is better, choose an intermediate value. For example, choose 11 if you cannot decide whether pattern 10 or 12 is better.

7. Press ▲ or ▼ to display the number selected in step 6, and then press the **OK** button.  
Test pattern B is printed for band adjustment.
8. Examine test pattern B for band adjustment. Determine the pattern in which streaks are least noticeable.
9. Press ▲ or ▼ to display the number selected in step 8, and then press the **OK** button.  
The adjustment value is now registered, and adjustment is complete.

## Banding Adjustment During Printing (Fine Band Adj.)

If, during printing, the contrast is uneven sideways across the paper or banding in different colors appears at 50 mm (2 in.) intervals, try adjusting the feed amount as follows. The results of adjustment are applied to printing in progress, enabling you to check the results immediately. However, note that because printing is paused, colors may be slightly different. Use **Fine Band Adj.** after **Auto Band Adj.** or **Manual Band Adj.** if finer adjustment is required. (See "Auto Band Adjustment (Auto Band Adj.)." →P.677 (See "Manual Band Adjustment (Manual Band Adj.)." →P.678

**Note**

- The **Fine Band Adj.** value is reset to 0 if you use **Auto Band Adj.** or **Manual Band Adj.**

8

Execute **Fine Band Adj.** during printing as follows.

1. Press the **Online** button to pause printing.



2. Press the **Menu** button to display the menu during printing. (See "Main Menu Settings (During Printing).") →P.734



3. Press ▲ or ▼ to select **Menu Durng Prtng.** and then press the **OK** button.

4. Press ▲ or ▼ to select **Fine Band Adj.**, and then press the ► button.
5. Press ▲ or ▼ to change the value, and then press the **OK** button.

**Note**

- The supported range is -5 to +5.

6. Press the **Online** button to resume printing.



## Adjusting Line Length (Adjust Length)

Use **Adjust Length** to ensure that lines in CAD drawings are printed at exactly the right length.

In the **Adjust Length** menu, choose the mode of length adjustment ( **A:High** or **B:Standard/Draft** ) that suits your particular printing application.

- **A:High** : This setting is applied when **Highest** or **High** is selected in **Print Quality** in the printer driver.
- **B:Standard/Draft** : This setting is applied when **Standard** or **Draft** is selected in **Print Quality** in the printer driver.

Check the **Feed Priority** setting before using **Adjust Length**. (See "Selecting a Feed Amount Adjustment Method (Feed Priority).") →P.676

**Note**

- Use paper of the same type and size for adjustment as you will use for printing.
- If you have selected **Easy Settings** on the printer, follow these steps to confirm the **Print Quality** setting.
  - Windows: Click **View Settings** on the **Main** tab to display the **View Settings** dialog box.
  - Mac OS X: Click **View set.** on the **Main** pane to display the **View settings** dialog box.

### Paper to Prepare

Rolls	An unused roll at least 10 inches wide
Sheets	One sheet of unused paper of at least A4/Letter size

Follow these steps to change the **Adjust Length** setting.

1. Load paper.
  - Attaching the Roll Holder to Rolls →P.623
  - Loading Rolls in the Printer →P.628
  - Loading Sheets in the Printer →P.651


**Note**

- Always make sure the loaded paper matches the type of paper specified in the settings. Adjustment cannot be completed correctly unless the loaded paper matches the settings.

2. Press the **Menu** button to display **MAIN MENU**.



3. Press **▲** or **▼** to select **Adjust Printer**, and then press the **▶** button.
4. Press **▲** or **▼** to select **Adjust Length**, and then press the **▶** button.
5. Press **▲** or **▼** to select **A:High** or **B:Standard/Draft**, and then press the **▶** button.
6. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.  
A test pattern is printed for adjustment based on the amount of paper stretching or shrinkage. The scale bar shows **Millimeter** in 50 mm units and **Inch** in 1 inch units.

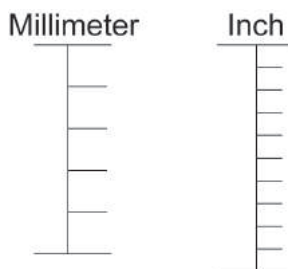**Note**

- A test pattern is printed in black when you choose **A:High** or in magenta if you choose **B:Standard/Draft**.
- To cancel printing the test pattern for adjustment, hold down the **Stop** button for a second or more, and then go to step 7.

7. Measure the length of the adjustment pattern. Calculate the difference between the measured length and actual length. Enter it as a percentage and press the **OK** button.  
You can adjust the value in 0.02% increments. Press **▲** to increase the value or **▼** to decrease it.  
If the scale is printed shorter than actual size, set the value toward the positive side; if it is printed longer, set the value toward the negative side.

**Note**

- You can also specify the adjustment value in **Adjust Length** in the **Paper Details** menu. In this case, no test pattern for adjustment is printed.



## Adjusting the Vacuum Strength (VacuumStrngth)

When printing on heavyweight paper or paper that curls or wrinkles easily, if paper rubs against the printer or the edge is wrinkled from rubbing, adjusting the level of suction against paper on the Platen may improve results.


1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **Paper Details**, and then press the ► button.
3. Press ▲ or ▼ to select the type of paper, and then press the ► button.
4. Press ▲ or ▼ to select **VacuumStrngth**, and then press the ► button.
5. Press ▲ or ▼ to select the level of suction against paper on the Platen, and then press the **OK** button.

## Printer Parts


Printer parts	685
Control Panel	692
Hard Disk	746
Optional accessories	752
Printer Specifications	765

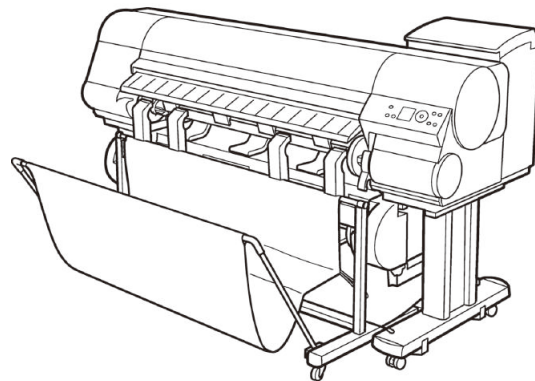

## Printer parts

Front .....	685
Back .....	687
Top Cover (Inside) .....	688
Carriage .....	689
Ink Tank Cover (Inside) .....	690

### Front

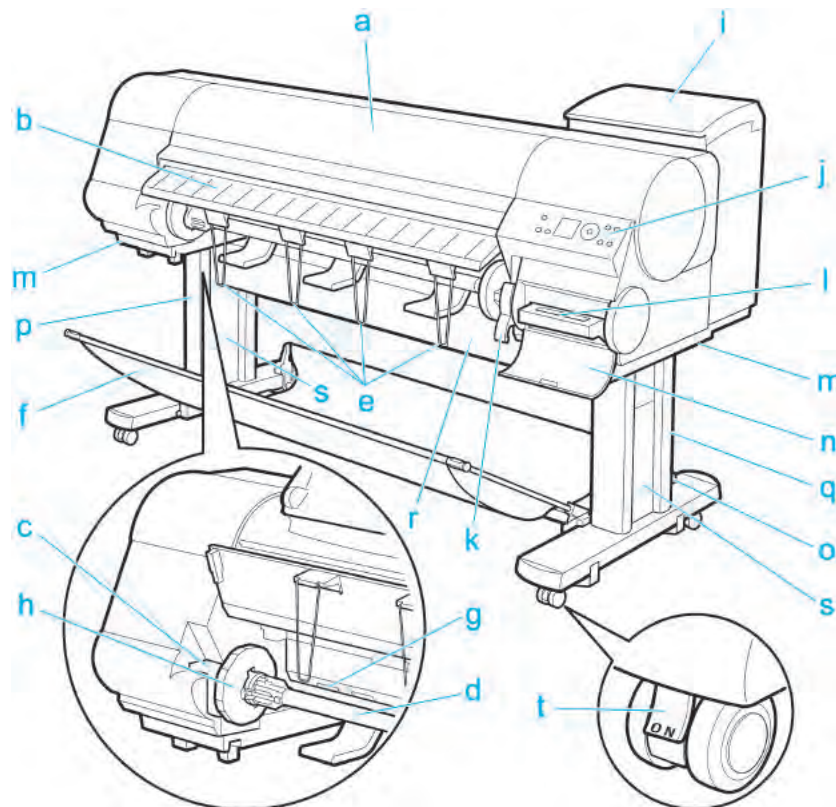

#### a. Top Cover

Open this cover to install the Printhead, load paper, and remove any jammed paper from inside the printer as needed. (See "Top Cover (Inside).") →P.688

#### b. Ejection Guide

Guides printed documents as they are ejected. Open this guide when loading a roll.

#### c. Roll Holder Slot

Slide the Roll Holder into this slot.

#### d. Roll Holder

Load the roll on this holder.

#### e. Ejection Support

Prevents printed documents from winding around the Roll Holder or being drawn into the Paper Feed Slot.

**f. Stationary Output Stacker**

A cloth tray that catches ejected documents. (See "Stationary Output Stacker.") →P.658

**g. Paper Feed Slot**

When loading a roll, insert the edge of the roll paper here.

**h. Holder Stopper**

Secure rolls on the Roll Holder with this part.

**i. Ink Tank Cover**

Open this cover to replace an Ink Tank. (See "Ink Tank Cover (Inside).") →P.690

**j. Control Panel**

Use this panel to operate the printer and check the printer status. (See "Control Panel.") →P.692

**k. Release Lever**

Releases the Paper Retainer. Lift this lever toward the front of the printer when loading paper.

**l. Maintenance Cartridge**

Ink used for maintenance purposes such as head cleaning is absorbed. (Replace the cartridge when it is full.)

**m. Carrying Handles**

When carrying the printer, have six people hold it by these handles under both sides.

**n. Maintenance Cartridge Cover**

Open this cover to replace the Maintenance Cartridge.

**o. Stand**

A stand that holds the printer. Equipped with casters to facilitate moving it.

**p. Stand L**

The left leg of the Stand.

**q. Stand R**

The right leg of the Stand.

**r. Top Stand Stay**

Supports Stand L and Stand R. Attach the optional Media Take-up Unit to this part.

**s. Leg Covers**


Covers for Stand L and Stand R.

**t. Stopper**

Locks the Stand casters.

Always release the Stopper before moving the printer. Moving the printer while the Stopper is locked may scratch the casters or the floor.

## Back

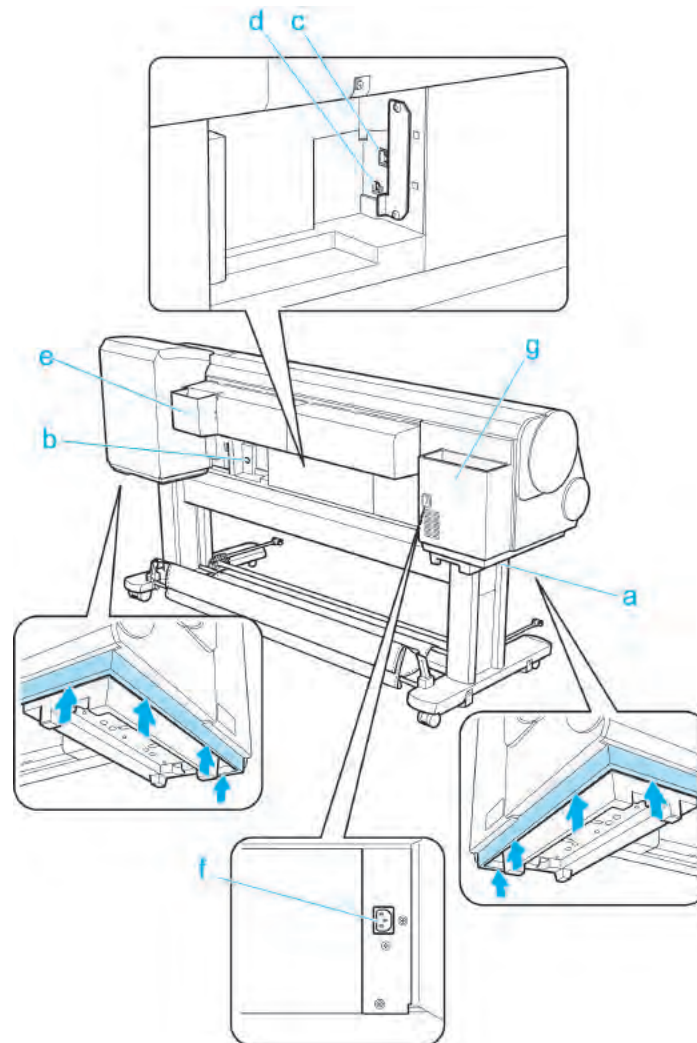**a. Carrying Handles**

When carrying the printer, have six people hold it by these handles under both sides.

**b. Media Take-up Unit Power Inlet**

Connect the power cord of the optional Media Take-up Unit here.

**c. Ethernet Port**

Connect an Ethernet cable to this port. The lamp is lit if the Ethernet cable is connected correctly and communication is possible between the computer and printer.

**d. USB Port**

Connect a USB cable to this port. The printer is compatible with Hi-Speed USB connections.

**e. Manual Pocket**

Store printer manuals in this pocket.


**f. Power Supply Connector**

Connect the power cord to this connector.

**g. Accessory Pocket**

Store assembly tools, Roll Holder attachments, and other items in this pocket.

**Top Cover (Inside)**

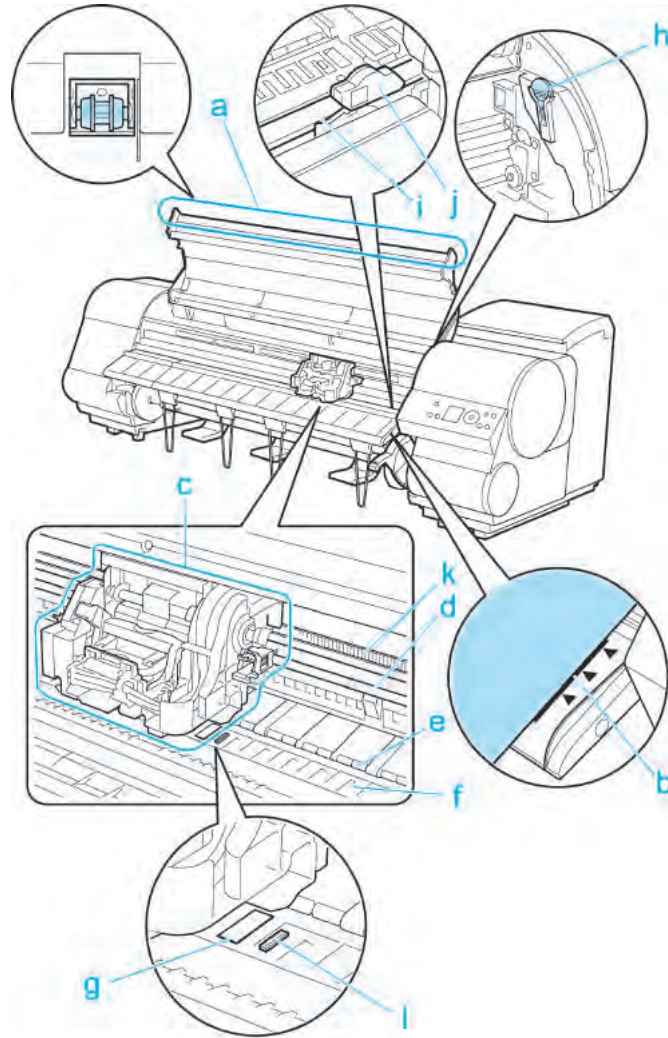

**a. Top Cover Roller**

Prevents paper from rising when ejected.

**b. Paper Alignment Line**

Align paper with this line when loading it.

**c. Carriage**

Moves the Printhead. The carriage serves a key role in printing. (See "Carriage.") →P.689

**d. Carriage Shaft**

The Carriage slides along this shaft.

**e. Paper Retainer**

Important in supplying the paper. This retainer holds paper as it is fed.



**f. Platen**

The Printhead moves across the platen to print. Vacuum holes on the platen hold paper in place.

**g. Borderless Printing Ink Grooves**

For catching ink outside the edges of paper during borderless printing.

**h. Cleaning Brush**

When cleaning inside the printer under the Top Cover, use this brush to sweep away paper dust on the Platen. Also use the brush to move the blue Switch on the Platen.

**i. Cutter Rail**

The Cutter Unit passes over this rail to cut paper.

**j. Cutter Unit**

A round-bladed cutter for automatic paper cutting.


**k. Linear Scale**

The linear scale serves a key role in detecting the Carriage position. Be careful not to touch this part when cleaning inside the Top Cover or clearing paper jams.

**l. Switch**

Set the switch to the side opposite ● if the edges of printed images are blurred. Set the switch to the ● side before borderless printing. (See "Setting the Blue Switch on the Platen.") →P.872

## Carriage

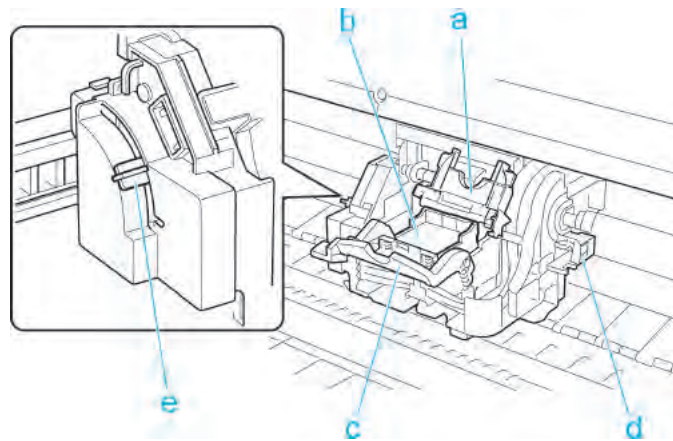**a. Printhead Fixer Cover**

Holds the Printhead in place.

**b. Printhead**

The printhead is equipped with ink nozzles. The carriage serves a key role in printing.

**c. Printhead Fixer Lever**

Locks the Printhead Fixer Cover.


**d. Shaft Cleaner**

Prevents the Carriage Shaft from becoming dirty.

**e. Angle Adjustment Lever**

Use this lever to fine-tune the printer to correct misalignment of printed lines.

## Ink Tank Cover (Inside)

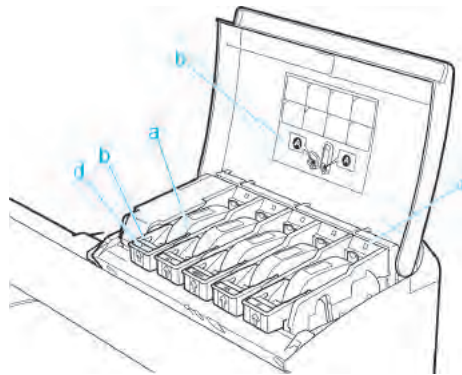

Note: The figure shows the printer as loaded with 700 ml (23.7 fl oz) Ink Tank.

### a. Ink Tanks

Cartridges of ink in various colors.

### b. Ink Tank Lock Lever

A lever that locks the Ink Tank in place and protects it. Lift and lower the lever when replacing an Ink Tank. To open it, lift the stopper of the lever until it stops, and then push it down toward the front. To close it, push it down until it clicks into place.

### c. Ink Lamp (Red)

Indicates the state of the Ink Tank as follows when the Ink Tank Cover is opened.

- On

The Ink Tank is installed correctly.

- Off

No Ink Tank is installed, or the ink level detection function is disabled.

- Flashing Slowly

Not much ink is left.

- Flashing Rapidly


Ink tank is empty.

### d. Ink Color Label

Load an Ink Tank that matches the color and name on this label.

### e. Ink Set

An Ink Tank that can be used in the printer is labeled with a white letter **A** in a black circle on the side. When purchasing an Ink Tank, make sure an **A** is printed on the label. (See "Ink Tanks.") →P.803

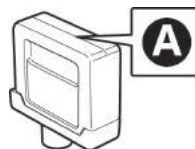




## Control Panel

Control Panel .....	692
Turning the Printer On and Off .....	694
Printer Modes .....	696
Switching Modes .....	702
Printer Menu Operations .....	704
Main Menu Operations .....	705
Menu Structure .....	709
Main Menu Settings .....	722
Main Menu Settings (During Printing) .....	734
Submenu Display .....	735
Status Print .....	736
Checking Instructions During Printer Operations .....	743

## Control Panel

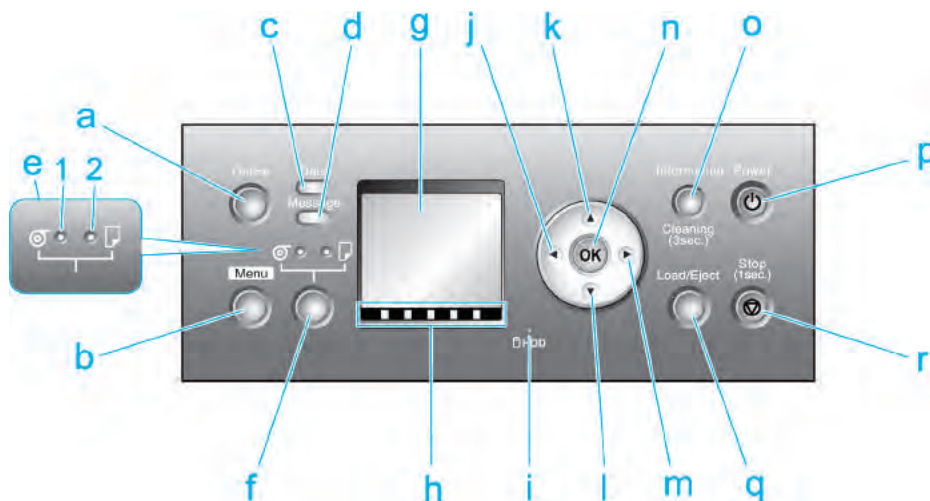

### a. Online Button (Green)

Switches the printer online and offline. (See "Switching Modes.") →P.702

- On

The printer is online.

- Flashing

The printer is switching modes.

- Off

The printer is offline.

### b. Menu Button

Displays the main menu of the printer. (See "Main Menu Settings.") →P.722

**c. Data lamp (Green)**• **Flashing**

During printing, the Data lamp flashes when the printer is receiving or processing print jobs. Otherwise, this lamp flashes when the print job is paused or the printer is updating the firmware.

• **Off**

There are no active print jobs when the Data lamp is off.

**d. Message lamp (Orange)**• **On**

A warning message is displayed.

• **Flashing**

An error message is displayed.

• **Off**

The printer is off or is operating normally.

**e. Paper Source Section**

After you press the **Feeder Selection** button, the lamp for your chosen paper source is lit.

**1. Roll Media lamp (Green)**• **On**

Indicates that a roll is selected as the paper source.

• **Off**

Indicates that a sheet is selected as the paper source.

**2. Cut Sheet lamp (Green)**• **On**

Indicates that a sheet is selected as the paper source.

• **Off**

Indicates that a roll is selected as the paper source.

**f. Feeder Selection Button**

Switches the paper source. Each time you press this button, the paper source switches between the roll and the sheet, and the corresponding lamp on the Paper Source Section is lit.

**g. Display Screen**

Shows the printer menu, as well as the printer status and messages.

**h. Color Label**

This label indicates the Ink Tank color. The label corresponds to the ink level on the Display Screen.

**i. HDD lamp (Green)**• **On**

Indicates the printer is accessing the hard disk.

• **Off**

Indicates the printer is not accessing the hard disk.

**j. ◀ Button**

Menu mode: Press this button to display the menu one level higher.

**k. ▲ Button**

Offline: Press this button to rewind rolls manually. (See "Feeding Roll Paper Manually.") →P.638

Menu mode: Press this button to display the previous menu item or setting value.

**l. ▼ Button**

Offline mode: Press this button to feed the roll manually in the direction of ejection, as needed. (See "Feeding Roll Paper Manually.") →P.638

Menu mode: Press this button to display the next menu item or setting value.

**m. ► Button**

Menu mode: Press this button to display the menu one level lower.

**n. OK Button**

In Menu mode, press this button to confirm or execute the selected item or setting. Also press this button if the Display Screen indicates to press the **OK** button.

**o. Information Button**

Displays printer submenus. Press this button to display information about ink, paper, and so on. (See "Submenu Display.") →P.735

You can also hold down this button for three seconds to clean the Printhead ( **Head Cleaning A** ).

**p. Power Button**

Turns the printer on and off. (See "Turning the Printer On and Off.") →P.694

**q. Load/Eject Button**

By pressing this button, you can check instructions on loading and removing paper. Instructions for loading paper are shown on the Display Screen if pressed when no paper is loaded, and instructions for removing paper are shown if paper is loaded.

**r. Stop Button**

Hold down for at least a second to cancel print jobs in progress or end the ink drying period.



**Note**

- In Sleep mode, you can press any button except the **Power** button to bring the printer online again.

## Turning the Printer On and Off


### Turning the printer on

1. Press the **Power** button to turn on the printer.  
The printer will now start up.  
After the Display Screen shows the Canon logo, "**Starting up... Please wait.**" is displayed.





2. The printer goes online in preparation for printing after startup, and the Online lamp and paper source section lamp remain lit.

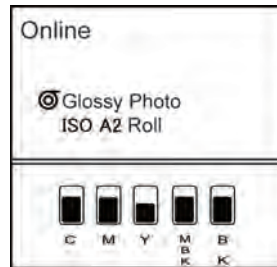

The printer will not go online in the following situations. Take action as needed.

- **The Top Cover is open**

Close the Top Cover.

- **The Ink Tank Cover is open**

Close the Ink Tank Cover.

- **The Printhead is not installed**

Please see "Replacing the Printhead." →P.820

- **Ink Tank is not installed**

Please see "Replacing Ink Tanks." →P.803

- **ERROR is shown on the Display Screen**

Turn off the printer and contact your Canon dealer.

- **The Online lamp and Message lamp are not lit (even once), and nothing appears on the Display Screen**

Make sure the printer is plugged in correctly. Check the connection at the plug and electrical outlet.

- **No paper is loaded**

Load paper. (See "Loading and Printing on Rolls." →P.3 (See "Loading and Printing on Sheets." →P.8



**Important**

- Starting the printer when it is connected via the USB cable to a Macintosh computer that is off may cause the computer to start up at the same time. To prevent this, disconnect the USB cable before starting the printer. Connecting the printer to the computer via a USB hub may solve this issue.

## Turning the printer off



**Important**

- Never disconnect the printer's power supply or unplug it during a print job. This could damage the printer.

1. Make sure no print jobs are in progress.  
If the Message lamp is flashing, check the message on the Display Screen and take action as necessary. (See "Error Messages →P.891 .")



If the Data lamp is flashing, the printer is receiving a print job. Turn off the printer only after printing is finished.



2. Hold down the **Power** button for more than a second.



After "Shut Down.. Please Wait.." is shown on the Display Screen, the printer shuts off.

## Printer Modes

Printer modes are classified as follows and described in this topic.

- Modes →P.696
- Mode transition →P.698
- Online, and state of the Control Panel →P.699
- Offline, and state of the Control Panel →P.699
- Menu mode, and state of the Control Panel →P.701
- Submenu mode, and state of the Control Panel →P.701

## Modes

The printer has five modes as follows:

- **Online**

The printer is ready to receive jobs sent from the computer. Jobs sent from the computer are processed immediately. If jobs are received in other modes, they are printed the next time the printer goes online.

- **Offline**

Any jobs sent from the computer are held without being printed.

While the printer is offline, you can feed or cut roll paper manually.

The printer goes offline automatically if jobs cannot be processed, such as if errors occur.

- **Menu mode**

Menus are displayed on the printer, and you can select, set, or execute menu items. Any jobs sent from the computer are held without being printed.

- **Submenu mode**

Submenus are displayed regarding ink and paper information. Jobs can be received and printing is possible while submenus are displayed and the printer is online. In other modes, any jobs sent from the computer are held without being printed while submenus are displayed.

- **Sleep mode**


The printer is in power-saving mode. The printer automatically enters Sleep mode to conserve power if it is idle for a specific period (by factory default, five minutes), that is, if no print jobs are received or buttons are pressed while all covers are closed.

You can specify the period before the printer enters Sleep mode in the **Sleep Timer** menu. (See "Main Menu Settings.") →P.722

If any print jobs are received when the printer is in Sleep mode (after it was originally online), the printer goes online and prints the jobs.

## Mode transition



The printer mode transitions are as follows:

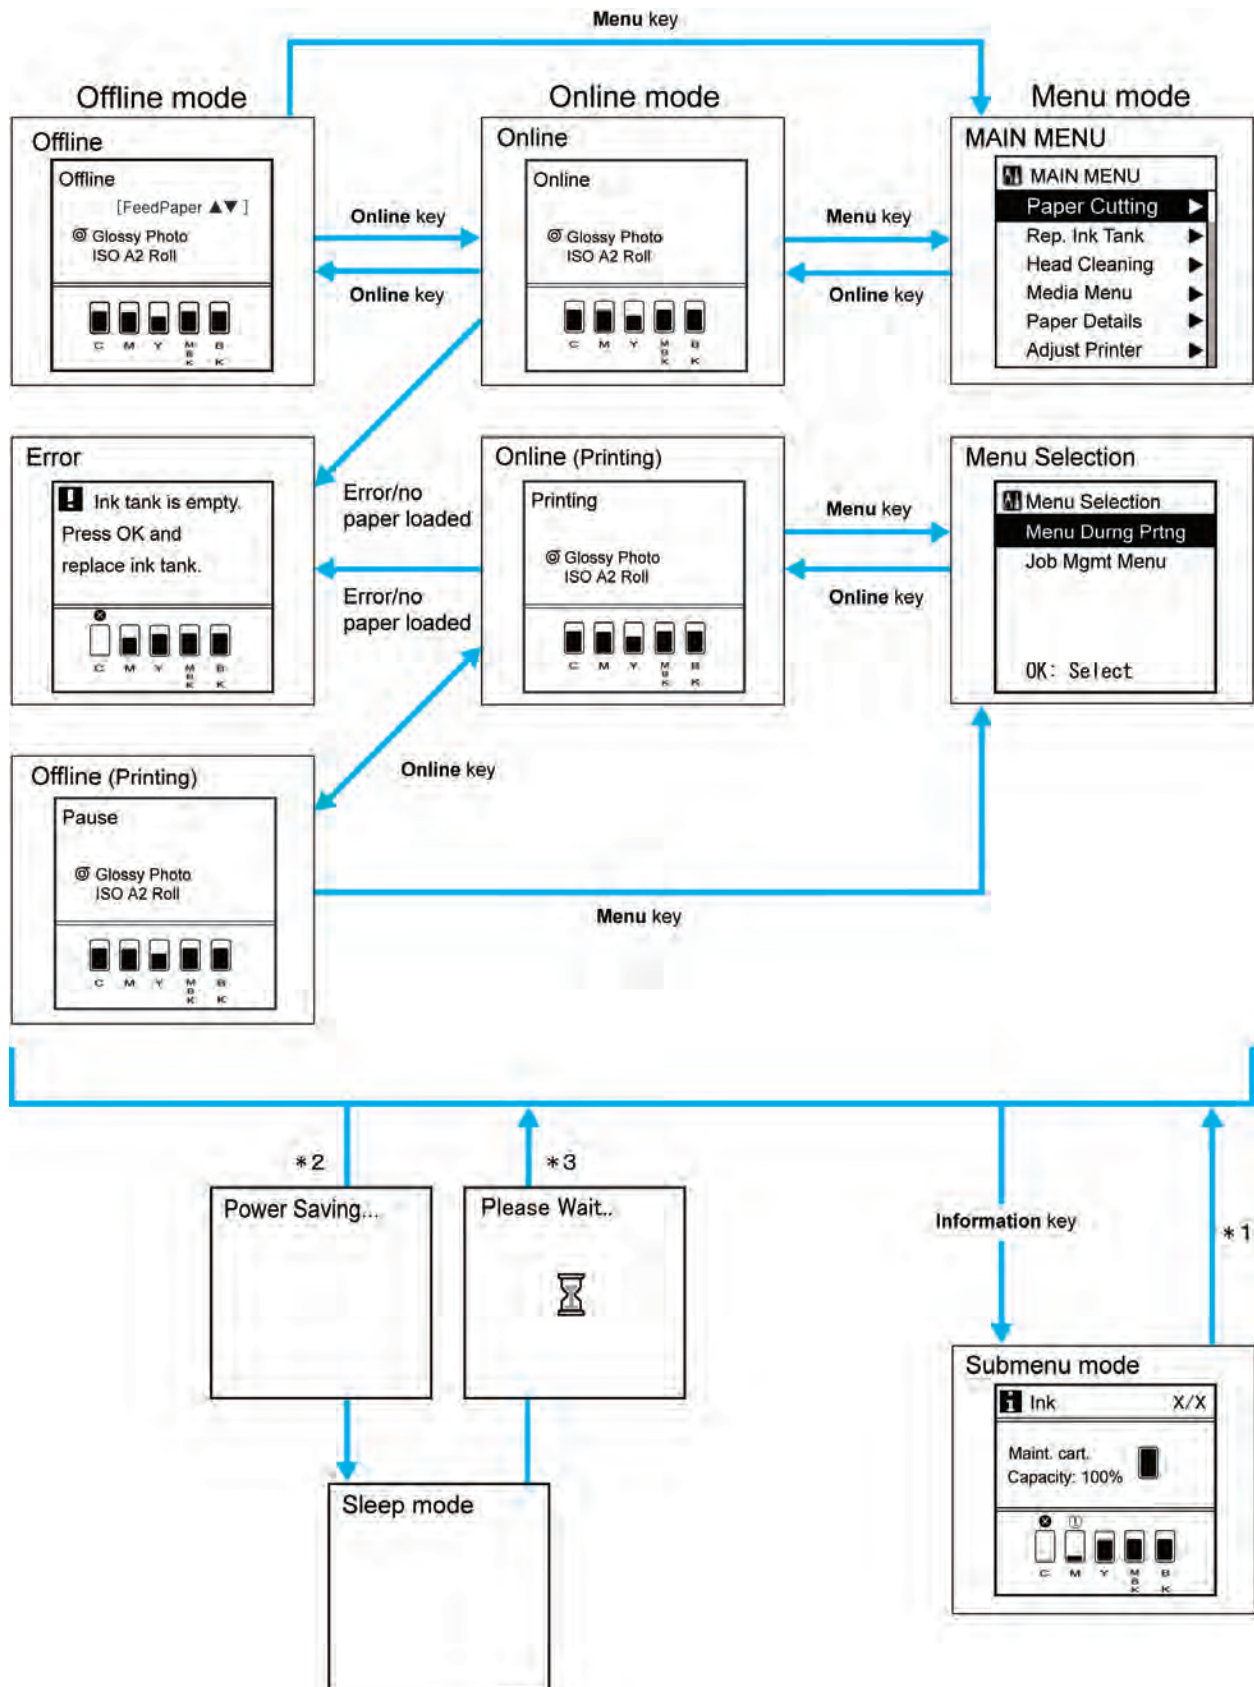

9



- \*1: When submenus are displayed, you can press any button other than the **Information** button to return to the previous mode.
- \*2: The printer automatically enters Sleep mode if it is idle for a specific period (by factory default, five minutes), that is, if no print jobs are received or buttons are pressed while all covers are closed. However, it does not enter Sleep mode while error messages are displayed.
- \*3: In Sleep mode, the printer can be restored to the previous state by pressing any button. Sleep mode is also terminated if a print job is received or a command is issued from RemoteUI.

## Online, and state of the Control Panel

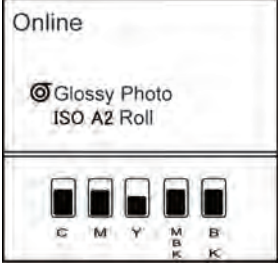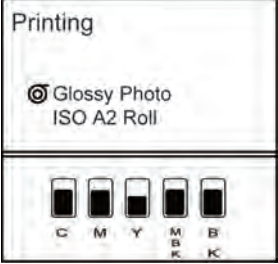



Not printing	Printing in progress (receiving or processing print jobs)
	
<p>Display Screen</p> <ul style="list-style-type: none"> <li>• <b>Top Line of the Display Screen</b> The printer status is displayed here. The selected paper source is indicated by an icon to the left of the type of paper.</li> <li>• <b>Middle Level of the Display Screen</b> The first and second lines display the paper type and size. Any warning messages are displayed here on lines 2–4. Take the appropriate action. (See "Error Messages →P.891".)</li> <li>• <b>Bottom Line of the Display Screen</b> Here, the remaining ink level is indicated. (See "Checking Ink Tank Levels." →P.815)</li> </ul> <p>Control Panel</p> <ul style="list-style-type: none"> <li>• <b>Online lamp</b> Lit when the printer is online.</li> <li>• <b>Data lamp</b> Flashes when print jobs are being received or processed.</li> <li>• <b>Message lamp</b> Lit when warning messages are displayed.</li> </ul>	
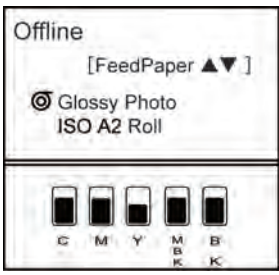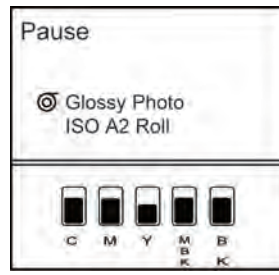
## Offline, and state of the Control Panel

Offline

Not printing	Printing is paused
	
<p>Display Screen</p> <ul style="list-style-type: none"> <li>• <a href="#">Display Screen</a> The printer status is displayed here. The selected paper source is indicated by an icon to the left of the type of paper.</li> <li>• <a href="#">Middle Level of the Display Screen</a> The first and second lines display the paper type and size. Any warning messages are displayed here on lines 2–4. Take the appropriate action. (See "Error Messages →P.891".)</li> <li>• <a href="#">Bottom Line of the Display Screen</a> Here, the remaining ink level is indicated. (See "Checking Ink Tank Levels.") →P.815</li> </ul> <p>Control Panel</p> <ul style="list-style-type: none"> <li>• <a href="#">Message lamp</a> Lit when warning messages are displayed.</li> </ul>	

Error Messages

If action can be taken	If no action can be taken
	
	
<ul style="list-style-type: none"> <li>• <a href="#">Top Line of the Display Screen</a> Error messages are displayed.</li> <li>• <a href="#">Bottom Line of the Display Screen</a> Here, the remaining ink level is indicated. (See "Checking Ink Tank Levels.") →P.815</li> </ul>	<ul style="list-style-type: none"> <li>• <a href="#">Top Line of the Display Screen</a> Error messages are displayed.</li> <li>• <a href="#">Bottom Line of the Display Screen</a> The corrective actions are displayed here.</li> </ul>
<ul style="list-style-type: none"> <li>• <a href="#">Data lamp</a> Flashes when print jobs are being received.</li> <li>• <a href="#">Message lamp</a> Flashes when error messages are displayed.</li> </ul>	<ul style="list-style-type: none"> <li>• <a href="#">Data lamp</a> Flashes when print jobs are being received.</li> <li>• <a href="#">Message lamp</a> Flashes when error messages are displayed.</li> </ul>




9

700




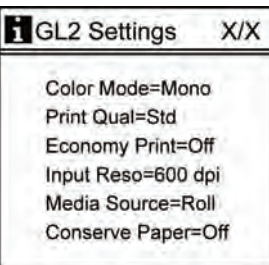


If action can be taken	If no action can be taken
Take the appropriate action. (See "Error Messages" →P.891 .")	Turn off the printer and wait at least three seconds before restoring the power. If the message is still displayed after this, write down the error code and message, turn off the printer, and contact the Canon dealer for assistance.

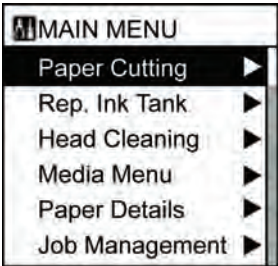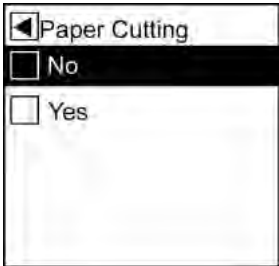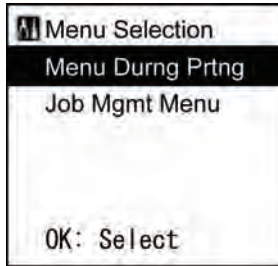Menu mode, and state of the Control Panel

Main menu	Menu items and settings	Main menu (during printing)
		
<ul style="list-style-type: none"> <li>• <b>Display Screen</b></li> </ul> <p>Pressing the <b>Menu</b> button when printing is not in progress displays the main menu.</p> <p>The title of the selected menu is displayed on the first line, and menus immediately under the current menu are displayed on the second and subsequent lines. Lower level menus are available if ► is displayed at right. (See "Main Menu Operations.") →P.705</p>	<ul style="list-style-type: none"> <li>• <b>Display Screen</b></li> </ul> <p>The title of the selected menu is displayed on the first line, and menu items or settings are displayed on the second and subsequent lines. (See "Main Menu Operations.") →P.705</p> <p>The menu of options available during printing (top figure) can be displayed by pressing the ► button when the main menu is displayed (left figure).</p>	<ul style="list-style-type: none"> <li>• <b>Display Screen</b></li> </ul> <p>Menus available during printing are displayed if you press the <b>Menu</b> button during printing.</p> <p>If you select a menu, the title of the selected menu is displayed on the first line, and menus immediately under the current menu are displayed on the second and subsequent lines. Lower level menus are available if ► is displayed at right. (See "Main Menu Operations.") →P.705</p>

Submenu mode, and state of the Control Panel

Remaining Maintenance Cartridge capacity and ink levels	Information on the loaded paper	Printer information	HP-GL/2 setting information
			
<p>Press the <b>Information</b> button to display this information, one after another: the Maintenance Cartridge capacity and remaining ink levels, paper information, printer information, and GL2 settings information. (See "Submenu Display.") →P.735</p>			

## Switching Modes

### Switching the Printer Online/Offline

Press the **Online** button to switch the printer online or offline.



The Online lamp is lit in Online mode. Printing is possible in this mode.



The Online lamp is off in Offline mode.



Depending on the status, the printer switches online and offline as follows.

Printer Status	When <b>Online</b> is Pressed
Online	The printer switches offline and the Online lamp goes off.
Online, printing	Switches offline and printing is paused. When printing is paused, the <b>Printing</b> menu is available.
Offline	If paper has been advanced, the printer goes online and the Online lamp is lit.
Offline, when an error message is displayed	In the case of error messages other than those shown below or if paper is not loaded, the printer remains offline until you solve the problem. The Online lamp remains off.
	If the following error messages are displayed, the printer goes online and printing is resumed. <ul style="list-style-type: none"> <li>• <b>"Insufficient paper for job"</b></li> <li>• <b>"PHead needs cleaning."</b></li> </ul>

Printer Status	When <b>Online</b> is Pressed
Offline, when an error message is displayed	<ul style="list-style-type: none"> <li>• "<b>Pap'r Size Mismatch</b>"</li> <li>• "<b>Pap'r Type Mismatch</b>"</li> </ul>
Menu mode	If paper has been advanced, the printer goes online and the Online lamp is lit.
Menu mode, printing	Switches online and the Online lamp is lit. Print is resumed.

## Switching to Menu Mode

Press the **Menu** button to display the main menu.



Depending on the status, the printer switches to Menu mode as follows.

Printer Status	When <b>Menu</b> is Pressed
Online	Switches to Menu mode.
Online, printing	Either menus available during printing or a screen to manage print jobs is displayed. If you select a menu, the printer switches to that menu mode.
Offline	Switches to Menu mode.
Offline, printing	Menus available during printing are displayed.
Offline, when an error message is displayed	You cannot access Menu mode until the problem is solved.

Press the **Information** button to display the submenus.



Press the **Information** button to display the Maintenance Cartridge capacity and remaining ink levels, as well as information on the loaded paper and the printer. Press the **Information** button repeatedly to change the information displayed. (See "Submenu Display.") →P.735

Press any button other than the **Information** button to restore the previous mode.

After you display a submenu, the printer will revert to the previous mode in about ten seconds if no print job is received or if you do not operate the printer.

**Note**

- You can start **Head Cleaning A** by holding down the **Information** button for three seconds or more. (See "Cleaning the Printhead.") →P.819

## Printer Menu Operations

The printer menu includes a main menu and submenus.

- Main menu operations when no print job is in progress →P.704
- Main menu operations during printing →P.704
- Submenu operations →P.705

### Main menu operations when no print job is in progress

Access the main menu by pressing the **Menu** button on the Control Panel.

**Note**

- The main menu will not be displayed in the following case even if you press the **Menu** button.
  - An error message is displayed:  
Switches to Menu mode after the problem is solved.

The following operations are available from the main menu.

- Paper settings
- Print settings
- Printer settings
- HP-GL/2 settings
- Job management menu operations

For a description of specific items available in the main menu, see "Main Menu Settings." →P.722

For instructions on selecting and setting main menu items, see "Main Menu Operations." →P.705

**Note**

- By default, main menu settings apply to all print jobs. However, for settings that are also available in the printer driver, the values specified in the printer driver take priority.

### Main menu operations during printing

The **Menu Durng Prtng** and **Job Mgmt Menu** can be accessed from the **Menu Selection** screen by pressing the **Menu** button on the control panel during printing. Other menus are available after printing is finished.

**Note**

- The **Menu Selection** screen will not be displayed in the following case even if you press the **Menu** button.
  - An error message is displayed:  
Switches to Menu mode after the problem is solved.

The following operations are available from the main menu during printing.

#### Menu Durng Prtng

- Printhead cleaning
- Manual adjustment of the paper feed amount

- Display of printer-related information

### Job Mgmt Menu

- Job management menu operations

For a description of specific items available in the main menu during printing, see "Main Menu Settings (During Printing)." →P.734

For instructions on selecting and setting main menu items during printing, see "Main Menu Operations." →P.705

### Submenu operations

Access submenus by pressing the **Information** button on the Control Panel. You can check the following information in submenus.

- Remaining Maintenance Cartridge capacity
- Ink levels
- Information on the loaded paper
- Printer information
- HP-GL/2 setting information

For a description of specific items displayed in submenus, see "Submenu Display." →P.735


## Main Menu Operations

Press the **Menu** button to display the main menu. For details, see "Main Menu Settings." →P.722

- Main menu (displayed if you press the **Menu** button when printing is not in progress)



- Menu selection (if you press the **Menu** button when printing is in progress)

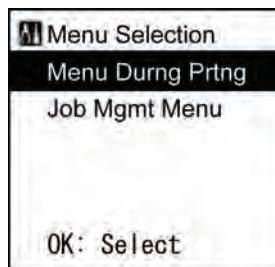

#### Note

- The main menu will not be displayed in the following case even if you press the **Menu** button.
  - **When an error message is displayed**  
You can switch to Menu mode after the problem is solved.

Simply press buttons on the Control Panel to access various function menus from the main menu and set or execute menu items.


The following section describes menu operations and how they are presented in this **User Manual**.

- Accessing menus →P.706
- Specifying menu items →P.707
- Specifying numerical values →P.707
- Executing menu commands →P.708


### Accessing menus

Printer menus are grouped by function.

Menus are displayed with the upper line selected. Use the buttons on the Control Panel to access each menu.

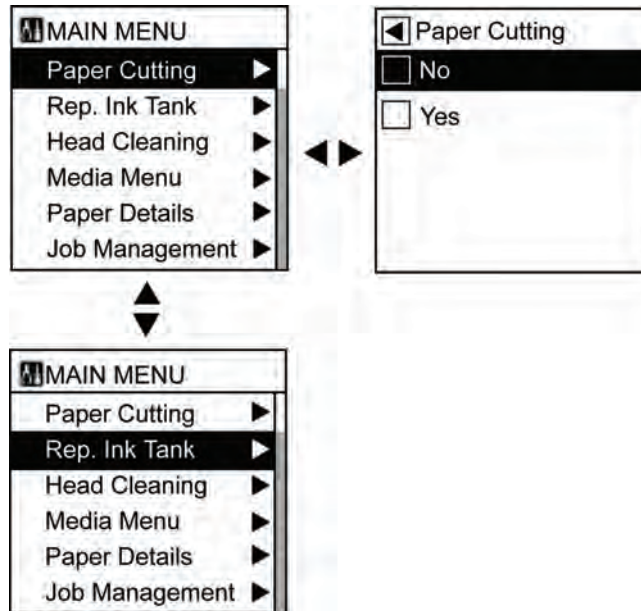

- Press ▲ to access a higher level menu on the same screen, and press ▼ to access a lower one. If not all menus can be displayed on the screen at once, press ▲ and ▼ to scroll the menu. Items you select are highlighted.

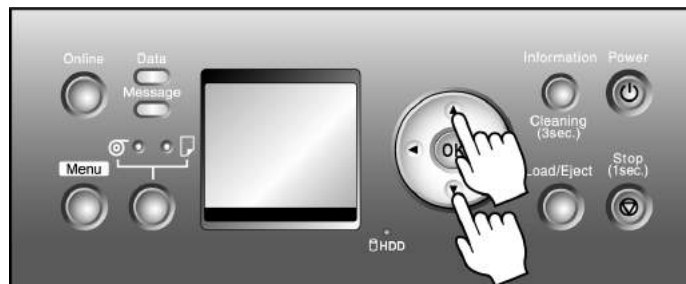


The scroll bar at right indicates the current position in the overall menu.

- Lower level menus are available if ► is displayed at right. To access these lower level menus, select a menu and press ►.




- Upper level menus are available if ◀ is displayed at left in the top line. To access these upper level menus, press ◀.

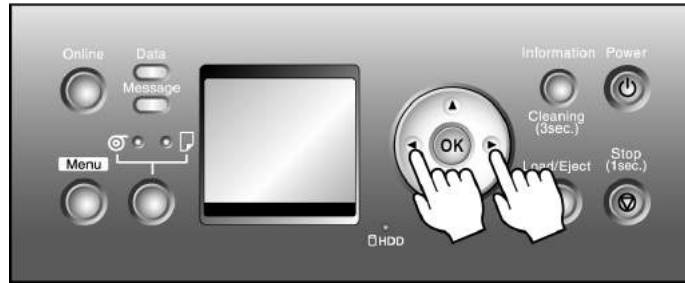

## Specifying menu items

Follow these steps to specify menu items.

1. Press ▲ or ▼ to select a menu, and then press the ► button.  
Repeat these steps until the desired menu options are displayed.
2. Press ▲ or ▼ to select a setting item to complete, and then press the OK button.  
The check box at left is selected, and the setting is confirmed.

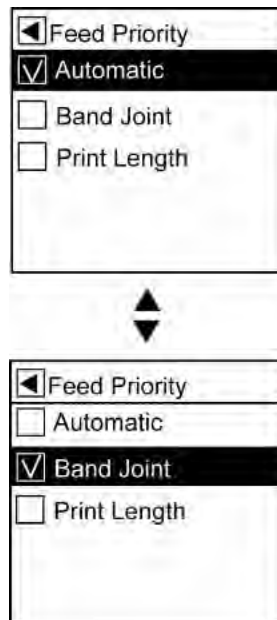

After two seconds, the display reverts to the upper level menu.

3. Press the **Online** button to bring the printer online.



### Note


- If a confirmation message is displayed regarding the setting you entered, press the **OK** button. The setting is applied, and the printer goes online.

## Specifying numerical values

Follow these steps to enter numbers. In this example, network settings items are entered.

1. Press ▲ or ▼ to select **Interface Setup**, and then press the ► button.

2. Press ▲ or ▼ to select **TCP/IP**, and then press the ► button.
3. Press ▲ or ▼ to select **IP Setting**, and then press the ► button.
4. Press ▲ or ▼ to select **IP Address**, and then press the ► button.
5. Press ◀ or ▶ to move the cursor ( ) to each field for entering numbers.

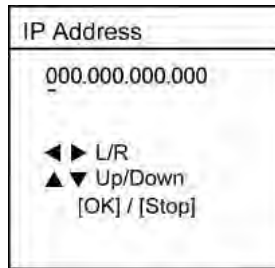

6. Press ▲ or ▼ to enter the number, and then press the **OK** button.



**Note**

- Hold down ▲ or ▼ to increase or decrease the value continuously.
- Make sure the IP address you enter for the printer is not the same as any computer IP address in your network.

7. Repeat steps 5 and 6 to continue entering numbers.

8. Press the **Online** button to bring the printer online.



**Note**


- If a confirmation message is displayed regarding the setting you entered, press the **OK** button. The setting is applied, and the printer goes online.

### Executing menu commands

Follow these steps to execute menu commands.

1. Press ▲ or ▼ to select a menu, and then press the ► button.  
Repeat these steps until the desired menu options are displayed.

2. Press ▲ or ▼ to select a setting item to execute, and then press the **OK** button.

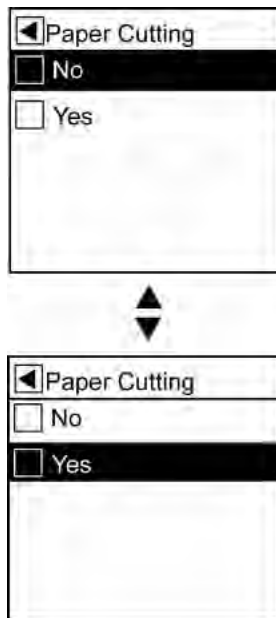

After two seconds, the menu command is executed. After commands are executed, in most cases the printer reverts to the state before the menu operation, either online or offline.

## Menu Structure

### Main Menu

The structure of the main menu is as follows. Values at right indicated by an asterisk \* are the defaults.

For instructions on menu operations, see "Main Menu Operations." →P.705

For details on menu items, see "Main Menu Settings." →P.722 .

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level
<b>Paper Cutting</b> (*1 →P.720 )	<b>No *</b>						
	<b>Yes</b>						
<b>Rep. Ink Tank</b>	<b>No *</b>						
	<b>Yes</b>						
<b>Head Cleaning</b>	<b>Head Cleaning A *</b>						
	<b>Head Cleaning B</b>						
<b>Auto Feed</b> (*11 →P.721 )	<b>No *</b>						
	<b>Yes</b>						

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level
<b>Take-up Reel</b> (*9 →P.721 )	<b>Disable *</b>						
	<b>Enable</b>						
<b>Paper Menu</b>	<b>Cut Sheet Type</b>	(The paper type is displayed here.) (*5 →P.720 )					
	<b>Roll Media Type</b> (*1 →P.720 )	(The paper type is displayed here.) (*5 →P.720 )					
	<b>Roll Length Set</b> (*1 →P.720 ) , (*2 →P.720 )	<b>##.# m</b>					
		<b>### feet</b> (*13 →P.721 )					
<b>ManageRemainRoll</b>	<b>Off *</b>						
	<b>On</b>						
<b>Paper Details</b> (The paper type is displayed here.) (*5 →P.720 )	<b>Roll DryingTime</b>	<b>Off</b>					
		<b>30 sec.</b>					
		<b>1 min.</b>					
		<b>3 min.</b>					
		<b>5 min.</b>					
		<b>10 min.</b>					
		<b>30 min.</b>					
		<b>60 min.</b>					
	<b>Scan Wait Time</b>	<b>Dry time</b>	<b>Off *</b>				
			<b>1 sec.</b>				
<b>3 sec.</b>							
<b>5 sec.</b>							
<b>7 sec.</b>							
<b>Area</b> (*14 →P.721 )	<b>Entire area *</b>						
	<b>Leading edge</b>						
<b>Feed Priority</b>	<b>Automatic *</b>						
	<b>Band Joint</b>						
	<b>Print Length</b>						

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level	
<b>Paper Details</b>	(The paper type is displayed here.) (*5 →P.720 )	<b>Adjust Length A</b>	From -0.70% to 0.70%					
		<b>Adjust Length B</b>	From -0.70% to 0.70%					
		<b>Head Height</b>	<b>Automatic *</b>					
			<b>Highest</b>					
			<b>High</b>					
			<b>Standard</b>					
			<b>Low</b>					
			<b>Lowest</b>					
		<b>Skew Check Lv.</b>	<b>Standard *</b>					
			<b>Loose</b>					
			<b>Off</b>					
		<b>Vacuum Strength</b>	<b>Automatic *</b>					
			<b>Strongest</b>					
			<b>Strong</b>					
			<b>Standard</b>					
			<b>Weak</b>					
			<b>Weakest</b>					
		<b>Width Detection</b>	<b>Off</b>					
			<b>On *</b>					
		<b>NearEnd RollMrgn</b>	<b>3mm</b>					
			<b>20mm</b>					
		<b>Cut Speed</b>	<b>Fast</b>					
			<b>Standard</b>					
			<b>Slow</b>					
		<b>Trim Edge First</b>	<b>Automatic</b>					
			<b>Off</b>					
			<b>On</b>					
		<b>Cutting Mode</b>	<b>Automatic</b>					
			<b>Eject</b>					
			<b>Manual</b>					
		<b>Bordless Margin</b>	<b>Automatic</b>					
			<b>Fixed</b>					
<b>CutDustReduct.</b>	<b>Off</b>							
	<b>On</b>							
<b>NearEnd Sht Mrgn</b>	<b>3mm</b>							
	<b>20mm</b>							

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level				
<b>Paper Details</b>	(The paper type is displayed here.) (*5 →P.720 )	<b>Return Defaults</b>	<b>No</b>								
			<b>Yes</b>								
<b>Job Management</b>	<b>Print Job</b>	<b>Job List</b>	(Choose a print job.)	<b>Delete</b>							
				<b>Preempt Jobs</b>							
	<b>Stored Job</b>	<b>Mailbox List</b>	(Enter a password if one has been set.)	<b>Job List</b>	<b>Print</b>						
					<b>Delete</b>						
	<b>Print Job List</b>	<b>No</b>									
		<b>Yes</b>									
	<b>Job Log</b>	(Choose from information about the latest three print jobs.)	<b>Document Name</b>								
			<b>User Name</b>								
			<b>Page Count</b>								
			<b>Job Status</b>	<b>OK</b>							
				<b>CANCELED</b>							
			<b>Print Start Time</b>	yyyy/mm/dd hh:mm							
			<b>Print End Time</b>	yyyy/mm/dd hh:mm							
<b>Print Time</b>			xxxsec.								
<b>Print Size</b>			xxxxxxxxsq.mm								
<b>Media Type</b>											
<b>Interface</b>			<b>USB</b>								
	<b>Network</b>										
<b>Ink Consumed</b>	(The total amount of ink consumed and ink colors are displayed here.)						<b>xxx.xxx ml</b>				
<b>HDD Information</b>	<b>HDDSpace :xx.x GB</b>										
<b>GL2 Settings</b>	<b>Quality Manager</b>	<b>Color Mode</b>	<b>Monochrome</b>								
			<b>Color (CAD) 1 *</b>								
			<b>Color (CAD) 2</b>								
			<b>Color (CAD) 3</b>								
			<b>Color (CAD) 4</b>								



First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level			
<b>GL2 Settings</b>	<b>Quality Manager</b>	<b>Color Mode</b>	<b>Color (CAD) 5</b>							
			<b>Color (CAD) 6</b>							
		<b>Print Quality</b>	<b>Fast</b>							
			<b>Standard *</b>							
			<b>High</b>							
		<b>Input Resolution</b>	<b>600dpi *</b>							
			<b>300dpi</b>							
		<b>Print (Economy)</b>	<b>Off *</b>							
			<b>On</b>							
		<b>Paper Manager</b>	<b>Paper Source</b>	<b>Automatic *</b>						
				<b>Roll Paper</b>						
				<b>Cut Sheet</b>						
	<b>Margin</b>		<b>3mm(Standard) *</b>							
			<b>5mm</b>							
	<b>Conserve Paper</b>		<b>Off *</b>							
			<b>On</b>							
	<b>Auto Rotate</b>		<b>Off *</b>							
			<b>On</b>							
	<b>Nesting</b>		<b>Use Nesting</b>	<b>Off *</b>						
				<b>On</b>						
			<b>Nesting WaitTime</b>	<b>xx min.</b>						
			<b>Cut Lines</b>	<b>Off *</b>						
	<b>On</b>									
	<b>Line &amp; Pen Manager</b>		<b>Enable merge</b>	<b>Off *</b>						
		<b>On</b>								
		<b>Pen Setup</b>	<b>Select Palette</b>	<b>Software *</b>						
				<b>Palette A</b>						
				<b>Palette B</b>						
<b>Define Palette</b>		<b>Palette A</b>	(Select the pen number)	<b>Width</b>		(Indicates the value of <b>Width</b> )				
				<b>Color</b>		0~255				
				<b>Line Attributes</b>		<b>No Setting</b>				
	<b>Circle Setting</b>									

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level		
<b>GL2 Settings</b>	<b>Line &amp; Pen Manager</b>	<b>Pen Setup</b>	<b>Define Palette</b>	<b>Palette B</b>	(Select the pen number)	(Indicates <b>Width, Color, and Line Attributes</b> )	(Specify the values of <b>Width, Color, and Line Attributes</b> )		
				<b>Factory</b>	(Select the pen number)			(Indicates <b>Width, Color, and Line Attributes</b> )	
			<b>Reset Palette</b>	<b>All Palette</b>					
				<b>Palette A</b>					
				<b>Palette B</b>					
			<b>Smoothing</b>	<b>Software *</b>					
		<b>Smooth</b>							
		<b>Thicken-FineLines</b>	<b>Off *</b>						
			<b>On</b>						
		<b>Adjust-FaintLines</b>	<b>Off</b>						
	<b>On *</b>								
	<b>ProcessingOption</b>	<b>Warning</b>	<b>Off *</b>						
			<b>On</b>						
		<b>On-the-Fly</b>	<b>Off *</b>						
			<b>On</b>						
		<b>PageSize-Process1</b>	<b>Off *</b>						
			<b>On</b>						
		<b>PageSize-Process2</b>	<b>Off *</b>						
			<b>On</b>						
	<b>Adjust Printer</b>	<b>Auto Head Adj.</b>	<b>Standard Adj.</b>	<b>No</b>					
<b>Yes</b>									
<b>Advanced Adj.</b>			<b>No</b>						
			<b>Yes</b>						
<b>Auto Print</b>			<b>Off</b>						
			<b>On *</b>						
<b>Manual Head Adj (*10 →P.721)</b>		<b>No</b>							
		<b>Yes</b>							
<b>Auto Band Adj.</b>		<b>Standard Adj.</b>	<b>No</b>						
			<b>Yes</b>						
		<b>Advanced Adj.</b>	<b>No</b>						
			<b>Yes</b>						

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level		
<b>Adjust Printer</b>	<b>Manual Band Adj</b>	<b>No</b>							
		<b>Yes</b>							
	<b>Adjust Length (*3 →P.720)</b>	<b>A:High</b>	<b>No</b>						
			<b>Yes</b>						
		<b>B:Standard/Draft</b>	<b>No</b>						
			<b>Yes</b>						
<b>Head Inc. Adj.</b>	<b>No</b>								
	<b>Yes</b>								
<b>Interface Setup (*15 →P.721)</b>	<b>EOP Timer (*15 →P.721)</b>	<b>10 sec.</b>							
		<b>30 sec.</b>							
		<b>1 min.</b>							
		<b>2 min.</b>							
		<b>5 min.</b>							
		<b>10 min. *</b>							
		<b>30 min.</b>							
		<b>60 min.</b>							
	<b>TCP/IP (*15 →P.721)</b>	<b>IP Mode (*15 →P.721)</b>	<b>Automatic</b>						
			<b>Manual *</b>						
		<b>Protocol (*4 →P.720)</b>  <b>(*15 →P.721)</b>	<b>DHCP (*15 →P.721)</b>	<b>On</b>					
				<b>Off *</b>					
			<b>BOOTP (*15 →P.721)</b>	<b>On</b>					
				<b>Off *</b>					
			<b>RARP (*15 →P.721)</b>	<b>On</b>					
				<b>Off *</b>					
		<b>IP Setting (*12 →P.721)</b>  <b>(*16 →P.721)</b>	<b>IP Address</b>	0.0.0.0–255.255.255.255					
			<b>Subnet Mask</b>	0.0.0.0–255.255.255.255					
	<b>Default G/W</b>		0.0.0.0–255.255.255.255						
	<b>NetWare (*15 →P.721)</b>	<b>NetWare (*15 →P.721)</b>	<b>On</b>						
<b>Off *</b>									

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level		
<b>Interface Setup</b> (*15 →P.721 )	<b>NetWare</b> (*15 →P.721 )	<b>Frame Type</b> (*6 →P.721 ) (*15 →P.721 )	<b>Auto Detect</b>						
			<b>Ethernet 2</b>						
			<b>Ethernet 802.2 *</b>						
			<b>Ethernet 802.3</b>						
		<b>Ethernet SNAP</b>							
		<b>Print Service</b> (*6 →P.721 ) (*15 →P.721 )	<b>BinderyPServer</b>						
			<b>RPrinter</b>						
			<b>NDSPServer *</b>						
	<b>NPrinter</b>								
	<b>AppleTalk</b> (*15 →P.721 )	<b>On</b>							
		<b>Off *</b>							
	<b>Ethernet Driver</b> (*15 →P.721 )	<b>Auto Detect</b> (*15 →P.721 )	<b>On *</b>						
			<b>Off</b>						
		<b>Comm.Mode</b> (*7 →P.721 ) (*15 →P.721 )	<b>Half Duplex *</b>						
<b>Full Duplex</b>									
<b>Ethernet Type</b> (*7 →P.721 ) (*15 →P.721 )		<b>10 Base-T *</b>							
		<b>100 Base-TX</b>							
<b>Spanning Tree</b> (*15 →P.721 )	<b>Not Use *</b>								
	<b>Use</b>								
		<b>MAC Address</b> (*15 →P.721 )	000085XXXXXX						

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level	
<b>Interface Setup</b> (*15 →P.721 )	<b>Return Defaults</b> (*16 →P.721 )	No *						
		Yes						
<b>Maintenance</b>	<b>Repl. maint cart</b>	No						
		Yes						
	<b>Replace P.head</b>	No						
		Yes						
	<b>Repl. S. Cleaner</b>	No						
		Yes						
	<b>Move Printer</b>	Level 1 *						
		Level 2						
		Level 3						
	<b>System Setup</b>	<b>Warning</b>	<b>Buzzer</b>	Off				
				On *				
			<b>Detect Mismatch</b>	Pause				
Warning								
None *								
<b>Skip Take-Up Err</b> (*9 →P.721 )			Off *					
			On					
<b>Keep Paper Size</b>			Off *					
			On					
<b>Paper Size Basis</b>		<b>Sht Selection 1</b>	ISO A3+ *					
			13"x19"(Super B)					
		<b>Sht Selection 2</b>	ISO B1					
			28"x40" (ANSI F)					
<b>TrimEdge Reload</b>		Automatic						
		Off *						
		On						
<b>Noz. Check Freq.</b>		Off						
		1 page						
		10 pages						
		Automatic *						
<b>CarriageScanWdth</b>		Automatic *						
	Fixed							

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level	
System Setup	Sleep Timer (*17 →P.721)	5 min. *						
		10 min.						
		15 min.						
		20 min.						
		30 min.						
		40 min.						
		50 min.						
		60 min.						
		240 min.						
	Length Unit	meter *						
		feet/inch						
	Time Zone (*15 →P.721)	0:London (GMT)						
		+1:Paris,Rome						
		+2:Athens,Cairo						
		+3:Moscow						
		+4:Eerevan,Baku						
		+5:Islamabad						
		+6:Dacca						
		+7:Bangkok						
		+8:Hong Kong						
		+9:Tokyo,Seoul						
		+10:Canberra						
		+11>NewCaledonia						
		+12:Wellington						
		-12:Eniwetok						
		-11:Midway is.						
		-10:Hawaii(AHST)						
		-9:Alaska(AKST)						
	-8:Oregon (PST)							
	-7:Arizona(MST)							
	-6:Texas (CST)							
	-5:NewYork(EST)							
	-4:Santiago							
-3:Buenos Aires								
-2:								
-1:Cape Verde								



First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level	
System Setup	Date Format (*15 →P.721 )	yyyy/mm/dd *						
		dd/mm/yyyy						
		mm/dd/yyyy						
	Date & Time (*15 →P.721 )	Date	yyyy/mm/dd (*8 →P.721 )					
			Time	hh:mm				
	Language	English *						
		日本語						
		Français						
		Itallano						
		Deutsch						
		Español						
		Русский						
		中文(簡体字)						
	한국어							
	Contrast Adj.	-4,-3,-2,-1,0*,+1,+2,+3,+4						
	Reset Papr-Setngs (*15 →P.721 )	No						
		Yes						
	Erase HDD Data	High Speed (*15 →P.721 )	No					
			Yes					
Secure High Spd. (*15 →P.721 )		No						
		Yes						
Secure (*15 →P.721 )		No						
		Yes						
Output Method	Print *							
	Print (Auto Del)							

First Level	Second Level	Third Level	Fourth Level	Fifth Level	Sixth Level	Seventh Level	Eighth Level
<b>System Setup</b>	<b>Output Method</b>	<b>Save: Box XX</b>					
	<b>Save and Print</b>	<b>Off *</b>					
		<b>On</b>					
	<b>Save: Shared Box (*15 →P.721 )</b>	<b>Off</b>					
<b>On *</b>							
	<b>Show Job Log (*15 →P.721 )</b>	<b>Off</b>					
		<b>On *</b>					
<b>Admin. Menu (*15 →P.721 )</b>	<b>Change Password (*16 →P.721 )</b> <b>Init.Admin.Pswd (*16 →P.721 )</b>						
<b>Test Print</b>	<b>Status Print</b>	<b>No</b>					
		<b>Yes</b>					
	<b>Paper Details</b>	<b>No</b>					
		<b>Yes</b>					
	<b>Print Job Log</b>	<b>No</b>					
		<b>Yes</b>					
	<b>Menu Map</b>	<b>No</b>					
		<b>Yes</b>					
	<b>Nozzle Check</b>	<b>No</b>					
		<b>Yes</b>					
	<b>Color Palette</b>	<b>No</b>					
		<b>Yes</b>					
<b>Information</b>	<b>System Info</b>						
	<b>Error Log</b>	1:XXXXXXXX-XXXX					
		2:XXXXXXXX-XXXX					

- \*1: Available only if a roll is loaded.
- \*2: Available only if **ManageRemainRoll** is **On**.
- \*3: Available if **Feed Priority** is **Automatic** or **Print Length**.
- \*4: Not displayed if **IP Mode** is **Manual**.
- \*5: For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617 The paper type setting in the printer driver and related software (as well as on the Control Panel ) is updated when you install the printer driver from the User Software CD-ROM or if you change paper information by using the Media Configuration Tool. See the Media Configuration Tool →P.406 or Media Configuration Tool →P.539 .

- \*6: Not displayed if **NetWare** is **Off**.
- \*7: Not displayed if **Auto Detect** is **On**.
- \*8: Follows the setting in **Date Format**.
- \*9: Displayed if the Media Take-up Unit is attached.
- \*10: Available after you have used **Advanced Adj.** in **Auto Head Adj.** once.
- \*11: Available if: (a) **Take-up Reel** is **Enable**, (b) roll paper is loaded, and (c) you have not executed **Auto Feed** for the loaded roll.
- \*12: Not displayed if **IP Mode** is **Automatic**.
- \*13: Follows the setting in **Length Unit**.
- \*14: **Leading edge** is not available as a setting option in the **Paper Detailed Settings** dialog box of the printer driver.
- \*15: Viewing and configuration is possible for administrators, and only viewing for other users.
- \*16: Viewing and configuration is possible for administrators only.
- \*17: Default setting for the time to enter the power save mode/Sleep mode is recommended.


**Caution**

- Only the following menus are displayed during printing.  
Choose this menu to display **Head Cleaning**, **Fine Band Adj.**, and **Information**.  
Choose this menu to display **Job Management**.



## Submenus

Each time you press the **Information** button on the Control Panel, printer information is displayed in the following order.


- The remaining Maintenance Cartridge capacity and ink levels

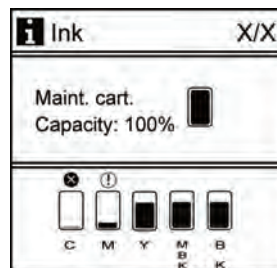




- Information on the loaded paper

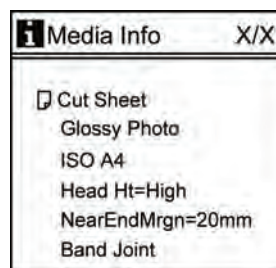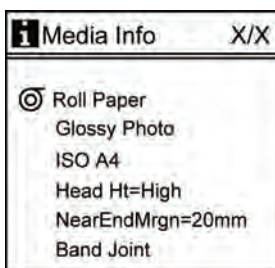

- Printer information

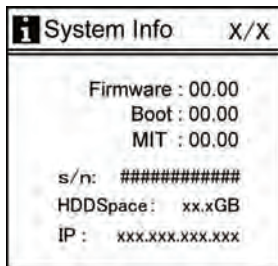

- HP-GL/2 settings information

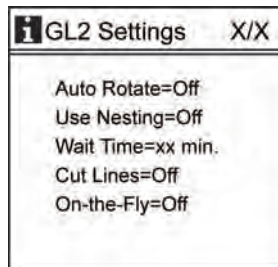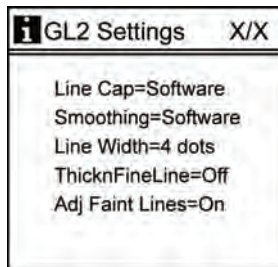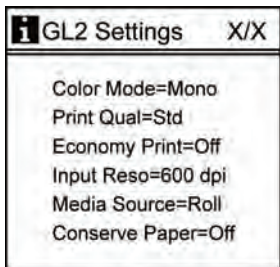

For details on submenu screens, see "Submenu Display." →P.735

### Main menu during printing

The structure of the main menu during printing is as follows.

For instructions on menu operations, see "Main Menu Operations." →P.705

For details on menu items available during printing, see "Main Menu Settings (During Printing)." →P.734

First Level	Second Level	Third Level	Fourth Level	
<b>Menu Durng Prtng</b>	<b>Head Cleaning *</b>	<b>Head Cleaning A *</b>		
		<b>Head Cleaning B</b>		
	<b>Fine Band Adj.</b>	From -5 to 5		
	<b>Information</b>	<b>System Info</b>		
		<b>Error Log</b>	1:xxxxxxxx-xxxx	
			2:xxxxxxxx-xxxx	

### Main Menu Settings

Main menu items are described in the following tables.

For instructions on selecting or setting menu items, see "Main Menu Operations." →P.705 .

For details on menu levels and values, see "Menu Structure." →P.709

Setting Item	Description, Instructions
<b>Paper Cutting</b>	This command is available only if a roll is loaded. Choose <b>Yes</b> to cut the roll at the current position. However, if paper cannot be advanced to the cut position, it will not be cut. In this case, manually advance the roll before cutting it. (See "Feeding Roll Paper Manually.") →P.638
<b>Rep. Ink Tank</b>	When replacing ink tanks, choose <b>Yes</b> and follow the instructions on the screen. (See "Replacing Ink Tanks.") →P.803

Setting Item	Description, Instructions	
<b>Head Cleaning</b>	Clean the Printhead. (See "Cleaning the Printhead.") →P.819 Choose <b>Head Cleaning A</b> if printing is faint, oddly colored, or contains foreign substances. Choose <b>Head Cleaning B</b> if no ink is printed at all, or if printing is not improved by <b>Head Cleaning A</b> .	
<b>Auto Feed</b>	This command is available only if <b>Take-up Reel</b> is set to <b>Enable</b> . Choose <b>Yes</b> to advance roll paper automatically on the Rewind Spool, up to the fastening position.	
<b>Take-up Reel</b>	Choose <b>Enable</b> to use the Media Take-up Unit.	
<b>Paper Menu</b>	Specify the type and size of paper. (See " Paper Menu .") →P.724	
<b>Paper Details</b>	Specify detailed paper-related settings, including the ink drying time and borderless printing options. (See " Paper Details .") →P.724	
<b>Job Management</b>	Manage print jobs on the printer's hard disk. (See " Job Management .") →P.726	
<b>GL2 Settings</b>	Specify settings for HP-GL/2 printing. (See " GL2 Settings .") →P.727	
<b>Adjust Printer</b>	Adjust the Printhead alignment or amount of feed by printing a test pattern. (See " Adjust Printer .") →P.729	
<b>Interface Setup</b>	Configure the EOP timer and network settings. (See " Interface Setup .") →P.730	
<b>Maintenance</b>	Access maintenance settings when replacing the Printhead or preparing to move the printer. (See " Maintenance .") →P.731	
<b>System Setup</b>	Specify the printer system settings, including the date format and display language. (See " System Setup .") →P.732	
<b>Admin. Menu</b>	<b>Change Password</b>	By setting a password, you can restrict menu display and configuration as follows. You can input between 0 and 9999999.  <ul style="list-style-type: none"> <li>• <a href="#">Viewing and configuration by administrators only</a>  <b>IP Setting</b>  <b>Return Defaults</b>  <b>Change Password</b>  <b>Init.Admin.Pswd</b></li> <li>• <a href="#">Viewing and configuration by administrators, and only viewing by other users</a>  <b>Interface Setup</b> settings (except <b>IP Setting</b>, <b>Return Defaults</b>)  <b>Time Zone</b>  <b>Date Format</b>  <b>Date &amp; Time</b>  <b>Reset PaprSetngs</b>  <b>High Speed</b>  <b>Secure High Spd.</b>  <b>Secure</b>  <b>Save: Shared Box</b>  <b>Show Job Log</b>  <b>Admin. Menu</b></li> </ul>
	<b>Init.Admin.Pswd</b>	Choose <b>OK</b> to restore the <b>Admin. Menu</b> password to the default values.
<b>Test Print</b>	Choose <b>Status Print</b> to print information about the printer.	

Setting Item	Description, Instructions
<b>Test Print</b>	Choose <b>Paper Details</b> to print the paper settings as specified in <b>Paper Details</b> . Choose <b>Print Job Log</b> to print a record of print jobs, including the paper type and size, amount of ink used, and so on. (Information on ink consumption is general, not specific in nature.) Choose <b>Menu Map</b> to print a list of the main menu options. Choose <b>Nozzle Check</b> to print a test pattern for checking the nozzles. Select <b>Color Palette</b> to print the GL2 color palette.
<b>Information</b>	Displays printer information and an error log. (See "Information.") →P.734

## Paper Menu

Setting Item	Description, Instructions
<b>Cut Sheet Type</b> (*1 →P.724 )	Choose the type of sheets. (See "Selecting the Paper Type (Sheet).") →P.650
<b>Roll Media Type</b> (*1 →P.724 )	Choose the type of roll. (See "Selecting the Paper Type (Roll).") →P.632
<b>Roll Length Set</b>	Displayed if <b>ManageRemainRoll</b> is <b>On</b> . If a barcode is not printed on rolls, specify the roll length. The roll length is displayed in meters or feet, depending on the setting in <b>Length Unit</b> .
<b>ManageRemainRoll</b>	Choose <b>On</b> to print a barcode at the end of a roll before you remove it. The printed barcode can be used in managing the amount of roll paper left. Choose <b>Off</b> if you prefer not to print the barcode. (See "Keeping Track of the Amount of Roll Paper Left.") →P.639

\*1: For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617 The types of paper indicated in the printer driver and related software (as well as on the Control Panel) are updated when you install the printer driver from the User Software CD-ROM or if you update paper information by using the Media Configuration Tool. See Media Configuration Tool →P.406 or Media Configuration Tool →P.539 .

## Paper Details

Setting Item	Description, Instructions	
(The type of paper is displayed here.) (*1 →P.726 )	<b>Roll DryingTime</b>	Specify the time to wait for the ink to dry for each sheet.
	<b>Scan Wait Time</b>	Specify the time to wait for the ink to dry between each scan (after the printhead finishes moving in one direction), in consideration of how quickly the ink dries. Also specify the applicable area for the ink drying time. Select <b>Entire area</b> to apply the ink drying time after each scan until the document is fully printed. Select <b>Leading edge</b> to apply the ink drying time after each scan only in the area 110–160 mm from the leading edge. (The applicable length varies depending on the <b>Print Quality</b> setting.) Note that printing will take longer if you specify the <b>Scan Wait Time</b> setting. In particular, when <b>Leading edge</b> is selected, colors may be uneven in the boundary between the areas with and without a drying time.

Setting Item	Description, Instructions
(The type of paper is displayed here.) (*1 →P.726 )	<b>Feed Priority</b> Specify exact paper feeding, if desired. Normally, select <b>Automatic</b> . Choose <b>Print Length</b> if you prefer to feed the paper an exact amount. However, note that choosing <b>Print Length</b> may result in slight banding in the direction of Carriage scanning.
	<b>Adjust Length</b> Displayed if <b>Feed Priority</b> is <b>Print Length</b> . Adjustment relative to the amount of stretching or shrinkage of the current paper. Enter either the adjustment results from <b>Print Pattern</b> or the discrepancy that you measured (as a percentage). For paper that tends to stretch, increase the feed amount by choosing a higher adjustment value. For paper that tends to shrink, decrease the feed amount by choosing a lower adjustment value.
	<b>Head Height</b> Adjust the Printhead height. (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
	<b>Skew Check Lv.</b> If you print on Japanese paper (washi) or other handmade paper that has an irregular width, choose <b>Loose</b> for a higher skew detection threshold, or choose <b>Off</b> to disable skew detection. However, if paper is loaded askew when detection is <b>Off</b> , note that paper jams or Platen soiling may occur.
	<b>VacuumStrngth</b> Specify the level of suction that holds paper against the Platen. (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683
	<b>Width Detection</b> Specify this option to print inside boundaries or in other cases when specifying a particular starting position for printing. Paper width and skew are not detected if you select <b>Off</b> . If paper is loaded askew, note that paper jams or Platen soiling may occur.
	<b>NearEnd RollMrgn</b> Specify the minimum margin at the leading edge of roll paper to ensure better printing quality at the leading edge. Note that if you choose <b>3mm</b> , it may lower the printing quality at the leading edge and affect feeding accuracy. The printed surface may be scratched, and ink may adhere to the leading edge. It may also cause the Platen to become soiled.
	<b>Cut Speed</b> Choose the cutting speed. If you use adhesive paper, choosing <b>Slow</b> helps prevent adhesive from sticking to the cutter and keeps the cutter sharp.
	<b>Trim Edge First</b> If a roll is loaded, the end of the paper will be cut.
	<b>Cutting Mode</b> Specify whether or not to cut with the standard round-bladed cutter. Choose <b>Automatic</b> to have the roll cut automatically after printing. If you choose <b>Manual</b> , the paper will not be cut after printing. Instead, a line will be printed at the cut position. Choose <b>Eject</b> if you prefer not to have documents dropped immediately after printing, as when waiting for ink to dry.
<b>Bordless Margin</b> Adjust the margin during borderless printing.	



Setting Item		Description, Instructions
(The type of paper is displayed here.) (*1 →P.726 )	<b>Bordless Margin</b>	Choose <b>Automatic</b> to have the printer automatically detect the paper width and configure the margin settings for borderless printing. If margins are mistakenly created when <b>Automatic</b> is selected, choose <b>Fixed</b> . In this case, the paper width is not detected automatically, and the document is printed without borders, using the margin settings required by the printer.
	<b>CutDustReduct.</b>	If you choose <b>On</b> , a line will be printed at the cut position when paper cutting is selected. This option reduces the amount of debris given off after cutting. It also helps prevent adhesive from sticking to the cutter and keeps the cutter sharp if you use adhesive paper. (See "Reducing Dust from Cutting Rolls.") →P.648
	<b>NearEnd Sht Mrgn</b>	Specify a margin at the leading edge of sheets to ensure better printing quality at the leading edge. Note that if you choose <b>3mm</b> , it may lower the printing quality at the leading edge and affect feeding accuracy. The printed surface may be scratched, and ink may adhere to the leading edge.
	<b>Return Defaults</b>	Choose <b>Yes</b> to restore <b>Paper Details</b> to the default values.

\*1: For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617 The types of paper indicated in the printer driver and related software (as well as on the Control Panel ) are updated when you install the printer driver from the User Software CD-ROM or if you update paper information by using the Media Configuration Tool.

## Job Management



Setting Item			Description, Instructions			
<b>Print Job</b>	<b>Job List</b>	(Choose a print job)	<b>Delete</b>			Delete the current job or queued jobs. (See "Managing Queued Jobs (Deleting or Preempting Other Jobs).") →P.568
			<b>Preempt Jobs</b>			Print the job first after the current print job is finished. (See "Managing Queued Jobs (Deleting or Preempting Other Jobs).") →P.568
<b>Stored Job</b>	<b>Mail-box List</b>	(Enter a password if one has been set.)	<b>Job List</b>	(Choose a print job)	<b>Print</b>	Print the saved job.
					<b>Delete</b>	Delete the saved job.
			<b>Print Job List</b>		Print a list of saved print jobs.	



Setting Item		Description, Instructions	
<b>Job Log</b>	(Choose from information about the latest three print jobs.)	<b>Document Name</b>	Displays the document name in the last print job.
		<b>User Name</b>	Displays the name of the user who sent the print job.
		<b>Page Count</b>	Displays the number of pages in the print job.
		<b>Job Status</b>	Displays the results of the print job processed.
		<b>Print Start Time</b>	Displays the time when the print job was started.
		<b>Print End Time</b>	Displays the time when the print job was finished.
		<b>Print Time</b>	Displays the time required to print the job.
		<b>Print Size</b>	Displays the paper size in the print job.
		<b>Media Type</b>	Displays the type of paper in the print job.
		<b>Interface</b>	Displays the interface used for the print job.
<b>Ink Consumed</b>	Indicates a rough estimate of how much ink was consumed per job. (*1 →P.727 )		
<b>HDD Information</b>	<b>HDDSpace</b>	Displays the space available on the printer's hard disk.	

\*1: Indicates a rough estimate of how much ink was consumed per page. Actual ink consumption may be different. The average margin of error for estimates calculated according to Canon measurement conditions for ink costs is  $\pm 15\%$ . Canon does not guarantee the accuracy of these estimates. Estimates may vary depending on conditions of use. Calculation of these estimates does not include ink consumed when cleaning printheads by forceful ejection of ink.

## GL2 Settings

Setting Item		Description, Instructions	
<b>Quality Manager</b>	<b>Color Mode</b>	<b>Monochrome</b>	Print in monochrome.
		<b>Color (CAD) 1</b>	Print in standard colors.
		<b>Color (CAD) 2</b>	Print in brighter colors.
		<b>Color (CAD) 3</b>	Print emulating the following printers, in colors resembling colors produced by these printers: Canon BJ-W3000/W3050. (*1 →P.729 )
		<b>Color (CAD) 4</b>	Print emulating the HP Designjet 500/800, in colors resembling colors produced by these printers. (*1 →P.729 )
		<b>Color (CAD) 5</b>	Print emulating the HP Designjet 1000, in colors resembling colors produced by this printer. (*1 →P.729 )
		<b>Color (CAD) 6</b>	Print emulating the HP Designjet 4000/4500, in colors resembling colors produced by these printers. (*1 →P.729 )
	<b>Print Quality</b>	Choose the print quality.	
<b>Input Resolution</b>	Choose the printer input resolution, <b>600dpi</b> or <b>300dpi</b> .		
<b>Print (Economy)</b>	Although printing quality is diminished, less ink is consumed than in regular printing. Select <b>On</b> to conserve ink.		
<b>Paper Manager</b>	<b>Paper Source</b>	Choose the source of paper for HP-GL/2 printing.	

Setting Item		Description, Instructions	
<b>Paper Manager</b>	<b>Margin</b>	Specify the margin around paper. The margin for the trailing edge of sheets is 23 mm (0.9 in). However, if you have specified the leading margin in <b>Paper Details</b> , the value in <b>Paper Details</b> has priority.	
	<b>Conserve Paper</b>	Conserves paper when printing.	
	<b>Auto Rotate</b>	If the long side of an original is shorter than the roll width, the original is automatically rotated 90 degrees to conserve paper. Similarly, if the long side of an original in landscape orientation is longer than the roll width and the short side is shorter than the roll width, the original is repositioned to fit on the paper. HP RTL print jobs are not rotated. Because HP RTL images are not rotated even if the paper is rotated 90 degrees, images may be cut off or the blank paper may be ejected. In this case, set <b>Auto Rotate</b> to <b>Off</b> .	
	<b>Nesting</b>	<b>Use Nesting</b>	Selecting <b>On</b> will store print jobs until multiple documents can be arranged to fill up the roll width, instead of printing each print job as it is received.
		<b>Nesting Wait-Time</b>	Specify a time to wait until printing, as desired.
<b>Cut Lines</b>		Select <b>On</b> to print cut lines between each document on the roll.	
<b>Line &amp; Pen Manager</b>	<b>Enable merge</b>	Specify whether to merge or print over colors where lines overlap. Choose <b>Off</b> to print the second line over the first. Choose <b>On</b> to merge all overlapping colors.	
	<b>Pen Setup</b>	<b>Select Palette</b>	As pen values, choose <b>Software</b> , <b>Palette A</b> , <b>Palette B</b> , or <b>Factory</b> . Choose <b>Software</b> to print according to software settings. Choose <b>Palette A</b> or <b>Palette B</b> to print using the value specified in <b>Define Palette</b> .
		<b>Define Palette</b>	Specify the <b>Width</b> , <b>Color</b> , and <b>Line Attributes</b> in the palette <b>Pen no.</b> . Choose <b>Factory</b> to confirm the values when <b>Factory</b> is selected in <b>Select Palette</b> . In <b>Line Attributes</b> , choose <b>No Setting</b> or <b>Circle Setting</b> as the processing for the ends and junctions of lines.  <ul style="list-style-type: none"> <li>If you choose <b>No Setting</b></li> </ul>   <ul style="list-style-type: none"> <li>If you choose <b>Circle Setting</b></li> </ul> 
		<b>Reset Palette</b>	Restore <b>Define Palette</b> to the default palette settings.
	<b>Smoothing</b>	Choose whether to print arcs as smooth curved lines or as multiple connected line segments.	

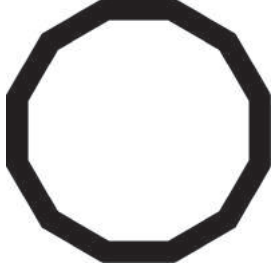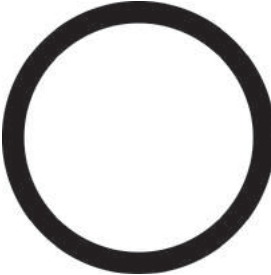Setting Item		Description, Instructions
<b>Line &amp; Pen Manager</b>	<b>Smoothing</b>	<ul style="list-style-type: none"> <li>• <b>If you choose Software</b> Operation is determined by the application. If nothing is specified by the application, the result is as shown in the figure.</li> </ul>  <p>Note: By default, this is a 72-sided figure</p> <ul style="list-style-type: none"> <li>• <b>If you choose Smooth</b></li> </ul> 
	<b>ThickenFineLines</b>	Select <b>On</b> to print fine lines more distinctly.
	<b>AdjustFaintLines</b>	If fine lines are printed in colors that do not match the colors of other shapes, selecting <b>Off</b> may help produce the expected results. However, lines in some colors may appear broken.
<b>ProcessingOption</b>	<b>Warning</b>	Select <b>On</b> to have any GL2-related warnings displayed.
	<b>On-the-Fly</b>	Selecting <b>On</b> will start printing jobs sooner if you are printing only HP RTL print jobs and printing would not start until later. However, images may be incomplete in some cases, so be sure to check the printing results.
	<b>PageSizeProcess1</b>	Normally, the area available for printing excludes a margin required by the printer, and images are positioned accordingly. Selecting <b>On</b> in this setting eliminates any misalignment of the printing position if the image itself includes a border.
	<b>PageSizeProcess2</b>	Selecting <b>On</b> will determine the paper size based on the image rendering area.

\*1: It is not possible to match the colors and image quality produced by the specified printer exactly.

## Adjust Printer

Setting Item		Description, Instructions
<b>Auto Head Adj.</b>	<b>Standard Adj.</b>	Choose <b>Yes</b> to have the printer print and read a test pattern for the automatic adjustment of Printhead alignment relative to the printing direction. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668

Setting Item		Description, Instructions
<b>Auto Head Adj.</b>	<b>Advanced Adj.</b>	Choose <b>Yes</b> to have the printer print and read a test pattern for the automatic adjustment of Printhead alignment relative to the nozzle, ink tank, and printing direction. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668
	<b>Auto Print</b>	Choose <b>On</b> to have the printer automatically execute the <b>Advanced Adj.</b> operations after you replace the Printhead. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668
<b>Manual Head Adj</b>		Choose <b>Yes</b> to print a test pattern for adjustment of Printhead alignment relative to the printing direction. Enter the adjustment value manually based on the resulting pattern. (See "Manual Straightening of Lines and Colors (Manual Head Adj.).") →P.670
<b>Auto Band Adj.</b>	<b>Standard Adj.</b>	Choose <b>Yes</b> to have the printer print and read a band adjustment test pattern for automatic adjustment of the feed amount. (See "Auto Band Adjustment (Auto Band Adj.).") →P.677
	<b>Advanced Adj.</b>	Choose this option when using paper other than genuine Canon paper or paper for which printing has been verified by Canon. Choose <b>Yes</b> to have the printer print and read a band adjustment test pattern for automatic adjustment of the feed amount. Note that this function takes more time and requires more ink than <b>Standard Adj.</b> (See "Auto Band Adjustment (Auto Band Adj.).") →P.677
<b>Manual Band Adj</b>		Choose <b>Yes</b> to print a test pattern for adjusting the feed amount based on the type of paper. (See "Manual Band Adjustment (Manual Band Adj.).") →P.678
<b>Adjust Length</b>	<b>A:High ( Adjust Length A )</b> <b>B:Standard/Draft ( Adjust Length B )</b>	Prints a test pattern for particular types of paper to compensate for paper stretching or shrinkage, after which you can enter the amount of adjustment. (See "Adjusting Line Length (Adjust Length).") →P.681
<b>Head Inc. Adj.</b>		Choose <b>Yes</b> to print a test pattern for adjusting the orientation of the Printhead. (See "Adjusting Line Misalignment (Head Inc. Adj.).") →P.672

## Interface Setup



Setting Item		Description, Instructions	
<b>EOP Timer</b>		Specify the timeout period before cancellation of print jobs that cannot be received by the printer.	
<b>TCP/IP</b>	<b>IP Mode</b>	Choose whether the printer IP address is configured automatically or a static IP address is entered manually.	
	<b>Protocol</b>	<b>DHCP</b>	Specify the protocol used to configure the IP address automatically.
		<b>BOOTP</b>	
<b>RARP</b>			

Setting Item		Description, Instructions
<b>TCP/IP</b>	<b>IP Setting</b>	<b>IP Address</b> Specify the printer network information when using a static IP address.
		<b>Subnet Mask</b> Enter the IP address assigned to the printer, as well as the network subnet mask and default gateway.
		<b>Default G/W</b>
<b>NetWare</b>	<b>NetWare</b>	Specify the NetWare protocol. To apply your changes, choose <b>Register Setting</b> .
	<b>Frame Type</b>	Specify the frame type to use.
	<b>Print Service</b>	Choose the print service.
<b>AppleTalk</b>		Specify whether to use the AppleTalk protocol. To apply your changes, choose <b>Register Setting</b> .
<b>Ethernet Driver</b>	<b>Auto Detect</b>	Specify the communication method. To apply your changes, choose <b>Register Setting</b> . Choose <b>On</b> for automatic configuration of the LAN communication protocol. Choose <b>Off</b> to use settings values of <b>Comm.Mode</b> and <b>Ethernet Type</b> .
	<b>Comm.Mode</b>	Choose the LAN communication method.
	<b>Ethernet Type</b>	Choose the LAN transfer rate.
	<b>Spanning Tree</b>	Choose whether spanning-tree packets are supported over the LAN.
	<b>MAC Address</b>	Displays the MAC address.
<b>Return Defaults</b>		<b>Return Defaults/Execute?</b> is displayed if you press the ▼ button. Choose <b>OK</b> to restore the network settings to the default values.

## Maintenance

Setting Item	Description, Instructions
<b>Repl. maint cart</b>	When replacing the Maintenance Cartridge, choose <b>Yes</b> and follow the instructions on the screen. (See "Replacing the Maintenance Cartridge.") →P.827
<b>Replace P.head</b>	Not displayed during a warning message that the remaining Maintenance Cartridge capacity is low. When replacing the Printhead, choose <b>Yes</b> and follow the instructions on the screen. (See "Replacing the Printhead.") →P.820
<b>Repl. S. Cleaner</b>	When replacing the Shaft Cleaner, choose <b>Yes</b> and follow the instructions on the screen. (See "Replacing the Maintenance Cartridge.") →P.827
<b>Move Printer</b>	Not displayed during a warning message that the remaining Maintenance Cartridge capacity is low. When transferring the printer to another location, choose <b>Yes</b> and follow the instructions on the screen. (See "Preparing to Transfer the Printer.") →P.841

## System Setup

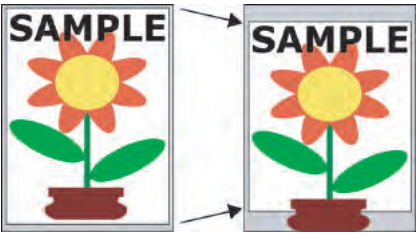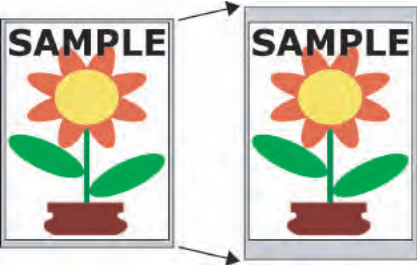Setting Item		Description, Instructions
<b>Warning</b>	<b>Buzzer</b>	Set the buzzer. Choose <b>On</b> for the buzzer to sound once for warnings and three times for errors.
	<b>Detect Mismatch</b>	Choose <b>Warning</b> for notification (display of a warning message) during printing if the paper type specified in the printer menu does not match the paper type in the printer driver. Choose <b>None</b> to continue to print without notification. Choose <b>Pause</b> to have printing paused under these circumstances. In this case, you can continue printing by pressing the <b>Online</b> button.
	<b>Skip Take-Up Err</b>	Choose <b>On</b> to continue with printing even if an error occurs with the Media Take-up Unit. Choose <b>Off</b> to have the printer pause before printing if a rewinding error occurs.
<b>Keep Paper Size</b>		<p>Choose <b>On</b> to use the paper size setting as the basis for printing instead of other settings. The margin setting of the printer menu will be used instead of the margin setting of the printer driver if the latter is smaller, which may prevent text or images in the margin from being printed.</p>  <p>Choose <b>Off</b> to use the printer driver settings instead. Even if the margin setting of the printer driver is smaller than that of the printer menu, text or images will not be cut off. However, this requires longer paper because the actual margin will be equal to the margin setting of the printer driver plus the margin setting of the printer menu.</p> 
<b>Paper Size Basis</b>	<b>Sht Selection 1</b>	If sheet size detection is activated, choose whether <b>ISO A3+</b> or <b>13"x19"(Super B)</b> is applied when an intermediate size is detected.
	<b>Sht Selection 2</b>	If sheet size detection is activated, choose whether <b>ISO B1</b> or <b>28"x40" (ANSI F)</b> is applied when an intermediate size is detected.

9

732



Setting Item		Description, Instructions
<b>TrimEdge Reload</b>		Specify whether to trim the leading edge of the currently retracted roll when the roll is advanced. Cut the edge if you are concerned about any marks left on the roll when the roll is left in the retracted position. Selecting <b>On</b> will always trim the edge when the roll is advanced from the retracted position. Selecting <b>Automatic</b> will trim the edge when the roll has been in the retracted position for two days or more.
<b>Noz. Check Freq.</b>		Specify the timing for automatic checks of nozzle clogging. Choose <b>1 page</b> to check once per printed page. Choose <b>10 pages</b> to check once per ten printed pages. Choose <b>Automatic</b> to have the printer automatically adjust the timing for checks based on the frequency of nozzle use.
<b>CarriageScanWdth</b>		For specifying the carriage scan width during printing. Select <b>Automatic</b> for movement equivalent to the width of paper loaded. Selecting <b>Fixed</b> will reduce any soiling on the back of the paper, although printing may take a little longer.
<b>Sleep Timer</b>		Specify the period before the printer enters sleep mode.
<b>Length Unit</b>		Choose the unit of measurement when roll length is displayed. You can switch the unit displayed for <b>Roll Length Set</b> and the remaining paper amount displayed in the submenu.
<b>Time Zone</b>		Specify the time zone. Time zone options indicate a main city in this time zone and the difference from Greenwich Mean Time.
<b>Date Format</b>		Specify the date format.
<b>Date &amp; Time</b>	<b>Date</b>	Set the current date.
	<b>Time</b>	Set the current time. Available only if the <b>Date</b> setting is specified.
<b>Language</b>		Specify the language used on the Display Screen.
<b>Contrast Adj.</b>		Adjust the Display Screen contrast level.
<b>Reset PaprSetngs</b>		Restores settings that you have changed with Media Configuration Tool to the default values.
<b>Erase HDD Data</b>	<b>High Speed</b>	Erases file management data for print job data stored on the printer's hard disk. (See "Erasing Data on the Printer's Hard Disk.") →P.750
	<b>Secure High Spd.</b>	Overwrites the entire hard disk with random data. (See "Erasing Data on the Printer's Hard Disk.") →P.750
	<b>Secure</b>	Overwrites the entire hard disk with 00, FF, and random data (one time each). Verification is performed to check if the data was correctly written. (See "Erasing Data on the Printer's Hard Disk.") →P.750
<b>Output Method</b>	<b>Print</b>	Select the output method.
	<b>Print (Auto Del)</b>	To print as usual, select <b>Print</b> . Selecting <b>Print (Auto Del)</b> will print the job and then delete the data from the printer's hard disk. Selecting <b>Save: Box 01</b> will only save the print job in the box, without printing it.

Setting Item		Description, Instructions
<b>Output Method</b>	<b>Save: Box 01</b>	Select the output method. To print as usual, select <b>Print</b> . Selecting <b>Print (Auto Del)</b> will print the job and then delete the data from the printer's hard disk. Selecting <b>Save: Box 01</b> will only save the print job in the box, without printing it.
<b>Save and Print</b>		Select <b>On</b> to print the job after it has been saved.
<b>Save: Shared Box</b>		Select <b>Off</b> to print without saving jobs in the box shared among multiple users.
<b>Show Job Log</b>		Selecting <b>Off</b> prevents display of the log in <b>Job Menu &gt; Job Log</b> . Additionally, the log is not printed if you choose <b>Job Menu &gt; Print Job Log</b> . Note that because job logs are not collected, the Status Monitor accounting functions will not work correctly.

### Information

Setting Item		Description, Instructions
<b>System Info</b>	<b>Firmware</b>	Displays the printer firmware version.
	<b>Boot</b>	Displays the version of the boot ROM.
	<b>MIT</b>	Displays the version of the MIT database format.
	<b>s/n</b>	Displays the printer's serial number.
	<b>MAC</b>	Displays the MAC address of the printer.
	<b>IP</b>	Displays the printer's IP address.
<b>Error Log</b>	<b>#####-####</b>	Displays the most recent error messages (up to two).

### Main Menu Settings (During Printing)

Main menu items during printing are described in the following tables.

For instructions on selecting or setting menu items, see "Main Menu Operations." →P.705 .

For details on menu levels and values, see "Menu Structure." →P.709

Setting Item		Description, Instructions
<b>Menu Durng Prtng</b>	<b>Head Cleaning</b>	Printhead cleaning options. (See "Cleaning the Print-head.") →P.819 Choose <b>Head Cleaning A</b> if printing is faint, oddly colored, or contains foreign substances. Choose <b>Head Cleaning B</b> if no ink is printed at all, or if printing is not improved by <b>Head Cleaning A</b> .
	<b>Fine Band Adj.</b>	Fine-tune the feed amount manually.
	<b>Information</b>	Displays the information about the printer and history of print jobs. (See "Information.") →P.735

## Information

Setting Item	Description, Instructions	
<b>System Info</b>	<b>Firmware</b>	Displays the version of the printer and firmware.
	<b>Boot</b>	Displays the version of the boot ROM.
	<b>MIT</b>	Displays the version of the MIT database format.
	<b>s/n</b>	Displays the printer's serial number.
	<b>MAC</b>	Displays the MAC address.
	<b>IP</b>	Displays the IP address.
	<b>HDDSpace</b>	Displays the space available on the printer's hard disk.
<b>Error Log</b>	1: xxxxxxxx-xxxx	Displays the two most recent error message numbers, most recent first.
	2: xxxxxxxx-xxxx	

## Submenu Display

Press the **Information** button to display this information, one after another: the Maintenance Cartridge capacity and remaining ink levels, paper information, printer information, and HP-GL/2 settings information.


Each time you press the **Information** button, the following submenus are displayed.



### Note

- Press any button other than the **Information** button to restore the previous mode.
- After you display a submenu, the printer will revert to the previous mode in about ten seconds if no print job is received or if you do not operate the printer.

## Remaining Maintenance Cartridge capacity and ink levels

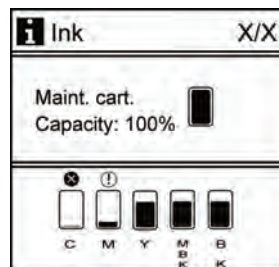

The remaining Maintenance Cartridge capacity is shown on the top level of the Display Screen.


The remaining level of each ink is shown on the bottom level of the Display Screen. Ink levels shown on the Display Screen correspond to the inks identified by the color labels on the bottom of the Display Screen.

These symbols may be displayed above the ink level: ! if ink is low, × if no ink is left, and ? if ink level detection is not on. Remaining ink is indicated as follows.




### Information on the loaded paper

Here, the paper size, type, and related printer settings are displayed.

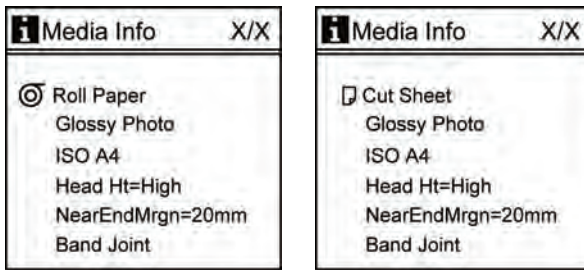

### Printer information

Displays the firmware version, serial number, free hard disk space, IP address, and interface information.

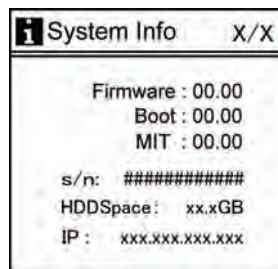

### HP-GL/2 setting information

HP-GL/2 settings information is displayed on three screens.



### Status Print

You can print a **Status Print** report indicating the current status of the printer.

With **Status Print**, information is printed regarding the printer firmware version, various settings, and the utilization level of consumables.

### Printing Status Print Reports

1. Load paper.  
If using sheets, load paper A4/Letter-sized. You will need at least four sheets.

2. Press the **Menu** button to display **MAIN MENU**.



3. Press **▲** or **▼** to select **Test Print**, and then press the **▶** button.

4. Press **▲** or **▼** to select **Status Print**, and then press the **▶** button.

5. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.

### Checking the information in the **Status Print** report

The following information is included in the **Status Print** report.

Canon imagePROGRAF iPFxxxx Status Print		Printer model
Firm	Firmware version	
Boot	Boot ROM version	
MIT(DBF)	MIT database format version	
MIT(DB)	MIT database version	
S/N	Printer serial number	
MAC	Printer MAC address	
IP	Printer IP address	
Ink Info	MC	Maintenance Cartridge capacity (%)
	C, M, Y, MBK, BK	Ink levels. The remaining ink is displayed in a five-level scale.
Takeup-Reel		Status of the Media Take-up Unit
Media Menu		Information on the loaded paper.
	Cut Sheet Type	
	Roll Media Type	
	ManageRemainRoll	
Job Management		Job-related information.
	HDD Information	
	HDD Space	The free space on the printer's hard disk drive.

Adjust Printer		Current printer settings.
	Auto Head Adj.	Printhead adjustment value.
	Auto Print	

Interface Setup		Current network settings.
	EOP Timer	Sets the elapsed time between receiving last data and canceling printing.
	TCP/IP	Settings related to <b>TCP/IP</b> .
	IP Mode	
	Protocol	
		DHCP
		BOOTP
		RARP
	IP Setting	<b>IP Setting</b> values.
		IP Address
		Subnet Mask
		Default G/W
	NetWare	<b>NetWare</b> settings.
	NetWare	
	Frame Type(*1 →P.738 )	
	Print Service(*1 →P.738 )	
	AppleTalk	Values that specify whether <b>AppleTalk</b> is active or not.
	Ethernet Driver	<b>Ethernet Driver</b> settings.
	Auto Detect	
	Comm.Mode(*2 →P.738 )	
	Ethernet Type(*2 →P.738 )	
	Spanning Tree	
	MAC Address	

\*1: Display when **NetWare** is set to **On**.  
 \*2: Display when **Auto Detect** is set to **On**.

System Setup		System settings.
	Warning	Current warning and error settings.
		Buzzer
		Detect Mismatch

	Skip Take-Up Err	Current warning and error settings.
Keep Media Size		Current paper-related settings.
Paper Size Basis		
	Sheet Selection 1	
	Sheet Selection 2	
TrimEdge Reload		
Noz. Check Freq.		Nozzle-check settings.
CarriageScanWdth		Carriage scan width setting.
Sleep Timer		Printer system settings.
Length Unit		
Time Zone		
Date Format		
Language		
Contrast Adj.		
Output Method		Current output method setting.
Save and Print		
Save:Shared Box		

Information		
	System Info	
	Error Log	The past five error codes.

GL2 Settings		HP-GL/2 setting values.
	Quality Manager	
		Color Mode
		Print Quality
		Input Resolution
		Print (Economy)
	Paper Manager	
		Paper Source
		Margin
		Conserve Paper
		Auto Rotate
		Nesting
		Use Nesting
		Nesting Wait-Time
		Cut Lines
	ProcessingOption	Warning



	ProcessingOption	On-the-Fly	HP-GL/2 setting values.
		PageSizeProcess1	
		PageSizeProcess2	

GL2 Settings		HP-GL/2 setting values.	
Line&Pen Manager			
Enable merge			
Pen Setup			
Select Palette			
Define Palette (Factory)			
		Pen 0 -- Width	
		Pen 1 -- Width	
		Pen 2 -- Width	
		Pen 3 -- Width	
		Pen 4 -- Width	
		Pen 5 -- Width	
		Pen 6 -- Width	
		Pen 7 -- Width	
		Pen 8 -- Width	
		Pen 9 -- Width	
		Pen 10 -- Width	
		Pen 11 -- Width	
		Pen 12 -- Width	
		Pen 13 -- Width	
		Pen 14 -- Width	
		Pen 15 -- Width	
Define Palette (Palette A)			
		Pen 0 -- Width	
		Pen 1 -- Width	
		Pen 2 -- Width	
		Pen 3 -- Width	
		Pen 4 -- Width	
		Pen 5 -- Width	
		Pen 6 -- Width	
		Pen 7 -- Width	
		Pen 8 -- Width	
		Pen 9 -- Width	

9

740

			<table border="1"> <tr><td>Pen 10 -- Width</td></tr> <tr><td>Pen 11 -- Width</td></tr> <tr><td>Pen 12 -- Width</td></tr> <tr><td>Pen 13 -- Width</td></tr> <tr><td>Pen 14 -- Width</td></tr> <tr><td>Pen 15 -- Width</td></tr> <tr><td>Define Palette (Palette B)</td></tr> <tr><td>Pen 0 -- Width</td></tr> <tr><td>Pen 1 -- Width</td></tr> <tr><td>Pen 2 -- Width</td></tr> <tr><td>Pen 3 -- Width</td></tr> <tr><td>Pen 4 -- Width</td></tr> <tr><td>Pen 5 -- Width</td></tr> <tr><td>Pen 6 -- Width</td></tr> <tr><td>Pen 7 -- Width</td></tr> <tr><td>Pen 8 -- Width</td></tr> <tr><td>Pen 9 -- Width</td></tr> <tr><td>Pen 10 -- Width</td></tr> <tr><td>Pen 11 -- Width</td></tr> <tr><td>Pen 12 -- Width</td></tr> <tr><td>Pen 13 -- Width</td></tr> <tr><td>Pen 14 -- Width</td></tr> <tr><td>Pen 15 -- Width</td></tr> <tr><td>Smoothing</td></tr> <tr><td>ThickenFineLines</td></tr> <tr><td>AdjustFaintLines</td></tr> </table>	Pen 10 -- Width	Pen 11 -- Width	Pen 12 -- Width	Pen 13 -- Width	Pen 14 -- Width	Pen 15 -- Width	Define Palette (Palette B)	Pen 0 -- Width	Pen 1 -- Width	Pen 2 -- Width	Pen 3 -- Width	Pen 4 -- Width	Pen 5 -- Width	Pen 6 -- Width	Pen 7 -- Width	Pen 8 -- Width	Pen 9 -- Width	Pen 10 -- Width	Pen 11 -- Width	Pen 12 -- Width	Pen 13 -- Width	Pen 14 -- Width	Pen 15 -- Width	Smoothing	ThickenFineLines	AdjustFaintLines	HP-GL/2 setting values.
Pen 10 -- Width																														
Pen 11 -- Width																														
Pen 12 -- Width																														
Pen 13 -- Width																														
Pen 14 -- Width																														
Pen 15 -- Width																														
Define Palette (Palette B)																														
Pen 0 -- Width																														
Pen 1 -- Width																														
Pen 2 -- Width																														
Pen 3 -- Width																														
Pen 4 -- Width																														
Pen 5 -- Width																														
Pen 6 -- Width																														
Pen 7 -- Width																														
Pen 8 -- Width																														
Pen 9 -- Width																														
Pen 10 -- Width																														
Pen 11 -- Width																														
Pen 12 -- Width																														
Pen 13 -- Width																														
Pen 14 -- Width																														
Pen 15 -- Width																														
Smoothing																														
ThickenFineLines																														
AdjustFaintLines																														

Network (RemoteUI)		Current network settings used by RemoteUI.
	TCP/IP	
	Frame Type	
	Use DHCP	
	Use BOOTP	
	Use RARP	
	Enable DNS Dynamic Update	
	Use Zeroconf Function	
	IP Address	
	Subnet Mask	
	Gateway Address	

	<table border="1"> <tr><td>LPD Printing</td></tr> <tr><td>IPP Printing</td></tr> <tr><td>IPP Printer URI</td></tr> <tr><td>RAW Printing</td></tr> <tr><td>Raw Port Number</td></tr> <tr><td>Raw Mode Bi-direction</td></tr> <tr><td>FTP Printing</td></tr> <tr><td>Primary DNS Server Address</td></tr> <tr><td>Secondary DNS Server Address</td></tr> <tr><td>DNS Host Name</td></tr> <tr><td>DNS Domain Name</td></tr> <tr><td>Multicast DNS Service Name</td></tr> </table>	LPD Printing	IPP Printing	IPP Printer URI	RAW Printing	Raw Port Number	Raw Mode Bi-direction	FTP Printing	Primary DNS Server Address	Secondary DNS Server Address	DNS Host Name	DNS Domain Name	Multicast DNS Service Name	Current network settings used by RemoteUI.																
LPD Printing																														
IPP Printing																														
IPP Printer URI																														
RAW Printing																														
Raw Port Number																														
Raw Mode Bi-direction																														
FTP Printing																														
Primary DNS Server Address																														
Secondary DNS Server Address																														
DNS Host Name																														
DNS Domain Name																														
Multicast DNS Service Name																														
	<table border="1"> <tr><td colspan="2">NetWare</td></tr> <tr><td colspan="2">Frame Type</td></tr> <tr><td colspan="2">IPX External Network Number</td></tr> <tr><td colspan="2">Node Number</td></tr> <tr><td colspan="2">Print Service</td></tr> <tr> <td></td> <td>Tree Name</td> </tr> <tr> <td></td> <td>Context Name</td> </tr> <tr> <td></td> <td>Print Server Name</td> </tr> <tr> <td></td> <td>Print Server Password</td> </tr> <tr> <td></td> <td>Polling Interval</td> </tr> <tr> <td></td> <td>Phase Type</td> </tr> <tr> <td></td> <td>Name</td> </tr> <tr> <td></td> <td>Network Number</td> </tr> <tr> <td></td> <td>Zone</td> </tr> </table>	NetWare		Frame Type		IPX External Network Number		Node Number		Print Service			Tree Name		Context Name		Print Server Name		Print Server Password		Polling Interval		Phase Type		Name		Network Number		Zone	<p><b>NetWare</b> settings.</p> <p>Current <b>AppleTalk</b> settings.</p>
NetWare																														
Frame Type																														
IPX External Network Number																														
Node Number																														
Print Service																														
	Tree Name																													
	Context Name																													
	Print Server Name																													
	Print Server Password																													
	Polling Interval																													
	Phase Type																													
	Name																													
	Network Number																													
	Zone																													

HEAD LOT NUMBER		Printhead lot number.
	LOT	

PARTS STATUS		Utilization status of replacement parts that require servicing.
	COUNTER A–Y	

COUNTER		Utilization status of the cutter, media, and other items (indicating how much they have been used).
CUTTER		
MEDIA		
	LIFE TTL	
	LIFE ROLL	
	LIFE CUT-SHEET	
MEDIA1-7		
	NAME	
	TTL	
	ROLL	
	CUTSHEET	
AFTER INSTALLATION		

## Checking Instructions During Printer Operations


You can refer to instructions on the printer control panel when loading paper, replacing ink tanks, or performing other operations.

### How to view instructions

Once you complete an action described in the instructions, the printer detects the action and switches to the next instruction screen.

In the case of actions the printer cannot detect, instruction screens are switched every four seconds, and the sequence of operations is shown repeatedly.

When all actions in the sequence are finished, the instruction screen for the next step is displayed.

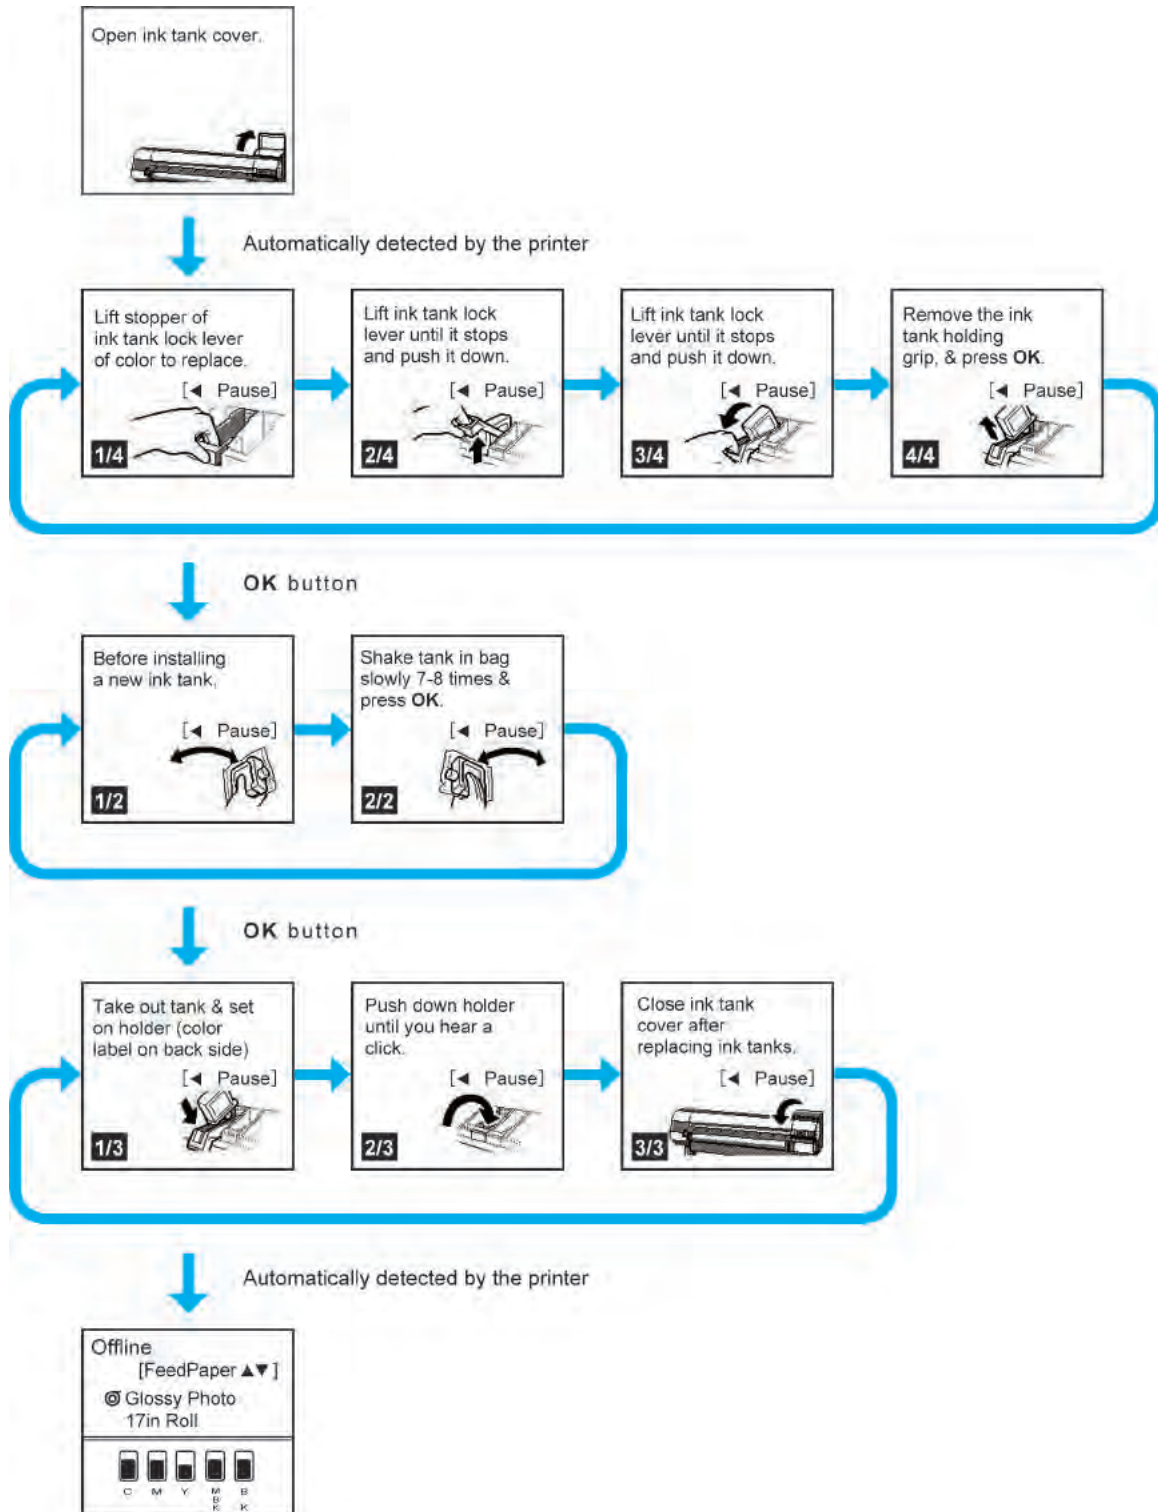

9

744

**Note**

- During a continuous display of instructions, you can press the ◀ button to pause the instructions on the current screen.  
Press the ◀ or ▶ button to display the previous or next screens. If you do not press the ◀ or ▶ button within 30 seconds, continuous display is resumed.  
Press the **OK** button to display the instruction screen for the next step.

### Viewing instructions for loading or removing rolls

1. Press the **Load/Eject** button.
2. Press ▲ or ▼ to select **Load Roll** or **Remove Roll**, and then press the **OK** button.

Instructions are now displayed.

### Viewing instructions for loading or removing sheets

1. Press the **Load/Eject** button.

Instructions are now displayed.

## Hard Disk

Printer Hard Disk Operations ..... 746  
 Checking the Free Hard Disk Space ..... 747  
 Erasing Data on the Printer's Hard Disk ..... 750

### Printer Hard Disk Operations

Printer hard disk operations are available from the following programs and interfaces.

- Printer driver
- imagePROGRAF HDI Driver
- imagePROGRAF Free Layout
- Color imageRUNNER Enlargement Copy
- imagePROGRAF Status Monitor
- imagePROGRAF Printmonitor
- RemoteUI
- Control Panel

The hard disk operations available through each interface are as follows.

		Printer driver	image-PROGRAF Free Layout	image-PROGRAF Status Monitor	RemoteUI	Control Panel
		image-PROGRAF HDI Driver	Color imageRUNNER Enlargement Copy			
Windows						
Mac OS		Printer driver	Color imageRUNNER Enlargement Copy	image-PROGRAF Printmonitor		
Operation		Availability	Availability	Availability	Availability	Availability
Saving print jobs	Print	Yes	Yes	No	No	No
	Print (auto delete)	Yes	Yes	No	No	No
	Save in mail box	Yes	No	No	No	No
	Save data before printing(*1)	Yes	Yes	No	No	No
	Do not save print jobs in the common box	No	No	No	No	Yes
	Save print jobs sent from sources other than the printer driver	No	No	No	No	Yes
Operations with saved jobs	Print saved jobs	No	No	Yes	Yes	Yes

9

746



Windows		Printer driver	image-PROGRAF Free Layout	image-PROGRAF Status Monitor	RemoteUI	Control Panel
		image-PROGRAF HDI Driver	Color imageRUNNER Enlargement Copy			
Mac OS		Printer driver	Color imageRUNNER Enlargement Copy	image-PROGRAF Printmonitor		
Operation		Availability	Availability	Availability	Availability	Availability
Operations with saved jobs	Delete saved jobs	No	No	Yes	Yes	Yes
Job queue management	Display job queue	No	No	Yes	Yes	Yes
	Delete	No	No	Yes	Yes	Yes
	Preempt Jobs	No	No	Yes	Yes	Yes
Mail box management	Move saved jobs	No	No	Yes	Yes	No
	Modify saved jobs	No	No	Yes	Yes	No
	Modify mail boxes	No	No	Yes	Yes	No
	Print a list of saved jobs	No	No	No	No	Yes
	Display a list of saved jobs	No	No	Yes	Yes	Yes
Other operations	Display free hard disk space	No	No	Yes	Yes	Yes
	Initialize hard disk	No	No	No	No	Yes
	Display the time of printing	No	No	Yes	No	No
Display error messages		No	No	Yes	Yes	Yes

\*1: This option is available in combination with **Print**, **Print (auto delete)**, and **Save in mail box**. Print jobs are saved and then printed.

## Checking the Free Hard Disk Space

You can check the space available on the printer's hard disk as follows.

- Using the Control Panel
- Using RemoteUI
- Using imagePROGRAF Status Monitor (Windows)
- Using imagePROGRAF Printmonitor (Macintosh)

## Using the Control Panel

1. Press the **Menu** button to display **MAIN MENU**.




2. Press **▲** or **▼** to select **Job Management**, and then press the **▶** button.

3. Press **▲** or **▼** to select **HDD Information**, and then press the **▶** button.




**Note**

- You can also check the available hard disk space in the submenu indicating printer information. Press the **Information** button to display the submenus. (See "Submenu Display.") →P.735

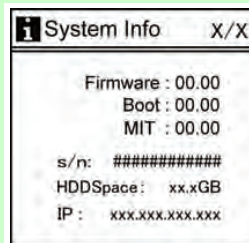

## Using RemoteUI

To view the box list, select **Stored Job** in Job Management. On the **Stored Job** page, the free hard disk space is shown in the upper-right corner when boxes are listed.

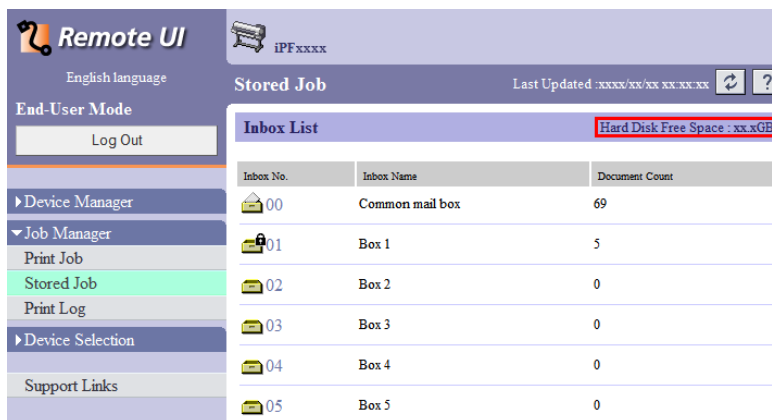


For details, refer to the RemoteUI help.

## Using imagePROGRAF Status Monitor

The **Hard Disk** sheet shows the free hard disk space.

- **Hard Disk Sheet in imagePROGRAF Status Monitor**

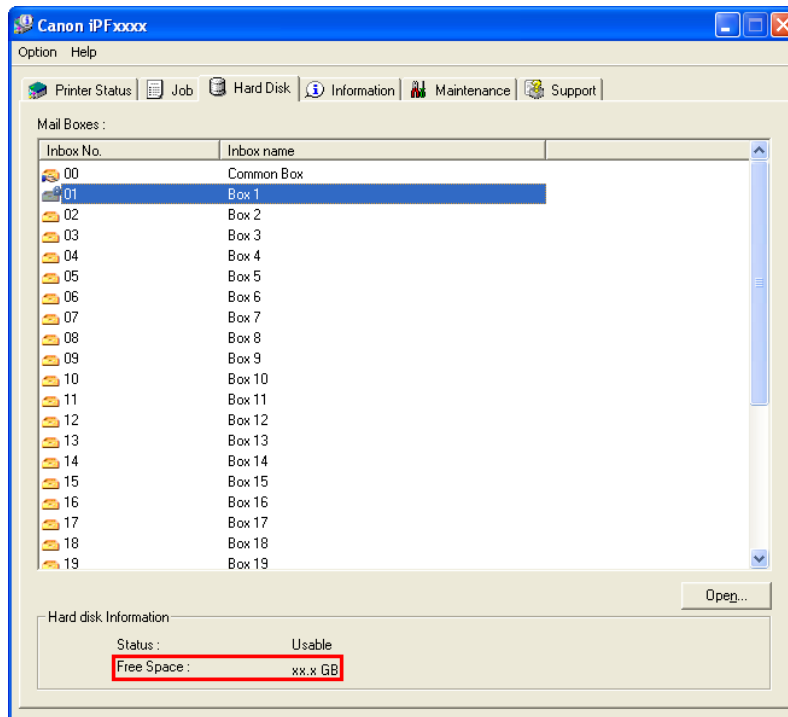


For details, refer to the imagePROGRAF Status Monitor help file.

9

## Using imagePROGRAF Printmonitor

The **Hard Disk** pane shows the free hard disk space.

- **Hard Disk Pane in imagePROGRAF Printmonitor**

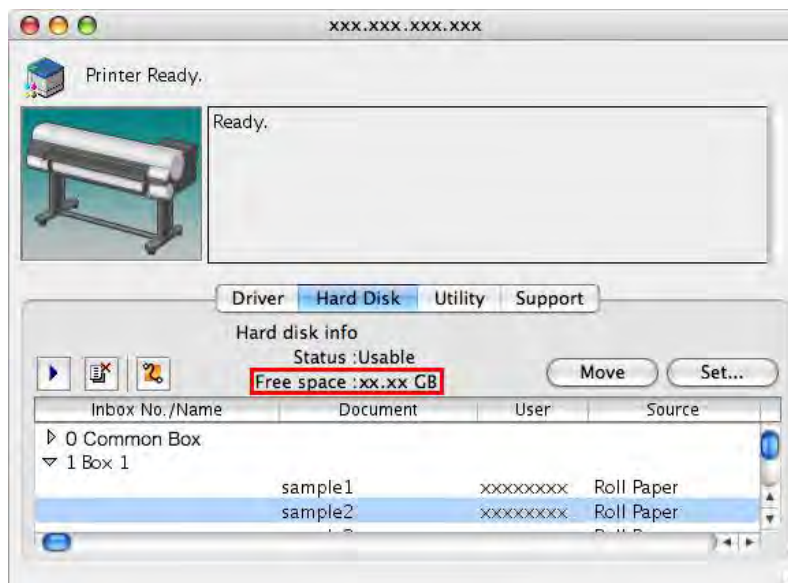

749

For details, refer to the imagePROGRAF Printmonitor help file.

## Erasing Data on the Printer's Hard Disk

You can erase data on the printer's hard disk from the Control Panel. There are three ways to erase the data, as follows.

Erasure Method	Details
<b>High Speed</b>	Erases file management data for print job data stored on the printer's hard disk. Choose this method for relatively fast erasure. Because only the file management data is erased, the print job data itself is not erased. Note that it may be possible to read this data using commercial data recovery software.
<b>Secure High Spd.</b>	Overwrites the entire hard disk with random data. No verification is performed to check if the data was correctly written. Choose this method to erase highly confidential data. Note that it may be possible to read the overwritten data using specialized data recovery tools.
<b>Secure</b>	Overwrites the entire hard disk with 00, FF, and random data (one time each). Verification is performed to check if the data was correctly written. Choose this method to erase especially confidential data. It is virtually impossible to recover the overwritten data. Conforms to the DoD5220.22-M standard of the U.S. Department of Defense.



### Note

- For a more secure method of preventing data recovery, we recommend physically or magnetically destroying the hard disk. In this case, the hard disk can no longer be used.
- **Erase HDD Data** is not available if there is a job queue. Also note that during execution of **Erase HDD Data**, print jobs cannot be processed.

9

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **System Setup**, and then press the ► button.
3. Press ▲ or ▼ to select **Erase HDD Data**, and then press the ► button.
4. Press ▲ or ▼ to select the method of erasure, and then press the ► button.



### Note

- If a password has been set on the printer, the **Admin.Pswd** screen is displayed. In this case, enter the password and press the **OK** button to go to the next step.

5. Press ▲ or ▼ to select **Yes**, and then press the **OK** button to display the confirmation screen.

**Note**

- As for the time required for deletion, confirm it on the Control Panel. However, when **High Speed** is selected, this finishes in several seconds.

6. Press ▲ or ▼ to select **Yes**, and then press the **OK** button to start erasure.


## Optional accessories

Media Take-up Unit .....	752
Using the Media Take-up Unit .....	754
Removing Printed Documents from the Media Take-up Unit .....	761

### Media Take-up Unit

Use the optional Media Take-up Unit to have documents that are printed on rolls rewound automatically after printing. This is convenient for large-format printing, or when printing large-volume jobs continuously.

- Media Take-up Unit TU-06

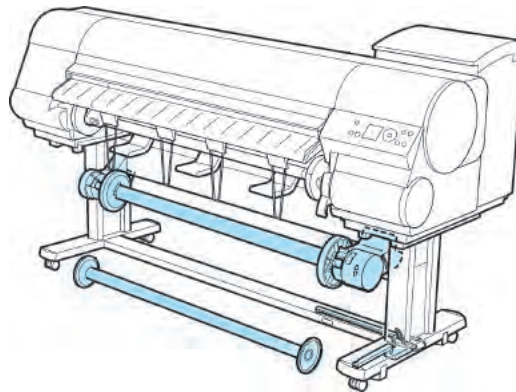


#### Note

- For instructions on installing the Media Take-up Unit, refer to the Media Take-up Unit Setup Guide.
- For information on the types of paper compatible with the Media Take-up Unit, refer to the Paper Reference Guide. (See "Types of Paper." →P.617)
- For Media Take-up Unit instructions, see "Using the Media Take-up Unit." →P.754

### Parts

- Main Unit

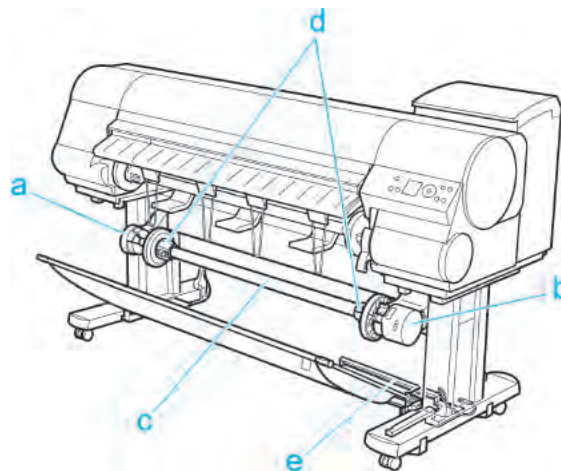

**a. Left Media Take-up Unit**

Load the Rewind Spool here.

**b. Right Media Take-up Unit**

Load the Rewind Spool here. Includes the Media Take-up Unit **Power** button, ▲ and ▼ buttons to advance or rewind paper, and a power cord.

**c. Rewind Spool**


Winds documents printed on rolls.

**d. 3-inch Adapter**

When rewinding rolls with 3-inch paper cores, attach the adapter to the Rewind Spool.

**e. Media Take-up Sensor**

A sensor for automatically rewinding rolls.

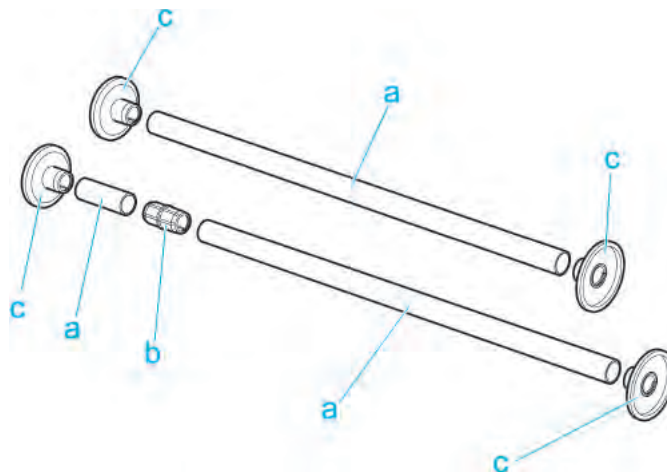**• Weight****a. Weight Roll (6)**

Weights required when rewinding rolls. Use one weight roll or combine two (with a Weight Joint ), depending on the roll width.

**b. Weight Joint**

Fastens two weight rolls.

**c. Weight Flange (2 sets)**

Attached to the ends of Weight Roll to adjust the weight. Use Weight Flange 1 or Weight Flange 2, depending on the type of paper. (See "Using the Media Take-up Unit.") →P.754



## Using the Media Take-up Unit

This topic describes how to use the Media Take-up Unit.



### Important

- The Media Take-up Unit cannot be used with sheets.
- Do not put anything near the Media Take-up Sensor that might interfere with it. This may impair operation.
- Rolls are not cut automatically when the Media Take-up Unit is used, regardless of the **Cutting Mode** setting in the printer menu or the **Automatic Cutting** setting in the printer driver.
- Color tones after printing may change during the ink drying period for some types of paper. Allow ample drying time before the final check of colors, and do not remove printed documents from the Media Take-up Unit too soon.
- In humid environments, documents printed on relatively insubstantial media such as Fabric Banner, Synthetic Paper, or lightweight Coated Paper may not be retracted evenly by the unit. In this case, take steps to control humidity in the operating environment, or adjust the **Roll DryingTime** or **Scan Wait Time** settings so that printed documents are retracted after the ink has fully dried. (See "Main Menu Settings.") →P.722


1. When using the Stationary Output Stacker, stow the Stationary Output Stacker before this procedure. (See "Stowing the Stationary Output Stacker.") →P.661




### Important

- Arrange the Basket Cloth and Basket Rod so they do not interfere with the Media Take-up Sensor.


2. Unlock the flange on the left side of the Rewind Spool by lifting the lever (a) from the shaft side. Remove the flange.

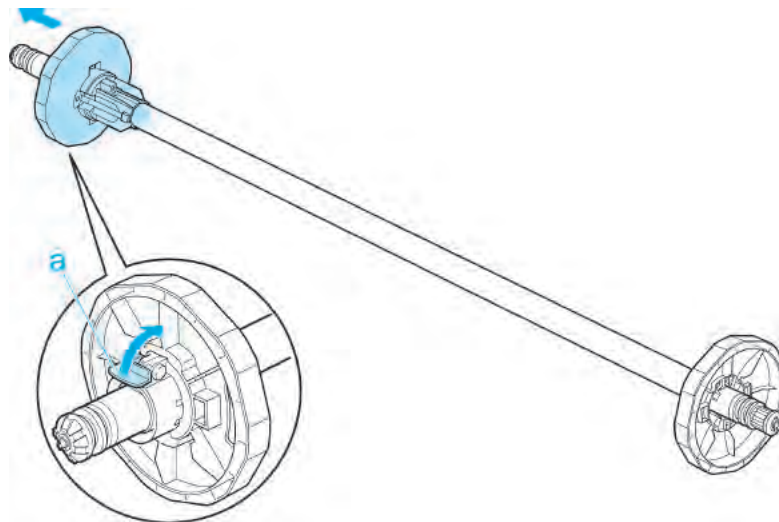

3. When rewinding rolls with 3-inch paper cores, insert the 3-inch Adapter on the flanges at both ends.

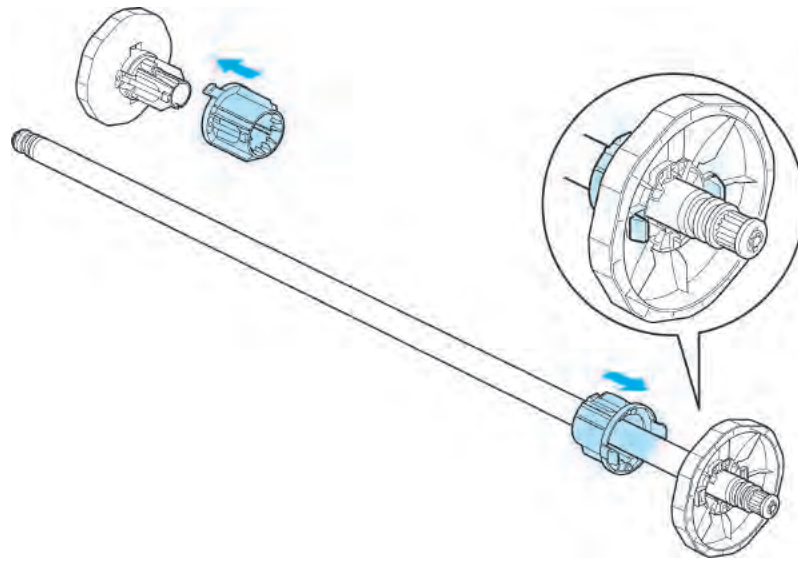


4. Insert the paper core, which serves as the spindle for rewinding a roll, on the Rewind Spool.

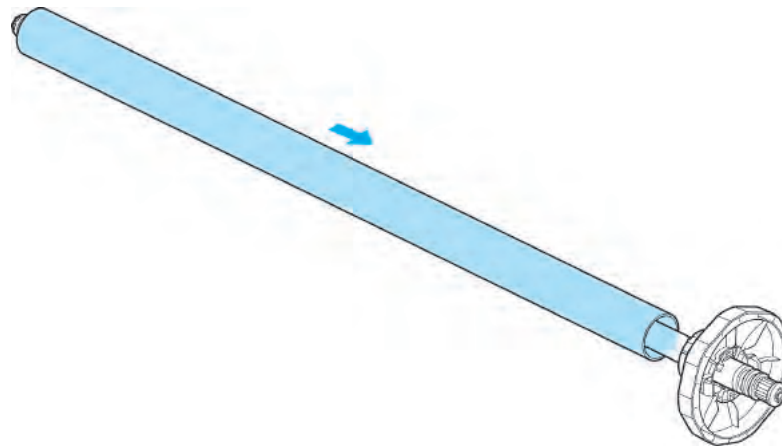

**Important**

- On the Rewind Spool, always use a paper core that is the same size as the roll to be rewound.


5. Push the flanges in firmly until the paper core is secured in place and push down the lever (a) toward the shaft.

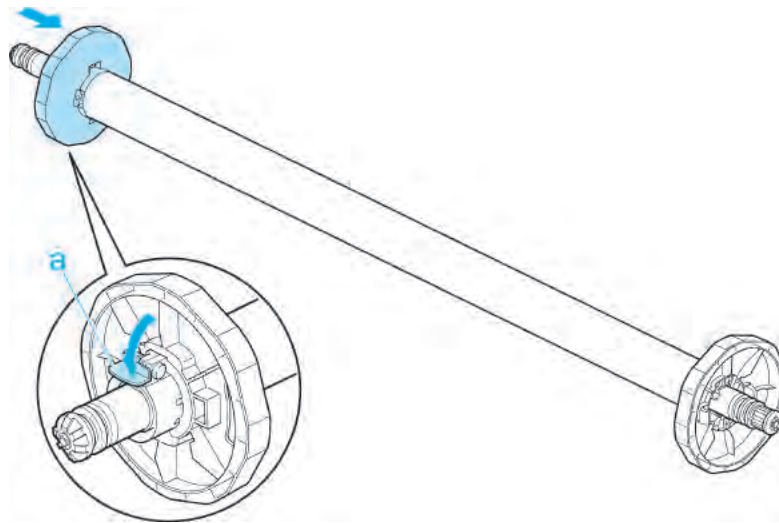

**Important**

- After pushing in the flanges firmly, make sure the paper core is secure and does not move around. Move the paper core left and right. If there is a gap between the flanges and paper core, repeat steps 2–4.

6. Load the Rewind Spool on the Media Take-up Unit so that the gear of the Rewind Spool (a) meshes with the gear of the Right Media Take-up Unit (b).

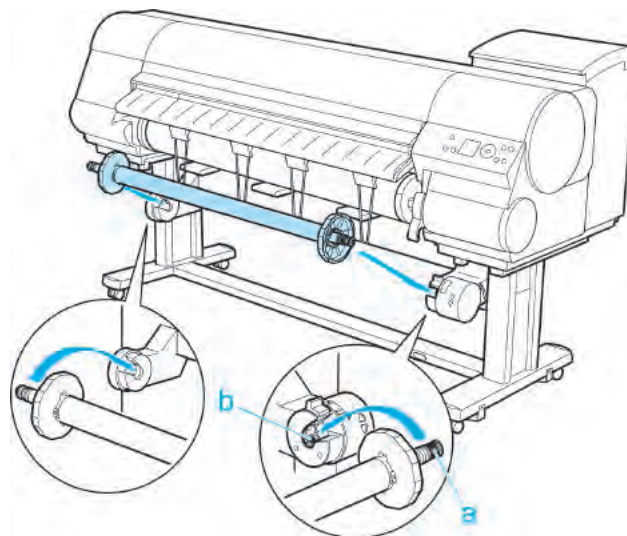


**Important**

- If you attempt to load the Rewind Spool with the left and right ends inverted by mistake, the Media Take-up Unit cannot be turned on.
- If the gear of the Rewind Spool (a) does not mesh with the gear of the Right Media Take-up Unit (b), the Media Take-up Unit cannot be turned on.


7. Press the **Menu** button to display **MAIN MENU**.



8. Press ▲ or ▼ to select **Take-up Reel**, and then press the ► button.
9. Press ▲ or ▼ to select **Enable**, and then press the **OK** button.
10. Press ▲ or ▼ to select **Auto Feed**, and then press the ► button.
11. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
The roll is now advanced to the Media Take-up Unit.
12. Hold the roll paper by the middle of the leading edge and align the right edge with the right edge of the paper core of the Rewind Spool. With the left and right edges of the roll paper evenly taut, tape the middle to the paper core to fasten it.

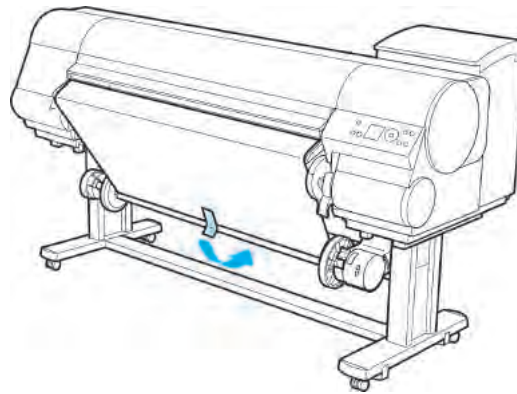

13. Making sure the roll paper is not slack, tape the left and right side of the leading edge to the paper core.

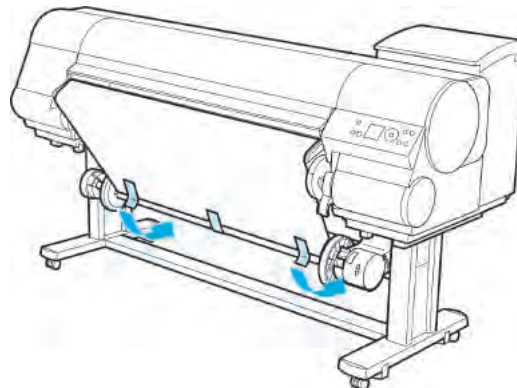





**Note**

- When rewinding heavyweight paper, use strong adhesive tape to fasten it.

- 14.** Press the **Online** button to bring the printer offline, and then press ▼ on the Control Panel to loosen the tension of the roll.

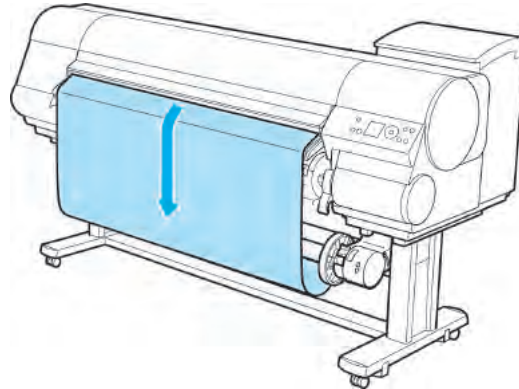


- 15.** On the Right Media Take-up Unit, pull the Rewind Mode Switch forward to turn it on. Press the ▼ button on the Media Take-up Unit to rewind the roll so that it is nearly taut.

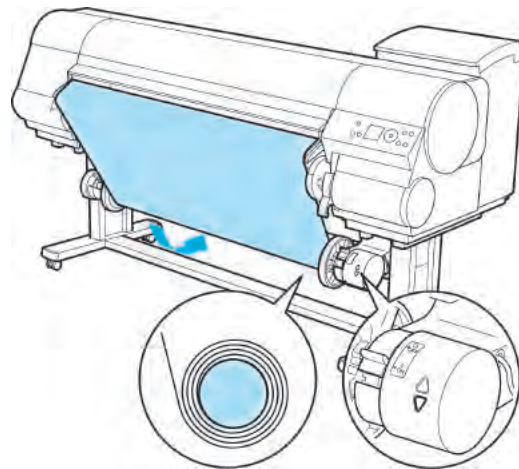


**Important**

- Rewind the paper so that the paper core makes at least two revolutions. If the paper is not rewound two full revolutions, repeat steps 14 and 15.
- Do not manually force the Rewind Spool or paper core to rotate them. This may damage them. To rewind or unwind rolls, press ▲ or ▼ on the Media Take-up Unit.

- 16.** You can unwind rolls by holding down ▼ on the Control Panel.

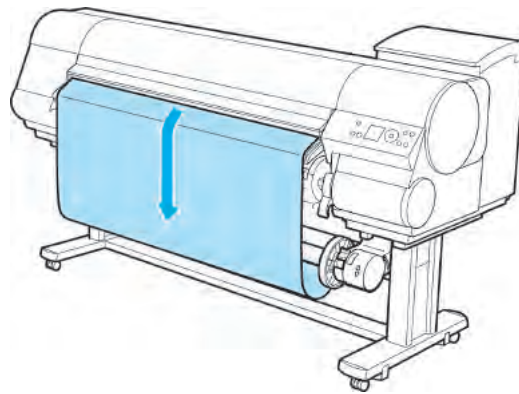

- 17.** Use a combination of Weight Roll, Weight Joint, and Weight Flange that matches the roll type and width.

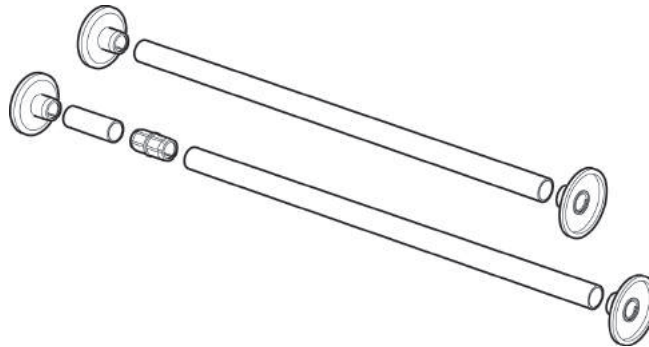

The following list identifies Weight Roll and Weight Flange you can use. A Color Label is applied to each Weight Roll.

#### Weight Roll

Roll Width	Weight Roll to Use
B2 Width: 515.0 mm (20.3 in)	<b>D</b>
B1 Width: 728.0 mm (28.7 in)	<b>A+E</b>
B0 Width: 1,030.0 mm (40.6 in)	<b>A+G</b>
A1 Width: 594.0 mm (23.4 in)	<b>E</b>
A0 Width: 841.0 mm (33.1 in)	<b>B+E</b>
431.8 mm (17 in)	<b>C</b>
609.6 mm (24 in)	<b>E</b>
762.0 mm (30 in)	<b>B+D</b>
914.4 mm (36 in)	<b>G</b>
1,066.8 mm (42 in)	<b>C+E</b>
1,117.6 mm (44 in)	<b>D+E</b>



### Weight Flange

Roll Type	Weight Flange to Use
Glossy Photo Paper, Semi-Glossy Photo Paper, Heavyweight Glossy Photo Paper, Heavyweight Semi-Glossy Photo Paper, Fine Art Photo Paper, Fine Art Heavyweight Photo Paper, Fine Art Textured Paper, Canvas Matte, Fine Art Block Print, Fine Art Watercolor, Proofing Paper, Coated Paper, Heavyweight Coated Paper, Extra Heavyweight Coated Paper, Colored Coated Paper, Synthetic Paper, Adhesive Synthetic Paper, Backprint Film, Backlit Film, Flame-Resistant Cloth, Fabric Banner, Thin Fabric Banner	Weight Flange 1 (*1)
Premium Matte Paper	Weight Flange 2


\*1: If you cannot retract stiff paper well using Weight Flange 1 or if the diameter of the retracted paper is wider than the Rewind Spool, use Weight Flange 2. When using Weight Flange 2, adjust the paper feed amount by executing **Auto Band Adj.** (See "Auto Band Adjustment (Auto Band Adj.)." →P.677)



**Note**

- Do not use combinations other than those identified here.
- Insert the Weight Flange and Weight Joint firmly on the Weight Roll.
- Use identical Weight Flange on the left and right ends. Insert matching Weight Flanges (1 or 2) on both ends of the Weight Roll.
- Keep unused weight rolls, weight joints, and weight flanges handy by putting them in the box and putting the box under the Stand.

**18.** Set the Weight Roll gently on top of the slack in the roll paper.

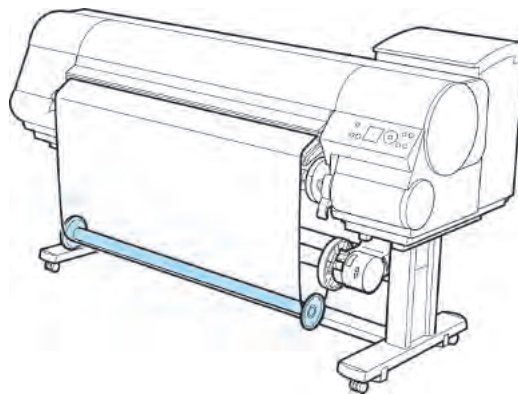

**Important**

- Always set the Weight Roll on the paper. Failure to do this may cause rewinding problems.
- When setting the Weight Roll on the paper, avoid touching the paper core and causing the wound roll to become misaligned on the left and right end.



19. Press the **Online** button to bring the printer online.




The Media Take-up Unit is now ready for use. Printed rolls can now be rewound automatically.



**Note**

- When the Media Take-up Unit is in use, an icon indicating the take-up mode is shown on the Display Screen.

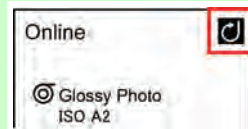


## Removing Printed Documents from the Media Take-up Unit

Remove printed documents from the Media Take-up Unit as follows.


1. Press the **Online** button to bring the printer offline.



2. Hold down the ▼ button on the Control Panel to advance the roll a little.  
To protect the paper that has been rewound, advance it an amount longer than the outer circumference.

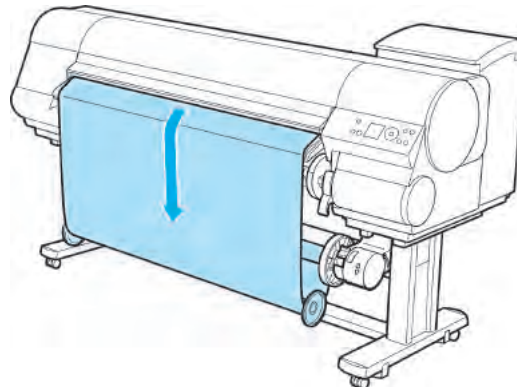

3. Remove the Weight Roll from the roll paper.

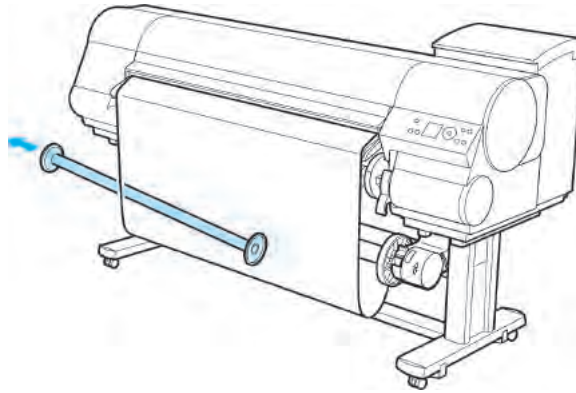

4. Press the **Menu** button to display **MAIN MENU**.




5. Press **▲** or **▼** to select **Paper Cutting**, and then press the **▶** button.
6. Press **▲** or **▼** to select **Yes**. As you hold the trailing edge of the printed document, press the **OK** button. The roll is now cut.



**Important**

- Always hold the trailing edge of printed documents when cutting rolls. If you do not hold the documents, they may fall on the floor and the printed surface may become soiled.

7. Hold the trailing edge of the printed document and press the **▼** button on the Media Take-up Unit to rewind the printed documents.

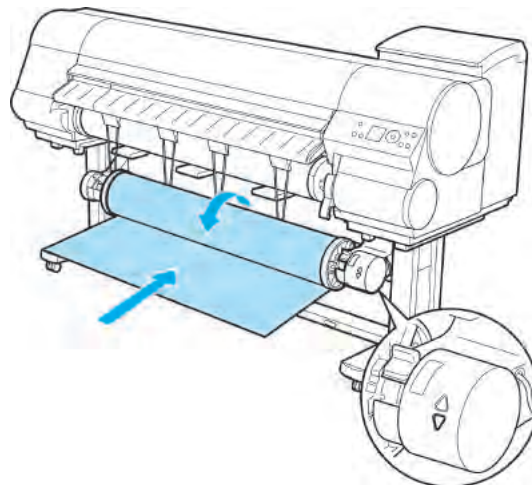


Apply adhesive tape to the rewound paper to hold it in place, if necessary.



**Important**

- Be careful not to scratch the printed surface.

8. Turn off the Media Take-up Unit by pushing in the Rewind Mode Switch.

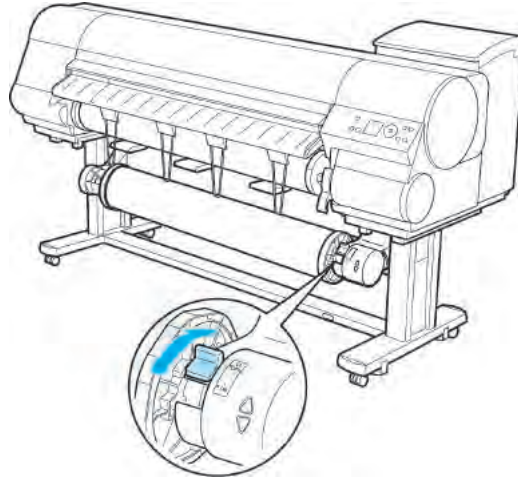

9. Press the **Menu** button to display **MAIN MENU**.




9

10. Press ▲ or ▼ to select **Take-up Reel**, and then press the ► button.

11. Press ▲ or ▼ to select **Disable**, and then press the **OK** button.

12. Remove the Rewind Spool from the Media Take-up Unit.

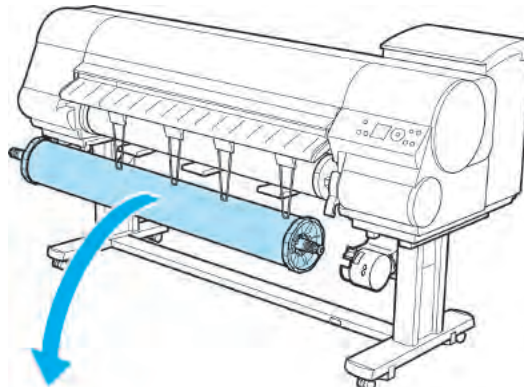


763




**Important**

- Always turn off the Media Take-up Unit before removing the Rewind Spool. The Media Take-up Unit may be damaged if you do not turn it off first.
- Remove the Rewind Spool, pulling off both ends from the Media Take-up Unit at once.

**13.** Unlock the flange on the left side of the Rewind Spool by lifting the lever (a) from the shaft side. Remove the flange.

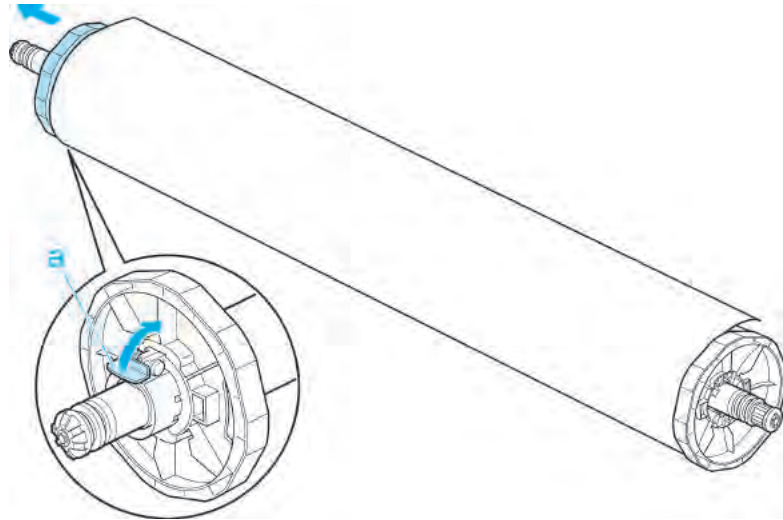

**14.** Remove the entire paper core with the rewound printed documents from the Rewind Spool.

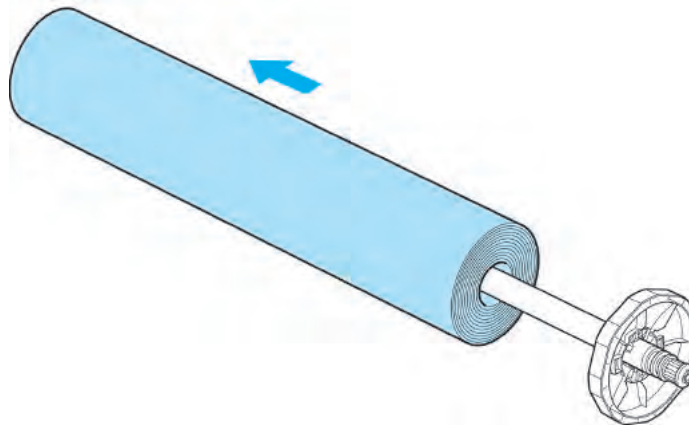

**Note**

- You can leave the Rewind Spool on the Media Take-up Unit even when it is not used for rewinding rolls.

## Printer Specifications

Specifications .....	765
Print Area .....	768

### Specifications



#### Important

- The following values may vary depending on the operating environment.

### Printer

Power supply		100–120 V AC (50/60 Hz), 220–240 V AC (50/60 Hz)
Power consumption	During operation	190 W max.
	Sleep mode	100–120 V: 5 W max. 220–240 V: 6 W max.
	Off	1 W max. (*1 →P.765 )
Operating noise	During operation	Approx. 52 dB (A) max. (6.8 bels or less)
	Standby	Approx. 35 dB (A) max.
Operating environment	Temperature	15–30°C (59–86°F)
	Humidity	10–80%, non-condensing
Dimensions (W × D × H)	Printer and Stand (including Roll Holder and Stationary Output Stack-er )	1,893 × 975 × 1,144 mm (74.5 × 38.4 × 45.0 in)
Weight	Printer and Stand (not including the Printhead and Ink Tank )	Approx. 138 kg (304.2 lb)
Space for installation (W × D × H)	Printer and Stand (not including the Printhead and Ink Tank )	2,293 × 1,675 × 1,500 mm (90.3 × 65.9 × 59.1 in)
Applicable standards		International Energy Star Program, Law on Promoting Green Purchasing, GPN, RoHS, Eco Declaration, WEEE, U.S. presidential directives

\*1: The printer uses a trace amount of power even when turned off. To stop all power consumption, turn off the printer and unplug the power cord.

### Printing performance

Print method	Bubblejet
Maximum resolution	2400 dpi horizontally (*1 →P.765 ) × 1200 dpi vertically
Printhead	PF-03
Number of nozzles	MBK: 5,120; Others: 2,560 each color

\*1: Prints with a minimum 1/2400 inch dot pitch between ink droplets.

## Interface

USB 2.0(*1 →P.766 )	Format	Internal port
	Mode	Full-speed (12 Mbps), high-speed (480 Mbps), bulk transfer
	Connector	Series B (4-pin)
Ethernet	Format	Internal port
	Specification	IEEE 802.3 10BASE-T, IEEE 802.3u 100BASE-TX/Auto-Negotiation, IEEE 802.3x Full Duplex
	Protocols	IPX/SPX (Netware 4.2, 5.1, 6.0), SNMP, TCP/IP, AppleTalk, HTTP

\*1: Use in USB 2.0 High Speed mode requires the following environment:

- Computer: USB 2.0 High-Speed-compatible
- Operating system: Windows 2000/Windows XP/Windows Server 2003/Windows Vista /Windows Server 2008/Windows 7 or Mac OS X ver. 10.3.9 or later
- USB 2.0 driver: Microsoft USB 2.0 driver (available from Windows Update or the Service Pack.)
- USB cable: Certified USB 2.0 cable

## Ink

Ink Tank	MBK Ink Tank ( Matte Black Ink, or black ink for matte paper)	Pigment ink	PFI-303MBK (330 ml [11.2 fl oz]) or PFI-703MBK (700 ml [23.7 fl oz])
	BK Ink Tank ( Black Ink )	Dye ink	PFI-303BK (330 ml [11.2 fl oz]) or PFI-703BK (700 ml [23.7 fl oz])
	C Ink Tank ( Cyan Ink )	Dye ink	PFI-303C (330 ml [11.2 fl oz]) or PFI-703C (700 ml [23.7 fl oz])
	M Ink Tank ( Magenta Ink )	Dye ink	PFI-303M (330 ml [11.2 fl oz]) or PFI-703M (700 ml [23.7 fl oz])
	Y Ink Tank ( Yellow Ink )	Dye ink	PFI-303Y (330 ml [11.2 fl oz]) or PFI-703Y (700 ml [23.7 fl oz])
Capacity			330 or 700 ml (11.2 or 23.7 fl oz) per color (*1 →P.766 )

\*1: The provided Starter Ink Tanks contain 330 ml (11.2 fl oz) each.

## Paper

For information on the types of paper the printer supports, refer to the Paper Reference Guide. (See "Types of Paper.")

→P.617

Paper width	Rolls	254–1,117.6 mm (10–44 in)
	Sheets	203–1,117.6 mm (8–44 in)
Length of one page	Rolls	203 (*1 →P.767 )–18,000 mm (8–708.7 in)
	Sheets	203–1,600 mm (8–63 in)
Thickness	Rolls	0.07–0.8 mm (0.0028–0.031 in)
	Sheets	0.07–0.8 mm (0.0028–0.031 in)

Paper Size	Roll width	<b>44-in. Roll (1117.6mm), 42-in. Roll (1066.8mm), JIS B0/B1 Roll (1030.0mm), 36-in. Roll (914.4mm), ISO A0/A1 Roll (841.0mm), 30-in. Roll (762.0mm), JIS B1/B2 Roll (728.0mm), 24-in. Roll (609.6mm), ISO A1/A2 Roll (594.0mm), JIS B2/B3 Roll (515.0mm), 17-in. Roll (431.8mm), ISO A2/A3 Roll (420.0mm), 16-in. Roll (406.4mm), 14-in. Roll (355.6mm), ISO A3/A4 Roll (297.0mm), 10-in. Roll (254.0mm)</b>
	Sheets	<b>ISO A0, ISO A1, ISO A2, ISO A2+, ISO A3, ISO A3+, ISO A4, ISO B0, ISO B1, ISO B2, ISO B3, ISO B4, JIS B0, JIS B1, JIS B2, JIS B3, JIS B4, 34"x44" (ANSI E), 28"x40" (ANSI F), 22"x34" (ANSI D), 17"x22" (ANSI C), 13"x19" (Super B), 11"x17" (Ledger), Legal (8.5"x14"), Letter (8.5"x11"), 36"x48" (ARCH E), 30"x42" (ARCH E1), 26"x38" (ARCH E2), 27"x39" (ARCH E3), 24"x36" (ARCH D), 18"x24" (ARCH C), 12"x18" (ARCH B), 9"x12" (ARCH A), DIN C0, DIN C1, DIN C2, DIN C3, DIN C4, 20"x24", 18"x22", 14"x17", 12"x16", 10"x12", 10"x15", 8"x10", US Photo 16"x20", Poster 20"x30", Poster 30"x40", Poster 42"x60", Poster 44"x62", 13"x22", Poster 300x900mm</b>
Print area	Normal size	Printable area <ul style="list-style-type: none"> <li>• Rolls 3 mm (0.12 in) from each side</li> <li>• Sheets 3 mm (0.12 in) from the top, 23 mm (0.91 in) from the bottom, and 3mm (0.12 in) from the left and right sides</li> </ul> For information on the recommended print area, see "Print Area." →P.768
	Borderless printing (*2 →P.767 )	Printable area (rolls) 0 mm from the top, 0 from the bottom, and 0 mm from the left and right sides
Supported width for borderless printing		<b>42-in. Roll (1066.8mm), JIS B0/B1 Roll (1030.0mm), 36-in. Roll (914.4mm), ISO A0/A1 Roll (841.0mm), 24-in. Roll (609.6mm), ISO A1/A2 Roll (594.0mm), JIS B2/B3 Roll (515.0mm), 17-in. Roll (431.8mm), 14-in. Roll (355.6mm), 10-in. Roll (254.0mm)</b>

\*1: When supplying paper, use a roll approximately 1,000 mm (1,093.6 yd) or longer.

\*2: Printing may not be possible in some cases, depending on the type and size of paper.

## Hard Disk

Hard disk capacity	160 GB (print job storage capacity: 92 GB)	
Print job storage capacity	Common Box	100 jobs
	Personal Boxes	100 jobs

## Options

Media Take-up Unit	TU-06
Wheeled Output Stacker	BU-03
Roll Holder Set	RH2-44



## Print Area

A margin required by the printer is added with respect to the size of paper loaded in the printer. Except in borderless printing, the actual printing area corresponds to the paper size minus the space for this margin.



**Note**

- **Printable Area:** The area that can be printed.
- There is no margin (that is, a margin of 0 mm) during borderless printing on rolls.
- **Recommended Print Area:** We recommend printing within this area.
- To print so that your original matches the print area exactly, use an oversized paper size that includes the required margin. (See "Printing on Oversized Paper." →P.85)

	Margins of Printable Area			Margins of Recommended Print Area		
	Top Edge	Bottom Edge	Sides	Top Edge	Bottom Edge	Sides
Sheets	3 mm (0.12 in)	23 mm (0.91 in)	3 mm (0.12 in)	20 mm (0.79 in)	23 mm (0.91 in)	5 mm (0.20 in)
Rolls	0/3 mm (0/0.12 in)	0/3 mm (0/0.12 in)	0/3 mm (0/0.12 in)	20 mm (0.79 in)	5 mm (0.20 in)	5 mm (0.20 in)

### Sheets



• **Printable Area**

a margin of 3 mm (0.12 in) on top, 23 mm (0.91 in) on bottom, and 3 mm (0.12 in) on left and right sides is required.

• **Recommended Print Area**

A margin of 20 mm (0.79 in) on top, 23 mm (0.91 in) on bottom, and 5 mm (0.20 in) on left and right sides is required.

### Rolls



- **Printable Area**

A margin of 3 mm (0.12 in) on all sides is required. During borderless printing, the margin on all sides is 0 mm. For information on paper compatible with borderless printing, see the Paper Reference Guide. (See "Types of Paper.")


→P.617

- **Recommended Print Area**

A margin of 20 mm (0.79 in) on top, 5 mm (0.20 in) on bottom, and 5 mm (0.20 in) on left and right sides is required.

## Network Setting

Network Setting	771
Network Setting (Windows)	783
Network Setting (Mac OS X)	793

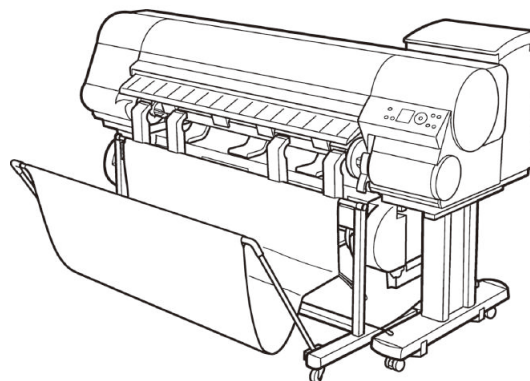

## Network Setting

Network Environment .....	771
Configuring the IP Address on the Printer .....	773
Configuring the IP Address Using the Printer Control Panel .....	774
Configuring the IP Address Using ARP and PING Commands .....	775
Using RemoteUI .....	776
Configuring the Printer's TCP/IP Network Settings .....	777
Specifying Printer-Related Information .....	778
Configuring the Communication Mode Manually .....	780
Email Notification When Printing is Finished or Errors Occur .....	781
Initializing the Network Settings .....	781

## Network Environment

### System requirements

The system requirements, which vary depending on your network, are as follows.

- **Printing over a TCP/IP network**
  - Compatible operating systems
    - Windows 2000 (Professional or Server)
    - Windows XP (Home Edition or Professional)
    - Windows Server 2003 (Standard Edition)
    - Windows Vista (Home Basic/Business/Ultimate)
    - Windows Server 2008 (Standard Edition or Enterprise Edition)
    - Windows 7
    - Windows XP Professional x64 Edition
    - Windows Server 2003 x64 Edition
    - Windows Vista x64
    - Windows Server 2008 x64
    - Windows 7 x64
    - Mac OS X 10.2.8 or later
    - Unix (Solaris 9)
    - Unix (Red Hat 9)
  - Compatible computer
    - A computer that runs one of the above operating systems



#### Note

- The imagePROGRAF printer driver is supported in Mac OS X 10.3.9 or later.
- The imagePROGRAF printer driver is not compatible with Unix.

- **Printing over an AppleTalk network**

- Compatible operating systems

- Mac OS X 10.2.8–10.4
- Compatible computer
  - A computer that runs one of the above operating systems



**Note**

- The printer cannot be used over a LocalTalk network.
- Compatible with EtherTalk Phase 2.
- The imagePROGRAF printer driver is not compatible with AppleTalk.

**Printing over a NetWare network**

- Compatible servers
  - Novell NetWare 4.2/5.1/6.0
- Compatible clients
  - Windows 2000 (Professional or Server)
  - Windows XP (Professional)
- Compatible computer
  - A computer that runs one of the above operating systems



**Note**


- In NetWare 6.0, iPrint is not supported.

**Network Environment**

After confirming what type of network environment you will connect the printer to, set up the printer and computers as needed.

**Example of a Windows network**

In Windows networks, print over TCP/IP.

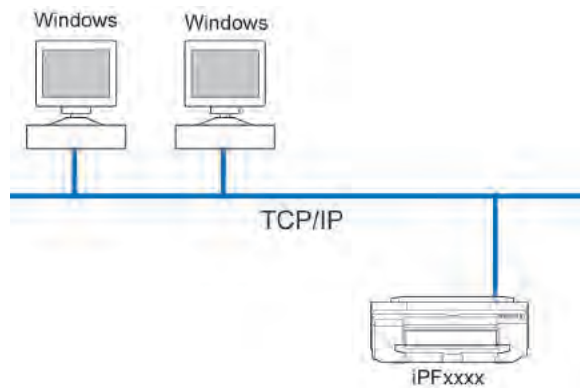


**Note**

- NetBIOS is not supported.

### • Example of a Macintosh network


In Macintosh networks, print over AppleTalk (EtherTalk) or TCP/IP, using Bonjour (Zeroconf) functions.

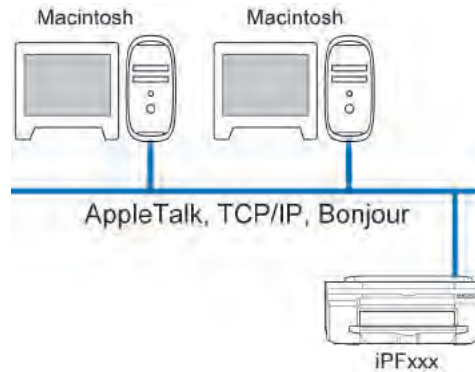

#### Note

- The imagePROGRAF printer driver is not compatible with AppleTalk.

### • Example of a NetWare network

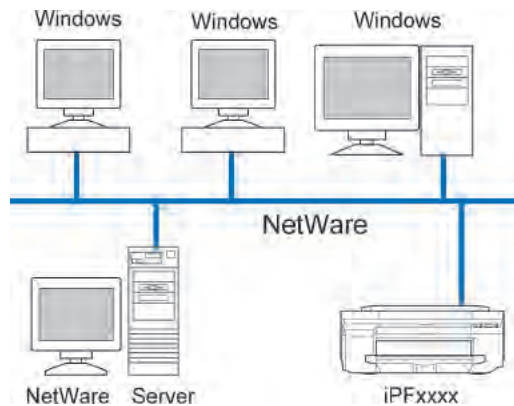

#### Note

- Even if there is a NetWare server in your network environment, you can use it in conjunction with TCP/IP or AppleTalk. In this case, complete the settings for each protocol you will use.

## Configuring the IP Address on the Printer

You must configure the printer's IP address before using the printer in a TCP/IP network.

The printer's IP address is configured automatically when you install the printer driver following the instructions in the Setup Guide.

Configure the IP address by using imagePROGRAF Device Setup Utility, the printer Control Panel, or ARP or PING commands, if the IP address is changed, or if you change the printer connection mode to a network connection. For details on configuring the IP address, refer to the following topics.

- Configuring the IP Address Using imagePROGRAF Device Setup Utility →P.404 (Windows)
- Configuring the IP Address Using the Printer Control Panel →P.774
- Configuring the IP Address Using ARP and PING Commands →P.775

**Important**

- If you use a DHCP server for automatic assignment of the printer's IP address, printing may no longer be possible after the printer is turned off and on. This is because an IP address different from before has been assigned. Thus, when using DHCP server functions, consult your network administrator and configure the settings in one of the following ways.
  - Configure the setting for dynamic DNS updating  
In RemoteUI, activate the setting **Enable DNS Dynamic Update**. (See "Configuring the Printer's TCP/IP Network Settings.") →P.777
  - Configure the setting for assignment of the same IP address each time the printer starts up

**Note**

- We recommend configuring the printer's IP address even if you will use the printer in networks other than TCP/IP networks. Configuring the printer's IP address enables you to use RemoteUI to configure the network settings and manage the printer with a web browser.  
For details on RemoteUI, see "Using RemoteUI." →P.776

## Configuring the IP Address Using the Printer Control Panel

This topic describes how to configure the printer's IP address on the Control Panel.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **Interface Setup**, and then press the ► button.
3. Press ▲ or ▼ to select **TCP/IP**, and then press the ► button.
4. Press ▲ or ▼ to select **IP Setting**, and then press the ► button.
5. Press ▲ or ▼ to select **IP Address**, and then press the ► button.
6. After you press ◀ or ▶ to select the input field, numerical input is possible.



7. Press the ▲ or ▼ button to enter the value.



**Note**

- Pressing the ▲ button increases the number by 1. The maximum value is 255, after which 0 is displayed.
- Pressing the ▼ button decreases the number by 1. The minimum value is 0, after which 255 is displayed.
- Hold down ▲ or ▼ to increase or decrease the value continuously.

8. Repeat steps 6–7 to enter the IP address assigned to the printer.

9. Press the **Online** button to bring the printer online.  
If any settings are changed, a confirmation message is displayed. In this case, press the **OK** button.



**Important**

- Be sure to complete step 9. This will activate the values you have entered.
- You can also specify the subnet mask and default gateway on the Control Panel.



**Note**

- If an error message is displayed, check the settings and correct any invalid values.
- To cancel the setup process, hold down the **Stop** button for a second or more.

## Configuring the IP Address Using ARP and PING Commands

This topic describes how to configure the IP address using ARP and PING commands. To use the ARP and PING commands, you will need to know the printer's MAC address. You can confirm the MAC address on the Control Panel.

1. Check the printer's MAC address.  
You can confirm the MAC address on the Control Panel as follows:
  1. Press the **Menu** button to display **MAIN MENU**.
  2. Press ▲ or ▼ to select **Interface Setup**, and then press the ► button.
  3. Press ▲ or ▼ to select **Ethernet Driver**, and then press the ► button.
  4. Press ▲ or ▼ to select **MAC Address**, and then press the ► button.



**Note**

- You can investigate the MAC address by printing a Status Print report.  
(See "Status Print.") →P.736

2. In Windows, open a command prompt, or in Mac OS X, start Terminal.
3. Execute the following command to add entries to the ARP table for managing IP addresses and corresponding MAC addresses.

arp -s [IP address] [the printer's MAC address you have verified]

Example: arp -s xxx.xxx.xxx.xxx 00-00-85-xx-xx-xx



#### Note

- In Mac OS X when using Terminal, enter the arp command in the format arp -s xxx.xxx.xxx.xxx 00:00:85:xx:xx:xx. For details, refer to the help file for the command line.

4. Execute the following command to send the IP address to the printer and configure it.

ping [IP address as specified in the ARP command] -l 479

Example: ping xxx.xxx.xxx.xxx -l 479



#### Note

- In -l, the l is the letter l.
- In Mac OS X when using Terminal, enter the ping command in the format ping -s 479 xxx.xxx.xxx.xxx. For details, refer to the help file for the command line.



#### Note

- The subnet mask and default gateway will be set to 0.0.0.0. Use RemoteUI to change the subnet mask and default gateway to match your network settings.  
For details on RemoteUI, see "Using RemoteUI." →P.776

## Using RemoteUI

Enter the printer's IP address in a web browser to display the RemoteUI page. After you log on to RemoteUI from the page, you can check and change the status of the printer and print jobs, and configure network settings.

To access RemoteUI, start the web browser and enter the following URL in the **Location** (or **Address**) box to display the RemoteUI page.

http://printer IP address or name/

Example: http://xxx.xxx.xxx.xxx/

For details on configuring printer settings for networks, refer to the following topics.

- Configuring the Printer's TCP/IP Network Settings →P.777
- Configuring the Printer's AppleTalk Network Settings →P.793
- Configuring the Printer's NetWare Network Settings →P.784
- Specifying Printer-Related Information →P.778



#### Note

- RemoteUI also offers many other features. You can display the ink levels, check error messages and other status information, and cancel print jobs.
- By factory default, the English screen is displayed. To change the display language, select the desired language under **Language** before logging on in administrator mode.

**Important**

- Use Netscape Navigator 6.0 or later, Internet Explorer 5.01 or later, or Firefox 1.5 or later as a web browser. In Mac OS X, you can also use Safari 1.32 or later or Safari 2.03 or later.
- Access is not possible via a proxy server. In environments where a proxy server is used, add the printer's IP address to **Exceptions** (addresses accessed without a proxy server) in the web browser proxy server settings. (Settings may vary depending on the network environment.)
- Enable JavaScript and cookies in the web browser.
- If you access RemoteUI with the printer name instead of its IP address, make sure the DNS settings are correctly configured.

## Configuring the Printer's TCP/IP Network Settings

Follow the steps below to configure the TCP/IP network settings.

1. Start the web browser and enter the following URL in the **Location** (or **Address**) box to display the RemoteUI page.  
http://**printer IP address or name**/  
Example: http://xxx.xxx.xxx.xxx/
2. Select **Administrator Mode** and click **Logon**.
3. If a password has been set on the printer, enter the password.
4. Click **Network** in the **Device Manager** menu at left to display the **Network** page.
5. Click **Edit** in the upper-right corner of the **TCP/IP** group to display the **Edit TCP/IP Protocol Settings** page.
6. Refer to the TCP/IP Settings Items table to complete the settings.

TCP/IP Settings Items

Item	Details	Default Setting
<b>Use DHCP</b>	Activate this setting to use DHCP for configuring the IP address.	Off
<b>Use BOOTP</b>	Activate this setting to use BOOTP for configuring the IP address.	Off
<b>Use RARP</b>	Activate this setting to use RARP for configuring the IP address.	Off
<b>Enable DNS Dynamic Update</b>	Activate this setting to perform DNS server registration automatically.	Off
<b>Use Zeroconf Function</b>	Activate this setting to use Bonjour.	On
<b>IP Address</b>	Specify the printer's IP address.	0.0.0.0
<b>Subnet Mask</b>	Specify the printer's subnet mask.	0.0.0.0
<b>Gateway Address</b>	Specify the printer's default gateway.	0.0.0.0
<b>LPD Printing</b>	Activate this setting to use LDP Printing.	On
<b>IPP Printing</b>	Activate this setting to use IPP Printing.	On
<b>IPP Printer URI</b>	Specify the URI of the printer used for IPP printing using up to 252 characters.	printer

Item	Details	Default Setting
<b>IPP Printer URI</b>	When using a standard Windows port for IPP printing, enter an URL less than 255 bytes for all characters for <b>http://"<b>IP address</b>"/<b>IPP-URI</b></b> .	printer
<b>RAW Printing</b>	Activate this setting to use Raw Printing.	On
<b>RAW Mode Bi-direction</b>	Activate this setting to use Raw mode bidirectional communication.	Off
<b>FTP Printing</b>	Activate this setting to use FTP Printing.	On
<b>SMTP Server Address</b>	Specify the SMTP server's IP address.	0.0.0.0
<b>Primary DNS Server Address</b>	Specify the IP address of the primary DNS server.	0.0.0.0
<b>Secondary DNS Server Address</b>	Specify the IP address of the secondary DNS server.	0.0.0.0
<b>DNS Host Name</b>	Specify the printer host name, up to 63 characters (1–63 characters). Use single-byte letters, numbers, and - (hyphens). Do not use numbers or - for the first character or - for the last character.	NB-17FBxxxxxxxxxxxx
<b>DNS Domain Name</b>	Specify the printer domain name, up to 63 characters. Use single-byte letters, numbers, - (hyphens), and . (periods). Do not use numbers, -, or . for the first character, or - or . for the last character.	blank
<b>Multicast DNS Service Name</b>	Specify the printer's Multicast DNS service name. (1–63 characters) This name will be displayed when Bonjour functions are used.	Canon iPFxxxx (xxxxxx)

7. Click **OK** to display the **Network** page.



#### Note

- If you specify to configure the IP address using DHCP, BOOTP, or RARP, there must be a server that supports such protocol running in the network.
- If you specify to configure the IP address using DHCP, BOOTP, or RARP, the IP address obtained by this method is used first. If you cannot obtain the IP address, the address specified in **IP Address** is used.
- It takes a minute or two to determine whether DHCP, BOOTP, or RARP are available. We recommend clearing check boxes of options you will not use.
- If you are using a DNS server, select **Enable DNS Dynamic Update** and enter the IP Address for DNS servers, DNS host name, and DNS domain name in **Primary DNS Server Address**, **Secondary DNS Server Address**, **DNS Host Name**, and **DNS Domain Name**, respectively.

## Specifying Printer-Related Information

Follow the steps below to specify device information and security settings.

1. Start the web browser and enter the following URL in the **Location** (or **Address**) box to display the RemoteUI page.  
http://printer IP address or name/  
Example: http://xxx.xxx.xxx.xxx/
2. Select **Administrator Mode** and click **Logon**.

3. If a password has been set on the printer, enter the password.
4. Click **Information** in the **Device Manager** menu at left to display the **Information** page.
5. To display the relevant settings page, click **Edit** in the upper-right corner of **Device Information** or **Security**, depending on what information you want to specify.
6. Refer to the table of settings for device information and security as you complete these settings.

#### Device Information Settings

Item	Details	Default Setting
<b>Device Name</b>	Enter a device name. (0–32 characters)	blank
<b>Location</b>	Enter the location where the device is installed. (0–32 characters)	blank
<b>Administrator</b>	Enter the administrator's name. (0–32 characters)	blank
<b>Phone</b>	Enter the administrator's contact information. (0–32 characters)	blank
<b>Comments(E-mail)</b>	Enter any comments regarding the administrator. (0–32 characters)	blank

#### Security Settings

Item	Details	Default Setting
<b>Old Password</b>	Enter the current device password. (0–14 characters)	blank
<b>New Password</b>	Enter the new password. (0–14 characters)	blank
<b>Confirm</b>	Enter the new password again to confirm it. (0–14 characters)	blank

Besides entering a password, you can specify other security-related information, such as IP address-based SNMP or TCP usage restrictions, MAC address-based access restrictions, or IPP and FTP authentication settings.

7. Click **OK** to activate the settings.

## Configuring the Communication Mode Manually

This topic gives instructions for configuring the communication mode manually.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **Interface Setup**, and then press the ► button.
3. Press ▲ or ▼ to select **Ethernet Driver**, and then press the ► button.
4. Press ▲ or ▼ to select **Auto Detect**, and then press the ► button.
5. Press ▲ or ▼ to select **Off**, and then press the **OK** button.  
Return to the **Ethernet Driver** menu.
6. Press ▲ or ▼ to select **Comm.Mode**, and then press the ► button.
7. Press ▲ or ▼ to select the communication mode, and then press the **OK** button.  
Return to the **Ethernet Driver** menu.
8. Press ▲ or ▼ to select **Ethernet Type**, and then press the ► button.
9. Press ▲ or ▼ to select the Ethernet type, and then press the **OK** button.  
Return to the **Ethernet Driver** menu.
10. Press ▲ or ▼ to select **Spanning Tree**, and then press the ► button.
11. Press ▲ or ▼ to enable or disable spanning tree support, and then press the **OK** button.  
Return to the **Ethernet Driver** menu.

- 12.** Press the **Online** button.  
After the confirmation message is displayed, press **OK**.  
The new settings will take effect after the printer restarts.



## Email Notification When Printing is Finished or Errors Occur

The printer can notify you of the printer status by email. Even when you are away from the printer, you can know when printing is finished or if errors occur. Receive notification via email on your mobile phone or at your computer.



Use the imagePROGRAF Status Monitor (Windows) function to set up email recipients and message timing. Besides being informed of finished print jobs or errors, you can also complete settings for email notification when service is needed or it's time to replace consumables. For detailed instructions, see "Specifying Printer-Related Information." →P.778



### Note

- For details on email notification using imagePROGRAF Status Monitor (in Windows), refer to the imagePROGRAF Status Monitor help.
- Mail server authentication is only supported with imagePROGRAF Status Monitor.

## Initializing the Network Settings

Use RemoteUI to restore the network settings to the default values as follows.



### Important

- Initializing the network settings will also restore the default value of the printer's IP address. As a result, the RemoteUI page cannot be displayed in the web browser after this procedure.
- For instructions on reconfiguring the IP address, see "Configuring the IP Address on the Printer." →P.773
- For details on RemoteUI, see "Using RemoteUI." →P.776



1. Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.  
http://printer IP address or name/  
Example: http://xxx.xxx.xxx.xxx/
2. Select **Administrator Mode** and click **Logon**.
3. If a password has been set on the printer, enter the password.
4. Click **Network** in the **Device Manager** menu at left to display the **Network** page.
5. Click **Reset to Default settings** in the lower-right corner of the **Network Interface** group.
6. After confirming the message, click **OK** to restore the network settings to the default values.



**Note**

- You can also use imagePROGRAF Device Setup Utility or the Control Panel to restore the default network settings.
- If you use the Control Panel to initialize the network settings, press the **Menu** button to display **MAIN MENU**, and then press **▲**, **▼**, and **▶** to select **Interface Setup** → **Ethernet Driver** → **Init. Settings** → **Yes** (in this order), and finally press the **OK** button.

## Network Setting (Windows)

Configuring the Printer Driver Destination .....	783
Configuring the Printer's NetWare Network Settings .....	784
Specifying the Printer's Frame Type .....	785
Specifying NetWare Print Services .....	787
Specifying NetWare Protocols .....	789
Configuring NetWare Network Settings .....	791

### Configuring the Printer Driver Destination

This topic describes how to specify the printer driver destination if the printer's IP address is changed, or if you will use the printer over a network connection instead of via USB connection.

The procedure described below is the configuration based on the LPR or Raw protocol using the standard TCP/IP port in Windows ( **Standard TCP/IP Port** ).



#### Important

- If you will use the printer in a TCP/IP network, make sure the printer's IP address is configured correctly.
- [Configuring the IP Address on the Printer](#) →P.773

1. Open the **Printers and Faxes** (or **Printers** ) window.
2. Right-click the icon of this printer and choose **Properties** to open the printer properties window.
3. Click the **Port** tab to display the **Port** sheet.
4. Click **Add Port** to display the **Printer Ports** dialog box.
5. In the **Available Port** list, select **Standard TCP/IP Port**.
6. Click **New Port**.  
After the wizard starts, a window is displayed for the **Welcome to the Add Standard TCP/IP Printer Port Wizard**.
7. Click **Next**.
8. In **Printer Name or IP Address**, enter the printer's IP address. If the DNS is configured, you can also enter the DNS Domain Name.
9. Follow the instructions on the screen to add a printer port.
10. Click **Close** to close the **Printer Ports** dialog box.
11. Make sure the printer port you added is displayed under **Ports**, and that the port is selected.
12. Click **Close** to close the printer properties window.

## Configuring the Printer's NetWare Network Settings

Follow the steps below to configure the NetWare network settings.

1. Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.  
http://printer IP address or name/  
Example: http://xxx.xxx.xxx.xxx/
2. Select **Administrator Mode** and click **Logon**.
3. If a password has been set on the printer, enter the password.
4. Click **Network** in the **Device Manager** menu at left to display the **Network** page.
5. Click **Edit** in the upper-right corner of the **NetWare** group to display the **Edit NetWare Protocol Settings** page.
6. Refer to the NetWare Settings Items table to complete the settings.

NetWare Settings Items

Item		Details	Default Setting
<b>Frame Type</b>		Specify the type of frame to use in NetWare.	Disabled
<b>NCP Burst Mode</b>		Activate this setting to use NCP Burst Mode. This mode supports fast data transfer when printing in queue server mode. Normally, leave the setting On.	On
<b>Print Application</b>		Choose the print service. <ul style="list-style-type: none"> <li>• Bindery PServer</li> <li>• RPrinter</li> <li>• NDS PServer</li> <li>• NPrinter</li> </ul>	NDS PServer
<b>Packet Signature</b>		Select <b>If Requested by Server</b> to use packet signature.	<b>If Requested by Server</b>
<b>Bindery PServer</b>	<b>File Server Name</b>	Specify the name of a file server that has a NetWare print server. (0–47 characters)	—
	<b>Print Server Name</b>	Specify the name of a NetWare print server. (0–47 characters)	—
	<b>Print Server Password</b>	Set a password for the print server. (0–20 characters)	—
	<b>Polling Interval</b>	Specify the interval to confirm jobs. (1–15 seconds)	5
<b>RPrinter</b>	<b>Print Server Name</b>	Specify the name of a NetWare print server. (0–47 characters)	—
	<b>Printer Number</b>	Specify the number of the printer connected to the NetWare print server. (0–15)	0

Item		Details	Default Setting
<b>NDS PServer</b>	<b>Tree Name</b>	Specify the name of an NDS tree that has a NetWare print server. (0–32 characters)	—
	<b>Context Name</b>	Specify the name of a context that has a NetWare print server. (0–255 characters)	—
	<b>Print Server Name</b>	Specify the name of a NetWare print server. (0–64 characters)	—
	<b>Print Server Password</b>	Set a password for the print server. (0–20 characters)	—
	<b>Polling Interval</b>	Specify the interval to confirm jobs. (1–255 seconds)	5
<b>NPrinter</b>	<b>Print Server Name</b>	Specify the name of a NetWare print server. (0–47 characters)	—
	<b>Printer Number</b>	Specify the number of the printer connected to the NetWare print server. (0–254)	0

7. Click **OK** to display the **Network** page.

## Specifying the Printer's Frame Type

To enable communication between the printer and computers on your network, specify the Ethernet frame type in your NetWare environment.

Follow the steps below to specify the frame type by using imagePROGRAF Device Setup Utility or the printer Control Panel.



### Note

- You can specify the frame type by using RemoteUI if the printer's IP address is configured.



### Important

- Before specifying the frame type, make sure the printer is on and connected to the network.
- For instructions on installing imagePROGRAF Device Setup Utility, see "Installing imagePROGRAF Device Setup Utility." →P.403 .

## Specifying the Frame Type Using imagePROGRAF Device Setup Utility

1. Start imagePROGRAF Device Setup Utility.
2. In the list of printers, select the printer to configure.
3. Choose **Protocol Settings** from the **Printer** menu.
4. In the **NetWare Frame Type** list, select the frame type.
5. Click **ETHERNET II** under **Frame Type** in **TCP/IP**.

- In **IP Address**, enter the IP address assigned to the printer, and then enter the subnet mask in **Subnet Mask** and the default gateway in **Gateway Address**.



**Important**

- You must specify the IP address here to be able to configure NetWare protocol settings using RemoteUI.

- Click **Set**.
- Click **OK** after the **Confirmation** message dialog box is displayed.
- Exit imagePROGRAF Device Setup Utility.

### Specifying the Frame Type Using the Printer Control Panel

- Press the **Menu** button to display **MAIN MENU**.



- Press **▲** or **▼** to select **Interface Setup**, and then press the **▶** button.
- Press **▲** or **▼** to select **NetWare**, and then press the **▶** button.
- Press **▲** or **▼** to select **NetWare**, and then press the **▶** button.
- Press **▲** or **▼** to select **On**, and then press the **OK** button.  
Return to the **NetWare** menu.
- Press **▲** or **▼** to select **Frame Type**, and then press the **▶** button.
- Press **▲** or **▼** to select the frame type to use, and then press the **OK** button.  
Return to the **NetWare** menu.
- Press **▲** or **▼** to select **Print Service**, and then press the **▶** button.
- Press **▲** or **▼** to select the desired print service, and then press the **OK** button.  
Return to the **NetWare** menu.

- 10.** Press the **Online** button to bring the printer online.  
If any of the settings is changed, a message for confirmation is displayed. In this case, press the **OK** button.

**Important**

- Be sure to complete step 10. This will activate the values you have entered.

**Note**

- If an error message is displayed, check the settings and correct any invalid values.
- To cancel the setup process, hold down the **Stop** button for a second or more.

## Specifying NetWare Print Services

Before printing in a NetWare network, you must configure print services such as print servers, print queues, and so on. You can configure the print service settings from a computer using any of the following software.

- NWADMIN
- PCONSOLE  
(from Novell, provided with NetWare)

**Important**

- If you use NWADMIN to configure the print service settings, Novell Client (the Novell NetWare client software) must be installed as the client software application.
- NetWare networking is unsupported in Windows Vista.

This topic gives instructions for configuring NetWare print services. The order of this procedure may vary depending on the environment.

## Choosing the type of print services

Before completing print service settings, choose the type of print service. Refer to the following descriptions as needed.

**Note**

- In NetWare 5.1 or 6.0, NDPS may also be used as the print service. If you use NDPS, use the Novell printer gateway included with NetWare. For details on configuring NDPS, refer to the NetWare documentation.

- NDS (Novell Directory Service) and bindery  
NDS and bindery are both supported. Use the mode that is compatible with your network environment.
- Queue server mode and remote printer mode  
Queue server mode and remote printer mode are both supported.
  - Queue server mode

When using queue server mode, all print server functions are supported, so there is no need for other print server software or hardware. In NDS queue server mode (NDS PServer), the NDS print server is used for printing. In bindery queue server mode (Bindery PServer), the bindery print server is used for printing. Note that if you use queue server mode, a NetWare user license is required for each network interface.

- Remote printer mode

In remote printer mode, the printer is controlled by the NetWare print server. Thus, a NetWare print server is required. In NDS remote printer mode (NPrinter), the NDS print server is used for printing, and in bindery remote printer mode (RPrinter), the bindery print server is used for printing.

## Using NWADMIN or PCONSOLE to set up the print server

Use NWADMIN to set up the print server if NDS queue server mode or remote printer mode is used.

1. Log into NetWare as Administrator or with equivalent rights, and then start NWADMIN.
2. Run Quick Setup.
  1. Choose **Print Services Quick Setup** in the **Tools** menu.
  2. Enter a desired name in **Print Server Name**. To use an existing print server, click the button at right and choose the name from the list.
  3. Enter a desired printer name in **Name**.
  4. To use the printer in queue server mode, choose **Other/Unknown** in **Type**. To use the printer in remote printer mode, choose **Parallel** in **Type**, click **Communications**, and set **Ports** to **LPT1** and **Connection Type** to **Manual Load**.
  5. Enter a desired queue name in **Name**.
  6. In **Volume**, enter the volume object (that is, the object representing the physical volume on the network) where the print queue will be created. Click the button at right to choose from a list.
  7. Complete other settings as needed and click **OK**.



### Note

- The print server name will be required when configuring the printer's protocol settings. Write down the print server name for future reference.
- When running Quick Setup, the printer is assigned printer number 0. When using the printer in queue server mode, do not change the printer number from 0.

3. Set a password.
  1. Right-click the print server created in step 2 and choose **Details**.
  2. Click **Change Password** to open the password input dialog box. Enter the password.
  3. Click **OK** to close the password input dialog box.
  4. Click **OK** or **Cancel** to close the details dialog box.



4. To use the printer in remote printer mode, start the print server.  
To use the NetWare file server as the print server, enter **LOAD PSERVER.NLM** at the file server and press the Enter key.

**Note**

- This procedure is not required when using queue server mode.

Use PCONSOLE to set up the print server if bindery queue server mode or remote printer mode is used.

1. Log into NetWare as Supervisor and start PCONSOLE.
2. Switch to bindery mode.
3. If the print server has not been created, create it.
  1. In **Available Options**, select **Quick Setup** and press the Enter key.
  2. Enter the name of the new print server, the new printer, and the queue.

**Note**

- The print server name will be required when configuring the printer's protocol settings. Write down the print server name for future reference.

4. Specify the printer type.
  1. To use the printer in queue server mode, choose **Other/Unknown** in **Type**. To use remote printer mode, set **Printer Type** to **Parallel** and **Position** to **Manual Load**.
  2. Press the Esc key.
  3. After the confirmation message is displayed, choose **Yes** and press the Enter key.
5. Set a password.
  1. In **Available Options**, select **Print Servers** and press the Enter key.
  2. Select the print server created in step 2 and press the Enter key.
  3. Select **Password**, and press the Enter key to display the password input dialog box.
  4. Enter the password and press the Enter key.
6. Press the Esc key several times to display the dialog box for confirming that PCONSOLE is finished.
7. Click **Yes** to exit PCONSOLE.

10

789

## Specifying NetWare Protocols

Follow the steps below to configure NetWare protocol settings other than the frame type by using RemoteUI.

**Note**

- For details on RemoteUI, see "Using RemoteUI." →P.776

1. Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.  
http://printer IP address or name/  
Example: http://xxx.xxx.xxx.xxx/
2. Select **Administrator Mode** and click **Logon**.
3. If a password has been set on the printer, enter the password.
4. Click **Network** in the **Device Manager** menu at left to display the **Network** page.
5. Click **Edit** in the upper-right corner of the **NetWare** group to display the **Edit NetWare Protocol Settings** page.
6. Make sure the **Frame Type** indicates the frame type used on the NetWare network.
7. To use burst mode, choose **On** for **NCP Burst Mode**.

**Note**

- Burst mode supports fast data transfer when printing in queue server mode. Normally, choose **On**.

8. In **Print Application**, click the print service to be used.

**Note**

- Only one print service selected here will be enabled. Multiple print services are not available at the same time.

9. For packet signature, click **If Requested by Server** in **Packet Signature**.

10. Complete the following settings based on the selected service.

- If you have selected Bindery PServer: Queue Server Mode (Using a Bindery Print Server)
  1. In **File Server Name**, enter the file server name.
  2. In **Print Server Name**, enter the name of the print server created in "Specifying NetWare Print Services →P.787 ."
  3. In **Print Server Password**, enter the password of the print server created in "Specifying NetWare Print Services →P.787 ."
  4. In **Polling Interval**, specify the interval at which the printer checks the NetWare print queue.
- If you have selected RPrinter: Remote Printer Mode (Using a Bindery Print Server)
  1. In **Print Server Name**, enter the advertising name of the print server created in "Specifying NetWare Print Services →P.787 ."
  2. In **Printer Number**, enter the same printer number specified in "Specifying NetWare Print Services →P.787 ."
- If you have selected NDS PServer: Queue Server Mode (Using an NDS Print Server)
  1. In **Tree Name** and **Context Name**, enter the tree and context name of the print server.

2. In **Print Server Name**, enter the name of the print server created in "Specifying NetWare Print Services" →P.787 ."
  3. In **Print Server Password**, enter the password of the print server created in "Specifying NetWare Print Services" →P.787 ."
  4. In **Polling Interval**, specify the interval at which the printer checks the NetWare print queue.
- If you have selected NPrinter: Remote Printer Mode (Using a NDS Print Server)
    1. In **Print Server Name**, enter the advertising name of the print server created in "Specifying NetWare Print Services" →P.787 .". Usually, the advertising name is the same as the name of the print server.
    2. In **Printer Number**, enter the same printer number specified in "Specifying NetWare Print Services" →P.787 ."

11. Click **OK** to display the **Network** page.

For a list of NetWare protocol settings items, see "Configuring the Printer's NetWare Network Settings." →P.784

## Configuring NetWare Network Settings

To print over a NetWare network, configure the network environment as follows.



### Important

- To configure network settings, you must be logged in with administrative rights such as **Administrator** account. We recommend that your network administrator configure the network settings.

1. Specify the Ethernet frame type for communication between the printer and computers.  
For instructions, see "Specifying the Printer's Frame Type." →P.785
2. Specify the NetWare print services, including the print server and queue.  
For instructions, see "Specifying NetWare Print Services." →P.787
3. Specify NetWare protocol details besides the frame type.  
For instructions, see "Specifying NetWare Protocols." →P.789  
After you have completed the steps above, configure each computer for printing over the NetWare network.
4. Connect to the NetWare network.  
Install NetWare client software on each computer to be used for printing over the network, and log in to the NetWare server or tree. For instructions on connection, refer to the NetWare and operating system documentation.
5. Install the printer driver.  
Follow the instructions of your network administrator to install the printer driver on each computer to be used for printing. When installing the printer driver, choose **Network Printer** as the printer destination, and then choose the print queue created from the NetWare print service settings.
6. Follow these steps to configure the printer port. This step is not necessary if you specified the printer destination during installation of the printer driver.
  1. Open the **Printers and Faxes** (or **Printers**) window.
  2. Right-click the printer icon and choose **Properties**.
  3. Click the **Port** (or **Advanced**) tab to display the **Port** (or **Advanced**) sheet.

4. As the destination port, specify the print queue created by configuring the NetWare print service settings.

## Network Setting (Mac OS X)

Configuring the Printer Driver Destination .....	793
Configuring the Printer's AppleTalk Network Settings .....	793
Configuring the Destination for AppleTalk Networks .....	794
Configuring the Destination for TCP/IP Network .....	797
Configuring the Destination for Bonjour Network .....	800

### Configuring the Printer Driver Destination

Specify the printer driver destination as follows if the printer's IP address is changed, or if you will use the printer over a network connection instead of via USB connection.

- If you switch to printing in an AppleTalk network, see "Configuring the Destination for AppleTalk Networks ." **→P.794**
- If you switch to printing in a TCP/IP network, or if the printer's IP address is changed, see "Configuring the Destination for TCP/IP Network ." **→P.797**
- If you switch to printing in a Bonjour network, see "Configuring the Destination for Bonjour Network ." **→P.800**

### Configuring the Printer's AppleTalk Network Settings

Follow the steps below to configure the AppleTalk network settings.

1. Start the web browser and enter the following URL in the **Location** (or **Address** ) box to display the RemoteUI page.  
http://printer IP address or name/  
Example: http://xxx.xxx.xxx.xxx/
2. Select **Administrator Mode** and click **Logon**.
3. If a password has been set on the printer, enter the password.
4. Click **Network** in the **Device Manager** menu at left to display the **Network** page.
5. Click **Edit** in the upper-right corner of the **AppleTalk** group to display the **Edit AppleTalk Protocol Settings** page.
6. Refer to the AppleTalk Settings Items table to complete the settings.

AppleTalk Settings Items

Item	Details	Default Setting
<b>Phase Type</b>	Specify whether to use AppleTalk. If you will use AppleTalk, choose <b>Phase 2</b> . If you will not use AppleTalk, choose <b>Disabled</b> .	Disabled
<b>Name (*1)</b>	Specify the object name used by AppleTalk (in up to 31 single-byte or 15 double-byte characters). However, do not use the following single-byte characters: @, *, :, and =.	Canon NB-17FB (xxxxxx)
<b>Zone (*2)</b>	Specify the printer zone name, up to 31 single-byte characters.	*

Item	Details	Default Setting
<b>Zone</b> (*2)	However, do not use the following single-byte characters: @, :, and =. Also avoid using * (which represents the default zone) in the middle of a string.	*

\*1: The object name you have specified in **Name** is displayed in **Printer Setup Utility** (or **Print Center**) in Mac OS X 10.2.8–10.4. If you use multiple printers in the same zone, assign a unique name to each printer. By default, the network interface name is **Canon NB-17FB (xxxxxx)**. (Here, xxxxxx is the last six digits of the printer's MAC address.)

\*2: If zones have been created on the network, enter the name of the printer's zone. If there are no zones, leave the asterisk \* entry (for the default zone) as it is. If you enter a network zone name that does not match created zones, the printer will not be detected by Macintosh computers. Consult your network administrator for information on zone names.

7. Click **OK** to display the **Network** page.

## Configuring the Destination for AppleTalk Networks

To print over an AppleTalk network, activate the AppleTalk protocol and configure the destination as follows.

### Activating AppleTalk on the printer



#### Important

- By factory default, the AppleTalk protocol is disabled on the printer.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **Interface Setup**, and then press the ► button.

3. Press ▲ or ▼ to select **AppleTalk**, and then press the ► button.

4. Press ▲ or ▼ to select **On**, and then press the **OK** button.

5. Press the **Online** button to bring the printer online.  
If any of the settings is changed, a confirmation message is displayed. In this case, press the **OK** button.



#### Important

- Be sure to complete step 5. This will activate the values you have entered.



#### Note

- By using RemoteUI, you can also specify the object name used by AppleTalk, as well as the printer zone name.  
For details on RemoteUI, see "Using RemoteUI." →P.776

### Configuring the destination (Mac OS X)



#### Important

- AppleTalk is supported in Mac OS X 10.2.8–10.4.




#### Note

- The following procedures are based on Mac OS X 10.4. The method of configuring the destination varies depending on the version of Mac OS X.


1. In **System Preferences**, click **Network** to display the **Network** window.




2. In **Show**, choose **Built-in Ethernet**. Next, click **AppleTalk**, select **Make AppleTalk Active**, and click **Apply now**.

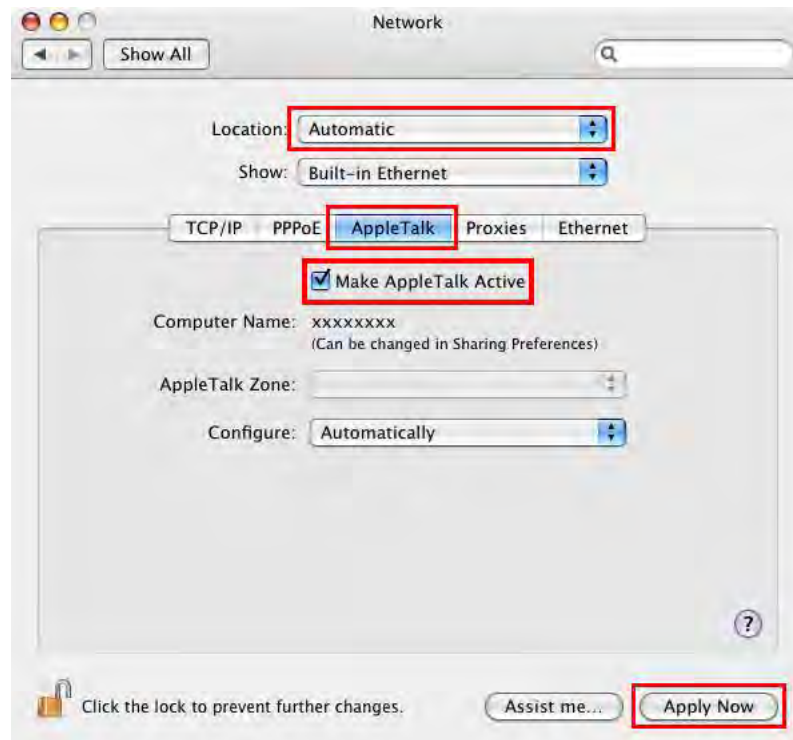

3. Close the **Network** window and save the settings.
4. Choose **Utilities** (or **Applications**) in the **Go** menu of **Finder**.
5. Click **Printer Setup Utility** (or **Print Center**) in the **Utilities** folder.
6. If the printer name is not displayed in **Printer List**, click **Add**.

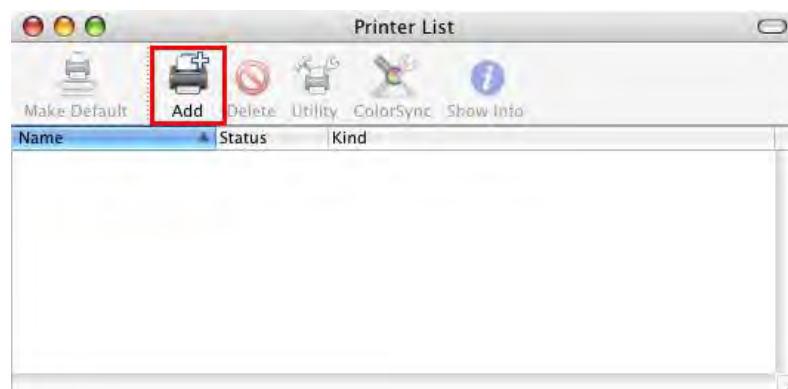

7. Select the printer from the list in the **Printer Browser** window and click **Add**.

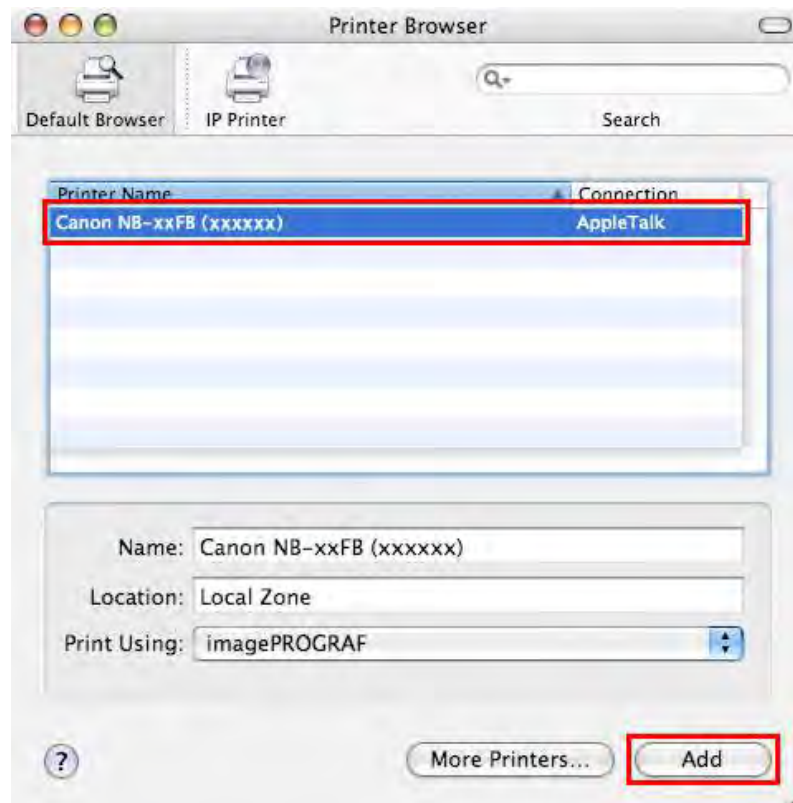

## Configuring the Destination for TCP/IP Network

Follow the steps below to configure the destination if you will use the printer in a TCP/IP network.



### Important

- If you will use the printer in a TCP/IP network, make sure the printer's IP address is configured correctly.
  - [Configuring the IP Address Using the Printer Control Panel](#) →P.774

## Configuring the Destination (Mac OS X)




### Note


- The following procedures are based on Mac OS X 10.4. The method of configuring the destination varies depending on the version of Mac OS X. If you use other versions, refer to the help for the **Printer Setup Utility** (or the **Print Center**).

1. Choose **Utilities** (or **Applications**) in the **Go** menu of **Finder**.
2. Click **Printer Setup Utility** (or **Print Center**) in the **Utilities** folder.


3. Click **Add** to display the **Printer Browser** window.

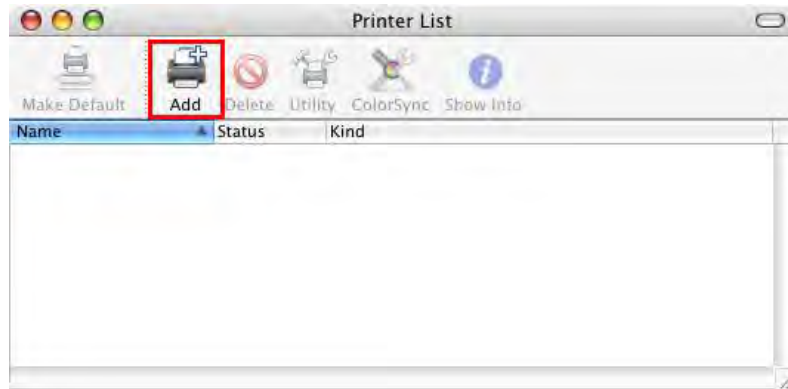


4. Click **More Printers**.

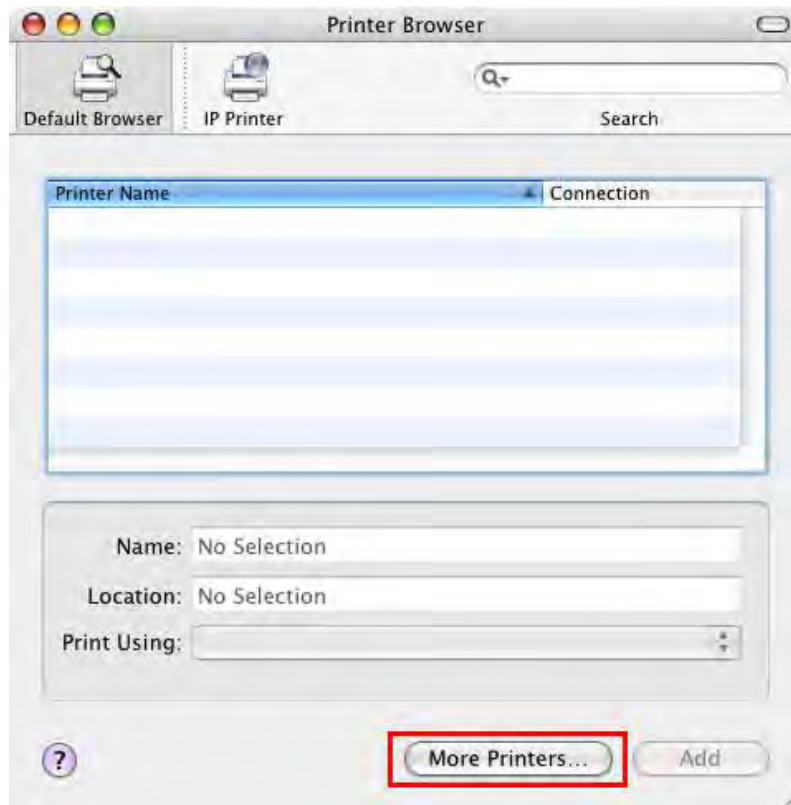


5. In the list of connection methods, click **Canon IP(iPF)**.

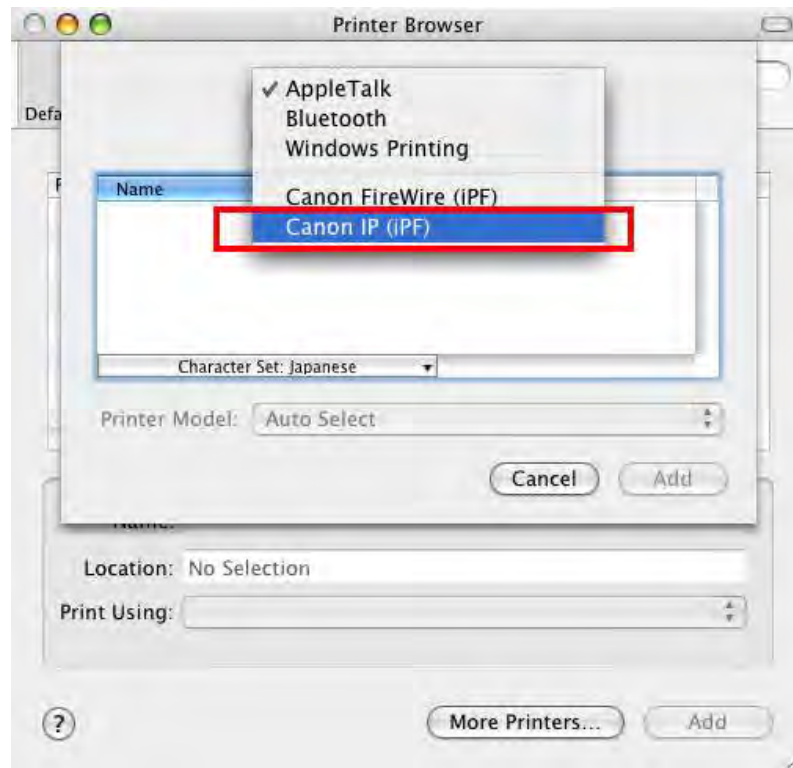

6. Enter the printer's IP address in **Printer's Address** and click **Add**.

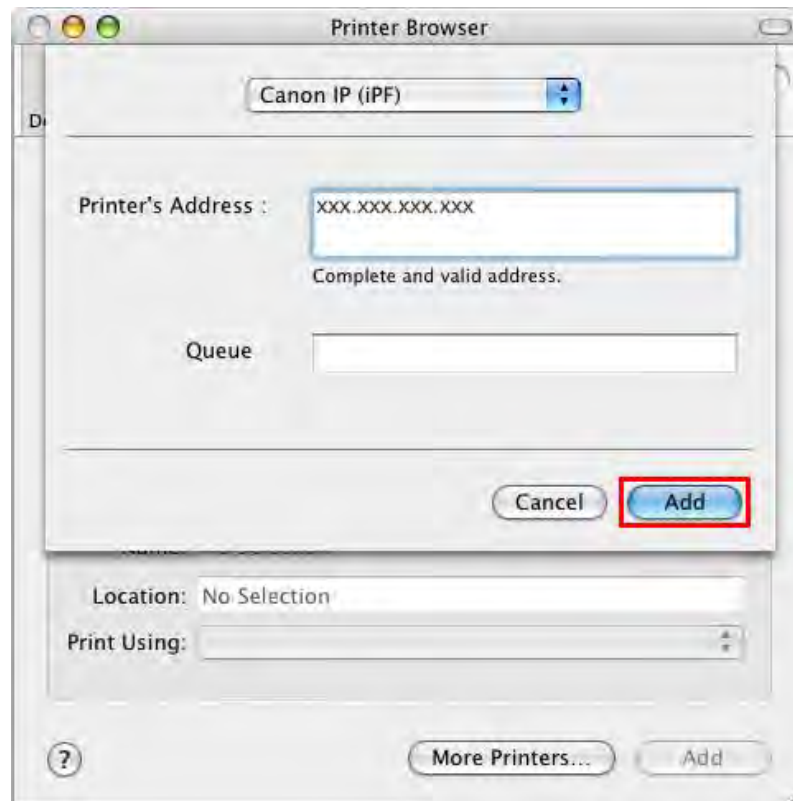

7. Make sure the printer has been added, and then close the **Printer List** window.

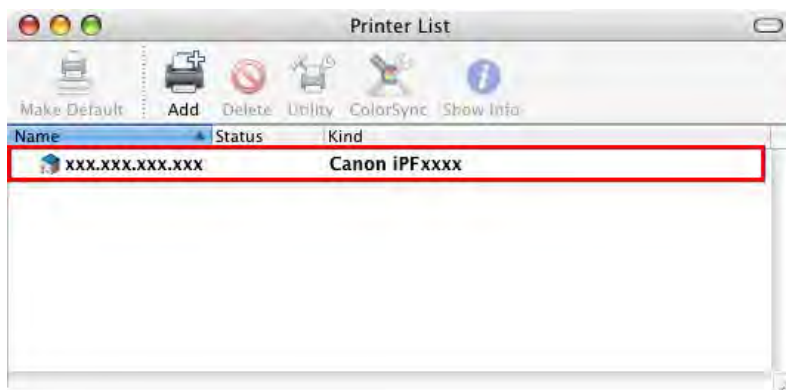

**Important**

- If **imagePROGRAF Generic** is indicated in **Kind**, the printer information is not properly acquired. Make sure the printer is on and connected to the network. (See "Cannot connect the printer to the network.")  
→P.878

## Configuring the Destination for Bonjour Network


In Mac OS X 10.2.8 and later, use Bonjour functions to easily connect the printer to the network. Follow the steps below to configure the destination if you use the printer on TCP/IP network.




**Important**

- Bonjour and **IP Print (Auto)** do not support printing to a printer on other network groups that require a router for connection. Make sure the computer and printer are on the same network. For information about network settings, ask your network administrator.
- By default, Bonjour is activated on the printer. The printer name as displayed in **Printer Setup Utility** (or **Print Center**) in Mac OS X is predefined as the **Multicast DNS Service Name**. You can activate or deactivate the Bonjour function or change the printer name by using RemoteUI. For instructions on changing it, see "Using RemoteUI." →P.776

1. Choose **Utilities** (or **Applications**) in the **Go** menu of **Finder**.
2. Click **Printer Setup Utility** (or **Print Center**) in the **Utilities** folder.
3. If the printer name is not displayed in **Printer List**, click **Add**.

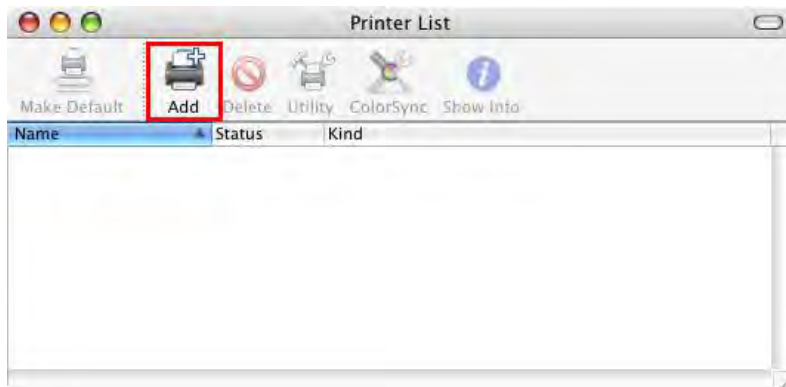


4. Select the printer from the list in the **Printer Browser** window and click **Add**.

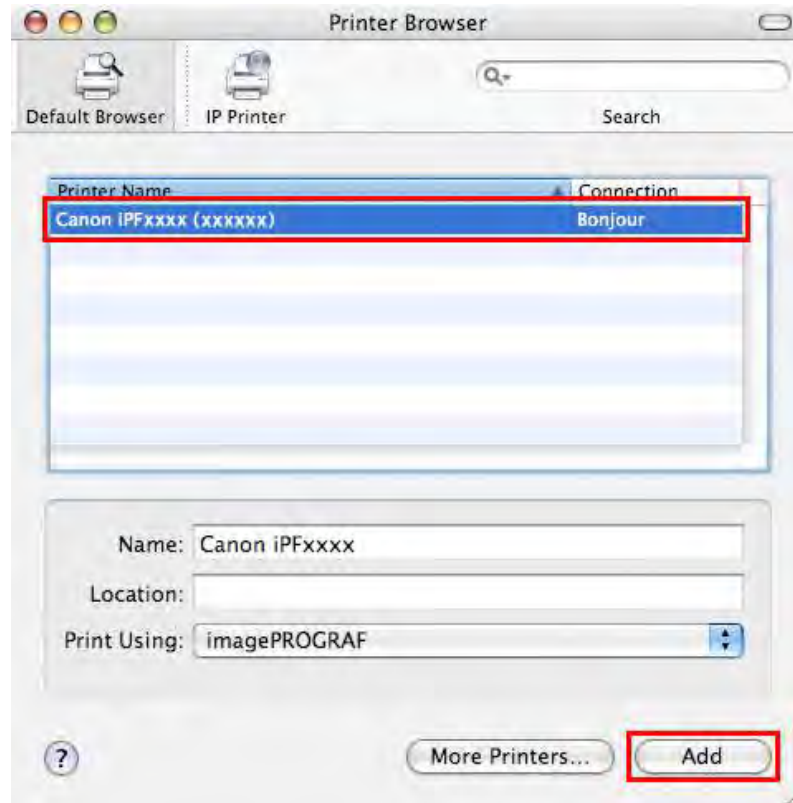

## Maintenance

Ink Tanks	803
Printheads	817
Maintenance Cartridge	827
Cleaning the Printer	837
Other Maintenance	841

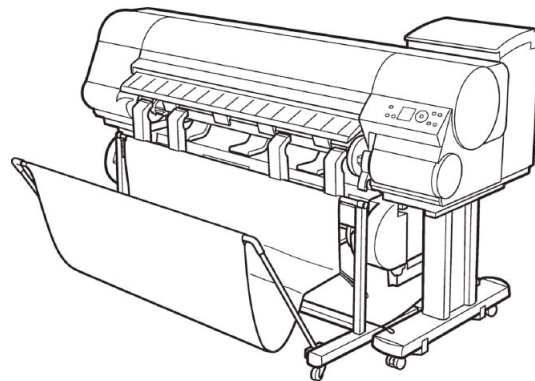



## Ink Tanks


Ink Tanks .....	803
Replacing Ink Tanks .....	803
Checking Ink Tank Levels .....	815
When to Replace Ink Tanks .....	815

## Ink Tanks

When purchasing ink tanks, make sure an **A** is printed on the label, along with the following Ink Tank serial numbers.

### • 330 ml (11.2 fl oz)

- MBK Ink Tank PFI-303MBK
- BK Ink Tank PFI-303BK
- C Ink Tank PFI-303C
- M Ink Tank PFI-303M
- Y Ink Tank PFI-303Y

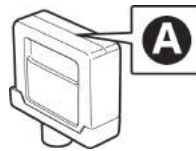

### • 700 ml (23.7 fl oz)

- MBK Ink Tank PFI-703MBK
- BK Ink Tank PFI-703BK
- C Ink Tank PFI-703C
- M Ink Tank PFI-703M
- Y Ink Tank PFI-703Y



#### Note

- For instructions on ink tank replacement, see "Replacing Ink Tanks." →P.803

## Replacing Ink Tanks

### Compatible ink tanks

Replacement ink tanks in 330 ml (11.2 fl oz) and 700 ml (23.7 fl oz) capacities are supported.

These ink tanks are labeled with a white letter **A** in a black circle on the side. Request ink tanks with the same label when you purchase new ones. For details, see "Ink Tanks." →P.803

## Precautions when handling ink tanks

Take the following precautions when handling ink tanks.



### Caution

- For safety, keep ink tanks out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.



### Important


- When it is time to install ink tanks, before opening the pouch tilt the tank to the left and right gently seven or eight times. If you do not agitate the Ink Tank, the ink may sediment, which may affect printing quality.
- Do not remove and agitate ink tanks that have already been installed in the printer. Ink may leak out.
- Avoid dropping the Ink Tank after removing it from the pouch. Otherwise, ink may leak and cause stains.
- There may be ink around the ink supply section of ink tanks you remove. Handle ink tanks carefully during replacement. The ink may stain clothing.
- We recommend using up an Ink Tank in the course of printing within six months after breaking the seal. Printing quality may be affected if you use older ink tanks.
- Do not leave the printer without ink tanks installed for extended periods (a month or more). Residual ink may become clogged inside the printer and affect printing quality.

## How to replace an Ink Tank

1. Make sure the printer is ready for Ink Tank replacement. →P.804
2. Access the menu for Ink Tank replacement. →P.805 (Otherwise, open the Ink Tank Cover.)
3. Remove the Ink Tank.
  - 330 ml ink tanks →P.806
  - 700 ml ink tanks →P.808
4. Load the new Ink Tank.
  - 330 ml ink tanks →P.810
  - 700 ml ink tanks →P.812

## Make sure the printer is ready for Ink Tank replacement

You can replace ink tanks if the Display Screen indicates the printer is **Online** or **Offline**, or if messages advise you to check the amount of ink left or replace ink tanks.

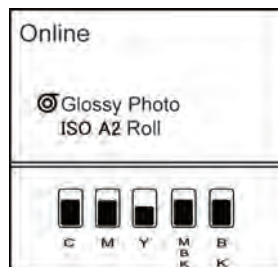

If a message requests you to replace ink tanks, press the **OK** button.



Do not remove an Ink Tank during initialization immediately after turning on the printer, or during printhead cleaning.



**Note**

- Ink Tank replacement is possible even when print jobs are being canceled or if paper is being advanced.

### Access the menu for Ink Tank replacement



**Note**

- This step is not necessary if a message requests you to replace ink tanks. Check the message on the Display Screen and press the **OK** button. Remove the Ink Tank at this point.


1. Press the **Menu** button to display **MAIN MENU**.




2. Press **▲** or **▼** to select **Rep. Ink Tank**, and then press the **▶** button.
3. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.  
A message on the Display Screen requests you to open the Ink Tank Cover. Remove the Ink Tank at this point.

## Remove the Ink Tank (330 ml)

1. Open the Ink Tank Cover of the tank for replacement and check the Ink Lamp. The Ink Lamp flashes quickly if there is no ink left.

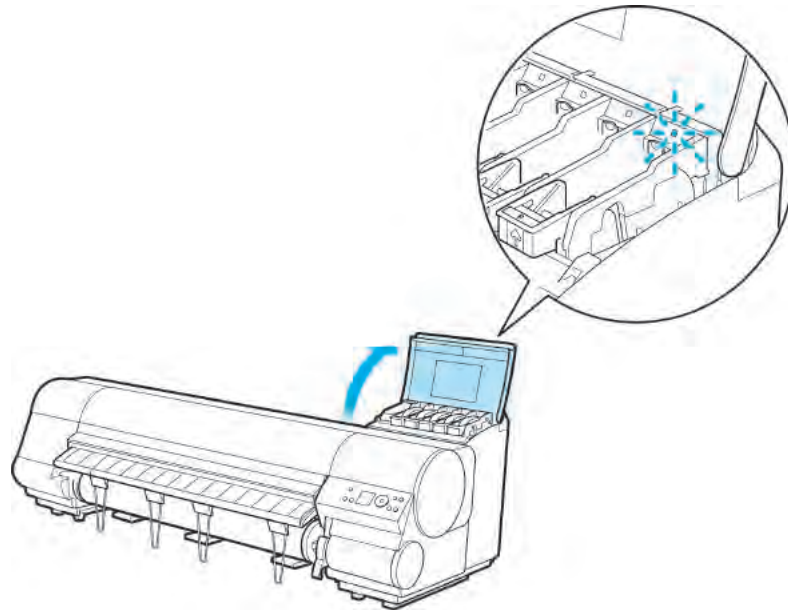


2. Lift the stopper (a) of the Ink Tank Lock Lever for the color to replace. Lift the Ink Tank Lock Lever until it stops, and then push it down to the front.

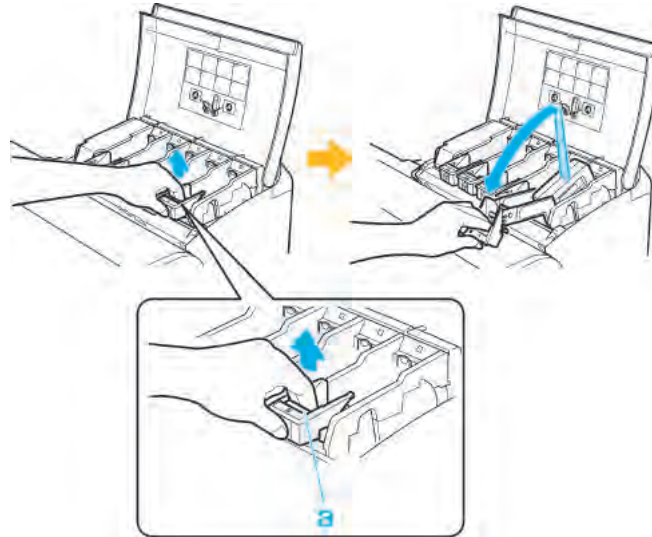

### Note

- Push the Ink Tank Lock Lever down until it locks.
- Make sure the Ink Tank Lock Lever does not return to the original position.

3. Hold the Ink Tank by the grips (a) and remove it. Press the **OK** button.

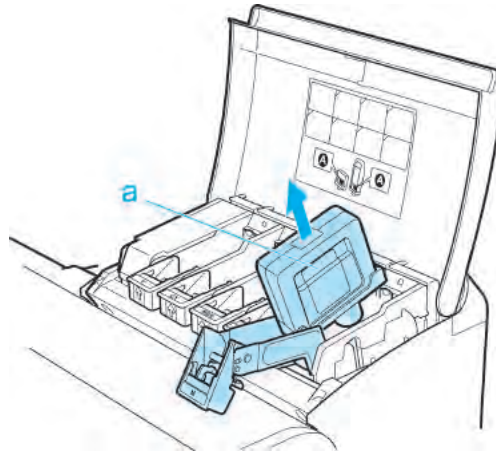**Caution**


- If there is still ink in the Ink Tank you removed, store it with the ink holes (a) facing up. Otherwise, ink may leak and cause stains. Put the Ink Tank in a plastic bag and seal it.

**Note**


- Dispose of used ink tanks according to local regulations.

## Remove the Ink Tank (700 ml)

1. Open the Ink Tank Cover of the tank for replacement and check the Ink Lamp. The Ink Lamp flashes quickly if there is no ink left.

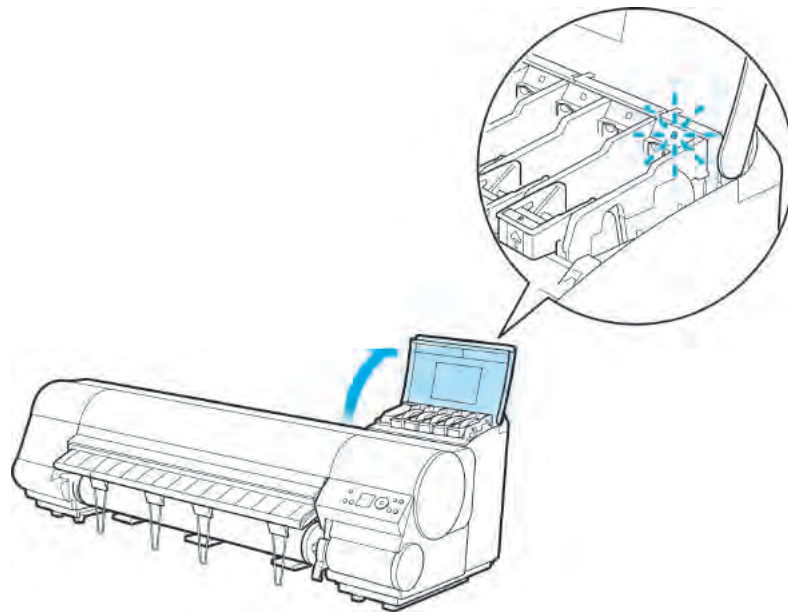


2. Lift the stopper (a) of the Ink Tank Lock Lever for the color to replace. Lift the Ink Tank Lock Lever until it stops, and then push it down to the front.

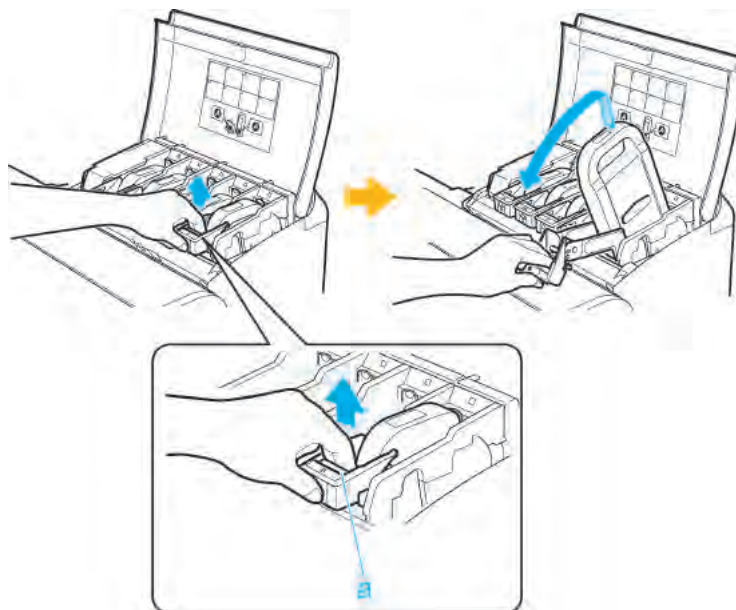


### Note

- Push the Ink Tank Lock Lever down until it locks.
- Make sure the Ink Tank Lock Lever does not return to the original position.

3. Hold the Ink Tank by the handle (a) and remove it. Press the **OK** button.

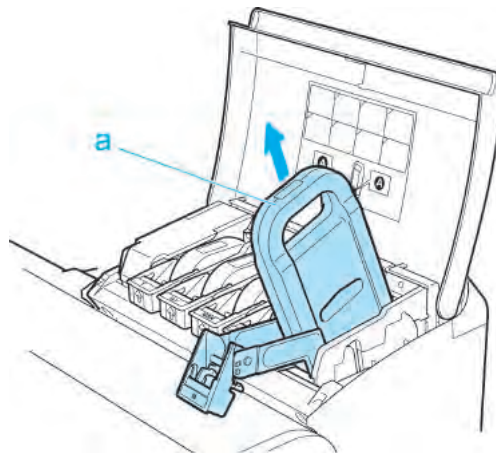**Caution**

- If there is still ink in the Ink Tank you removed, store it in the box with the ink holes (a) facing up. Otherwise, ink may leak and cause stains.

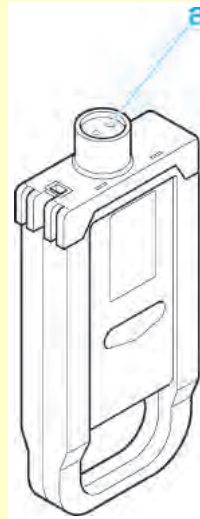
**Note**

- Dispose of used ink tanks according to local regulations.



## Load the ink tank (330 ml)


1. Before opening the pouch, tilt the Ink Tank to the left and right gently seven or eight times.

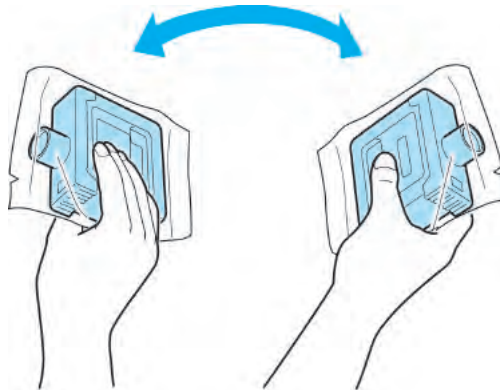

### Important

- If you do not agitate the Ink Tank, the ink may sediment, which may affect printing quality.


2. Open the pouch and remove the Ink Tank.

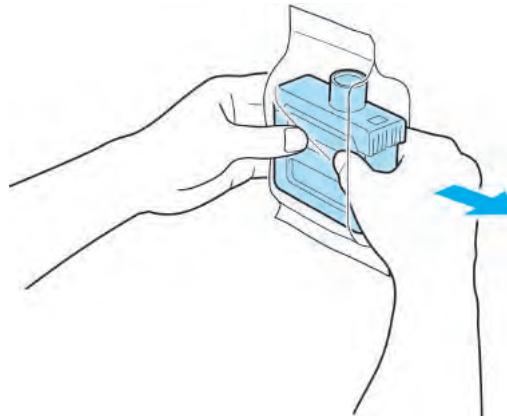

### Important

- Never touch the ink holes or electrical contacts. This may cause stains, damage the Ink Tank, and affect printing quality.
- Do not remove and agitate ink tanks that have already been installed in the printer. Ink may leak out.


3. Press the **OK** button and insert the Ink Tank into the holder with the ink holes facing down, as shown.

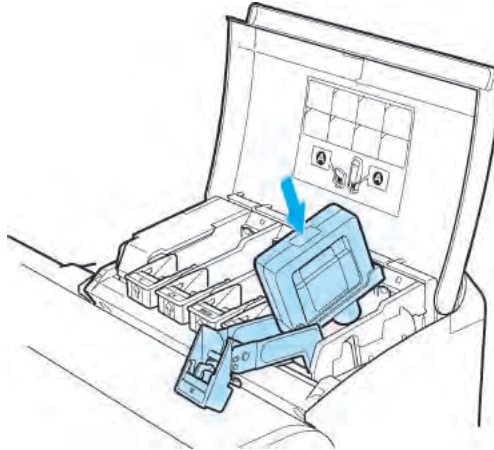

**Note**

- Ink tanks cannot be loaded in the holder if the color or orientation is incorrect. If the Ink Tank does not fit in the holder, do not force it into the holder. Make sure the color of the Ink Tank Lock Lever matches the color of the Ink Tank, and check the orientation of the Ink Tank before reloading it.

4. Lift the Ink Tank Lock Lever until it stops, and then push it down until it clicks into place.

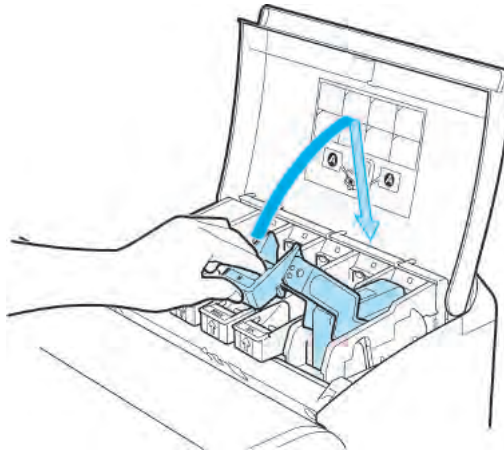

5. Make sure the Ink Lamp is lit in red.






**Note**

- If the Ink Lamp is not lit in red, reload the tank.


6. Close the Ink Tank Cover.

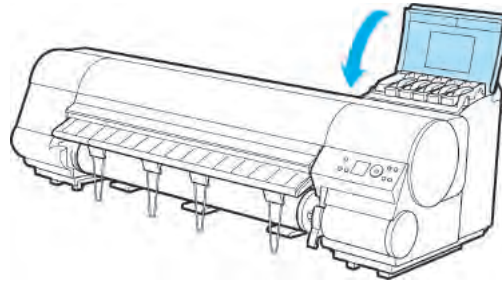

The printer will go online or offline.

### Load the ink tank (700 ml)


1. Before opening the pouch, hold the new Ink Tank with both hands and tilt it to the left and right as shown, shaking gently it seven or eight times.

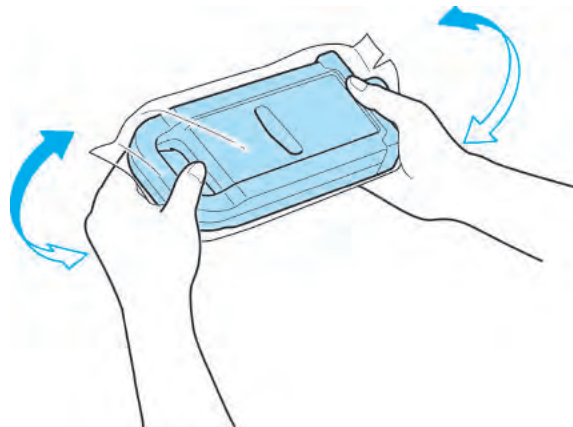

**Important**

- If you do not agitate the Ink Tank, the ink may sediment, which may affect printing quality.

2. Open the pouch and remove the Ink Tank.

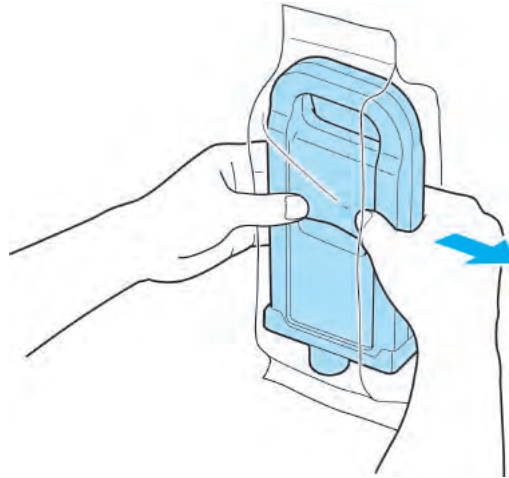**Important**


- Never touch the ink holes or electrical contacts. This may cause stains, damage the Ink Tank, and affect printing quality.
- Do not remove and agitate ink tanks that have already been installed in the printer. Ink may leak out.

3. Press the **OK** button and insert the Ink Tank into the holder with the ink holes facing down, as shown.

**Note**

- Ink tanks cannot be loaded in the holder if the color or orientation is incorrect. If the Ink Tank does not fit in the holder, do not force it into the holder. Make sure the color of the Ink Tank Lock Lever matches the color of the Ink Tank, and check the orientation of the Ink Tank before reloading it.

4. Lift the Ink Tank Lock Lever until it stops, and then push it down until it clicks into place.

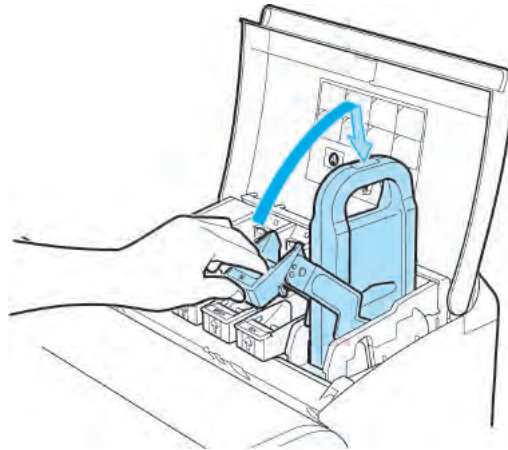

5. Make sure the Ink Lamp is lit in red.




11



**Note**

- If the Ink Lamp is not lit in red, reload the tank.


6. Close the Ink Tank Cover.

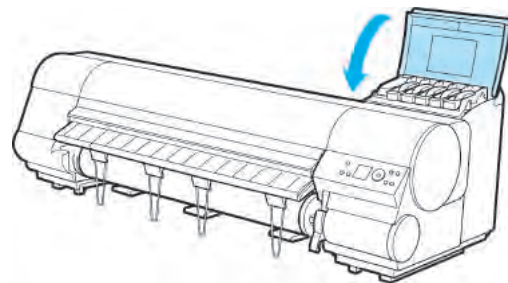


The printer will go online or offline.

## Checking Ink Tank Levels

On the Display Screen, you can check how much ink is left in the Ink Tank.  
The Display Screen indicates the remaining ink levels, unless an error message is displayed.

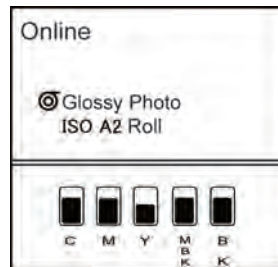

During error messages, press the **Information** button to view the ink levels on the Display Screen.

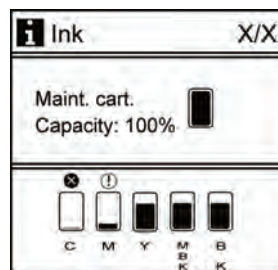

These levels shown on the Display Screen correspond to the inks identified by the Color Label on the bottom of the Display Screen.

These symbols may be displayed above the ink level: ! if ink is low, × if no ink is left, and ? if you have deactivated ink level detection.

The remaining ink level is indicated as shown below.




If the Display Screen indicates to replace the Ink Tank, replace the Ink Tank. If a message is displayed indicating to check the remaining ink levels, or after tasks that consume a lot of ink such as large-format printing or head cleaning, check the remaining levels and replace Ink Tank as needed. (See "Replacing Ink Tanks.") →P.803

## When to Replace Ink Tanks

Replace or prepare to replace Ink Tank in the following situations.


### If a message for checking the ink is shown on the Display Screen

When there is little ink left, the Message lamp is lit and **"Ink Level: Check"** is shown on the Display Screen. You can continue to print, but prepare to replace the Ink Tank. (See "Checking Ink Tank Levels.") →P.815

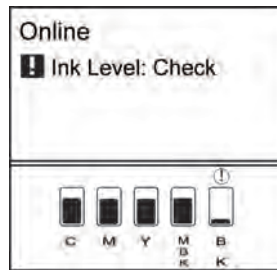


### Before print jobs and maintenance that consume a lot of ink

If little ink is left, there may not be enough for large-format printing, head cleaning, and maintenance, which require a lot of ink. In this case, replace or prepare to replace the Ink Tank before maintenance.

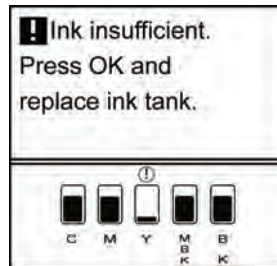

### If a message for ink replacement is shown on the Display Screen

When ink runs out, the Message lamp flashes, a message regarding Ink Tank replacement is shown on the Display Screen, and printing is disabled. Replace the Ink Tank at this point.

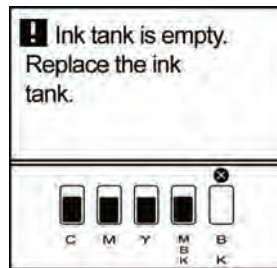




## Printheads

Printhead .....	817
Checking for Nozzle Clogging .....	817
Cleaning the Printhead .....	819
Replacing the Printhead .....	820

### Printhead

This is a replacement Printhead for the printer.

- Printhead PF-03

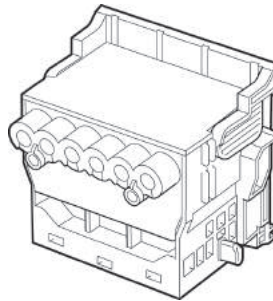

#### Note

- For instructions on replacing the Printhead, see "Replacing the Printhead." →P.820

### Checking for Nozzle Clogging

If printing is faint or streaked in different colors, make sure the Printhead nozzles are clear by printing a test pattern to check the nozzles.



#### Note

- You can specify a number of pages in the printer's **Noz. Check Freq.** menu for automatic nozzle checking every time you finish printing that quantity. (See "Main Menu Settings.") →P.722

1. Load unused paper.

- Attaching the Roll Holder to Rolls →P.623
- Loading Rolls in the Printer →P.628
- Loading Sheets in the Printer →P.651

2. Press the **Menu** button to display **MAIN MENU**.




3. Press **▲** or **▼** to select **Test Print**, and then press the **▶** button.


4. Press **▲** or **▼** to select **Nozzle Check**, and then press the **▶** button.

5. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.  
The printer goes online and prints a test pattern.

6. Check the printing results.  
The Printhead L prints the test pattern for nozzle checking on the top line in each color, and the Printhead R prints the test pattern on the bottom line.  
If the horizontal lines are not faint or incomplete, the nozzles are clear.

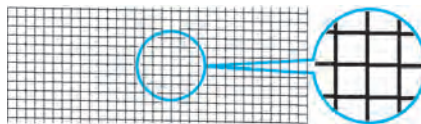

If some sections of the horizontal lines are faint or incomplete, the nozzles for those colors are clogged.

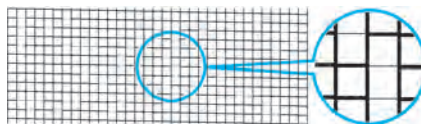

If horizontal lines are faint or incomplete, follow the steps below and check again for nozzle clogging.

1. Clean the Printhead. (See "Cleaning the Printhead.") **→P.819**
2. Print a test pattern to check the nozzles.



**Note**

- If you repeat these steps several times but the horizontal lines are still faint or incomplete, contact your Canon dealer.

## Cleaning the Printhead

Cleaning the Printhead may help clear nozzles that are clogged.

Choose one of two Printhead cleaning modes ( **Head Cleaning A** or **Head Cleaning B** ), depending on the problem to resolve.



### Note

- You can specify a number of pages in the printer's **Noz. Check Freq.** menu for automatic nozzle checking and cleaning every time you finish printing that quantity. (See "Main Menu Settings.") →P.722
- You can start **Head Cleaning A** by holding down the **Information** button for three seconds or more.

## Cleaning the Printhead



### Note

- If printing does not improve after **Head Cleaning A**, try **Head Cleaning B**. If this does not solve the problem, repeat **Head Cleaning B** one or two times. If this still does not improve printing, the Printhead may have reached the end of its useful life. Contact your Canon dealer.



### Caution

- Do not remove the Maintenance Cartridge or Ink Tank during cleaning.

1. Press the **Menu** button to display **MAIN MENU**.



2. Press ▲ or ▼ to select **Head Cleaning**, and then press the ► button.
3. Press ▲ or ▼ to select the type of cleaning, and then press the **OK** button.

#### • Head Cleaning A

Use **Head Cleaning A** if printing is faint or contains foreign substances. This method of cleaning consumes the least amount of ink. It takes about three minutes to complete.

#### • Head Cleaning B

Use **Head Cleaning B** if no ink comes out of the printhead, or if **Head Cleaning A** does not solve the problem. It takes about four minutes to complete.

The printhead is cleaned, and the printer goes online.

4. Print a test pattern to check the nozzles, and determine whether cleaning has cleared the nozzles. (See "Checking for Nozzle Clogging.") →P.817

## Replacing the Printhead

### When to replace the Printhead

Replace the Printhead in the following situations.

- If the printing quality does not improve even after one or two cycles of **Head Cleaning B** from the printer menu
- If the Display Screen indicates "**Open top cover and replace the printhead.**"
- If your Canon dealer has advised you to replace the Printhead

### Compatible printheads

For information on compatible printheads, see "Printhead." →P.817

### Precautions when handling the Printhead

Take the following precautions when handling the Printhead.



#### Caution

- For safety, keep the Printhead out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.
- Do not touch the Printhead immediately after printing. The Printhead becomes extremely hot, and there is a risk of burns.



#### Important

- There may be ink around the nozzles of the Printhead you remove. Handle the Printhead carefully during replacement. The ink may stain clothing.
- Do not open the Printhead pouch until immediately before installation. After removing the Printhead from the pouch, install it right away. If the Printhead is left after the pouch is opened, the nozzles may dry out, which may affect printing quality.
- If you need to put a Printhead somewhere temporarily before installation, do not keep the nozzles and metal contacts →P.824 facing down. If the nozzles or metal contacts are damaged, it may affect the printing quality.

## Replacing the Printhead



#### Caution

- When replacing the Printhead immediately after printing, wait a few minutes before replacing it. The metal parts of the Printhead become hot during printing, and there is a risk of burns from touching these parts.



#### Note


- Prepare a new Ink Tank when ink levels are low.
- Your hands may become dirty during Printhead replacement. Use the gloves provided with the new Printhead for replacement.
- Choose **On** in **Auto Print** to have the printer automatically adjust the Printhead alignment after replacement of the Printhead. (See "Main Menu Settings.") →P.722

1. If the roll is not ejected because of the cutting method selected, cut it manually and remove it. (See "Cutting Roll Paper After Printing.") →P.196

2. Clean inside the Top Cover. (See "Cleaning Inside the Top Cover.") →P.837
3. Press the **Menu** button to display **MAIN MENU**.




4. Press ▲ or ▼ to select **Maintenance**, and then press the ► button.
5. Press ▲ or ▼ to select **Replace P.head**, and then press the ► button.
6. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.  
Ink is now filled.  
After about two minutes, a message is shown on the Display Screen instructing you to open the Top Cover.
7. Open the Top Cover.

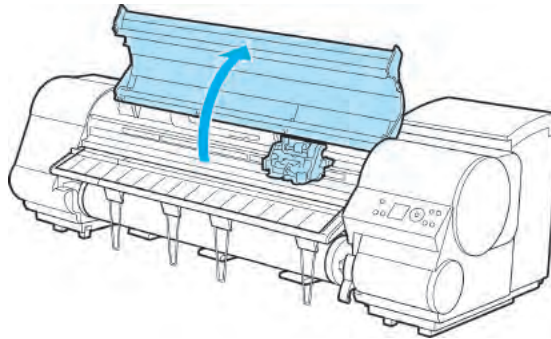


Instructions are now shown on the Display Screen regarding Printhead replacement.

8. If the Printhead Fixer Cover or Printhead Fixer Lever is dirty, use a damp cloth that you have wrung out completely to wipe it clean.

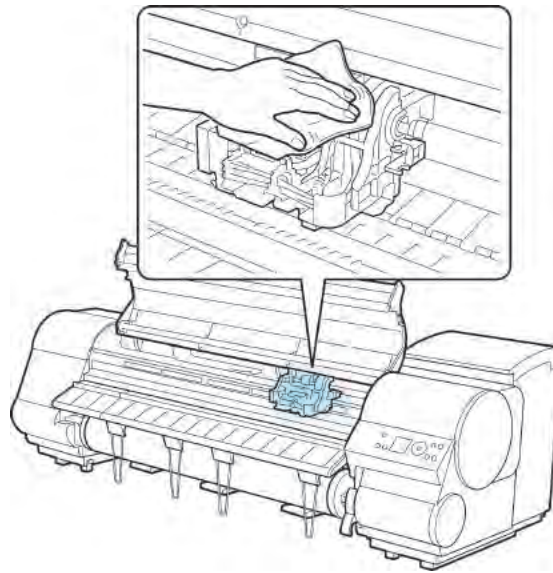


**Important**

- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

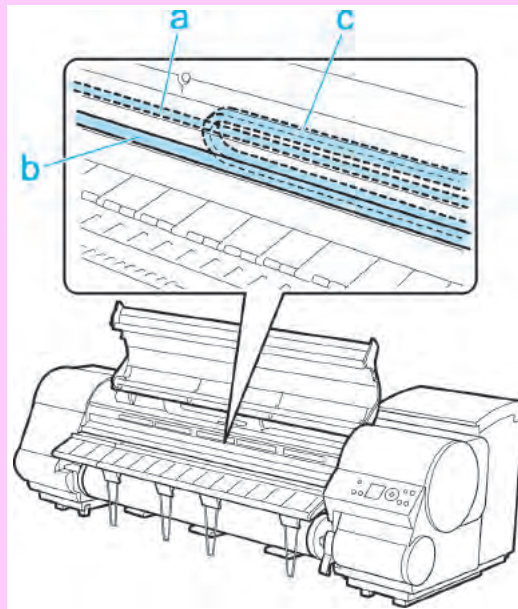


- Never touch the metal contacts of the Carriage. This may damage the printer.


9. If the ventilation duct (a) is dirty, use a damp cloth that you have wrung out completely to wipe it clean. Move the Carriage out of the way manually if the Carriage is concealing the ventilation duct, and then clean the duct.

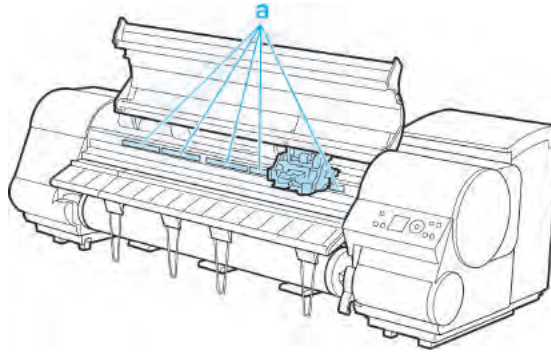


10. Pull the Printhead Fixer Lever forward all the way to open it completely.

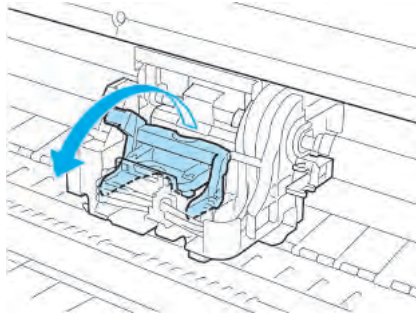

11. Pull up the Printhead Fixer Cover to open it completely.

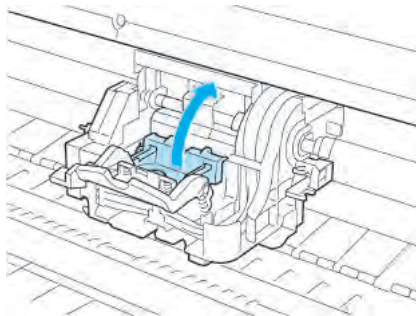

12. Remove the used Printhead.

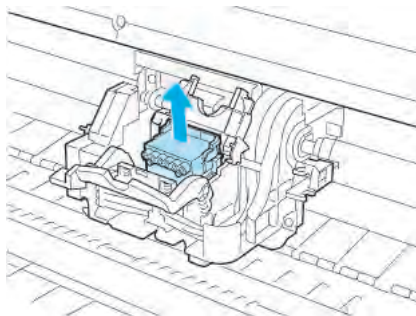






**Note**


- Dispose of the used Printhead in accordance with local regulations.

**13.** Holding the new Printhead by the grips (a), remove it from the case.

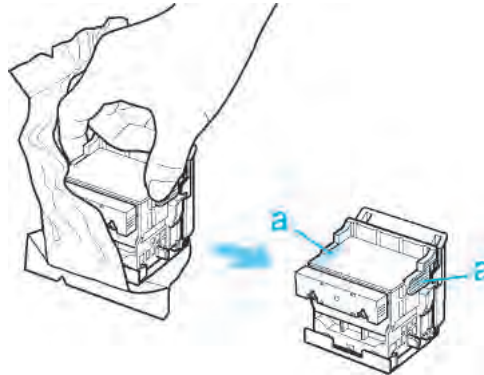


**Important**

- When handling the Printhead, always hold it by the grips (a). Never touch the nozzles (b) or metal contacts (c). This may damage the Printhead and affect printing quality.

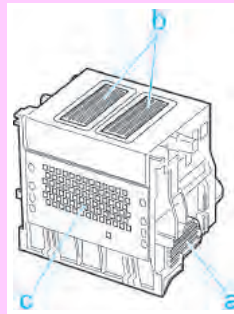

**11**


**14.** While firmly holding the Printhead you have removed, use your other hand to remove the orange Safety Cap 1 (a). Squeeze the grips (c) of Safety Cap 2 (b) and pull it down to remove it.

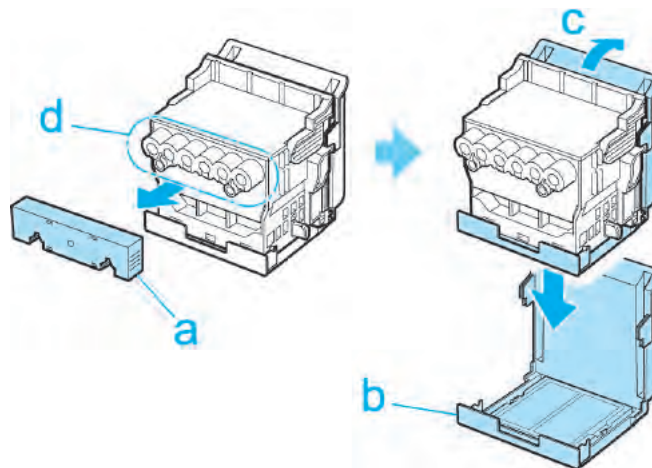


**Important**

- The inside surfaces of Safety Cap 1 (a) and Safety Cap 2 (b) are coated with ink to protect the nozzles. Be careful not to touch these surfaces when removing the caps.
- Never touch the ink supply section (d). This may cause printing problems.
- The Printhead contains ink to protect the nozzles. We recommend removing Safety Cap 2 (b) as you hold it over the Printhead package or safely out of the way to avoid spilling ink and staining your clothes or the surrounding area. If ink accidentally spills, wipe off the ink with a dry cloth.
- Do not reattach the Safety Cap or protective material. Dispose of these materials in accordance with local regulations.


- 15.** With the nozzles facing down and the metal contacts toward the back, insert the Printhead into the Carriage. Carefully push the printhead firmly into the Carriage, ensuring that the nozzles and metal contacts do not touch the carriage.

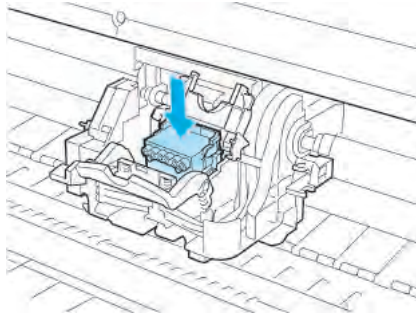


- 16.** Pull the Printhead Fixer Cover down toward the front to lock the Printhead in place.

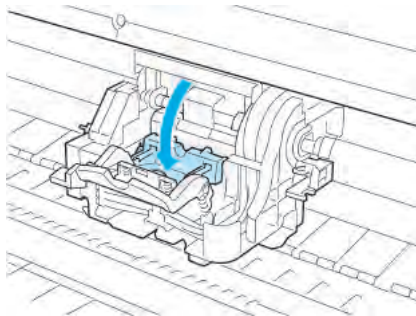

- 17.** Push the Printhead Fixer Lever toward the back of the printer until it clicks.

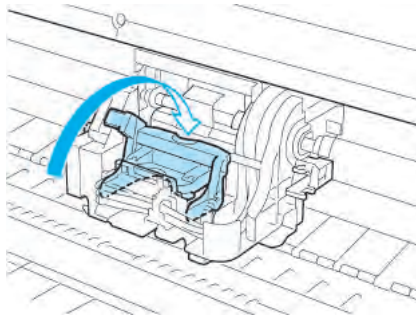

## 18. Close the Top Cover.

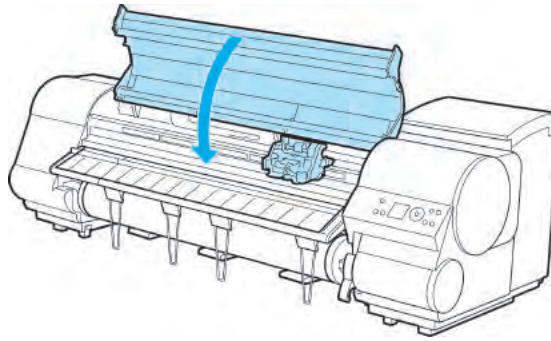

Ink now fills the system.

After about six minutes, the Printhead will be automatically aligned, and the printer will go online.

If no paper has been loaded, a message is displayed requesting you to load paper.



### Important

- Never remove an Ink Tank while the system is filling with ink.
- If **Auto Print** is **Off** in the printer menu, the Printhead alignment will not be adjusted. In this case, adjust the alignment after Printhead replacement by accessing **Advanced Adj.** in **Auto Head Adj.** (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668


## Maintenance Cartridge

Maintenance Cartridge .....	827
Replacing the Maintenance Cartridge .....	827
Checking the Remaining Maintenance Cartridge Capacity .....	835
When to Replace the Maintenance Cartridge .....	835

## Maintenance Cartridge

A replacement Maintenance Cartridge. The Maintenance Cartridge is provided with a Shaft Cleaner.

- Maintenance Cartridge MC-09

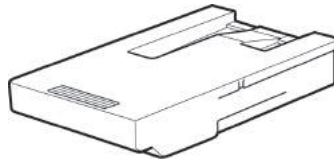

### Note

- For instructions on replacing the Maintenance Cartridge, see "Replacing the Maintenance Cartridge."

→P.827

## Replacing the Maintenance Cartridge

### Compatible maintenance cartridges

For information on compatible maintenance cartridges, see "Maintenance Cartridge." →P.827

### Precautions when handling the Maintenance Cartridge

Take the following precautions when handling the Maintenance Cartridge.



### Caution

- For safety, keep the Maintenance Cartridge out of the reach of children.
- If ink is accidentally ingested, contact a physician immediately.



### Important

- Do not remove the Maintenance Cartridge except to replace it.
- To prevent ink from leaking from a used Maintenance Cartridge, avoid dropping the cartridge or storing it at an angle. Otherwise, ink may leak and cause stains.
- Ink adheres to the top of the Maintenance Cartridge after it has been used. Handle the Maintenance Cartridge carefully during replacement. The ink may stain clothing.
- Do not install a used Maintenance Cartridge in another printer.

## Replacing the Maintenance Cartridge

1. Make sure no print jobs are in progress.  
You can replace the Maintenance Cartridge if the Display Screen indicates the printer is **Offline** or if messages advise you to replace the Maintenance Cartridge.



If a message prompts you to replace the Maintenance Cartridge, press the **OK** button. Steps 2–5 are unnecessary in this case. Go to step 6 and remove the Maintenance Cartridge.




Do not replace the Maintenance Cartridge during initialization immediately after turning on the printer, during Print-head cleaning, or while ink is being drawn out.  
If you pause printing to replace the Maintenance Cartridge, it may cause the printed images to be blurry.

2. Press the **Menu** button to display **MAIN MENU**.




3. Press **▲** or **▼** to select **Maintenance**, and then press the **▶** button.
4. Press **▲** or **▼** to select **Repl. maint cart**, and then press the **▶** button.
5. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.  
A message on the Display Screen advises you to open the Maintenance Cartridge Cover.

6. At this point, open the Maintenance Cartridge Cover.

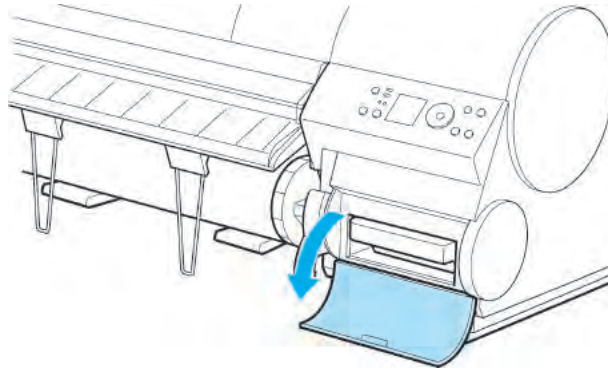


7. Hold the used Maintenance Cartridge by the grip (a) with one hand and put your other hand under the Maintenance Cartridge to hold it firmly on the bottom, keeping it level as you pull it out.

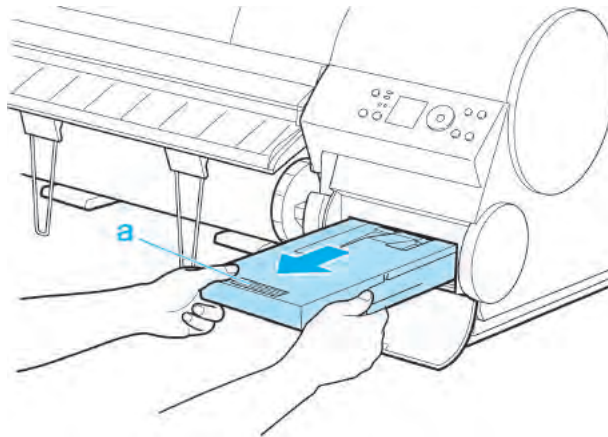

**Important**


- Used maintenance cartridges are heavy. Always grasp the cartridge firmly and keep the cartridge level during removal and storage. If you drop a used Maintenance Cartridge or store it at an angle, ink may leak and cause stains.
- The remaining Maintenance Cartridge capacity is recorded on each printer. Do not install a used Maintenance Cartridge in another printer.

8. Open the box, remove the plastic bag, packaging material, and Shaft Cleaner (a), and then take out the Maintenance Cartridge (b).

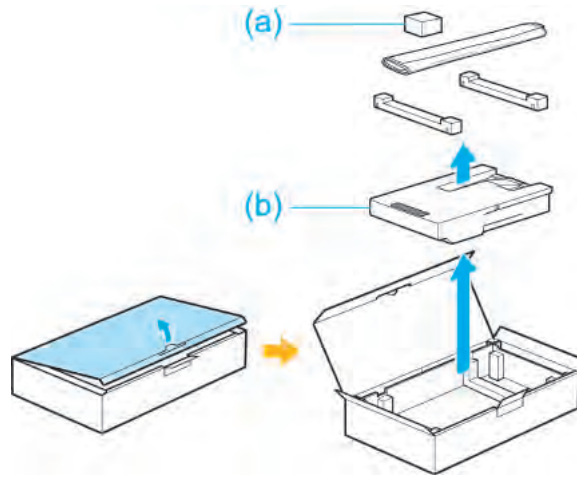


**Important**

- Never touch the metal contacts (a). This may damage the Maintenance Cartridge.

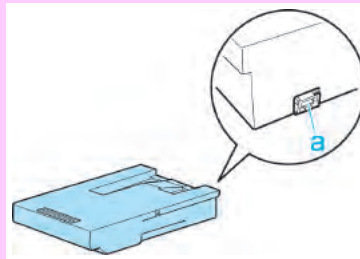


9. Keep the used Maintenance Cartridge level as you put it in the plastic bag. Expel excess air from the plastic bag and seal the zipper.

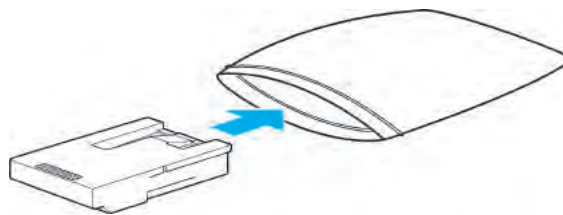




- 10.** Confirm the Maintenance Cartridge is right-side up, put it in the box with the packaging material attached, and store it so that it stays level.

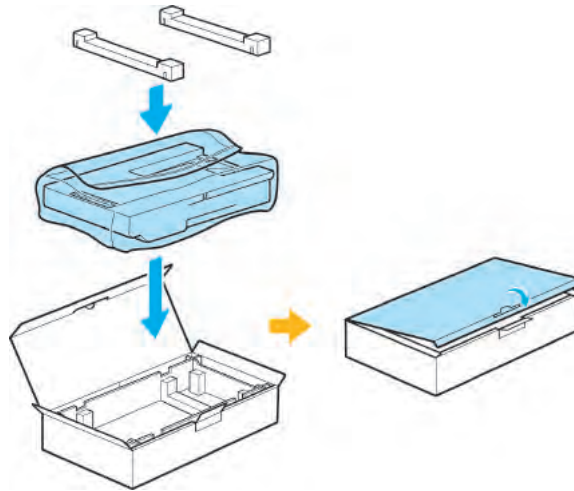

**Important**

- Always put the used Maintenance Cartridge back in the box and store the box on a flat surface. Otherwise, ink may leak and cause stains.
- In accordance with corporate environmental protection policies, Canon collects used maintenance cartridges. Follow the instructions provided with the new Maintenance Cartridge that describe how to process the used Maintenance Cartridge.


- 11.** Wipe away any soiling on the Maintenance Cartridge Cover.

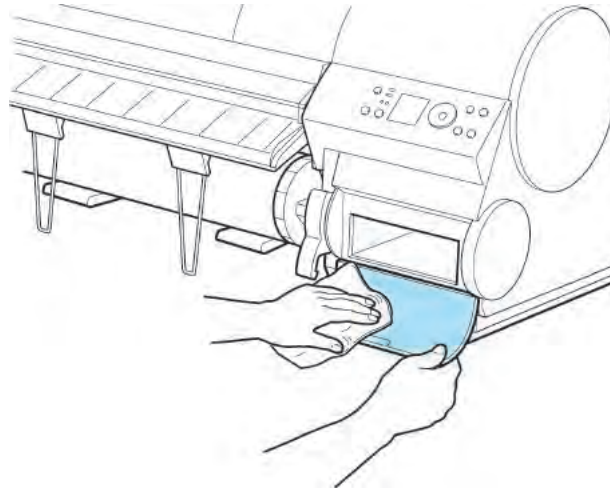


**Important**

- Support the Maintenance Cartridge Cover from underneath as you wipe it.

**12.** Keeping the new Maintenance Cartridge level, insert it all the way in.

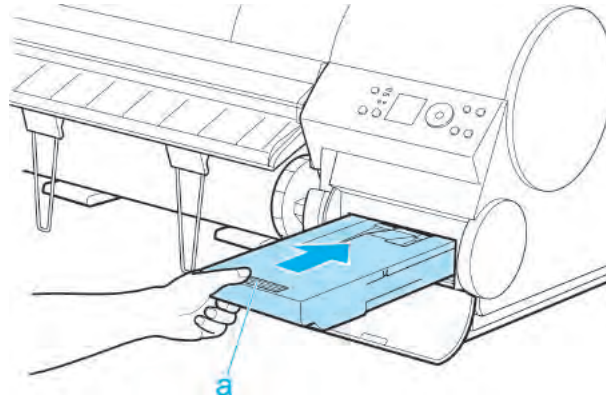

**13.** Close the Maintenance Cartridge Cover.

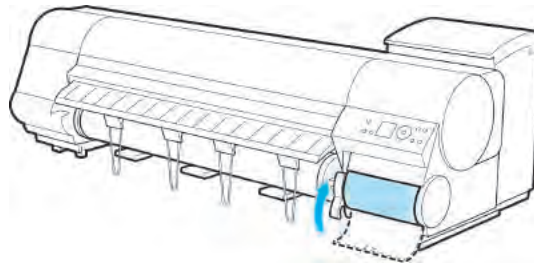

**14.** Press the **OK** button.



The printer now initializes the Maintenance Cartridge.  
Next, replace the Shaft Cleaner.

### Replacing the Shaft Cleaner

Replace the Shaft Cleaner when you replace the Maintenance Cartridge. New Shaft Cleaner is included with replacement Maintenance Cartridge.

After you execute **Repl. maint cart** and replace the Maintenance Cartridge, a message will appear on the Display Screen requesting you to replace the Shaft Cleaner. Select **Yes** and press the **OK** button. Next, go to step 4.

1. Press the **Menu** button to display **MAIN MENU**.




2. Press **▲** or **▼** to select **Maintenance**, and then press the **▶** button.
3. Press **▲** or **▼** to select **Repl. S. Cleaner**, and then press the **▶** button.
4. Press **▲** or **▼** to select **Yes**, and then press the **OK** button.  
After the Carriage is moved, the Display Screen indicates "**Open Upper Cover**".


**Note**

- If you do not respond within two minutes, shaft cleaner replacement is canceled and the printer goes online automatically. In this case, repeat the procedure.


5. Open the Top Cover.

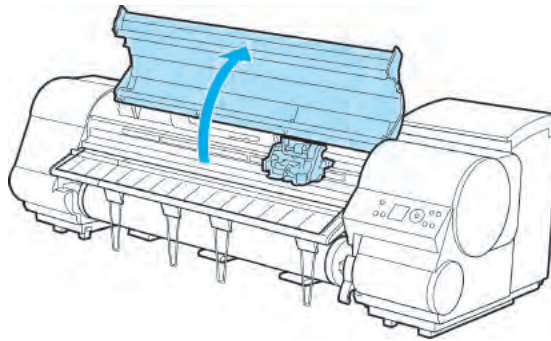**Note**

- Do not open the Printhead Fixer Lever toward the front. Accidentally opening the Printhead Fixer Lever toward the front will draw out ink, which consumes ink.

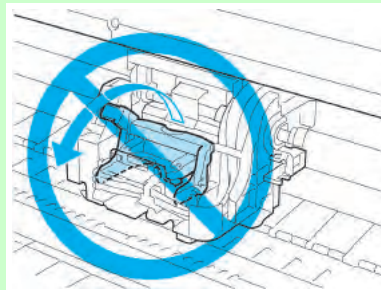


6. Hold the Shaft Cleaner on the right side of the Carriage by the grips (a) and pull it toward you to remove it.

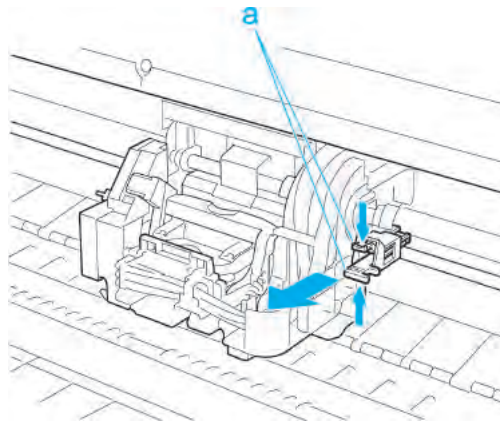


**Important**

- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

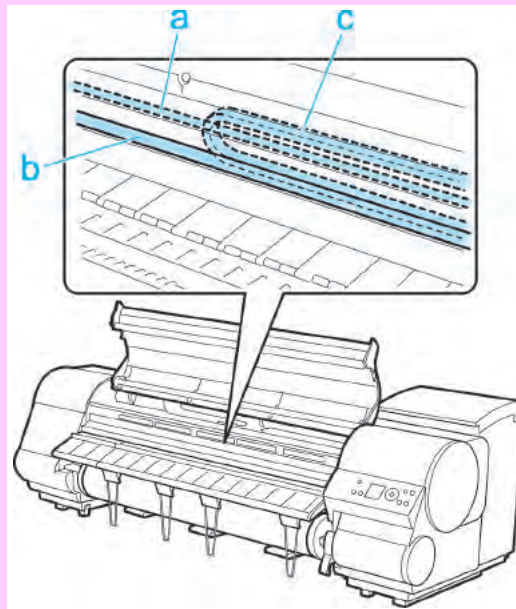


7. After removing the cap of the new Shaft Cleaner, hold it by the grips (a) and attach it to the Carriage. Push the Shaft Cleaner until it clicks into place.

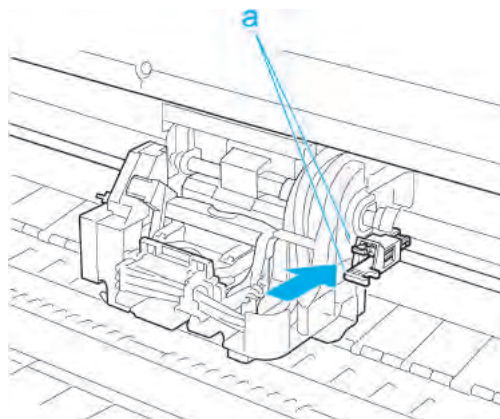

**Note**

- Attach the cap from the new Shaft Cleaner on the used one. Be sure to put the used Shaft Cleaner in the small box before putting it in the larger box with the used Maintenance Cartridge for disposal.

## 8. Close the Top Cover.

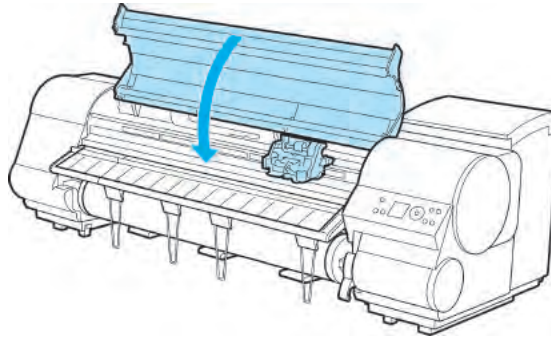


The Carriage is moved, and the printer goes online.

## Checking the Remaining Maintenance Cartridge Capacity

The Maintenance Cartridge absorbs excess ink from borderless printing, printhead cleaning, and other processes. You can confirm the remaining capacity of the Maintenance Cartridge by checking the Maintenance Cartridge capacity shown on the Display Screen.

Press the **Information** button to display the remaining capacity of the Maintenance Cartridge on the Display Screen.

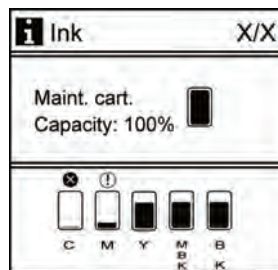


If the Display Screen indicates to replace the Maintenance Cartridge, replace the Maintenance Cartridge. If a message is displayed indicating to check the remaining capacity of the Maintenance Cartridge, or before tasks that deplete much of the capacity such as head cleaning or preparations to move the printer, check the remaining Maintenance Cartridge capacity and replace the Maintenance Cartridge as needed. (See "Replacing the Maintenance Cartridge.") →P.827

## When to Replace the Maintenance Cartridge

Replace or prepare to replace the Maintenance Cartridge in the following situations.


**If a message for checking the Maintenance Cartridge is shown on the Display Screen**

When the Maintenance Cartridge capacity is low, the Message lamp is lit and "**Prepare for maint cart replacement.**" is displayed. You can continue to print, but check the remaining Maintenance Cartridge capacity and prepare to replace the Maintenance Cartridge with a new one. (See "Checking the Remaining Maintenance Cartridge Capacity.") →P.835

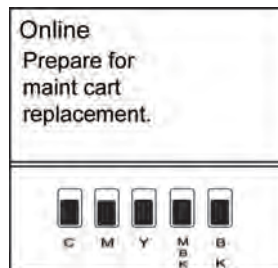

**When much of the Maintenance Cartridge capacity is depleted**

Printhead cleaning, Printhead replacement, and preparations to transfer the printer deplete much of the Maintenance Cartridge capacity. (In particular, preparing to move the printer depletes a lot of the capacity.) To check the remaining Maintenance Cartridge capacity, press the **Information** button. Replace the Maintenance Cartridge and perform related maintenance as needed.

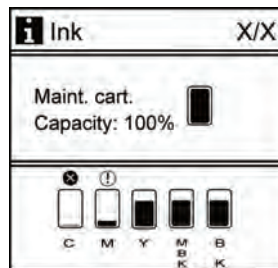

**If a message for the Maintenance Cartridge replacement is shown on the Display Screen**

When the Maintenance Cartridge is full, the Message lamp flashes and a message to replace the Maintenance Cartridge is shown on the Display Screen. Printing is disabled, and you cannot replace the Printhead or transfer the printer. Replace the Maintenance Cartridge with a new one.



11



## Cleaning the Printer

Cleaning the Printer Exterior .....	837
Cleaning Inside the Top Cover .....	837

### Cleaning the Printer Exterior

Clean the printer regularly to maintain better printing quality and help prevent problems. About once a month, clean the printer exterior.


1. Turn the printer off. (See "Turning the Printer On and Off.") →P.694
2. Unplug the power cord from the outlet.



#### Caution

- Always turn off the printer and unplug the power cord before cleaning or maintenance. Accidentally leaving the printer on poses a risk of injury if you touch moving parts inside the printer.

3. Using a damp cloth that you have wrung out completely, wipe away any dirt or paper dust from the Paper Feed Slot (a), power cord plug, and so on. Dry these parts with a dry cloth.

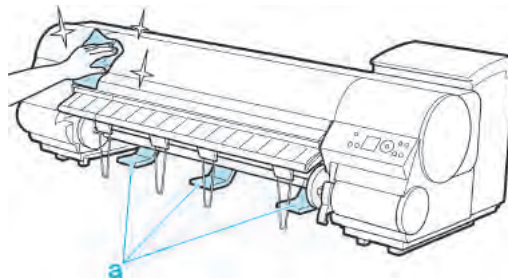

#### Caution

- Never use flammable solvents such as alcohol, benzene, or thinner. If these substances come into contact with electrical components inside the printer, there is a risk of fire or electrical shock.



#### Important

- If the Ejection Guide is dirty, it may soil the edge of the paper when the paper is cut. We recommend cleaning the Ejection Guide even if it does not appear dirty, because it may actually be covered with paper dust.  
(See "Cleaning Inside the Top Cover.") →P.837

4. Plug the power cord into the outlet.

### Cleaning Inside the Top Cover

Clean inside the Top Cover to maintain better printing quality and help prevent problems. Also clean inside the Top Cover in the following situations to ensure optimal operation.

- If the printed surface or the underside of paper is dirty after printing
- After you have used up a roll




- After borderless printing
- After printing on small paper
- After printing on paper that generates a lot of cutting debris
- If you have replaced the roll
- After printing on paper that generates a lot of paper dust
- If the message "Blue platen switch is dirty." is displayed




**Important**

- If the Platen inside the Top Cover becomes dirty, it may soil the underside of paper. We recommend cleaning the Platen after borderless printing or printing on small paper.
- If the Ejection Guide is dirty, it may soil the edge of the paper when the paper is cut. We recommend cleaning the Ejection Guide even if it does not appear dirty, because it may actually be covered with paper dust.

1. Open the Top Cover.

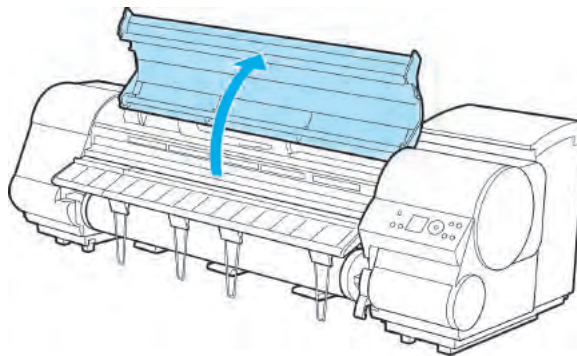


2. If paper dust has accumulated in the Vacuum holes (a) on the Platen or in the Borderless Printing Ink Grooves (b), use the Cleaning Brush (c) provided with the printer to wipe it away.

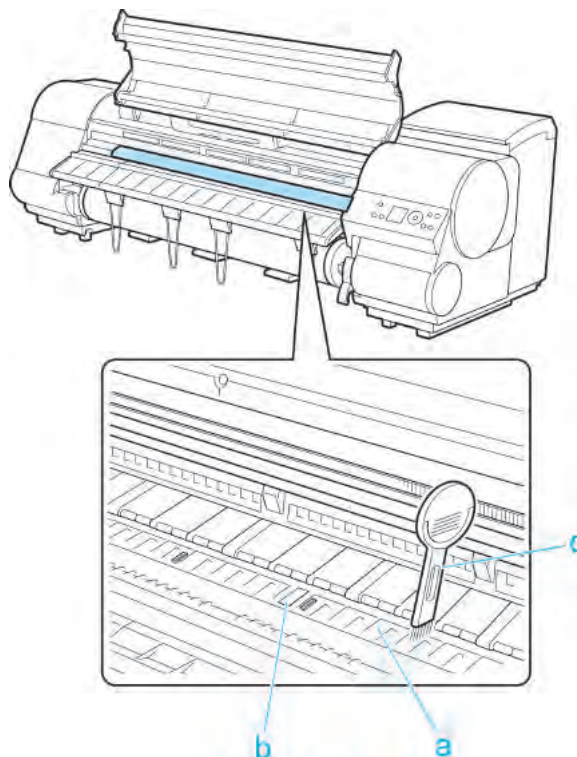


**Important**

- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.  
Avoid cleaning where the Carriage is retracted, in position (d) or (e).

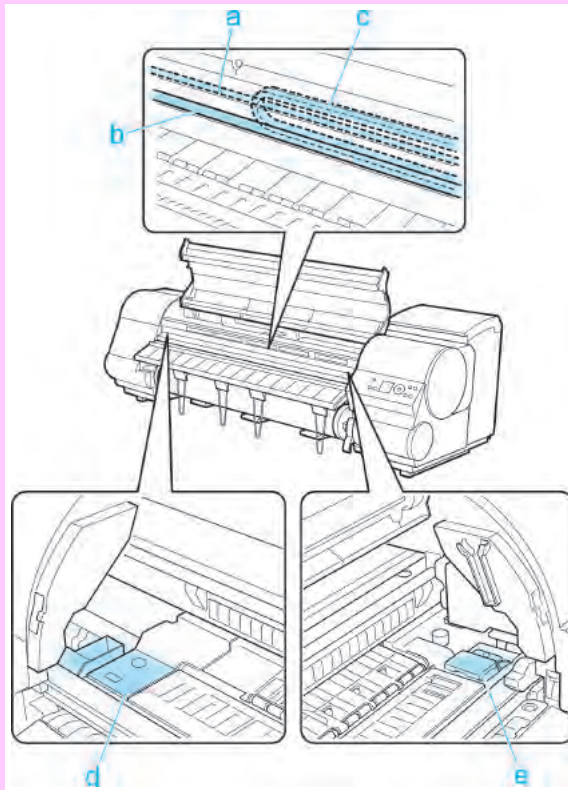**Note**

- If the Cleaning Brush is dirty, rinse it in water.


3. Using a damp cloth that you have wrung out completely, wipe away dirt or paper dust (debris from cutting) inside the Top Cover.
- Wipe away any ink residue and paper dust (debris from cutting) on the Top Cover Roller (a), all over the Platen (b), the Paper Retainer (c), the Borderless Printing Ink Grooves (d), the Ejection Guide (e), the blue Switch (f), the section around the right-side Borderless Printing Ink Grooves (g), and so on.

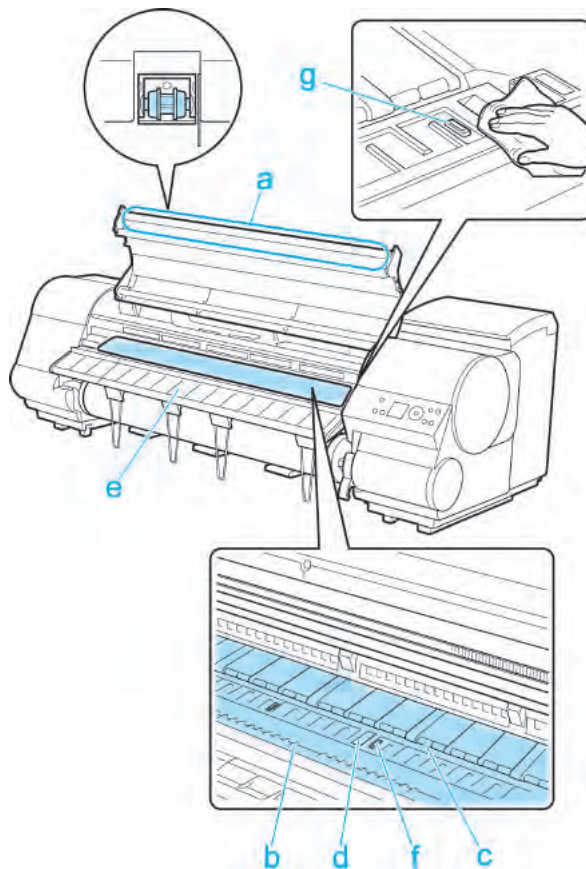

**Important**

- Do not use a dry cloth to wipe inside the Top Cover. This may create a static charge, which may attract dust and affect the printing quality.
- Never use flammable solvents such as alcohol, benzene, or thinner. If these substances come into contact with electrical components inside the printer, there is a risk of fire or electrical shock.
- Do not touch the clear sheet on the side of the Top Cover Roller. This may damage the roller.

4. Close the Top Cover.

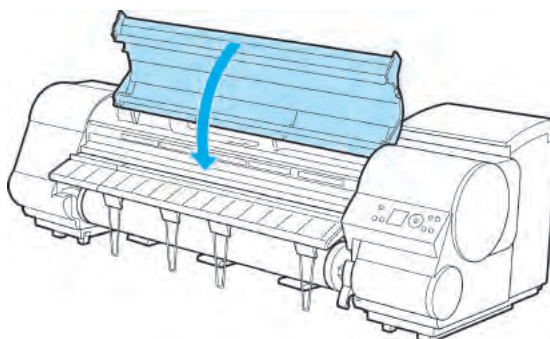

## Other Maintenance

Preparing to Transfer the Printer .....	841
Updating the Firmware .....	847

### Preparing to Transfer the Printer

To protect the internal parts in transit, always follow the steps below before transferring the printer to a new location. Refer to the Setup Guide for details on packing the printer and installing it after transfer.





#### Important

- Be sure to contact your Canon dealer before transferring the printer to a new location. Ink may leak and damage the printer if you do not prepare the printer correctly and it is tipped or stood on end in transit.



#### Note

- It is not possible to prepare the printer for transfer if the Display Screen requests Maintenance Cartridge replacement or checking of the remaining capacity. Replace the Maintenance Cartridge before transfer preparations. (See "Replacing the Maintenance Cartridge.") →P.827
- Depending on the state of the printer, part replacement may be necessary when preparing to transfer the printer (that is, when you execute the printer menu item to prepare for transfer).
- Ink must be drained before Level 2 or Level 3 printer transfer, as described in the following table. Prepare a Maintenance Cartridge in advance.
- Always follow the instructions of the service representative when transferring the printer under Level 3 conditions.

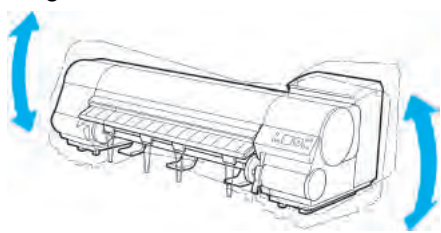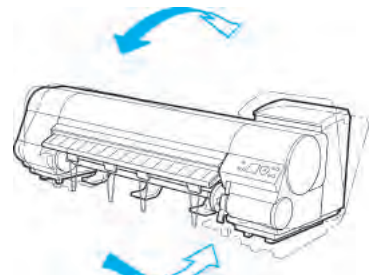Level	Shipping Method (Example)	Permitted Angle of Inclination	Amount of Ink to Dispose of	Required Maintenance Cartridges(*1)
1	By truck	Lengthwise: 0°–30°  Rotation: 0°–10° 	0	0 or 1
2	By plane	All directions: 0°–30°	Approx. 200 ml	1 or 2

Level	Shipping Method (Example)	Permitted Angle of Inclination	Amount of Ink to Dispose of	Required Maintenance Cartridges(*1)
3	Tipping the printer or holding it upright for elevators or stairs	Lengthwise: 0°–90° Rotation: 0°–30°	Approx. 700 ml	2 or 3

\*1: The quantity of cartridges required depends on the capacity of the Maintenance Cartridge in use.

**1.** Remove the paper.

- Rolls (See "Removing the Roll from the Printer.") →P.634
- Sheets (See "Removing Sheets.") →P.656

**2.** Press the **Menu** button to display **MAIN MENU**.



**3.** Press **▲** or **▼** to select **Maintenance**, and then press the **▶** button.

**4.** Press **▲** or **▼** to select **Move Printer**, and then press the **▶** button.

**5.** Press **▲** or **▼** to select the level of transfer, and then press the **OK** button.

**6.** After the message "**Always contact service before preparing to move the printer.**" is shown on the Display Screen, press the **OK** button.

The Display Screen indicates "**Please Wait..**".

- If you have selected **Level 1** in step 5, after processing in preparation to move the printer is finished, the message "**Finished preparing to move printer. Turn off printer.**" is shown on the Display Screen. Go to step 14.
- When you are finished preparing to transfer the printer after selecting **Level 2** or **Level 3** conditions, the Display Screen requests you to open the Ink Tank Cover. Follow the procedure starting with step 7.




**Important**


- If consumables must be replaced, the message "**Consumables must be replaced. Call for service.**" is shown on the Display Screen and preparation is not possible. If this message is displayed, press the **OK** button and contact your Canon dealer for assistance.



7. Open the Ink Tank Cover.

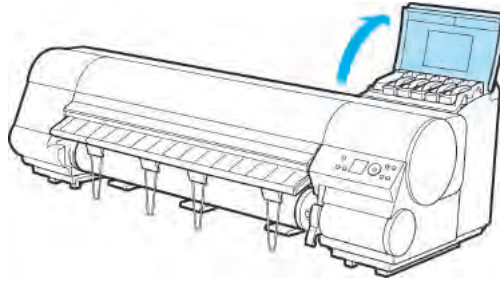

8. Lift the stopper (a) of the Ink Tank Lock Lever (a). Lift the Ink Tank Lock Lever until it stops, and then push it down to the front.

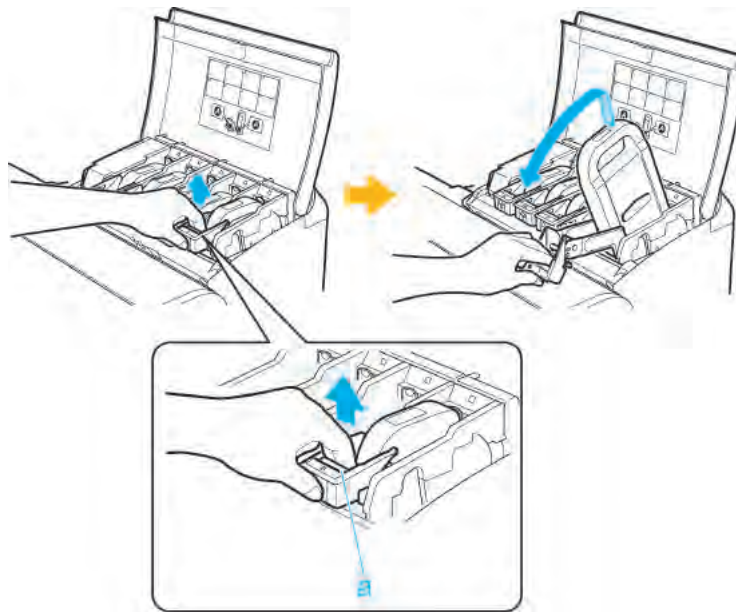


9. Remove the Ink Tank.






Note

- Store the Ink Tank you removed in the box with the ink holes (a) facing up. Otherwise, ink may leak and cause stains.

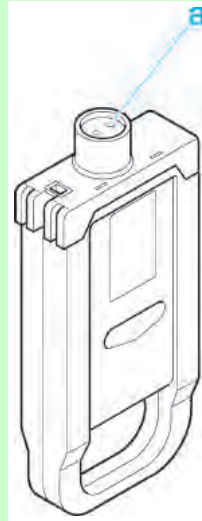


10. Repeat steps 8 and 9 to remove all ink tanks.

11. Push down the release lever (a) as shown as you gently return all ink tank lock levers to the original position.

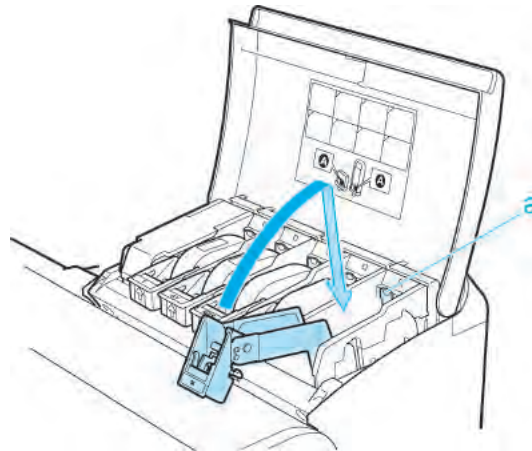

12. Close the Ink Tank Cover.

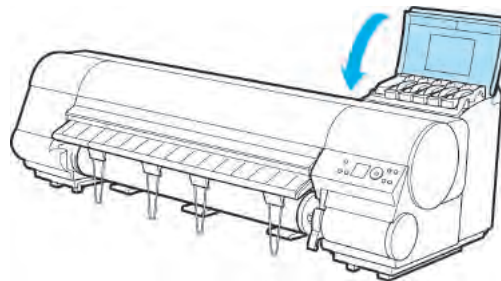



At this point, ink is drawn out from inside the tubes.



**Important**

- Do not remove the Maintenance Cartridge during this process.

When the process is finished, "Finished preparing to move printer. Turn off printer." is displayed.

- 13.** Press the **Power** button and turn off the printer.




**Important**

- Turn off the printer before you unplug it. It may damage the printer if you unplug it before it is off and transfer it in that state. If you accidentally unplug the printer, plug it in again, reinstall the Ink Tank, wait until the printer comes online, and follow this procedure again.


- 14.** Disconnect the power cord, interface cable, and Media Take-up Unit Power Inlet.

- 15.** Open the Top Cover and lift the Ejection Guide.

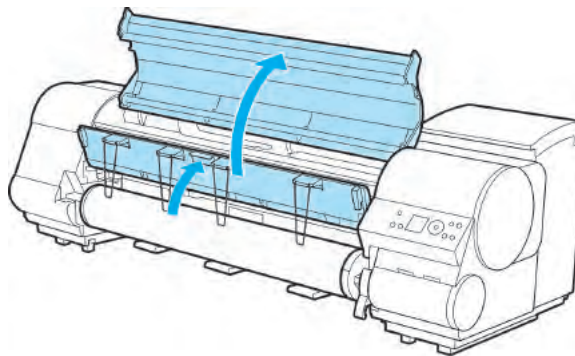


11

- 16.** Remove the four ejection supports and lower the Ejection Guide.

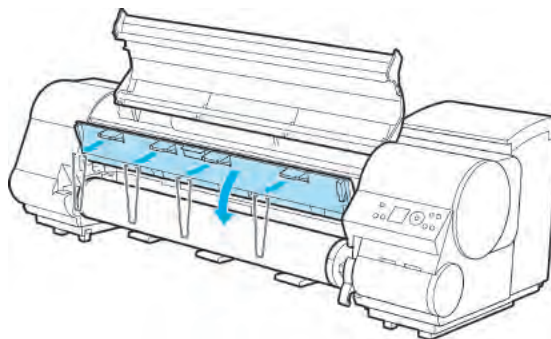


845


17. Grasp the Belt, insert it between the Belt Stopper, and affix the Belt Stopper with a hex screw at the position indicated.

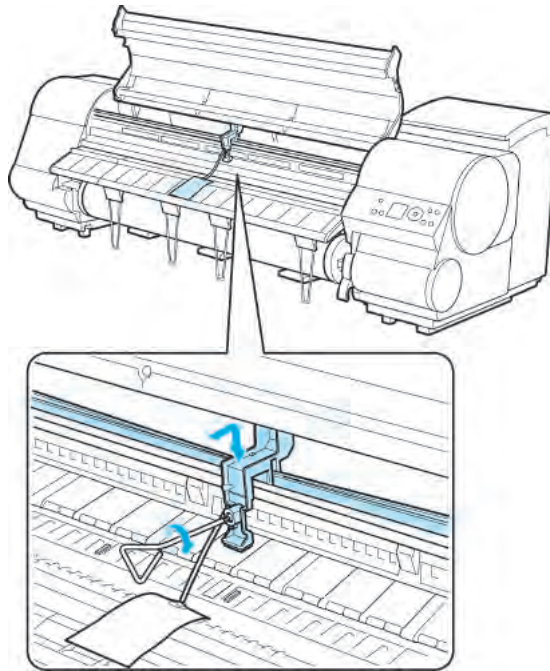

**Important**

- Here, the Belt Stopper is the one that was removed and stored after initial installation. Neglecting to attach the Belt Stopper may damage the printer.
- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

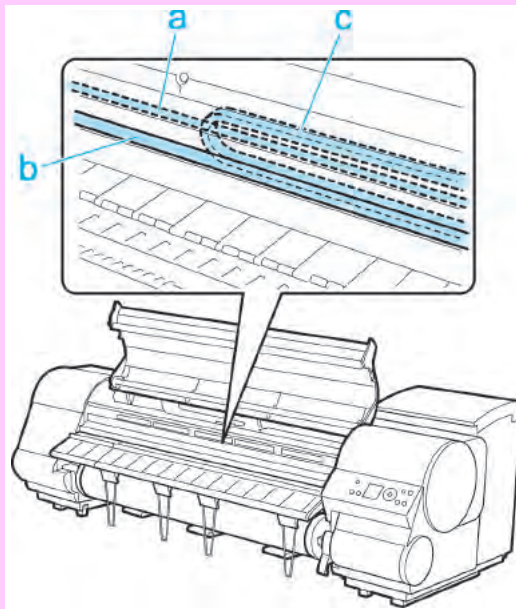

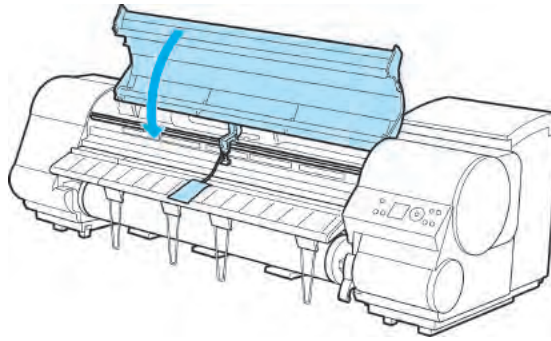**18.** Close the Top Cover.**19.** Tape down printer covers to secure them, in the reverse order of tape removal during installation.**20.** If the Stationary Output Stacker is installed, reverse the installation procedure to remove the Stationary Output Stacker.**21.** Remove the Stand by reversing the installation procedure, when it was attached to the printer.**22.** Disassemble and repackage the Stand by following the installation procedure in reverse.**23.** Repack the Roll Holder, Holder Stopper, and printer in shipping materials, and then package them in a shipping box.

## Updating the Firmware

Update the printer firmware to take advantage of new and improved printer functions.

### Confirming the firmware version


**1.** Press the **Menu** button to display **MAIN MENU**.**2.** Press **▲** or **▼** to select **Information**, and then press **▶**.**3.** Press **▲** or **▼** to select **System Info**, and then press the **OK** button.  
The firmware version is displayed.

## Updating the Firmware

To obtain the latest firmware, visit the Canon website. If the firmware available online is newer than the installed firmware, update the printer firmware. For details on downloading and updating the firmware, visit the Canon website.

## Troubleshooting

Frequently Asked Questions	850
Problems Regarding Paper	852
Printing does not start	863
The printer stops during a print job	865
Problems with the printing quality	866
Cannot print over a network	878
Installation problems	880
HP-GL/2 problems	882
Other problems	884

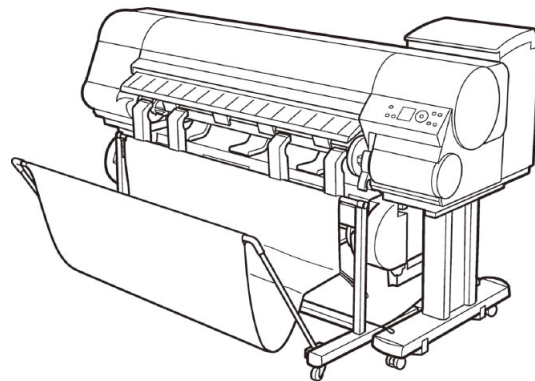

## Frequently Asked Questions

Frequently Asked Questions ..... 850

### Frequently Asked Questions

This section presents frequently asked questions and answers. To view more detailed explanations, click the hyperlinks in the answer column.

Question	Answer
How do I print on a roll?	When printing on rolls, after loading the roll, specify the paper type and length, both on the Control Panel and in the printer driver. ⇒"Loading and Printing on Rolls →P.3 "
How do I print on a sheet?	When printing on sheets, specify the paper type and size in the printer driver before loading the paper. ⇒"Loading and Printing on Sheets →P.8 "
How do I switch between printing on rolls and sheets?	Press the <b>Feeder Selection</b> button to switch the paper source between the roll and a sheet. ⇒"Selecting the Paper Source →P.631 "
How do I change the paper type or size?	Specify the type and size of paper, both on the Control Panel and in the printer driver. <ul style="list-style-type: none"> <li>• Specifying it in the printer driver ⇒"Specifying Paper in the Printer Driver →P.64 "</li> <li>• Specifying it on the Control Panel                             <ul style="list-style-type: none"> <li>Selecting the paper type ⇒"Selecting the Paper Type (Roll) →P.632 "</li> <li>⇒"Selecting the Paper Type (Sheet) →P.650 "</li> <li>Selecting the paper size ⇒"Specifying the Paper Length (Roll) →P.633 "</li> </ul> </li> </ul>
How do I cut the roll paper after printing?	You can wait until ink dries before cutting the roll, and you can cut rolls at a desired position. ⇒"Specifying the Cutting Method for Rolls →P.642 "
How do I print without borders?	Borderless printing is possible on rolls. You can also specify borderless printing in the printer driver by adjusting the original size to match the paper size. Before borderless printing, set the blue Switch on the platen to the ● side. Borderless printing is not supported on sheets. ⇒"Borderless Printing on Paper of Equivalent Size →P.100 " ⇒"Borderless Printing by Resizing Originals to Fit the Roll Width →P.107 " ⇒"Borderless Printing at Actual Size →P.91 " ⇒"Setting the Blue Switch on the Platen →P.872 "
How do I print an A4 original enlarged on A2 paper?	In the printer driver, you can adjust the original image to match the paper size or width, or you can specify enlargement or reduction before printing as desired. ⇒"Resizing Originals to Match the Paper Size →P.65 " ⇒"Resizing Originals to Fit the Roll Width →P.71 " ⇒"Resizing Originals by Entering a Scaling Value →P.77 "
How do I print without wasting paper?	To conserve paper, you can specify in the printer driver to rotate originals 90 degrees or to print without top and bottom margins. ⇒"Conserving Roll Paper by Rotating Originals 90 Degrees →P.167 " ⇒"Conserving Roll Paper by Printing Originals Without Top and Bottom Margins →P.173 "

12

850

Question	Answer
How do I print without wasting all the blank space on the right side when printing an A4-sized original at A3 size?	By specifying to rotate originals 90 degrees in the printer driver, you can print at A4 size to fill the width of A3 paper. ⇒"Conserving Roll Paper by Rotating Originals 90 Degrees →P.167 "
How do I print in landscape (or portrait) orientation?	You can print originals that are in landscape (or portrait) orientation automatically enlarged to fit the roll width. This is an easy way to create vertical or horizontal banners. ⇒"Printing Vertical or Horizontal Banners (Large-Format Printing) →P.115 "
How do I print on a custom paper size?	You can specify custom sizes temporarily in the printer driver. ⇒"Printing on Non-Standard Paper Sizes →P.124 "
How do I register custom paper sizes?	You can add desired sizes (Custom Paper Sizes) in the <b>Size Options</b> dialog box of the printer driver. ⇒"Printing on Non-Standard Paper Sizes →P.124 "
How do I print lines thicker?	By specifying <b>Thicken Fine Lines</b> in the printer driver, you can print fine lines thicker to make them easier to see. ⇒"Giving Priority to Particular Graphic Elements and Colors for Printing →P.55 "
How do I modify how colors are printed?	You can adjust colors as desired in the printer driver before printing. ⇒"Adjusting the Color in the Printer Driver →P.46 "
How do I use printer driver settings again in subsequent jobs?	By saving settings information in a favorite, you can apply the settings again before printing anytime as needed. ⇒"Using Favorites →P.196 "
Can I use the printer in combination with a <b>Color imageRUNNER</b> ?	The printer can be used for automatic enlargement and printing of scanned originals from a <b>Color imageRUNNER</b> . ⇒"Printing Enlargements of Scanned Originals from a Color imageRUNNER →P.298 " ⇒"Printing Enlargements of Scanned Originals from a Color imageRUNNER →P.535 "
How do I print enlargements of scanned originals from a <b>Color imageRUNNER</b> ?	By using Color imageRUNNER Enlargement Copy (iR enlargement copy), you can automatically print enlargements of scanned originals from a <b>Color imageRUNNER</b> . ⇒"Printing Enlargements of Scanned Originals from a Color imageRUNNER →P.298 " ⇒"Printing Enlargements of Scanned Originals from a Color imageRUNNER →P.535 "



## Problems Regarding Paper

Clearing Jammed Roll Paper .....	852
Clearing a Jammed Sheet .....	856
Troubleshooting When Paper Jams are not Found .....	858
Roll paper cannot be inserted into the Paper Feed Slot .....	860
Cannot Load Sheets .....	861
Paper is not cut straight .....	861
Paper is not cut .....	861
The Media Take-up Unit Continues Rotating .....	861
The size of clear film cannot be detected .....	862

## Clearing Jammed Roll Paper


If roll paper jams, follow the steps below to remove jams.




### Note

- If you do not find any scraps or jams, see "Troubleshooting When Paper Jams are not Found." →P.858

1. Turn the printer off. (See "Turning the Printer On and Off.") →P.694
2. Open the Top Cover.

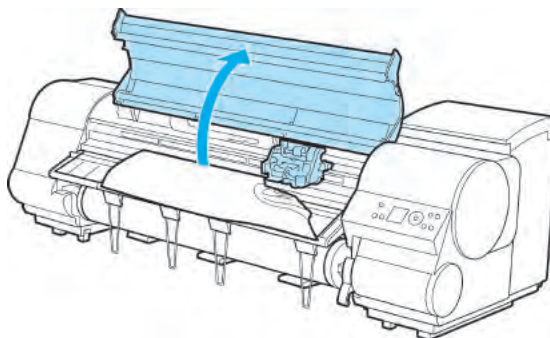


3. If the Carriage is out, move the Carriage out of the way, away from the paper.

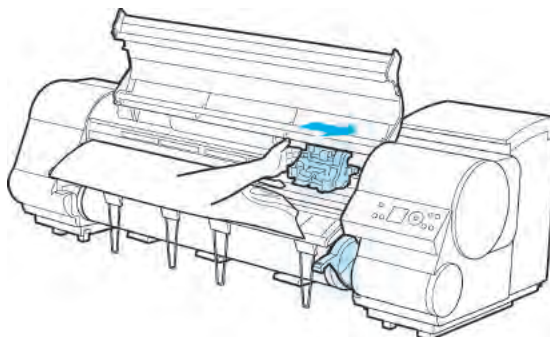




**Important**

- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

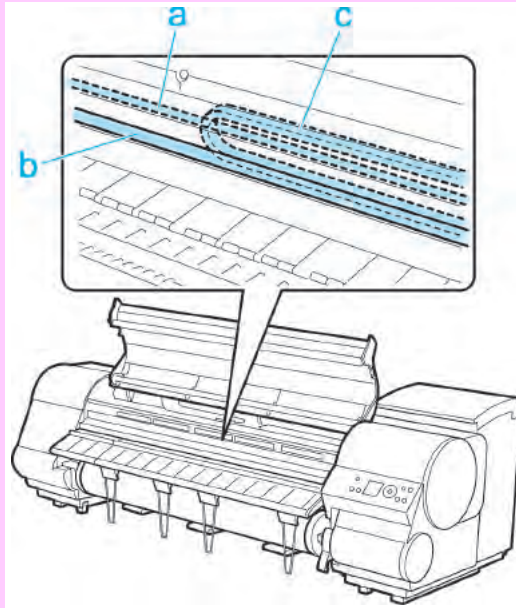


4. If the Cutter is out, move the Cutter to the right side, away from the paper.

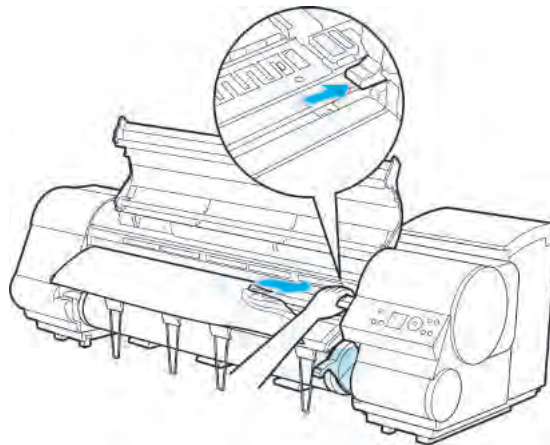


**Important**

- If the Cutter is on the left side, be sure to move it to the right. If the Cutter is on the left side when you turn the printer on, the printer may rip the paper.

**5.** Lift the Release Lever.

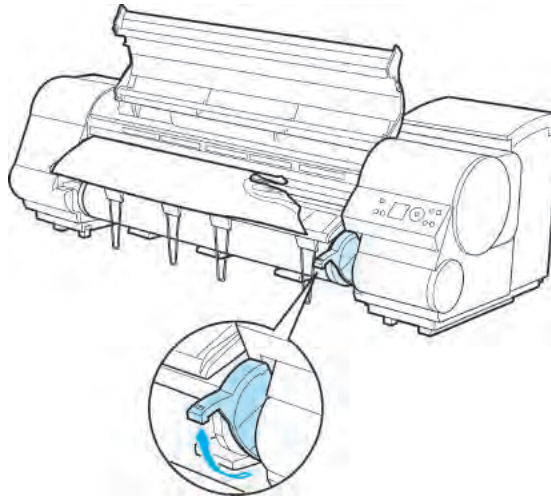


**6.** Holding the paper on both sides, pull the jammed portion out toward the front. Use a scissors or cutting tool to cut away the printed or wrinkled portion.

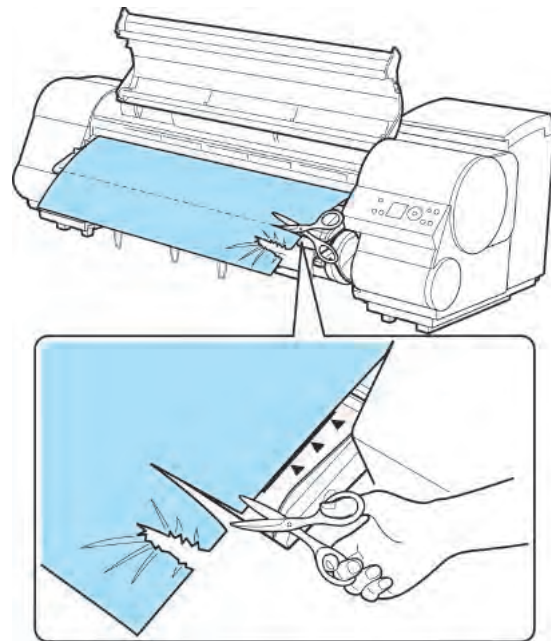

**Caution**

- When cutting paper, be careful to avoid injury and damaging the printer.


7. If the Carriage is on the left, move the Carriage to the right until it stops.

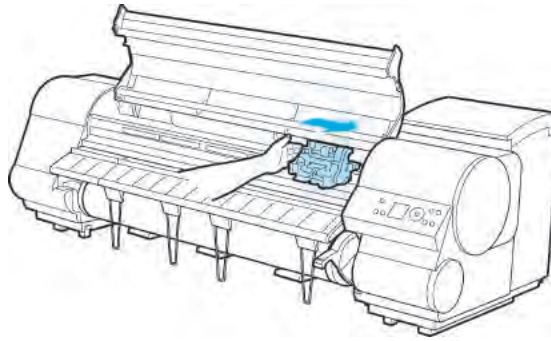

**Important**

- Always move the Carriage to the right side. If the Carriage is on the left, a Carriage error may occur when you turn on the printer.


8. Hold the edge of the roll paper in the middle as you gently pull it evenly to the position of the Ejection Guide (a). Align the right side of the roll paper with the Paper Alignment Line (b), keeping this side parallel to the line, and then lower the Release Lever.

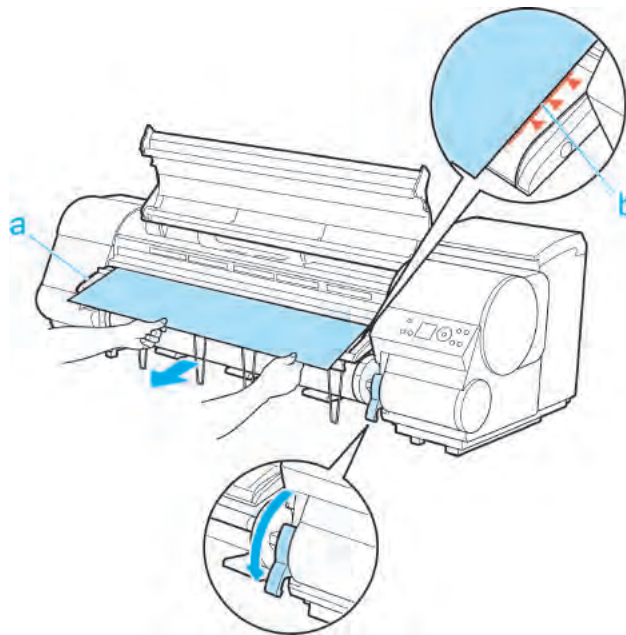

**Important**

- Do not force the roll paper into alignment with the Paper Alignment Line (b). This may prevent the paper from being advanced straight.
- If you pull out too much of the roll, an excessive amount will be cut away.

9. Close the Top Cover.

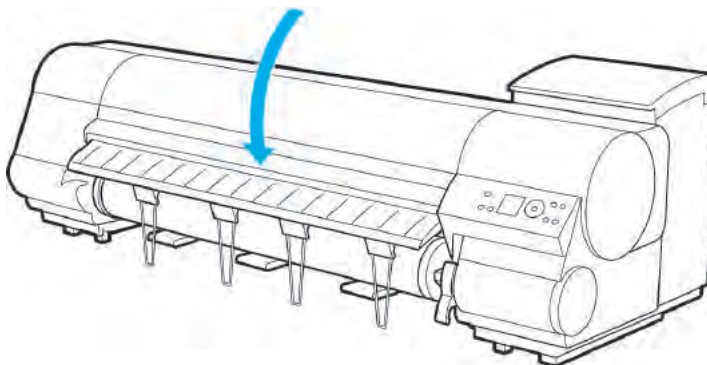

10. Turn the printer on. (See "Turning the Printer On and Off.") →P.694  
The roll is now advanced. After it is finished being advanced, you can resume printing.




**Note**

- You can ensure that the edge is cut neatly by selecting **Paper Cutting** in the printer menu. (See "Specifying the Cutting Method for Rolls.") →P.642


## Clearing a Jammed Sheet

If a sheet jams, follow the steps below to remove it.

1. Turn the printer off. (See "Turning the Printer On and Off.") →P.694
2. Open the Top Cover.

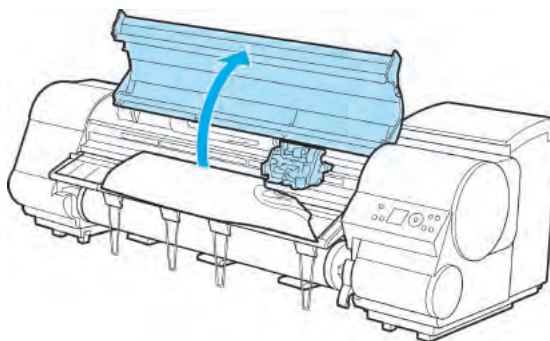

3. If the Carriage is out, move the Carriage out of the way, away from the paper.

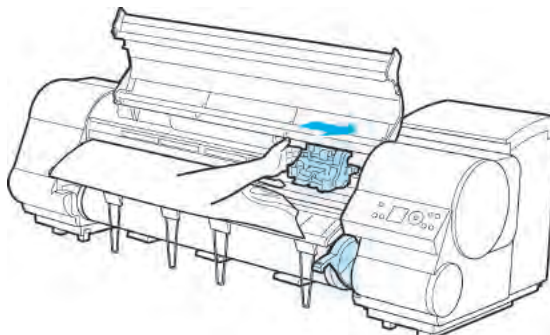







**Important**


- Do not touch the Linear Scale (a), Carriage Shaft (b), or Ink Tube Stabilizer (c). Touching these parts may damage them.

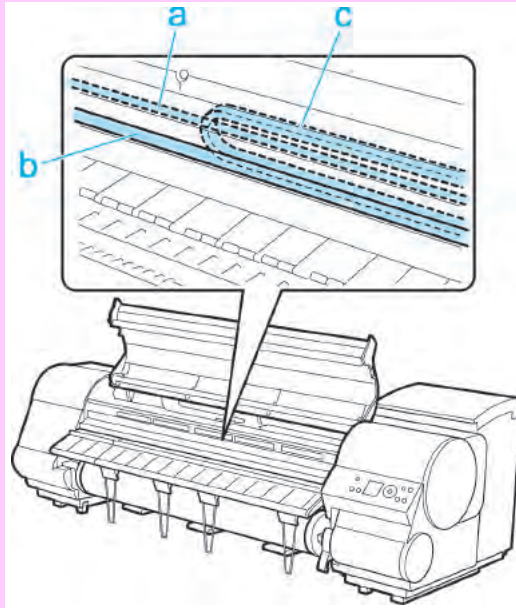

**4.** Lift the Release Lever.

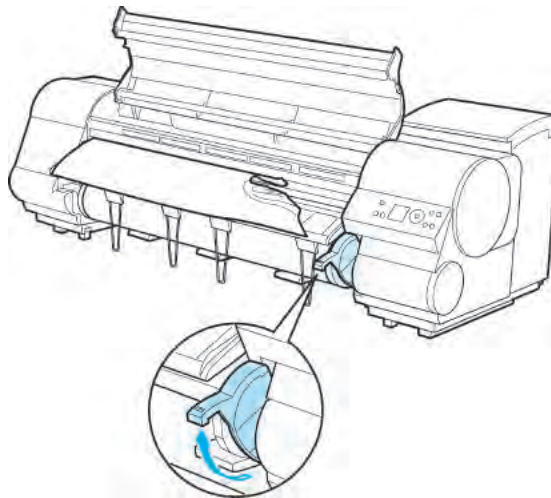

**5.** Hold the paper and pull it out, toward the front.

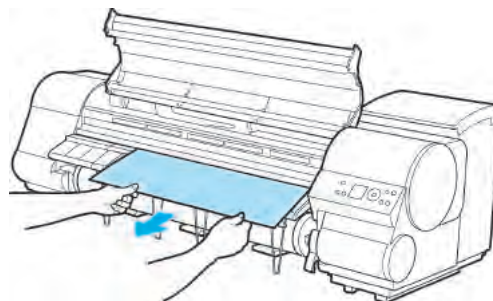




**Note**

- If you do not find any scraps or jams, see "Troubleshooting When Paper Jams are not Found."

→P.858


6. If the Carriage is on the left, move the Carriage to the right until it stops.

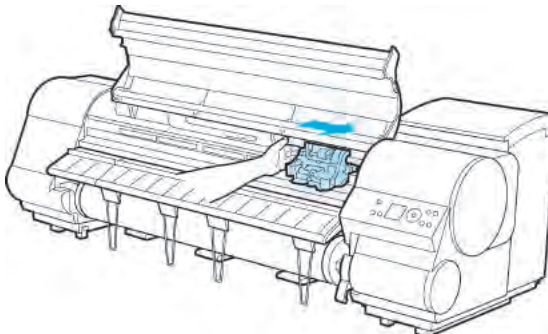

**Important**

- Always move the Carriage to the right side. If the Carriage is on the left, a Carriage error may occur when you turn on the printer.

7. Lower the Release Lever and close the Top Cover.

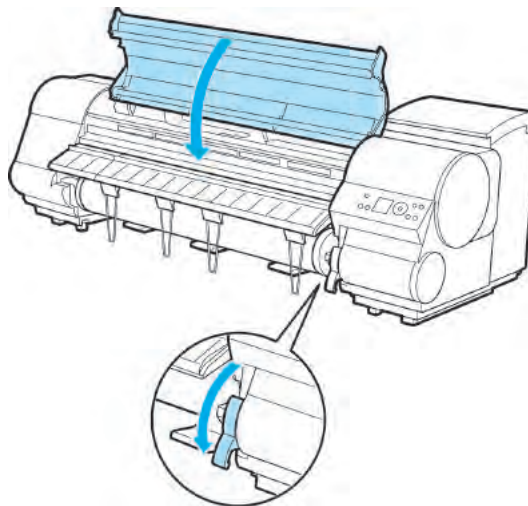

8. Turn the printer on. (See "Turning the Printer On and Off.") →P.694


## Troubleshooting When Paper Jams are not Found

If you cannot find a paper jam, search for the paper as follows.


1. Turn the printer off. (See "Turning the Printer On and Off.") →P.694




2. Check for paper in the lower part of the printer. Remove any jammed paper here by pushing it to the floor with your fingers.

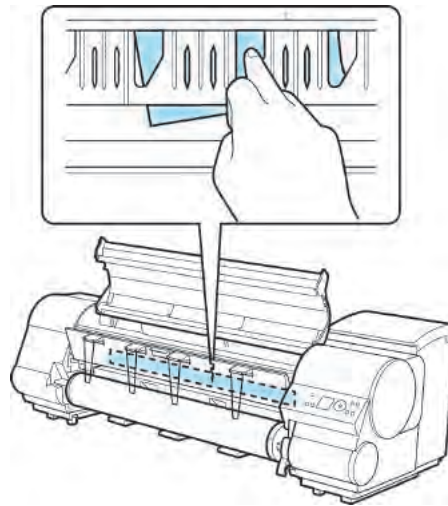

3. Lift the Release Lever.

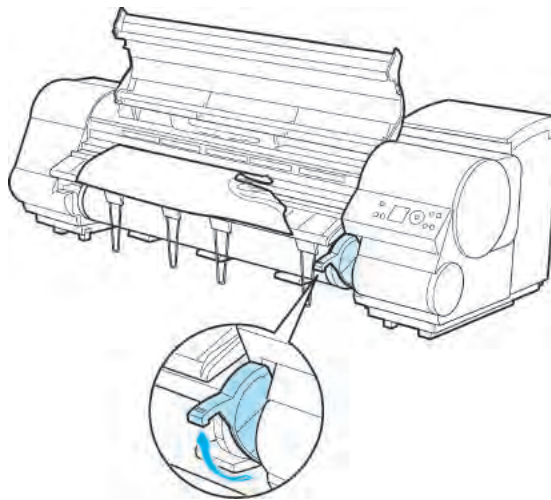

4. Open the Top Cover, and if there is a paper jam at the position shown, push it inside with your fingers.

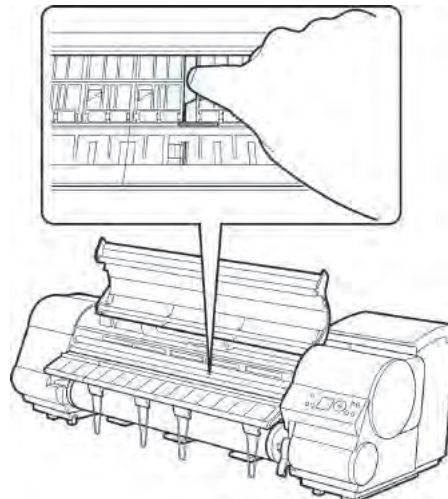


The paper will drop to the floor or to the lower part of the printer.




**Note**

- If there is paper left in the lower part of the printer, push it to the floor with your fingers.
- If the paper does not drop to the floor or to the lower part of the printer, fold an A4 sheet three times, insert it through the gap of the Platen (a) and the Paper Retainer (b), and push the jammed paper out.

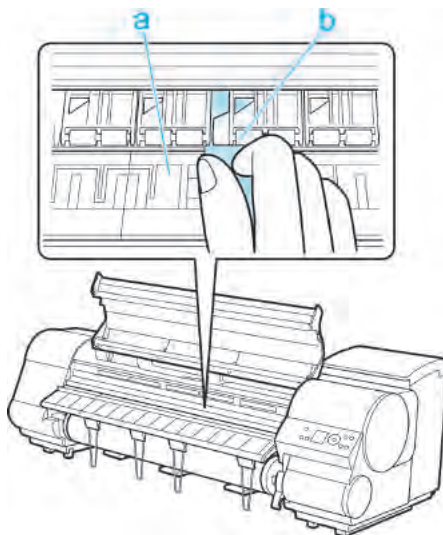

**5.** Lower the Release Lever and close the Top Cover.

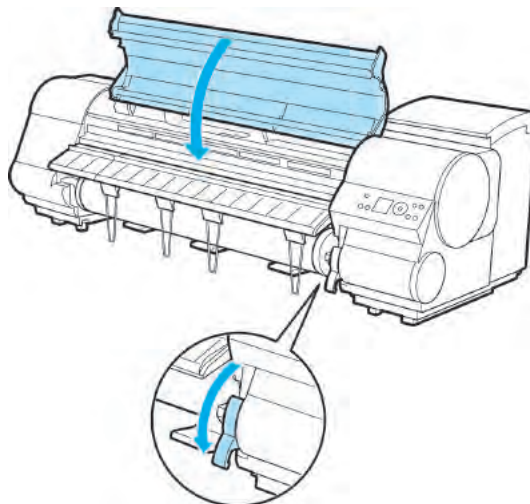

**6.** Turn the printer on. (See "Turning the Printer On and Off.") →P.694

**Roll paper cannot be inserted into the Paper Feed Slot**

Cause	Corrective Action
The roll paper is warped.	Straighten out curls and reload the roll.

## Cannot Load Sheets

Cause	Corrective Action
The paper source selection is incorrect.	Press the <b>Feeder Selection</b> button to activate the <b>Cut Sheet lamp</b> .

## Paper is not cut straight


Cause	Corrective Action
The paper is bent or curled at the cut position.	Straighten out any curling by the edges of the paper.
Paper rises by the ends of the cut position before it is cut.	Reload the paper correctly.

## Paper is not cut

Cause	Corrective Action
In the printer driver, <b>No</b> or <b>Print Cut Guideline</b> is specified in <b>Auto Cut</b> .	Specify <b>Yes</b> in <b>Auto Cut</b> in the printer driver.
In <b>MAIN MENU</b> , <b>Eject</b> or <b>Manual</b> is specified in <b>Cutting Mode</b> .	Specify <b>Automatic</b> in <b>Cutting Mode</b> in <b>MAIN MENU</b> .
Rolls are not cut when you are using the Media Take-up Unit.	Either execute <b>Paper Cutting</b> in the Control Panel or lift the Release Lever and cut the roll with scissors. (See "Removing Printed Documents from the Media Take-up Unit." →P.761)

## The Media Take-up Unit Continues Rotating

Cause	Corrective Action
There is a foreign object in the path of the Media Take-up Sensor (indicated by a dotted line).	Remove the foreign object from the Media Take-up Sensor path. Arrange the Basket Cloth and Basket Rod so they do not interfere with the Media Take-up Sensor.

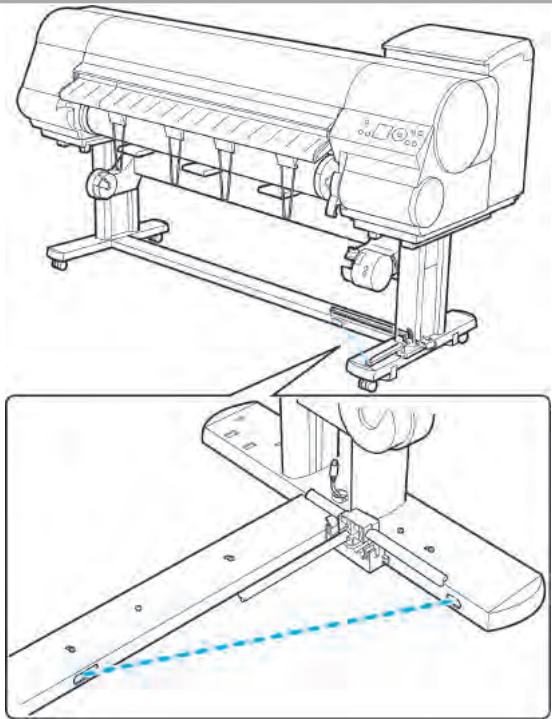Cause	Corrective Action
	<p>Remove the foreign object from the Media Take-up Sensor path. Arrange the Basket Cloth and Basket Rod so they do not interfere with the Media Take-up Sensor.</p>
<p>The Media Take-up Sensor cord is not connected to the Right Media Take-up Unit correctly.</p>	<p>Reconnect the Media Take-up Sensor cord as follows.</p> <ol style="list-style-type: none"> <li>1. Turn the printer off.</li> <li>2. Disconnect the Media Take-up Sensor cord from the Right Media Take-up Unit and reconnect it firmly, all the way in.</li> <li>3. Turn the printer on.</li> </ol> <p>(See "Using the Media Take-up Unit." →P.754)</p> <p>If the Media Take-up Unit continues rotating, contact your Canon dealer for assistance.</p>

12

### The size of clear film cannot be detected

Cause	Corrective Action
<p>The Platen is soiled with ink or other substances.</p>	<p>Open the Top Cover and clean the entire Platen. (See "Cleaning Inside the Top Cover." →P.837)</p>

## Printing does not start

The Data lamp on the Control Panel does not light up .....	863
The printer does not respond even if print jobs are sent .....	863
Ink Filling.. is displayed .....	863
The display screen indicates Agitating .....	864

### The Data lamp on the Control Panel does not light up

Cause	Corrective Action
The printer is not on.	Make sure the power cord is securely plugged in, all the way. Press the <b>Power</b> button to turn on the printer.
The target printer was not selected when printing. (The printer is in Sleep mode.)	In Windows, select the printer by clicking <b>Select Printer</b> or <b>Printer</b> in the printing dialog box and try printing again.
	In Mac OS X, open the dialog box of the printer driver, select the printer from the list of <b>Printer</b> , and try printing again.
The print job is paused. (The printer is in Sleep mode.)	In Windows, restart the print job as follows. <b>1.</b> Select the printer icon in the <b>Printers and Faxes</b> (or <b>Printers</b> ) window. <b>2.</b> Clear <b>Pause Printing</b> in the <b>File</b> menu to restart the print job.
	In Mac OS X, restart the print job as follows. <b>1.</b> Click <b>Print &amp; Fax</b> . (This is identified as <b>Printer Setup Utility</b> or <b>Print Center</b> in other versions of Mac OS X.) <b>2.</b> Select the printer, and then <b>Resume Printer</b> (or <b>Start Jobs</b> ) in the <b>Printers</b> menu to restart the print job.

### The printer does not respond even if print jobs are sent

Cause	Corrective Action
The printer is offline.	Press the <b>Online</b> button on the Control Panel to bring the printer online.
You have printed when select <b>Save in mail box</b> is selected in <b>Output Method</b> .	Print the job saved on the printer's hard disk. (See "Printing Saved Jobs.") →P.572

### Ink Filling.. is displayed

Cause	Corrective Action
The printer was forced off during operation.	Wait until the system has been filled with ink. This process may take about ten minutes.

## The display screen indicates Agitating

Cause	Corrective Action
Ink agitation is in progress.	The time for agitation varies depending on how long the printer has been turned off. (Between about a minute and a half to twenty minutes.) During agitation, you can print or do other operations after the printer goes <b>Online</b> .

## The printer stops during a print job

An error message is shown on the Display Screen ..... 865  
 The printer ejects blank, unprinted paper ..... 865

### An error message is shown on the Display Screen

Status	Corrective Action
An error message is displayed during printing.	Check the error message and take action as necessary. (See "Error Messages →P.891 .")
The last portion of roll paper was used during a print job, and paper could not be advanced because the trailing edge is taped to the roll.	Remove the used roll and insert a new roll. (See "Removing the Roll from the Printer." →P.634 (See "Removing the Roll Holder from Rolls." →P.637 (See "Loading and Printing on Rolls." →P.3

### The printer ejects blank, unprinted paper

Status	Corrective Action
The leading edge of the roll paper was cut to straighten it.	This operation is normal. The printer cuts the leading edge of the roll to straighten it and ejects the scraps when <b>Trim Edge First</b> in the printer menu is <b>On</b> or when <b>Trim Edge First</b> is <b>Automatic</b> and the leading edge is slanted. The printer is ready to print after this initial preparation. When <b>Off</b> is selected under <b>Trim Edge First</b> , the edge is not cut and scraps are not removed.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and make sure the Printhead is in good condition for printing. (See "Checking for Nozzle Clogging." →P.817 Clean the Printhead if the nozzles are clogged. (See "Cleaning the Printhead." →P.819
A print job was received from an incompatible printer driver.	Use the correct imagePROGRAF printer driver for the printer and try printing again.
The printer has received print data that includes HP RTL commands when <b>Auto Rotate</b> is <b>On</b> .	Set <b>Auto Rotate</b> to <b>Off</b> before attempting to print again. (See "Main Menu Settings." →P.722
The printer is damaged.	Contact your Canon dealer for assistance.



## Problems with the printing quality

Printing is faint .....	866
Paper rubs against the printhead .....	867
The edges of the paper are dirty .....	868
The surface of the paper is dirty .....	868
The back side of the paper is dirty .....	869
Printed colors are inaccurate .....	869
Banding in different colors occurs .....	870
Colors in printed images are uneven .....	870
Image Edges are Blurred or White Banding Occurs .....	871
Setting the Blue Switch on the Platen .....	872
The contrast becomes uneven during printing .....	875
The length of printed images is inaccurate .....	875
Documents are printed crooked .....	875
Documents are printed in monochrome .....	875
Line thickness is not uniform .....	876
Lines are misaligned .....	876
Problems with the printing quality caused by the type of paper .....	877

### Printing is faint

Cause	Corrective Action
You may be printing on the wrong side of the paper.	Print on the printing surface.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.817
Because the printer was left without ink tanks installed for some time, ink has become clogged in the ink supply system.	After the ink tanks have been installed for 24 hours, run <b>Head Cleaning B</b> . (See "Cleaning the Printhead.") →P.819
Paper is jammed inside the Top Cover.	Follow the steps below to remove the jammed piece of paper inside the Top Cover.  <ol style="list-style-type: none"> <li>1. Press the <b>Online</b> button to bring the printer offline.</li> <li>2. Open the Top Cover and make sure the Carriage is not over the Platen.</li> <li>3. Remove any scraps of paper inside the Top Cover. (See "Clearing Jammed Roll Paper.") →P.852 (See "Clearing a Jammed Sheet.") →P.856</li> <li>4. Close the Top Cover.</li> </ol>
During borderless printing, the ink was not dry enough before cutting.	Specify a longer drying period in the printer menu, in <b>Roll DryingTime</b> in <b>Paper Details</b> . (See "Main Menu Settings.") →P.722
Printing may be faint if <b>Print Quality</b> in <b>Advanced Settings</b> in the printer driver is set to <b>Standard</b> or <b>Draft</b> .	In <b>Advanced Settings</b> of the printer driver, choose <b>Highest</b> or <b>High</b> in <b>Print Quality</b> . Printing in <b>Draft</b> or <b>Standard</b> mode is faster and consumes less ink than in <b>Highest</b> or <b>High</b> modes, but the printing quality is lower.

Cause	Corrective Action
Printing may be faint if <b>Print Quality</b> in <b>Advanced Settings</b> in the printer driver is set to <b>Standard</b> or <b>Draft</b> .	(See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →P.55

## Paper rubs against the printhead

Cause	Corrective Action
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.  <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>
Paper has been loaded incorrectly, causing it to wrinkle.	Reload the paper. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
The Printhead is set too low.	In <b>Head Height</b> , choose <b>Automatic</b> . (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
You are printing on heavyweight paper or paper that curls or wrinkles easily after absorbing ink.	When printing on Heavyweight Coated Paper or other paper-based media, choose a <b>VacuumStrngth</b> setting of <b>Strong</b> or <b>Strongest</b> . If paper still rubs against the printhead, try raising the Printhead by setting <b>Head Height</b> to <b>Highest</b> . (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683 (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
	When printing on CAD Tracing Paper or other film-based media, choose a <b>VacuumStrngth</b> setting of <b>Standard</b> , <b>Strong</b> , or <b>Strongest</b> . If paper still rubs against the printhead, try raising the Printhead by setting <b>Head Height</b> to <b>Highest</b> . (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683 (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
	When printing on paper 0.1 mm (0.004 in) thin or thinner, choose a <b>VacuumStrngth</b> setting of <b>Weakest</b> . If paper still rubs against the printhead, try raising the Printhead by setting <b>Head Height</b> to <b>Highest</b> . (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683 (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
When you have loaded paper, the paper you have loaded does not match the type selected on the Display Screen.	Be sure to select the correct type of paper in the printer menu when loading paper. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651

## The edges of the paper are dirty

Cause	Corrective Action
The Platen has become dirty after borderless printing or printing on small paper.	Open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.837
The paper type as specified on the printer does not match the type specified in the printer driver.	Make sure the same paper type is specified on the printer as in the printer driver. (See "Selecting the Paper Type (Roll).") →P.632 (See "Selecting the Paper Type (Sheet).") →P.650
	Make sure the same paper type is specified in the printer driver as on the printer. <b>1.</b> Hold down the <b>Stop</b> button for a second or more to cancel printing. <b>2.</b> Change the paper type in the printer driver and try printing again.
The paper is wrinkled or warped.	Straighten out the wrinkles or curls and reload the paper. Do not use paper that has been printed on previously. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
A cut line is printed because the function to reduce cutting dust has been activated.	If this function is not needed, deactivate <b>CutDustReduct.</b> through the printer menu. (See "Main Menu Settings.") →P.722
The Printhead is set too low.	In <b>Head Height</b> , choose <b>Automatic</b> . (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
You are printing on heavyweight paper or paper that curls or wrinkles easily after absorbing ink.	When printing on Heavyweight Coated Paper or other paper-based media, choose a <b>VacuumStrngth</b> setting of <b>Strong</b> or <b>Strongest</b> . If paper still rubs against the printhead, try raising the Printhead by setting <b>Head Height</b> to <b>Highest</b> . (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683 (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
	When printing on CAD Tracing Paper or film-based media, choose a <b>VacuumStrngth</b> setting of <b>Standard</b> , <b>Strong</b> , or <b>Strongest</b> . If paper still rubs against the printhead, try raising the Printhead by setting <b>Head Height</b> to <b>Highest</b> . (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683 (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
The Ejection Guide is soiled.	Clean the Ejection Guide. (See "Cleaning the Printer Exterior.") →P.837

12

## The surface of the paper is dirty

Cause	Corrective Action
The Paper Retainer is soiled.	Clean the Paper Retainer. (See "Cleaning Inside the Top Cover.") →P.837
You are using a paper that does not dry easily.	In the Control Panel menu, set <b>Roll DryingTime</b> to at least <b>1 min</b> . (See "Main Menu Settings.") →P.722
	When paper that does not dry easily is used for printing, it may curl during printing and touch the Output Tray.

Cause	Corrective Action
You are using a paper that does not dry easily.	In this case, in the Control Panel menu, complete the settings for <b>Dry time</b> and <b>Area</b> in <b>Scan Wait Time</b> . However, note that printing will now take longer. (See "Main Menu Settings.") →P.722

### The back side of the paper is dirty

Cause	Corrective Action
The Platen has become dirty after borderless printing or printing on small paper.	Open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.837  Set <b>CarriageScanWdth</b> to <b>Fixed</b> .
The Platen has become soiled due to printing on the Platen because width detection is deactivated.	Activate width detection, and open the Top Cover and clean the Platen. (See "Cleaning Inside the Top Cover.") →P.837  Open the Top Cover and clean the Platen. After this, manually advance the roll onto the Platen before printing. (See "Cleaning Inside the Top Cover.") →P.837 (See "Feeding Roll Paper Manually.") →P.638
The Paper Retainer is soiled.	Clean the Paper Retainer. (See "Cleaning Inside the Top Cover.") →P.837

### Printed colors are inaccurate

Cause	Corrective Action
Color adjustment has not been activated in the <b>Advanced Settings</b> of the printer driver.	In the <b>Advanced Settings</b> of the printer driver, access <b>Color Settings</b> in <b>Color Mode</b> to adjust colors.
Colors have not been adjusted on the computer or monitor.	Refer to the computer and monitor documentation to adjust the colors.  Adjust the settings of the color management software, referring to the software documentation as needed.
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.817
In the Windows printer driver, <b>Application Color Matching Priority</b> is not selected.	Click <b>Special Settings</b> on the <b>Layout</b> sheet of the printer driver and select <b>Application Color Matching Priority</b> in the dialog box.
Printhead characteristics gradually change through repeated use, and colors may change.	Adjust the Printhead alignment. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668 (See "Manual Straightening of Lines and Colors (Manual Head Adj.).") →P.670

Cause	Corrective Action
Color may change slightly even on the same model of printer if you use a different version of the firmware or printer driver, or when you print under different settings or in a different printing environment.	<p>Follow these steps to prepare the printing environment.</p> <ol style="list-style-type: none"> <li>1. Use the same version of firmware or printer driver.</li> <li>2. Specify the same value for all settings items.</li> </ol>

## Banding in different colors occurs

Cause	Corrective Action
The paper feed amount is out of adjustment.	Adjust the feed amount. (See "Adjusting the Feed Amount.") →P.676
Printing does not proceed smoothly because print jobs are interrupted during transmission.	Exit other applications and cancel other print jobs.
In the printer menu, <b>Print Length</b> is specified in <b>Feed Priority</b> .	Selecting <b>Band Joint</b> may improve printing results. Adjust the feed amount in the printer menu by specifying <b>Band Joint</b> in <b>Feed Priority</b> and try printing again. (See "Adjusting the Feed Amount.") →P.676
The Printhead is out of alignment.	Adjust the Printhead alignment. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668
The Printhead nozzles are clogged.	Print a test pattern to check the nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.817
Streaks may occur if you set the <b>Print Quality</b> too low.	Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver and try printing again. Printing in <b>Draft</b> or <b>Standard</b> mode is faster and consumes less ink than in <b>Highest</b> or <b>High</b> modes, but the printing quality is lower. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →P.55
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	<p>Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.</p> <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>

12

870

## Colors in printed images are uneven

Cause	Corrective Action
<b>Line Drawing/Text</b> is selected when printing images in many solid colors.	Specify <b>Image</b> in the printer driver.

Cause	Corrective Action
You are printing on paper that curls easily.	Printed colors may appear uneven on the leading edge of paper that is susceptible to curling. Increase the level of vacuum holding the paper against the Platen or specify a margin of 20 mm (0.79 in.) or more for the leading edge. (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683
Printed colors may be uneven if you set the <b>Print Quality</b> too low.	Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver. Printing in <b>Draft</b> or <b>Standard</b> mode is faster and consumes less ink than in <b>Highest</b> or <b>High</b> modes, but the printing quality is lower. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →P.55
Color may be uneven between dark and light image areas.	Select <b>Unidirectional Printing</b> in the <b>Advanced Settings</b> of the printer driver.
When borderless printing is used, the edge of the paper is cut during printing. Thus, ink density may be uneven at the edges.	Specify <b>No</b> in <b>Auto Cut</b> in the printer driver before printing. In this case, the paper can be printed without borders on the left and right sides only. Cut the printed document ejected from the printer, then use scissors to cut away the edges on the top and bottom.
	Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →P.55
The Printhead is out of alignment.	Adjust the Printhead alignment. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668
Drying documents stacked on each other may cause uneven colors.	To avoid uneven colors, we recommend drying each sheet separately.
Color density may be uneven if you use Glossy Paper, art paper, or Coated Paper.	In <b>Advanced Settings</b> of the printer driver, choose <b>Highest</b> or <b>High</b> in <b>Print Quality</b> .
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer. <b>1.</b> Hold down the <b>Stop</b> button for a second or more to cancel printing. <b>2.</b> Change the type of paper in the printer driver and try printing again.
<b>Scan Wait Time &gt; Area</b> in the Control Panel menu is set to <b>Leading edge</b> .	When <b>Scan Wait Time &gt; Area</b> is set to <b>Leading edge</b> , colors may be uneven 110–160 mm from the leading edge. (The position varies depending on the <b>Print Quality</b> setting.) In this case, select <b>Scan Wait Time &gt; Area &gt; Entire area</b> . However, note that printing will now take longer. (See "Main Menu Settings.") →P.722

### Image Edges are Blurred or White Banding Occurs

Cause	Corrective Action
The Platen suction is too strong.	Set <b>VacuumStrngth</b> to <b>Weakest</b> . (See "Adjusting the Vacuum Strength (VacuumStrngth).") →P.683

Cause	Corrective Action
The Platen suction is too strong.	Close the blue Switch on the platen so that it matches the paper size. (See "Setting the Blue Switch on the Platen.") →P.872
The Printhead is set too high.	Lower the Printhead. (See "Troubleshooting Paper Abrasion and Blurry Images (Head Height).") →P.675
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.  <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>

## Setting the Blue Switch on the Platen

If printed documents exhibit the following symptoms, adjust the setting of the blue Switch on the Platen.

- Image edges are blurred
- Image edges are affected by white banding




### Important

- Always set the blue Switch on the Platen to the ● side for borderless printing. Printing quality may be affected if the Switch is incorrectly set.


1. Remove any loaded paper that will not be used.
  - Rolls (See "Removing the Roll from the Printer.") →P.634
  - Sheet (See "Removing Sheets.") →P.656

2. Open the Top Cover.

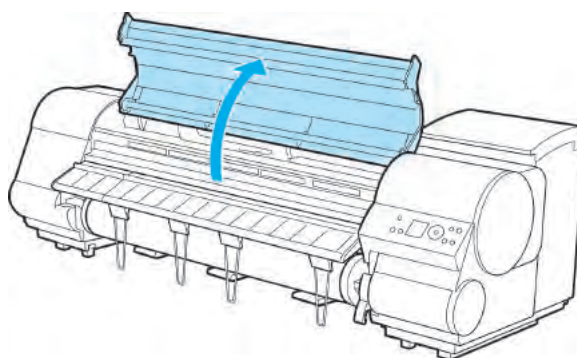





**3.** Remove the Cleaning Brush.

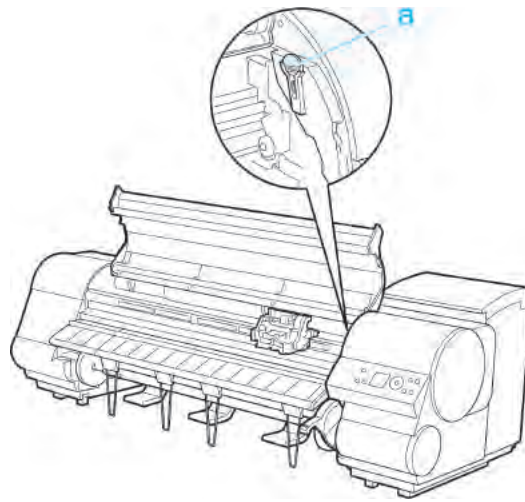

**4.** Using the back of the Cleaning Brush, move the first Switch to the side opposite ●.

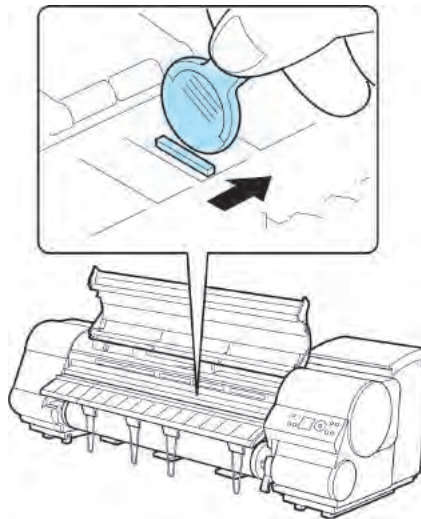

5. Refer to the following table to confirm the number on the Platen that corresponds to the size of paper for printing.

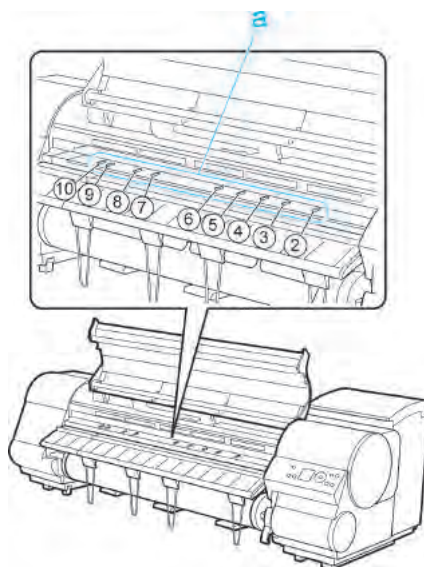


Number	Paper Size	Dimensions
2	<b>10"x12" / 8"x10"</b>	254 mm (10 in.)
3	<b>14"x17"</b>	355 mm (14 in.)
4	<b>17-in. Roll (431.8mm) / ANSI C</b>	432 mm (17 in.)
5	<b>JIS B2 / JIS B3</b>	515 mm (20 in.)
6	<b>ISO A1 / ISO A2 / 20"x24"</b>	594 mm (23 in.) / 610 mm (24 in.)
7	<b>ISO A0 / ISO A1</b>	841 mm (33 in.)
8	<b>36"x48" (ARCH E) / 24"x36" (ARCH D)</b>	914 mm (36 in.)
9	<b>JIS B0 / JIS B1</b>	1030 mm (40.5 in.)
10	<b>Poster 42"x60"</b>	1,067 mm (42 in.)

6. Using the back of the Cleaning Brush, move the Switch to the side opposite ●, corresponding to the size of the paper for printing.

In this case, note that you will move the switch in the opposite direction from the direction in step 4.

7. Close the Top Cover.

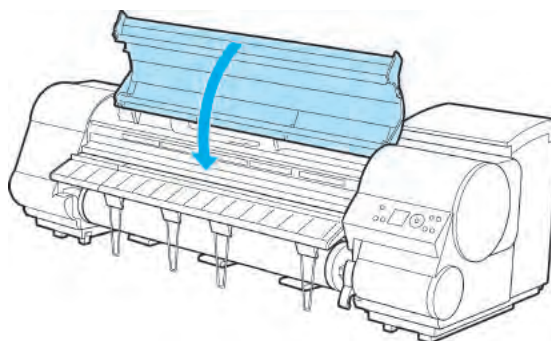

## The contrast becomes uneven during printing

Cause	Corrective Action
The paper feed amount is out of adjustment.	Adjust the feed amount. (See "Adjusting the Feed Amount.") →P.676
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.  <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>

## The length of printed images is inaccurate

Cause	Corrective Action
In the printer menu, <b>Band Joint</b> is specified in <b>Feed Priority</b> .	To ensure the feed amount matches the paper size, select <b>Print Length</b> in <b>Feed Priority</b> in the printer menu and enter the amount for adjustment in <b>Adjust Length</b> . (See "Adjusting the Feed Amount.") →P.676 You can adjust the feed amount in 0.02% increments. (See "Main Menu Settings.") →P.722
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer.  <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>

## Documents are printed crooked

Cause	Corrective Action
Skew <b>Skew Check Lv.</b> has been set to <b>Loose</b> or <b>Off</b> .	Choose <b>Standard</b> in <b>Skew Check Lv.</b>
<b>Width Detection</b> has been set to <b>Off</b> .	Choose <b>On</b> in <b>Width Detection</b> .

## Documents are printed in monochrome

Cause	Corrective Action
In the <b>Advanced Settings</b> of the printer driver, <b>Monochrome</b> , <b>Monochrome (BK ink)</b> , or <b>Monochrome Bitmap</b> is specified in <b>Color Mode</b> .	In the <b>Advanced Settings</b> of the printer driver, specify <b>Color</b> in <b>Color Mode</b> and try printing again.

Cause	Corrective Action
The Printhead nozzles are clogged.	Print a test pattern to check the color ink nozzles and see if they are clogged. (See "Checking for Nozzle Clogging.") →P.817

### Line thickness is not uniform

Cause	Corrective Action
In the <b>Special Settings</b> dialog box of the Windows printer driver, <b>Fast Graphic Process</b> is selected.	Open the printer driver's <b>Properties</b> dialog box from <b>Print</b> in the application software's <b>File</b> menu, and try printing following the steps below. <ol style="list-style-type: none"> <li>1. Clear the option <b>Open Preview When Print Job Starts</b> on the <b>Main</b> sheet.</li> <li>2. Clear the option <b>Page Layout</b> on the <b>Layout</b> sheet.</li> <li>3. Click the <b>Special Settings</b> button on the <b>Layout</b> sheet to display the <b>Special Settings</b> dialog box. Clear the option <b>Fast Graphic Process</b>.</li> </ol>
The blue Switch on the platen is set incorrectly.	Move the Switch numbered corresponding to the size of paper for printing opposite to the ● position. (See "Setting the Blue Switch on the Platen.") →P.872
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer. <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>

### Lines are misaligned

Cause	Corrective Action
The Printhead alignment is not adjusted.	Adjust the Printhead alignment. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668 (See "Manual Straightening of Lines and Colors (Manual Head Adj.).") →P.670 (See "Adjusting Line Misalignment (Head Inc. Adj.).") →P.672
The type of paper specified in the printer driver does not match the type loaded in the printer.	Load paper of the same type as you have specified in the printer driver. (See "Loading Rolls in the Printer.") →P.628 (See "Loading Sheets in the Printer.") →P.651
	Make sure the same type of paper is specified in the printer driver as you have loaded in the printer. <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the type of paper in the printer driver and try printing again.</li> </ol>

## Problems with the printing quality caused by the type of paper

For paper-specific troubleshooting tips to improve the printing quality, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617

## Cannot print over a network

Cannot connect the printer to the network ..... 878  
 Cannot print over a TCP/IP network ..... 878  
 Cannot print over a NetWare network ..... 879  
 Cannot print over AppleTalk or Bonjour networks ..... 879

### Cannot connect the printer to the network

Cause	Corrective Action
The Ethernet cable is not connected correctly to the printer's Ethernet port.	<ol style="list-style-type: none"> <li>1. Make sure the printer is connected to the network with the correct Ethernet cable, and then turn the printer on. For instructions on connecting the cable, refer to the Setup Guide.</li> <li>2. Make sure the Link indicator is lit.                      The Link indicator is green if the printer is connected via 100 Base-TX and orange if connected via 10Base-T.                      If the Link indicator is not lit, check the following points.                     <ul style="list-style-type: none"> <li>• Make sure the hub is on.</li> <li>• Make sure the end of the Ethernet cable is connected correctly.                              Insert the Ethernet cable until it clicks and locks in place.</li> <li>• Make sure there is no problem with the Ethernet cable.                              If there is any problem, replace the Ethernet cable.</li> <li>• Check the communication mode with the hub.                              Although the printer normally detects the hub communication mode and transmission rate automatically (in auto negotiation mode), sometimes the hub settings cannot be detected. In this case, configure the connection method manually, specifying the communication mode in use.                              (See "Configuring the Communication Mode Manually.") →P.780</li> </ul> </li> </ol>

## 12 Cannot print over a TCP/IP network

Cause	Corrective Action
The printer's IP address is not configured correctly.	Make sure the printer's IP address is configured correctly. (See "Configuring the IP Address Using imagePROGRAF Device Setup Utility.") →P.404 (See "Configuring the IP Address Using the Printer Control Panel.") →P.774
The printer's TCP/IP network settings are not configured correctly.	Make sure the printer's TCP/IP network settings are configured correctly. (See "Configuring the Printer's TCP/IP Network Settings.") →P.777
The computer you are trying to print from is not configured correctly.	Make sure the computer's TCP/IP network settings are configured correctly. (See "Configuring the Printer Driver Destination .") →P.783 (See "Configuring the Destination for TCP/IP Network .") →P.797

## Cannot print over a NetWare network

Cause	Corrective Action
The printer's NetWare settings are not configured correctly.	Make sure the printer's NetWare settings are configured correctly. In particular, make sure a valid frame type is selected. (See "Configuring the Printer's NetWare Network Settings.") →P.784
The computer you are trying to print from is not configured correctly.	Make sure the computer's NetWare settings are configured correctly. (See "Configuring NetWare Network Settings.") →P.791
The NetWare server and services are not configured correctly.	Check the following points. <ol style="list-style-type: none"> <li>1. Make sure the NetWare file server is running.</li> <li>2. Make sure there is enough free disk space on the NetWare file server. Insufficient disk space may prevent you from processing large print jobs.</li> <li>3. Start NWADMIN or PCONSOLE and confirm that the print service is configured correctly and the print queue is available.</li> <li>4. If data transmission to a printer on another subnet fails, deactivate NCP burst mode in that printer's network protocol settings.</li> <li>5. If the printer is used in queue server mode, specify <b>Other/Unknown</b> as the printer type.</li> </ol>

## Cannot print over AppleTalk or Bonjour networks

Cause	Corrective Action
The AppleTalk protocol is not enabled on the printer.	Activate AppleTalk on the printer. (See "Configuring the Printer's AppleTalk Network Settings.") →P.793
The computer you are trying to print from is not configured correctly.	Make sure the computer's AppleTalk settings are configured correctly. (See "Configuring the Destination for AppleTalk Networks .") →P.794 (See "Configuring the Destination for Bonjour Network .") →P.800
The computer and printer are not on the same network.	Due to the nature of Bonjour, you cannot print if the printer is on another network behind a router. Make sure the computer and printer are on the same network. For information about network settings, ask your network administrator.



## Installation problems

Removing Installed Printer Drivers ..... 880

### Removing Installed Printer Drivers

Follow these steps to remove installed printer drivers and utilities.

#### Removing printer drivers (Windows)

Remove the printer driver as follows.



**Note**

- In Windows 2000/Windows XP/Windows Server 2003/Windows Vista/Windows Server 2008, you must log on with administrative rights, such as those of the Administrator account.

1. From the Windows **start** menu, select **Programs > Canon Printer Uninstaller > imagePROGRAF Printer Driver Uninstaller** to display the **Delete Printer** window.
2. Select the printer in the list and click **Delete**.
3. Click **Yes** after the **Warning** message is displayed.
4. Make sure that the printer has been removed from the list, and then click **Exit**.

#### Removing printer drivers and imagePROGRAF Printmonitor (Macintosh)

Remove the printer driver or imagePROGRAF Printmonitor as follows.

1. Insert the User Software CD-ROM provided with the printer in the CD-ROM drive.
2. Start the printer driver installer included in the User Software CD-ROM. Open the **OS X** folder and double-click **iPF Driver Installer X**.
3. In the upper left menu, choose **Uninstall**, and then click **Uninstall**.
4. Follow the instructions on the screen to remove the printer driver or imagePROGRAF Printmonitor.

#### Removing imagePROGRAF Status Monitor (Windows)

Remove imagePROGRAF Status Monitor as follows.



**Note**

- The following instructions are for Windows XP. The method of removing printer drivers varies depending on the version of Windows.

1. Select **Control Panel** from the **start** menu.
2. Select **Add or Remove Programs**.

3. Select **imagePROGRAF Status Monitor**, and then click the **Change/Remove** button.

### Removing imagePROGRAF Device Setup Utility (Windows)

Remove imagePROGRAF Device Setup Utility as follows.

1. From the Windows **start** menu, select **Programs > imagePROGRAF Device Setup Utility > Uninstaller (image-PROGRAF Device Setup Utility)** to start the wizard.
2. In the wizard window, click **Delete**, and then click **Next**.
3. Follow the instructions on the screen to remove imagePROGRAF Device Setup Utility.

## HP-GL/2 problems

Lines or images are missing in the HP-GL/2 data that was printed. .... 882

Lines Are Printed Too Thick or Thin During HP-GL/2 Printing ..... 882

HP-GL/2 jobs are printed in monochrome (or color). .... 882

Printed Colors in Line Drawings are Inaccurate During HP-GL/2 Printing ..... 882

HP-GL/2 jobs are printed 6 mm larger than specified ..... 883

HP-GL/2 jobs are printed at maximum size, even if a standard size is specified ..... 883

HP-GL/2 printing takes a long time. .... 883

The printer stops when printing a HP-GL/2 job (the carriage stops moving) ..... 883

### Lines or images are missing in the HP-GL/2 data that was printed.

Cause	Corrective Action
The memory is full.	Check the size of the data in the print job.
An HP-GL/2 command not supported by this printer was received.	Check the print job and settings.
The printer has received print data that includes HP RTL commands when <b>Auto Rotate</b> is <b>On</b> .	Set <b>Auto Rotate</b> to <b>Off</b> before attempting to print again. (See "Main Menu Settings.") →P.722

### Lines Are Printed Too Thick or Thin During HP-GL/2 Printing

Cause	Corrective Action
The <b>Line Width</b> setting in the main menu is incorrect.	Confirm the selection in <b>Line Width</b> . If fine lines are printed faint, setting <b>ThickenFineLines</b> to <b>On</b> in the main menu will print the lines more distinctly. (See "Main Menu Settings.") →P.722

12

### HP-GL/2 jobs are printed in monochrome (or color).

Cause	Corrective Action
The <b>Color Mode</b> is incorrect.	On the printer Control Panel, check the <b>Color Mode</b> setting. (See "Main Menu Settings.") →P.722 However, for optimal Printhead performance, the printer consumes trace amounts of color ink even when <b>Monochrome</b> is selected as <b>Color Mode</b> .

882

### Printed Colors in Line Drawings are Inaccurate During HP-GL/2 Printing

Cause	Corrective Action
<b>AdjustFaintLines</b> in the main menu is set to <b>On</b> .	Selecting <b>Off</b> may help produce the expected results. However, lines in some colors may appear broken.

### HP-GL/2 jobs are printed 6 mm larger than specified

Cause	Corrective Action
The page size of the HP-GL/2 print job, as created in the source application, is incorrect.	In <b>MAIN MENU</b> , set <b>PageSizeProcess1</b> to <b>On</b> . (See "Main Menu Settings.") →P.722

### HP-GL/2 jobs are printed at maximum size, even if a standard size is specified

Cause	Corrective Action
The page size of the HP-GL/2 print job, as created in the source application, is incorrect.	In <b>MAIN MENU</b> , set <b>PageSizeProcess2</b> or <b>Conserve Paper</b> to <b>On</b> . The layout will be changed to the optimal layout. (See "Main Menu Settings.") →P.722

### HP-GL/2 printing takes a long time.

Cause	Corrective Action
Large print jobs with a lot of data take longer to print.	On the printer Control Panel, set <b>Input Resolution</b> to <b>300dpi</b> . (See "Main Menu Settings.") →P.722

### The printer stops when printing a HP-GL/2 job (the carriage stops moving)

Cause	Corrective Action
The printer is analyzing the print job.	Either wait a while for printing to resume, or on the printer Control Panel, set <b>Input Resolution</b> to <b>300dpi</b> . (See "Main Menu Settings.") →P.722

## Other problems

The printer does not go on ..... 884

If the Printer Makes a Strange Sound ..... 885

Messages advising to check the maintenance cartridge are not cleared ..... 885

The printer consumes a lot of ink ..... 886

Ink level detection ..... 886

### The printer does not go on

Cause	Corrective Action
The printer is unplugged.	Plug the power cord into the outlet, and then turn on the printer.
The specified voltage is not supplied.	Check the voltage of the outlet and breaker. (See "Specifications.") →P.765

## If the Printer Makes a Strange Sound

Cause	Corrective Action
<p>The printer makes a sound during operation.</p>	<p>The following sounds do not indicate a problem with the printer.</p> <ul style="list-style-type: none"> <li>• There is a sound of vacuum from the Platen To prevent paper from rising, paper is held against the Platen by suction from Vacuum holes under it.</li> <li>• There is a sound when a different size of paper is used and when the Carriage goes from side to side This may happen especially when using B0 or 44-inch paper. When paper of a different size is used, a valve is automatically activated to switch the area for paper suction, which may make a sound. This mechanism prevents vacuum from Vacuum holes where there is no paper. In addition, ink is ejected in sync with the movement of the Carriage back and forth to ensure optimal ink flow. At this time, the valve automatically switches the area for paper suction, which may make a sound.</li> <li>• Roll paper makes a fluttering sound during printing There may be a fluttering sound when large paper is advanced.</li> <li>• You suddenly hear the tone for cleaning operations At regular intervals, for printer maintenance, cleaning operations will begin automatically, even if the printer is in Sleep mode.</li> <li>• You suddenly hear the tone for ink agitation At regular intervals, to ensure optimal printing quality, the ink is agitated automatically, even if the printer is in Sleep mode. Ink agitation takes about a minute and a half. The ink is also agitated automatically under the following conditions. Note that other operations are not possible while "Agitating" is displayed on the control panel.                         <ul style="list-style-type: none"> <li>• After the printer is turned on. (The time for agitation varies depending on how long the printer has been turned off—between about a minute and a half to twenty minutes. During agitation, you can print or do other operations after the printer goes <b>Online</b>.)</li> <li>• After data transmission. (After about a minute and a half, the printer goes <b>Online</b>, and printing operations begin. However, printing may start later after data reception, depending on the size of print data.)</li> <li>• After ink tank replacement. (Ink agitation takes about three and a half minutes. During agitation, you can print or do other operations after the printer goes <b>Online</b>.)</li> </ul> </li> </ul> <p>In other cases, contact your Canon dealer.</p>

## Messages advising to check the maintenance cartridge are not cleared

Cause	Corrective Action
<p>The printer has not detected the new Maintenance Cartridge that was used to replace the old one.</p>	<p>Remove the new Maintenance Cartridge you have just installed and insert it again firmly.</p> <p>Restart the printer.</p>

## The printer consumes a lot of ink

Cause	Corrective Action
Many full-page color images are printed.	In print jobs such as photos, images are filled with color. This consumes a lot of ink. This does not indicate a problem with the printer.
<b>Head Cleaning B</b> is used often.	<b>Head Cleaning B</b> consumes a lot of ink. This does not indicate a problem with the printer. Unless the printer has been moved or stored for a long period or you are troubleshooting Printhead problems, we recommend not performing <b>Head Cleaning B</b> , to the extent possible.
You have just finished initial installation, when more ink is consumed to fill the system.	After initial installation or at the first-time use after transfer, ink flows into the system between the Ink Tank and Printhead, which may cause the ink level indicators to drop to 80%. This does not indicate a problem with the printer.
The printhead nozzles are clogged.	Check for nozzle clogging. (See "Checking for Nozzle Clogging.") →P.817

## Ink level detection

Ink level detection will be deactivated if you load ink tanks once emptied.

### Ink level detection

Ink tanks specified for this printer feature an ink level detection function to prevent the ink from running out during printing, which prevents printer damage. (See "Ink Tanks.") →P.803

This function will not work correctly if you use refill ink tanks. As a result, printing stops. Thus, before using refill ink tanks, you must cancel the ink level detection.

Printing with the ink level detection canceled may lead to printer damage and printing problems. Canon Inc. is not liable for any damage that may occur as a result of refilling ink.




#### Caution

- After ink level detection has been disabled, this function cannot be reactivated for the currently loaded Ink Tank. To use ink level detection again, replace the Ink Tank with a new ink tank specified for use with the printer.
- Repeatedly removing and inserting an Ink Tank may damage the connection between the Ink Tank and the printer, which may cause ink leakage from the Ink Tank and damage the printer.


### Disabling ink level detection

1. On the Display Screen, a message indicates that the ink level cannot be detected. After checking the message, press the ► button.

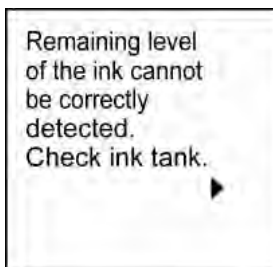





2. Press ▲ or ▼ to select **Information**, and then press the **OK** button.

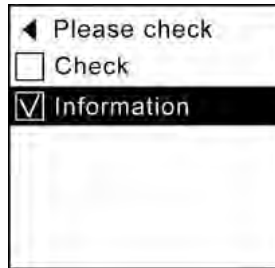


3. A confirmation message is shown on the Display Screen about disabling ink level detection. After checking the message, press the ► button.

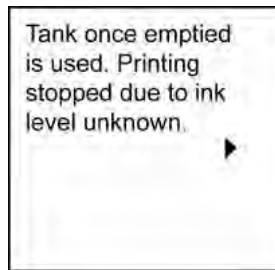


4. After checking the message, press the ► button.

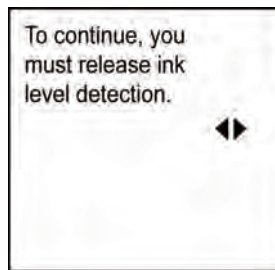


5. Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

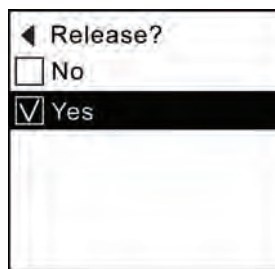


6. Check the message and press the ► button.

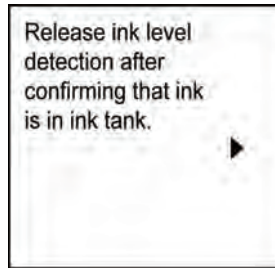


7. Check the message and press the ► button.

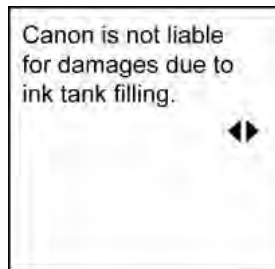


8. Press ▲ or ▼ to select Yes, and then press the OK button.

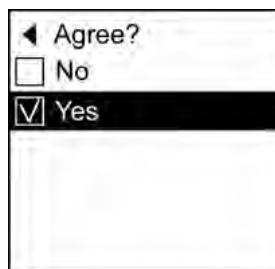

9. A confirmation message about updating ink information is shown on the Display Screen. After checking the message, press the ► button.

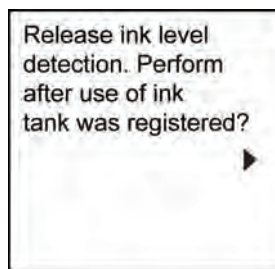


**10.** Press ▲ or ▼ to select **Yes**, and then press the **OK** button.

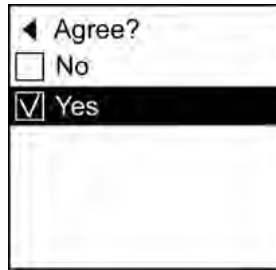

Ink level detection is now disabled, and the printer goes online.

## Error Message

Error Messages	891
Messages regarding paper	893
Messages regarding ink	904
Messages regarding printing or adjustment	907
Messages regarding printheads	909
Messages regarding the maintenance cartridge	912
Messages regarding the hard disk	914
Messages regarding HP-GL/2	916
Other Messages	917

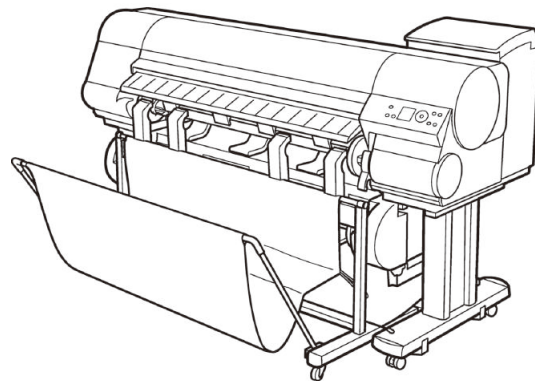

## Error Messages

Before borderless printing, move the blue platen switch. ....	908
Blue platen switch is dirty. ....	908
Borderless printing not possible. ....	903
Borderless printing not possible. Paper stretched or shrank. ....	907
Cannot adjust band. ....	909
Cannot adjust printhead. ....	909
Cannot print as specified. ....	907
Close Ink Tank Cover ....	905
End of paper feed. ....	902
ERROR Exxx-xxxx (x represents a letter or number) ....	917
Execute printhead cleaning. ....	911
File read error. ....	914
GARO Wxxxx (x represents a number) ....	917
GL2: W0502 The parameter is out of range. ....	916
GL2: W0504 This command is not supported. ....	916
GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904) ....	916
Hard disk error. ....	914
Hardware error. xxxxxxxx-xxxx (x represents a letter or number) ....	917
Ink insufficient. ....	904
Ink tank is empty. ....	905
Insert the maintenance cartridge. ....	912
Insufficient paper for job ....	896
Mail box full. Now printing without saving data. ....	914
Mail box nearly full. ....	915
Maintenance cartridge full. ....	912
Maintenance cartridge problem. ....	913
Maximum jobs stored. ....	915
Media take-up unit ready. ....	902
Multi-sensor error ....	919
No ink left. ....	904
No ink tank loaded. ....	906
No Maintenance Cartridge capacity. ....	912
No printhead ....	910
Not much ink is left. ....	905
Paper cutting failed. ....	901
Paper jam. ....	900
Paper loaded askew. ....	900
Paper size not detected. ....	895
Paper Type Mismatch ....	893
PaperTypeMismatch ....	893
Parts replacement time has passed. ....	918
PHead needs cleaning. ....	910
Prepare for maint cart replacement. ....	912
Prepare for parts replacement. ....	918
Printhead error ....	910
Problem with Printhead ....	910
Regular printing is selected, but a roll is loaded. ....	899

Rel lever is in wrong position. ....	902
Remaining level of the ink cannot be correctly detected. ....	904
Rewinding error. ....	902
Roll printing is selected, but sheets are loaded. ....	897
Roll printing is selected. ....	897
RollWdthMismatch ....	894
Sheet printing is selected. ....	899
Sheet removed. ....	899
The mail box is full. ....	914
The paper is too small. ....	894
The roll is empty. ....	897
This paper cannot be used. ....	897
This type of paper is not compatible with HP-GL/2. ....	916
Too many jobs for mail box. ....	915
Top cover is open. ....	918
Turn on the media take-up unit. ....	903
Unknown file. ....	918
Use another paper. ....	907
Wrong ink tank. ....	906
Wrong maintenance cartridge. ....	912
Wrong printhead. ....	910

## Messages regarding paper

Papr Type Mismatch .....	893
PaprTypeMismatch .....	893
The paper is too small. ....	894
RollWdthMismatch .....	894
Paper size not detected. ....	895
Insufficient paper for job .....	896
This paper cannot be used. ....	897
Roll printing is selected. ....	897
Roll printing is selected, but sheets are loaded. ....	897
The roll is empty. ....	897
Sheet removed. ....	899
Sheet printing is selected. ....	899
Regular printing is selected, but a roll is loaded. ....	899
Paper jam. ....	900
Paper loaded askew. ....	900
Paper cutting failed. ....	901
End of paper feed. ....	902
Rel lever is in wrong position. ....	902
Rewinding error. ....	902
Media take-up unit ready. ....	902
Turn on the media take-up unit. ....	903
Borderless printng not possible. ....	903

### Papr Type Mismatch

Cause	Corrective Action
You tried to print a test pattern for printer adjustment on several sheets, but sheets of different types of paper were used.	Hold down the <b>Stop</b> button for a second or more to cancel printing.
	When printing a test pattern, use sheets of the same type of paper. Lift the Release Lever and load a sheet of the same type of paper. (See "Loading and Printing on Sheets.") →P.8

### PaprTypeMismatch

Cause	Corrective Action
When the <b>Detect Mismatch</b> menu is set to <b>Pause</b> , the type of paper loaded does not match the type specified in the printer driver.	Follow these steps to ensure the paper type matches on the printer and in the printer driver. <b>1.</b> Hold down the <b>Stop</b> button for a second or more to cancel printing. <b>2.</b> Either change the type of paper specified in the printer driver settings or replace the loaded paper and change the paper type setting on the printer. (See "Loading and Printing on Rolls.") →P.3 (See "Loading and Printing on Sheets.") →P.8



Cause	Corrective Action
You tried to print a test pattern for printer adjustment on several sheets, but sheets of different types of paper were used.	Follow these steps to ensure the paper type matches on the printer and in the printer driver. <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Either change the type of paper specified in the printer driver settings or replace the loaded paper and change the paper type setting on the printer. (See "Loading and Printing on Rolls.") →P.3 (See "Loading and Printing on Sheets.") →P.8</li> </ol>
	Press the <b>Online</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.
When the <b>Detect Mismatch</b> menu is set to <b>Warning</b> , the type of paper loaded does not match the type specified in the printer driver.	You can continue to print, but note that this error may cause problems in the printing results.

### The paper is too small.

Cause	Corrective Action
When the <b>Detect Mismatch</b> menu is set to <b>Pause</b> , the paper loaded in the printer is smaller than the size specified in the printer driver.	Press the <b>Online</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.
	Adjust the paper size setting in the printer driver to match the size loaded in the printer as follows. <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Change the paper size setting in the printer driver to the size loaded in the printer and try printing again.</li> </ol>
	Replace the loaded paper with paper of a size that matches the size setting in the printer driver as follows. <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Replace the loaded paper to match the paper size setting in the printer driver and try printing again.</li> </ol>
When the <b>Detect Mismatch</b> menu is set to <b>Warning</b> , the paper loaded in the printer is smaller than the size specified in the printer driver.	You can continue to print, but note that this error may cause problems in the printing results.

13


894


### RollWidthMismatch

Cause	Corrective Action
The roll width set in <b>Fit Roll Paper Width</b> in the printer driver does not match the width of the roll loaded in the printer.	Press the <b>Online</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.


Cause	Corrective Action
The roll width set in <b>Fit Roll Paper Width</b> in the printer driver does not match the width of the roll loaded in the printer.	<p>Hold down the <b>Stop</b> button for a second or more to cancel printing.</p> <p>Make sure the roll width selected in the dialog box displayed when you select <b>Fit Roll Paper Width</b> in the printer driver matches the width of the roll loaded in the printer, and then try printing again.</p>

## Paper size not detected.

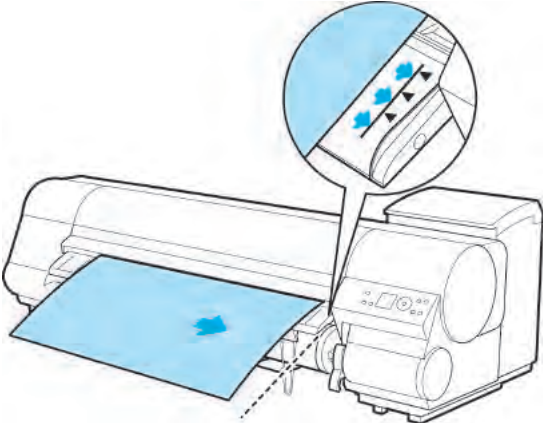Cause	Corrective Action
<p>Paper has been loaded askew, or warped paper has been loaded.</p> 	<p>Follow these steps to reload the roll.</p> <ol style="list-style-type: none"> <li>1. Lift the Release Lever.</li> <li>2. Open the Top Cover.</li> <li>3. Adjust the right edge of the roll to make it parallel to the right Paper Alignment Line.</li> <li>4. Lower the Release Lever.</li> <li>5. Close the Top Cover.</li> <li>6. If <b>"Not finished printing. Finish printing remaining jobs?"</b> is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol> <p>(See "Loading Rolls in the Printer.") →P.628</p>
	<p>If this error recurs after you reload the roll, remove the Roll Holder from the printer, push the roll firmly in until it touches the Roll Holder flange, and reload the Roll Holder in the printer. (See "Attaching the Roll Holder to Rolls.") →P.623</p>
	<p>Follow these steps to reload a sheet.</p> <ol style="list-style-type: none"> <li>1. Lift the Release Lever.</li> <li>2. Open the Top Cover.</li> <li>3. Adjust the right edge of the sheet to make it parallel to the right Paper Alignment Line and the trailing edge of the sheet to make it parallel to the paper alignment line under the Paper Retainer.</li> <li>4. Lower the Release Lever.</li> <li>5. Close the Top Cover.</li> <li>6. If <b>"Not finished printing. Finish printing remaining jobs?"</b> is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>

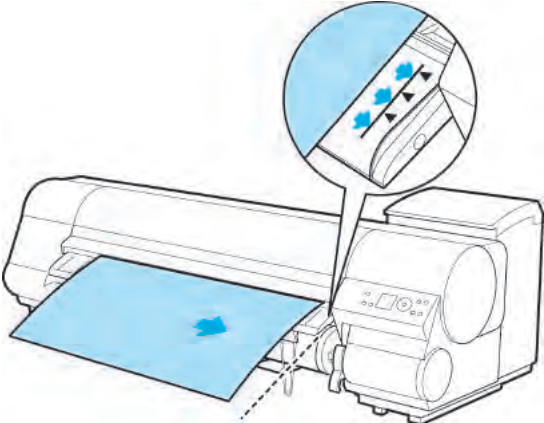Cause	Corrective Action
<p>Paper has been loaded askew, or warped paper has been loaded.</p> 	<p>(See "Loading Sheets in the Printer.") →P.651</p>
<p>Because the Platen is soiled with ink or other substances, the size of the clear film cannot be detected.</p>	<p>Open the Top Cover and clean the entire Platen. (See "Cleaning Inside the Top Cover.") →P.837</p>

### Insufficient paper for job

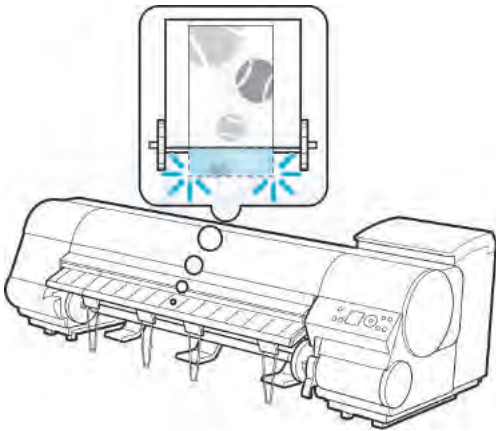Cause	Corrective Action
<p>The printer has received a print job longer than the amount of roll paper left when <b>ManageRemainRoll</b> in the printer menu is <b>On</b> and one of the following settings is selected.</p> <ul style="list-style-type: none"> <li>• During HP-GL/2 printing, <b>GL2 Settings &gt; Paper Source</b> in the printer menu is set to an option other than <b>Automatic</b>.</li> <li>• The Media Take-up Unit is in use.</li> </ul>	<p>Press the <b>Online</b> button to resume printing. However, the roll paper may run out during the print job and you may not be able to print all of the document.</p>
	<p>Hold down the <b>Stop</b> button for a second or more to cancel printing. Either change the printer driver <b>Paper Source</b> setting or the <b>GL2 Settings &gt; Paper Source</b> setting in the printer menu or replace the roll with a roll that has enough paper for the print job, and then try printing again.</p> <p>If you are using the Media Take-up Unit, remove the printed document from the Media Take-up Unit before replacing the roll with a roll that has enough paper for the print job, and then try printing again.</p> <p>(See "Removing the Roll from the Printer.") →P.634 (See "Loading Rolls in the Printer.") →P.628 (See "Removing Printed Documents from the Media Take-up Unit.") →P.761</p>

\*When using the Media Take-up Unit, either hold down the **Stop** button for a second or more to cancel printing or press the **Online** button to continue printing. However, if you continue printing, the roll paper may run out during the print job and you may not be able to print all of the document.

### This paper cannot be used.

Cause	Corrective Action
Paper that is too large for the printer has been loaded.	Lift the Release Lever and load paper of the correct size. (See "Paper Sizes.") →P.620
Paper that is too small for the printer has been loaded.	Lift the Release Lever and load paper of the correct size. (See "Paper Sizes.") →P.620
Paper has been loaded that is too small to print the test pattern for printhead adjustment or nozzle checking.	Lift the Release Lever and load unused paper A4 or larger. More than one sheet may be required depending on the adjustment.

### Roll printing is selected.

Cause	Corrective Action
You have attempted to print a job sent from a computer or a test print sheet or other printer status information on a roll, but no roll is loaded.	Load a roll and try printing again.  To print on a sheet instead, hold down the <b>Stop</b> button for more than a second to cancel printing, load a sheet, and then print. (See "Loading and Printing on Sheets.") →P.8


### Roll printing is selected, but sheets are loaded.

Cause	Corrective Action
A print job for rolls was received when a sheet is loaded.	Follow these steps to load and print on a roll.  1. Press the <b>OK</b> button and remove the sheet. (See "Removing Sheets.") →P.656  2. Load a new roll. (See "Loading Rolls in the Printer.") →P.628 The printer now starts printing the print job.  Hold down the <b>Stop</b> button for a second or more to cancel printing.


### The roll is empty.

#### "Lift the release lever and replace the roll."


Cause	Corrective Action
The roll is empty.	Follow these steps to replace the used roll with a new roll of the same type and size.

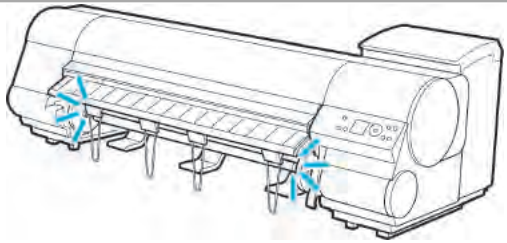Cause	Corrective Action
	<ol style="list-style-type: none"> <li>1. Lift the Release Lever and remove the roll. (See "Removing the Roll from the Printer.") →P.634 (See "Removing the Roll Holder from Rolls.") →P.637</li> <li>2. Load the new roll. (See "Attaching the Roll Holder to Rolls.") →P.623 (See "Loading Rolls in the Printer.") →P.628</li> <li>3. If no barcode was printed on the roll, specify the type of paper. (See "Selecting the Paper Type (Roll).") →P.632</li> <li>4. If no barcode was printed on the roll, specify the paper length. (See "Specifying the Paper Length (Roll).") →P.633</li> <li>5. If "<b>Not finished printing. Finish printing remaining jobs?</b>" is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>
<p>There is remaining roll paper, but because it could not be advanced, it could not be detected.</p>	<p>Choose a higher level of <b>Print Quality</b> in the <b>Advanced Settings</b> of the printer driver. (See "Giving Priority to Particular Graphic Elements and Colors for Printing.") →P.55</p>

**"Press OK."**

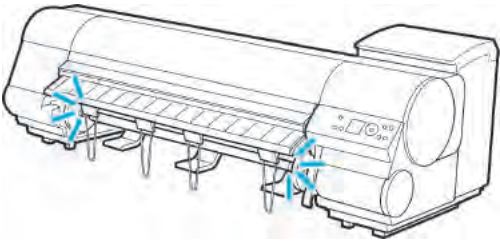Cause	Corrective Action
<p>The roll is empty.</p> 	<p>Follow these steps to replace the used roll with a new roll of the same type and size.</p> <ol style="list-style-type: none"> <li>1. Press the <b>OK</b> button and remove the roll. (See "Removing the Roll from the Printer.") →P.634 (See "Removing the Roll Holder from Rolls.") →P.637</li> <li>2. Load the new roll. (See "Attaching the Roll Holder to Rolls.") →P.623 (See "Loading Rolls in the Printer.") →P.628</li> <li>3. If no barcode was printed on the roll, specify the type of paper. (See "Selecting the Paper Type (Roll).") →P.632</li> <li>4. If no barcode was printed on the roll, specify the paper length. (See "Specifying the Paper Length (Roll).") →P.633</li> <li>5. If "<b>Not finished printing. Finish printing remaining jobs?</b>" is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>

**Sheet removed.**

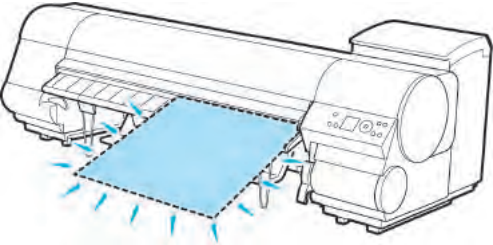Cause	Corrective Action
<p>A sheet has come out of the printer during printing.</p> 	<ol style="list-style-type: none"> <li>1. Lift the Release Lever and remove the paper.</li> <li>2. If "<b>Not finished printing. Finish printing remaining jobs?</b>" is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>

**Sheet printing is selected.**

Cause	Corrective Action
<p>You have attempted to print a test print sheet or other printer status information on a sheet, but no sheet is loaded.</p>	<p>Load a sheet and try printing again.</p>
	<p>To print on a roll instead, hold down the <b>Stop</b> button for more than a second to cancel printing, load a roll, and then print. (See "Loading and Printing on Rolls.") →P.3</p>

**Regular printing is selected, but a roll is loaded.**

Cause	Corrective Action
<p>A print job for printing on sheets was sent when a roll is loaded.</p>	<p>Hold down the <b>Stop</b> button for a second or more to cancel printing. Remove the roll and load a sheet of the type and size of paper you have specified in the printer driver. (See "Removing the Roll from the Printer.") →P.634 (See "Loading and Printing on Sheets.") →P.8</p>
<p>You are using a roll with the Media Take-up Unit, but a print job requiring sheets was sent.</p>	<ol style="list-style-type: none"> <li>1. Press the <b>Stop</b> button for a second to cancel the job involving sheets.</li> <li>2. Choose <b>Paper Cutting</b> in the menu.</li> <li>3. Press the <b>Load/Eject</b> button and remove the roll.</li> <li>4. Load a sheet and resend the print job.</li> </ol>

## Paper jam.


### "Lift the release lever."

Cause	Corrective Action
A paper jam occurred in the printer during printing.	<ol style="list-style-type: none"> <li>Lift the Release Lever and remove the jammed paper. (See "Clearing Jammed Roll Paper.") →P.852 (See "Clearing a Jammed Sheet.") →P.856</li> <li>If <b>"Not finished printing. Finish printing remaining jobs?"</b> is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>


### "Manually rewind the roll all the way and press OK."

Cause	Corrective Action
A paper jam occurred when advancing the paper.	<ol style="list-style-type: none"> <li>Rewind paper on the Roll Holder manually, all the way, and then press the <b>OK</b> button.</li> <li>If <b>"Not finished printing. Finish printing remaining jobs?"</b> is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>

## Paper loaded askew.

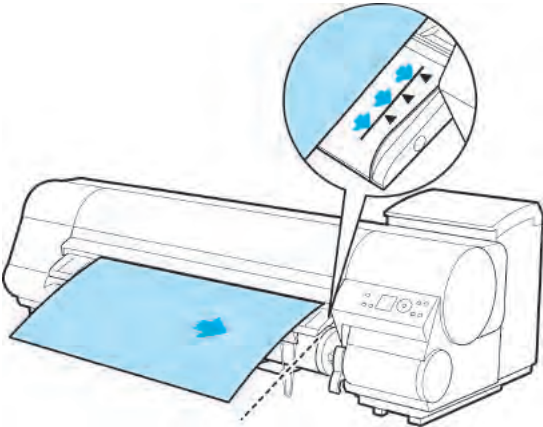Cause	Corrective Action
<p>Paper is loaded askew.</p> 	<p>Follow these steps to reload the roll.</p> <ol style="list-style-type: none"> <li>Lift the Release Lever.</li> <li>Open the Top Cover.</li> <li>Adjust the right edge of the roll to make it parallel to the right Paper Alignment Line.</li> <li>Lower the Release Lever.</li> <li>Close the Top Cover.</li> </ol> <p>(See "Loading Rolls in the Printer.") →P.628</p> <p>If this error recurs after you reload the roll, remove the Roll Holder from the printer, push the roll firmly in until it touches the Roll Holder flange, and reload the Roll Holder in the printer. (See "Attaching the Roll Holder to Rolls.") →P.623</p> <p>Follow these step to reload a sheet.</p> <ol style="list-style-type: none"> <li>Lift the Release Lever.</li> <li>Open the Top Cover.</li> <li>Adjust the right edge of the sheet to make it parallel to the right Paper Alignment Line and the trailing edge of the sheet to make it parallel to the paper alignment line under the Paper Retainer.</li> <li>Lower the Release Lever.</li> </ol>

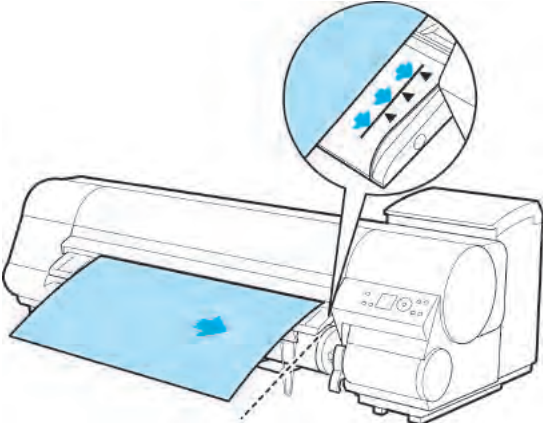

Cause	Corrective Action
<p>Paper is loaded askew.</p> 	<p>5. Close the Top Cover.</p> <p>(See "Loading Sheets in the Printer.") →P.651</p>

**Note**

- To disable this message (if it is displayed repeatedly despite reloading paper, for example), choose **Off** or **Loose** in the **Skew Check Lv.** setting of the printer menu. However, this may cause jams because paper may be askew when it is printed. Also, the Platen may become soiled, which may soil the back of the next document when it is printed.

## Paper cutting failed.

Cause	Corrective Action
<p>There are sheets left on the Ejection Guide.</p>	<ol style="list-style-type: none"> <li>Lift the Release Lever and remove the paper.</li> <li>If "<b>Not finished printing. Finish printing remaining jobs?</b>" is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>
<p>There is a foreign object by the Output Tray, obstructing the Cutter Unit.</p>	<ol style="list-style-type: none"> <li>Lift the Top Cover and remove the foreign object.</li> <li>If "<b>Not finished printing. Finish printing remaining jobs?</b>" is shown on the Display Screen, press the <b>OK</b> button. Printing will resume, starting from the page on which the error occurred.</li> </ol>
<p>You are not using the printer under the recommended environmental conditions for the paper.</p>	<p>Use the printer only where the recommended environmental conditions for the paper are met. Note that various environmental conditions are recommended for various types of paper. For details on the recommended environmental conditions for paper, see the Paper Reference Guide. (See "Types of Paper.") →P.617</p>
<p>You are using paper that is not compatible with automatic cutting.</p>	<p>Specify <b>Manual</b> as the cutting method and cut the roll manually. (See "Specifying the Cutting Method for Rolls.") →P.642 For information about paper that is compatible with automatic cutting, see the Paper Reference Guide. (See "Types of Paper.") →P.617</p>
<p>The Cutter Unit stops in the middle of cutting.</p>	<p>If the Carriage is out, move the Carriage out of the way, away from the paper. If the Cutter is out, move the Cutter to the right side (away from the paper) and remove the jammed paper. (See "Clearing Jammed Roll Paper.") →P.852 If the paper cannot be cut using the Cutter Unit, specify <b>Manual</b> as the roll cutting method and cut the roll manually.</p>

Cause	Corrective Action
The Cutter Unit stops in the middle of cutting.	(See "Specifying the Cutting Method for Rolls.") →P.642
In other cases, the Cutter Unit may be damaged.	Contact your Canon dealer for assistance.

### End of paper feed.

Cause	Corrective Action
You are pressing the ▲ button on the Control Panel and trying to rewind the roll to the edge.	Release the ▲ button.
Paper can be retracted only up to 17 mm (0.7 in) when using the Media Take-up Unit.	Release the ▲ button.

### Rel lever is in wrong position.

Cause	Corrective Action
The Release Lever is up.	Lower the Release Lever. If the error occurs again, turn off the printer and wait a while before restoring power.

### Rewinding error.

Cause	Corrective Action
There is some foreign object near the Media Take-up Unit sensor and the roll cannot be detected.	Remove the foreign object near the sensor.
The Media Take-up Unit sensor is soiled and the roll cannot be detected.	Wipe the sensor with a dry cloth to clean it.
The roll is out of range of detection by the Media Take-up Unit sensor.	Reload the roll. (See "Loading Rolls in the Printer.") →P.628
The Media Take-up Unit sensor is damaged.	Contact your Canon dealer for assistance.
A paper jam has occurred and the roll cannot be rewound.	Remove the paper from the Media Take-up Unit. Press the <b>Online</b> button to clear the error.

\*Printing will stop momentarily if an error involving the Media Take-up Unit occurs. If you prefer printing not to stop, set **Skip Take-Up Err** to **On**.

### Media take-up unit ready.

Cause	Corrective Action
The <b>Take-up Reel</b> setting in the printer <b>MAIN MENU</b> was changed from <b>Enable</b> to <b>Disable</b> , but a print job was received before the roll was removed.	Press the <b>Stop</b> button and stop printing. The mode switches from take-up mode to regular mode after you change the <b>Take-up Reel</b> setting in the <b>MAIN MENU</b> from <b>Enable</b> to <b>Disable</b> and lift the Release Lever, or after you execute <b>Paper Cutting</b> .

Cause	Corrective Action
The <b>Take-up Reel</b> setting in the printer <b>MAIN MENU</b> was changed from <b>Enable</b> to <b>Disable</b> , but a print job was received before the roll was removed.	Press the <b>Online</b> button to resume printing.

### Turn on the media take-up unit.

Cause	Corrective Action
The Media Take-up Unit was off when you selected <b>Enable</b> for <b>Take-up Reel</b> .	Turn the Media Take-up Unit on.

### Borderless printing not possible.

#### "Lift release lever and reload the paper."

Cause	Corrective Action
Because paper expands or contracts depending on the environment of use, it may become narrower or wider than the supported width for borderless printing.	Hold down the <b>Stop</b> button for a second or more to cancel printing. Use each type of paper only where the recommended environmental conditions are met. For details on environmental conditions for various paper, see the Paper Reference Guide. (See "Types of Paper.") →P.617
The paper is loaded askew.	Lift the Release Lever and straighten the paper so that the edge of the paper is in the width of the ink groove for borderless printing. Insert the roll firmly until it touches the flange of the Roll Holder. (See "Attaching the Roll Holder to Rolls.") →P.623  If you press the <b>Online</b> button and continue printing, the document will be printed with a border.


#### "Check supported paper."

Cause	Corrective Action
The print job received specifies a type or width of paper that is not compatible with borderless printing.	Follow these steps to change the settings of the print job to enable borderless printing.  <b>1.</b> Hold down the <b>Stop</b> button for a second or more to cancel printing. <b>2.</b> Make sure the correct printer driver for the printer is selected and try printing again. For information on types of paper compatible with borderless printing, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617  If you press the <b>Online</b> button and continue printing, the document will be printed with a border.
The loaded paper is not compatible with borderless printing.	Hold down the <b>Stop</b> button for a second or more to cancel printing.  If you press the <b>Online</b> button and continue printing, the document will be printed with a border.

## Messages regarding ink

Ink insufficient. ....	904
No ink left. ....	904
Remaining level of the ink cannot be correctly detected. ....	904
Close Ink Tank Cover .....	905
Ink tank is empty. ....	905
Not much ink is left. ....	905
No ink tank loaded. ....	906
Wrong ink tank. ....	906

### Ink insufficient.

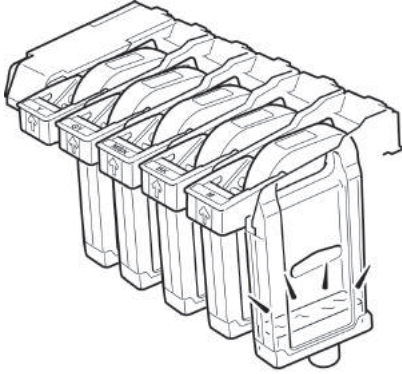Cause	Corrective Action
<p>The ink level is low, so you cannot print, clean the Printhead, or do other operations that require ink.</p> 	<p>Replace the Ink Tank that is low with a new Ink Tank. (See "Replacing Ink Tanks.") →P.803</p>


### No ink left.

Cause	Corrective Action
There is no ink left.	Open the Ink Tank Cover and replace the Ink Tank for which the Ink Lamp is flashing. (See "Replacing Ink Tanks.") →P.803


### Remaining level of the ink cannot be correctly detected.

Cause	Corrective Action
Ink level detection cannot work correctly if you use refill ink tanks.	The refill ink tank can no longer be used. See the section <b>Ink level detection</b> and take the appropriate action. (See "Ink level detection.") →P.886


## Close Ink Tank Cover

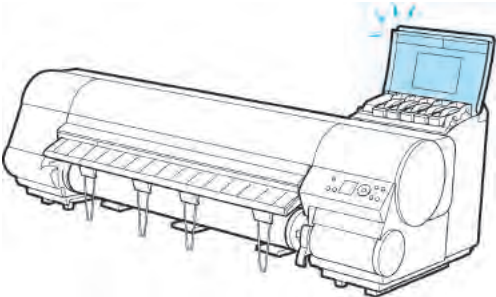Cause	Corrective Action
<p>The Ink Tank Cover is open.</p> 	<p>Close the Ink Tank Cover.</p>


## Ink tank is empty.

Cause	Corrective Action
<p>There is no ink left in an ink tank.</p> 	<p>Open the Ink Tank Cover and replace the Ink Tank for which the Ink Lamp is flashing. (See "Replacing Ink Tanks.") →P.803</p>

## Not much ink is left.

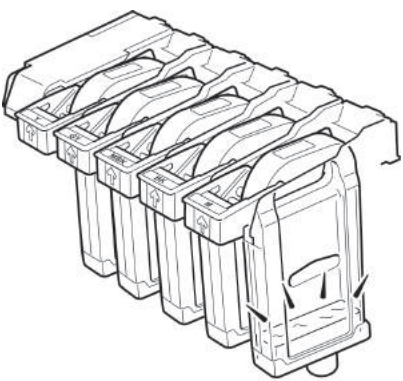Cause	Corrective Action
<p>Not much ink is left.</p> 	<p>Prepare a new Ink Tank. We recommend replacing the Ink Tank with a new Ink Tank at this point if you plan to print large-format or high-quantity jobs.</p>

### No ink tank loaded.

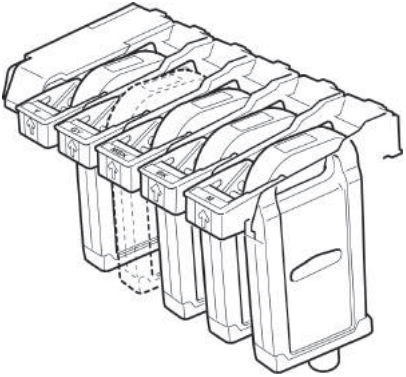Cause	Corrective Action
<p>There is no Ink Tank of the indicated color in the printer.</p> 	<p>Load or reload the Ink Tank. (See "Replacing Ink Tanks.") →P.803</p>
<p>There is a problem with the Ink Tank.</p>	<p>Replace it with a new Ink Tank. (See "Replacing Ink Tanks.") →P.803</p>

### Wrong ink tank.

Cause	Corrective Action
<p>The Ink Tank in the printer is incompatible.</p>	<p>Load an Ink Tank specified for use with the printer. (See "Replacing Ink Tanks.") →P.803</p>

## Messages regarding printing or adjustment

Use another paper. ....	907
Cannot print as specified. ....	907
Borderless printing not possible. Paper stretched or shrank. ....	907
Before borderless printing, move the blue platen switch. ....	908
Blue platen switch is dirty. ....	908

### Use another paper.

Cause	Corrective Action
The Printhead and feed amount cannot be adjusted when highly transparent film is loaded.	Press the <b>Online</b> button to clear the error. We recommend using a type of paper that you often use, other than film, for Printhead adjustment. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668
	Press the <b>Online</b> button to clear the error, and then adjust the feed amount manually. (See "Manual Band Adjustment (Manual Band Adj.).") →P.678

### Cannot print as specified.

#### "Lift the release lever and replace paper with A4/LTR (vertical) or larger."

Cause	Corrective Action
The loaded paper is too small.	Switch to paper A4/Letter (vertical) or larger.

#### "Lift the release lever and replace roll with 10 in. wide or larger roll."

Cause	Corrective Action
The loaded paper is too small.	Load a roll 10 inches wide or larger.

### Borderless printing not possible. Paper stretched or shrank.

Cause	Corrective Action
The loaded roll has expanded or contracted due to environmental conditions, making it wider or narrower than the supported width for borderless printing.	Hold down the <b>Stop</b> button for a second or more to cancel printing.
	Use each type of paper only where the recommended environmental conditions are met. For details on environmental conditions for various paper, see the Paper Reference Guide. (See "Types of Paper.") →P.617



### Before borderless printing, move the blue platen switch.

Cause	Corrective Action
The blue Switch on the platen was set to the side opposite ● when a borderless print job was received.	Before borderless printing, set the blue Switch on the platen to the ● side. (See "Setting the Blue Switch on the Platen.") →P.872

### Blue platen switch is dirty.

Cause	Corrective Action
The blue Switch on the platen is dirty.	Open the Top Cover and clean the blue Switch on the platen. (See "Cleaning Inside the Top Cover.") →P.837

## Messages regarding printheads

Cannot adjust printhead. ....	909
Cannot adjust band. ....	909
PHead needs cleaning. ....	910
Wrong printhead. ....	910
Problem with Printhead ....	910
Printhead error ....	910
No printhead ....	910
Execute printhead cleaning. ....	911

### Cannot adjust printhead.

Cause	Corrective Action
The Printhead nozzles are clogged.	Execute <b>Auto Head Adj.</b> again, as follows. <ol style="list-style-type: none"> <li>1. Press the <b>Online</b> button to clear the error.</li> <li>2. Print a test pattern to check the nozzles. (See "Checking for Nozzle Clogging.") →P.817</li> <li>3. Clean the Printhead if the nozzles are clogged. (See "Cleaning the Printhead.") →P.819</li> <li>4. Execute <b>Auto Head Adj.</b> again. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668</li> </ol>
The Printhead cannot be aligned; highly transparent film is loaded.	Press the <b>Online</b> button to clear the error. We recommend using a type of paper that you often use, other than film, for Printhead adjustment. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668
The Printhead is installed crooked.	Straighten the Printhead as follows, and then execute <b>Auto Head Adj.</b> again. <ol style="list-style-type: none"> <li>1. Press the <b>Online</b> button to clear the error.</li> <li>2. Use <b>Head Inc. Adj.</b> to adjust the angle of inclination of the Printhead. (See "Adjusting Line Misalignment (Head Inc. Adj.).") →P.672</li> <li>3. Execute <b>Auto Head Adj.</b> again. (See "Automatic Straightening of Lines and Colors (Auto Head Adj.).") →P.668</li> </ol>

### Cannot adjust band.

Cause	Corrective Action
The Printhead nozzles are clogged.	Execute <b>Auto Band Adj.</b> again, as follows. <ol style="list-style-type: none"> <li>1. Press the <b>Online</b> button to clear the error.</li> <li>2. Print a test pattern to check the nozzles. (See "Checking for Nozzle Clogging.") →P.817</li> <li>3. Clean the Printhead if the nozzles are clogged. (See "Cleaning the Printhead.") →P.819</li> <li>4. Execute <b>Auto Band Adj.</b> again. (See "Auto Band Adjustment (Auto Band Adj.).") →P.677</li> </ol>

Cause	Corrective Action
Highly transparent film is loaded that cannot be used for automatic feed amount adjustment.	Press the <b>Online</b> button to clear the error, and then adjust the feed amount manually. (See "Manual Band Adjustment (Manual Band Adj).") →P.678

### PHead needs cleaning.

Cause	Corrective Action
The Printhead nozzles are clogged.	<p>Press the <b>Online</b> button to resume printing.</p> <p>Follow these steps to clean the Printhead.</p> <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Printhead cleaning options. (See "Cleaning the Printhead.") →P.819</li> </ol> <p>If the message is still displayed after you execute <b>Head Cleaning B</b> once or twice, contact your Canon dealer for assistance.</p>

### Wrong printhead.

Cause	Corrective Action
An incompatible Printhead has been installed.	Open the Top Cover and replace the Printhead with a new one. (See "Replacing the Printhead.") →P.820

### Problem with Printhead

Cause	Corrective Action
The Printhead nozzles are becoming clogged.	If printing is faint, clean the Printhead. (See "Cleaning the Printhead.") →P.819

### Printhead error

Cause	Corrective Action
There is a problem with the Printhead.	Open the Top Cover and replace the Printhead with a new one. (See "Replacing the Printhead.") →P.820

### No printhead

Cause	Corrective Action
No Printhead is installed.	Install the Printhead. (See "Replacing the Printhead.") →P.820

**Execute printhead cleaning.**

Cause	Corrective Action
The Printhead nozzles are clogged.	Follow these steps to clean the Printhead. <ol style="list-style-type: none"><li data-bbox="613 359 1328 390">1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li><li data-bbox="613 401 1328 464">2. Printhead cleaning options. (See "Cleaning the Printhead.") →P.819</li></ol> <p data-bbox="613 485 1166 548">If this message is still displayed, replace the Printhead. (See "Replacing the Printhead.") →P.820</p>

## Messages regarding the maintenance cartridge

Insert the maintenance cartridge. ....	912
Wrong maintenance cartridge. ....	912
Prepare for maint cart replacement. ....	912
No Maintenance Cartridge capacity. ....	912
Maintenance cartridge full. ....	912
Maintenance cartridge problem. ....	913

### Insert the maintenance cartridge.

Cause	Corrective Action
The Maintenance Cartridge is not installed.	Install the Maintenance Cartridge. (See "Replacing the Maintenance Cartridge.") →P.827

### Wrong maintenance cartridge.

Cause	Corrective Action
A Maintenance Cartridge for a different model of printer is installed.	Replace it with the Maintenance Cartridge for your particular model.

### Prepare for maint cart replacement.

Cause	Corrective Action
The Maintenance Cartridge is almost full.	You can continue to print, but prepare a new Maintenance Cartridge to use when the message for replacement is displayed.

### 13 No Maintenance Cartridge capacity.

Cause	Corrective Action
The Maintenance Cartridge cannot absorb enough ink for Printhead cleaning or other operation.	After confirming that the printer has stopped operating, replace the Maintenance Cartridge. (See "Replacing the Maintenance Cartridge.") →P.827

912

### Maintenance cartridge full.

Cause	Corrective Action
The Maintenance Cartridge is full.	After confirming that the printer has stopped operating, replace the Maintenance Cartridge. (See "Replacing the Maintenance Cartridge.") →P.827

**Maintenance cartridge problem.**

Cause	Corrective Action
An incompatible or used Maintenance Cartridge has been installed.	Install an unused Maintenance Cartridge specified for use with the printer. (See "Replacing the Maintenance Cartridge.") →P.827

## Messages regarding the hard disk

Hard disk error. ....	914
File read error. ....	914
The mail box is full. ....	914
Mail box full. Now printing without saving data. ....	914
Mail box nearly full. ....	915
Maximum jobs stored. ....	915
Too many jobs for mail box. ....	915

### Hard disk error.

Cause	Corrective Action
The format of the printer's hard disk is invalid.	Press the <b>OK</b> button to start reformatting the hard disk. When formatting is finished, the printer automatically restarts. (Formatting will erase all data on the hard disk.)

### File read error.

Cause	Corrective Action
Files on the printer's hard disk have become corrupted.	Restart the printer. Only the corrupted files will be deleted, and the printer will restart.

### The mail box is full.

Cause	Corrective Action
There is no more space on the printer's hard disk.	Press the <b>Stop</b> button to cancel the print job.
	Delete print jobs from the queue. (See "Managing Queued Jobs (Deleting or Preempting Other Jobs).") →P.568
	Delete unneeded jobs stored in personal boxes (box numbers in the range 01–29). (See "Deleting Saved Jobs.") →P.577

### Mail box full. Now printing without saving data.

Cause	Corrective Action
No more space is available on the printer's hard disk, so jobs are now printed without saving them. (Print jobs can no longer be saved on the hard disk.)	After printing, this message is cleared.



**Mail box nearly full.**

Cause	Corrective Action
The free hard disk space left for personal boxes in the printer's hard disk does not have 1 GB, combined.	Delete unneeded jobs stored in personal boxes. (See "Deleting Saved Jobs.") →P.577

**Maximum jobs stored.**

Cause	Corrective Action
100 jobs are stored in the personal box.	Delete unneeded jobs stored in personal boxes. (See "Deleting Saved Jobs.") →P.577

**Too many jobs for mail box.**

Cause	Corrective Action
Saved jobs exceed the personal box capacity.	Press the <b>Stop</b> button to cancel the print job.
	Delete print jobs from the queue. (See "Managing Queued Jobs (Deleting or Preempting Other Jobs).") →P.568
	Delete unneeded jobs stored in personal boxes (box numbers in the range 01–29). (See "Deleting Saved Jobs.") →P.577

## Messages regarding HP-GL/2

This type of paper is not compatible with HP-GL/2. .... 916  
 GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904) ..... 916  
 GL2: W0502 The parameter is out of range. .... 916  
 GL2: W0504 This command is not supported. .... 916

### This type of paper is not compatible with HP-GL/2.

Cause	Corrective Action
The printer has received a HP-GL/2 print job that cannot be printed on the paper that has been advanced.	Follow these steps to replace the type of paper in the printer. <ol style="list-style-type: none"> <li>1. Hold down the <b>Stop</b> button for a second or more to cancel printing.</li> <li>2. Replace the paper with a type compatible with HP-GL/2. For details on paper compatible with HP-GL/2, refer to the Paper Reference Guide. (See "Types of Paper.") →P.617</li> </ol>
	Press the <b>Online</b> button to resume printing. However, note that this error may cause paper jams and affect the printing quality.

### GL2: Wxxxx The memory is full. (xxxx is 0501, 0903, or 0904)

Cause	Corrective Action
The printer memory became full while processing the job received.	Check the print job and the printing results.

### GL2: W0502 The parameter is out of range.

Cause	Corrective Action
A parameter specified in a HP-GL/2 command is out of the supported range.	Check the print job.

### GL2: W0504 This command is not supported.

Cause	Corrective Action
The printer has received an unsupported HP-GL/2 command.	Check the print job.


## Other Messages

GARO Wxxxx (x represents a number) .....	917
ERROR Exxx-xxxx (x represents a letter or number) .....	917
Hardware error. xxxxxxxx-xxxx (x represents a letter or number) .....	917
Top cover is open. ....	918
Prepare for parts replacement. ....	918
Parts replacement time has passed. ....	918
Unknown file. ....	918
Multi-sensor error .....	919

### GARO Wxxxx (x represents a number)


Cause	Corrective Action
There is a problem with the print job.	Try printing again, using the correct printer driver.
	It is also possible to continue printing in this state. However, you may not be able to obtain the desired printing results.

### ERROR Exxx-xxxx (x represents a letter or number)

Cause	Corrective Action
An error requiring service may have occurred. 	Write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.

### Hardware error. xxxxxxxx-xxxx (x represents a letter or number)

Cause	Corrective Action
The last portion of roll paper was used during a print job. The paper was not advanced because the trailing edge is taped to the roll.	Turn off the printer and remove the roll from the printer before restoring power.
Fastening tape or the Belt Stopper has not been removed inside the Top Cover.	Turn off the printer, open the Top Cover and remove the tape or the Belt Stopper before restoring power.
An error requiring service may have occurred.	Turn off the printer and wait at least three seconds before restoring the power. If the message is displayed again, write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.

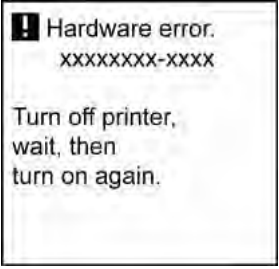Cause	Corrective Action
	<p>Turn off the printer and wait at least three seconds before restoring the power.</p> <p>If the message is displayed again, write down the error code and message, turn off the printer, and contact your Canon dealer for assistance.</p>

### Top cover is open.

Cause	Corrective Action
<p>The printer has detected that the Top Cover is open.</p>	<p>Open the Top Cover fully, remove any foreign objects, and close the Top Cover again.</p>
	<p>If the error occurs again, close the Top Cover, turn off the printer, and wait a while before restoring power.</p>

### Prepare for parts replacement.

Cause	Corrective Action
<p>It is almost time to replace consumables for which service is required.</p>	<p>You can continue to use the printer for some time until "<b>Parts replacement time has passed.</b>" will be displayed.</p> <p>Contact your Canon dealer for assistance.</p>

### Parts replacement time has passed.

Cause	Corrective Action
<p>It is past the recommended time to replace consumables for which service is required.</p>	<p>Contact your Canon dealer for assistance.</p>

### Unknown file.


Cause	Corrective Action
<p>Data sent to keep the printer up to date (such as paper information) is in the wrong format.</p>	<p>Check the data. Turn off the printer and wait a while before restoring power, and then resend the data.</p>
<p>You have uploaded firmware for a different model.</p>	<p>Check the firmware version. Turn off the printer and wait a while before restoring power, and then resend the firmware.</p>
	<p>If the message is displayed again, contact your Canon dealer for assistance.</p>

**Multi-sensor error**

Cause	Corrective Action
Direct sunlight or strong lighting may be shining on the printer and causing the sensor to malfunction.	Take steps to ensure the printer is not used when exposed to direct sunlight or strong lighting.
The performance of a sensor inside the printer may be impaired.	Turn off the printer and wait at least three seconds before restoring the power. If the message is displayed again, contact your Canon dealer for assistance.

## Appendix

How to use this manual	921
Disposal of the product	931

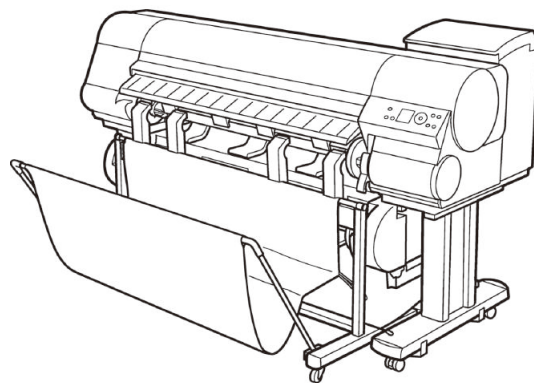




## How to use this manual

About This User Manual .....	921
Searching Topics .....	922
HTML Version of the Manual for Printing .....	924

## About This User Manual

### • Symbols

The following symbols are used in this User Manual to indicate safety information and explanations on restrictions or precautions in use.

	Important	Indicates important information that must be followed when using the printer. Be sure to read this information to prevent printer damage or operating errors.
	Caution	Indicates caution items for which operating error poses a risk of injury or damage to equipment or property. To ensure safe use, always follow these precautions.
	Note	Indicates helpful reference information and supplemental information on particular topics.

### • Button names and user interface elements

Key and button names on the control panel and user interface elements in software (such as menus and buttons) are indicated as follows in this User Manual.

Control panel buttons	Example: Press the <b>OK</b> button.
Control panel messages	Example: <b>Head Cleaning</b> is displayed.
Software interface items (Menus and Buttons)	Example: Click <b>OK</b> .
Keyboard keys	Example: Press the Tab key.


### • Part names

Names of printer parts are indicated as follows in this User Manual.

Printer part names	Example: Open the Top Cover.
--------------------	------------------------------

### • Cross-reference

Other pages or manuals that provide related information are indicated as follows in this User Manual.

Cross-reference in the same User Manual	Example: see "Turning the Printer On and Off."  <b>P.694</b> Click the link to jump to the corresponding page.
Cross-reference in related manuals	Example: See the Paper Reference Guide .
Other cross-reference	Example: See the printer driver help.

### • Figures and software screens

- Figures in this User Manual may be different from the actual appearance of the printer in some cases.
- Screens depicted in this User Manual for the printer driver or other software may be different from the actual screens because of subsequent updates.
- Windows XP screens are used in explanations of Windows operations in this User Manual.



• Trademarks

- Canon, the Canon logo, and imagePROGRAF are trademarks or registered trademarks of Canon Inc.
- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and other countries.
- Macintosh is a registered trademark of Apple Inc. in the United States and other countries.
- Other company and product names are trademarks or registered trademarks of their respective owners.

• Copyright

© 2008 Canon Inc.

- Unauthorized reproduction of this User Manual in whole or part is prohibited.

• May we request

Thank you for understanding the following points.

- The information in this User Manual is subject to change without notice.
- We strive to ensure accuracy of information in this User Manual, but if you notice errors or omissions, please contact us.

## Searching Topics


You can find information in topics of this User Manual by searching for relevant terms.

1. Enter a term and click the **Search** button.




Note

- To search for multiple terms at once, enter a space between each term.

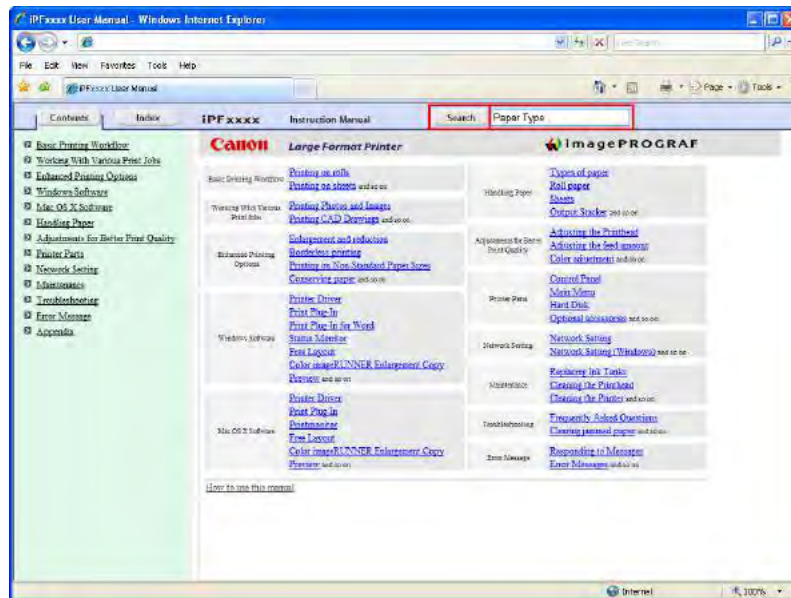


Search results are listed at left.

2. Click a topic you want to read.  
The terms you searched for will be highlighted in the topic.

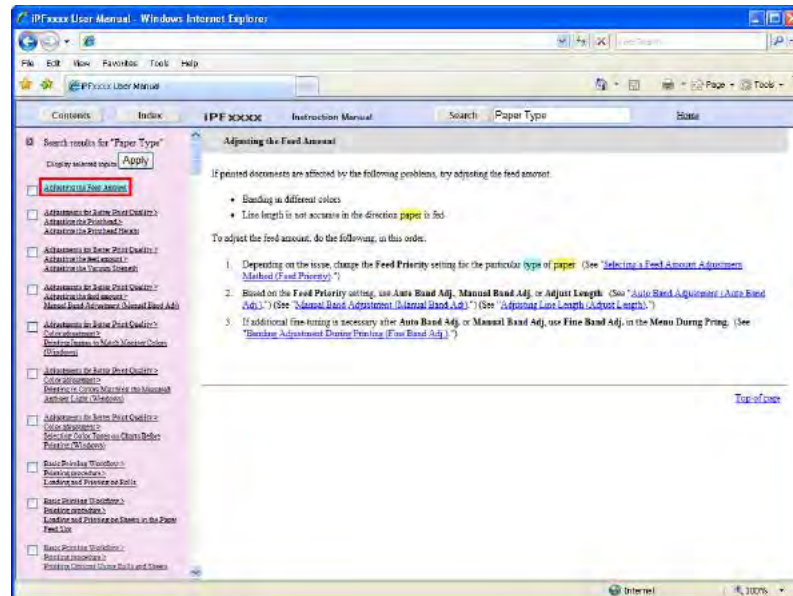

To review multiple topics at once, select the check box of desired topics and click the **Apply** button.

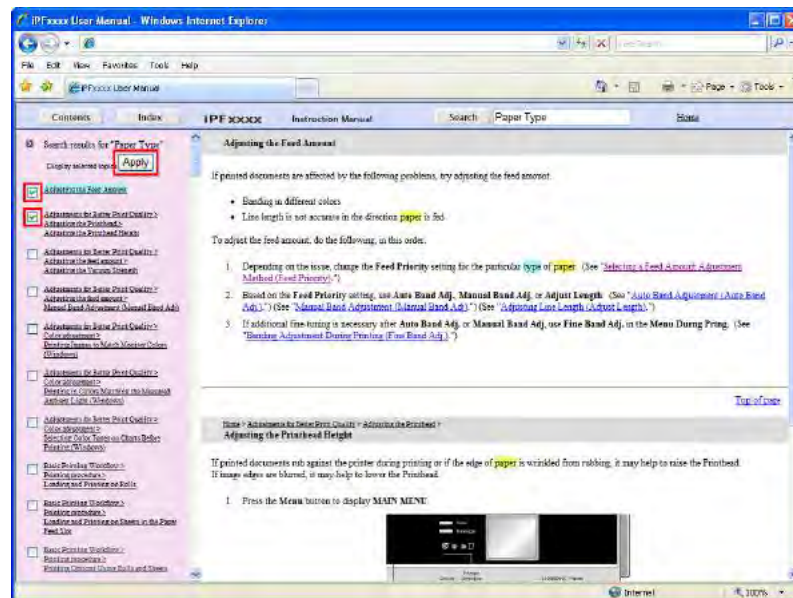

## HTML Version of the Manual for Printing

You can select a group of topics in the table of contents or individual topics in this manual for printing. The following procedure describes how to do this, using the information in **Basic Printing Workflow** as an example.


### Printing a group of topics in the manual

When you access printable HTML versions of the content from section titles in the table of contents, you can specify a group of topics to print.

1. Click a section title in the table of contents. Here, **Basic Printing Workflow** is used as an example.




2. Click **Access to the HTML for printing** in the title area.

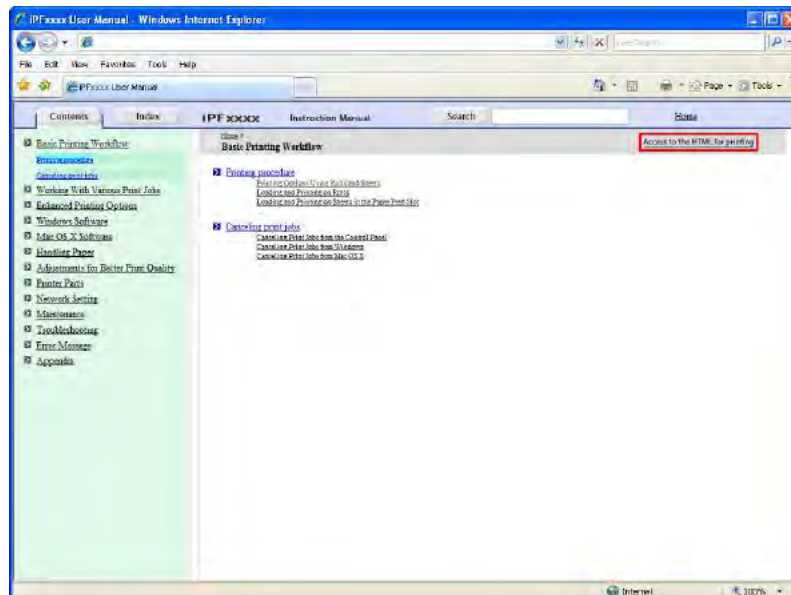


14  
924

The topics in **Basic Printing Workflow** are displayed together in HTML format, ready for printing.

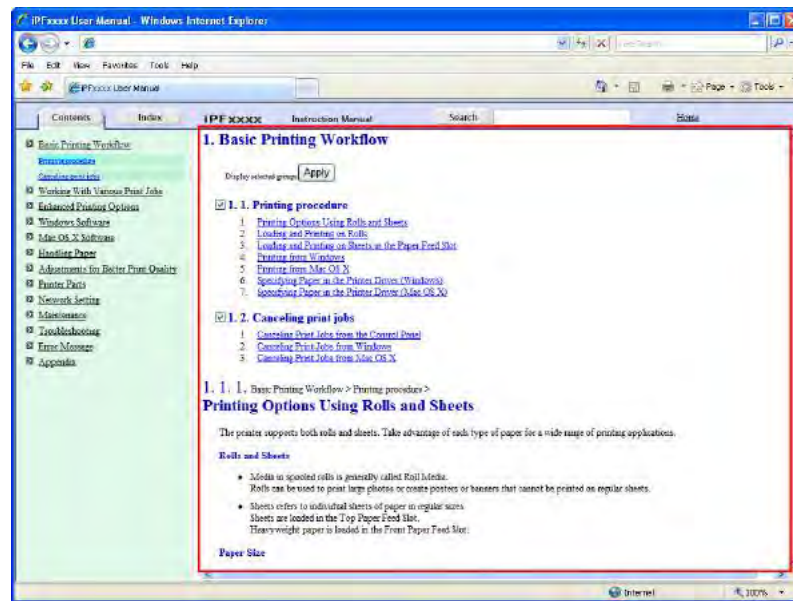

3. Clear the sections you will not print and click the **Apply** button.

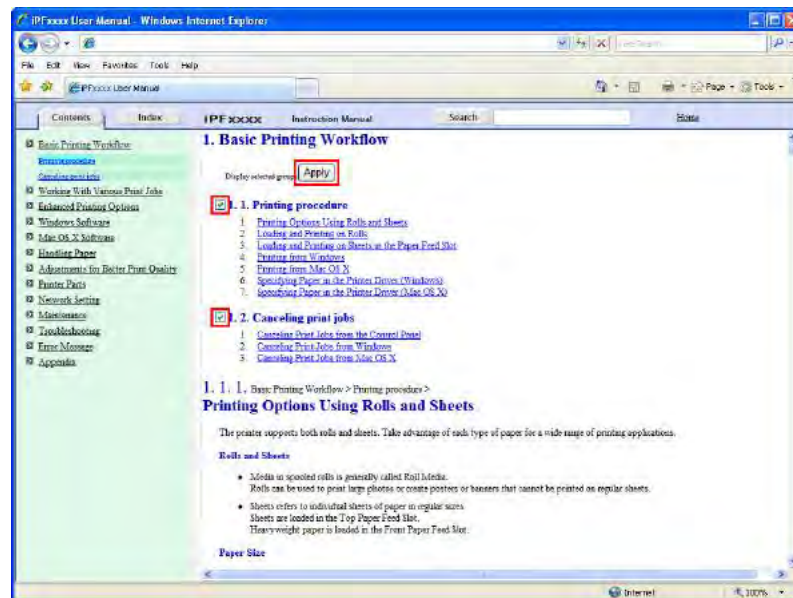





## Printing a group of individual topics in the manual

When you access printable HTML versions from subtitles in the table of contents, you can specify a group of topics to print.


1. Click a section title in the table of contents. Here, **Basic Printing Workflow** is used as an example.

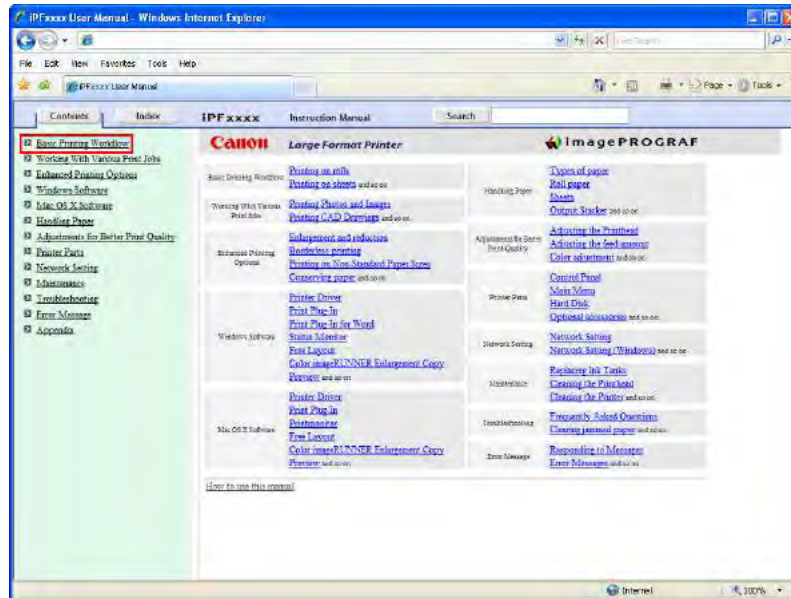


2. Under **Basic Printing Workflow**, click **Printing Procedure**.

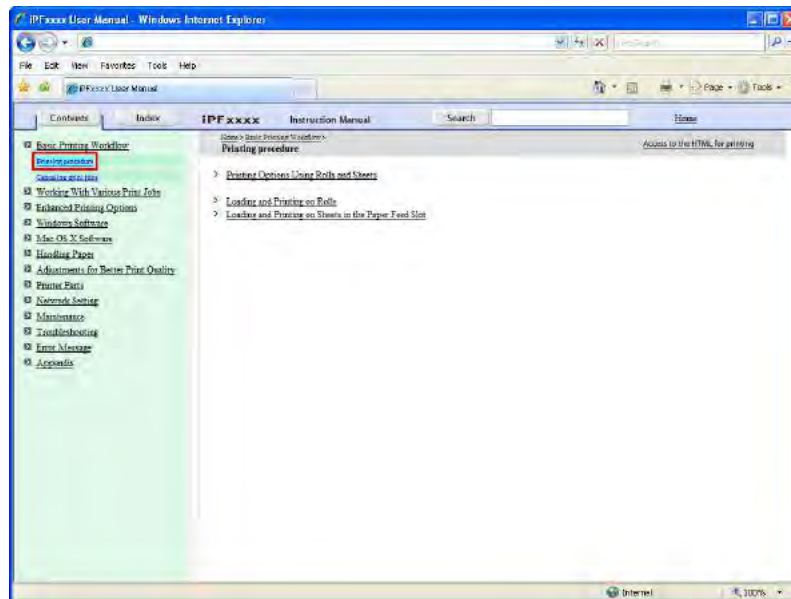


### 3. Click **Access to the HTML for printing** in the title area.

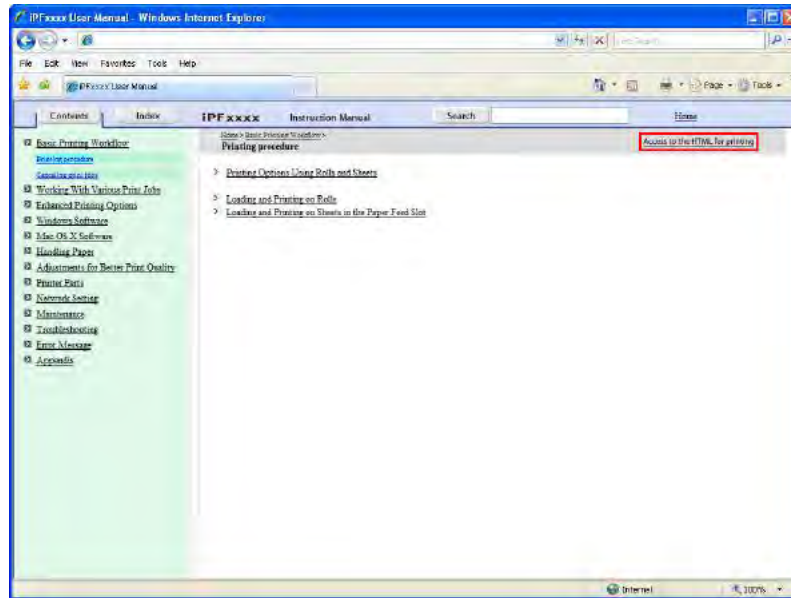

The topics in **Printing Procedure** are displayed together in HTML format, ready for printing.

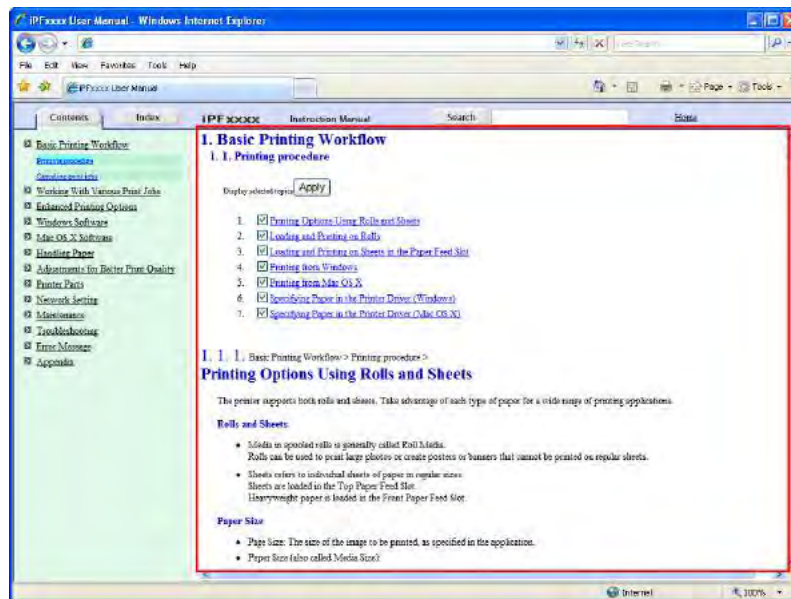

4. Clear the topics you will not print and click the **Apply** button.

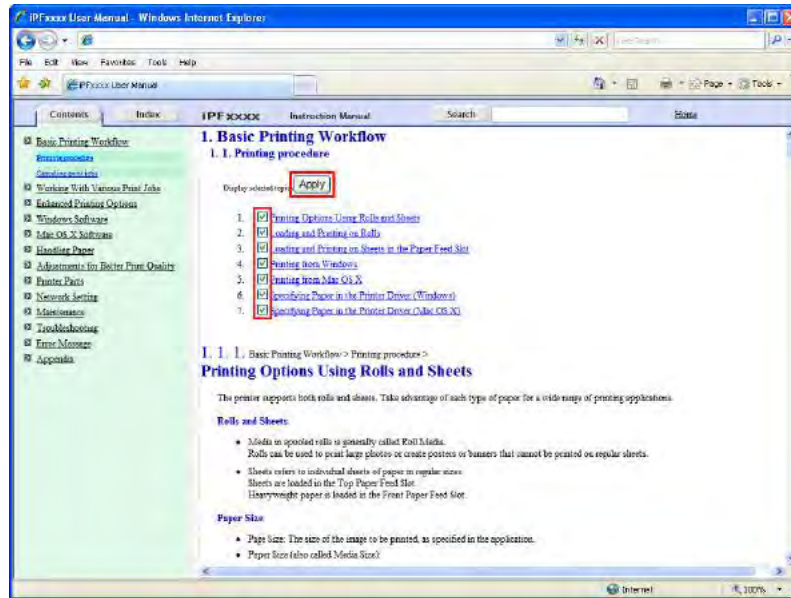


Printing selected topics

Print selected topics as follows.

1. Access the printing dialog box as follows, depending on your computer's operating system.

• Windows


In Windows, right-click anywhere in the explanation area except on a figure or a link. In the shortcut menu, click **Print** to display the **Print** dialog box.

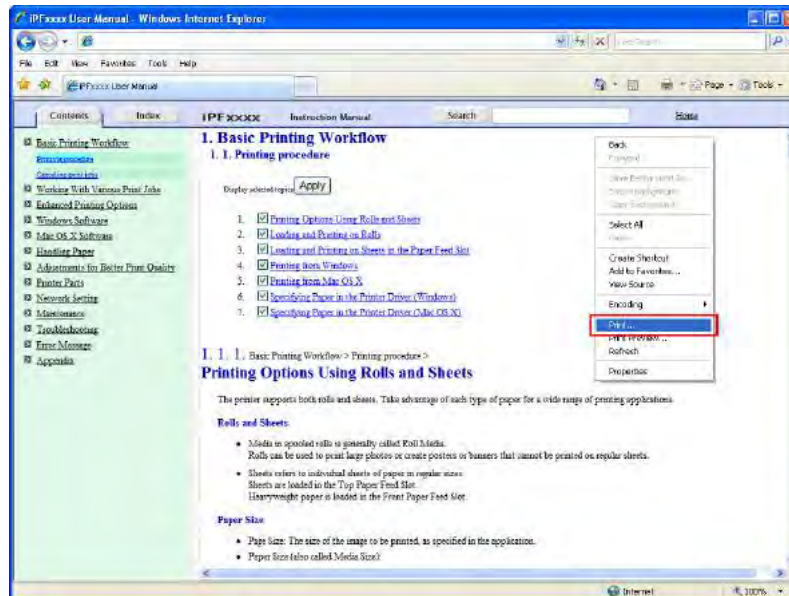




- Macintosh

On a Macintosh computer, click anywhere in the explanation area except on a figure or a link while holding the Ctrl key. In the shortcut menu, click **Print Frame** to display the **Print** dialog box.

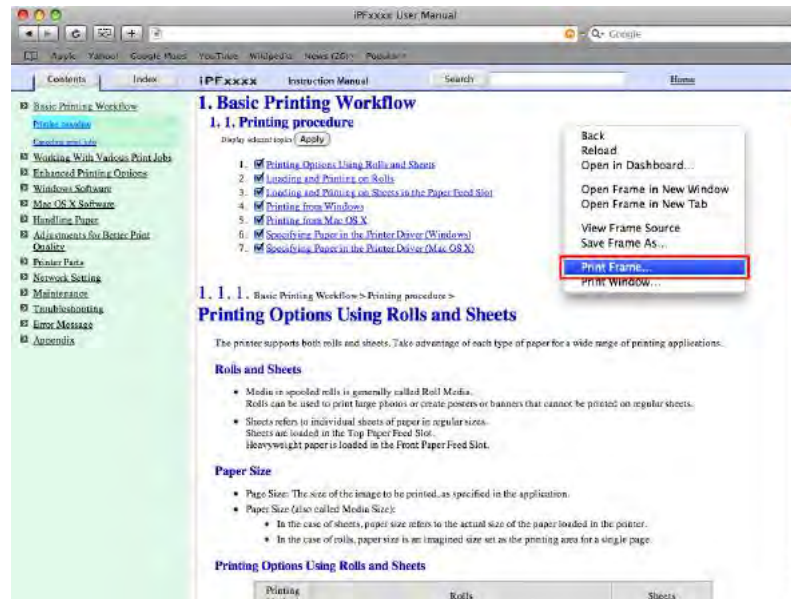


2. Specify conditions as needed, and then click **Print** (Windows) or **Print** (Macintosh).

- Windows

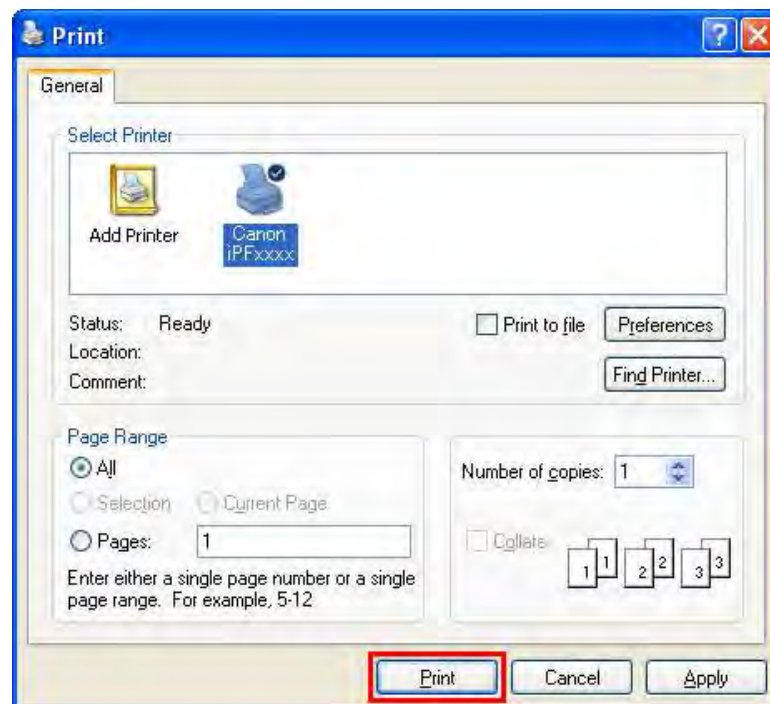

• Macintosh

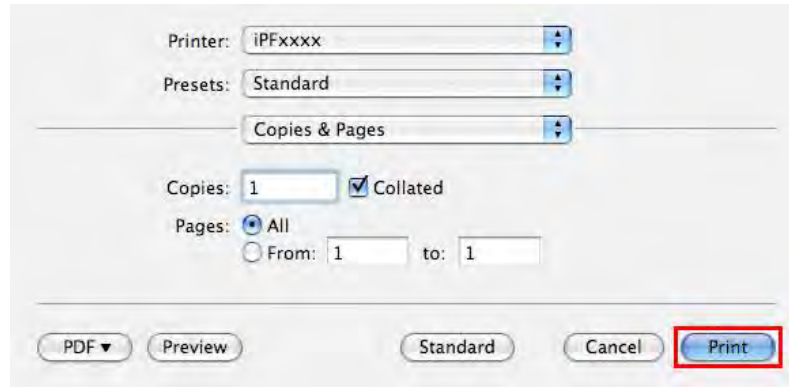


Note

- To print only individual topics that are displayed, use this method.

## Disposal of the product

WEEE Directive ..... 932

## WEEE Directive

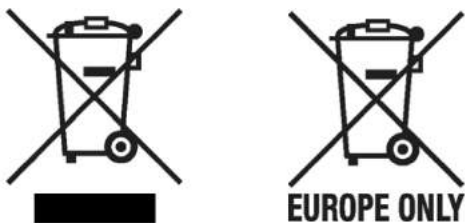

European Union (and EEA) only.

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC), the Battery Directive (2006/66/EC) and/or your national laws implementing those Directives. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EEA: Norway, Iceland and Liechtenstein)

Uitsluitend bestemd voor de Europese Unie (en EER).

Met deze symbolen wordt aangegeven dat dit product in overeenstemming met de AEEA-richtlijn (2002/96/EC), de richtlijn 2006/66/EC betreffende batterijen en accu's en/of de plaatselijk geldende wetgeving waarin deze richtlijnen zijn geïmplementeerd, niet bij het normale huisvuil mag worden weggegooid. Dit product dient te worden ingeleverd bij een hiervoor aangewezen inzamelpunt, bijv. door dit in te leveren bij een hiertoe erkend verkooppunt bij aankoop van een gelijksoortig product, of bij een officiële inzameldienst voor de recycling van elektrische en elektronische apparatuur (EEA) en batterijen en accu's. Door de potentiële gevaarlijke stoffen die gewoonlijk gepaard gaan met EEA, kan onjuiste verwerking van dit type afval mogelijk nadelige gevolgen hebben voor het milieu en de menselijke gezondheid. Uw medewerking bij het op juiste wijze weggooien van dit product draagt bij tot effectief gebruik van natuurlijke bronnen. Voor verdere informatie over recycling van dit product kunt u contact opnemen met uw plaatselijke gemeente, afvaldienst, officiële dienst voor klein chemisch afval of afvalstortplaats, of kunt u terecht op [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EER: Noorwegen, IJsland en Liechtenstein)

Endast för EU (och EEA).

De här symbolerna anger att produkten inte får slängas i hushållssoporna enligt WEEE-direktivet (2002/96/EG), batteridirektivet (2006/66/EG) och/eller nationell lagstiftning som implementerar dessa direktiv. Produkten ska lämnas in på en där för anvisad insamlingsplats, t.ex. hos handlare som är auktoriserade att byta in varor då nya, liknande köps (en mot en) eller på en återvinningsstation auktoriserad att hantera elektrisk och elektronisk utrustning (EE-utrustning) samt batterier och ackumulatörer. Olämplig hantering av avfall av den här typen kan ha negativ inverkan på miljön och människors hälsa på grund av de potentiellt farliga ämnen som vanligen återfinns i elektrisk och elektronisk utrustning. Din medverkan till en korrekt avfallshantering av produkten bidrar till effektiv användning av naturresurserna. Om du vill ha mer information om var du kan lämna in den här produkten, kontakta ditt lokala kommunkontor, berörd myndighet eller företag för avfallshantering eller besök [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EEA: Norge, Island och Liechtenstein)

---

 Pouze Evropská unie (a EHP)

Tento symbol znamená, že podle směrnice o OEEZ (2002/96/ES), směrnice o bateriích (2006/66/ES) a/nebo podle vnitrostátních právních prováděcích předpisů k těmto směrnici nemá být tento výrobek likvidován s odpadem z domácností. Tento výrobek má být vrácen do určeného sběrného místa, např. v rámci autorizovaného systému odběru jednoho výrobku za jeden nově prodaný podobný výrobek, nebo do autorizovaného sběrného místa pro recyklaci odpadních elektrických a elektronických zařízení (OEEZ) a baterií a akumulátorů. Nevhodné nakládání s tímto druhem odpadu by mohlo mít negativní dopad na životní prostředí a lidské zdraví, protože elektrická a elektronická zařízení zpravidla obsahují potenciálně nebezpečné látky. Vaše spolupráce na správné likvidaci tohoto výrobku napomůže efektivnímu využívání přírodních zdrojů. Chcete-li získat podrobné informace týkající se recyklace tohoto výrobku, obraťte se prosím na místní úřad, orgán pro nakládání s odpady, schválený systém nakládání s odpady či společnost zajišťující likvidaci domovního odpadu nebo navštivte webové stránky [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EHP: Norsko, Island a Lichtenštejnsko)

---

## Gjelder kun EU (og EØS).

Disse symbolene indikerer at dette produktet ikke skal kastes sammen med husholdningsaffall, i henhold til WEEE-direktivet (2002/96/EF), batteridirektivet (2006/66/EF) og/eller nasjonal lov som har implementert disse direktivene. Produktet må leveres til et dertil egnet innsamlingspunkt, det vil si på en autorisert en-til-en-basis når en kjøper et nytt lignende produkt, eller til et autorisert innsamlingssted for resirkulering av avfall fra elektrisk og elektronisk utstyr (EE-utstyr) og batterier og akkumulatorer. Feil håndtering av denne typen avfall kan være miljø- og helseskadelig på grunn av potensielt skadelige stoffer som ofte brukes i EE-utstyr. Din innsats for korrekt avhending av produktet vil bidra til effektiv bruk av naturressurser. Du kan få mer informasjon om resirkulering av dette produktet ved å kontakte lokale myndigheter, avfallsadministrasjonen, et godkjent program eller husholdningens renovasjonsselskap, eller gå til [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EØS: Norge, Island og Liechtenstein)

---

## Len Európska únia (a EHP)

Tieto symboly označujú, že podľa smernice o odpade z elektrických a elektronických zariadení (OEEZ) 2002/96/ES, smernice o batériách (2006/66/ES) a/alebo podľa vnútroštátnych právnych predpisov zahŕňajúcich tieto smernice sa tento produkt nesmie likvidovať spolu s domácim odpadom. Tento produkt je potrebné odovzdať do určenej zberne, napr. prostredníctvom výmeny za kúpu nového podobného produktu, alebo do autorizovaného zberného miesta na recykláciu odpadu z elektrických a elektronických zariadení (EEZ) a batérií a akumulátorov. Nesprávna manipulácia s takýmto typom odpadu môže mať negatívny vplyv na životné prostredie a ľudské zdravie, pretože elektrické a elektronické zariadenia obsahujú potenciálne nebezpečné látky. Vašou spoluprácou na správnej likvidácii tohto produktu prispějete k účinnému využívaniu prírodných zdrojov. Ďalšie informácie o recyklácii tohto produktu získate od svojho miestneho úradu, úradu zodpovedného za odpad, zo schváleného plánu o OEEZ alebo od spoločnosti zaisťujúcej likvidáciu domáceho odpadu alebo na webovej stránke [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EHP: Nórsko, Írsko a Lichtenštajnsko)

---

## Solo per l'Unione Europea e lo Spazio Economico Europeo.

Questi simboli indicano che il prodotto non può essere smaltito con i rifiuti domestici, ai sensi della Direttiva RAEE (2002/96/CE), della Direttiva sulle Batterie (2006/66/CE) e/o delle leggi nazionali che attuano tali Direttive. Il prodotto deve essere conferito a punto di raccolta designato, ad esempio il rivenditore in caso di acquisto di un nuovo prodotto simile oppure un centro di raccolta autorizzato per il riciclaggio di rifiuti di apparecchiature elettriche ed elettroniche (RAEE) nonché di batterie e accumulatori. Un trattamento improprio di questo tipo di rifiuti può avere conseguenze negative sull'ambiente e sulla salute umana a causa delle sostanze potenzialmente nocive solitamente contenute in tali rifiuti. La collaborazione dell'utente per il corretto smaltimento di questo prodotto contribuirà a un utilizzo efficace delle risorse naturali ed eviterà di incorrere in sanzioni amministrative ai sensi dell'art. 50 e successivi del Decreto Legislativo n. 22/97. Per ulteriori informazioni sul riciclaggio di questo prodotto, contattare le autorità locali, l'ente responsabile della raccolta dei rifiuti, un rivenditore autorizzato o il servizio di raccolta dei rifiuti domestici, oppure visitare il sito [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Spazio Economico Europeo: Norvegia, Islanda e Liechtenstein)

---



Samo za Evropsko unijo (in Evropski gospodarski prostor).

Ti simboli pomenijo, da tega izdelka skladno z Direktivo OEE0 (2002/96/ES), Direktivo 2006/66/ES in/ali nacionalno zakonodajo, ki uvaja ti direktivi, ne smete odlagati z nesortiranimi gospodinjskimi odpadki. Ta izdelek je treba odnesti na izbrano zbirno mesto, t. j. pooblaščenno trgovino, kjer ob nakupu novega (podobnega) izdelka vrnete starega, ali na pooblaščenno zbirno mesto za ponovno uporabo odpadne električne in elektronske opreme (EEO) ter baterij in akumulatorjev. Neustrezno ravnanje s to vrsto odpadkov lahko negativno vpliva na okolje in človeško zdravje zaradi potencialno nevarnih snovi, ki so pogosto povezane z EEO. Vaše sodelovanje pri pravilnem odlaganju tega izdelka predstavlja pomemben prispevek k smotrni izrabi naravnih virov. Za več informacij o ponovni uporabi tega izdelka se obrnite na lokalni mestni urad, pristojno službo za odpadke, predstavnika pooblaščenega programa za obdelavo odpadkov ali na lokalno komunalo. Lahko pa tudi obiščete našo spletno stran [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Evropski gospodarski prostor: Norveška, Islandija in Lihtenštajn)

Kizárólag az Európai Unió (valamint az EEA) részére.

Ezek a szimbólumok azt jelzik, hogy a termék hulladékkezelése a háztartási hulladéktól különválasztva, a WEEE - elektromos és elektronikus berendezések hulladékairól szóló (2002/96/EK) irányelvnek és, az elemekről és akkumulátorokról, valamint a hulladékelemekről és -akkumulátorokról szóló (2006/66/EK) irányelvnek megfelelően, és/vagy ezen irányelveknek megfelelő helyi előírások szerint történik. Ezen terméket az arra kijelölt gyűjtőhelyre kell juttatni, pl., hasonló termék vásárlásakor a régi becserélésére vonatkozó hivatalos program keretében, vagy az elektromos és elektronikus berendezések (EEE) hulladékainak gyűjtésére, valamint a hulladékelemek és hulladékakkumulátorok gyűjtésére kijelölt hivatalos gyűjtőhelyre. Az ilyen jellegű hulladékok nem előírászerű kezelése az elektromos és elektronikus berendezésekhez (EEE) általánosan kapcsolható potenciálisan veszélyes anyagok révén hatással lehet a környezetre és az egészségre. Ezen termék megfelelő módon történő eltávolításával Ön is hozzájárul a természeti források hatékony használatához. A termék újrahaznosítását illetően informálódjon a helyi polgármesteri hivatalnál, a helyi közterület-fenntartó vállalatnál, a hivatalos hulladéklerakó telephelyen, vagy a háztartási hulladék begyűjtését végző szolgáltatónál, illetve látogasson el a [www.canon-europe.com/environment](http://www.canon-europe.com/environment) internetes oldalra.

(EEA : Norvégia, Izland és Liechtenstein)

Apenas para a União Europeia (e AEE)

Estes símbolos indicam que este produto não deve ser eliminado juntamente com o seu lixo doméstico, segundo a Directiva REEE de 2002/96/CE, a Directiva de Baterias (2006/66/CE) e / ou a sua legislação nacional que transponha estas Directivas. Este produto deve ser entregue num ponto de recolha designado, por exemplo num local autorizado de troca quando compra um equipamento novo idêntico, ou num local de recolha autorizado para reciclar equipamento eléctrico e electrónico (EEE) em fim de vida, bem como pilhas e baterias. O tratamento inadequado deste tipo de resíduos pode ter um impacto negativo no ambiente e na saúde humana, devido a substâncias potencialmente perigosas que estão associadas com equipamentos do tipo EEE. A sua cooperação no tratamento correcto deste produto irá contribuir para a utilização mais eficaz dos recursos naturais. Para obter mais informações acerca de como reciclar este produto, por favor contacte as suas autoridades locais responsáveis pela matéria, serviço de recolha aprovado para pilhas e baterias ou serviço de recolha de resíduos sólidos domésticos da sua municipalidade, ou visite [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(AEE: Noruega, Islândia, e Liechtenstein)

Üksnes Euroopa Liit (ja Euroopa Majanduspiirkond).

Antud sümbolid viitavad sellele, et vastavalt WEEE direktiivile (2002/96/EÜ), patareide direktiivile (2006/66/EÜ) ja/või nimetatud direktiive rakendavatele riiklikele õigusaktidele ei või seda toodet visata ära koos majapidamisjäätmetega. Antud toode tuleb anda vastavasse kogumispunkti, nt üks ühe vastu, kui ostad uue sarnase toote, või vastavasse elektri- ja elektroonikaseadmete jäätmete ning patareide ja akude ümbertöötlemiseks mõeldud kogumispunkti. Antud liiki prügi vale käitlemine võib kahjustada keskkonda ja inimeste tervist elektri- ja elektroonikajäätmetes tavaliselt leiduvate potentsiaalselt ohtlike ainete tõttu. Antud toote ettenähtud nõuete kohase kõrvaldamisega aitate efektiivselt kasutada loodusvarasid. Täiendava teabe saamiseks antud toote ringlussevõtu kohta võtke ühendust kohaliku linnavalitsusega, jäätmekäitlejaga, lubatud skeemiga või majapidamisjäätmete prügilateenistusega või külastage Interneti-lehekülge [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Euroopa Majanduspiirkond: Norra, Island ja Liechtenstein)

Paredzēts tikai Eiropas Savienības valstīm (un EVA).

Šie simboli norāda, ka atbilstoši ES direktīvai par izlietotu elektrisku un elektronisku aparatūru (2002/96/EK), direktīvai par baterijām un akumulatoriem (2006/66/EK) un vietējai likumdošanai no šī produkta nedrīkst atbrīvoties, izmetot to kopā ar sadzīves atkritumiem. Šis produkts ir jānodod piemērotā savākšanas punktā, piemēram, autorizētā veikalā, kur iegādājaties līdzīgu jaunu produktu un veco atstājat vietā, vai autorizētā dienestā, kas nodarbojas ar izlietotas elektriskās un elektroniskās aparatūras (waste electrical and electronic equipment — WEEE) otrreizēju pārstrādi. Nepareizi apejoties ar šāda veida izlietotu aparatūru, var apdraudēt vidi un cilvēka veselību potenciāli bīstamu vielu dēļ, kas parasti ietilpst elektriskajā un elektroniskajā aparatūrā lietotajos sakausējumos. Turklāt pareiza atbrīvošanās no šī produkta sekmē racionālu dabas resursu izlietojumu. Lai saņemtu plašāku informāciju par vietām, kur izlietotu aparatūru var nodot otrreizējai pārstrādei, sazinieties ar vietējās pašvaldības pārstāvjiem, dienestu, kas atbild par atkritumu savākšanu, pilnvarotu WEEE struktūru vai iestādi, kas veic atbrīvošanos no sadzīves atkritumiem vai apmeklējiet tīmekļa vietni [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Eiropas Ekonomiskā zona: Norvēģija, Īslande un Lihtenšteina).

Tik Europos Sąjungai (ir Europos Ekonominei Zonai)

Šie simboliai reiškia, kad šio gaminio negalima išmesti į buitines atliekas, kaip reikalauja WEEE Direktyva (2002/96/EB) ir Baterijų Direktyva (2006/66/EB) ir (ar) jūsų šalies nacionaliniai įstatymai, kuriais šios Direktyvos yra įgyvendinamos. Šį gaminį reikia pristatyti į specialų surinkimo punktą, pavyzdžiui, mainais, kai jūs perkate naują panašų gaminį arba į specialią surinkimo vietą, kuri perdirba elektrinės ir elektroninės įrangos atliekas bei naudotas baterijas ir akumulatorius. Dėl netinkamo šio tipo atliekų tvarkymo gali nukentėti aplinka bei iškyla grėsmė žmogaus sveikatai dėl potencialiai kenksmingų medžiagų, iš esmės susijusių su elektrine ir elektronine įranga. Bendradarbiaudami teisingai utilizuojant šiuos gaminius, jūs padėsite efektyviai naudoti gamtinius išteklius. Daugiau informacijos apie gaminio perdirbimą jums gali suteikti vietinis biuras, atliekų tvarkymo bendrovė, sertifikuoti organai ar buitinių atliekų surinkimo įmonės. Be to, aplankykite interneto svetainę [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Europos Ekonominė Zona: Norvegija, Islandija ir Lichtenšteinas)

Union européenne (et Espace économique européen) uniquement.

Ces symboles indiquent que ce produit ne doit pas être mis au rebut avec les ordures ménagères, comme le spécifient la Directive européenne DEEE (2002/96/EC), la Directive européenne relative à l'élimination des piles et des accumulateurs usagés (2006/66/EC) et les lois en vigueur dans votre pays, appliquant ces directives. Ce produit doit être confié à un point de collecte désigné, par exemple, chaque fois que vous achetez un produit similaire neuf, ou à un point de collecte agréé pour le recyclage équipements électriques ou électroniques (EEE) et des piles et accumulateurs. Le traitement inapproprié de ce type de déchet risque d'avoir des répercussions sur l'environnement et la santé humaine, du fait de la présence de substances potentiellement dangereuses généralement associées aux équipements électriques ou électroniques. Votre coopération envers la mise au rebut correcte de ce produit contribuera à l'utilisation efficace des ressources naturelles. Pour de plus amples informations sur le recyclage de ce produit, veuillez contacter vos services municipaux, votre éco-organisme ou les autorités locales. Vous pouvez également vous rendre sur le site [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Espace économique européen : Norvège, Islande et Liechtenstein)



Tylko kraje Unii Europejskiej (i Europejskiego Obszaru Gospodarczego).

Te symbole oznaczają, że produkt należy wyrzucać oddzielnie od odpadów domowych, zgodnie z dyrektywą WEEE w sprawie zużytego sprzętu elektrycznego i elektronicznego (2002/96/EC) lub dyrektywą w sprawie baterii (2006/66/EC) i/lub przepisami krajowymi, wdrażającymi te dyrektywy. Zużyty sprzęt powinien zostać przekazany do punktu zbiórki sprzętu (EEE), a w przypadku zakupu nowego na zasadzie wymiany jeden do jednego przy zakupie podobnego co do rodzaju produktu. Użytkownicy baterii i akumulatorów mają obowiązek korzystać z dostępnego programu zwrotu, recyklingu i utylizacji baterii i akumulatorów. Niewłaściwe postępowanie z tego typu odpadami może mieć wpływ na środowisko i zdrowie ludzi ze względu na substancje potencjalnie niebezpieczne ogólnie związane ze zużytym sprzętem elektrycznym i elektronicznym. Państwa współpraca w zakresie właściwej utylizacji tego produktu przyczyni się do efektywnego wykorzystania zasobów naturalnych. W celu uzyskania informacji o sposobie recyklingu tego produktu prosimy o kontakt z właściwym urzędem miejskim lub zakładem gospodarki komunalnej lub zapraszamy na stronę [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Europejski Obszar Gospodarczy: Norwegia, Islandia i Liechtenstein)

Gælder kun i EU (og EØS).

Disse symboler betyder, at produktet ikke må bortskaffes sammen med husholdningsaffald i henhold til WEEE-direktivet (2002/96/EF), batteridirektivet (2006/66/EF) og/eller den lokale lovgivning, som disse direktiver er gennemført i. Produktet skal afleveres på et godkendt indsamlingssted, f.eks. i overensstemmelse med en godkendt én-for-én-procedure, når du indkøber et nyt tilsvarende produkt, eller på et godkendt indsamlingssted for genanvendeligt affald fra elektrisk og elektronisk udstyr samt for batterier og akkumulatorer. Forkert håndtering af denne type affald kan muligvis få negative konsekvenser for miljøet og menneskers helbred på grund af de potentielt sundhedsskadelige substanser, der generelt associeres med elektrisk og elektronisk udstyr. Når du foretager korrekt bortskaffelse af produktet, bidrager dette også til effektiv brug af naturressourcerne. Kontakt din kommune, den lokale affaldsmyndighed, forvalterne af en godkendt affaldsordning eller det lokale affaldsanlæg, eller besøg [www.canon-europe.com/environment](http://www.canon-europe.com/environment) for at få flere oplysninger om genbrug af dette produkt.

(EØS: Norge, Island og Liechtenstein)

Ευρωπαϊκή Ένωση (και ΕΟΧ) μόνο.

Αυτά τα σύμβολα υποδεικνύουν ότι αυτό το προϊόν δεν πρέπει να απορρίπτεται μαζί με τα οικιακά απορρίμματα, σύμφωνα με την Οδηγία για τα Απόβλητα Ηλεκτρικού και Ηλεκτρονικού Εξοπλισμού (ΑΗΗΕ) (2002/96/ΕΚ), την Οδηγία για τις Ηλεκτρικές Στήλες (2006/66/ΕΚ) ή/και την εθνική νομοθεσία που εφαρμόζει τις Οδηγίες εκείνες. Αυτό το προϊόν πρέπει να παραδίδεται σε καθορισμένο σημείο συλλογής, π.χ. σε μια εξουσιοδοτημένη βάση ανταλλαγής, όταν αγοράζετε ένα νέο παρόμοιο προϊόν ή σε μια εξουσιοδοτημένη θέση συλλογής για την ανακύκλωση των αποβλήτων ηλεκτρικού και ηλεκτρονικού εξοπλισμού (ΗΗΕ) και ηλεκτρικών στηλών και συσσωρευτών. Ο ακατάλληλος χειρισμός αυτού του τύπου αποβλήτων θα μπορούσε να έχει πιθανό αρνητικό αντίκτυπο στο περιβάλλον και την υγεία του ανθρώπου, λόγω δυνητικών επικίνδυνων ουσιών που γενικά συνδέονται με τον ΗΗΕ. Η συνεργασία σας για τη σωστή απόρριψη αυτού του προϊόντος θα συμβάλει στην αποτελεσματική χρήση των φυσικών πόρων. Για περισσότερες πληροφορίες σχετικά με ανακύκλωση αυτού του προϊόντος, επικοινωνήστε με το τοπικό γραφείο της πόλης σας, την υπηρεσία απορριμμάτων, το εγκεκριμένο σχήμα ή την υπηρεσία απόρριψης οικιακών αποβλήτων ή επισκεφθείτε τη διεύθυνση [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Ευρωπαϊκός Οικονομικός Χώρος: Νορβηγία, Ισλανδία και Λιχτενστάιν)

Sólo para la Unión Europea (y el Área Económica Europea).

Estos símbolos indican que este producto no debe desecharse con los residuos domésticos de acuerdo con la Directiva sobre RAEE (2002/96/CE) y la Directiva sobre Pilas y Acumuladores (2006/66/CE) y/o la legislación nacional que implemente dichas Directivas. Este producto deberá entregarse en un punto de recogida designado, por ejemplo, en un establecimiento autorizado al adquirir un producto nuevo similar o en un centro autorizado para la recogida de residuos de aparatos eléctricos y electrónicos (RAEE), baterías y acumuladores. La gestión incorrecta de este tipo de residuos puede afectar al medio ambiente y a la salud humana debido a las sustancias potencialmente nocivas que suelen contener estos aparatos. Su cooperación en la correcta eliminación de este producto contribuirá al correcto aprovechamiento de los recursos naturales. Los usuarios tienen derecho a devolver pilas, acumuladores o baterías usados sin coste alguno. El precio de venta de pilas, acumuladores y baterías incluye el coste de la gestión medioambiental de su desecho, y bajo ninguna circunstancia se indicará por separado la cuantía de dicho coste en la información y la factura suministradas a los usuarios finales. Si desea más información sobre el reciclado de este producto, póngase en contacto con el departamento municipal, el servicio o el organismo encargado de la gestión de residuos domésticos o visite [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Área Económica Europea: Noruega, Islandia y Liechtenstein)

Vain EU- ja EEA-alueelle.

Nämä tunnuksot osoittavat, että sähkö- ja elektroniikkalaiteromua koskeva direktiivi (WEEE-direktiivi, 2002/96/EY), paristoista ja akuista annettu direktiivi (2006/66/EY) sekä kansallinen lainsäädäntö kieltävät tuotteen hävittämisen talousjätteen mukana. Tuote on vietävä asianmukaiseen keräyspisteeseen, esimerkiksi kodinkoneliikkeeseen uutta vastaavaa tuotetta ostettaessa tai viralliseen sähkö- ja elektroniikkalaiteromun tai paristojen ja akkujen keräyspisteeseen. Sähkö- ja elektroniikkalaiteromun virheellinen käsittely voi vahingoittaa ympäristöä ja ihmisten terveyttä, koska laitteet saattavat sisältää ympäristölle ja terveydelle haitallisia aineita. Tuotteen asianmukainen hävittäminen säästää samalla luonnonvaroja. Jos haluat lisätietoja tämän tuotteen kierrätyksestä, ota yhteys kunnan jätehuoltoviranomaisiin tai käyttämäsi jätehuoltoyhtiöön tai käy osoitteessa [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EEA-maat: Norja, Islanti ja Liechtenstein)

Samo za Europsku uniju (i Europski gospodarski prostor).

Oznaka pokazuje da se baterije i akumulatori, korišteni u ovom proizvodu, odlažu odvojeno od kućnog otpada, u skladu s direktivom 2002/96/ EZ-a ("Direktiva") i lokalnim zahtjevima koji primjenjuju te Direktive. Ovaj bi proizvod trebao biti prenesen do određene točke sakupljanja, npr. na neku dozvoljenu bazu u omjeru 1:1 kada kupite novi sličan proizvod, ili na ovlašteno mjesto za sakupljanje istrošene električne i elektronske opreme, (waste electrical and electronic equipment – EEE) baterija i akumulatora. Neodgovarajuće rukovanje ovim tipom otpada može utjecati na okoliš i ljudsko zdravlje zbog potencijalno opasnih supstanci koje se najčešće nalaze uz EEE. Vaša suradnja u pravilnom zbrinjavanju ovog proizvoda doprinjet će efikasnoj uporabi prirodnih resursa. Za više informacija o recikliranju ovog proizvoda, molimo vas da kontaktirate svoj lokalni gradski ured, lokalne vlasti, pogledate odobrenu shemu, kontaktirajte vašu komunalnu službu za uklanjanje radioaktivnog otpada ili posjetite [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Europski gospodarski prostor: Norveška, Island i Lihtenštajn)

## Nur Europäische Union (und EWR)

Diese Symbole weisen darauf hin, dass dieses Produkt gemäß WEEE-Richtlinie 2002/96/EG (Richtlinie über Elektro- und Elektronik-Altgeräte), Batterien-Richtlinie (2006/66/EG) und/oder nationalen Gesetzen zur Umsetzung dieser Richtlinien nicht über den Hausmüll entsorgt werden darf. Dieses Produkt muss bei einer dafür vorgesehenen Sammelstelle abgegeben werden. Dies kann z. B. durch Rückgabe beim Kauf eines neuen ähnlichen Produkts oder durch Abgabe bei einer autorisierten Sammelstelle für die Wiederaufbereitung von Elektro- und Elektronik-Altgeräten sowie Batterien und Akkumulatoren geschehen. Der unsachgemäße Umgang mit Altgeräten kann aufgrund potenziell gefährlicher Stoffe, die häufig in Elektro- und Elektronik-Altgeräte enthalten sind, negative Auswirkungen auf die Umwelt und die menschliche Gesundheit haben. Durch Ihre Mitarbeit bei der sachgemäßen Entsorgung dieses Produkts tragen Sie zu einer effektiven Nutzung natürlicher Ressourcen bei. Um weitere Informationen über die Wiederverwertung dieses Produkts zu erhalten, wenden Sie sich an Ihre Stadtverwaltung, den öffentlich-rechtlichen Entsorgungsträger, eine autorisierte Stelle für die Entsorgung von Elektro- und Elektronik-Altgeräten oder Ihre Müllabfuhr oder besuchen Sie [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EWR: Norwegen, Island und Liechtenstein)

Только для Европейского Союза (Европейской экономической зоны).

Эти символы указывают, что данный продукт не должен утилизироваться вместе с хозяйственно-бытовыми отходами в соответствии с Директивой WEEE (2002/96/EC), Директивой об аккумуляторах 2006/66/EC и/или законами Вашей страны, осуществляющими данные Директивы. Данное изделие должно быть передано в предназначенный для этого пункт сбора, например, на основе авторизованного обмена «один к одному», когда Вы покупаете подобное новое изделие, или в авторизованное место сбора отходов электрического и электронного оборудования, батарей и аккумуляторов для переработки. Неправильное обращение с отходами подобного типа может иметь влияние на окружающую среду и здоровье человека из-за потенциально опасных для здоровья веществ, которые, как правило, тесно связаны с электрическим и электронным оборудованием. Ваше сотрудничество в области правильной утилизации данного изделия вносит вклад в рациональное использование природных ресурсов. Чтобы узнать больше информации о переработке отходов батарей и аккумуляторов, пожалуйста, обратитесь в местную городскую администрацию, орган по работе с отходами или предприятие по утилизации отходов, или зайдите на [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Европейская экономическая зона: Норвегия, Исландия и Лихтенштейн)

## Només per a la Unió Europea (i EEA)

Aquests símbols indiquen que aquest producte no s'ha de llençar amb les escombraries de la llar, d'acord amb la RAEE (2002/96/EC), la Directiva relativa a piles i acumuladors (2006/66/EC) i la legislació nacional que implementi aquestes directives. Aquest producte s'hauria de lliurar en un dels punts de recollida designats, com per exemple, intercanviant un per un en comprar un producte similar o lliurant-lo en un lloc de recollida autoritzat per al reciclatge de residus d'aparells elèctrics i electrònics (EEE) i piles i acumuladors. La manipulació inadequada d'aquest tipus de residus podria tenir un impacte negatiu en l'entorn i en la salut humana, a causa de les substàncies potencialment perilloses que normalment estan associades a l'EEE. La vostra cooperació a l'hora de rebutjar correctament aquest producte contribuirà a la utilització efectiva dels recursos naturals. Els usuaris tenen dret a retornar les bateries o els acumuladors usats sense cap càrrec. El preu de venda de les bateries i els acumuladors inclou el cost de la gestió ambiental dels residus i, sota cap circumstància, l'import d'aquest cost s'especificarà per separat en aquest fullet o en la factura que es lliuri a l'usuari final. Per a més informació sobre el reciclatge d'aquest producte, contacteu amb l'oficina municipal, les autoritats encarregades dels residus, el pla de residus homologat o el servei de recollida d'escombraries domèstiques de la vostra localitat o visiteu [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EEA: Noruega, Islàndia i Liechtenstein)

Doar pentru Uniunea Europeană (și EEA).

Aceste simboluri indică faptul că acest produs nu trebuie evacuat împreună cu deșeurile menajere, în conformitate cu Directiva WEEE (2002/96/EC), Directiva referitoare la baterii (2006/66/EC) și/sau legile dvs. naționale ce implementează aceste Directive. Acest produs trebuie înmănat punctului de colectare adecvat, ex: printr-un schimb autorizat unu la unu atunci când cumpărați un produs nou similar sau la un sit de colecție autorizat pentru reciclarea reziduurilor de echipament electric și electronic (EEE) și baterii și acumulatori. Administrarea neadecvată a acestui tip de deșeuri, ar putea avea un impact asupra mediului și asupra sănătății umane datorită substanțelor cu potențial de risc care sunt în general asociate cu EEE. Cooperarea dvs. în direcția evacuării corecte a acestui produs va contribui la o utilizare eficientă a resurselor naturale. Pentru mai multe informații despre reciclarea acestui produs, vă rugăm să contactați biroul dvs. local, autoritățile responsabile cu deșeurile, schema aprobată sau serviciul dvs. responsabil cu deșeurile menajere sau vizitați-ne la [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(EEA: Norvegia, Islanda, Lichtenstein)

Yalnızca Avrupa Birliği (ve AEA).

Bu simgeler, WEEE Direktifi (2002/96/AT), Pil Direktifi (2006/66/AT) ve/veya bu Direktifleri uygulamaya koyan ulusal kanunlarınız uyarınca bu ürünün evsel atıklarınızla birlikte atılmaması gerektiğini gösterir. Bu ürün örneğin, benzer bir yeni ürün aldığınızda yetkili bir değiştirme esaslı toplama noktası veya elektrikli ve elektronik cihazlar (EEE) ile pil ve akü geri dönüşümü için yetkili bir toplama merkezi gibi belirlenmiş bir toplama noktasına götürülmelidir. Bu gibi atıkların gerektiği şekilde işlem görmemesi genel olarak EEE ile bağlantılı olan tehlikeli olabilecek maddeler nedeniyle çevre ve insan sağlığı üzerinde olumsuz etkiye yol açabilir. Bu ürünün düzgün şekilde atılması için işbirliği yapmanız doğal kaynakların verimli şekilde kullanımına katkıda bulunacaktır. Bu ürünün geri dönüşümü hakkında daha fazla bilgi için lütfen belediyeniz, atık merkeziniz, onaylı atık programı veya çöp toplama servisine başvurun ya da [www.canon-europe.com/environment](http://www.canon-europe.com/environment) adresini ziyaret edin.

(AEA: Norveç, İzlanda ve Lihtenştayn)

Тільки для Європейського Союзу (та Європейської економічної зони).

Ці символи вказують, що даний продукт не повинен утилізуватися разом з господарчо-побутовими відходами згідно Директиви WEEE (2002/96/EC), Директиви про батареї 2006/66/EC та/або законів Вашої країни, що реалізують ці Директиви. Даний виріб повинно бути передано до призначеного приймального пункту, наприклад, на базі авторизованого обміну «один до одного», якщо Ви купуєте подібний новий продукт, або до авторизованого місця збору відходів електричного та електронного обладнання, батарей та акумуляторів для подальшої переробки. Невідповідне обходження з подібними відходами може завдавати впливу на оточуюче середовище і здоров'я людини через присутність потенційно небезпечних речовин, які загалом тісно пов'язані з електричним та електронним обладнанням. Ваша співпраця щодо відповідної утилізації даного виробу робить внесок у раціональне використання природних ресурсів. Будь ласка, зверніться до місцевої адміністрації, органу по роботі з відходами або підприємства по утилізації відходів, щоб дізнатися більше про переробку даного виробу, або зверніться на [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(Європейська економічна зона: Норвегія, Ісландія та Ліхтенштейн)

Само за Европейския съюз (и ЕИП).

Тези символи указват, че този продукт не може да се изхвърля заедно с боклука от вашето домакинство, според Директивата ИУЕЕО (2002/96/EC), Директивата за батерии (2006/66/EC) и/или вашите национални закони, които изпълняват тези Директиви. Този продукт трябва да бъде предаден в обозначен събирателен пункт, т.е. в одобрена база, когато купувате нов подобен продукт или в одобрен събирателен пункт за рециклиране на отпадъци от електрическо и електронно оборудване (ЕЕО), батерии и акумулаторни батерии. Неправилното третиране на този вид отпадъци може да има потенциален вреден ефект върху околната среда и човешкото здраве, поради възможните опасни вещества, с които обикновено се свързва ЕЕО. Вашето съдействие за правилното изхвърляне на този продукт ще допринесе за ефективната употреба на естествените ресурси. За повече информация относно рециклирането на този продукт, моля свържете се с вашия местен офис, с органа, който отговаря за отпадъчните продукти, одобрената програма или учреждението по изхвърляне на боклука на вашето домакинство, или посетете [www.canon-europe.com/environment](http://www.canon-europe.com/environment).

(ЕИП: Норвегия, Исландия и Лихтенщайн)

تشير هذه الرموز إلى عدم التخلص من هذا المنتج في النفايات المنزلية العادية طبقاً لتوجيه الاتحاد الأوروبي WEEE (الخاص بنفايات المعدات الكهربائية والإلكترونية) (EC/96/2002)، والتوجيه الخاص بالبطاريات (EC/66/2006)، و/ أو القوانين المحلية التي تنطبق على تلك التوجيهات. يجب تقديم هذا المنتج إلى أحد مراكز تجميع النفايات المخصصة، على سبيل المثال، على أساس فردي عند شراء أحد المنتجات الجديدة المماثلة أو إلى موقع التجميع المعتمد الخاص بإعادة تدوير المعدات الكهربائية والإلكترونية (EEE) والبطاريات والمراكم. التعامل غير الصحيح مع هذا النوع من النفايات قد يكون له تأثيراً على البيئة وصحة الإنسان بسبب المواد الخطيرة المحتملة المرتبطة بشكل عام بتوجيه EEE (المعدات الكهربائية والإلكترونية). تعاونك في التخلص الملائم من هذا المنتج سيساهم في الاستعمال الفعال للمصادر الطبيعية. للحصول على مزيد من المعلومات حول إعادة تدوير هذا المنتج، برجاء الاتصال بمكتب المدينة المحلي الخاص بك، أو سلطة التخلص من النفايات أو البرنامج المعتمد أو مرفق خدمة التخلص من النفايات المنزلية أو التفضل بزيارة الموقع [www.canon-europe.com/environment](http://www.canon-europe.com/environment)

(المنطقة الاقتصادية الأوروبية : النرويج، وأيسلندا وليختنشتاين)

# Index

## A

Accounting ..... 388,390,391,394,398,399  
Additional Settings Pane ..... 450  
Adjusting the Vacuum Strength ..... 683  
AppleTalk Network ..... 793

## B

Bonjour Network ..... 800

## C

CAD ..... 19,20,22,26,27,617  
Cleaning ..... 689,694,819,820,837,873  
Color Adjustment ..... 221,226  
Color imageRUNNER Enlargement Copy .....  
286,288,513,515  
Configuring the IP Address ..... 404,773,774,775

## D

Device Settings Sheet ..... 242  
Drying Time ..... 640

## F

Favorites Sheet ..... 237  
Feed amount ..... 239,449  
Free Layout ..... 2,234,257,259,481,483

## G

Glossy Paper ..... 31,33

## H

HDI driver ..... 354,358  
Head Cleaning ..... 819

## I

Ink level ..... 886  
Ink level detection ..... 886  
Interface ..... 707,774,775,780,786,794

## L

Large-Format Printing ..... 314,325,329,340  
Layout Sheet ..... 233

## M

Main Menu Settings ..... 734  
Main Pane ..... 433

Main Sheet ..... 215  
Main menu ..... 704,705,722,734  
Maintenance Cartridge ..... 835,912  
Media Take-up Unit ..... 687,861

## N

NetWare network ..... 784  
Nozzle ..... 239,449,668,817

## O

Online ..... 695  
Open Preview ..... 184,208,216,236,244  
Orientation ..... 190,192,325,340  
Output Method ..... 231,382

## P

Page Setup Pane ..... 447  
Page Setup Sheet ..... 228  
PosterArtist ..... 181  
Power ..... 687  
Print Job Log ..... 390,399  
Print area ..... 85  
Printer Driver Settings ..... 202,425  
Printer modes ..... 696  
Printhead ..... 689,836,910  
Printing Vertical or Horizontal Banners ..... 115,116,120  
Printing at Actual Size ..... 92,95  
Problems ..... 877

## R

Removing printer drivers ..... 880  
Removing the Roll ..... 634,637  
Roll Holder ..... 623,649,685  
Rotate Page 90 degrees ..... 167,169,230  
reduce cutting dust ..... 648

## S

Save print jobs ..... 563,565,589  
Saving Print Jobs ..... 589  
Selecting the Paper Type ..... 632,650  
Size Options ..... 232  
Special Settings ..... 236  
Specifying Paper in the Printer Driver ..... 204,427  
Submenu ..... 697,705,735  
Support Pane ..... 451  
Support Sheet ..... 240

## T

Transfer ..... 841

**U**

Utility Sheet ..... 239

**V**

Vacuum Strength ..... 683

**W**

When to replace ..... 820





