

Warranty

Brilliant Lighting warrants this product against defects in manufacture and workmanship for a period of 1 year from date of purchase or as specified elsewhere (battery not included). This warranty is only valid for products installed and operated within the guidelines specified by Brilliant Lighting, and within the correct operating voltage ranges as stated on the product's rating label.

Warranty does not include damage or loss arising from incorrect installation, operation or maintenance of this product, damage caused through modification, incorrect installation, service by unqualified or unauthorised personnel or lack of regular maintenance and cleaning. Proof of installation by qualified personnel may be required, e.g. Electrical Safety Certificate. Proof of purchase must be supplied with all warranty claims.

This warranty is provided in addition to any other rights and remedies of the customer under any law. In applications not intended for household, personal or domestic use, liability is limited to replacement or reimbursement of product only. Brilliant Lighting does not warranty the costs of removal or re-installation of this product or associated components.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any claim under this warranty must be made within the specified warranty period from date of purchase of this product. To make a claim under the warranty; at your own expense take the product (with proof of purchase receipt or similar) to the store where you purchased the product or contact Brilliant Lighting at the address below.

This warranty is given by:

Brilliant Lighting (Aust) Pty. Ltd.
ABN 37 006 203 694
956 Stud Road Rowville, VIC 3178
Phone: 03 9765 2555
Email: warranty@brilliantlighting.com.au
MADE IN CHINA

Warning

1. Do not operate this fitting in harsh environmental conditions such as building sites.
2. Do not install it on surfaces which can move or vibrate.
3. Do not immerse any part of the fitting into water or any liquid.
4. Ensure unit plug into the power outlet are firm.
5. Do not attempt to perform modification or change parts within the unit.

Disposal

Please dispose of this packaging material thoughtfully.

Please dispose of this product thoughtfully once it has passed its useful life. When your smart device comes to the end of its life or you choose to update or upgrade it, please do not dispose of it with your normal household waste. Please recycle where facilities exist.

When disposing of this fitting, check with your local authority for suitable options.

Troubleshooting

Problem:

Smart device does not switch ON

Possible Cause	Suggested Solution
No Mains Power	Check connections, fuses and switches

Problem:

Cannot link smart device with BrilliantSmart app

Possible Cause	Suggested Solution
1. Modem signal weak	Place device and modem closer together
2. Router/modem/smart phone firewall is enabled	Disable firewalls on all devices
3. Internet connection is down	Contact your provider
4. BrilliantSmart app not installed correctly	Remove app and re-install

For any other problems connecting your smart device to BrilliantSmart app please visit:
www.brilliantsmart.com.au/faqs

Brilliant Lighting

956 Stud Road
Rowville Vic 3178 Australia

www.brilliantlighting.com.au

Australian Sales

T 03 9765 2555
T 1800 817 754 (interstate only)
F 03 9763 0277
E warranty@brilliantlighting.com.au

New Zealand Sales

T 09 974 9618
E sales@brilliantlighting.co.nz



Doorbell
Chime 21387/06




Designed for use with
BrilliantSmart WiFi Doorbell
20761/06

USER MANUAL

Box Content


- Doorbell chime x 1
- User Manual x 1

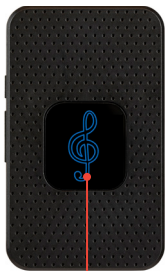

1 LED indicator



6 Speaker

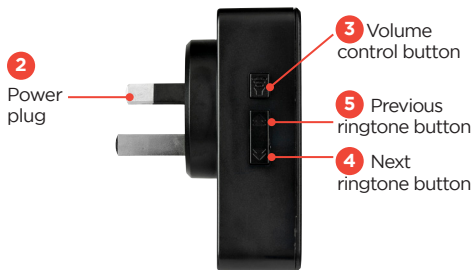

2

Power plug

3 Volume control button

5 Previous ringtone button

4 Next ringtone button

Technical Specifications

Model: 21387/06

Protection: Class II

Input Voltage: 230/240V AC 50Hz

Working Temperature: +5°C - 40°C

Dimensions: 73mm x 43mm x 32mm

RF Frequency: 433Mhz

Working distance: up to 20m
(depending on local conditions)

Ringtone levels: 0-110dB
5 levels - 4 plus Silent Mode

Rating: IP20

Weight: 54g

Warranty: 1 Year

THIS DOORBELL CHIME IS ONLY DESIGNED TO WORK WITH THE BRILLIANTSMART WIFI DOORBELL MODEL 20761/06.

THE BRILLIANTSMART WIFI DOORBELL MODEL 20761/06 MUST BE INSTALLED & WORKING BEFORE YOU CAN PAIR THE DOORBELL CHIME.



Installation

FOR YOUR SAFETY:

- If you are in any doubt as to the installation of this product, please consult a qualified electrical contractor before proceeding.
 - Do not install in a position where the fitting can be easily accessed by children or the infirm.
1. Unpack the fixture carefully and dispose of the packaging material thoughtfully.
 2. Ensure power outlet is switched OFF.
 3. Carefully plug the doorbell chime into the power outlet. Ensure the distance between the doorbell chime and doorbell are within working range. Suggested working range up to 20m.
 4. Before turning on the power, ensure you have installed a BrilliantSmart Doorbell Model No. 20761 and it is fully functioning.

Pairing with BrilliantSmart WiFi Doorbell

1. Turn on the power and your doorbell chime will be ready for pairing with the Smart WiFi Doorbell. Once the power is turned on, the doorbell chime will sound 'Ding-Dong' twice with the blue LED light blinking, and then stop.
2. Press the **volume control button '3'** to select the desired volume. Level 1 is mute function (when activated only the LED indicator light comes on). Level 2 to 5 increases the sound gradually.

3. Select your desired ringtone by pressing the **next ringtone button '4'**. After you have selected your desired ringtone, you can start to pair the doorbell chime with your BrilliantSmart WiFi Doorbell.
4. Press and hold the **volume control button '3'** for 5 seconds or more until you heard a 'Ding' sound from the doorbell chime.
5. Now your doorbell chime is in pairing mode which lasts for about 8 to 10 seconds. Press the BrilliantSmart WiFi Doorbell call button within the pairing time frame. If you miss the time frame please turn off the power and repeat from step 1 above.
6. After the doorbell chime pairing is successful, it will give a 'Ding Ding' sound.
7. Press the BrilliantSmart WiFi Doorbell call button again to confirm the doorbell chime pairing is successful. The doorbell chime will play the ringtone you selected previously and the LED indicator will blink.
8. The pairing process is completed.

NOTE:

- To change the ringtone, you will have to reset the doorbell chime by pressing and holding the **next ringtone button '4'** for 5 seconds or more. This will reset the doorbell chime to factory default mode and disconnect the doorbell chime from the BrilliantSmart WiFi Doorbell.
- Repeat steps 3 to 7 to select your desired ringtone and pair again with the BrilliantSmart WiFi Doorbell.