

# **Programming Guide**



205 Westwood Ave Long Branch, NJ 07740 1-877-742-TEST (8378) Fax: (732) 222-7088 salesteam@Tequipment.NET

# **DS1000B Series Digital Oscilloscope**

DS1204B/DS1104B/DS1074B

Aug. 2011

**RIGOL Technologies, Inc.** 

# **Guaranty and Declaration**

## Copyright

© 2008 RIGOL Technologies, Inc. All Rights Reserved.

## **Trademark Information**

**RIGOL** is registered trademark of **RIGOL** Technologies, Inc.

## **Publication Number**

PGA04108-1110

## Notices

- **RIGOL** products are protected by patent law in and outside of P.R.C..
- **RIGOL** Technologies, Inc. reserves the right to modify or change parts of or all the specifications and pricing policies at company's sole decision.
- Information in this publication replaces all previously corresponding material.
- **RIGOL** shall not be liable for losses caused by either incidental or consequential in connection with the furnishing, use or performance of this manual as well as any information contained. Any part of this document is forbidden to copy or photocopy or rearrange without prior written approval of **RIGOL**.

## **Product Certification**

**RIGOL** guarantees this product conforms to the standards of national and industrial. Meanwhile, the related standards conform to other ISO will get further. At present, DS1000B series has passed CE and LXI certification.

## Contact Us

If you have any problem or requirement when using our products, please contact **RIGOL** Technologies, Inc. or your local distributors, or visit: www.rigol.com

# Content

Chapter 1 Programming Introduction	1-1
Communication Interface	1-2
Command Introduction	1-3
Command Syntax	1-3
Symbol Description	1-4
Command Input	1-5
Parameter Type	1-6
Chapter 2 Command Systems	2-1
General Commands	2-2
SYSTem Commands	2-5
ACQuire Commands	2-12
DISPlay Commands	2-15
TIMebase Commands	2-21
TRIGger Commands	2-26
Trigger Control	2-28
EDGE Trigger	2-34
PULSe Trigger	2-35
VIDEO Trigger	2-36
PATTern Trigger	2-38
ALTernation Trigger	2-39
MATH Commands	2-48
CHANnel Commands	2-50
MEASure Commands	2-57
WAVeform Commands	2-69
KEY Commands	2-79
SAVe/RECall Commands	2-97
MASK Commands	2-103
CURSor Commands	2-109
Other Commands	2-116
Chapter 3 Programming Examples	3-1
Prepare for Programming	3-2
Program in Visual C++ 6.0	

Арр	pendix: Command Quick Reference A-Z	1
	Program in LabVIEW 8.6 3	-10
	Program in Visual Basic 6.0	3-8

# Chapter 1 Programming Introduction

This chapter provides guidance to the remote control programming of the DS1000B series digital oscilloscopes and introduction of the commands.

This chapter includes:

 Communication Interface
 Command Introduction Command Syntax Symbol Description Command Input

Parameter Type

## **Communication Interface**

Computers can communicate with the oscilloscope by sending and receiving messages over USB or LAN interface. Commands in the form of ASCII character strings are embedded in your computer to make control easier.

#### Operations that you can do with a computer and the oscilloscope include:

- Set up the oscilloscope;
- Relational measurements;
- Acquire data (waveforms or measurement data) from the oscilloscope.

#### **Equipment Connection:**

- **USB:** Use an USB data cable and connect the USB Device port on the rear panel of the oscilloscope to PC.
- LAN: Use a network cable and connet the oscilloscope to LAN.

# **Command Introduction**

## **Command Syntax**

The commands system of DS1000B series oscilloscope is a multistage tree structure, and each of sub-system is consists of a "Root" keyword and multilayered keywords. The commands are always begin with a ":"(except for IEEE commands) and the keywords are also separated by ":"; optional parameters are permitted to follow the keywords; "?" appeared following a command line denotes to query this function; besides, "**space**" is used to divide command and parameter.

For example: :TRIGger:EDGE:SLOPe {POSitive|NEGative|ALTernation} :TRIGger:EDGE:SLOPe?

**TRIGger** is the root keyword of the command, **EDGE** and **SLOPe** is separately its second and third keyword, all of them are separated by ":". Connects enclosed in the "{}" denote the parameters permitted to be set by user; "?" denotes to query; the command **:TRIGger:EDGE:SLOPe** is set apart from parameter using "**space**". "," is used to compart the parameters existed in some commands, for example: :TRIGger:PATTern:PATTern <value>,<mask>,<ext source>[,<edge source>,<edge>]

## **Symbol Description**

The following symbols are not "real" parts of the commands, but they are usually used to assist to explain the parameters containd in a command line.

## 1. Braces { }

The parameters or contents enclosed in " $\{\}$ " must be selected, and only one parameter or content could be selected once. All the options are separated by " $\|$ ".

For example:

 $\{\{1|ON\}|\{0|OFF\}\}$  indicateds that 1, ON, 0 or OFF can be selected at a time.

## 2. Square brackets []

Some keywords or contents are enclosed by square bracket "[]", which indicates that those parameters are optional and will be execute no matter whether been omitted or not.

For example: :TIMebase[:MAIN]:OFFSet <offset> [:MAIN] can be omitted.

## 3. Triangle Brackets < >

Parameter enclosed in "< >" should be replaced by a effective value. For example: :DISPlay:BRIGhtness <ncount> replaced by an effective value: :DISPlay:BRIGhtness 80

## **Command Input**

All the comands are not sensitive to both capital letter and lowercase, so you can use any kind of them. But if use abbreviation, the capital letters specified in commands must be written completely.

For example:

:TRIGger:ALTernation:SOURce also can be: :TRIG:ALT:SOUR or :trig:alt:sour

## **Parameter Type**

The commands contains 5 kinds of parameters, different parameters has different setting methods.

## 1. Boolean

The parameter should be "OFF", "ON", "0" or "1". For example: :DISPlay:PERSist {{1|ON}|{0|OFF}} "ON" and "1" denotes trun on (enable) the function, "OFF" and "0" denotes turn off (disable) the fuction.

## 2. Consecutive Integer

The parameter should be a consecutive integer. For example: :DISPlay:BRIGhtness <ncount> <ncount> could be the integer between 0 and 100 (including 0 and 100).

## 3. Consecutive Real Number

The parameters can be any value only in effective range precision permitting. For example:

:TRIGger:SENSitivity <count>

<count> could be any value between 0.1 and 1 (including 0.1 and 1).

## 4. Discrete

The parameters can only be the cited value. For example: :ACQuire:AVERages <count> <count> could only be 2, 4, 8, 16, 32, 64, 128, 256.

## 5. ASCII Character String

The parameter should be composed of ASCII character string. For example: :TRIGger:MODE <mod> <mod> could be EDGE, PULSe, VIDEO, PATTern or ALTernation.

# Chapter 2 Command Systems

In this chapter, we will introduce every comand in the DS1000B command systems. The introduction inludes command format, function description, query/Returned Format and some other notices that should pay attention to during using the commands.

DS1000B series support the following command subsystems:

- General Command
- SYSTem Command
- ACQuire Command
- DISPlayDISPlay Command
- TIMebase Command TRIGger Command Trigger Control EDGE Trigger PULSe Trigger VIDEO Trigger PATTern Trigger ALTernation Trigger
- MATH Command
- CHANnel Command
- MEASure Command
- WAVeform Command
- KEY Command
- SAVe/RECall Command
- MASK Command
- CURSor Command
- Other Command

# **General Commands**

IEEE Standards have defined some general commands which are applied to query basic information of the instrument or perform elementary operations. These commands always have 3 characters and with a "\*" marker.

DS1000B series support the following General Commands:

- \*IDN?
- \*RST
- \*LRN?
- \*OPC?

We will give detailed introductions for each command in the following parts.

#### 1. \*IDN?

#### **Command Format:**

\*IDN?

### Function:

The command queries the manufacturer, the oscilloscope model, the product serial and the software version.

#### **Returned Format:**

manufacturer, <model>, <serial>, <version>.

#### Example:

Rigol Technologies, DS1204B, DS10000000, 00.02.04.

#### 2. \*RST

Command Format:

\*RST

#### Function:

The command resets the system.

#### 3. \*LRN?

## Command Format:

\*LRN?

#### **Function:**

The command queries the system settings.

#### **Returned Format:**

The query returns the data of system settings in the form of a self-defined character string which could be downloaded to do the same settings in the future.

## 4. \*OPC?

## **Command Format:**

\*OPC?

## Function:

The command queries whether the command operation has been completed.

## **Returned Format:**

The query returns 0 or 1. 1 means operation has been completed, 0 means not.

# SYSTem Commands

SYSTem Commands are used for the basic operations of an oscilloscope: RUN/STOP control, operation of the error queue and system setup data.

SYSTem Commands include:

- :RUN
- :STOP
- :AUTO
- :SYSTem:ERRor
- :SYSTem:SETup

We will give detailed introductions for each command in the following parts.

#### 1. :RUN

#### **Command Format:**

:RUN

## Function:

Execute this command, the oscilloscope will start waveform sampling working. To stop working, execute **:STOP** command again.

## 2. :STOP

**Command Format:** :STOP

## Function:

Execute this command, the oscilloscope will stop waveform sampling working. To restart working, execute **:RUN** command again.

## 3. :AUTO

## **Command Format:**

:AUTO

## Function:

The command makes the oscilloscope tests all input waveforms and set the waveforms automatically to get the optimum conditions to display.

## 4. :SYSTem:ERRor

#### **Command Format:** :SYSTem:ERRor :SYSTem:ERRor?

## Function:

The command clears the queue of error information.

## **Returned Format:**

The query returns the last error, such as "Undefined header". If there is no error, return "0, No error".

For details about system error codes, please refer to page 2-8:

System Error Code

#### 5. :SYSTem:SETup

#### **Command Format:**

:SYSTem:SETup <setup\_data> :SYSTem:SETup?

## Function:

The command downloads the system setup data. <setup data> is a binary data that meets IEEE 488.2 # format.

## **Returned Format:**

The query returns the value of system setup data.

#### System Error Code

Up to 10 errors can be recorded in the system error queue. If not enough, the system will adopt FIFO manner to cover the original error record.

The SYST:ERR? Command is used to read the first error code in the form of "error code, error description", so as to reduce the error number of error queue. For instance, if no error appears, the system will return: 0, No error.

Besides, the :SYST:ERR Command is able to clear error queue.

Error Code	Mnemonic Symbol	Error Description
0	ERR_NONE,	No error
1	ERR_SAME_SETTING,	Same setting
2	ERR_INVALID_INPUT,	Invalid input
3	ERR_LIMIT_SETTING,	Setting limit
4	ERR_CH_OFFSET_LIMIT,	Channel offset limit
5	ERR_CH_SCALE_LIMIT,	Channel scale limit
6	ERR_CH_PROBE_LIMIT,	Channel probe limit
7	ERR_CH_FILTER_LIMIT,	Channel filter limit
8	ERR_TIME_OFFSET_LIMIT,	Timebase offset limit
9	ERR_TIME_SCALE_LIMIT,	Timebase scale limit
10	ERR_TIME_DELAYED_OFFSET_LIMIT,	Timebase of timedelay offset limit
11	ERR_TIME_DELAYED_SCALE_LIMIT,	Timebase of timedelay scale limit
12	ERR_TRIG_LEVEL_LIMIT,	Trigger level limit
13	ERR_MATH_VERT_OFFSET_LIMIT,	Math vertical offset limit
14	ERR_MATH_VERT_SCALE_LIMIT,	Math vertical scale limit
15	ERR_FFT_VERT_SCALE_LIMIT,	FFT vertical offset limit
16	ERR_FFT_VERT_OFFSET_LIMIT,	FFT vertical offset limit
17	ERR_FFT_HORIZ_SCALE_LIMIT,	FFT horizontal scale limit
18	ERR_FFT_HORIZ_OFFSET_LIMIT,	FFT horizontal offset limit
19	ERR_CUR_A_X_LIMIT,	CursorA X-Axial limit
20	ERR_CUR_B_X_LIMIT,	CursorB X-Axial limit
21	ERR_CUR_A_Y_LIMIT,	CursorA Y-Axial limit
22	ERR_CUR_B_Y_LIMIT,	CursorB Y-Axial limit
23	ERR_HOLDOFF_TIME_LIMIT,	Holdoff time limit
24	ERR_INTENSITY_LIMIT,	Intensity limit
25	ERR_PULSE_WIDTH_LIMIT,	Pulse width limit

26	ERR_VIDEO_LINE_LIMIT,	Video line limit
27	ERR_REC_INTERVAL_LIMIT,	Record interval limit
28	ERR_REC_END_FRAME_LIMIT,	Record end frame limit
29	ERR_PLAY_INTERVAL_LIMIT,	Play interval limit
30	ERR_PLAY_START_FRAME_LIMIT,	Play start frame limit
31	ERR_PLAY_CUR_FRAME_LIMIT,	Play current frame limit
32	ERR_PLAY_END_FRAME_LIMIT,	Play end frame limit
33	ERR_STOARAGE_START_FRAME_LIMIT,	Storage start frame limit
34	ERR_STOARGE_END_FRAME_LIMIT,	Storage end frame limit
35	ERR_REF_VERT_OFFSET_LIMIT,	Ref vertical offset limit
36	ERR_REF_VERT_SCALE_LIMIT,	Ref vertical scale limit
37	ERR_PF_MASK_LIMIT,	Passfail mask limit
38	ERR_SAMPLING_RATE_LIMIT,	Sampling rate limit
39	ERR_GRID_INTENSITY_LIMIT,	Grid intensity limit
40	ERR_TRIG_SENSITIVITY_LIMIT,	Trigger sensitivity limit
41	ERR_TRIG_SLOPE_TIME_LIMIT,	Trigger slop time limit
42	ERR_MEM_DEPTH_LIMIT,	Memory depth limit
43	ERR_FUNCTION_NOT_AVAILABLE,	Function not available
44	ERR_LOCATION_EMPTY,	Location empty
45	ERR_MEAS_ALREADY_SELECTED,	Measure already selected
46	ERR_NO_SIGNAL_FOUND,	No signal found
47	ERR_WAVEFORM_RECORD_FINISHED,	Waveform record finished
48	ERR_FILE_UTILITY_FAIL,	File utility fail
49	ERR_CHANNEL_INVALID,	Channel invalid
50	ERR_AUTO_KEY_LIMITED,	Auto key limited
51	ERR_NOT_ENOUGH_MEMORY,	Not enough memory
52	ERR_WAVE_SAVE_FAILED,	Waveform save failed
53	ERR_WAVE_LOAD_FAILED,	Waveform load failed
54	ERR_FILE_IS_COVERED,	File is covered
55	ERR_FILTER_IS_CLOSED,	Filter is closed
56	ERR_WAVE_TYPE_NONE,	No signal detected
57	ERR_WAVE_TYPE_DC,	DC signal detected
58	ERR_WAVE_TYPE_SINE,	Sine signal detected
59	ERR_WAVE_TYPE_RAMP,	Triangle signal detected
60	ERR_WAVE_TYPE_RECT,	Square signal detected
61	ERR_WAVE_TYPE_UNKNOWN,	Unknown signal detected
62	CMD_ERR,	Error header
63	CMD_NOT_PARSE,	Undefined header

64	ERR_PF_OUTPUT,	PassFail Out
65	ERR_MISSING_HW,	Missing Hardware
66	ERR_OUT_OF_RANGE	Out of range
67	ERR_CANNOT_EXECURE	Can't execute

# ACQuire Commands

ACQuire Commands are used to set the acquisition mode for oscilloscope.

ACQuire Commands include:

- :ACQuire:TYPE
- :ACQuire:MODE
- :ACQuire:AVERages
- :ACQuire:SRATe?

We will give detailed introductions for each command in the following parts.

### 1. :ACQuire:TYPE

#### **Command Format:**

:ACQuire:TYPE <type> :ACQuire:TYPE?

#### Function:

The command sets the acquisition type. The <type>may be NORMal(common sample), AVERage(average sample) or PEAKdetect(peak detection).

#### **Returned Format:**

The query returns Normal or AVERAGE, PEAKDETECT.

#### Example:

:ACQ:TYPE AVERage Set the acquisition type as average acquisition. :ACQ:TYPE? Return AVERAGE.

## 2. :ACQuire:MODE

#### **Command Format:**

:ACQuire:MODE <mode> :ACQuire:MODE?

#### Function:

The command sets the acquisition mode. The <mode> may be RTIMe (real time sample) or ETIMe (equal time sample).

#### **Returned Format:**

The query returns RTIME or ETIME.

## Example:

:ACQ:MODE ETIM Set the acquisition mode as equal time acquisition. :ACQ:MODE? Return ETIME.

## 3. :ACQuire:AVERages

#### **Command Format:**

:ACQuire:AVERages <count> :ACQuire:AVERages?

### Function:

The command sets the average acquisition time. The <count> range is  $2\sim 256$ , and the count increases by the power operation of 2.

## **Returned Format:**

The query returns 2 or 4, 8, 16, 32, 64, 128, 256.

#### Example:

:ACQ:AVER 16	Set the average acquisition time as 16.
:ACQ:AVER?	Return 16.

## 4. :ACQuire:SRATe?

#### **Command Format:**

:ACQuire:SRATe? [{<CHANnel<n>}]

### Function:

To query sample rate of CHANnel  $\langle n \rangle$ ,  $\langle n \rangle$  may be 1, 2, 3, 4.

#### **Returned Format:**

The query returns 5.000e005, the unit is Sa/s.

# **DISPlay Commands**

DISPlay Commands are used to set the display system.

DISPlay Commands include:

- :DISPlay:TYPE
- :DISPlay:GRID
- :DISPlay:PERSist
- :DISPlay:MNUDisplay
- :DISPlay:MNUStatus
- :DISPlay:SCReen
- :DISPlay:CLEar
- :DISPlay:BRIGhtness
- :DISPlay:INTensity
- :DISPlay:DATA?

We will give detailed introductions for each command in the following parts.

## 1. :DISPlay:TYPE

## **Command Format:**

:DISPlay:TYPE <type> :DISPlay:TYPE?

## Function:

The command sets the display type of acquisition points. The <type> may be VECTors (acquisition points are connected by lines) or DOTS (acquisition points are displayed by dots).

#### **Returned Format:**

The query returns VECTORS or DOTS.

## Example:

:DISP:TYPE VECT	Set the display type as vectors.
:DISP:TYPE?	Return VECTORS.

## 2. :DISPlay:GRID

## **Command Format:**

:DISPlay:GRID <grid> :DISPlay:GRID?

## Function:

The command sets the display type of screen grid. The <grid> may be FULL (grid and coordinate are shown), HALF (grid is not shown) or NONE (grid and coordinate are not shown).

## **Returned Format:**

FULL or HALF, NONE.

## Example:

:DISP:GRID FULL	Make grid and coordinate shown.
:DISP:GRID?	Return FULL.

## 3. :DISPlay:PERSist

#### **Command Format:**

:DISPlay:PERSist {{1|ON}|{0|OFF}} :DISPlay:PERSist?

#### Function:

The command sets waveform persist function ON (The waveform is shown until waveform persist function is off or relevant settings are changed.) or OFF (The waveform is updated as high refresh rate).

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:DISP:PERS ON Set waveform persist function on. :DISP:PERS? Return 1.

#### 4. :DISPlay:MNUDisplay

#### **Command Format:**

:DISPlay:MNUDisplay <time> :DISPlay:MNUDisplay?

#### Function:

The command sets the display time of menu. The menu will hide after the display time. The <time> may be 1s, 2s, 5s, 10s, 20s or INFinite (display all the time).

#### **Returned Format:**

The query returns 1s or 2s, 5s, 10s, 20s, Infinite.

#### Example:

:DISP:MNUD 10s Set the display time as 10s. :DISP:MNUD? Return 10s.

#### 5. :DISPlay:MNUStatus

#### **Command Format:**

:DISPlay:MNUStatus {{1|ON}|{0|OFF}} :DISPlay:MNUStatus?

### Function:

The command sets menu display function ON (Performing menu operation) or OFF (viewing the waveform).

### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:DISP:MNUS ON Set menu display function on. :DISP:MNUS? Return 1.

#### 6. :DISPlay:SCReen

#### **Command Format:**

:DISPlay:SCReen <scr> :DISPlay:SCReen?

#### **Function:**

The command sets the display mode of screen. The <scr>may be NORMal (normal display mode) or INVerted (inverted display mode).

#### **Returned Format:**

The query returns NORMAL or INVERTED.

## Example:

:DISP:SCR NORM	Set the screen as normal display mode.
:DISP:SCR?	Return NORMAL.

## 7. :DISPlay:CLEar

**Command Format:** :DISPlay:CLEar

#### Function:

The command clears the out of date waveforms on the screen during waveform persist.

#### 8. :DISPlay:BRIGhtness

#### **Command Format:**

:DISPlay:BRIGhtness <count> :DISPlay:BRIGhtness?

#### Function:

The command sets the brightness of grid. The <count> range is  $0 \sim 100$ , and the bigger the count is, the brighter the grid becomes.

#### **Returned Format:**

The query returns 0 or 1, 2 ·····100.

#### Example:

:DISP:BRIG 10	Set the grid brightness as 10.
:DISP:BRIG?	Return 10.

#### 9. :DISPlay:INTensity

#### **Command Format:**

:DISPlay:INTensity <count> :DISPlay:INTensity?

#### **Function:**

The command sets the brightness of the waveform. The <count> range is  $0\sim100$ , and the bigger the count is, the brighter the waveform becomes.

#### **Returned Format:**

The query returns 0 or 1, 2 ·····100.

#### Example:

:DISP:INT 12 Set the waveform brightness as 12. :DISP:IN? Return 12.

#### 10. :DISPlay:DATA?

### **Command Format:**

:DISPlay:DATA?

## Function:

The command queries image data on the current screen. The data format accords with IEEE 488.2 standard. The data structure is: #800078788+the data of 8 bit bitmap.

## **TIMebase Commands**

TIMebase Commands are used to set horizontal scale and horizontal offset. Changing horizontal scale makes the waveform enlarge or shrink; and changing horizontal position will lead the waveform offset relative to center screen.

TIMebase Commands include:

- :TIMebase:MODE
- :TIMebase[:MAIN]:OFFSet
- :TIMebase:DELayed:OFFSet
- :TIMebase[:MAIN]:SCALe
- :TIMebase:DELayed:SCALe
- :TIMebase:FORMat

We will give detailed introductions for each command in the following parts.

## 1. :TIMebase:MODE

### **Command Format:**

:TIMebase:MODE <mode> :TIMebase:MODE?

## Function:

The command sets the scan mode of horizontal timebase as MAIN (main time base) or DELayed (zoomed scan time base).

## **Returned Format:**

The query returns MAIN or DELAYED.

## Example:

:TIM:MODE MAIN Set the scan mode as main time base. :TIM:MODE? Return MAIN.

## 2. :TIMebase[:MAIN]:OFFSet

## **Command Format:**

:TIMebase[:MAIN]:OFFSet <offset> :TIMebase:MAIN:OFFSet?

## Function:

The command sets the timebase offset of main mode, that is the offset of the waveform position relative to center screen. In NORMAL mode, <offset>: 1s ~ memory capacitance; In STOP mode, <offset>: -500s ~ +500s; In SCAN mode, <offset>: ( -6\*MainScale + 6\*DelayedScale) ~ ( 6\*MainScale - 6\*DelayedScale) Scale is the current horizontal scale, and the unit is s/div.

## **Returned Format:**

The query returns the value of timebase offset, and the unit is s.

## Example:

:TIM:MODE MAIN	Set the scan mode as main.
:TIM:OFFS 1	Set the timebase offset as 1s.

:TIM:OFFS? Return 1.000e000.

#### 3. :TIMebase:DELayed:OFFSet

#### **Command Format:**

:TIMebase:DELayed:OFFSet <offset> :TIMebase:DELayed:OFFSet?

#### Function:

The command sets the timebase offset of delayed scan, that is the offset of the waveform position relative to center screen. In NORMAL mode, <offset>: 1s ~ memory capacitance;

In STOP mode, <offset>: -500s ~ +500s;

In SCAN mode, <offset>:

(-6\*MainScale + 6\*DelayedScale<sup>①</sup>) ~(6\*MainScale – 6\*DelayedScale) Scale is the current horizontal scale, and the unit is s/div.

NOTE(1): In Delayed mode, only Delayed offset can be changed but for Main offset. Thereinto: the time range: +/- 6\*MainScale; The length of time is 12\*DelayedScale; So Delayed Offset range is: (-6\*MainScale + 6\*DelayedScale) ~ (6\*MainScale-6\*DelayedScale). For example: When Main 5ms, Delay 2ms, EMS memory time is +/- 6\*5=30ms, Delay time is 6\*2 = 12ms. Delay Offset range: (-30+6) ~ (30-6) ms.

#### **Returned Format:**

The query returns the value of offset, and the unit is s.

#### **Example:**

:TIM:MODE DEL	Set the scan mode as delayed scan.
:TIM:DEL:OFFS 1	Set the timebase offset as 1s.
:TIM:DEL:OFFS?	Return 1.000e000.

## 4. :TIMebase[:MAIN]:SCALe

#### **Command Format:**

:TIMebase[:MAIN]:SCALe <scale\_val> :TIMebase[:MAIN]:SCALe?

## Function:

The command sets the timebase scale of main mode, and the unit is s/div.

 In NORMAL mode, different types of instruments have different sweep ranges:

DS1204B , <scale\_val> range: 1ns/div~50s/div. DS1104B, <scale\_val>range: 2ns/div~50s/div. DS1074B, <scale\_val>range: 5ns/div~50s/div.

• In SCAN mode, <scale\_val>range: 50ms ~ 50s.

## **Returned Format:**

The query returns the value of timebase scale, and the unit is s.

## Example:

:TIM:MODE MAIN	Set the scan mode as main.
:TIM:SCAL 2	Set the timebase scale as 2s.
:TIM:SCAL?	Return 2.000e000.

## 5. :TIMebase:DELayed:SCALe

## **Command Format:**

:TIMebase:DELayed:SCALe <scale\_val> :TIMebase:DELayed:SCALe?

## Function:

The command sets the timebase scale of delayed scan, and the unit is s/div. When the "Delayed" is "ON", for view waveform details, the waveform may be amplified under the width of window vary with the delayed timebase scale.

 In NORMAL mode, different types of instruments have different sweep ranges:

DS1204B, <scale\_val> range: 1ns/div~50s/div. DS1104B, <scale\_val>range: 2ns/div~50s/div. DS1074B, <scale\_val>range: 5ns/div~50s/div.

• In SCAN mode, <scale\_val>range: 50ms ~ 50s.

#### **Returned Format:**

The query returns the value of timebase scale, and the unit is s.

#### Example:

:TIM:MODE DELSet the scan mode as delayed scan.:TIM:DEL:SCAL 2Set the timebase scale as 2s.:TIM:DEL:SCAL?Return 2.000e000.

#### 6. :TIMebase:FORMat

#### **Command Format:**

:TIMebase:FORMat <vlaue> :TIMebase:FORMat?

#### Function:

The command sets the timebase format as XY (the amplitude of channel 1 is shown in X axis, and the amplitude of channel 2 is shown in Y axis), YT (the relationship between the voltage and the time is shown) or ROLL (the acquisition points on screen are updated from left to right).

#### **Returned Format:**

The query returns X-Y or Y-T, ROLL.

#### Example:

```
:TIM:FORM YT
:TIM:FORM?
```

Set the timebase format as Y-T. Return Y-T.

# **TRIGger Commands**

Trigger system makes the meaningful waveform shown steadily. Trigger determines when the oscilloscope starts to acquire data and to display a waveform. When trigger is set up properly, it can convert unstable displays into meaningful waveforms.

When the oscilloscope starts to acquire data, firstly enough data are needed to be collected so as to shape into a waveform on the left of the trigger point. The oscilloscope continues acquiring data while waiting for the trigger condition to occur. After it detects a trigger, the oscilloscope continues to acquire enough data so that it can display the waveform on the right of the trigger point.

Trigger Mode includes: Edge, Pulse, Video, Pattern and Alternation trigger.

TRIGger Commands include:

# **Trigger Control Command**

- :TRIGger:MODE
- :TRIGger<mode>:SOURce
- :TRIGger<mode>:LEVel
- :TRIGger<mode>:SWEep
- :TRIGger:SENSitivity
- :TRIGger:COUPling
- :TRIGger:HFREject
- :TRIGger:HOLDoff
- :TRIGger:STATus?
- :Trig%50
- :FORCetrig
- :SINGLE

# EDGE Command

• :TRIGger:EDGE:SLOPe

# **PULSe Command**

- :TRIGger:PULSe:MODE
- :TRIGger:PULSe:WIDTh

#### **VIDEO Command**

- :TRIGger:VIDEO:MODE
- :TRIGger:VIDEO:POLarity
- :TRIGger:VIDEO:STANdard
- :TRIGger:VIDEO:LINE

#### **PATTern Command**

• :TRIGger:PATTern:PATTern

#### **ALTernation Command**

- :TRIGger:ALTernation:SOURce
- :TRIGger:ALTernation:CURRentSOURce
- :TRIGger:ALTernation:TYPE
- :TRIGger:ALTernation:TimeSCALe
- :TRIGger:ALTernation:TimeOFFSet
- :TRIGger:ALTernation:LEVel
- :TRIGger:ALTernation:EDGE:SLOPe
- :TRIGger:ALTernation:PULSe:MODE
- :TRIGger:ALTernation:PULSe:TIME
- :TRIGger:ALTernation:VIDEO:POLarity
- :TRIGger:ALTernation:VIDEO:STANdard
- :TRIGger:ALTernation:VIDEO:MODE
- :TRIGger:ALTernation:VIDEO:LINE
- :TRIGger:ALTernation:COUPling
- :TRIGger:ALTernation:HFREject
- :TRIGger:ALTernation:HOLDoff
- :TRIGger:ALTernation:SENSitivity

We will give detailed introductions for each command in the following parts.

# **Trigger Control**

#### 1. :TRIGger:MODE

#### **Command Format:**

:TRIGger:MODE <mode> :TRIGger:MODE?

#### Function:

The command sets the trigger mode as EDGE, PULSe, VIDEO, ALTernation or PATTern trigger.

#### **Returned Format:**

The query returns EDGE or PULSE, VIDEO, ALTERNATION, PATTERN.

# Example:

:TRIG:MODE EDGE	Set the trigger mode as edge trigger.
:TRIG:MODE?	Return EDGE.

# 2. :TRIGger<mode>:SOURce

# **Command Format:**

:TRIGger<mode>:SOURce <source> :TRIGger<mode>:SOURce?

# Function:

The command sets the trigger source as channel (CH1, CH2, CH3, CH4), external trigger (EXT, EXT5) or AC Line. The< mode> is :EDGE, the <source> may be CHANnel<n>, EXT, EXT5 or ACLine; The< mode> is :PULSE, the <source> may be CHANnel<n>, EXT or EXT5; The< mode> is :VIDEO, the <source> may be CHANnel<n>, EXT or EXT5; The <mode> is :PATTern, <source> may be CHANnel<n>, EXT or EXT5; The <mode> is :PATTern, <source> may be CHANnel<n>, EXT or EXT5. The <n> may be 1, 2, 3 or 4.

# **Returned Format:**

The query returns CH1 or CH2, CH3, CH4, EXT, EXT5, ACLINE.

#### Example:

:TRIG:EDGE:SOUR CHAN1 :TRIG:EDGE:SOUR? Set the edge trigger source as channel 1. Return CH1.

# 3. :TRIGger<mode>:LEVel

#### **Command Format:**

:TRIGger<mode>:LEVel <level>[,<src>] :TRIGger<mode>:LEVel? [,<src>]

#### Function:

The command sets the voltage level of Edge, Pulse or Video trigger.

- <mode> may be :EDGE, :PULSe or :VIDEO or :PATTern.
- <level> range: (- 6\*Scale-Offset①) ~(+6\*Scale+Offset①).
   Scale is the current vertical scale, and the unit is V/div.
- In PATTern mode, <src> should be set to CHANnel<n> or EXT.

**NOTE** Trigger Level range is up to+/-6 Scale, when channel has offset, it needs to detract offset ,such as 1V tap position, 1V offset, the trigger range is -7V~5V.

#### **Returned Format:**

The query returns the value of voltage level, and the unit is V.

#### Example:

:TRIG:EDGE:LEV 2Set the trigger level as 2V.:TRIG:EDGE:LEV?Return 2.000e000.

#### 4. :TRIGger<mode>:SWEep

#### **Command Format:**

:TRIGger<mode>:SWEep {AUTO|NORMal|SINGle} :TRIGger<mode>:SWEep?

#### Function:

The command sets the trigger mode. The <mode> may be :EDGE, :PULSe or :PATTern.

• AUTO: When no trigger is existing, the system will generate a trigger signal to force trigger;

- RIGOL
  - NORMal: Acquire waveform when trigger occurred;
  - SINGle: Execute once trigger when all the condition are marched and stop.

# **Returned Format:**

The query returns AUTO or NORMAL, SINGLE.

# Example:

:TRIG:EDGE :SWE AUTO Set the :TRIG:EDGE :SWE? Return

Set the trigger type as AUTO. Return AUTO.

# 5. :TRIGger:SENSitivity

# **Command Format:**

:TRIGger:SENSitivity <count> :TRIGger:SENSitivity?

# Function:

The command sets the trigger sensitivity. The <count> range is 0.1div~1div.

# **Returned Format:**

The query returns the value of trigger sensitivity, and the unit is div.

# Example:

:TRIG:SENS 0.2	Set the trigger sensitivity as 0.2div.
:TRIG:SENS?	Return 2.000e-001.

# 6. :TRIGger:COUPling

# **Command Format:**

:TRIGger:COUPling {DC|AC|LF} :TRIGger:COUPling?

# Function:

The command sets the coupling mode.

- DC: Allow all signals pass;
- AC: Reject DC signals and attenuate the signal below 10Hz;
- LF: Reject DC signals and attenuate the signals below 8kHz.

#### **Returned Format:**

The query returns DC, AC or LF.

#### Example:

:TRIG:COUP DC Set the coupling mode as DC. :TRIG:COUP? Return DC.

#### 7. :TRIGger:HFREject

#### **Command Format:**

:TRIGger:HFREject {{1|ON}|{0|OFF}} :TRIGger:HFREject?

#### Function:

The command sets high frequency reject function on or off.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:TRIG:HFRE ON Set HFR on. :TRIG:HFRE? Return 1.

#### 8. :TRIGger:HOLDoff

#### **Command Format:**

:TRIGger:HOLDoff <count> :TRIGger:HOLDoff?

#### Function:

The command sets the holdoff time of a trigger. Holdoff time indicates the waiting time before oscilloscope starts a new trigger. During Holdoff, the oscilloscope will not trigger until Holdoff ends.

The <count> range is 100ns~1.5s.

#### **Returned Format:**

The query returns the value of holdoff time, and the unit is s.

# Example:

:TRIG:HOLD 0.0001 :TRIG:HOLD? Set the holdoff time as 100µs. Return 1.000e-004.

# 9. :TRIGger:STATus?

# **Query Format:**

:TRIGger:STATus?

# Function:

The command queries the current status of the oscilloscope. The status may be RUN, STOP, T' D, WAIT, SCAN or AUTO.

# **Returned Format:**

The query returns RUN or STOP, T'D, WAIT, AUTO.

# 10. :Trig%50

# Command Format:

:Trig%50

# Function:

The command sets the trigger level at the vertical midpoint of the signal amplitude.

# 11. :FORCetrig

**Command Format:** :FORCetrig

# Function:

The command will produce a trigger signal to force the oscilloscope trigger and to display a waveform when there is no suitable trigger condition. **NOTE:** It is mainly applicable to the "Normal" and "Single" trigger modes.

# 12. :SINGLE

#### **Command Format:**

:SINGLE

# Function:

The command sets the trigger mode as Single trigger, means that collect a waveform when detect a trigger signal, then stop running.

# **EDGE Trigger**

#### 1. :TRIGger:EDGE:SLOPe

#### **Command Format:**

:TRIGger:EDGE:SLOPe {POSitive|NEGative|ALTernation} :TRIGger:EDGE:SLOPe?

# Function:

The command sets the trigger edge as POSitive (rising edge), NEGative (falling edge) or ALTernation (rising and falling edge).

#### **Returned Format:**

The query returns POSITIVE or NEGATIVE, ALTERNATION.

# Example:

:TRIG:EDGE:SLOP POS :TRIG:EDGE:SLOP? Set the trigger edge as rise edge. Return POSITIVE.

# **PULSe Trigger**

#### 1. :TRIGger:PULSe:MODE

#### **Command Format:**

:TRIGger:PULSe:MODE < mod> :TRIGger:PULSe:MODE?

#### Function:

The command sets the trigger condition. <mod> can be: +GREaterthan (positive pulse width greater than), +LESSthan (positive pulse width less than), + EQUal (positive pulse width equal), -GREaterthan (negative pulse width greater than), -LESSthan (negative pulse width less than) or -EQUal (negative pulse width equal).

#### **Returned Format:**

The query returns +GREATER THAN or +LESS THAN, +EQUAL, -GREATER THAN, -LESS THAN, -EQUAL.

#### Example:

:TRIG:PULS:MODE +GRE Set the trigger condition as +GREaterthan. :TRIG:PULS:MODE? Return +GREATER THAN.

#### 2. :TRIGger:PULSe:WIDTh

#### **Command Format:**

:TRIGger:PULSe:WIDTh <wid> :TRIGger:PULSe:WIDTh?

#### Function:

The command sets the pulse width. The  $\langle wid \rangle$  range is 20ns  $\sim 10s$ .

#### **Returned Format:**

The guery returns the value of pulse width, and the unit is s.

#### **Example:**

:TRIGr:PULS:WIDT 0.001 Set the pulse width as 1ms. :TRIG:PULS:WIDT?

Return 1.000e-003.

# **VIDEO Trigger**

#### 1. :TRIGger:VIDEO:MODE

#### **Command Format:**

:TRIGger:VIDEO:MODE <mode> :TRIGger:VIDEO:MODE?

#### Function:

The command sets the trigger sync mode as ODDfield, EVENfield, LINE or ALLlines.

#### **Returned Format:**

The query returns ODD FIELD, EVEN FIELD, LINE or ALL LINES.

# Example:

:TRIG:VIDEO:MODE EVEN :TRIG:VIDEO:MODE? Set the trigger sync mode as even field. Return EVEN FIELD.

# 2. :TRIGger:VIDEO:POLarity

#### **Command Format:**

:TRIGger:VIDEO:POLarity {POSitive|NEGative} :TRIGger:VIDEO:POLarity?

#### Function:

The command sets the video polarity as POSitive (it is applicable for the video signal that the black level is low) or NEGative (the black level is high).

# **Returned Format:**

The query returns POSITIVE or NEGATIVE.

# Example:

:TRIG:VIDEO:POL POS Set the video polarity as positive. :TRIG:VIDEO:POL? Return POSITIVE.

#### 3. :TRIGger:VIDEO:STANdard

#### **Command Format:**

:TRIGger:VIDEO:STANdard {NTSC|PALSecam} :TRIGger:VIDEO:STANdard?

# Function:

The command sets the video standard as NTSC or PAL/SECAM.

# **Returned Format:**

The query returns NTSC or PAL/SECAM.

# Example:

:TRIG:VIDEO:STAN PALS Set the video standard as PAL/SECAM. :TRIG:VIDEO:STAN? Return PAL/SECAM.

# 4. :TRIGger:VIDEO:LINE

# **Command Format:**

:TRIGger:VIDEO:LINE <value> :TRIGger:VIDEO:LINE?

# Function:

The command sets the number of sync specified line. In NTSC standard, the <value> range is  $1\sim525$ ; in PAL standard, the <value> range is  $1\sim625$ .

# **Returned Format:**

The query returns the number of specified line.

# Example:

:TRIG:VIDEO:LINE 25 Set the number of sync specified line as 25. :TRIG:VIDEO:LINE? Return 25.

# **PATTern Trigger**

#### 1. :TRIGger:PATTern:PATTern

#### **Command Format:**

:TRIGger:PATTern:PATTern <value>,<mask>,<ext source>[,<edge source>,<edge>] :TRIGger:PATTern:PATTern?

#### Function:

The command sets the code pattern of signals.

value>:

Code pattern values of the channels. It is a 16 bit unsigned integer (High is 1, Low is 0).

<mask>:

Mask code of the channels. It is a 16 bit unsigned integer (enable is 1, X is 0) which indicates whether the mask code is 1 or 0. The relationship between <mask> and <value> is "And", if the mask of a channel is 0, which denotes this channel is ineffective and the corresponding setting of oscilloscope is "X"; if the mask is 1, <value> will decide whether the channel is H or L.

ext source>:

It is external trigger signal, and EXT5 is 1, EXT is 0;

edge source>:

It is the current channel, its range: 0(CH1), 1(CH2), 2(CH3), 3(CH4), 4(EXT5);

edge>:

It is the code pattern of current channel. The rising <edge> is 1and the falling<edge> is 0.

**NOTE:** The priority of <edge> is higher than <mask>.

# **Returned Format:**

The query returns the value, the mask, the ext source, the edge source and the edge. The value and the mask are expressed in decimal.

# Example:

:TRIG:PATT:PATT 31,31,1,2,1	Set the code pattern.
:TRIG:PATT:PATT?	Return 27, 31, EXT5, Channel3, Positive.

# **ALTernation Trigger**

#### 1. :TRIGger:ALTernation:SOURce

#### **Command Format:**

:TRIGger:ALTernation:SOURce <source> :TRIGger:ALTernation:SOURce?

#### Function:

The command selects the alternation trigger channel. The <source> may be CH1CH2, CH1CH3, CH1CH4, CH2CH3, CH2CH4 or CH3CH4.

#### **Returned Format:**

The query returns CH1CH2 or CH1CH3, CH1CH4, CH2CH3, CH2CH4, CH3CH4.

#### Example:

:TRIG:ALT:SOUR CH1CH2 Set the alternation channel as CH1CH2. :TRIG:ALT:SOUR? Return CH1CH2.

#### 2. :TRIGger:ALTernation:CURRentSOURce

#### **Command Format:**

:TRIGger:ALTernation:CURRentSOURce <source> :TRIGger:ALTernation:CURRentSOURce?

#### Function:

The command sets the current channel. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

#### **Returned Format:**

The query returns SOURceA or SOURceB.

#### Example:

:TRIG:ALT:SOUR CH1CH2 :TRIG:ALT:CURRSOUR SOURB :TRIG:ALT:CURRSOUR? Set the alternation channel as CH1CH2. Set the current channel as source B. Return SOURceB.

# 3. :TRIGger:ALTernation:TYPE

#### **Command Format:**

:TRIGger:ALTernation:TYPE <type>[,<source>] :TRIGger:ALTernation:TYPE? [<source>]

# Function:

The command sets the trigger type. The <type> may be EDGE, PULSe or VIDEO, and the <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

# **Returned Format:**

The query returns EDGE or PULSE, VIDEO.

# Example:

:TRIG:ALT:TYPE EDGE,SOURB Set the trigger type as edge trigger. :TRIG:ALT:TYPE? SOURB Return EDGE.

# 4. :TRIGger:ALTernation:TimeSCALe

# **Command Format:**

:TRIGger:ALTernation:TimeSCALe <value>[,<source>] :TRIGger:ALTernation:TimeSCALe? [<source>]

# Function:

The command sets the time scale of current channel. The <value> range is 2ns~20ms, and the <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel. In NORMAL mode, different types of instruments have different sweep ranges: DS1204B, <scale\_val> range: 1ns/div~50s/div. DS1104B, <scale\_val> range: 2ns/div~50s/div. DS1074B, <scale\_val> range: 5ns/div~50s/div.

# **Returned Format:**

The query returns the value of time scale, and the unit is s.

# Example:

:TRIG:ALT:TSCAL 0.001,SOURB Set the time scale as 1ms.

:TRIG:ALT:TSCAL? SOURB Return 1.000e-003.

#### 5. :TRIGger:ALTernation:TimeOFFSet

#### **Command Format:**

:TRIGger:ALTernation:TimeOFFSet <value>[,<source>] :TRIGger:ALTernation:TimeOFFSet? [<source>]

#### **Function:**

The command sets the timebase offset. In NORMAL mode, <value>: 1s ~ memory capacitance; In STOP mode, <value: -500s  $\sim$  +500s.

#### **Returned Format:**

The query returns the value of timebase offset, and the unit is s.

#### Example:

:TRIG:ALT:TOFFS? SOURB

:TRIG:ALT:TOFFS 0.0002,SOURB Set the timebase offset as 200µs. Return 2.000e-004.

#### :TRIGger:ALTernation:LEVel 6.

#### **Command Format:**

:TRIGger:ALTernation:LEVel <value>[,<source>] :TRIGger:ALTernation:LEVel? [<source>]

#### **Function:**

The command sets the trigger level of current channel. The <value> range <value> range: (- 6\*Scale-Offset①) ~(+6\*Scale+Offset①).Scale is the current vertical scale, and the unit is V/div. the <source> may be SOURceA or SOURceB, and the source A and B is different according to the current alternation channel. NOTE(): Trigger Level range is up to+/-6 Scale, when channel has offset, it needs to detract offset , such as 1V tap position, 1V offset, the trigger range is -7V~5V.

#### **Returned Format:**

The query returns the value of trigger voltage level, and the unit is V.

# Example:

:TRIG:ALT:LEV 2, SOURBSet the trigger voltage level as 2V.:TRIG:ALT:LEV? SOURBReturn 2.000e000.

# 7. :TRIGger:ALTernation:EDGE:SLOPe

# **Command Format:**

:TRIGger:ALTernation:EDGE:SLOPe <value>[,<source>] :TRIGger:ALTernation:EDGE:SLOPe? [<source>]

# Function:

The command sets the edge type of edge trigger in current channel as POSitive (rising edge) or NEGative (falling edge). The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

# **Returned Format:**

The query returns POSITIVE or NEGATIVE.

# Example:

:TRIG:ALT:EDGE:SLOP POS, SOURB :TRIG:ALT:EDGE:SLOP? SOURB Set the edge type as rising edge. Return POSITIVE.

# 8. :TRIGger:ALTernation:PULSe:MODE

# **Command Format:**

:TRIGger:ALTernation:PULSE:MODE <value>[,<source>] :TRIGger:ALTernation:PULSe:MODE? [<source>]

# Function:

The command sets the trigger condition of pulse trigger. The <value> may be +GREaterthan, +LESSthan, + EQUal, -GREaterthan, -LESSthan or –EQUal. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

# **Returned Format:**

The query returns +GREATER THAN or +LESS THAN, +EQUAL, -GREATER THAN,

-LESS THAN, -EQUAL.

#### Example:

:TRIG:ALT:PULS:MODE +GRE, SOURB Set the trigger condition. :TRIG:ALT:PULS:MODE? SOURB Return +GREATER THAN.

#### 9. :TRIGger:ALTernation:PULSe:TIME

#### **Command Format:**

:TRIGger:ALTernation:PULSe:TIME <value>[,<source>] :TRIGger:ALTernation:PULSe:TIME? [<source>]

#### Function:

The command sets the pulse width, the value range is 20ns~10s. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

#### **Returned Format:**

The query returns the value of pulse width, and the unit is s.

#### Example:

:TRIG:ALT:PULS:TIME 0.002, SOURB Set the pulse width as 2ms. :TRIG:ALT:PULS:TIME? SOURB Return 2.000e-003.

#### **10. :TRIGger:ALTernation:VIDEO:POLarity**

#### **Command Format:**

:TRIGger:ALTernation:VIDEO:POLarity {POSitive|NEGative }[,<source>] :TRIGger:ALTernation:VIDEO:POLarity? [<source>]

#### Function:

The command sets the video polarity as POSitive or NEGative. The <source> may be SOURceA or SOURceB, and the source A and B are ivarying with the current alternation channel.

#### **Returned Format:**

The query returns POSITIVE or NEGATIVE.

#### Example:

:TRIG:ALT:VIDEO:POL POS,SOURB :TRIG:ALT:VIDEO:POL? SOURB Set the video polarity as positive. Return POSITIVE.

# 11. :TRIGger:ALTernation:VIDEO:STANdard

# **Command Format:**

:TRIGger:ALTernation:VIDEO:STANdard {NTSC|PALSecam}[,<source>] :TRIGger:ALTernation:VIDEO:STANdard? [<source>]

# Function:

The command sets the video standard as NTSC or PAL/SECAM. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

# **Returned Format:**

The query returns NTSC or PAL/SECAM.

# Example:

:TRIG:ALT:VIDEO:STAN NTSC,SOURB Set the video standard as NTSC. :TRIG:ALT:VIDEO:STAN? SOURB Return NTSC.

# 12. :TRIGger:ALTernation:VIDEO:MODE

# **Command Format:**

:TRIGger:ALTernation:VIDEO:MODE {ALLLins|ODDField|EVENfield|LINE}[,<source>] :TRIGger:ALTernation:VIDEO:MODE? [<source>]

# Function:

The command sets the sync mode of alternation trigger and video trigger as ALLLINES, ODDFIELD, EVENFIELD or LINE. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

# **Returned Format:**

The query returns ALL LINES or ODD FIELD, EVEN FIELD, LINE

#### **Example:**

:TRIG:ALT:VIDEO:MODE ALLLINES,SOURB Set the sync mode as all lines. :TRIG:ALT:VIDEO:MODE? SOURB Return ALL LINES.

#### 13. :TRIGger:ALTernation:VIDEO:LINE

#### **Command Format:**

:TRIGger:ALTernation:VIDEO:LINE <value>[,<source>] :TRIGger:ALTernation:VIDEO:LINE? [<source>]

#### Function:

The command sets the number of sync specified line. In NTSC standard, the <value> range is 1~525; in PAL/SECAN standard, the <value> range is 1~625. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

#### **Returned Format:**

The query returns the number of specified line.

#### Example:

:TRIG:ALT:VIDEO:LINE 100, SOURB :TRIG:ALT:VIDEO:LINE? SOURB Set the specified line number as 100. Return 100.

# 14. :TRIGger:ALTernation:COUPling

#### **Command Format:**

:TRIGger:ALTernation:COUPling {DC|AC|LF}[,<source>] :TRIGger:ALTernation:COUPling? [<source>]

#### Function:

The command sets the coupling mode. DC: Allow all signals pass; AC: Reject DC signals and attenuate AC signals below 10Hz. LF: Reject DC and attenuate low frequency signals below 8kHz. The <source> may be SOURceA or SOURceB, and the source A and B are varying with the current alternation channel.

#### **Returned Format:**

The query returns DC, AC or LF.

#### Example:

:TRIG:ALT:COUP DC, SOURB Set the coupling mode as DC. :TRIG:ALT:COUP? SOURB Return DC.

# 15. :TRIGger:ALTernation:HFREject

#### **Command Format:**

:TRIGger:ALTernation:HFREject {{1|ON}|{0|OFF}} :TRIGger:ALTernation:HFREject?

# Function:

The command sets high frequency reject function of ALTernation Trigger on or off.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:TRIG:ALT:HFRE ON	Set HFR on.
:TRIG:ALT:HFRE?	Return 1.

# 16. :TRIGger:ALTernation:HOLDoff

#### **Command Format:**

```
:TRIGger:ALTernation:HOLDoff <count>[,<source>]
:TRIGger:ALTernation:HOLDoff? [<source>]
```

# Function:

The command sets the holdoff time to trigger the specified source alternately. Holdoff time is the waiting time of oscilloscope before starting a new trigger. During Holdoff, oscilloscope will not trigger until Holdoff ends. The <count> range is 100ns~1.5s. The <source> may be SOURceA or SOURceB.

# **Returned Format:**

The query returns the value of holdoff time, and the unit is s.

#### Example:

:TRIG:HOLD 0.0001, SOURA Set the holdoff time of source A as 100us. :TRIG:HOLD? SOURA Return 1.000e-004.

#### 17. :TRIGger:ALTernation:SENSitivity

#### **Command Format:**

:TRIGger:ALTernation:SENSitivity <count>[,<source>] :TRIGger:ALTernation:SENSitivity? [<source>]

#### Function:

The command sets the trigger sensitivity of alternation trigger, the count range is 0.1div~1div. The <source> may be SOURceA or SOURceB, and the source A and B are varying with to the current alternation channel.

#### **Returned Format:**

The query returns the value of trigger sensitivity, and the unit is div.

#### Example:

:TRIG:ALT:SENS 0.1, SOURceB :TRIG:ALT:SENS? SOURceB Set the trigger sensitivity as 01. Return 1.000e-001.

# **MATH Commands**

MATH Commands are used to display the result of adding, subtracting, multiplying and FFT operation for the signals from CH1, CH2, CH3 and CH4. The results can be measured by the grid and the cursor.

MATH Commands include:

• :MATH:DISPlay

We will give detailed introductions for each command in the following parts.

#### 1. :MATH:DISPlay

#### **Command Format:**

:MATH:DISPlay {{1|ON}|{0|OFF}} :MATH:DISPlay?

# Function:

The command sets Math waveform on or off.

# **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

# Example:

:MATH:DISP ON Set Math waveform on. :MATH:DISP? Return 1.

# **CHANnel Commands**

CHANnel Commands are used to set the vertical system from every channel separately.

CHANnel Commands include:

- :CHANnel<n>:BWLimit
- :CHANnel<n>:COUPling
- :CHANnel<n>:DISPlay
- :CHANnel<n>:INVert
- :CHANnel<n>:OFFSet
- :CHANnel<n>:PROBe
- :CHANnel<n>:SCALe
- :CHANnel<n>:FILTer
- :CHANnel<n>:MEMoryDepth?
- :CHANnel<n>:VERNier
- :CHANnel<n>:UNITs

We will give detailed introductions for each command in the following parts.

#### 1. :CHANnel<n>:BWLimit

#### **Command Format:**

:CHANnel<n>:BWLimit {{1|ON}|{0|OFF}} :CHANnel<n>:BWLimit?

# Function:

The command sets bandwidth limit function ON (limit band width to 20MHz to reduce noise) or OFF (full band width). The  $\langle n \rangle$  may be 1, 2, 3 or 4.

# **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

# Example:

:CHAN2:BWL OFF Set BW limit function of channel 2 off. :CHAN2:BWL? Return 0.

# 2. :CHANnel<n>:COUPling

# **Command Format:**

:CHANnel<n>:COUPling {DC|AC|GND} :CHANnel<n>:COUPling?

# Function:

The command sets coupling mode as DC (both AC and DC components of the input signal can pass), AC (the DC component of the input signal can not pass) or GND (disconnect the input signal). The  $\langle n \rangle$  may be 1, 2, 3 or 4.

# **Returned Format:**

The query returns AC or DC, GND.

# Example:

:CHAN2:COUP DC :CHAN2:COUP? Set the coupling mode of channel 2 as DC. Return DC.

# 3. :CHANnel<n>:DISPlay

#### RIGOL

#### **Command Format:**

:CHANnel<n>:DISPlay {{1|ON}|{0|OFF}} :CHANnel<n>:DISPlay?

#### Function:

The command sets the channel ON or OFF. The  $\langle n \rangle$  may be 1, 2, 3 or 4.

# **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### **Examples:**

:CHAN2:DISP ON	Set channel 2 on.
:CHAN2:DISP?	Return 1.

# 4. :CHANnel<n>:INVert

**Command Format:** :CHANnel<n>:INVert {{1|ON}|{0|OFF}} :CHANnel<n>:INVert?

# Function:

The command sets waveform invert function ON (the inverted waveform is display) or OFF (the normal waveform is display). The  $\langle n \rangle$  may be 1, 2, 3 or 4.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

# Example:

:CHAN2:INV OFF Set the invert function of channel 2 off. :CHAN2:INV? Return 0.

# 5. :CHANnel<n>:OFFSet

#### **Command Format:**

:CHANnel<n>:OFFSet <offset> :CHANnel<n>:OFFSet?

#### Function:

The command sets the vertical offset. The  $\langle n \rangle$  may be 1, 2, 3 or 4. Scale $\geq$ 250mV,  $\langle offset \rangle$ :  $-40V \sim +40V$ ; Scale $\langle 250mV$ ,  $\langle offset \rangle$ :  $-2V \sim +2V$ .

#### **Returned Format:**

The query returns the value of offset, and the unit is V.

#### Example:

```
:CHAN2:OFFS 20Set the vertical offset of channel 2 as 20V.:CHAN2:OFFS?Return 2.000e001.
```

#### 6. :CHANnel<n>:PROBe

#### **Command Format:**

:CHANnel<n>:PROBe <attn> :CHANnel<n>:PROBe?

#### Function:

The command sets the attenuation factor of probe. The  $\langle n \rangle$  may be 1, 2, 3 or 4, and the  $\langle attn \rangle$  may be 0.001 X, 0.01 X, 0.1 X, 1X, 2 X, 5X, 10X, 20 X, 50X, 100X, 200 X, 500X or 1000X.

#### **Returned Format:**

The query returns the value of attenuation factor.

#### Example:

:CHAN2:PROB 10X Set the annenuation factor of channel 2 as 10X. :CHAN2:PROB? Return 10X.

# 7. :CHANnel<n>:SCALe

#### **Command Format:**

:CHANnel<n>:SCALe <range> :CHANnel<n>:SCALe?

#### Function:

The command sets the vertical scale for magnifying waveform. The  $<\!n\!>$  may be

```
1, 2, 3 or 4.

Probe 0.001X, <range>: 2μV ~ 10mV;

Probe 0.01X, <range>: 20μV ~ 100mV;

Probe 0.1X, <range>: 200μV ~ 1V;

Probe 1X, <range>: 2mV ~ 10V;

Probe 2X, <range>: 4mV ~ 20V;

Probe 5X, <range>: 10mV ~ 50V;

Probe 10X, <range>: 20mV ~ 100V;

Probe 20X, <range>: 40mV ~ 200V;

Probe 50X, <range>: 100mV ~ 500V;

Probe 100X, <range>: 100mV ~ 500V;

Probe 100X, <range>: 100mV ~ 2kV;

Probe 200X, <range>: 1V ~ 5kV;

Probe 1000X, <range>: 2V ~ 10kV.
```

# **Returned Format:**

The query returns the value of vertical scale, and the unit is V.

# Example:

:CHAN2:PROB 10X	Set the attenuation factor of channel 2 as 10X.
:CHAN2:SCAL 20	Set the vertical scale of channel 2 as 20V.
:CHAN2:SCAL?	Return 2.000e001.

# 8. :CHANnel<n>:FILTer

# **Command Format:**

:CHANnel<n>:FILTer {{1|ON}|{0|OFF}} :CHANnel<n>:FILTer?

# Function:

The command sets digital filter function ON or OFF. The  $\langle n \rangle$  may be 1, 2, 3 or 4.

# **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

# Example:

:CHAN2:FILT OFF Set the digital filter of channel 2 off. :CHAN2:FILT? Return 0.

#### 9. :CHANnel<n>:MEMoryDepth?

#### **Command Format:**

:CHANnel<n>:MEMoryDepth?

#### Function:

This command is query the memory depth on channel x.

There are three instances:

- 1) Alternate trigger: 8192
- 2) Slow scan or ROLL: 0~8192
- 3) Others: 8192

**NOTE:** In Slow scan mode: In the event of the horizontal timebase is set as 50ms/div or more slowly, the instrument will turn into Slow scan mode. Under this circumstance, the oscilloscope will gather the datum form the left side of the trigger point and then continue gathering the waves form the right side after triggering. If use Slow scan mode to observe the low frequency signal, you are suggested to set the couple mode of channel as DC.

#### **Returned Format:**

The query returns the value such as: 8192e003.

#### **10.** :CHANnel<n>:VERNier

#### **Command Format:**

:CHANnel<n>:VERNier {{1|ON}|{0|OFF}} :CHANnel<n>:VERNier?

#### Function:

The command sets the adjustment mode of vertical scale as ON (Fine) or OFF (Coarse). The vertical scale steps by 1-2-5 in Coarse mode; and by equality in Fine mode. The  $\langle n \rangle$  may be 1, 2, 3, 4.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:CHAN2:VERN ON	Set the fine adjustment function of channel 2 on.
:CHAN2:VERN?	Return 1.

# 11. :CHANnel<n>:UNITs

#### **Command Format:**

:CHANnel<n>:UNITs <units> :CHANnel<n>:UNITs?

# Function:

The command sets the unit as VOLTs (V), AMPeres (A), WATTs (W) or UNKNown. The <n> may be 1, 2, 3 or 4.

# **Returned Format:**

The query returns VOLTs or AMPeres, WATTs, UNKNown.

# Example:

:CHAN1:UNIT VOLT	Set the unit of channel 1 as V.
:CHAN1:UNIT?	Return VOLTs.

# **MEASure Commands**

MEASure Commands are used for the fundamental measurement operations, and the measurement results are expressed by scientific notation.

MEASure Commands include:

- :MEASure:CLEar
- :MEASure:VPP?
- :MEASure:VMAX?
- :MEASure:VMIN?
- :MEASure:VAMPlitude?
- :MEASure:VTOP?
- :MEASure:VBASe?
- :MEASure:VAVerage?
- :MEASure:VRMS?
- :MEASure:OVERshoot?
- :MEASure:PREShoot?
- :MEASure:FREQuency?
- :MEASure:RISetime?
- :MEASure:FALLtime?
- :MEASure:PERiod?

- :MEASure:PWIDth?
- :MEASure:NWIDth?
- :MEASure:PDUTycycle?
- :MEASure:NDUTycycle?
- :MEASure:PDELay?
- :MEASure:NDELay?
- :MEASure:PPHAse?
- :MEASure:NPHAse?
- :MEASure:TOTal
- :MEASure:SOURce
- :MEASure:DELAySOURce
- :MEASure:PHAseSOURce
- :MEASure:ENABle
- :MEASure:DISable
- :MEASure?

We will give detailed introductions for each command in the following parts.

#### 1. :MEASure:CLEar

#### **Command Format:**

:MEASure:CLEar

# Function:

The command clears the current measurement parameters.

# 2. :MEASure:VPP?

# **Command Format:**

:MEASure:VPP? [<source>]

# Function:

The command measures the Peak-Peak value of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

**NOTE:** "<>" in <source> indicates the source is the parameter that must be set in the commond; and "[]" indicates the parameter can be set or not set according to your demand. The followings are the same, don't repeat. Please refer to chapter 1 **Symbol Description** about the related explanations.

# **Returned Format:**

The query returns as 5.280e000, and the unit is V.

# 3. :MEASure:VMAX?

# **Command Format:**

:MEASure:VMAX? [<source>]

# Function:

The command measures the maximum of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as 2.640e000, and the unit is V.

#### 4. :MEASure:VMIN?

#### **Command Format:**

:MEASure:VMIN? [<source>]

#### Function:

The command measures the minimum of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as -2.640e000, and the unit is V.

#### 5. :MEASure:VAMPlitude?

#### **Command Format:**

:MEASure:VAMPlitude? [<source>]

#### Function:

The command measures the amplitude of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 5.280e000, and the unit is V.

#### 6. :MEASure:VTOP?

#### **Command Format:**

:MEASure:VTOP? [<source>]

#### Function:

The command measures the top value of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 2.640e000, and the unit is V.

#### 7. :MEASure:VBASe?

#### **Command Format:**

:MEASure:VBASe? [<source>]

# Function:

The command measures the base value of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as -2.640e000, and the unit is V.

# 8. :MEASure:VAVerage?

#### **Command Format:**

:MEASure:VAVerage? [<source>]

# Function:

The command measures the average value of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as -4.200e-003, and the unit is V.

# 9. :MEASure:VRMS?

# **Command Format:**

:MEASure:VRMS? [<source>]

# Function:

The command measures the root mean square of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as 2.460e000, and the unit is V.

#### 10. :MEASure:OVERshoot?

#### **Command Format:**

:MEASure:OVERshoot? [<source>]

#### Function:

The command measures the overshoot value of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 8.000e003, and the unit is V.

#### **11. :MEASure:PREShoot?**

#### **Command Format:**

:MEASure:PREShoot? [<source>]

#### Function:

The command measures the preshoot value of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 8.000e-003, and the unit is V.

#### 12. :MEASure:FREQuency?

#### **Command Format:**

:MEASure:FREQuency? [<source>]

#### Function:

The command measures the frequency of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 1.000e003, and the unit is Hz.

### 13. :MEASure:RISetime?

# **Command Format:**

:MEASure:RISetime? [<source>]

# Function:

The command measures the rise time of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as 4.000e-005, and the unit is s.

# 14. :MEASure:FALLtime?

# Command Format:

:MEASure:FALLtime? [<source>]

# Function:

The command measures the fall time of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as 4.000e-005, and the unit is s.

# 15. :MEASure:PERiod?

# **Command Format:**

:MEASure:PERiod? [<source>]

# Function:

The command measures the period of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as 1.000e-003, and the unit is s.

### 16. :MEASure:PWIDth?

#### **Command Format:**

:MEASure:PWIDth? [<source>]

#### Function:

The command measures the positive pulse width of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 5.000e-004, and the unit is s.

### 17. :MEASure:NWIDth?

#### **Command Format:**

:MEASure:NWIDth? [<source>]

#### Function:

The command measures the negative pulse width of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 5.000e-004, and the unit is s.

#### 18. :MEASure:PDUTycycle?

#### **Command Format:**

:MEASure:PDUTycycle? [<source>]

#### Function:

The command measures the positive duty cycle of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as 5.000e001, and the unit is %.

# **19. :MEASure:NDUTycycle?**

### **Command Format:**

:MEASure:NDUTycycle? [<source>]

# Function:

The command measures the negative duty cycle of signal from <source>. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as 5.000e001, and the unit is %.

# 20. :MEASure:PDELay?

# Command Format:

:MEASure:PDELay? [<source A>,<source B>]

# Function:

The command measures the delay between <sourceA> and <sourceB> relative to the rising edge. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as <-1.000 e-004, and the unit is s.

# 21. :MEASure:NDELay?

# **Command Format:**

:MEASure:NDELay? [<source A>,<source B>]

# Function:

The command measures the delay between <sourceA> and <sourceB> relative to the falling edge. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns as <-1.000 e-004, and the unit is s.

#### 22. :MEASure:PPHAse?

#### **Command Format:**

:MEASure:PPHAse? [<source A>,<source B>]

#### Function:

The command measures the phase difference between <sourceA> and <sourceB> relative to the rising edge. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as <-1.000 e-004, and the unit is s.

#### 23. :MEASure:NPHAse?

#### **Command Format:**

:MEASure:NPHAse? [<source A>,<source B>]

#### Function:

The command measures the phase difference between <sourceA> and <sourceB> relative to the falling edge. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns as <-1.000 e-004, and the unit is s.

#### 24. :MEASure:TOTal

#### **Command Format:**

:MEASure:TOTal {{1|ON}|{0|OFF}} :MEASure:TOTal?

#### Function:

The command sets all the measurement functions on or off.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

### Example:

:MEAS:TOT ON Set the total measurement function on. :MEAS:TOT? Return 1.

# 25. :MEASure:SOURce

### **Command Format:**

:MEASure:SOURce <source> :MEASure:SOURce?

### Functions:

The command selects the measurement channel. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

### **Returned Format:**

The query returns CH1 or CH2, CH3, CH4.

### Example:

:MEAS:SOUR CHAN1 Measure the signal from CH1. :MEAS:SOUR? Return CH1.

# 26. :MEASure:DELAySOURce

#### **Command Format:**

:MEASure:DELAySOURce <source>,<source> :MEASure:DELAySOURce?

# Functions:

The command selects the channel for measuring the time delay. The< source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

# **Returned Format:**

The query returns CH1, CH2 or CH1, CH3, CH1, CH4, CH2, CH3, CH2, CH4, CH3, CH4.

#### Example:

:MEAS:DELASOUR CHAN1 CHAN2 Measure the delay source.

:MEAS:DELASOUR?

Return CH1, CH2.

#### 27. :MEASure:PHAseSOURce

#### **Command Format:**

:MEASure:PHAseSOURce <source>,<source> :MEASure:PHAseSOURce?

#### Functions:

The command selects the channel for measuring the phase delay. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns CH1, CH2 or CH1, CH3, CH1, CH4, CH2, CH3, CH2, CH4, CH3, CH4.

#### Example:

:MEAS:PHASOUR CHAN1 CHAN2 :MEAS:PHASOUR?

Measure the phase delay. Return CH1, CH2.

#### 28. :MEASure:ENABle

**Command Format:** 

:MEASure:ENAble

#### Functions:

This command is open the locked MEASURE button and allow user to open Auto Measure.

**NOTE:** Only corresponding unlock command can open AUTO and Auto Measure once they are locked, neither restart nor update is available.

#### 29. :MEASure:DISable

**Command Format:** :MEASure:DISable

#### Function:

This command is lock MEASURE button and forbid user opening Auto Measure.

### 30. :MEASure?

# Command Format:

:MEASure?

# Function:

This command is query the state of keylock.

# **Returned Format:**

The query returns Locked or UnLocked.

# WAVeform Commands

WAVeform Commands are used to read the data and parameters of waveform on the screen.

WAVeform Commands include:

- :WAVeform:FORMat
- :WAVeform:DATA?
- :WAVeform:POINts
- :WAVeform:POINts:MODE
- :WAVeform:SOURce
- :WAVeform:PREamble?
- :WAVeform:YINCrement?
- :WAVeform:YORigin?
- :WAVeform:XINCrement?
- :WAVeform:XORigin?
- :WAVeform:XREFerence?
- :WAVeform:YREFerence?

We will give detailed introductions for each command in the following parts.

### 1. :WAVeform:FORMat

### **Command Format:**

:WAVeform:FORMat <value> :WAVeform:FORMat?

# Function:

The command sets the format of waveform data. The <value> may be WORD, BYTE or ASCii.

Difference of WORD, BYTE and ASCii:

ASCii: Returns ASCII values when data ware transformed into character.

Eg: Waveform data is 1000, returns '1','0','0', a point correspond many bytes.

**BYTE and WORD:** They will returns 8 bit and 16 bit values to use datum. Eg: Waveform data is 1000, returns 1000 in decimal system, a point correspond

one byte.

# **Returned Format:**

The query returns WORD or BYTE, ASCii.

# Example:

:WAV:FORM ASC	Set the data format as ASCII.
:WAV:FORM?	Return ASCii.

# 2. :WAVeform:DATA?

# Command Format:

:WAVeform:DATA? [<source>]

# Function:

The command reads waveform data from the specified source. <source> may be : CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH.

# **Returned Format:**

The query returns a certain amount of waveform data that specifed by **:WAVeform:POINts**.

#### NOTE:

• The command returns the data on the screen while waveform playback, at this moment,

only NORMal and MAXimum mode is available and the system is in STOP state.

- 600 points are returned in common operation  $(+, -, \times)$  while 500 points are returned in FFT operation in all modes (**NORMal**, **RAW**, **MAXimum**).
- The waveform data read in NORMal mode is fixed as 600 points while the system is in STOP state, if increase the time base until all the waveforms are displayed on the screen, some invalid data may be contained in data returned under the circumstances. So, you are recommended to read the data in RAW mode while in STOP state.

#### Example:

:WAV:DATA? CHAN1 Read the data from CH1.

#### 3. :WAVeform:POINts

#### **Command Format:**

:WAVeform:POINts <points> :WAVeform:POINts?

#### Function:

This command sets the waveform points need to be returned, the default is 0. <points> has different Value ranges in different modes.

NORMal: 0~600

RAW: 0~8192 or 0~16384 (in half channel state)

**NOTE:** Half channel indicates selecting one of the channels in CH1 and CH2, or in CH3 and CH4.

#### **Returned Format:**

The query returns an integer, for example: 10.

NOTE:

- If you set the waveform points to be 0, the query will return the maximum points in current mode (NORMal: return 600 points, RAW: return current memory depth);
- In **MATH** operation, 600 points are returned no matter what mode it is;
- In **FFT**, the maximum points will always be 500.

#### Example:

:WAV:POIN 20	Set the waveform points as 20.
:WAV:POIN?	Return 20.

For details about storage format of waveform points, please refer to Page 2-76: **Peak Detect** 

### 4. :WAVeform:POINts:MODE

#### **Command Format:**

:WAVeform:POINts:MODE <points\_mode> :WAVeform:POINts:MODE?

#### Function:

This command sets the mode of waveform points. <points\_mode> can be: NORMal, MAXimum or RAW.

NOTE: What will be returned by :WAVeform:POINts? in different modes:

- NORMal: Return data points currently display on the screen (600 points).
- RAW: Return the data points of the memory data (in STOP state). In RUN state, no data are returned, the system error code is 67 which indicate system condition is not met and the execution failed.
- MAXimum: Return the maximum valid data points in current state. In RUN state, the screen data points are returned, while in STOP state, the memory data points are returned.

	NORmal		RAW	ΜΑΧ
	Normal	Peak		In <b>RUN</b> state,
	/Average	Detect		MAX is the same
MATH	600	1200	600	with NORMal;
FFT	500	500	500	in <b>STOP</b> state,
СНх	600	1200	8192	MAX is the same
Half-Channel	600	1200	16384	with RAW.
СНх				

#### **Returned Format:**

The query returns NORMal, MAXimum or RAW.

#### Example:

:WAV:POIN:MODE NORM :WAV:POIN:MODE? Set the mode as NORMal. Return NORMal.

#### 5. :WAVeform:SOURce

#### **Command Format:**

:WAVeform:SOURce <source> :WAVeform:SOURce?

#### Function:

The command sets the source of waveform data which is going to check. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH.

#### **Returned Format:**

The query returns Channel1 or Channel2, Channel3, Channel4, MATH.

#### Example:

:WAV:SOUR CHAN2 Set the data source as channel 2. :WAV:SOUR? Return Channel2.

#### 6. :WAVeform:PREamble?

#### **Command Format:**

:WAVeform:PREamble?

#### Function:

This command queries the current waveform settings.

#### **Returned Format:**

The query returns 10 data which are separated by comma ",", they are: Format,Type,Points,Count,Xinc,Xor,Xref,Yinc,Yor,Yref

Parameter Value: Format: BYTE – 0; WORD – 1; ASCII – 2. Type: NORMAL – 0; PEAK\_DETECT – 1; AVERAGE – 2. Points: specified by **:WAVeform:POINts** command. Count: the "average acquisition time" (in average mode) or "1" (other mode); Xinc: 1/SaRate (RAW) or TimeScale/50 (NORMAL); Xor: relative time of the trigger points; Xref: X reference; Yinc: Y unit voltage; Yor: vertical offset relative to YREF; Yref: Y reference, the middle point of the screen.

# Example:

+1,+0,0,+1,8.000e-009,-6.000e-006,+0,4.000e-002,0.000e000,+100

# 7. :WAVeform:YINCrement?

### **Command Format:**

:WAVeform:YINCrement? [<source>]

# Function:

This command queries the Y unit voltage of the specified source. <source> can be: CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH. **NOTE:** returned value= VoltScale /25

# **Returned Format:**

The query returns Y unit voltage, and the unit is V.

# Example:

:WAV:YINC? CHAN2 Return 4.000e000.

# 8. :WAVeform:YORigin?

# **Command Format:**

:WAVeform:YORigin? [<source>]

# Function:

The command queries the vertical offset of specified source. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH.

# **Returned Format:**

The query returns the value of vertical offset, and the unit is V.

# Example:

:WAV:YOR? CHAN2 Return -1.600e001.

#### 9. :WAVeform:XINCrement?

#### **Command Format:**

:WAVeform:XINCrement? [<source>]

#### Function:

The command queries the interval time between two points of the specified source. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH.

#### **Returned Format:**

The query returns the value of interval, and the unit is s.

#### Example:

:WAV:XINC? CHAN2 Return 1.000e-003.

#### 10. :WAVeform:XORigin?

#### **Command Format:**

:WAVeform:XORigin? [<source>]

#### Function:

The command queries the time from trigger point to XREF of the specified source. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH.

#### **Returned Format:**

The query returns the value of time and the unit is s.

#### Example:

:WAV:XOR? CHAN2 Return 2.000e-002.

#### 11. :WAVeform:XREFerence?

#### **Command Format:**

:WAVeform:XREFerence?

#### RIGOL

#### Function:

The command queries the horizontal reference axis.

# **Returned Format:**

The query returns the value of reference axis.

# Example:

:WAV:XREF? Return 0.

# 12. :WAVeform:YREFerence?

# **Command Format:**

:WAVeform:YREFrence?

# Function:

The command queries the vertical reference axis. YREFrence is fixed at the verticel middle of the screen (100).

# **Returned Format:**

The query returns the value of reference axis.

# Example:

:WAV:YREF? Return 100.

#### Peak Detect


#### 1. Conditions

- (1) The Peak Detect acquisition mode is open
- (2) Time base is greater than 1 us

The acquisition is not Peak Detect in other conditions.

#### 2. Data storage format in memory under Peak Detect

The waveform data in Peak Detect mode are stored in the form of max1-min1, max2-min2, max3-min3. That is, a waveform point has a couple of data: a max and a min, which are stored alternately. As the following figure shown, the waveform display will be serrated.

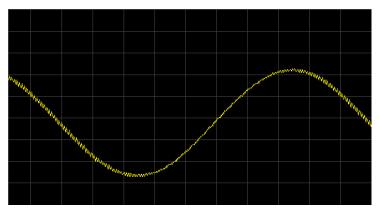

#### 3. Pick up waveform point of specific time:

- (1) CntSpan = (-Time+TrigOffset)\*SaRate //The sample points of specific time
- (2) CntSpan = CntSpan\*2 // Every time contains two data
- (3) DstPtr = MidPt CntSpan // Index of waveform point of specific time

**Example:** To calculate the index position at -7.69ms point when sample rate is 250k Sa/s and trigger offset is 500 us.

CntSpan = (7.69+0.5)\*250=1922+125=2047 //The sample points of specific time

CntSpan = 2047\*2 = 4094 // Every time contains two data

DstPtr = 4096 – 4094=2 // Index of waveform point of specific time

Then, you will get two waveform points of this time: Memory(2) and Memory(3).

#### 4. Time calculation of specific index point:

Known condition: memory index point "ind"


(1) TimeSpan = (ind – MidPt)/(SaRate\*2) //Take half of the result since every time

contains two waveform points

(2) Time(ind) = TimeSpan + TimeOffset

**Example:** When sample rate is 250k Sa/s and trigger offset is 500 us. To calculate time of index point 2: TimeSpan = (2 - 4096)/(250\*2) = -8.188msTime(2) = (-8.188+0.5) = -7.688msTo calculate time of index point 3: TimeSpan =((3 - 4096)/2)/(250) = (-2047)/250 = -7.686msTime(3)=(-8.186+0.5) = -7.686msTime(3) = Time(2).

#### 5. Data displays on the screen:

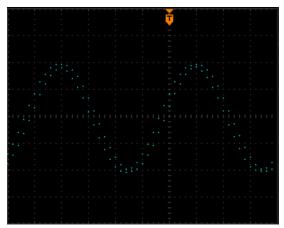

#### 6. Data format of returned screen data:

The screen data obtained by command :WAV:DATA? in Peak Detect mode are stored in the form of T1max – T1min,T2max-T2min, the format of which is the same as memory data storage. Because one time contains two points, the waveform data extends to 1200 = 600\*2.

# **KEY Commands**

KEY Commands are used to control the keys and knobs on the operation panel of DS1000B.

KEY Commands include:

- :KEY:LOCK
- :KEY:STORage
- :KEY:UTILity
- :KEY:MEASure
- :KEY:CURSor
- :KEY:ACQuire
- :KEY:DISPlay
- :KEY:HELP
- :KEY:QUICKMEASure
- :KEY:QUICKPRINt
- :KEY:AUTO
- :KEY:RUN
- :KEY:SINGLe
- :KEY:MNUTIME
- :KEY:MNUoff
- :KEY:F1
- :KEY:F2
- :KEY:F3
- :KEY:F4
- :KEY:F5
- :KEY:CH1
- :KEY:CH2
- :KEY:CH3
- :KEY:CH4
- :KEY:MATH
- :KEY:REF
- :KEY:TrigMODE
- :KEY:TrigMENU
- :KEY:TrigFORCe
- :KEY:Trig%50

- :KEY:CH1\_VOLT\_INC
- :KEY:CH1\_VOLT\_DEC
- :KEY:CH1\_VOLT\_Z
- :KEY:CH1\_POS\_INC
- :KEY:CH1\_POS\_DEC
- :KEY:CH1\_POS\_Z
- :KEY:CH2\_VOLT\_INC
- :KEY:CH2\_VOLT\_DEC
- :KEY:CH2\_VOLT\_Z
- :KEY:CH2\_POS\_INC
- :KEY:CH2\_POS\_DEC
- :KEY:CH2\_POS\_Z
- :KEY:CH3\_VOLT\_INC
- :KEY:CH3\_VOLT\_DEC
- :KEY:CH3\_VOLT\_Z
- :KEY:CH3\_POS\_INC
- :KEY:CH3\_POS\_DEC
- :KEY:CH3\_POS\_Z
- :KEY:CH4\_VOLT\_INC
- :KEY:CH4\_VOLT\_DEC
- :KEY:CH4\_VLOT\_Z
- :KEY:CH4\_POS\_INC
- :KEY:CH4\_POS\_DEC
- :KEY:CH4\_POS\_Z
- :KEY:TIME\_INC
- :KEY:TIME\_DEC
- :KEY:TIME\_Z
- :KEY:TIME\_POS\_INC
- :KEY:TIME\_POS\_DEC
- :KEY:TIME\_POS\_Z

- :KEY:FUNC\_Z
- :KEY:FUNC\_INC
- :KEY:FUNC\_DEC

- :KEY:TRIG\_LEVEL\_INC
- :KEY:TRIG\_LEVEL\_DEC
- :KEY:TRIG\_LEVEL\_Z

We will give detailed introductions for each command in the following parts.

### 1. :KEY:LOCK

#### **Command Format:**

:KEY:LOCK { ENABle | DISable } :KEY:LOCK?

### Function:

The command enables and disables the function of Remote control on the keys of front panel.

#### **Returned Format:**

The query returns ENABLE or DISABLE.

### Example:

:KEY:LOCK ENAB Enable remote control on the keys of front panel . :KEY:LOCK? Return ENABLE.

### 2. :KEY:STORage

Command Format:

:KEY:STORage

#### Function:

The command sets storage menu on or off.

# 3. :KEY:UTILity

**Command Format:** :KEY:UTILITY

#### Function:

The command sets utility menu on or off.

#### 4. :KEY:MEASure

**Command Format:** :KEY:MEASure

#### Function:

The command sets measurement function and its menu on or off.

# 5. :KEY:CURSor

Command Format: :KEY:CURSor

### Function:

The command enables cursor measurement function and its menu. The cursor mode can be set by sending the command continually.

# 6. :KEY:ACQuire

# Command Format:

:KEY:ACQuire

### Function:

The command sets acquire menu on or off.

# 7. :KEY:DISPlay

**Command Format:** :KEY:DISPLAY

#### Function:

The command sets display menu on or off.

# 8. :KEY:HELP

#### Command Format: :KEY:HELP

# Function:

The command sets the built-in help system on or off.

#### 9. :KEY:QUICKMEASure

#### **Command Format:**

:KEY:QUICKMEASure

#### Function:

The command sets quick-measurement function on or off. And it could be set in Measurement menu.

#### **10. :KEY:QUICKPRINt**

**Command Format:** :KEY:QUICKPRINt

#### Function:

The command prints and saves the screen.

#### 11. :KEY:AUTO

Command Format: :KEY:AUTO

#### Function:

The command sets oscilloscope automatically to display the waveform to be optimal condition.

#### 12. :KEY:RUN

Command Format: :KEY:RUN

#### Function:

This command controls the running state of the oscilloscope. The oscilloscope will cutover between RUN and STOP when sending this command continually.

#### 13. :KEY:SINGLe

#### **Command Format:**

:KEY:SINGLe

### Function:

The command sets the trigger mode as Single trigger.

# 14. :KEY:MNUTIME

### **Command Format:**

:KEY:MNUTIME

# Function:

The command sets horizontal system and its menu on or off.

# 15. :KEY:MNUoff

# **Command Format:**

:KEY:MNUoff

# Function:

The command sets menu display function on or off.

# 16. :KEY:F1

# Command Format:

:KEY:F1

# Function:

The command selects the first option in current menu. If the subordinate menu existing and its options are available, then these options could be selected circularly when send repeatly the command.

# 17. :KEY:F2

### Command Format: :KEY:F2

#### Function:

The command selects the second option in current menu. If the subordinate menu existing and its options are available, then these options could be selected circularly when send repeatly the command.

#### 18. :KEY:F3

#### **Command Format:**

:KEY:F3

#### Function:

The command selects the third option in current menu. If the subordinate menu existing and its options are available, then these options could be selected circularly when send repeatly the command.

#### 19. :KEY:F4

Command Format: :KEY:F4

\_ \_

# Function:

The command selects the fourth option in current menu. If the subordinate menu existing and its options are available, then these options could be selected circularly when send repeatly the command.

#### 20. :KEY:F5

Command Format: :KEY:F5

#### Function:

The command selects the fifth option in current menu. If the subordinate menu existing and its options are available, then these options could be selected circularly when send repeatly the command.

### 21. :KEY:CH1

### **Command Format:**

:KEY:CH1

# Function:

The command sets channel 1 and its menu on or off.

# 22. :KEY:CH2

# **Command Format:**

:KEY:CH2

# Function:

The command sets channel 2 and its menu on or off.

# 23. :KEY:CH3

#### **Command Format:** :KEY:CH3

# Function:

The command sets channel 3 and its menu on or off.

# 24. :KEY:CH4

**Command Format:** :KEY:CH4

# Function:

The command sets channel 4 and its menu on or off.

# 25. :KEY:MATH

# **Command Format:** :KEY:MATH

#### Function:

The command sets Math function and its menu on or off.

#### 26. :KEY:REF

# Command Format:

:KEY:REF

#### Function:

The command sets reference waveform function and its menu on or off.

### 27. :KEY:TrigMODE

# Command Format:

:KEY:TrigMODE

#### Function:

The command shifts the trigger mode among AUTO, NORMAL and SINGLE.

#### 28. :KEY:TrigMENU

# Command Format:

:KEY:TrigMENU

### Function:

The command sets trigger menu on or off.

#### 29. :KEY:TrigFORCe

# **Command Format:**

:KEY:TrigFORCe

#### Function:

The command is used for forcing trigger.

### 30. :KEY:Trig%50

### **Command Format:**

:KEY:Trig%50

# Function:

This command sets the trigger level at the vertical midpoint of the amplitude of trigger signal.

# 31. :KEY:FUNC\_Z

#### **Command Format:** •KEY•EUNC 7

:KEY:FUNC\_Z

# Function:

The command selects the multifunction knob.

# 32. :KEY:FUNC\_INC

**Command Format:** :KEY:FUNC\_INC

# Function:

The command increases the offset of multifunction knob.

# 33. :KEY:FUNC\_DEC

**Command Format:** :KEY:FUNC\_DEC

# Function:

The command decreases the offset of multifunction knob.

# 34. :KEY:CH1\_VOLT\_INC

# **Command Format:**

### :KEY:CH1\_VOLT\_INC

#### Function:

The command decreases the vertical scale of channel 1.

# 35. :KEY:CH1\_VOLT\_DEC

### **Command Format:**

:KEY:CH1\_VOLT\_DEC

#### Function:

The command increases the vertical scale of channel 1.

# 36. :KEY:CH1\_VOLT\_Z

**Command Format:** 

:KEY:CH1\_VOLT\_Z

#### Function:

The command sets the adjustment mode of vertical scale of channel 1 as Fine or Coarse. The vertical scale steps by 1-2-5 in Coarse; and by equality in Fine.

# 37. :KEY:CH1\_POS\_INC

Command Format: :KEY:CH1 POS INC

#### Function:

The command increases the vertical offset of channel 1 evenly.

# 38. :KEY:CH1\_POS\_DEC

# Command Format:

:KEY:CH1\_POS\_DEC

#### Function:

The command decreases the vertical offset of channel 1 evenly.

### 39. :KEY:CH1\_POS\_Z

**Command Format:** :KEY: CH1\_POS\_Z

#### Function:

The command adjusts the vertical offset of channel 1 to zero.

### 40. :KEY:CH2\_VOLT\_INC

# **Command Format:**

:KEY:CH2\_VOLT\_INC

#### Function:

The command decreases the vertical scale of channel 2.

#### 41. :KEY:CH2\_VOLT\_DEC

#### **Command Format:** :KEY:CH2\_VOLT\_DEC

#### Function:

The command increases the vertical scale of channel 2.

# 42. :KEY:CH2\_VOLT\_Z

# **Command Format:** :KEY:CH2\_VOLT\_Z

#### Function:

The command sets the adjustment mode of vertical scale of channel 2 as Fine or Coarse. The vertical scale steps by 1-2-5 in Coarse; and by equality in Fine.

### 43. :KEY:CH2\_POS\_INC

#### **Command Format:**

:KEY:CH2\_POS\_INC

#### Function:

The command increases the vertical position of channel 2 evenly.

# 44. :KEY:CH2\_POS\_DEC

#### **Command Format:**

:KEY:CH2\_POS\_DEC

#### Function:

The command decreases the vertical position of channel 2 evenly.

# 45. :KEY:CH2\_POS\_Z

**Command Format:** :KEY:CH2\_POS\_Z

#### Function:

The command adjusts the vertical offset of channel 2 to zero.

#### 46. :KEY:CH3\_VOLT\_INC

**Command Format:** :KEY:CH3\_VOLT\_INC

#### **Function:**

The command decreases the vertical scale of channel 3.

# 47. :KEY:CH3\_VOLT\_DEC

Command Format: :KEY:CH3\_VOLT\_DEC

#### Function:

The command increases the vertical scale of channel 3.

# 48. :KEY:CH3\_VOLT\_Z

#### **Command Format:**

:KEY:CH3\_VOLT\_Z

### Function:

The command sets the adjustment mode of vertical scaling of channel 3 as Fine or Coarse. The vertical scale steps by 1-2-5 in Coarse; and by equality in Fine.

# 49. :KEY:CH3\_POS\_INC

# **Command Format:**

:KEY:CH3\_POS\_INC

### Function:

The command increases the vertical offset of channel 3 evenly.

# 50. :KEY:CH3\_POS\_DEC

**Command Format:** :KEY:CH3\_POS\_DEC

#### Function:

The command decreases the vertical offset of channel 3 evenly.

# 51. :KEY:CH3\_POS\_Z

**Command Format:** :KEY:CH3\_POS\_Z

#### Function:

The command adjusts the vertical offset of channel 3 to zero.

# 52. :KEY:CH4\_VOLT\_INC

#### **Command Format:**

:KEY:CH4\_VOLT\_INC

#### Function:

The command decreases the vertical scale of channel 4.

# 53. :KEY:CH4\_VOLT\_DEC

#### **Command Format:**

:KEY:CH4\_VOLT\_DEC

#### Function:

The command increases the vertical scale of channel 4.

# 54. :KEY:CH4\_VLOT\_Z

# Command Format:

:KEY:CH4\_VOLT\_Z

#### Function:

The command sets the adjustment mode of vertical scale of channel 4 as Fine or Coarse. The vertical scale steps by 1-2-5 in Coarse; and by equality in Fine.

#### 55. :KEY:CH4\_POS\_INC

**Command Format:** :KEY:CH4\_POS\_INC

#### Function:

The command increases the vertical offset of channel 4 evenly.

# 56. :KEY:CH4\_POS\_DEC

### **Command Format:**

:KEY:CH4\_POS\_DEC

### Function:

The command decreases the vertical offset of channel 4 evenly.

# 57. :KEY:CH4\_POS\_Z

### **Command Format:** :KEY:CH4\_POS\_Z

# Function:

The command adjusts the vertical offset of channel 4 to zero.

# 58. :KEY:TIME\_INC

#### **Command Format:** :KEY:TIME\_INC

# Function:

The command decreases the time base by 1-2-5 step.

# 59. :KEY:TIME\_DEC

#### **Command Format:** :KEY:TIME\_DEC

# Function:

The command increases time base by 1-2-5 step.

# 60. :KEY:TIME\_Z

#### **Command Format:** :KEY:TIME Z

# Function:

The command sets delayed scan function on or off.

#### 61. :KEY:TIME\_POS\_INC

#### **Command Format:**

:KEY:TIME\_POS\_INC

#### Function:

The command decreases the trigger offset to the horizontal zero point evenly.

# 62. :KEY:TIME\_POS\_DEC

#### **Command Format:**

:KEY:TIME\_POS\_DEC

#### Function:

The command increases the trigger offset to the horizontal zero point evenly.

# 63. :KEY:TIME\_POS\_Z

**Command Format:** :KEY:TIME\_POS\_Z

#### Function:

The command adjusts the trigger offset to the horizontal zero point evenly.

#### 64. :KEY:TRIG\_LEVEL\_INC

#### **Command Format:**

:KEY:TRIG\_LEVEL\_INC

#### Function:

The command increases the trigger level evenly.

#### 65. :KEY:TRIG\_LEVEL\_DEC

#### **Command Format:**

:KEY:TRIG\_LEVEL\_DEC

# Function:

The command decreases the trigger level evenly.

# 66. :KEY:TRIG\_LEVEL\_Z

# **Command Format:**

:KEY:TRIG\_LEVEL\_Z

# Function:

The command adjusts the trigger level to zero.

# SAVe/RECall Commands

SAVe/RECall Commands are used to save and recall the waveform data and image on the screen.

SAVe/RECall Commands include:

- :SAVERECALL:TYPE
- :SAVERECALL:LOCation
- SAVERECALL:LOAD
- :SAVERECALL:SAVe
- :SAVe:IMAGe:STARt
- :SAVe:IMAGe:FACTors
- :SAVe:IMAGe:FORMat
- :SAVe:WAVeform:STARt
- :SAVe:SETup:STARt
- :SAVe:CSV:STARt
- :RECall:WAVeform:STARt
- :RECall:SETup:STARt

We will give detailed introductions for each command in the following parts.

## 1. :SAVERECALL:TYPE

## **Command Format:**

:SAVERECALL:TYPE <type> :SAVERECALL:TYPE?

## Function:

The command sets the data type for storage. The <type> may be WAVeform (waveform data) or SETups (data settings).

## **Returned Format:**

The query returns WAVEFORMS or SETUPS.

## Example:

:SAVERECALL:TYPE WAV Set the storage type as waveform data. :SAVERECALL:TYPE? Return WAVEFORM.

## 2. :SAVERECALL:LOCation

## **Command Format:**

:SAVERECALL:LOCation <location> :SAVERECALL:LOCation?

## Function:

The command sets the storage location. The <location> may be  $0\sim9$ .

## **Returned Format:**

The query returns 0 or 1 .....9.

## Example:

:SAVERECALL:LOC 1	Set the storage location as the second.
:SAVERECALL:LOC?	Return 1.

## 3. :SAVERECALL:LOAD

**Command Format:** :SAVERECALL:LOAD

#### Function:

The command recalls the waveform or setup data from internal flash according to storage type.

## 4. :SAVERECALL:SAVe

**Command Format:** 

:SAVERECALL:SAVE

#### Function:

The command saves the waveform or setup to internal flash according to storage type.

## 5. :SAVe:IMAGe:STARt

#### **Command Format:**

:SAVE:IMAGe:STARt <file\_spec>

#### Function:

The command saves the image. The <file\_spec> is the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters. **NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

#### 6. :SAVe:IMAGe:FACTors

#### **Command Format:**

:SAVE:IMAGe:FACTors {{1|ON}|{0|OFF}} :SAVE:IMAGe:FACTors?

#### Function:

The command sets the saving function of system parameters on or off. The function indicates to save a file which records all system parameters while saving image.

#### RIGOL

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:SAVE:IMAG:FACT ON Save the system parameters. :SAVE:IMAG:FACT? Return 1.

#### 7. :SAVe:IMAGe:FORMat

#### **Command Format:**

:SAVE:IMAGe:FORMat <format> :SAVE:IMAGe:FORMat?

#### **Function:**

The command sets the format of saved image. The <format> may be 24bit real color (BMP|BMP24bit), 8bit bitmap (BMP8bit) or PNG (PNG).

#### **Returned Format:**

The query returns BMP24bit, BMP8bit or PNG.

#### Example:

:SAVE:IMAG:FORM BMP	Set the format as 24 bit real color.
:SAVE:IMAG:FORM?	Return BMP24bit.

#### 8. :SAVe:WAVeform:STARt

#### **Command Format:**

:SAVE:WAVeform:STARt <file\_spec>

#### **Function:**

The command starts the saving waveform function. If the waveforms are in internal flash, the <file\_spec> is composed of integers among 0~9; if in external storage medium, the <file\_spec> will be the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters.

**NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

## 9. :SAVe:SETup:STARt

#### **Command Format:**

:SAVE:SETup:STARt <file\_spec>

#### Function:

The command starts the saving setup function. If the waveforms are in internal flash, the <file\_spec> is composed of integers among 0~9; if in external storage medium, the <file\_spec> will be the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters.

**NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

## 10. :SAVe:CSV:STARt

#### Command Format:

:SAVE:CSV:STARt <file\_spec>]

#### Function:

The command sets the saving function of CSV file on. CSV file can be saved in external storage medium. The <file\_spec> will be the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters.

**NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

## 11. :RECall:WAVeform:STARt

#### **Command Format:**

:RECAll:WAVeform:STARt <file\_spec>

#### Function:

The command sets the recalling waveform function on. If the waveforms are in internal flash, the <file\_spec> is composed of integers among 0~9; if in external storage medium, the <file\_spec> will be the file name, which is composed of double quotation marks and ASCII characters, also, the file name

length within the double quotation marks must less than 26 characters. **NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

## 12. :RECall:SETup:STARt

#### **Command Format:**

:RECAll:SETup:STARt <file\_spec>

#### Function:

The command sets the recalling setup function on. If the waveforms are in internal flash, the <file\_spec> is composed of integers among  $0\sim9$ ; if in external storage medium, the <file\_spec> will be the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters.

**NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

# **MASK Commands**

MASK Commands are used to create and modify the rules for pass/fail test function.

MASK Commands include:

- :MASK:CREate
- :MASK:ENABle
- :MASK:X
- :MASK:Y
- :MASK:SOURce
- :MASK:OPERate
- :MASK:OUTPut
- :MASK:STOPonoutput
- :MASK:SAVE
- MASK:LOAD
- :MASK:DOWNload
- MASK:Upload
- :MASK:MSG

We will give detailed introductions for each command in the following parts.

## 1. :MASK:CREate

#### **Command Format:**

:MASK:CREate

## Function:

The command creates the rule of passing test.

## 2. :MASK:ENABle

## **Command Format:**

:MASK:ENABle {{1|ON}|{0|OFF}} :MASK:ENABle?

## Function:

The command sets the state of passing test as ON or OFF.

## **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### **Example:**

:MASK:ENAB ON Set passing test on. :MASK:ENAB? Return 1.

## 3. :MASK:X

**Command Format:** :MASK:X <x> :MASK:X?

## Function:

The command sets the rule of testing X direction. The  $\langle x \rangle$  is 0.04div~4div.

## **Returned Format:**

The query returns the x value, and the unit is div.

## Example:

:MASK:X 1 Set the X direction rule as 1div. :MASK:X? Return 1.000e000.

#### 4. :MASK:Y

## **Command Format:**

:MASK:Y <y> :MASK:Y?

#### Function:

The command sets the rule of testing Y direction. The  $\langle y \rangle$  is 0.04div~4div.

#### **Returned Format:**

The query returns the y value, and the unit is div.

#### Example:

:MASK:Y 1	Set the Y direction rule as 1 div.
:MASK:Y?	Return 1.000e000.

#### 5. :MASK:SOURce

#### **Command Format:**

:MASK:SOURce <source> :MASK:SOURce?

#### Function:

The command sets the passing test source. The <source> may be CHANnel1, CHANnel2, CHANnel3 or CHANnel4.

#### **Returned Format:**

The query returns CHAN1 or CHAN2, CHAN3, CHAN4.

#### Example:

:MASK:SOUR CHAN1 Set the passing test source as channel 1. :MASK:SOUR? Return CHAN1.

#### 6. :MASK:OPERate

#### **Command Format:**

:MASK:OPERate <opt> :MASK:OPERate?

## Function:

The command sets the function of passing test run or stop. The  $\langle opt \rangle$  may be RUN or STOP.

#### **Returned Format:**

The query returns RUN or STOP.

#### Example:

:MASK:OPER RUN Set the operation of passing test run. :MASK:OPER? Return RUN.

## 7. :MASK:OUTPut

#### **Command Format:**

:MASK:OUTPut <output> :MASK:OUTPut?

## Function:

The command sets the output mode of passing test. The <output> may be FAIL, PASS, FAIL\_SOUND or PASS\_SOUND. **NOTE:** PASS SOUND is effective when sound setting is on.

#### **Returned Format:**

The query returns FAIL or PASS, FAIL\_SOUND, PASS\_SOUND.

## Example:

:MASK:OUTP PASS	Set the output mode of passing test as pass.
:MASK:OUTP?	Return PASS.

#### 8. :MASK:STOPonoutput

#### **Command Format:**

:MASK:STOPonoutput {{1|ON}|{0|OFF}} :MASK:STOPonoutput?

## Function:

The command sets the output stop mode of passing test ON or OFF.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:MASK:STOP ON Set the output stop mode of passing test on. :MASK:STOP? Return 1.

#### 9. :MASK:SAVE

Command Format: :MASK:SAVE

### Function:

The command saves the rule of passing test.

#### 10. :MASK:LOAD

Command Format: :MASK:LOAD

#### Function:

The command loads the rule of passing test.

#### 11. :MASK:DOWNload

# Command Format:

:MASK:DOWNload <filename>

#### Function:

The command download the test rule to the external storage equipment, and the <filename> is the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters.

**NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

## 12. :MASK:Upload

#### **Command Format:**

:MASK:Upload <filename>

#### Function:

The command uploads the test rule from the external storage equipment, and the <filename> is the file name, which is composed of double quotation marks and ASCII characters, also, the file name length within the double quotation marks must less than 26 characters.

**NOTE:** The system will add the file format suffix with 4 characters automatically, which are not included in 26 characters.

#### 13. :MASK:MSG

#### **Command Format:**

:MASK:MSG {{1|ON}|{0|OFF}} :MASK:MSG?

#### Function:

The command sets the prompt information function of passing test ON or OFF.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

## Example:

:MASK:MSG ON	Set the prompt information function on.
:MASK:MSG?	Return 1.

# **CURSor Commands**

CURSor Commands are used to set cursor parameters to measure manually and automatically and track the waveform data.

CURSor Commands include:

- :CURSor:MODE
- :CURSor:MANUal:TYPE
- :CURSor:MANUal:SOURce
- :CURSor:MANUal:CURAX
- :CURSor:MANUal:CURAY
- :CURSor:MANUal:CURBX
- :CURSor:MANUal:CURBY
- :CURSor:TRACk:SOURceA
- :CURSor:TRACk:SOURceB
- :CURSor:TRACk:CURA
- :CURSor:TRACk:CURB

We will give detailed introductions for each command in the following parts.

#### 1. :CURSor:MODE

#### **Command Format:**

:CURSor:MODE <mode> :CURSor:MODE?

### Function:

The command sets the cursor mode. The <mode> may be CLOSe, MANUal, TRACk or MEASure (measure automatically).

#### **Returned Format:**

The query returns CLOSE or MANUAL, TRACK, MEASURE.

## Example:

:CURS:MODE TRAC	Set the cursor mode as track.			
:CURS:MODE?	Return TRACK.			

## 2. :CURSor:MANUal:TYPE

#### **Command Format**

:CURSor:MANUal:TYPE <type> :CURSor:MANUal:TYPE?

#### Function:

The command sets the cursor type of manual cursor. The <type> may be TIME or AMPlitude.

#### **Returned Format:**

The query returns Time or Amplitude.

#### Example:

:CURS:MANU:TYPE TIME :CURS:MANU:TYPE?

Set the cursor type of manual cursor as time. Return Time.

## 3. :CURSor:MANUal:SOURce

#### **Command Format:**

:CURSor:MANUal:SOURce <source> :CURSor:MANUal:SOURce?

#### Function:

The command sets the cursor source of manual cursor. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4 or MATH.

#### **Returned Format:**

The query returns Channel1 or Channel2, Channel3, Channel4, Math.

#### Example:

:CURS:MANU:SOUR CHAN1	Set the cursor source of manual cursor.
:CURS:MANU:SOUR?	Return Channel1.

#### 4. :CURSor:MANUal:CURAX

#### **Command Format:**

:CURSor:MANUal:CURAX <value> :CURSor:MANUal:CURAX?

#### Function:

The command sets the AX position of manual cursor. The <value> range is 4~297.

#### **Returned Format:**

The query returns the value of AX position.

#### Example:

:CURS:MANU:CURAX 100 Set the AX position of manual cursor as 100. :CURS:MANU:CURAX? Return 100.

#### 5. :CURSor:MANUal:CURAY

#### **Command Format:**

:CURSor:MANUal:CURAY <value> :CURSor:MANUal:CURAY?

### Function:

The command sets the AY position of manual cursor. The <value> range is  $4 \sim 194$ .

## **Returned Format:**

The query returns the value of AY position.

## Example:

:CURS:MANU:CURAY 100 Set the AY position of manual cursor as 100. :CURS:MANU:CURAY? Return 100.

## 6. :CURSor:MANUal:CURBX

#### **Command Format:**

:CURSor:MANUal:CURBX <value> :CURSor:MANUal:CURBX?

## Function:

The command sets the BX position of manual cursor. The <value> range is  $4\sim 297$ .

## **Returned Format:**

The query returns the value of BX position.

## Example:

:CURS:MANU:CURBX 100 Set the BX position of manual cursor as 100. :CURS:MANU:CURBX? Return 100.

## 7. :CURSor:MANUal:CURBY

#### **Command Format:**

:CURSor:MANUal:CURBY <value>

## Function:

The command sets the BY position of manual cursor. The <value> range is  $4 \sim 194$ .

#### **Query Format:**

:CURSor:MANUal:CURBY?

#### **Returned Format:**

The query returns the value of BY position.

#### Example:

:CURS:MANU:CURBY 100 Set the BY position of manual cursor as 100. :CURS:MANU:CURBY? Return 100.

## 8. :CURSor:TRACk:SOURceA

#### **Command Format:**

:CURSor:TRACk:SOURceA <source> :CURSor:TRACk:SOURceA?

#### Function:

The command sets the signal source A of track cursor. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4, MATH or NONE.

#### **Returned Format:**

The query returns Channel1 or Channel2, Channel3, Channel4, Math, None.

#### Example:

:CURS:TRAC:SOURA CHAN1 Set the signal source A of track cursor. :CURS:TRAC:SOURA? Return Channel1.

#### 9. :CURSor:TRACk:SOURceB

#### **Command Format:**

:CURSor:TRACk:SOURceB <source> :CURSor:TRACk:SOURceB?

#### Function:

The command sets the signal source B of track cursor. The <source> may be CHANnel1, CHANnel2, CHANnel3, CHANnel4, MATH or NONE.

#### **Returned Format:**

The query returns Channel1 or Channel2, Channel3, Channel4, Math, None.

### Example:

:CURS:TRAC:SOURB CHAN1 Set the signal source B of track cursor. :CURS:TRAC:SOURB? Return Channel1.

## 10. :CURSor:TRACk:CURA

**Command Format:** :CURSor:TRACk:CURA <value> :CURSor:TRACk:CURA?

## Function:

The command sets the position of track cursor A. The <value> range is 4~297.

#### **Returned Format:**

The query returns the position of cursor A.

#### Example:

:CURS:TRAC:CURA 100 Set the position of track cursor A as 100. :CURS:TRAC:CURA? Return 100.

#### 11. :CURSor:TRACk:CURB

#### **Command Format:**

:CURSor:TRACk:CURB <value> :CURSor:TRACk:CURB?

#### Function:

The command sets the position of track cursor B. The <value> range is 4~297.

#### **Returned Format:**

The query returns the position of cursor B.

#### Example:

:CURS:TRAC:CURB 100

Set the position of track cursor B as 100.

:CURS:TRAC:CURB?

Return 100.

# **Other Commands**

The following commands are used to set some additional functions: counter, beeper, system language, real-time clock and the state of AUTO key.

Other Commands include:

- :COUNter:ENABle
- :BEEP:ENABle
- :BEEP:ACTion
- :INFO:LANGuage
- :RTC
- :AUToscale:DISable
- :AUToscale:ENable
- :AUToscale?

We will give detailed introductions for each command in the following parts.

## 1. :COUNter:ENABle

#### **Command Format:**

:COUNter:ENABle {{1|ON}|{0|OFF}} :COUNter:ENABle?

## Function:

The command sets the counter ON or OFF.

## **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

## Example:

:COUN:ENAB ON Set the counter on. :COUN:ENAB? Return 1.

## 2. :BEEP:ENABle

#### **Command Format:**

:BEEP:ENABle {{1|ON}|{0|OFF}} :BEEP:ENABle?

#### Function:

The command sets the system beeper ON or OFF.

#### **Returned Format:**

The query returns 1 or 0, respectively indicates ON or OFF.

#### Example:

:BEEP:ENAB ON Set the system beeper on. :BEEP:ENAB? Return 1.

## 3. :BEEP:ACTion

#### **Command Format:**

:BEEP:ACTion

### Function:

The command tests the system beeper.

## 4. :INFO:LANGuage

## **Command Format:**

:INFO:LANGuage <cmd\_lang> :INFO:LANGuage?

## Function:

The command sets the system language. The <cmd\_lang> may be SIMPlifiedchinese, TRADitionalchinese, KORean, JAPanese, ENGLish, FRENch, GERMan, ITALian, RUSSian, PORTuguese or SPANish.

## **Returned Format:**

The query returns Simplified Chinese or Traditional Chinese, Korean, Japanese, English, German, French, Italian, Russian, Portuguese, Spanish.

## Example:

:INFO:LANG SIMP	Set the system language as SIMPlifiedchinese.
:INFO:LANG?	Return Simplified Chinese.

## 5. :RTC

## **Command Format:**

```
:RTC <year>,<month>,<day>,<hour>,<minute>,<second>
:RTC?
```

## Function:

The command sets the system time. The ranges of each parameter are: <year> : 2000~2099 <month>: 1~12 <day>: 1~31 <hour>: 0~23 <minute>: 0~59 <second>: 0~59

#### **Returned Format:**

The query returns the Year, the Month, the day, the hour, the minutes, and the second.

### Example:

## 6. :AUToscale:DISable

#### **Command Format:**

:AUToscale:DISable

#### Function:

The command disables the AUTO key, and forbids users setting automatically.

## 7. :AUToscale:ENable

## **Command Format:**

:AUToscale:ENable

#### **Function:**

The command enables the AUTO key, and allows users to set automatically.

#### 8. :AUToscale?

**Command Format:** :AUToscale?

### Function:

Return the AUTOSCALE state.

#### **Returned Format:**

The query returns UnLocked or Locked.

# Chapter 3 Programming Examples

This chapter lists some programming examples in the development environments of Visual C++ 6.0, Visual Basic 6.0 and LabVIEW 8.6. All the examples are based on VISA (Virtual Instrument Software Architecture).

VISA is an API (Application Programming Interface) used for controlling instruments. It is convenient for users to develop testing applications which are independent of the types of instrument and interface. Note that "VISA" here we mention is NI (National Instrument)-VISA. NI-VISA is an API written by NI based on VISA standard. You can use NI-VISA to achieve the communication between the oscilloscope and PC via GPIB, USB, RS232, LAN and such instrument bus. As VISA has defined a set of software commands, users can control the instrument without understanding the working state of the interface bus. For more details, please refer to NI-VISA help.


A typical application of VISA contains the fowling parts:

- 1. Set up the conversation for the existing resource
- 2. Configure the resource (such as: Baud rate)
- 3. Close the conversation

# **Prepare for Programming**

First affirm your computer has installed VISA library of NI (see <u>http://www.ni.com</u>). Here we install it in the default path: C:\Program Files\IVI Foundation\VISA.

In this text, we use USB interface to achieve the communication between the oscilloscope and PC. See the figure below.

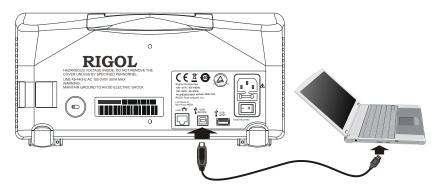

After successful connection, turn on the instrument, a dialog will guide you to install the driver of "USB Test and Measurement Device" on the PC. See the figure below:




Now, you have finished the preparations. Next, we will give you some programming examples in Visual C++ 6.0, Visual Basic 6.0 and LabVIEW 8.6.


## Program in Visual C++ 6.0

Open Visual C++ 6.0, take the following steps:

- 1. Create a project based on MFC.
- Choose Project → Settings → C/C++; select "Code Generation" in Category and "Debug Multithreaded DLL" in Use run-time library; click OK.

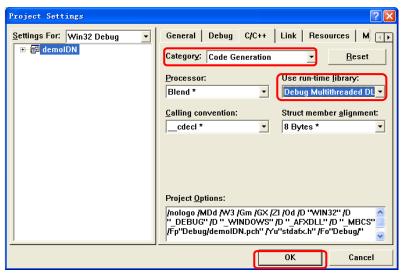

Choose Project→Settings→Link, add the file "visa32.lib" manually in Object/library modules.

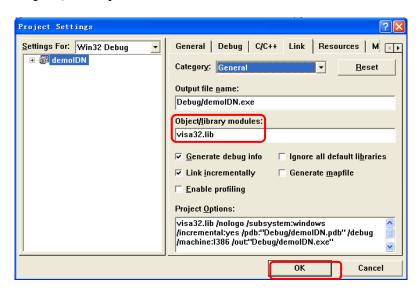

4. Choose Tools → Options → Directories; select "Include files" in Show directories for, and then dblclick the blank in Directories to add the path of "Include": C:\Program Files\IVI Foundation\VISA\WinNT\include.

Select "Library files" in Show directories for, and then dblclick the blank in **Directories** to add the path of "Lib":

C:\Program Files\IVI Foundation\VISA\WinNT\lib\msc.

Options ?
Editor   Tabs   Debug   Compatibility   Build Directories   Works
Platform: <u>Show directories for</u> :
Win32 Include files
Directories: $\square \times \uparrow \checkmark$
D:\Program Files\Microsoft Visual Studio\VC98\INCLUDE D:\Program Files\Microsoft Visual Studio\VC98\MFC\INCLUDE D:\Program Files\Microsoft Visual Studio\VC98\ATL\INCLUDE C:\PROGRAM FILES\VIEQUNDATION\VISA\WINNT\INCLUDE The blank
OK Cancel

Note: At present, VISA library has been added successfully.

5. Add controls: Text, Com box, Button and Edit. See the figure below.

demoIDN		 	 
Command	•	Send and Read	
Edit		 	

- **6.** Modify the properties of the controls.
- 1) Name the Text to be "Command".
- 2) Choose Data in the property of Com box, input three commands manually: \*IDN?
   \*OPC?
   :ACQuire:TYPE?
- 3) Choose **General** in the property of **Edit** and select **Disable**.
- 4) Modify the name of **Button** such as: Send and Read.
- Respectively add two variables m\_combox and m\_receive for the controls of Com box and Edit.

demoIDN		×
Command :	▼ Send And Bead	
Edit	Easte Insert Active <u>X</u> Control Size to Content St Align Left Edges Align Top Edges	
	Check Mnemonics ClassWizard Events Properties	

IFC ClassVizard					2
Message Maps <u>P</u> roject: demoIDN	rmolDNDig.h, E:\\demolC Ty	Class <u>n</u> am CDemolDi	NDIg	-	Add Class  Add Variable Delete Variable Update Columns Bind All
, Description: ( Ma⊻imum Charao	CString with length validati	on		ОК	Cancel

8. Add the codes.

Dblclick the **Button**, enter the programming environment. First of all, declare "#include <visa.h>" in header file, then add the following codes:

ViSession defaultRM, vi; char buf [256] = {0}; CString s,strTemp; char\* stringTemp;

ViChar buffer [VI\_FIND\_BUFLEN]; ViRsrc matches=buffer; ViUInt32 nmatches; ViFindList list;

viOpenDefaultRM (&defaultRM);

// acquire USB resource of visa
viFindRsrc(defaultRM, "USB?\*", &list,&nmatches, matches);
viOpen (defaultRM,matches,VI\_NULL,VI\_NULL,&vi);
viPrintf (vi, "\*RST\n");

```
// send the receiving commands
m_combox.GetLBText(m_combox.GetCurSel(),strTemp);
strTemp = strTemp + "\n";
stringTemp = (char *)(LPCTSTR)strTemp;
viPrintf (vi,stringTemp);
// read the result
viScanf (vi, "%t\n", &buf);
// display the results
UpdateData (TRUE);
m_receive = buf;
UpdateData (FALSE);
viClose (vi);
viClose (defaultRM);
```

9. Save, build and run the project, you will get an EXE file. When the oscilloscope has been successfully connected with PC, choose a command such as \*IDN? and click "Send and Read", the oscilloscope will return the result.

# **Program in Visual Basic 6.0**

Open Visual Basic 6.0, take the following steps:

- 1. Create a Standard EXE project.
- 2. Choose **Project→Add Module→Existing**; find the **"visa.bas"** file in the filefolder of **include** under the path of NI-VISA and add;

Add Module				? 🛛
New Existi	ng			
查找范围(I):	🔁 include	•	<b>(</b> -	È 💣 🎟 -
vpptype.ba				
文件名(图):	visa32. bas			打开(0)
文件类型 ( <u>T</u> ):	Basic Files (*.bas)		•	取消
				帮助(H)
Don't show t	his dialog in the f <u>u</u> ture			

**3.** Add four **Command Buttons** and **Lables** to the demo, each button denotes each channel (CH1~CH4).and each Label denotes different states (yellow, light blue, pink and dark blue which is the channel's color indicates opening, while gray indicates close) of the channels. See the figure below.

🖣 Demo			
-		-	-
CH1	CH2	СНЗ	CH4

 Choose Project→Project1 Properties→General, select "Form1" from the drop down box of Startup Object. Dblclick CH1 button to enter the programming environment, add the following codes to achieve the control to it. (for CH2, CH3 and CH4, the methods are similar)


```
Dim defrm As Long
 Dim vi As Long
 Dim strRes As String * 200
Dim list As Long
 Dim nmatches As Long
Dim matches As String * 200 ' reserve to acquire the equipment ID.
' acquire USB resource of visa
 Call viOpenDefaultRM(defrm)
 Call viFindRsrc(defrm, "USB?*", list, nmatches, matches)
 ' open the equipment
 Call viOpen(defrm, matches, 0, 0, vi)
' send the command to query the state of CH1
 Call viVPrintf(vi, ":CHAN1:DISP?" + Chr$(10), 0)
 ' get the state of CH1
 Call viVScanf(vi, "%t", strRes)
If strRes = 1 Then
' send the setting command
Call viVPrintf(vi, ":CHAN1:DISP 0" + Chr$(10), 0)
Label1(0).ForeColor = \&H808080 ' gray
 Else
Call viVPrintf(vi, ":CHAN1:DISP 1" + Chr$(10), 0)
Label1(0).ForeColor = &HFFFF& 'yellow
 End If
' close the resource
 Call viClose(vi)
 Call viClose(defrm)
```

**6.** Save and run the project, you will get a single executable program about demo. When the oscilloscope has been successfully connected with PC, you can open/close each channel conveniently by clicking the button.


# Program in LabVIEW 8.6

Open LabVIEW 8.6, take the following steps:

 Open Block Diagram; choose Instrument I/O→VISA; then separately add four functions: "VISA Open", "VISA Read", "VISA Write" and "VISA Close". See the figure below.

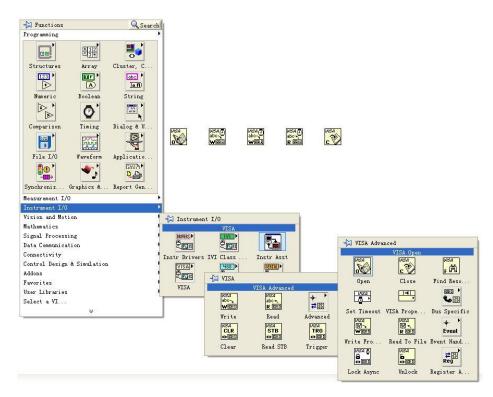


 Move the mouse to the item of "VISA resource name" on the control of "VISA Open"; right-click the mouse to choose Create→Control. See the figure below.

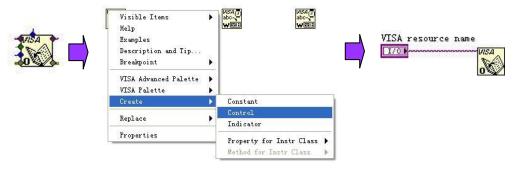


3. Separately connect "VISA resource name" with "VISA resource name out" and "error out" with "error in" of all the functions. See the figure below.

VISA resource name				
I/O Province WISA	WISA Jaho	WSA O	WISA	WISA
20	WØR	WE:	R DI:	c 🖤

4. Add a textbox written with ":WAV:FORM\sBYTE\n" to "write buffer" on one of the "VISA Write" control, and ":WAV:DATA?\n" on the other one. The former is to set the format of waveform reading to be "BYTE", while the latter reads the waveform data shown on the screen.




 Open the Front Panel; choose Modern→Graph→Waveform Graph to add a Waveform Graph control. See the figure below.

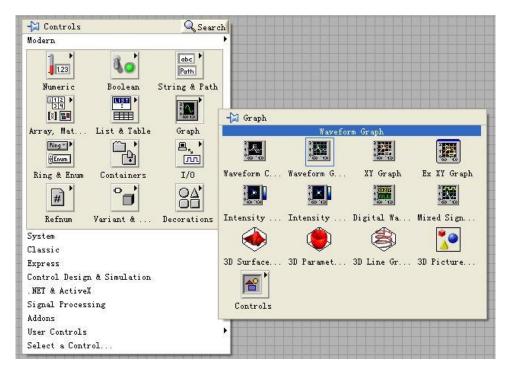


6. open Block Diagram; right-click and choose Programming → String →

**String/Array/Path** and select "String To Byte Array"; then, use this function to connect **"read buffer"** on **"VISA Read"** function with the **Waveform Graph**. See the figure below.



7. Add an **Event Structure** and a **While Loop** as well as two buttons, one of the buttons is used to control the start of waveform fetching, and the other one is to stop capturing. See the figure below.

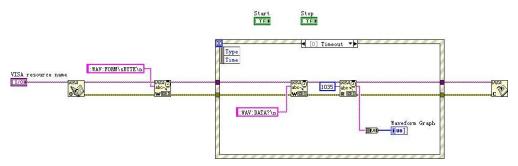

 Right-click the "selector label" and choose "Edit Events Handled by This Case" or "Add Event case" to add events respectively for each button. Press "Start" to capture waveform and "Stop" to exit the program.


Start	Value Change 🦉
Note: Mandling a Value D	Changed event on a Latched Boolean will not
automatically trigger its Terminal in order for it	s mechanical action. You must read the Boolean's to correctly reset.
Event Sources	Events
Event Sources	Events
<pre></pre>	Mouse Down Mouse Down?
<pre></pre>	<ul> <li>→ Mouse Down</li> <li>→ Mouse Down?</li> <li>→ Mouse Enter</li> </ul>
<pre></pre>	<ul> <li>→ Mouse Down</li> <li>→ Mouse Down?</li> <li>→ Mouse Enter</li> <li>→ Mouse Leave</li> </ul>
(Application) (This VI) Dynamic Panes Pane	<ul> <li>→ Mouse Down</li> <li>→ Mouse Down?</li> <li>→ Mouse Enter</li> <li>→ Mouse Leave</li> <li>→ Mouse Move</li> </ul>
(Application) (This VI) Dynamic Panes Pane Splitters	→ Mouse Down → Mouse Down? → Mouse Enter → Mouse Leave → Mouse Move → Mouse Up
<pre></pre>	<ul> <li>→ Mouse Down</li> <li>→ Mouse Down?</li> <li>→ Mouse Enter</li> <li>→ Mouse Leave</li> <li>→ Mouse Move</li> <li>→ Mouse Vp</li> <li>→ Shortcut Menu Activation?</li> </ul>
<pre>(Application&gt;</pre>	
<pre>(Application&gt;</pre>	Mouse Down Mouse Down? Mouse Enter Mouse Enter Mouse Leave Mouse Move Mouse Up Shortcut Menu Activation? Shortcut Menu Selection? (Ap) Shortcut Menu Selection (App
<ul> <li>(Application)</li> <li>(This VI&gt;)</li> <li>Dynamic</li> <li>Panes</li> <li>Pane</li> <li>Splitters</li> <li>Controls</li> <li>VISA resource na</li> <li>Waveform Graph</li> <li>Start</li> </ul>	Mouse Down     Mouse Down?     Mouse Enter     Mouse Enter     Mouse Leave     Mouse Wove     Mouse Up     Shortcut Menu Activation?     Shortcut Menu Selection? (App     Shortcut Menu Selection (App     Shortcut Menu Selection (Vse:
<pre>(Application&gt;</pre>	Mouse Down Mouse Down? Mouse Enter Mouse Enter Mouse Leave Mouse Move Mouse Up Shortcut Menu Activation? Shortcut Menu Selection? (Ap) Shortcut Menu Selection (App

After you set the **"Start"** event, see the result below.


	【 [0] "Start": Value Change ▼▶ Type
1	Time
А	CtlRef
4	OldVal
	:WAV:DATA?\n waveform Graph
	k <u>[US]</u> [US]

**9.** Add a **While Loop**; add **"Boolean"→"True Constant"** to point the event of


the "Stop" button to While and exit.

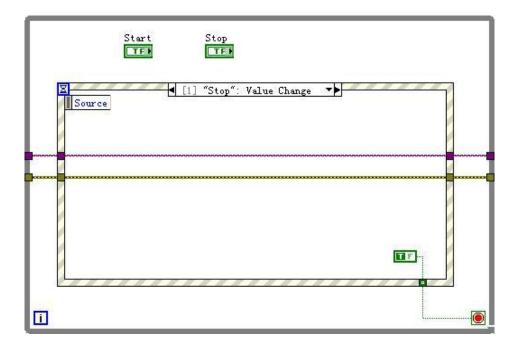

**10.** Change the input tunnel of VISA resource name and errors into **"Shift Register"** to finish creating program.

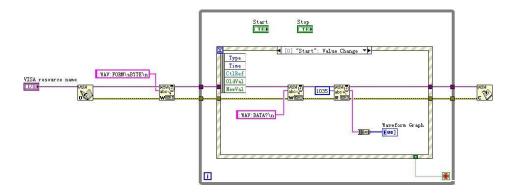

**11.** Adjust the style of **Front Panel** and click **"Fetch Waveform"** to get following interface. (the oscilloscope has been properly connected)

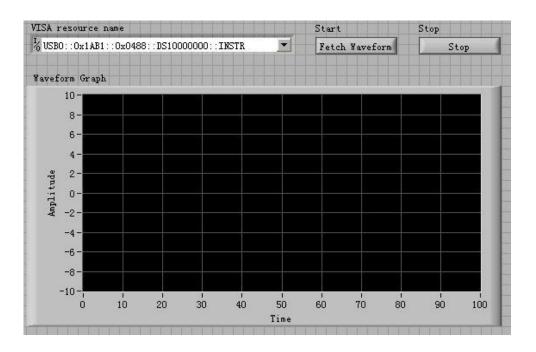

\*IDN? 2-3 \*RST 2-3 \*LRN? 2-3 \*OPC? 2-4

## A

:ACQuire:TYPE 2-13 :ACQuire:MODE 2-13 :ACQuire:AVERages 2-13 :ACQuire:SRATe? 2-14 :AUTO 2-6 :AUToscale:DISable 2-119 :AUToscale:ENable 2-119 :AUToscale? 2-119

## В

:BEEP:ENABle 2-117 :BEEP:ACTion 2-117

## С

:CHANnel<n>:BWLimit 2-51 :CHANnel<n>:COUPling 2-51 :CHANnel<n>:DISPlay 2-51 :CHANnel<n>:INVert 2-52 :CHANnel<n>:OFFSet 2-52 :CHANnel<n>:PROBe 2-53 :CHANnel<n>:SCALe 2-53 :CHANnel<n>:FILTer 2-54 :CHANnel<n>:FILTer 2-54 :CHANnel<n>:VERNier 2-55 :CHANnel<n>:VERNier 2-55 :CHANnel<n>:UNITs 2-56 :COUNter:ENABle 2-117 :CURSor:MODE 2-110 :CURSor:MANUal:TYPE 2-110 :CURSor:MANUal:SOURce 2-110 :CURSor:MANUal:CURAX 2-111 :CURSor:MANUal:CURAY 2-111 :CURSor:MANUal:CURBX 2-112 :CURSor:MANUal:CURBY 2-112 :CURSor:TRACk:SOURceA 2-113 :CURSor:TRACk:SOURceB 2-113 :CURSor:TRACk:CURA 2-114

## D

:DISPlay:TYPE 2-16 :DISPlay:GRID 2-16 :DISPlay:PERSist 2-16 :DISPlay:MNUDisplay 2-17 :DISPlay:MNUStatus 2-17 :DISPlay:SCReen 2-18 :DISPlay:CLEar 2-18 :DISPlay:BRIGhtness 2-19 :DISPlay:INTensity 2-19 :DISPlay:DATA? 2-20

## F

:FORCetrig 2-32

## I

:INFO:LANGuage 2-118

## K

:KEY:LOCK 2-81 :KEY:STORage 2-81 :KEY:UTILity 2-81 :KEY:MEASure 2-81 :KEY:CURSor 2-82 :KEY:ACQuire 2-82 :KEY:DISPlay 2-82 :KEY:HELP 2-82 :KEY:QUICKMEASure 2-83 :KEY:QUICKPRINt 2-83 :KEY:AUTO 2-83 :KEY:RUN 2-83 :KEY:SINGLe 2-83 :KEY:MNUTIME 2-84 :KEY:MNUoff 2-84 :KEY:F1 2-84 :KEY:F2 2-84 :KEY:F3 2-85 :KEY:F4 2-85 :KEY:F5 2-85 :KEY:CH1 2-86 :KEY:CH2 2-86 :KEY:CH3 2-86 :KEY:CH4 2-86 :KEY:MATH 2-86 :KEY:REF 2-87 :KEY:TrigMODE 2-87 :KEY:TrigMENU 2-87 :KEY:TrigFORCe 2-87 :KEY:Trig%50 2-88 :KEY:FUNC Z 2-88 :KEY:FUNC\_INC 2-88 :KEY:FUNC\_DEC 2-88 :KEY:CH1 VOLT INC 2-88 :KEY:CH1\_VOLT\_DEC 2-89 :KEY:CH1\_VOLT\_Z\_2-89 :KEY:CH1\_POS\_INC\_2-89 :KEY:CH1\_POS\_DEC 2-89 :KEY:CH1 POS Z 2-90 :KEY:CH2\_VOLT\_INC 2-90 :KEY:CH2\_VOLT\_DEC 2-90 :KEY:CH2\_VOLT\_Z\_2-90 :KEY:CH2\_POS\_INC 2-91

:KEY:CH2\_POS\_DEC\_2-91 :KEY:CH2\_POS\_Z 2-91 :KEY:CH3\_VOLT\_INC 2-91 :KEY:CH3\_VOLT\_DEC 2-91 :KEY:CH3\_VOLT\_Z\_2-92 :KEY:CH3\_POS\_INC\_2-92 :KEY:CH3\_POS\_DEC 2-92 :KEY:CH3\_POS\_Z 2-92 :KEY:CH4\_VOLT\_INC 2-93 :KEY:CH4\_VOLT\_DEC\_2-93 :KEY:CH4\_VLOT\_Z 2-93 :KEY:CH4\_POS\_INC 2-93 :KEY:CH4\_POS\_DEC 2-93 :KEY:CH4 POS Z 2-94 :KEY:TIME\_INC 2-94 :KEY:TIME\_DEC 2-94 :KEY:TIME Z 2-94 :KEY:TIME\_POS\_INC 2-95 :KEY:TIME POS DEC 2-95 :KEY:TIME\_POS\_Z\_2-95 :KEY:TRIG LEVEL INC 2-95 :KEY:TRIG\_LEVEL\_DEC 2-95 :KEY:TRIG\_LEVEL\_Z 2-96

#### М

:MASK:CREate 2-104 :MASK:ENABle 2-104 :MASK:X 2-104 :MASK:Y 2-105 :MASK:SOURce 2-105 :MASK:OVERate 2-106 :MASK:OUTPut 2-106 :MASK:STOPonoutput 2-106 :MASK:SAVE 2-107 :MASK:LOAD 2-107 :MASK:LOAD 2-107 :MASK:Upload 2-108 :MASK:MSG 2-108 :MATH:DISPlay 2-49 :MEASure:CLEar 2-58 :MEASure:VPP? 2-58 :MEASure:VMAX? 2-58 :MEASure:VMIN? 2-59 :MEASure:VAMPlitude? 2-59 :MEASure:VTOP? 2-59 :MEASure:VBASe? 2-60 :MEASure:VAVerage? 2-60 :MEASure:VRMS? 2-60 :MEASure:OVERshoot? 2-61 :MEASure:PREShoot? 2-61 :MEASure:FREQuency? 2-61 :MEASure:RISetime? 2-62 :MEASure:FALLtime? 2-62 :MEASure:PERiod? 2-62 :MEASure:PWIDth? 2-63 :MEASure:NWIDth? 2-63 :MEASure:PDUTycycle? 2-63 :MEASure:NDUTycycle? 2-64 :MEASure:PDELay? 2-64 :MEASure:NDELay? 2-64 :MEASure:PPHAse? 2-65 :MEASure:NPHAse? 2-65 :MEASure:TOTal 2-65 :MEASure:SOURce 2-66 :MEASure:DELAySOURce 2-66 :MEASure:PHAseSOURce 2-67 :MEASure:ENABle 2-67 :MEASure:DISable 2-67 :MEASure? 2-68

#### R

:RECall:WAVeform:STARt 2-101 :RECall:SETup:STARt 2-102 :RTC 2-118 :RUN 2-6

## S

:SAVERECALL:TYPE 2-98 :SAVERECALL:LOCation 2-98 :SAVERECALL:LOAD 2-98 :SAVERECALL:SAVE 2-99 :SAVe:IMAGe:STARt 2-99 :SAVe:IMAGe:FACTors 2-99 :SAVe:IMAGe:FORMat 2-100 :SAVe:WAVeform:STARt 2-100 :SAVe:SETup:STARt 2-101 :SAVe:CSV:STARt 2-101 :SINGLE 2-32 :STOP 2-6 :SYSTem:ERRor 2-6 :SYSTem:SETup 2-8

## Т

:TIMebase:MODE 2-22 :TIMebase[:MAIN]:OFFSet 2-22 :TIMebase:DELayed:OFFSet 2-23 :TIMebase[:MAIN]:SCALe 2-23 :TIMebase:DELayed:SCALe 2-24 :TIMebase:FORMat 2-25 :TRIGger:MODE 2-28 :TRIGger<mode>:SOURce 2-28 :TRIGger<mode>:LEVel 2-29 :TRIGger<mode>:SWEep 2-29 :TRIGger:SENSitivity 2-30 :TRIGger:COUPling 2-30 :TRIGger:HFREject 2-31 :TRIGger:HOLDoff 2-31 :TRIGger:STATus? 2-32 :Trig%50 2-32 :TRIGger:EDGE:SLOPe 2-34 :TRIGger:PULSe:MODE 2-35 :TRIGger:PULSe:WIDTh 2-35 :TRIGger:VIDEO:MODE 2-36 :TRIGger:VIDEO:POLarity 2-36

:TRIGger:VIDEO:STANdard 2-37 :TRIGger:VIDEO:LINE 2-37 :TRIGger:PATTern:PATTern 2-38 :TRIGger:ALTernation:SOURce 2-39 :TRIGger:ALTernation:CURRentSOURce 2-39 :TRIGger:ALTernation:TYPE 2-40 :TRIGger:ALTernation:TimeSCALe 2-40 :TRIGger:ALTernation:TimeOFFSet 2-41 :TRIGger:ALTernation:LEVel 2-41 :TRIGger:ALTernation:EDGE:SLOPe 2-42 :TRIGger:ALTernation:PULSe:MODE 2-42 :TRIGger:ALTernation:PULSe:TIME 2-43 :TRIGger:ALTernation:VIDEO:POLarity 2-43 :TRIGger:ALTernation:VIDEO:STANdard 2-44 :TRIGger:ALTernation:VIDEO:MODE 2-44 :TRIGger:ALTernation:VIDEO:LINE 2-45

:TRIGger:ALTernation:COUPling 2-45 :TRIGger:ALTernation:HFREject 2-46 :TRIGger:ALTernation:HOLDoff 2-46 :TRIGger:ALTernation:SENSitivity 2-47

#### W

- :WAVeform:FORMat 2-70 :WAVeform:DATA? 2-70 :WAVeform:POINts 2-71 :WAVeform:POINts:MODE 2-72 :WAVeform:SOURce 2-73 :WAVeform:PREamble? 2-73 :WAVeform:YINCrement? 2-74 :WAVeform:YORigin? 2-74 :WAVeform:XINCrement? 2-75
- :WAVeform:XREFerence? 2-75
- :WAVeform:YREFerence? 2-76



205 Westwood Ave Long Branch, NJ 07740 1-877-742-TEST (8378) Fax: (732) 222-7088 salesteam@Tequipment.NET