

WALLVIEW™ PRO EAGLEEYE® 1080 HD WITH HSDS™

Vaddio™ PRO Series Cable System with HSDS for the Polycom® EagleEye 1080 HD High Definition PTZ Camera

OVERVIEW

The Vaddio WallVIEW PRO EagleEye 1080 HD (Figure 1) is built for the Polycom EagleEye 1080 HD high definition PTZ Camera (camera not included). The WallVIEW PRO system uses high speed differential signaling (HSDS), an active transmission system that delivers low-loss, high definition video over CAT-5 cabling distances up to 500' (152.4m).

The WallVIEW PRO EagleEye 1080 HD sends 1080 HD video in a 16:9 format to the Polycom HDX 8006 codec via the HDCI breakout cable supplied with the 8006 codec. WallVIEW PRO will autoconfigure to either NTSC or PAL video standards.

The WallVIEW EagleEye 1080 HD system also has many new features including in-camera IR forwarding that allows the use of the Polycom IR remote, and eliminates the need for an external IR repeater. Other features include analog component video outputs (Y,Pb, Pr), four position distance adjustment for CAT-5 cabling, Y-Gain adjustment, 1-RU rack mount Quick-Connect™ PRO Universal System with HSDS, and the EZ Interface Module (EZIM) and a break out cable to interface between the EZIM and EagleEye 1080 HD camera. Like all Vaddio WallVIEW systems, the Thin Profile Wall Mount and mounting hardware is included.



Figure 1:
WallVIEW PRO EagleEye 1080 HD System with EagleEye 1080 HD camera (not included), Wall Mount and EZIM

INTENDED USE

Before installing the Vaddio WallVIEW PRO EagleEye 1080 HD Camera System, please read the entire manual thoroughly. All Vaddio camera systems are designed for use indoors. Outdoor operation is not recommended, has not been tested, and could damage the camera and/or create a potentially unsafe operating condition. Use only the Vaddio PowerRite power supply provided.

SAVE THESE INSTRUCTIONS

The information contained in this manual will help you install the Vaddio WallVIEW PRO systems. For reference, Vaddio keeps copies of Specifications, Installation and User Guides and most pertinent product drawings for the Vaddio product line on the website. These documents can be downloaded from www.vaddio.com free of charge.

IMPORTANT SAFEGUARDS

Read and understand all instructions before using. Do not operate the any electrical device if it has been dropped or damaged. In this case, a Vaddio technician must examine the product before operating. To reduce the risk of electric shock, do not immerse in water or other liquids and avoid extremely humid conditions.



Use only the power supply provided with the Vaddio WallVIEW PRO products. Use of any unauthorized power supply will void any and all warranties.

INFORMATION

Vaddio has prepared a number of TechNotes, specifications and drawings designed to inform and educate integrators on the value and the specific uses of Vaddio products.

UNPACKING

Carefully remove all of the parts from the packaging. Unpack and identify the following parts for the WallVIEW PRO EagleEye 1080 HD system. NOTE: The EagleEye 1080 HD camera is not supplied with this system:

- One (1) - Vaddio EZ Interface Module (EZIM)
- One (1) - Vaddio EZIM to EagleEye 1080 HD adapter cable
- One (1) - Vaddio Quick-Connect PRO (1-RU Rack Mountable)
- One (1) - Vaddio Thin Profile WallVIEW PRO HD1/EagleEye 1080 HD Wall Mount
- One (1) - DB-9 to RJ-45 adapter (998-1006-232) for Polycom HDX 8006 Codec
- One (1) - 36V PowerRite™ Power Supply with AC Cord Set
- One (1) - 2-position Phoenix Connector for IR
- Mounting Hardware
- Documentation and Manuals

INSTALLATION

All WallVIEW products are specifically designed for installation on a vertical wall surface with CAT-5 cable connectivity for Power, Video and Control signaling. Installation is simplified in that no custom cables or expensive multi-coax plenum cables are needed and no power outlets are required near the camera bracket. All cabling is routed to the head-end using CAT-5 cables. All RJ-45 connectors need to be terminated TIA/EIA 568B or A.

NOTE: The use of RJ-45 “EZ” connectors is not recommended.

Before Installing

- Locate the camera mounting location paying close attention to camera viewing angles, lighting conditions, possible line of site obstructions, and checking for in-wall obstructions. Pick a mounting location to optimize the performance of the camera.
- Pre-wire all cabling as required from the camera location to the head end equipment.
- The camera mount can be mounted directly to a 2-gang wall box or to drywall using the supplied anchors.

MOUNTING AND INSTALLATION INSTRUCTIONS

Step 1:

After determining the optimum location of the camera system, mark locations for the four screw holes and the vertical oval cable pass-thru (see Figure 4). Install the drywall mounts and cut the hole for the cable pass-thru. Next, pull the CAT-5 cables through the hole then install the Wall Mount. Confirm that the mount is level and tighten the wall mount screws.

Figure 2:
Thin Profile Wall Mount with oval cable feed-through hole. The wall mount may be attached directly to a 2-gang wall box or to drywall with the supplied wall anchors.



Wiring Diagram Example for HDX 8006® Codec:
 For the Polycom EagleEye 1080 HD Camera

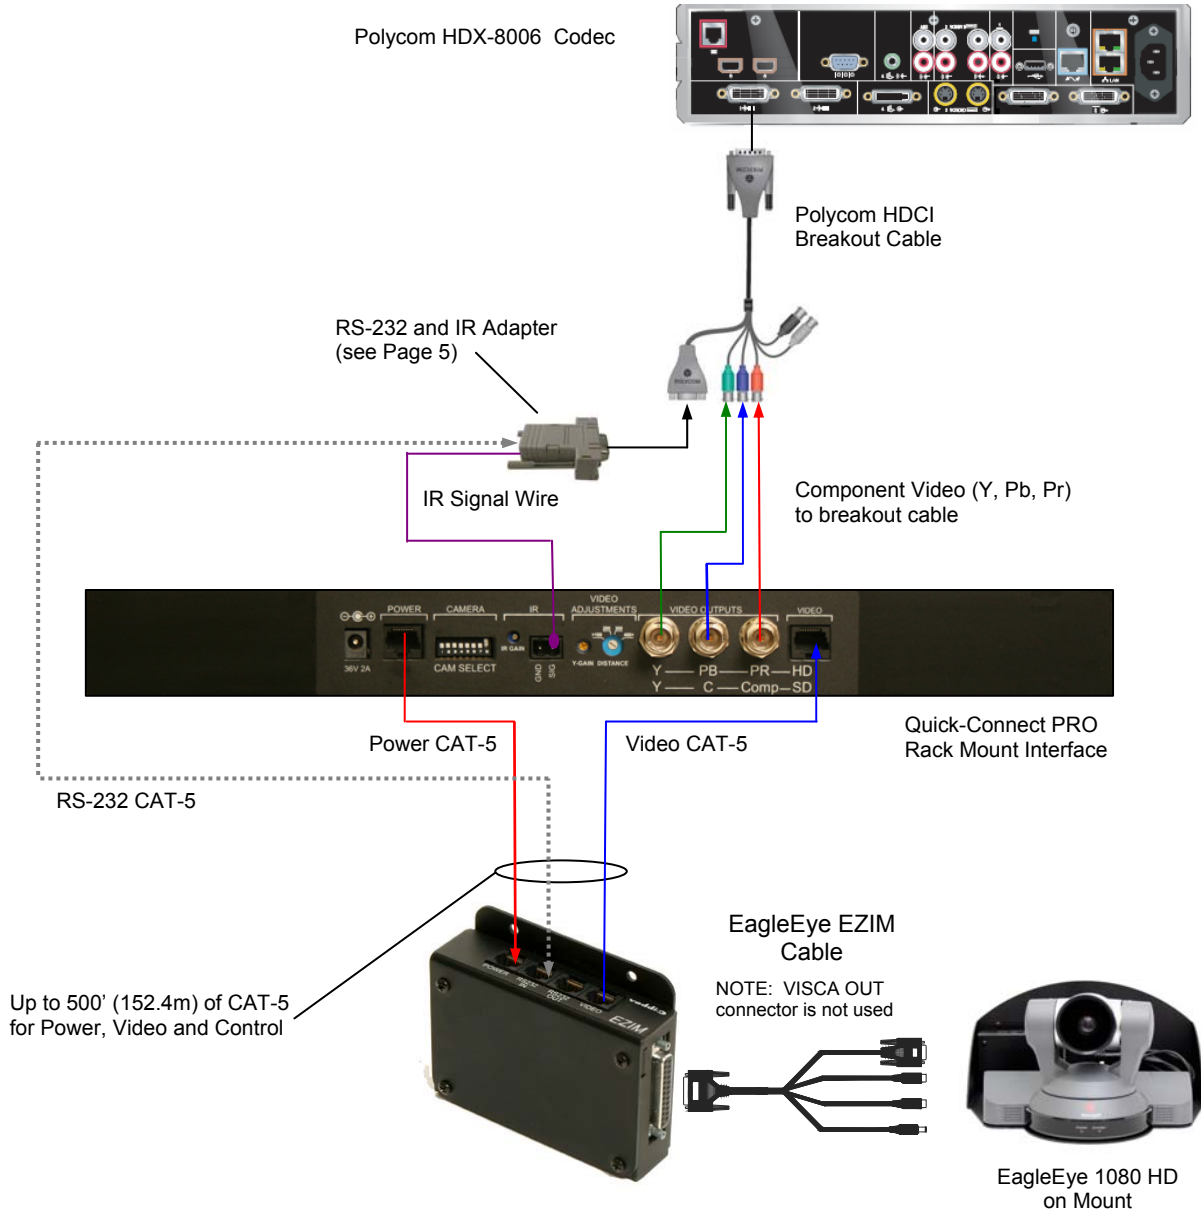


Figure 3: Basic connectivity of the WallVIEW Universal PRO EagleEye 1080 HD System with HDX 8006 series codec. The WallVIEW EagleEye 1080 HD connected to an HDX 8006 codec uses the RJ-45 to DB-9 adapter supplied, with the single wire on the adapter connected to the "SIG" pin on the IR Port of the Quick-Connect. IR is fed out of the Quick-Connect unit, through the RJ-45 to DB-9 adapter to the HDX 8006 codec for IR forwarding from the camera. The Power, Video and Control CAT-5 cables can be run up to 500 from the Quick-Connect box to the EZ Interface Module, which connects to the camera. See Step 7 for additional information on wiring the system for IR wiring.

Step 2:

Connect the 25-pin cable to the EZIM then, mount the EZIM and break out cable on the back of the mount, using the two tapped screw holes (see Figure 5). Connect the 15-pin video cable, power connector and VISCA IN connectors to the camera. NOTE: The VISCA OUT connector is unused with the EagleEye 1080 HD camera.

Figure 4:
25-pin to HD video adapter cable connected to EZIM (left); EZIM and adapter cable installed on the Wall Mount (right)



Step 3:

Align the 1/4"-20 tapped screw hole on the bottom of the EagleEye 1080 HD camera to the hole of the mount. Using the supplied screw, attach the camera to the mount.

Step 4:

Prior to connecting the CAT-5 cables, check them for proper continuity with a CAT-5 cable tester. Attach the CAT-5 cables for Power, Video and Control to the EZIM and feed the excess cabling into the wall opening or wall box. Note: Plugging the POWER CAT-5 Cable into the wrong RJ-45 may cause damage to the camera system and void the manufacturers' warranty.

Step 5:

Mount the Quick-Connect PRO interface into a rack at your equipment head end.


Step 6:

Attach the CAT-5 cables for Power, Video and Control to the Quick-Connect PRO rack mount interface. Connect the HD video outputs from the Quick-Connect PRO to the Polycom HDCI break out (see Figure 3). Connect the DB-9 to RJ-45 adapter to the Polycom break out cable, then connect the RS-232 control CAT-5 cable to the RJ-45 port on the adapter.

Step 7: For EagleEye 1080 HD IR Pass-Thru

Using the RJ-45 to DB-9 adapter (998-1006-232) supplied with the system, strip and terminate the single wire coming out of the back of the adapter, and connect it to the Phoenix-type connector supplied with the Quick-Connect PRO. The wire needs to be terminated to the "SIG" pin on the Quick-Connect PRO.

Figure 5: Required wiring configuration for IR Forwarding from the camera IR port to codec.
Note: There is no IR port on the front of the HDX 8006 codec. The IR receiver on the codec is imbedded in the EagleEye 1080 HD camera.
NOTE: Only the Camera 1 port on the HDX series codecs supports IR forwarding.

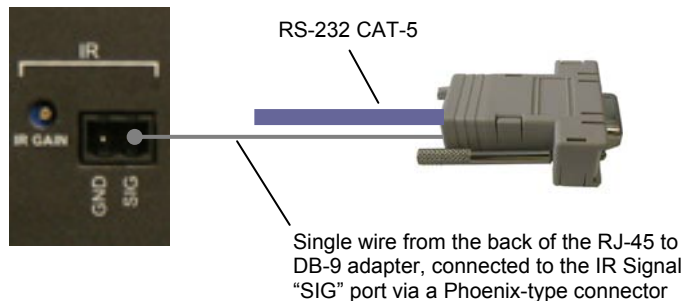


Step 8:

The Quick-Connect PRO Universal interface has an 8-position dip switch on the rear panel to allow the selection of IR Forwarding Mode for Polycom® codecs.

DIP Switch Example

Quick-Connect PRO Universal back panel



Description	Dip Switch (Up = ON) →							
	1	2	3	4	5	6	7	8
IR Forwarding through main camera for use with Polycom HDX-8006 Codec • Single wire from RJ-45 to DB-9 adapter connected to Signal (SIG) pin on Quick-Connect PRO	*	*	*	*	*	*	DN	*

Step 9:

Connect the Vaddio 36 VDC power supply to an AC outlet. Power will travel down the Power CAT-5 cable to the cable shoe, powering the camera. The camera will “Home” to a centered position ready for control information from the Polycom Remote or RS-232 Camera controller of the integrators’ choice. To insure proper continuity of control and operation of the cameras, the RS-232 controller (control system or joystick) should be powered on after the camera.

Step 10: Setting the IR Pass-Through Adjustment



NOTE: The IR Gain adjustment is factory set for distances below 300 feet (91.4 meters), and should not have to be adjusted unless the CAT-5 cabling distance is over this length. For cable runs above 300 feet, slowly adjust the gain level up while pressing functions on the remote control, pointed at the EagleEye 1080 HD camera using the WallVIEW PRO system. Once all remote control functions are operating from the remote, through the camera’s IR sensor, the IR gain is adjusted properly.

CARE AND CLEANING

- Do not attempt to take the products in these systems apart. There are no user-serviceable components.
- Keep these devices away from food and liquid, and do not spill liquids on the products
- For smears or smudges on the lens, wipe with a clean, soft cloth - see Polycom user guide for details. Do not use any abrasive chemicals on the camera body at any time.

OPERATING AND STORAGE CONDITIONS

Do not store or operate the WallVIEW PRO System under the following conditions:

- Temperatures above 40°C (104°F) or below 0°C (32°F), for Indoor Use Only
- High humidity, condensing or wet environments
- Dusty environments
- In inclement weather
- Under severe vibration


GENERAL SPECIFICATIONS

WallVIEW PRO EagleEye 1080 HD System	
System Part Numbers	999-9510-000 North America 999-9510-001 International
Quick-Connect PRO Universal Interface	
Connectors	Power Connector: 5.5mm OD x 2.5mm ID Power RJ-45: Supplies 36V to EZCamera Interface Module Regulator IR: 2-Pin Phoenix type spring cage connector Video Outputs: BNC Connectors for HD Analog Component (Y,PB,PR) Video RJ-45: Transports HD video from camera
Camera Select Switch	8-Position DIP switch loads camera profiles and IR Forwarding for Polycom HDX Codecs
Video Adjustments	Y-Gain (luminance gain) for fine tuning over longer cable distances Distance Compensation: 100', 200', 300', 400'+
IR Gain Adjustment	IR Gain for fine tuning IR over 300 feet
Max. CAT-5 Cable Distance	Up to 500' (152.4m) for Video Power and Control
Power Supply	36 VDC, 2.78 Amp
Dimensions	1-RU Rack Mount 1.75" H x 19" W x 6" D (4.5 cm x 48.2 cm x 15.2 cm)
EZCamera Interface Module	
Connectors	Four (4) RJ-45 Connectors One DB-25 for Power, Video, Control & IR
Cable Assembly	For Polycom EagleEye 1080 HD Camera: DB-25M to DB-15HD/8-Pin Mini Din x 2/EIAJ4 Power Connector * NOTE: The VISCA Out 8-Pin Mini Din is not used with the EagleEye 1080 HD
Power Regulator	Supplies 12VDC to Cameras
Dimensions	Approx. (3.035" H x 4.46" W x 1.242" D)

Appendix 1: Cable Pin-outs for the EZCamera Interface Module (EZIM)


Power Connector

Pin	Signal
1	Power +
2	Power -
3	Power +
4	Power -
5	Power +
6	Power -
7	Power +
8	Power -

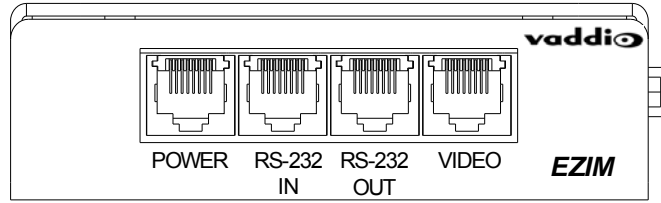


RS-232 IN Connector

Pin	Signal
1)	DTR (Sony® Daisy chain to DSR) - Unused
2)	DSR (Sony Daisy chain from DTR) - Unused
3)	Unused
4)	Unused
5)	Unused
6)	Digital GND
7)	RXD (from TXD of control source)
8)	TXD (to RXD of control source)

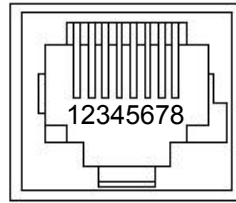


RS-232 OUT Connector (Not Used)

Pin	Signal
1)	Unused
2)	Unused
3)	Unused
4)	Unused
5)	Unused
6)	Unused
7)	Unused
8)	Unused

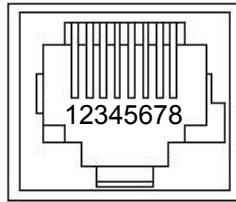


Video Connector

Pin	HD
1)	IR+
2)	IR GND
3)	Y+
4)	PB+
5)	PB-
6)	Y-
7)	PR+
8)	PR-

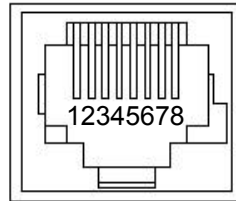


DB-25 Connector

Pins	Signal
1	GND Out
14	RXD Out
2	TXD Out
15	DTR Out
3	DSR Out
16	GND IN
4	TXD IN
17	RXD IN
5	DTR IN
18	DSR IN
6	IR
19	GND
7	GND
20	CVBS/PR
8	GND
21	C/PB
9	GND
22	Y/Y
10	GND
23	GND
11	GND
24	12V
12	12V
25	12V
13	12V

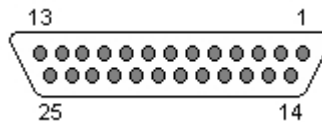

Quick-Connect Universal Pin-outs:

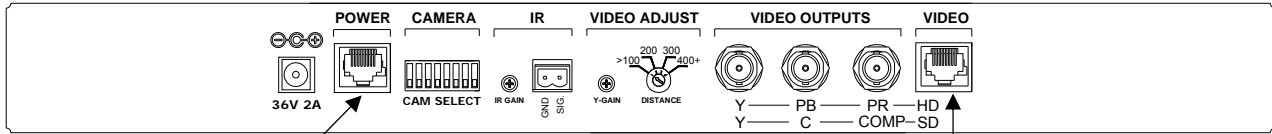

Power Connector


Pin	Signal
1	Power +
2	Power -
3	Power +
4	Power -
5	Power +
6	Power -
7	Power +
8	Power -

Video Connector

Pin	Signal
	HD
1)	IR+
2)	IR GND
3)	Y+
4)	PB+
5)	PB-
6)	Y-
7)	PR+
8)	PR-

Control Adapter Pin-outs (998-1004-232):

- 3' Wire at back of connector to (Polycom S1 Connector - Pin 9)
- Pin 6 - GND (Polycom S1 Connector - Pin 5)
- PIN 7 - RXD (from Polycom TXD - S1 Connector Pin 2)
- Pin 8 - TXD (to RXD of Polycom - S1 Connector Pin 3)

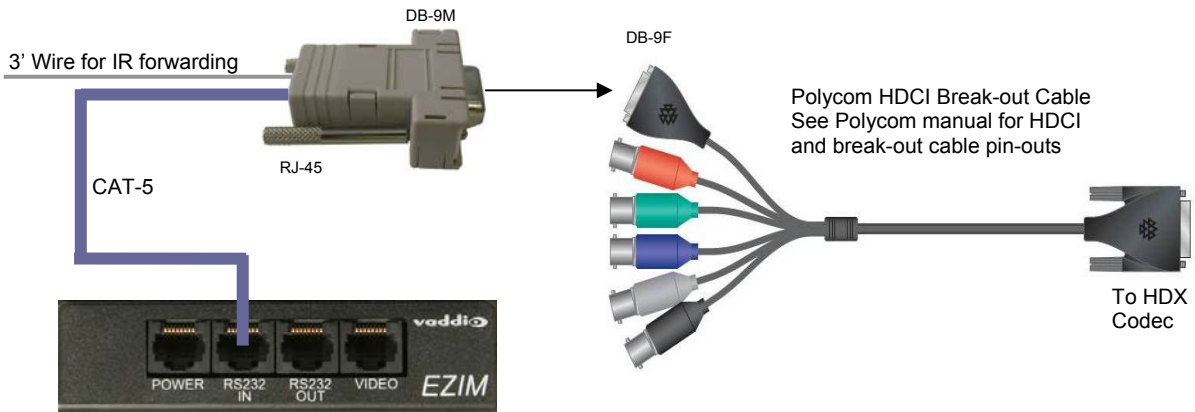

FCC, ICES-003 Compliance and CE Declaration of Conformity

For Vaddio Quick-Connect and EZIM products



FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the standards for Emissions and Immunity and meets the requirements for E4 environment. This product complies with Class A (E4 environment). In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:

EMC Directive 89/336/EEC

EN 55022A	Conducted and Radiated Emissions
EN 55024	Electromagnetic Compatibility - Immunity
EN 61000-4-2	Electrostatic Discharge Requirements
EN 61000-4-3	Radiated Electromagnetic Field Requirement
EN 61000-4-4	Electrical Fast Transients / Burst Requirements
EN 61000-4-5	Surge Requirements
EN 61000-4-6	Conducted Immunity Requirements
EN 61000-4-8	Power Frequency Magnetic Field Requirements
EN 61000-4-11	Voltage Dips, Interrupts and Fluctuations Requirements



WARRANTY INFORMATION

Hardware* Warranty - One year limited warranty on all parts. Vaddio warrants this product against defects in materials and workmanship for a period of one year from the day of purchase from Vaddio. If Vaddio receives notice of such defects during the warranty period, they will, at their option, repair or replace products that prove to be defective.

Exclusions - The above warranty shall not apply to defects resulting from: improper or inadequate maintenance by the customer, customer applied software or interfacing, unauthorized modifications or misuse, operation outside the normal environmental specifications for the product, use of the incorrect power supply, improper extension of the power supply cable or improper site operation and maintenance.

Vaddio Customer service – Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty and is found to be defective. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises.

Return Material Authorization (RMA) number - Before returning a product for repair or replacement, request an RMA from Vaddio's technical support. Provide a technician with a return phone number, e-mail address, shipping address, and product serial numbers and describe the reason for repairs or returns as well as the date of purchase and proof of purchase. Include your assigned RMA number in all correspondence with Vaddio. Write your assigned RMA number on the shipping label of the box when returning the product. Please see Vaddio's website for current RMA policies and procedures.

Voided warranty – The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, or unauthorized repair. Cutting the power supply cable on the secondary side (low voltage side) to extend the power to the device (camera or controller) voids the warranty for that device.

Shipping and handling - Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.

Products not under warranty - Payment arrangements are required before outbound shipment for all out of warranty products.

**Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.*

