

SENSIT® HXG-2d

Combustible Gas Detector

INSTRUCTION MANUAL

Read and understand Instructions before use.

PENDING

CE Ex II3G

Ex ic IIB T3

IP20

PENDING

(USA)

Class 1, Zone 2, AEx

nL IIB T3

PENDING

(Canada)

Class 1, Zone 2, AEx

nL IIB T3

⚠ Warning:

To reduce the risk of ignition of a flammable atmosphere, batteries must only be changed in an area known to be nonflammable.
SENSIT TECHNOLOGIE



SENSIT TECHNOLOGIES

851 Transport Road

Valparaiso, IN 46383

Phone: (219) 465-2700

Fax: (219) 465-2701

www.gasleaksensors.com



CONTENTS

Page #	1. Accessories and Parts
	2. General Description
	2. Specifications
	3. Product Features
	5. Sensor Type
	5. Battery Installation
	7. Operation and Use
	10. Calibration Check
	11. Calibration
	13. Adjustable Features
	14. Warranty and Repair Policy


ACCESSORIES AND PARTS


Standard Accessories	(included)
Soft Carrying Pouch	AJN02032
Torx Screwdriver	PM50206
Duracell #PC1400 Battery	P014015
Wrist Strap	PHXG0350
Varta #4914 Battery	P014015-VARTA
Instruction Manual	10108-0

Optional Accessories and Parts

Extension Adapter	ASG0150
Printer	AJN02021
Calibration Kit	C0159-2D
LEL Sensor	P017005
Sensor Cap	PJN0116

NOTICE

 **CAUTION:** This safety symbol is used to indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

 **WARNING:** This safety symbol is used to indicate a potentially hazardous situation which, if not avoided, may result in serious injury

GENERAL DESCRIPTION

The **Sensit® HXG-2d** is designed to detect combustible gases. This instrument incorporates an advanced low power semiconductor sensor to measure a wide variety of combustible gases in both the PPM and %LEL range. The PPM readings auto range to %LEL when the concentration exceeds 990PPM (2%LEL methane). Optionally all readings can be set to a resolution of 0.1 %LEL only (PPM off). An "on demand" backlight allows use in dark environments. A user activated "TICK" control assists in locating small gas leaks. Audible and visual alarms warn the operator of hazards. The alarms can be set in either the PPM or LEL modes. The default alarm is 10%LEL methane.

The **Sensit® HXG-2d** is designed to meet US and European intrinsic safety approvals as outlined in 60079-0 and 60079-11 when used with approved batteries.

The **Sensit® HXG-2d** can be operated using approved rechargeable or alkaline batteries.

WARNING: Never attempt to recharge alkaline batteries. Never mix batteries of different age or type.

SPECIFICATIONS


SENSOR SPECIFICATIONS

TYPE	RESOLUTION	RANGE	ACCURACY
PPM	10ppm	0-990ppm	±10%
LEL	0.1%	0-70%LEL	±10%

PRODUCT SPECIFICATIONS

Size:	10" x 3" x 1.6" (254 x 76 x 41 mm)
Weight:	1.2 lbs. (544g)
Operational Temp:	-20 to 40°C (-4 to 104° F)
Battery Life:	Alkaline: 50 hours continuous
NiCad:	20 hours continuous

PRODUCT FEATURES

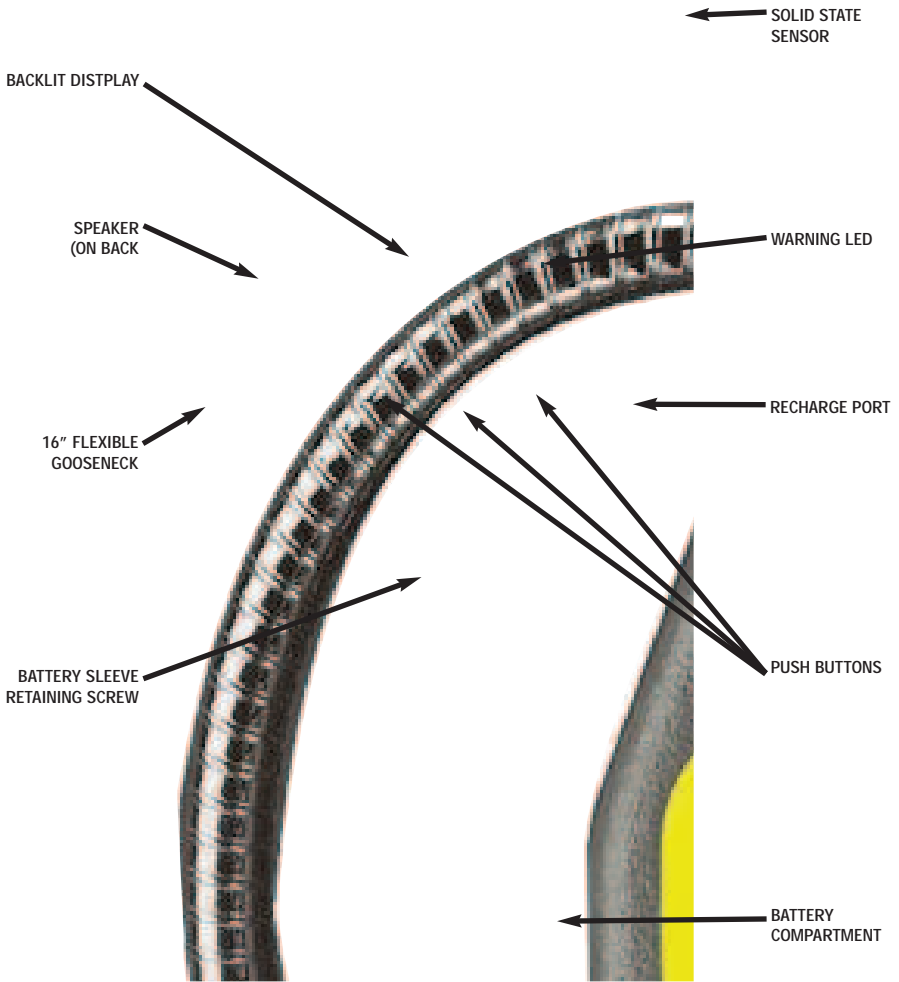

Sensit® HXG-2d instruments are constructed of durable high impact ABS to withstand the rigors of field use.

Incorporated in the hand grip area is the battery compartment. All **Sensit® HXG-2d** instruments require 3 approved alkaline or rechargeable batteries. *Duracell PC1400* batteries provide approximately 50 hours of continuous use. A push button located in the center of the instrument activates an audible tick sound that will help in locating the source of a gas leak. This tick is generated by using specialized circuitry in combination with the LEL sensor located at the end of the gooseneck assembly.

PRODUCT FEATURES *continued from page 3*

The tick can be easily heard with the speaker located in the back of the instrument.

A flexible gooseneck is used to assist in locating the source of gas leaks and remote sampling.

The display continuously updates the operator of changes in gas concentrations and alerts of low battery power. A green LED on the left side indicates the instrument is ready for use or the charging mode. A red LED indicates the preset alarm points have been exceeded.

There are 3 operational button pads on the front of all **Sensit® HXG-2d** instruments.

- **POWER/MUTE BUTTON (A):** Operate the POWER and MUTE feature and exit menu items.
- **TICK/CAL BUTTON (B):** Use to operate TICK or begin calibration.
- **LIGHT/ZERO BUTTON (C):** Use to turn on the backlight or manually zero the sensor.

Pressing any button will produce a ticking sound.

SENSOR TYPE

Combustible Gas Sensor

All Sensit® HXG-2d instruments incorporate a highly sensitive semiconductor type sensor. The function and accuracy of the sensor are monitored and controlled by specialized circuitry and a microprocessor. This sensor is capable of measuring concentrations of 1 Oppm of methane (natural) gas up to 70% LEL.

This sensor will detect many combustible gases.

BATTERY INSTALLATION/REPLACEMENT

⚠ WARNING: Always change batteries in an environment free of combustible gases.

⚠ WARNING: Do not mix batteries of different type or age.

Battery replacement is necessary when the BAT icon is illuminated and the green LED is flashing. This warning indicates there is approximately 15 minutes or less operational time before the instrument turns off automatically due to insufficient battery power.

Remove the battery sleeve cover by removing the battery sleeve screw with a T-8 screwdriver. Depress the locking tab on the front of the handle with a coin or flat object and pull the battery sleeve handle away from the top or display area of the instrument.

Place 3 approved batteries into the battery holder. Observe the polarity markings on the inside of the battery holder for proper

(Continued on page 6)

BATTERY INSTALLATION/REPLACEMENT *continued from pg 5*

battery installation. Improper installation will cause the instrument not to operate. Replace the battery sleeve and allow the locking tab to snap into position. Replace the battery sleeve retaining screw. Check to be sure the handle is secure to the instrument body by firmly pulling the handle away. The handle will remain in place if a proper connection is made.

BATTERY RECHARGING

⚠ WARNING: ALWAYS RECHARGE BATTERIES IN AN AREA KNOWN TO BE GAS FREE.

NOTE: instrument cannot be recharged when operating.

Insert the recharge adapter from the charger into the receptacle on the right side of the instrument.

Connect charger into 110/220vac or 12vdc electrical source.

1. Green LED illuminated indicates proper connection with charger.
2. Green and Red LED's are both illuminated during charging.
3. When only the Green LED is illuminated the batteries are fully charged.
4. No LED's illuminated indicate no connection with the charging circuit.

Complete charging will require 3-6 hours depending on age and condition of the batteries. Maximum ambient temperature for proper charging is 45°C (113°F).

OPERATION AND USE

⚠ CAUTION: Always start any Sensit® HXG-2d in a gas free environment to insure a proper zero.

1. Push and hold the power button (A) until the display and backlight illuminates.
2. If the display fails to illuminate or the **BAT** icon is shown on the display, replace or recharge the batteries.
3. During successful start-up the instrument will display:
 - a. Display all segments
 - b. Turn on and off the backlight
 - c. Display "S2d" as the model number
 - d. Display software version
 - e. Display "dIS" indicating display resolution of PPM / %LEL or both.
 - f. Display AL followed by the alarm set pOint.
 - g. Activate the alarm sound and red LED for 3 beeps
 - h. Continue to flash all segments until proper warm-up is attained (no more than five minuets)
 - i. Flash "Zro" indicating fresh air zeroing
 - j. Working display is shown

NOTE: A failure to properly zero due to the presence of gas is indicated by "**bAd**" + cal icon illuminated on the display. Pressing the ZERO (C) button for 6 seconds and releasing will restart the zeroing process.

NOTE: If a sensor is completely inoperable or improperly zeroed at start up, the display will show **bAd**.

(Continued on page 8)

OPERATION AND USE *continued from page 7*

4. All instruments read with a resolution of 10ppm up to 990ppm. The scale automatically switch to LEL when 990ppm is exceeded with a resolution of 0.1% LEL. Optionally all readings may be displayed in LEL only. Readings beyond 70% LEL are indicated by "OL" (overload).
 5. It may be necessary to manually zero the instrument based on company practices and environmental conditions.
- ⚠ CAUTION: Zeroing should be done in a gas free environment only.**
6. When testing high areas or overhead lines the use of the optional extension adapter will allow a broom handle or painters stick to extend the instrument to the area where sensing must be accomplished. This slides onto the battery sleeve and is held in place by the locking nut assembly.
 7. When a gas is sensed the display will update. If an alarm condition exists, based on a preset alarm point, the red LED will flash and the alarm will sound.
 8. During an alarm condition (factory default at 10% LEL methane) the display will flash and an audible alarm will sound indicating a potentially unsafe environment. To disable the audible alarm press and release the MUTE button (A). To enable the alarm press and release it again.

(Continued on page 9)

OPERATION AND USE *continued from page 8*

NOTE: These instruments have cross sensitivities to a variety of gases.

9. To assist in locating the source of small combustible gas leaks or surveying areas outdoors or indoors, press and release the TICK/CAL button (B). This will start an audible tick preset at 2-3 ticks per second.

Move the sensor toward the area suspected of leakage. As the sensor moves closer to a leak source the tick will increase. When the tick becomes a steady tone press the TICK/CAL button (8) again while keeping the sensor head in the same position. This will slow down the tick and allow the operator to find a higher concentration using the same procedure.

If there is no tick, press the TICK/CAL button (8) again to reset to the steady ticking sound. For best results always use the leak detector prior to using any liquid leak detection fluids as these sensors will detect their presence.

10. Following Country, Province, State, Municipal and/or Company procedures move to the areas where gas readings are suspected or must be tested. During sampling the respective readings may change. Audible and visual alarms will activate when the preset limits are reached.

11. When being used in dark areas press and release the LIGHT/ ZERO button (C) to turn on the back light. Press again to turn off.

(Continued on page 10)

OPERATION AND USE *continued from page 9*

12. To turn instrument off, push and hold the POWER/MUTE button (A) for 5-6 seconds until OFF appears on the display.

CALIBRATION CHECK

To verify the accuracy of any **Sensit® HXG-2d** it must be exposed to a known concentration of test gas. Any sensor that does not meet the specifications listed in this manual may require calibration or replacement.

Any time it is suspected the **Sensit® HXG-2d** is not working properly, has read "OL" or has been exposed to silicone, check calibration.

CALIBRATION

Calibration is the process of setting the readings of the instrument to equal the value of the certified calibration gas. The instrument should operate for 5 minutes before calibrating.

NOTE: Use of calibration kits other than those offered or approved by SENSITTECHNOLOGIES may cause inaccurate readings. Repairs may be required if the instrument fails to calibrate. Use only sensors supplied by SENSITTECHNOLOGIES or their authorized representative.

NOTE: During the calibration process the numbers on the display are not the actual gas concentration.

Step 1: Prepare 10%LEL methane gas sample with proper regulator and adapter.

Step 2: Press the TICK/CAL button (B) for 6 seconds until "GAS" is displayed.

Step 3: Attach the adapter to the sensor cap assembly.

Step 4: Press the TICK/CAL button (B) and the cal icon will flash and numbers will change on the display. Upon completion, the working display will appear with the gas reading.

A reading of "bAd" indicates unsuccessful calibration. Repeat

(Continued on page 12)

CALIBRATION *continued from page 11*

process if "bAd" appears. Press the POWER/MUTE button (A) to clear the "bAd" display reading and go to the working display.

Continued unsuccessful calibrations may indicate faulty sensor.

To replace sensor:

Step 1: Turn off instrument.

Step 2: Remove sensor cap.

Step 3: Remove sensor. Observe the location of the tab to the white dot beneath.

Step 4: Replace sensor. Be sure to align the sensor tab directly over the white dot.

Step 5: Replace sensor cap.

Step 6: Turn instrument on and wait for zero process to complete. "bAd" indicates improperly installed sensor.

Step 7: Wait 5 minutes and follow calibration procedure.

AOWUSTABLEFEATURES

MENU ITEMS	RANGE	DEFAULT
Alarm PPM	100-990	OFF
Alarm-LEL	2-60%	10%
Show PPM	10PPM resolution.	ON

The above settings are field adjustable. Consult Sensit Technologies or an authorized service center for instructions.

WARRANTY AND REPAIR POLICY

Your **SENSIT® HXG-2d** instrument is warranted to be free from defects in materials and workmanship for a period of two years after purchase (excluding sensor, calibration and batteries). If within the warranty period your instrument should become inoperative from such defects, the unit will be repaired or replaced at our option. This warranty covers normal use and does not cover damage which occurs in shipment or failure which results from alteration, tampering, accident, misuse, abuse, neglect, or improper maintenance. A purchase receipt or other proof of date of original purchase will be required before warranty performance will be rendered. Instruments out of warranty will be repaired for a service charge. Return the unit postpaid and insured to:

SENSIT TECHNOLOGIES

851 Transport Drive
Valparaiso, IN 46383

Phone: (219) 465-2700

Fax: (219)465-2701

www.gasleaksensors.com to contact us at
info@gasleaksensors.com

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

