

SHARP®

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

LCD MONITOR

Touch pen Management Tool OPERATION MANUAL

Version 3.0

Applicable models (as of August 2017)

PN-60TW3A/PN-70TW3A/PN-80TC3A/PN-L603B/PN-L603WA/PN-L703B/PN-L703WA/PN-L803CA
PN-ZL01A/PN-ZL02A/PN-ZL03A

(Available models differ according to region.)

Contents

Introduction	3
System Requirements	3
Setting up the computer	4
Install	4
Showing touch panel / touch pen information	5
Touch panel settings	6
Touch pen settings	7
Change the active pen settings.....	7
Registering(pairing)/unregistering an active pen.....	10
Uninstall	11

Important Information

- This software has been shipped after strict quality control and product inspection. If, however, you find any failure or malfunction, contact your product dealer.
- Please understand that SHARP CORPORATION bears no responsibility for errors made during use by the customer or a third party, nor for any other malfunctions or damage to this software arising during use, except where indemnity liability is recognized under law.
- Transcribing or duplicating part or all of this manual and/or this software without permission from our company is not permitted.
- As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice.
- The contents or details may vary depending on the screen configuration and OS version, etc.
- This manual does not contain basic operating instructions for Windows.

Trademarks

- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Intel, Celeron, and Intel Core are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the U.S.A. and other countries.
- All other brand and product names are trademarks or registered trademarks of their respective holders.

Introduction

This software can be used to configure settings for touch action when using a touch pen or touch action on a computer connected to the video input terminal of an applicable model.

To use a touch pen or touch action with a computer connected to applicable model, this software must be installed on the computer.

The touch pen (3 button pen) that is included with an applicable model is referred to as “active pen” in this manual.

System Requirements

OS	Windows 7 (32-bit or 64-bit version), Windows 8.1 (32-bit or 64-bit version), Windows 10 (32-bit or 64-bit version)
CPU	Intel Celeron B810E 1.6 GHz or faster Intel Core i7-3517UE 1.7 GHz or faster recommended
Memory	At least 2 GB
Free space on hard drive	At least 5 GB
USB port	USB (2.0 compliant)

TIPS

- Depending on the application software, active pen operation may not be possible (for example, if the application processes mouse and other operations independently).

Setting up the computer


Install

! Caution

- Insert the touch pen adapter into the LCD monitor before installing this software.
- If an older version of this software is installed, remove (uninstall) the old version before installing this software. (See page 11.)
- This can only be done by a user with administrator authority.

1. Start your computer.
2. Exit all applications that are running.
3. Connect the USB cable.

After it has been connected, the touch panel will be automatically recognized.

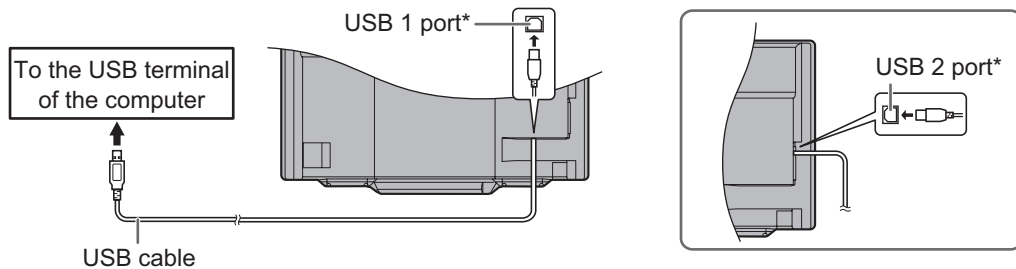

* The USB port varies depending on the terminal connected to the computer.

DisplayPort 1 input terminal/HDMI 1 input terminal	USB 1 port (for touch panel)
D-sub input terminal/DisplayPort 2 input terminal/HDMI 2 input terminal/HDMI 3 input terminal	USB 2 port (for touch panel)

(Factory setting. Can be changed in TOUCH INPUT SELECT in the SETUP menu.)

4. Insert the supplied CD-ROM into the CD-ROM drive of the computer.
5. Double-click the setup program.
¥TouchpenManagementTool¥Setup.exe
6. For the remainder of the procedure, follow the instructions shown on the screen.
 - When the “User Account Control” screen appears, click “Yes” (or “Allow”).
 - If the “Windows Security” screen appears, click “Install” (or “Install this driver software anyway”).
 - If the “Software Installation” screen appears, click “Continue Anyway”.

This completes the installation of this software.

Each time the computer is started, this software will start automatically to enable the active pen to be used.

TIPS

- When this software is launched, an icon appears on the taskbar.
The icons that appear on the taskbar vary depending on the status of the touch panel and touch pen adapter.


Icon	Touch panel status	Touch pen adapter status
	Not connected	Not connected
	Connected	Not connected
	Not connected	Connected
	Connected	Connected

Showing touch panel / touch pen information

This software starts automatically.

You can view information on the operation mode being set and active pen being used.

1. Click the Touch pen Management Tool icon () on the taskbar.

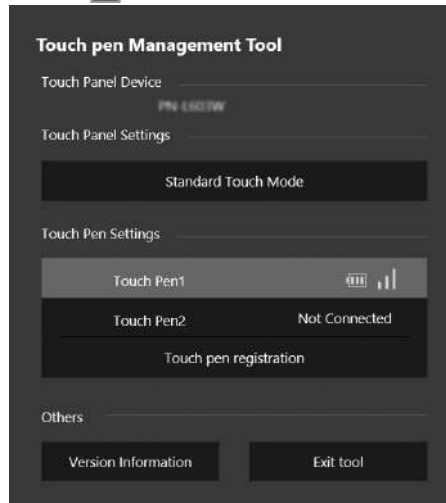

Touch Panel Device: Shows the connected monitor.

Touch Panel Settings: Shows the current touch operation mode. To change the touch operation mode, click this part. (See page 6.)

Touch Pen Settings: Shows information on registered active pens (registration number, connection status, signal strength, battery level).

You can click an active pen to change its settings. (See page 7.)

To register a new active pen, click "Touch pen registration". (See page 10.)

Version Information: Shows the model name and firmware information of the connected monitor, and version of this software.


Exit tool: Exit this software.

TIPS


- If an active pen is not used for 1 minute, it will enter sleep mode. When the active pen is used, it will automatically wake.
- When an active pen is in sleep mode, the battery level and signal strength will not be shown correctly. After the pen wakes, it will take time for the battery level and signal strength to be shown correctly.
- When an active pen is in sleep mode, the active pen settings cannot be configured.
- Do not continuously press the tip or function button of an active pen. It may not be possible to configure the active pen settings.

Touch panel settings

1. Click the Touch pen Management Tool icon () on the taskbar.
2. Click the place on the “Touch Panel Settings” that shows the operation mode.

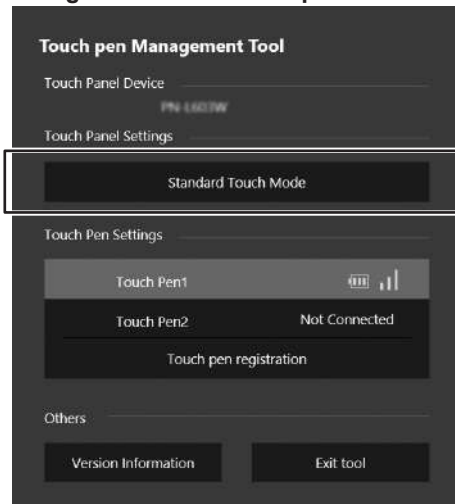

3. Click each menu and change the settings.

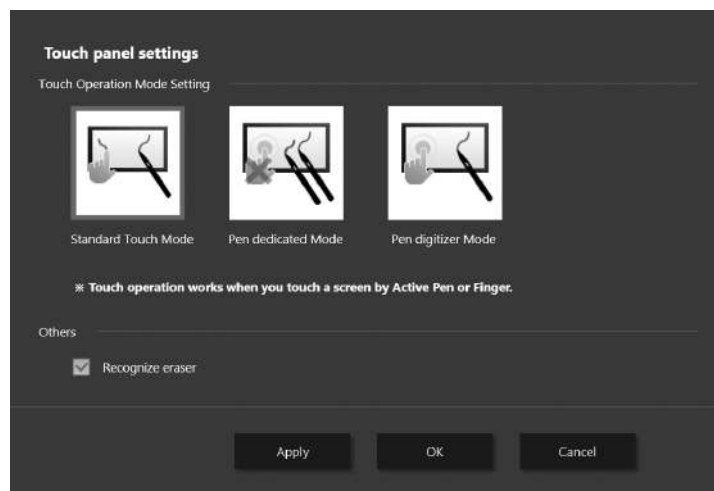

■Touch Operation Mode Setting

Select operation mode of the touch panel.

Standard Touch Mode: The touch action takes place when the screen is touched by active pen or finger.

Pen dedicated Mode: The touch action takes place only when the screen is touched by active pen. The touch action does not take place when the screen is touched by finger.

Pen digitizer Mode: You can use an active pen as a digitizer pen in Windows.

TIPS

- Set to “Standard Touch Mode” to use Simultaneous Drawing or Eraser in the Pen Software.

■Others


Recognize eraser

Select this checkbox to use the eraser.


Touch pen settings

Change the active pen settings


1. Click the Touch pen Management Tool icon () on the taskbar.
2. Click the active pen that you want to set in the touch pen list of the “Touch Pen Settings”.

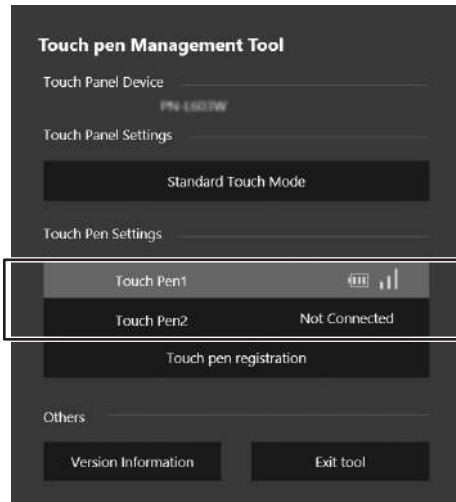

3. Click the tab of the item you want to set and change the settings.

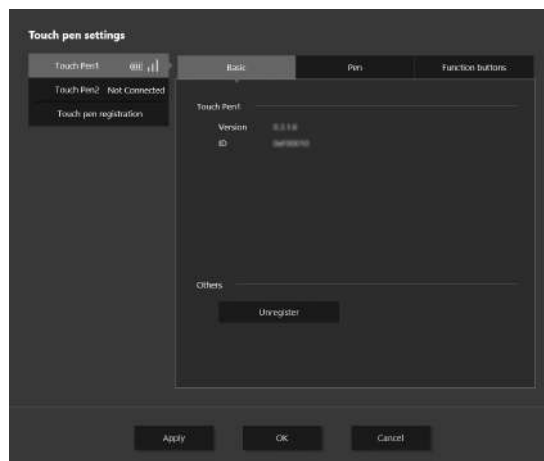

■ Basic

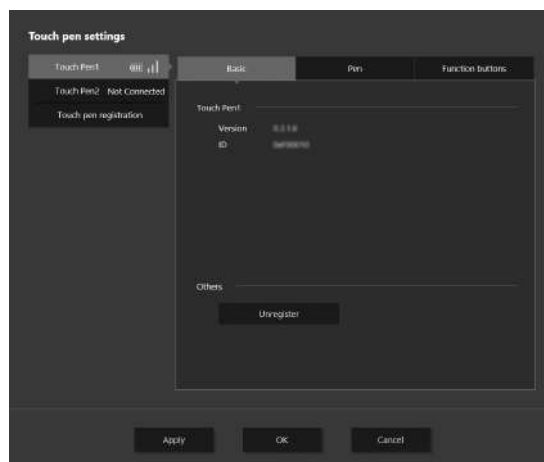


Showing information

Shows the firmware version and ID of the selected active pen.

Unregister

Release the registration (pairing) of the selected active pen.

■ Pen

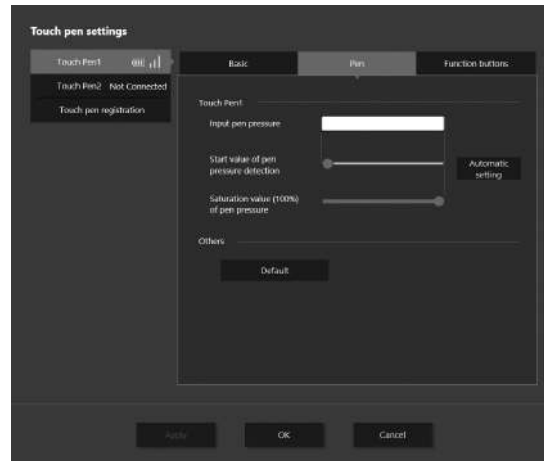

Input pen pressure

Shows the current amount of pen pressure.

Start value of pen pressure detection

Set how hard the active pen must be pressed to be recognized.

Saturation value (100%) of pen pressure

Set the amount of active pen pressure that is treated as the maximum pressure.

Automatic setting

Normally not used.

If pen pressure is detected when the pen tip is not being pressed, the pen pressure will be automatically adjusted.


Do not press the pen tip during automatic setting.

Default

Return the “Start value of pen pressure detection” and “Saturation value (100%) of pen pressure” to the factory default settings.

■Function buttons

Functions can be assigned to the function buttons 1 to 3 of an active pen.
After selecting a function button, select the function to be assigned to the button.

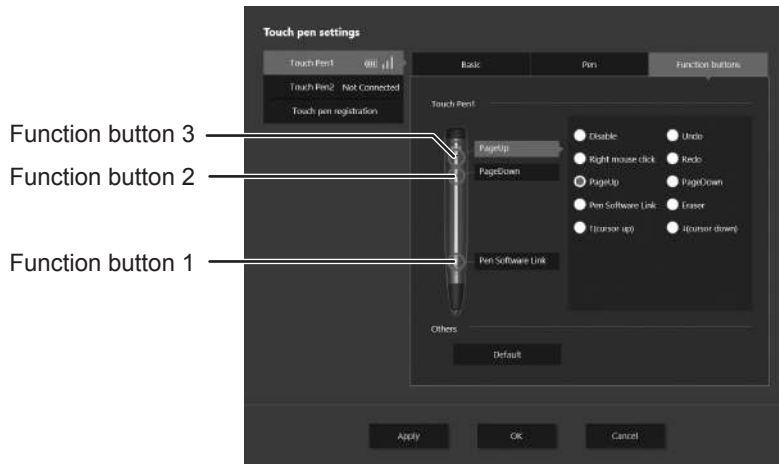

Functions that can be assigned to function buttons 1 to 3 are as follows.

Function type	Function
Windows	Disable, Right mouse click, Undo, Redo, PageUp, PageDown, ↑ (cursor up), ↓ (cursor down), Eraser*
Pen Software	Pen Software Link

* Can be used when the operation mode is “Pen digitizer Mode”. (See page 6.)
Can be used as the eraser for the digitizer pen in Windows.

To return the function buttons to the settings below, click “Default”.

Function button 1: Pen Software Link

Function button 2: PageDown

Function button 3: PageUp

Registering(pairing)/unregistering an active pen

Up to 4 active pens can be used simultaneously.

To use the optional active pen, you must register the active pen (pairing).


Up to 8 active pens can be registered.

You can also cancel the registration of an active pen.

■ Registering an active pen

Perform active pen pairing for one pen at a time.

1. Click the Touch pen Management Tool icon () on the taskbar.
2. Click “Touch pen registration” in the Touch pen settings screen.

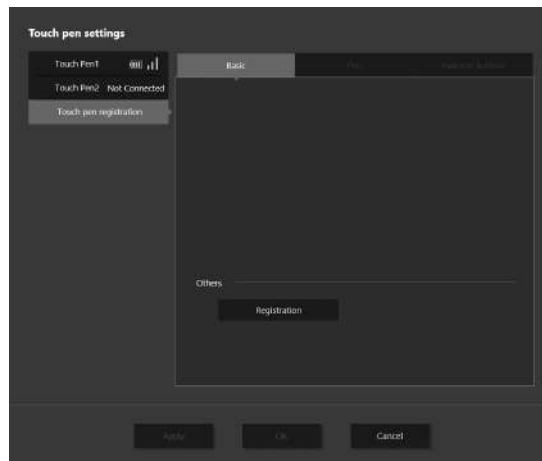

3. Click “Registration” in the “Touch pen settings” screen.
4. Simultaneously hold down function button 1 and function button 3 of the active pen being paired.
Continue pressing the buttons until pairing is completed.
A message appears after completion of pairing.
5. Click “OK”.

TIPS


- Pairing may not be possible if there is another touch pen adapter nearby.
In this event, turn off the power of the monitor that uses the nearby touch pen adapter.

■ Unregistering an active pen

1. Click the active pen you want to cancel in the touch pen list on the Touch pen settings screen.
2. Click “Unregister”.

Uninstall

! Caution

- This can only be done by a user with administrator authority.
- 1. Click the Touch pen Management Tool icon () on the taskbar and click “Exit”.**
 - If a confirmation window appears, click “Yes”.
 - 2. Select “Control Panel” from the “Start” menu.**
 - 3. Click “Uninstall a program”.**
 - If you are using icon view, click “Programs and Features”.
 - 4. Select “SHARP Touch pen Management Tool” and click “Uninstall”.**
 - Follow the on-screen instructions.
 - When the “User Account Control” screen appears, click “Yes” (or “Allow”).
 - 5. If a screen appears prompting you to restart your computer, restart your computer.**

This completes the uninstallation.

SHARP[®]
SHARP CORPORATION