

Complete Manual for the

RoboSHOT IW

Architectural PTZ Conferencing Camera

Document 411-0016-30 Rev A
July 2018

Contents

Overview	1
What's in this Guide	2
Features	2
Unpacking the Camera	3
Camera Only	3
Camera Systems with OneLINK HDMI	4
Camera System with OneLINK Bridge	5
A Quick Look at the Camera and Enclosure	6
Installing the Camera	7
Don't Void Your Warranty!	7
Cabling Notes	7
Selecting the Installation Area	8
Pre-Installation Functional Check	8
Basic Connections	9
RoboSHOT IW OneLINK Bridge System	9
RoboSHOT IW OneLINK HDMI System	9
RoboSHOT IW with Third-Party Connectivity Solution	9
Options for Power and Other Connections	10
Things You Will Need for the Installation	10
Installing the Power Source	10
Installing the Camera Enclosure	10
Before You Start	10
Installing the Camera Enclosure in an Unfinished Wall	11
Installing the Camera Enclosure in a Finished Wall	11
Installing the Camera	12
Installing the Interior Side Panels	12
Installing the Cover	12
Powering Up the Camera	13
Status Light	13
Using the IR Remote	14
IR Remote Cheat Sheet	14
IR Remote Details	15
Storing a Preset Using the Remote	15
Clearing a Preset Using the Remote	15
Web Interface	16
Getting the Camera's IP Address	16
Accessing the Web Interface	16
Browser Support	16
User Access	17
Administrative Access	17

Compact Menu View	18
Web Interface Cheat Sheet	19
System Administration	20
Configuring Network Settings	21
Specifying Time Zone and NTP Server	22
Managing Access and Passwords	23
Disabling Telnet Access	23
Enabling or Requiring HTTPS	24
Adding Room Information to the Web Interface	25
Saving (Exporting) or Restoring (Importing) a Configuration	26
Installing a Firmware Update	26
Rebooting the Camera	27
Contacting Vaddio Technical Support	27
Accessing the Diagnostic Logs	28
Configuring Camera Behavior	29
Configuring IP Streaming	29
Streaming Resolution, Quality, and Bandwidth	29
Streaming Protocol and URL	31
Adjusting the Focus	32
Lighting and Color Adjustments	33
Setting a Custom Home Position and Other Preset Shots	35
Setting the Speed for Manual Movements	36
Setting the Direction for Camera Movements	36
Software Switch Settings	37
Operating the Camera from the Web Interface	38
Switching the Camera Off or On (Standby)	38
Stop or Resume Sending Video (Mute)	38
Moving the Camera	39
Zooming In or Out	39
Moving the Camera to a Preset Position	39
Adjusting the Color and Lighting	39
Telnet Command Reference	40
camera home	41
camera pan	41
camera tilt	42
camera zoom	43
camera focus	44
camera preset	45
camera ccu get	46
camera ccu set	47
camera ccu scene	48

camera glass mode	48
camera glass state	49
camera resolution	50
camera led	51
camera standby	51
camera recalibrate	52
streaming settings get	52
network settings get	53
network ping	53
system reboot	54
system factory-reset	54
version	55
history	55
help	56
exit	56
RS-232 Serial Command Reference	57
Camera Movement, Zoom, and Focus Commands	57
Movement, Zoom, and Focus Inquiry Commands	59
Color and Light Management Commands	60
Shutter Speed Values (CAM_Shutter)	62
Iris Values (CAM_Iris)	63
Iris Gain and Gain Limit Values (CAM_Gain)	63
Color and Light Management Inquiry Commands	64
Other Commands	64
Other Inquiry Commands	65
Specifications	66
Troubleshooting and Care	67
Check the Status Light First	67
Identify the Issue	67
Restoring Factory Settings	68
Correcting a Motor Calibration Fault	69
Operation, Storage, and Care	69
Compliance Statements and Declarations of Conformity	70
FCC Part 15 Compliance	70
ICES-003 Compliance	70
European Compliance	71
Warranty Information	72
Photo Credits	73
Index	74

Overview

This guide describes installation and related information for the RoboSHOT® In-Wall architectural PTZ conferencing camera:

- RoboSHOT IW with smart glass, black – 999-9965-100 (North America); 999-9965-101 (Europe/UK)
- RoboSHOT IW with smart glass, primer coated – 999-9965-150 (North America); 999-9965-151 (Europe and UK)
- RoboSHOT IW OneLINK® HDMI System with smart glass, black – 999-9965-200 (North America); 999-9965-201 (Europe and UK)
- RoboSHOT IW OneLINK HDMI System with smart glass, primer coated – 999-9965-250 (North America); 999-9965-251 (Europe and UK)
- RoboSHOT IW OneLINK Bridge System with smart glass, black – 999-9965-300 (North America); 999-9965-301 (Europe and UK)
- RoboSHOT IW OneLINK Bridge System with smart glass, primer coated – 999-9965-350 (North America); 999-9965-351 (Europe and UK)
- RoboSHOT IW with safety glass, black – 999-9966-100 (North America); 999-9966-101 (Europe/UK)
- RoboSHOT IW with safety glass, primer coated – 999-9966-150 (North America); 999-9966-151 (Europe and UK)
- RoboSHOT IW OneLINK® HDMI System with safety glass, black – 999-9966-200 (North America); 999-9966-201 (Europe and UK)
- RoboSHOT IW OneLINK HDMI System with safety glass, primer coated – 999-9966-250 (North America); 999-9966-251 (Europe and UK)
- RoboSHOT IW OneLINK Bridge System with safety glass, black – 999-9966-300 (North America); 999-9966-301 (Europe and UK)
- RoboSHOT IW OneLINK Bridge System with safety glass, primer coated – 999-9966-350 (North America); 999-9966-351 (Europe and UK)



What's in this Guide

This guide covers:

- Unpacking
- The camera's physical features
- Installation
- Configuration and system administration
- Controlling the camera using the IR remote or web interface
- Telnet and RS-232 API references
- Specifications
- Troubleshooting
- Warranty and compliance/conformity information

For your convenience, the information you need to install this product is also available in the smaller, stand-alone **Installation Guide for RoboSHOT IW Architectural PTZ Conferencing Camera**, which covers unpacking, physical features, switch settings, installation, and initial power-up.

Download manuals, dimensional drawings, and other information from www.vaddio.com/support.

Features

- Attractive, ADA-compliant recessed design
- Fully enclosed with smart glass cover (frosted when the camera is not sending video) or tamper-resistant safety glass cover
- Exmor® 1/2.8 type, high-speed, low-noise image sensor for 2.38 megapixels total, full HD (native 1080p/60)
- 10x optical zoom with horizontal field of view from 67° (wide end) to 7.6° (tele end)
- Superior low-light performance (0.4 Lux)
- Web interface for remote administration and operation, integration-ready Telnet and serial RS-232 control, presenter-friendly IR remote control
- Use with a OneLINK device for power, video, and control:
 - OneLINK HDMI – uncompressed HDMI video, bidirectional RS-232 connectivity for camera control via third-party equipment, passes IP stream from the camera
 - OneLINK Bridge – OneLINK HDMI capabilities plus uncompressed USB 3.0 streaming, HD-SDI output, and audio routed up to the camera and injected into the IP stream

Unpacking the Camera

Make sure you receive all the items you expected.

Camera Only

RoboSHOT IW with Smart Glass

999-9965-100 – RoboSHOT IW with Smart Glass, Black, North America

999-9965-150 – RoboSHOT IW with Smart Glass, Primer Coated, North America

999-9965-101 – RoboSHOT IW with Smart Glass, Black, Europe/UK

999-9965-151 – RoboSHOT IW with Smart Glass, Primer Coated, Europe/UK

RoboSHOT IW with Clear Glass


999-9966-100 – RoboSHOT IW with Clear Glass, Black, North America

999-9966-150 – RoboSHOT IW with Clear Glass, Primer Coated, North America

999-9966-101 – RoboSHOT IW with Clear Glass, Black, Europe/UK

999-9966-151 – RoboSHOT IW with Clear Glass, Primer Coated, Europe/UK

- Camera
- Enclosure assembly, black or primed
 - Back box
 - Interior side plates, right and left
 - Side brackets, qty. 2
 - Drywall clips, qty. 4
 - Screws, 6-32, 1/4 in, qty. 12
 - Screws, 6-32, 3/8 in, qty. 6
 - Screws, 10-24, 1 in, qty. 4
- Front frame, black or primed, with smart glass (opaque) or clear glass
- PoE+ mid-span power injector with AC cord set(s)
- Vaddio IR Remote Commander
- Installation Guide 411-0016-31 for RoboSHOT IW

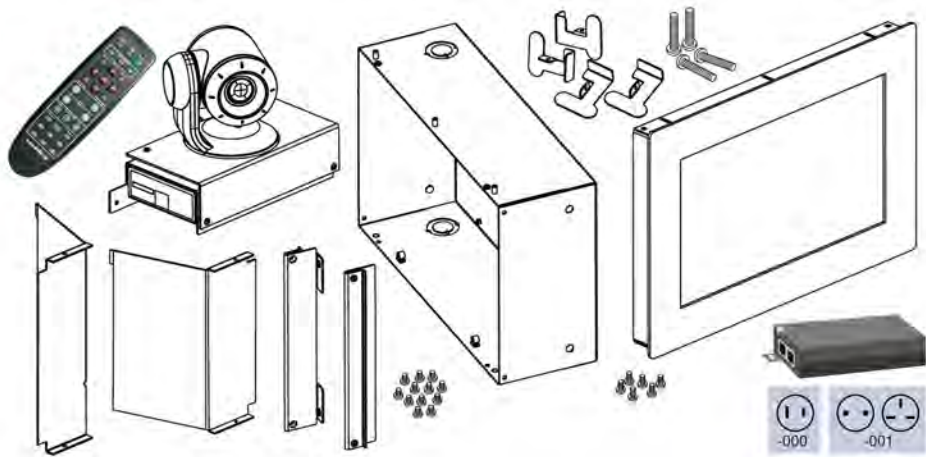

Camera Systems with OneLINK HDMI

RoboSHOT IW OneLINK HDMI System with Smart Glass

999-9965-200 – RoboSHOT IW OneLINK HDMI System with Smart Glass, Black, North America

999-9965-250 – RoboSHOT IW OneLINK HDMI System with Smart Glass, Primer Coated, North America

999-9965-201 – RoboSHOT IW OneLINK HDMI System with Smart Glass, Black, Europe/UK

999-9965-251 – RoboSHOT IW OneLINK HDMI System with Smart Glass, Primer Coated, Europe/UK

RoboSHOT IW OneLINK HDMI System with Clear Glass


999-9966-200 – RoboSHOT IW OneLINK HDMI System with Clear Glass, Black, North America

999-9966-250 – RoboSHOT IW OneLINK HDMI System with Clear Glass, Primer Coated, North America

999-9966-201 – RoboSHOT IW OneLINK HDMI System with Clear Glass, Black, Europe/UK

999-9966-251 – RoboSHOT IW OneLINK HDMI System with Clear Glass, Primer Coated, Europe/UK

- Camera
- Enclosure assembly, black or primed
 - Back box
 - Interior side plates, right and left
 - Side brackets, qty. 2
 - Drywall clips, qty. 4
 - Screws, 6-32, 1/4 in, qty. 12
 - Screws, 6-32, 3/8 in, qty. 6
 - Screws, 10-24, 1 in, qty. 4
- Front frame, black or primed, with smart glass (opaque) or clear glass
- Vaddio IR Remote Commander
- Installation Guide 411-0016-31 for RoboSHOT IW
- OneLINK HDMI receiver
- Power supply, 48 VDC/1.36 A, with AC cord set(s)
- EZCamera RS-232 control adapter
- Quick-Start Guide 411-0019-01 for OneLINK HDMI

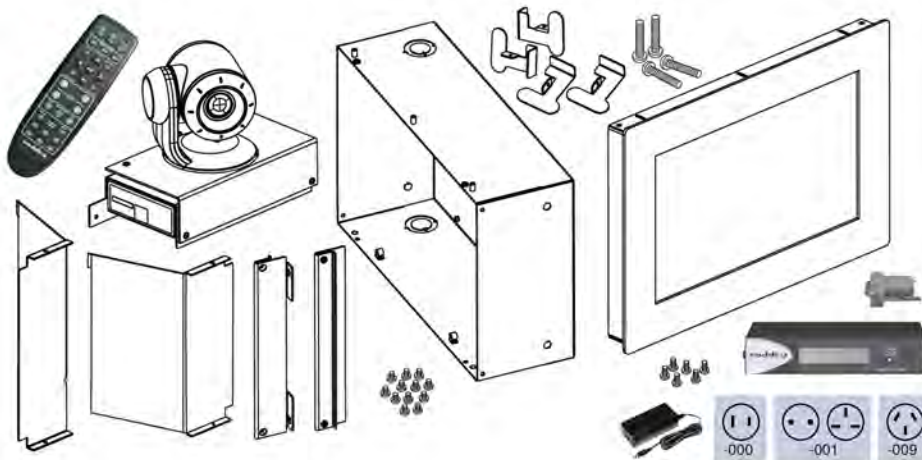

Camera System with OneLINK Bridge

RoboSHOT IW OneLINK Bridge System with Smart Glass

999-9965-300 – RoboSHOT IW OneLINK Bridge System with Smart Glass, Black, North America

999-9965-350 – RoboSHOT IW OneLINK Bridge System with Smart Glass, Primer Coated, North America

999-9965-301 – RoboSHOT IW OneLINK Bridge System with Smart Glass, Black, Europe/UK

999-9965-351 – RoboSHOT IW OneLINK Bridge System with Smart Glass, Primer Coated, Europe/UK

RoboSHOT IW OneLINK Bridge System with Clear Glass


999-9966-300 – RoboSHOT IW OneLINK Bridge System with Clear Glass, Black, North America

999-9966-350 – RoboSHOT IW OneLINK Bridge System with Clear Glass, Primer Coated, North America

999-9966-301 – RoboSHOT IW OneLINK Bridge System with Clear Glass, Black, Europe/UK

999-9966-351 – RoboSHOT IW OneLINK Bridge System with Clear Glass, Primer Coated, Europe/UK

- Camera
- Enclosure assembly, black or primed
 - Back box
 - Interior side plates, right and left
 - Side brackets, qty. 2
 - Drywall clips, qty. 4
 - Screws, 6-32, 1/4 in, qty. 12
 - Screws, 6-32, 3/8 in, qty. 6
 - Screws, 10-24, 1 in, qty. 4
- Front frame, black or primed, with smart glass (opaque) or clear glass
- Vaddio IR Remote Commander
- Installation Guide 411-0016-31 for RoboSHOT IW
- OneLINK Bridge AV interface
- Power supply, 48 VDC/1.36 A, with AC cord set(s)
- USB 3.0 A to B cable, 6 ft. (1.8 m)
- 3-position Phoenix connector plug, 3.5 mm, qty. 4
- EZCamera RS-232 control adapter
- Quick-Start Guide 411-0009-01 for OneLINK Bridge

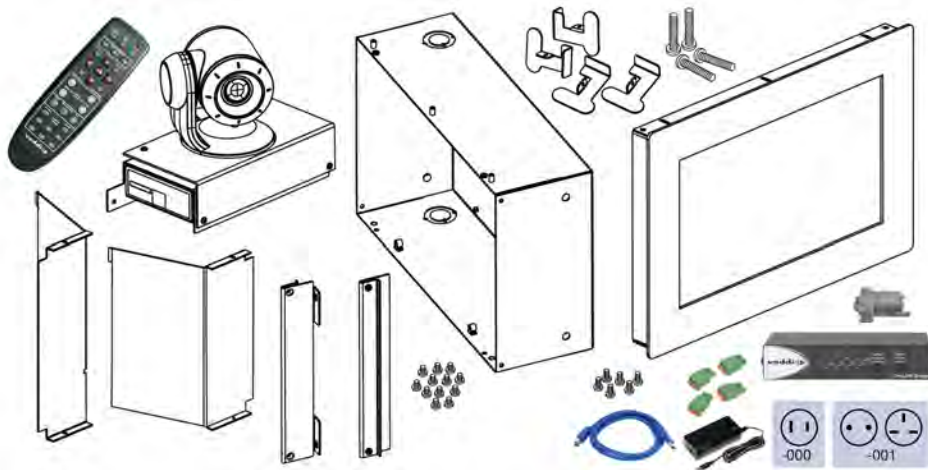

A Quick Look at the Camera and Enclosure



Camera and Lens – The 10x optical zoom lens and Exmor® 1/2.8 type, high-speed, low-noise image sensor deliver crisp full-HD video.

Frame – Metal frame and glass window.

Interior side panels – No wiring is visible when the camera is installed.

Camera platform – Houses the electronics.

IR window – A sensor in the front of the camera platform receives signals from the remote. Make sure there's nothing directly in front of the camera platform, and point the remote at the camera.

Status indicator – The multicolored LED indicates the camera's current state.

- **Blue:** Normal operation (blinks once when the camera receives a command from the remote)
- **Red:** On-air tally
- **Blinking blue or blinking red:** Video is muted
- **Purple:** In standby mode or booting
- **Yellow:** Firmware update in progress
- **Blinking yellow:** Motor calibration fault

Note

By default, the camera's status light is active during normal operation; however, it can be configured to remain off when the camera is powered up. The camera may be sending video even if the indicator light is off.

If the camera has a smart-glass cover, the cover is frosted when the camera is in standby mode (not sending video). The glass remains clear when video is muted; however, if enabled, the status light blinks.

Installing the Camera

This section covers:

- Selecting the location for the camera
- Installing the enclosure
- Connecting the camera
- Completing the installation

Don't Void Your Warranty!

Caution

This product is for indoor use. Do not install it outdoors or in a humid environment without the appropriate protective enclosure. Do not allow it to come into contact with any liquid.

Do not install or operate this product if it has been dropped, damaged, or exposed to liquids. If any of these things happen, return it to Vaddio for safety and functional testing.

Use the power injector or camera extension device included with or recommended for use with this product.

Cabling Notes

Use Cat-5e or better cable and standard RJ-45 connectors (568B termination). We recommend using high-quality connectors and a high-quality crimping tool.

Shielded cabling is recommended if the cables will be coiled, bundled or run tightly with other cables, or placed close to power lines or other sources of electromagnetic interference.

Caution

Do not use pass-through RJ-45 connectors. If crimped incorrectly, these can damage the connectors on the product, cause intermittent connections, and degrade signal quality. Physical damage to the connectors may void your warranty.



Intact – will make reliable contact with cable connector



Damaged – Bent contact fingers will NOT make reliable contact with cable connector

Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.



Pro Tip

To prevent tragic mishaps, label both ends of every cable.

Selecting the Installation Area

Install the camera in a location that meets the following requirements.

Note

Work must conform to local building codes and should be performed by qualified personnel.

Environment: This product is designed for indoor use only.

Structural requirements:

- The enclosure is designed to be mounted into a wood or steel stud wall 16 in. (40.6 cm) on center, or to a drywall surface at least 0.5 in (1.27 cm) thick.
- If the wall studs are on greater than 16 in. centers, you will need to mount to drywall on at least two corners.

Safety: Ensure that no obstructions of any kind are present in the area that the camera enclosure will be set into.

Warning

Before cutting the opening for the camera enclosure, ensure that no wiring and no pipes are present in or immediately adjacent to the area that the camera enclosure will be set into.

Cutting or drilling into electrical wiring can cause electrical shock or fire, resulting in death, injury, and damage to the building.

Cutting or drilling into gas pipes can cause explosion or fire, resulting in death, injury, and damage to the building.

Cutting or drilling into water or wastewater lines can result in injury and damage to the building.

Performance:

- Choose a camera mounting location that will optimize camera performance. Consider camera viewing angles, lighting conditions, and line-of-sight obstructions where the camera is to be mounted.
- If the remote control will be used, ensure that nothing blocks the IR lens in the camera enclosure.


Pre-Installation Functional Check

Before you install the camera, verify that it powers up and sends video. Referring to the basic connection diagrams, connect the camera and verify that video is available on the connected display.

When you have verified that the camera operates properly, disconnect it and continue with the installation.

Basic Connections


Connecting the camera is simple – just connect the cable to the OneLINK device or to the Power + Data connector of the mid-span power injector. The following diagrams show basic connections to other components of the room system.

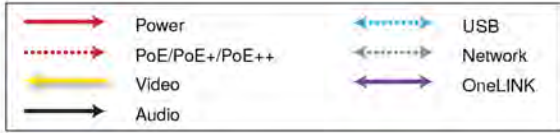


RoboSHOT IW OneLINK Bridge System



RoboSHOT IW OneLINK HDMI System

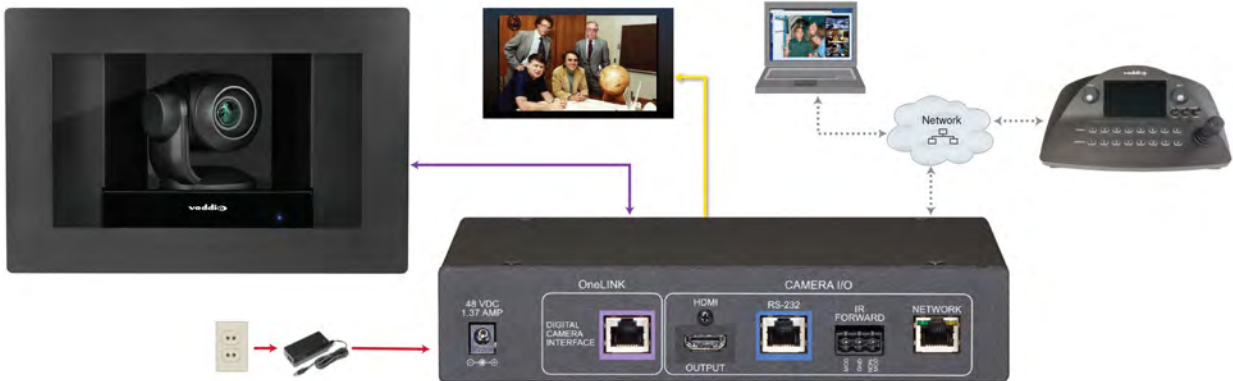

RoboSHOT IW with Third-Party Connectivity Solution

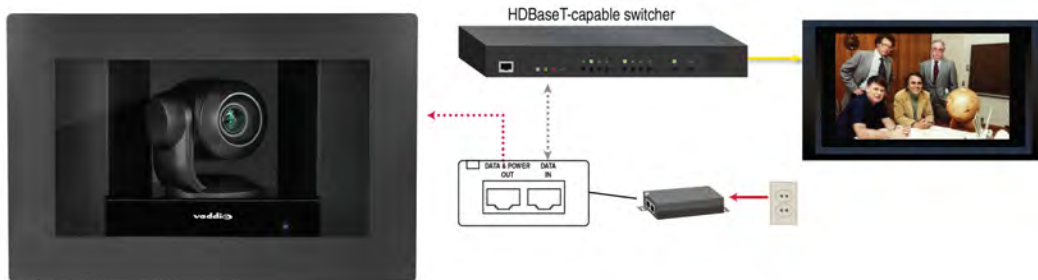

Options for Power and Other Connections

Connect the camera to a OneLINK HDMI or a OneLINK Bridge AV Interface – a single Cat-5e (or better) cable provides power to the camera, along with HDBaseT network and video connectivity. Network, video output, and RS-232 control are connected at the OneLINK device. The OneLINK Bridge also provides audio connections.

Use a PoE+ power injector – Connect to a third-party control device through a PoE+ power injector.

Things You Will Need for the Installation

Before you start, be sure you have what you need:

- Access to the area above the ceiling
- Plumb line
- Pencil
- Appropriate tools for cutting a hole in the ceiling
- #2 Phillips screwdriver
- Conduit box, if required

Installing the Power Source

You can connect the camera to the IP network using a mid-span power injector, or you can connect it to a OneLINK device. If you use a OneLINK device, it may be installed up to 328 ft (100 m) from the camera.

1. Install the power injector or OneLINK device before installing the camera enclosure.
2. Route the camera cable from the power injector or OneLINK device to the camera enclosure location.


Installing the Camera Enclosure

The RoboSHOT IW camera may be installed either in an unfinished wall, before the drywall is in place, or in a finished wall. In either situation, the installation is in three steps:

- Install the enclosure using the appropriate procedure.
- Install the camera in the enclosure.
- Install the cover.

Before You Start

Consider which direction the camera cable needs to enter the enclosure, and remove the knock-out tab from either the upper or lower face of the enclosure.

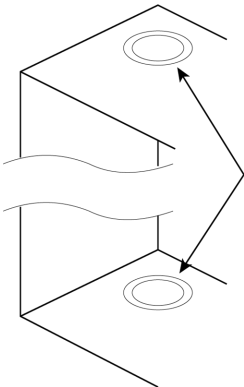

Installing the Camera Enclosure in an Unfinished Wall

Follow these steps if the drywall has not yet been installed.

1. Measure, mark, and level the mounting position between two studs.
2. Holding the enclosure in place against the wall studs, mark the locations for the holes.
3. Set the camera enclosure aside and drill the holes.
4. Fasten the camera enclosure to the wall studs.
5. Route the camera cable into the enclosure.

Installing the Camera Enclosure in a Finished Wall

Follow these steps if the drywall is in place.

Warning

Before cutting the opening for the camera enclosure, ensure that no wiring and no pipes are present in or immediately adjacent to the area that the camera enclosure will be set into.

Cutting or drilling into electrical wiring can cause electrical shock or fire, resulting in death, injury, and damage to the building.

Cutting or drilling into gas pipes can cause explosion or fire, resulting in death, injury, and damage to the building.


Cutting or drilling into water or wastewater lines can result in injury and damage to the building.

1. Verify that no pipes or wiring pass through or immediately adjacent to the part of the wall where the camera enclosure will be mounted.
2. Level, measure, and mark the cutting lines for the opening.
3. Cut the opening.
4. Slide the drywall clips into the corners of the enclosure.

Note

Although the drywall clips are not visually symmetrical, they can be installed with either curved surface facing forward, depending on the corner in which they are placed.


5. Install the side brackets using 1/4 in. 6-32 screws.
6. Route the camera cable into the enclosure.
7. Slide the enclosure into place.
8. Use the 10-32 screws to attach the drywall clips to the side brackets. The clips tilt outward and engage the drywall as you tighten the screws.

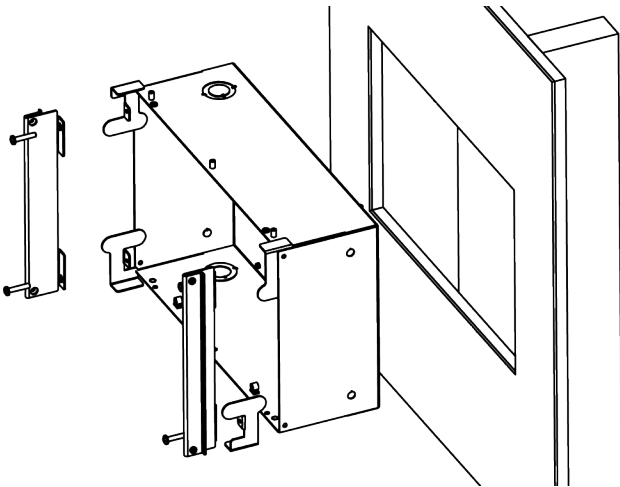

Installing the Camera

Do this only after verifying that the camera powers up properly. See [Pre-Installation Functional Check](#) for details.

1. Place the camera assembly in the enclosure, with the face in front of the tabs. If the enclosure has a smart glass cover, ensure that the cable for the cover panel is accessible.
2. Attach the camera to the tabs using four 1/4 in. 6-32 screws.
3. Connect the camera cable.

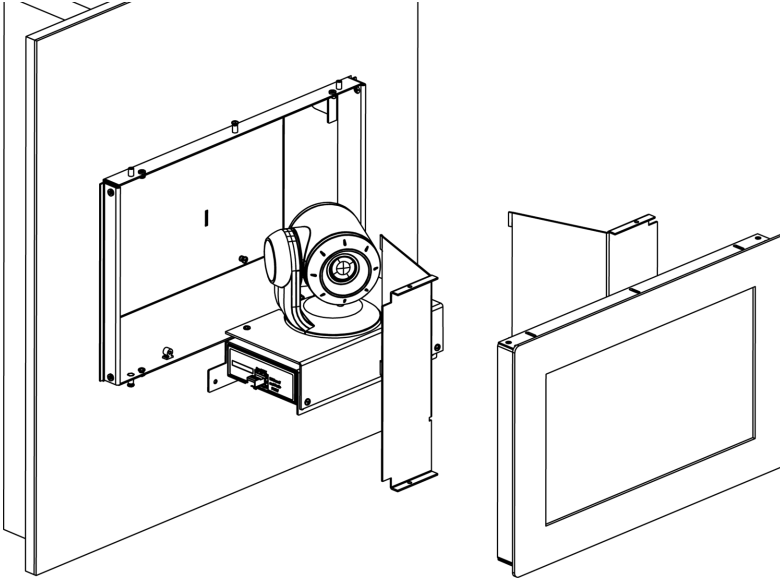

Installing the Interior Side Panels

The two interior side panels are not interchangeable. The right side panel has a cut-out for the smart glass cable.

To install each interior side panel:

1. Insert the tabs into the slots in the back of the enclosure.
2. Rotate the interior side panel into place. If the enclosure has a smart glass cover, ensure that the smart glass cable passes freely through the opening in the right side panel.
3. Secure the side panel with 1/4 in. 6-32 screws.

Installing the Cover

Do this only after verifying that the camera powers up properly. See [Pre-Installation Functional Check](#) for details.

1. If the enclosure has a smart glass front frame, connect its cable.
2. Position the front frame over the front of the enclosure, being sure that the cable (if used) is not pinched.
3. Attach the cover using 3/8 in. 6-32 screws.

Powering Up the Camera

Connect camera power.

The camera will wake up and initialize. This will take a few seconds. When the camera is initialized and ready, its status light is blue. At this point, it is ready to accept control information.

Note

Wait until the camera finishes initializing before trying to operate or control it.

Status Light

The light in the camera's base indicates its current state.

- **Blue:** Normal operation (blinks once when the camera receives a command from the remote)
- **Red:** On-air tally
- **Blinking blue or blinking red:** Video is muted
- **Purple:** In standby mode or booting
- **Yellow:** Firmware update in progress

Caution

Do not remove power or reset the camera while the indicator is yellow, showing a firmware update in progress. Interrupting a firmware update can make the camera unusable.

Note

The camera may be configured to power on and send video while the status light remains off.

Using the IR Remote

The IR remote provides basic camera control for end users.

IR Remote Cheat Sheet

What do you need to do?	Button(s)
Power on or standby	Power (green button at top right)
Select the camera to control (if this remote controls more than one)	Camera Select buttons 1 through 3 (second row of buttons)
Discover the camera's IP address	Data Screen button (top left) – press and hold for 3 seconds.
Move the camera	Arrow buttons and Home button (dark red)
Move the camera to a preset position	Position Preset buttons 1 through 6 (bottom two rows)
Focus the camera	Auto Focus button (near arrow buttons) Manual Focus buttons Near and Far (below Zoom Speed buttons)
Control zoom speed	Zoom Speed buttons - Slow T and W , Fast T and W for telephoto and wide-angle modes (light gray)
Adjust for excess light behind the camera's subject	Back Light button (top center)
Correct a motor calibration fault condition (blinking yellow light)	Pan-Tilt Reset button (center right, beside arrow buttons)

IR Remote Details

The Vaddio remote provides the following functions:

Power – Switch the selected camera on or off.

Power indicator – Lights momentarily when you press a button.

Back Light – Use or turn off Back Light Compensation.

Data Screen – Display the camera's IP address and MAC address. Press this button again to dismiss the display.

Camera Select – In multi-camera installations, selects the camera to be controlled. See [Camera Settings](#) for information on configuring the camera as camera 1, 2, or 3.

Pan/Tilt (arrow button) controls and Home button – Control the camera's position.

Rev. Pan and Std. Pan – Control how the camera responds to the arrow buttons. Helpful for ceiling-mounted cameras and for presenters who are controlling the camera.

Pan/Tilt Reset – Recalibrate the pan and tilt motors. If the camera gets jostled, you may need to push this button to ensure that the camera moves accurately to its home and preset positions.

Auto Focus – Switch the camera to Auto-Focus mode.

Zoom Speed – Select Slow or Fast movements for telephoto and wide-angle shots.

- **T** (slow and fast) – Telephoto
- **W** (slow and fast) – Wide-angle

Manual Focus – Switch the camera to Manual Focus mode.

Near (-) adjustment – Moves the focus nearer when in manual focus mode.

Far (+) adjustment – Moves the focus farther when in manual focus mode.

Preset – Save the camera's current position as one of the numbered presets.

Reset – Clear a saved preset.

Position Presets 1 through 6 – Move the camera to a predefined position, or specify the preset to save or clear.

The web interface offers greater control over camera movements to presets, and provides additional presets.

Storing a Preset Using the Remote

Position the camera. Then hold down the Preset button and press one of the numbered preset buttons.

Clearing a Preset Using the Remote

Press and hold the Reset button while pressing the preset number you want to clear.



Web Interface

The camera's web interface allows control via a network connection, using a browser. Password-protected pages provide administrative access to tasks such as setting passwords, changing the IP address, viewing diagnostics, and installing firmware updates. The user login (or guest access, if it is enabled) provides access to camera controls similar to those available from the IR remote.

You will need to know the camera's IP address to use the web interface. If the LAN has a DHCP server, the camera will get its IP address, gateway and routing information automatically and you will be able to browse to it. If not, you will need to configure the camera to use a static IP address.

Getting the Camera's IP Address

You will need to be able to view the camera's video output on an HDMI display.

1. Press the Data Screen button on the remote. The HDMI display presents the camera's IP address and MAC address.
2. Press the Data Screen button again to dismiss the information.

If the address is 169.254.1.1, the camera is using its default IP address and you will need to configure it for your network. You can configure the camera's static IP address either through the network or from a computer connected directly to its Ethernet port. You may need a crossover cable.

Note

For static addressing, work with your IT department to determine the correct IP address, subnet mask, and gateway information.

Accessing the Web Interface

Enter the IP address or hostname in your browser's address bar. If you use the hostname, you may need to enter `http://` or `https://` as a prefix to keep the browser from treating it as a search query.

(Example: `http://10.30.200.125`)

Browser Support


We have tested this product with these web browsers:

- Chrome®
- Microsoft® Internet Explorer®
- Safari®
- Firefox®

We test using the browser version available from the vendor at that time. Older versions of these browsers are likely to work, and other browsers may also work.

User Access

By default, the web interface opens to the Controls page without requiring a login; but if the administrator has changed the guest access setting, you will need to log in. The default user password is **password**. Only the Controls page is available with user-level access.

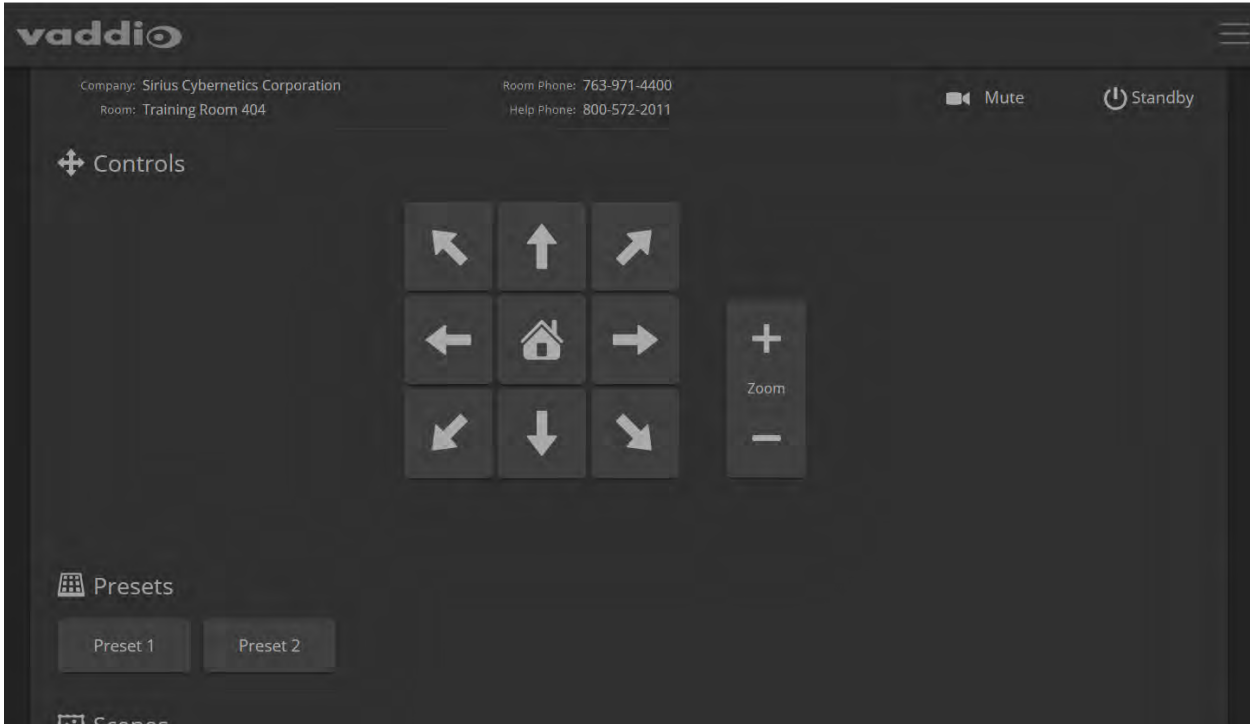


Your camera's Controls page may look somewhat different.

Administrative Access

If you are on the Controls screen, you're logged in at the user level, or guest access is enabled and you're not logged on at all.

Your camera's web interface may look somewhat different from this image.

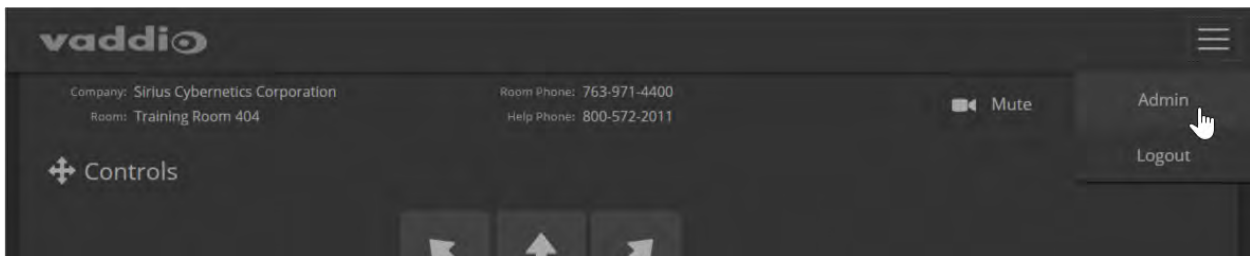

Open the menu to log on as Admin. The default admin password is **password**.

Note


For best security, Vaddio strongly recommends changing the user and admin passwords from the default. Using the default passwords leaves the product vulnerable to tampering.

As Admin, you have access to the following pages:

- Camera – Additional control over camera behavior related to camera movement and color management.
- Streaming – Set up IP (H.264) streaming.
- Room Labels – Add helpful information the web interface screens, such as conference room name and the in-house number for AV assistance.
- Networking – Ethernet configuration.
- Security – Set passwords and manage guest access.
- Diagnostics – Access to logs for troubleshooting.
- System – Reboot, restore defaults, view switch settings, and run updates.
- Help – Tech support contact information.

Compact Menu View

By default, the navigation buttons in the administrative interface display an icon and a text label. You can also select the compact view of the menu buttons along with the standard view. The button at the bottom of the menu toggles between the two views.

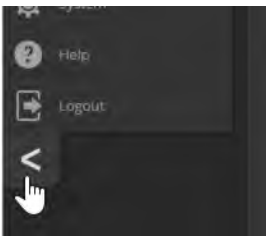

Web Interface Cheat Sheet

Where to find the camera controls you need right now.

What do you need?	Go to this screen
Camera operation <ul style="list-style-type: none"> ■ Stop sending video (video mute) ■ Make the glass opaque for privacy (Manual glass control must be enabled) ■ Enter or exit standby mode 	(any page)
Camera operation <ul style="list-style-type: none"> ■ Move or zoom the camera manually ■ Move to a camera preset (Presets section, if available) ■ Select the appropriate lighting adjustments (CCU Scenes section, if available) 	Controls (user or guest access) or Camera (admin access)
Camera behavior and adjustments <ul style="list-style-type: none"> ■ Set or clear presets ■ Set the speed for pan, tilt, or zoom motions ■ Focus the camera (Focus button reveals the focus control) ■ Work with color and lighting adjustments (CCU scenes) 	Camera
Advanced camera settings <ul style="list-style-type: none"> ■ Super-wide field of view ■ Indicator light – enable/disable; select color scheme ■ HDMI color space (YCbCr or sRGB; default is YCbCr) ■ Codec control mode ■ Glass control mode - automatic or manual ■ Video output resolution 	System (DIP switches tab)
Read-outs of the camera's hardware switch settings	System (DIP switches tab)
Access management <ul style="list-style-type: none"> ■ Guest access ■ Account passwords ■ Idle session time-out ■ Telnet access enabled/disabled ■ Advanced security settings 	Security
IP streaming settings <ul style="list-style-type: none"> ■ Quality, resolution, and frame rate ■ Streaming URL and path 	Streaming
IP settings <ul style="list-style-type: none"> ■ Hostname ■ DHCP or static addressing ■ Static: IP address, subnet mask, gateway Time zone and NTP server (source for system time/date)	Networking
Information about the camera location Helpdesk phone number for end users	Room Labels
Vaddio Technical Support contact information	Help
Diagnostic logs	Diagnostics

System Administration

Administrative tasks are on these pages of the web interface:

- Networking – Ethernet configuration, time zone and NTP server
- Security – Passwords, guest access, other IT security-related settings
- Room Labels – Helpful information to display in the web interface
- System – Controls to reboot, reset to factory defaults, and run firmware updates, access to soft DIP switches
- Help – Contact information for Vaddio Technical Support and a link to the documentation for this product
- Diagnostics – Logs to help Vaddio Technical Support troubleshoot issues

Configuring Network Settings

NETWORKING PAGE

DHCP is the default setting, but the camera will use the default address of 169.254.1.1 if no DHCP server is available. You will only be able to enter the IP address, subnet mask, and gateway if you set IP Address to Static.

If your network supports hostname resolution, you may find it convenient to change the camera's hostname.

Caution

Consult your IT department before changing any network settings. Errors in network configuration can make the camera and its IP stream inaccessible from the network. Do not change DHCP/Static addressing, IP address, subnet mask, or gateway unless you are very familiar with the characteristics and configuration of the network where you install the camera.

The screenshot displays the Vaddio RoboSHOT IW web interface. The top header shows the Vaddio logo and contact information for MumbleCo Widgets International, Boardroom, Rm Tel 763-971-4400, Help Tel 800-572-2011. A left sidebar contains navigation icons for Camera, Streaming, Room Labels, Networking (highlighted), Security, Diagnostics, System, Help, and Logout. The main content area is divided into two sections:

- Date & Time Settings:**
 - Device System Time: Sat May 19 04:01 UTC 2018 (with a Refresh button)
 - Automatic NTP Updating: Enabled
 - Time Zone: Universal (dropdown menu)
 - NTP Server: pool.ntp.org
 - Buttons: Cancel, Save
- Network Configuration:**
 - Hostname: vaddio-roboshot-iw-54-10-EC-31-4B-F2
 - Network Interfaces:**
 - Ethernet Port (eth0:WAN)
 - IP Address:
 - DHCP Static
 - MAC Address: 54:10:EC:31:4B:F2
 - IP Address: 10.30.240.86
 - Subnet Mask: 255.255.255.0
 - Gateway: 10.30.240.254
 - Buttons: Cancel, Save


Specifying Time Zone and NTP Server

NETWORKING PAGE

Using automatic NTP updating ensures that the timestamps in the camera's diagnostic log are accurate. Specifying your time zone may make it easier to match logged events with other actions and external events.

1. To make the time zone and NTP server editable, enable Automatic NTP Updating.
2. Select the desired time zone from the list.
3. If desired, specify the NTP server to use. Otherwise, use the default.

You may need to refresh the system time display.

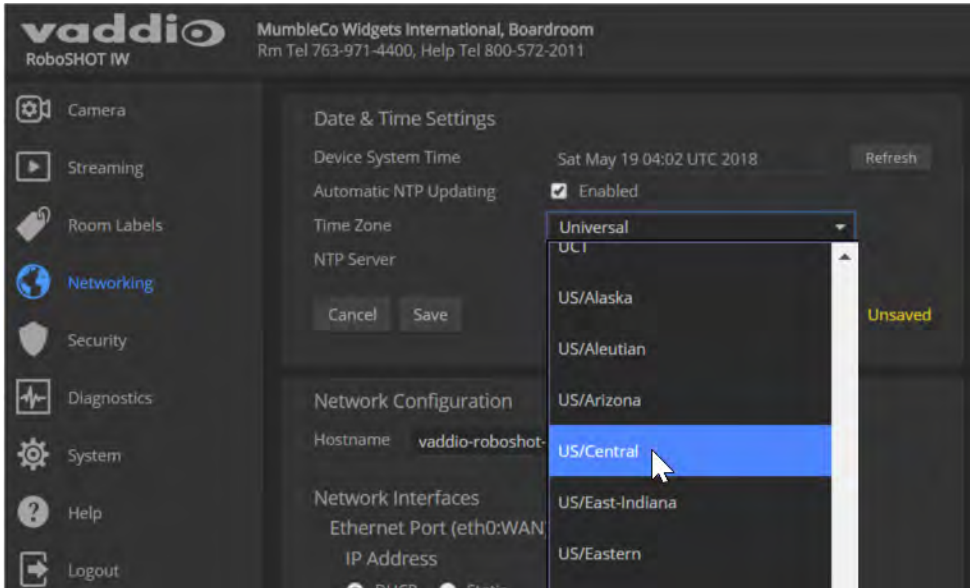

Managing Access and Passwords


SECURITY PAGE

Things you can do on this page:

- Allow people to access the Camera screen without logging on (Allow Guest Access)
- Set whether inactive sessions log off automatically or not (Automatically Expire Idle Sessions)
- Change the password for the `admin` account
- Change the password for the `user` account
- Disable access via Telnet (by default, access via Telnet is enabled)
- Require HTTPS for web access (by default, HTTP is also permitted)

Note

For best security, Vaddio strongly recommends changing the user and admin passwords from the default. Using the default passwords leaves the product vulnerable to tampering.

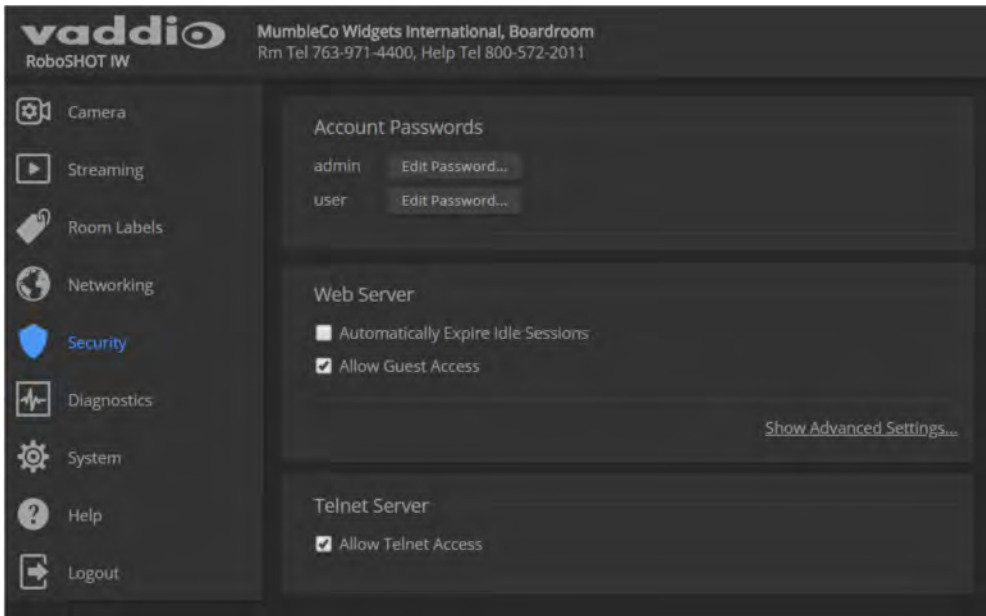

Disabling Telnet Access

SECURITY PAGE

If your installation does not require camera access via Telnet, you may choose to disable the camera's internal Telnet server.


Enabling or Requiring HTTPS

SECURITY PAGE

By default, the web interface uses the HTTP protocol. You can configure the camera's web interface to require a secure HTTPS connection instead.

Caution

Consult your network security professional to manage the camera's SSL certificate. Do not make any changes in the Certificate or Private Key text boxes without guidance from your organization's network security professional.

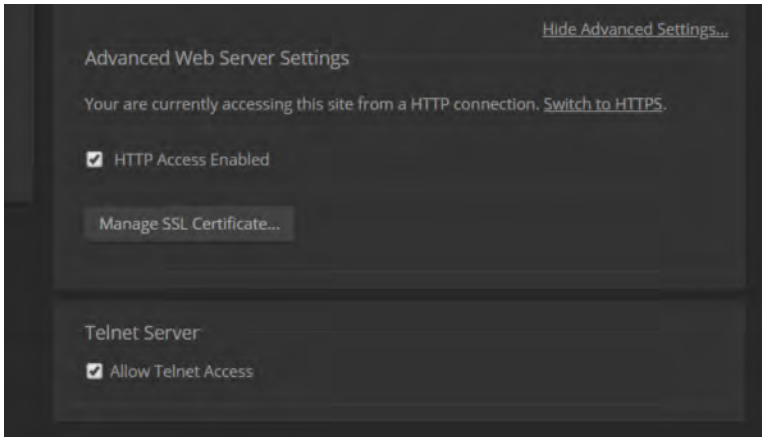

1. Select Show Advanced Settings. The advanced options open.
2. To switch to a secure HTTPS connection, select Switch to HTTPS.

Note


Your browser may present messages warning you that your connection is not secure, because the site's certificate is not valid. This happens when HTTPS is used but no SSL certificate is installed.

3. To require HTTPS connections, clear the box labeled HTTP Access Enabled. The camera's web interface will only be available via an HTTPS connection.

Adding Room Information to the Web Interface

ROOM LABELS PAGE

The information you enter on this page is displayed on every page of the web interface.

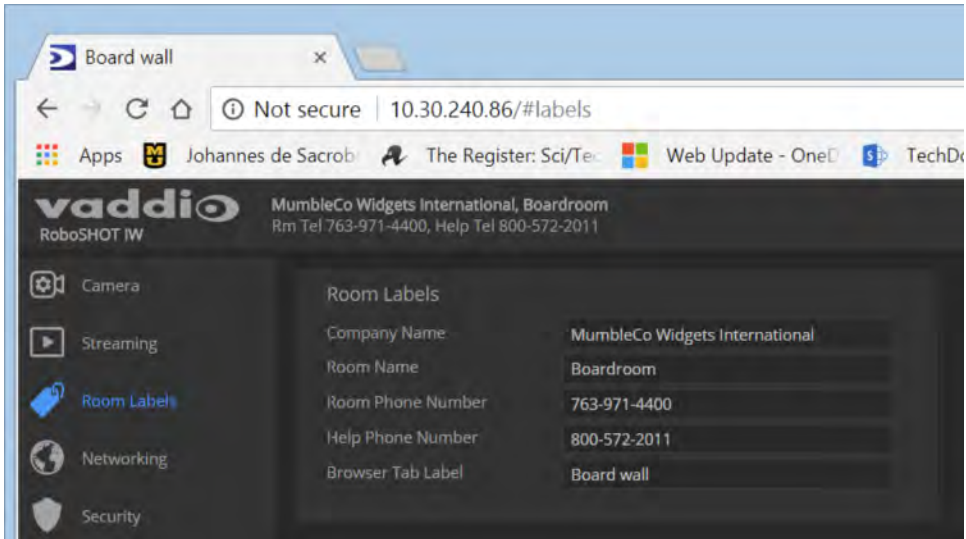


Saving (Exporting) or Restoring (Importing) a Configuration

SYSTEM PAGE, FIRMWARE TAB

You can import a configuration to several cameras if you need to configure them the same way. Cameras must be of the same model, and must have a compatible firmware version installed. Configuration data does not include passwords or unique information such as hostname.

1. Configure the first camera.
2. Export its configuration (Export Data button). The export downloads to your computer as a .dat file. The filename is the camera's hostname.
3. Import the configuration to the other cameras (Import Data button in each camera's web interface).

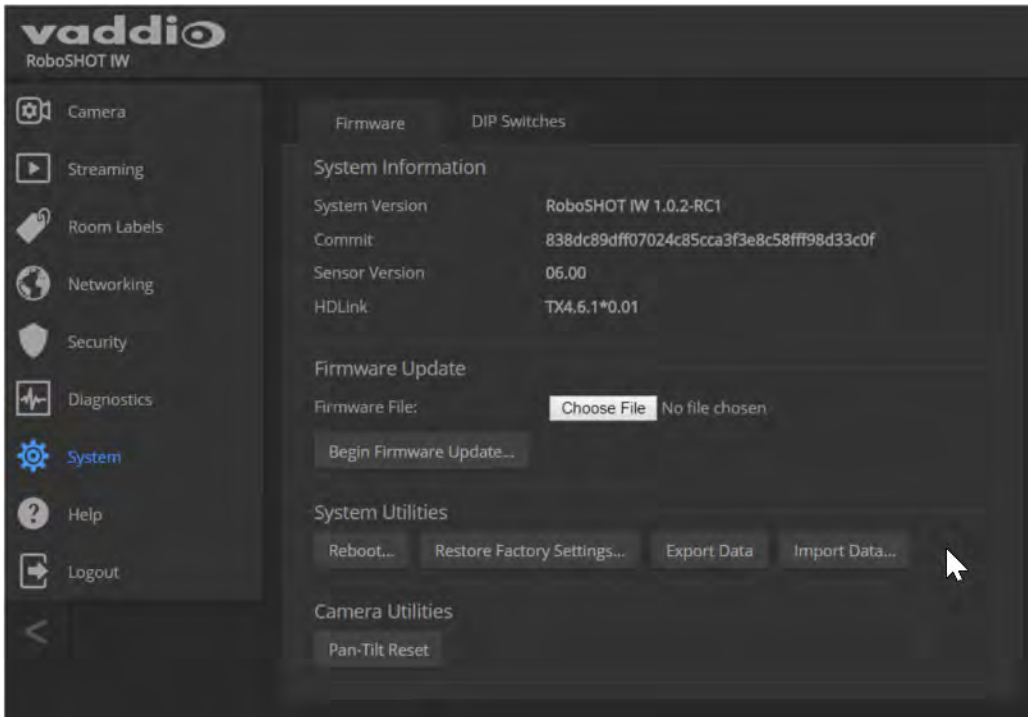

Installing a Firmware Update

SYSTEM PAGE, FIRMWARE TAB

1. Download the firmware and its release notes.
2. Select Choose File, then browse to the downloaded firmware and select it. The filename ends with .p7m.
3. Select Begin Firmware Update.
4. Read and understand the information in the Confirm dialog box. It's dull, but it could save you some time and aggravation.
5. Select Continue. A progress message box opens and the indicator light on the front of the camera turns yellow. If the update process presents warnings or error messages, read them carefully.

The camera reboots when the update is complete.

Caution


The camera must remain connected to power and to the network during the update. Interrupting the update could make the camera unusable.

Rebooting the Camera

SYSTEM PAGE, FIRMWARE TAB

This can help if the camera stops responding as you expect.

In the System Utilities section, select Reboot.

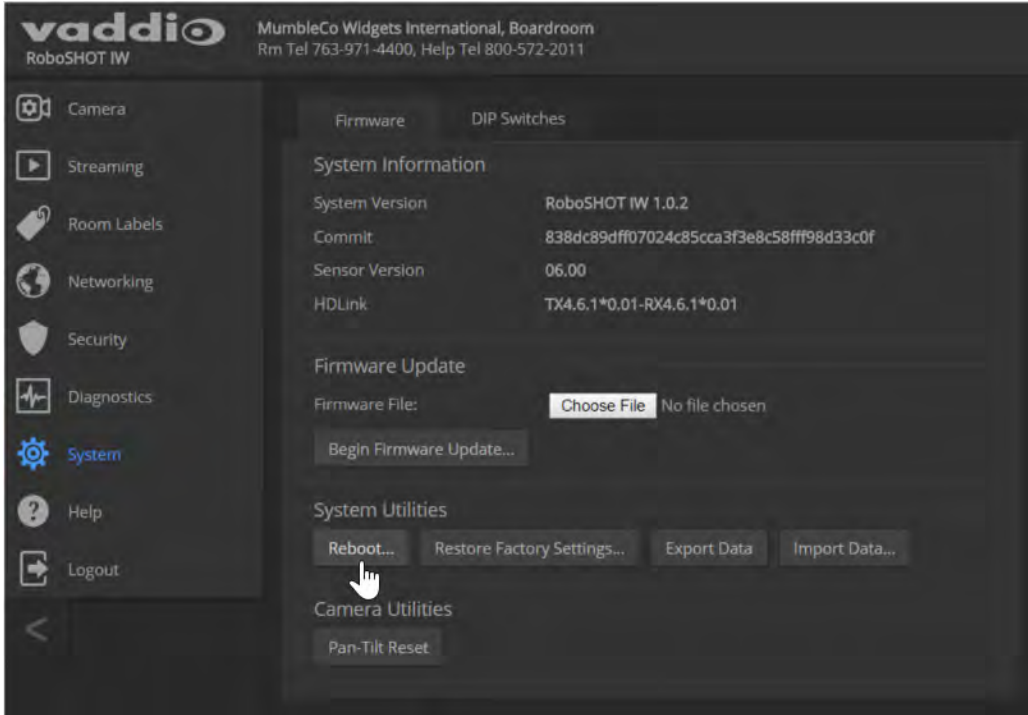


Contacting Vaddio Technical Support

HELP PAGE

If you can't resolve an issue using your troubleshooting skills (or the [Troubleshooting](#) table in this manual), we are here to help.


You'll find information for contacting Vaddio Technical Support on the Help page.

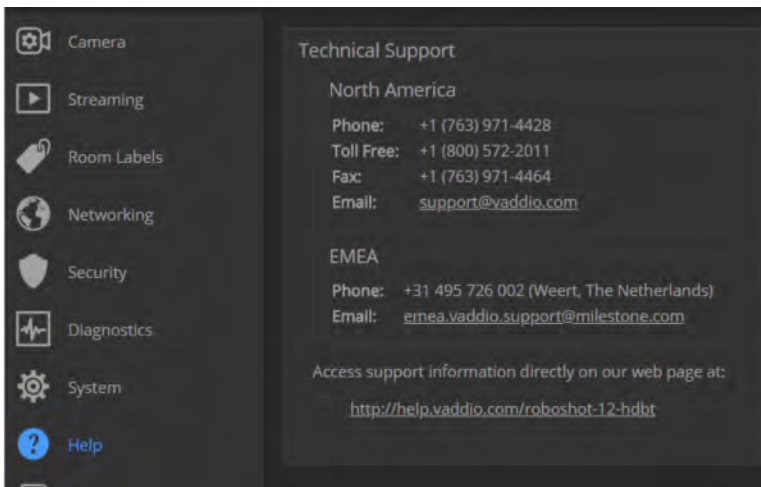

Accessing the Diagnostic Logs

DIAGNOSTICS PAGE

When you contact Vaddio technical support, your support representative may ask you to download and email the log file available from the Diagnostics page.

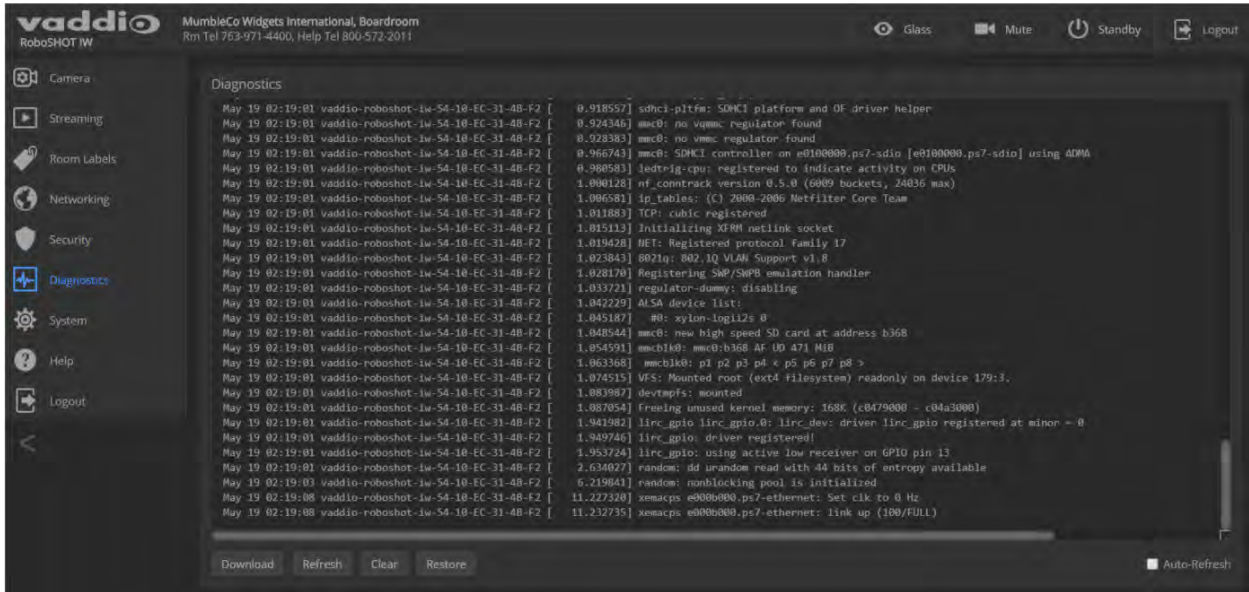

Configuring Camera Behavior


Camera configuration tasks are available on these pages:

- Camera – Color and lighting adjustments, presets (including custom Home), and real-time camera control
- Streaming – Resolution, quality, bandwidth, and more
- System (DIP Switches tab) – Camera identification (Camera 1, 2, or 3 on the remote), status light behavior, codec control mode, and more

Configuring IP Streaming

STREAMING PAGE

IP streaming is enabled by default. Use the Enable IP Streaming checkbox to change this.

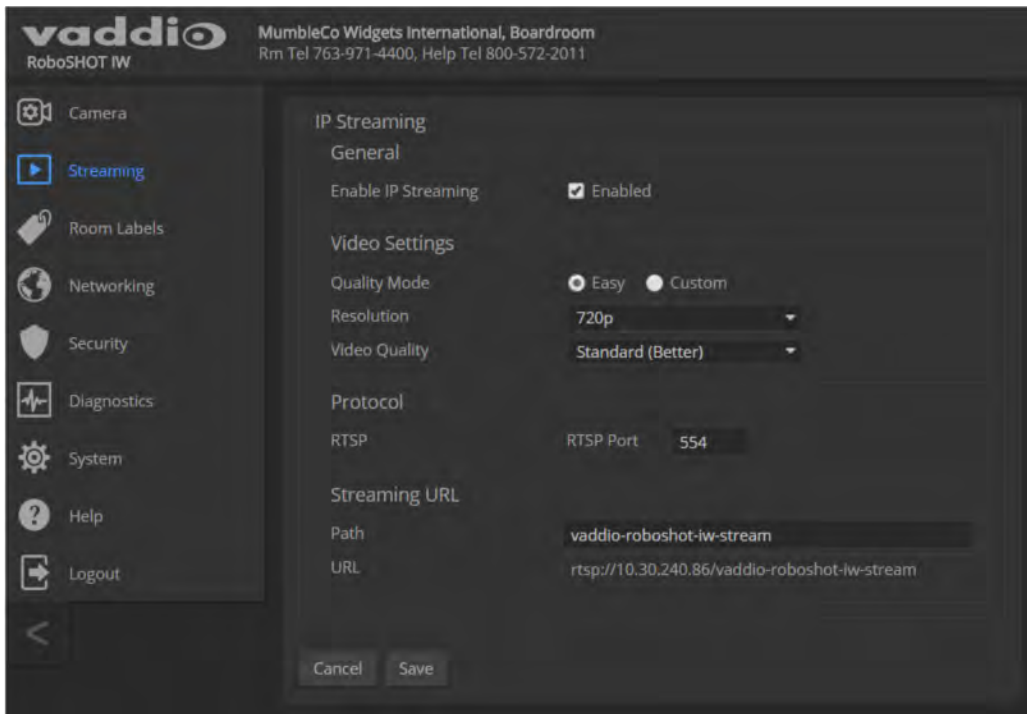

Streaming Resolution, Quality, and Bandwidth


STREAMING PAGE

Note


The IP streaming resolution cannot be higher than the value set for the local video output. (See [Video Resolution](#) for information on setting this.) If the selected value is out of range, the camera will automatically adjust the streaming resolution.

If you are not sure about these settings, start with the defaults.


1. Select the Quality Mode: Easy or Custom. Easy mode configures most settings automatically.
2. Select the desired IP streaming resolution.

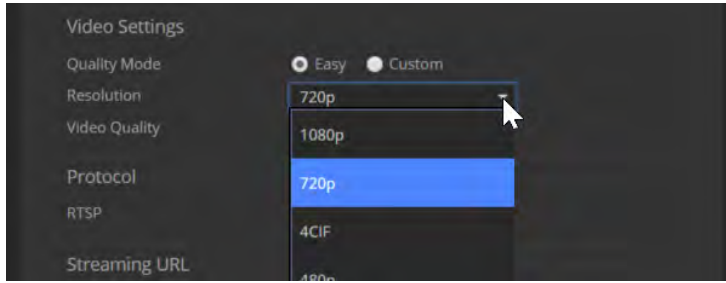

3. Easy quality mode only: Select Video Quality.

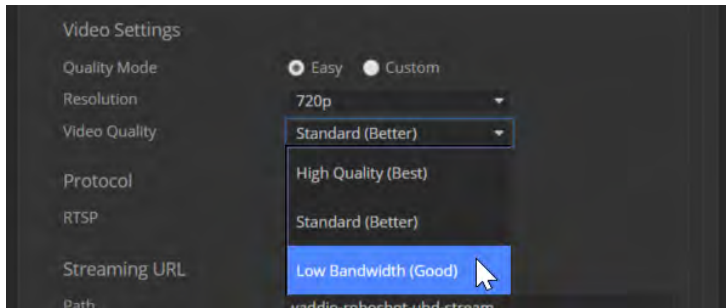


4. Custom quality mode only: Select the desired IP streaming frame rate.

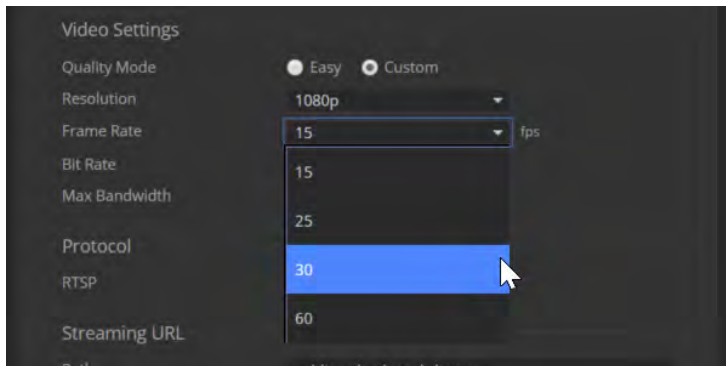


5. Custom quality mode only: Select Constant or Variable bit rate.

6. Custom quality mode, Constant bit rate only: Set Max Bandwidth.

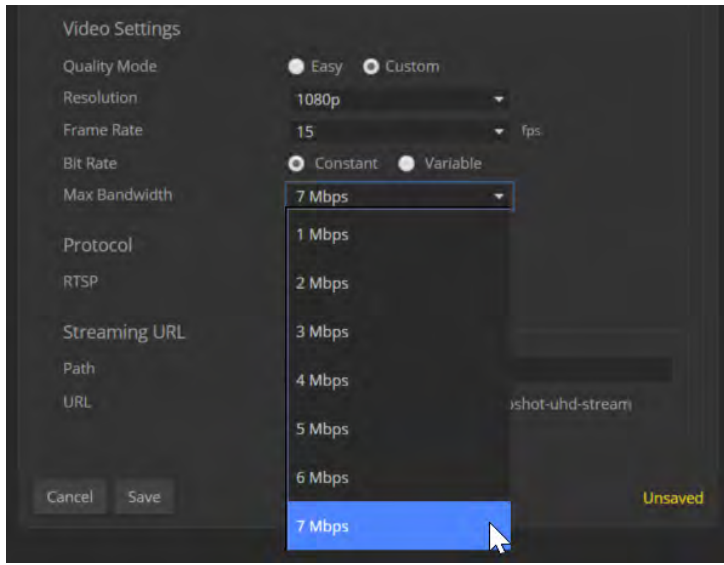

7. Custom quality mode, Variable bit rate only: Set the Quality (Quantization) slider.

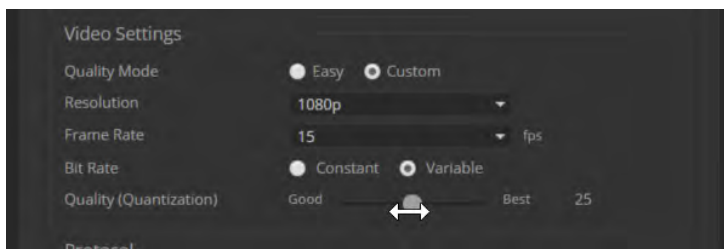

8. Save your changes.

Streaming Protocol and URL

STREAMING PAGE

RTSP port: Vaddio strongly recommends using the default RTSP port number.


Streaming URL: If necessary, edit the path name to change the portion of the streaming URL that appears after the IP address.

Adjusting the Focus

CAMERA PAGE

Open the Focus control to select Auto-focus, or set manual focus with the + (near) and – (far) buttons. I know you already understand this, but I'm going to say it anyway: The + and – buttons don't work when the Auto Focus box is checked.

Focus control is available to users via the IR Remote Commander, but it is not available on the operator's Controls page of the web interface.

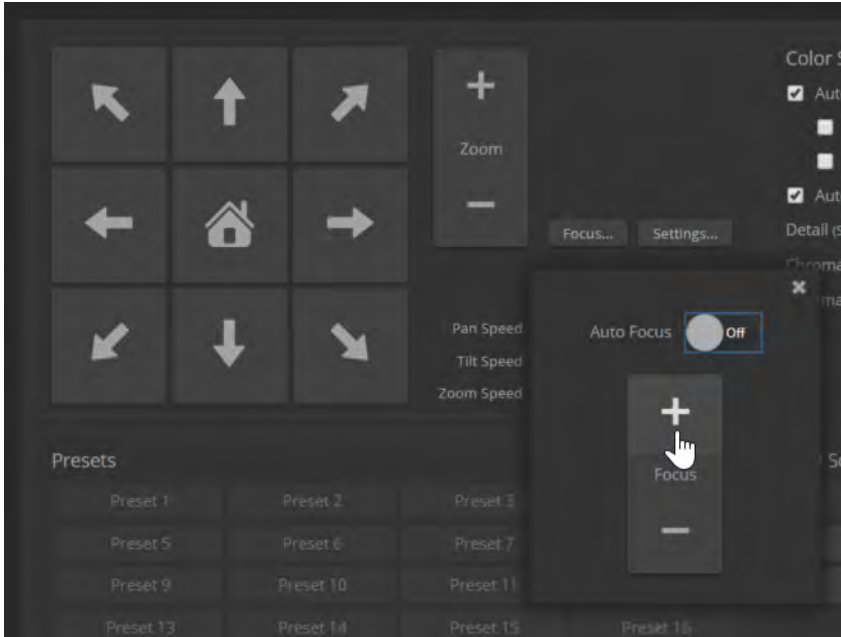

Lighting and Color Adjustments


CAMERA PAGE

No two rooms are exactly alike – but a lot of rooms are a lot alike. The technical folks at Vaddio (Scott, to be specific) have already set up presets for common lighting scenarios (CCU scenes) – Incandescent Hi, Incandescent Lo, Fluorescent Hi, Fluorescent Lo, and Outdoor. The Auto setting allows the camera to determine the appropriate adjustments.

When adjusting for the room lighting, start with a factory-defined CCU scene and adjust as needed. After you customize the camera's color and lighting settings, you can save the adjustments as a custom CCU scene.

To make the initial adjustments:

Click any CCU scene button to load one of the CCU scenes into the camera.

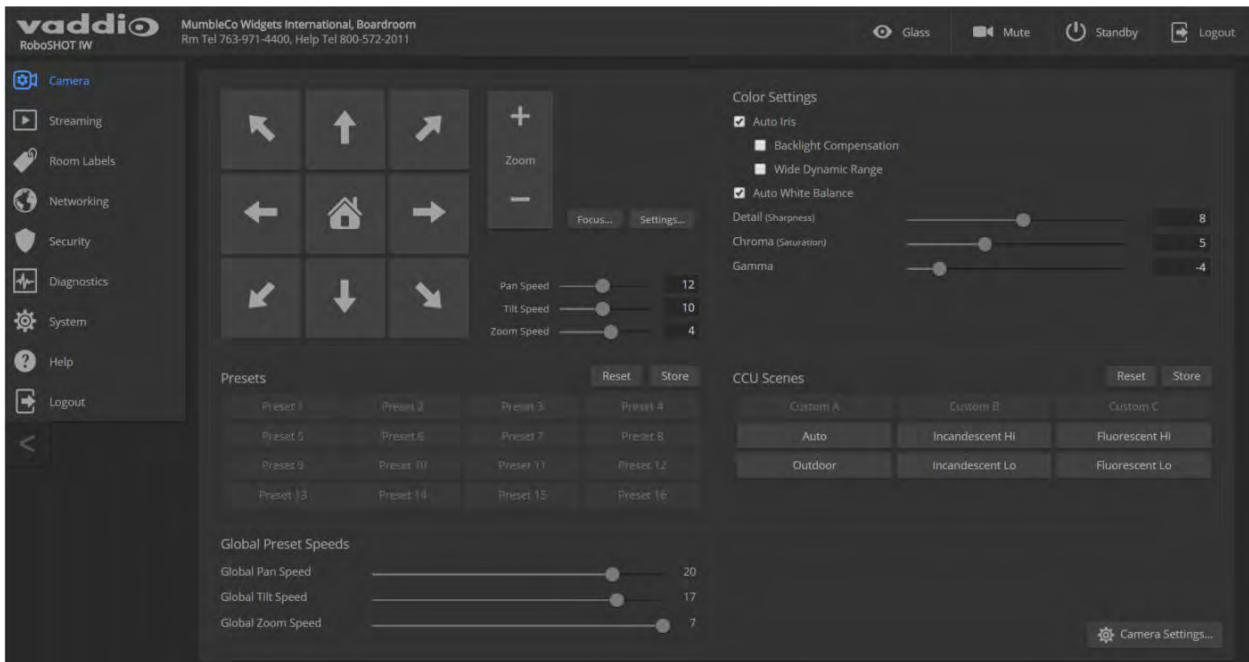

To set up custom color and lighting settings:

1. Fine-tune the color and lighting as needed using the Color Settings controls.
 - **Auto Iris** allows the camera to compensate automatically for the light level.
 - **Backlight Compensation** (available with Auto Iris) reduces contrast to adjust for bright light behind the main subject of the shot. This setting can't be used with Wide Dynamic Range.
 - **Wide Dynamic Range** (available with Auto Iris) increases the contrast between the brightest and darkest areas. This setting can't be used with Backlight Compensation
 - **Auto White Balance** adjusts color automatically. Red gain and blue gain controls are not available when Auto White Balance is selected.
 - **Red Gain** and **Blue Gain** provide manual color adjustment.
 - **Detail** adjusts the image sharpness.

Note
If the video looks grainy or "noisy," try a lower Detail setting. As in conversation, too much detail is bad.
 - **Chroma** adjusts the color intensity.
 - **Gamma** adjusts the range between bright areas and shadows.
2. When the scene looks the way you want it to, click Store CCU Scene.
3. In the Store CCU Scene dialog box, select which custom scene to store (Custom A, B, or C) and select Save.
4. Optional: Name the new scene by right-clicking its button. A dialog box opens. Enter the name and save it.

If you make a change that you don't like, start over by selecting and then deselecting Auto White Balance.

Setting a Custom Home Position and Other Preset Shots

CAMERA PAGE

The camera's default home position is 0° pan and 0° tilt; you can set a different home position.


You can also define other presets, for shots that you will want to use repeatedly. Presets may include lighting and color settings and may specify Tri-Synchronous Motion or global preset speed settings.

Note

Storing a preset overwrites any information that was previously associated with that preset. The Store Preset dialog does not show which presets have already been defined. Vaddio recommends renaming presets when you store them.

To store a preset:

1. Set up the shot.
2. Select Store to open the Store Preset dialog.
3. Select the preset to define, then save it.

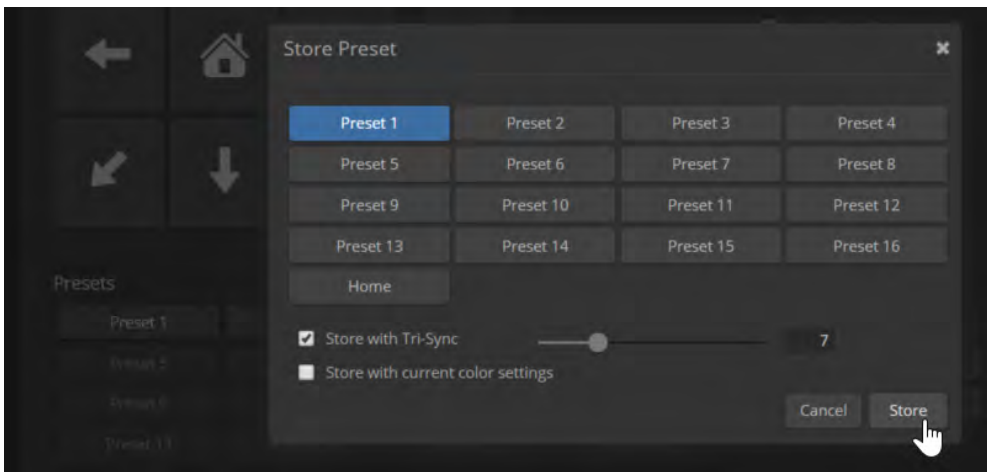

To rename a custom CCU scene or a preset:

You can rename custom scenes and presets. The process is the same for both. Right-click the button for the custom scene or preset, and edit the label.




Setting the Speed for Manual Movements

CAMERA PAGE

The Pan Speed, Tilt Speed, and Zoom Speed sliders control how fast the camera moves in response to the direction and zoom controls on the IR remote and in the web interface.

Use the arrow and Zoom controls to check camera speed, and use the Speed sliders to adjust as needed.

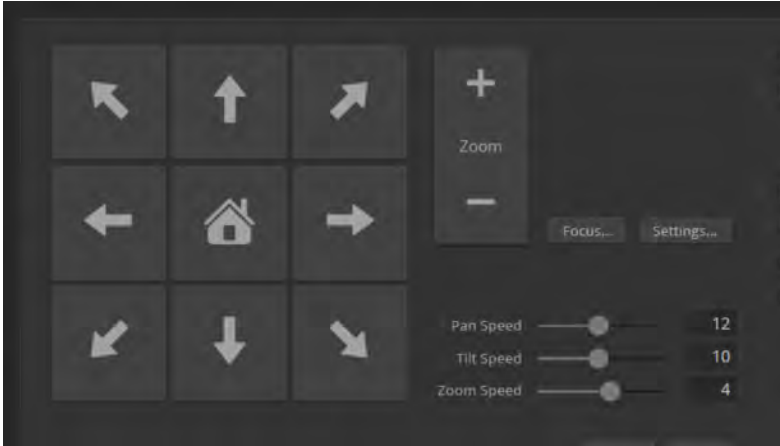


Setting the Direction for Camera Movements

CAMERA PAGE

By default, the arrow buttons on the remote and in the web interface show the direction you would see the camera move if you were looking the same direction as the camera. If a person facing the camera is controlling it with the remote, using the right arrow pans the camera to the person's left.

To make the arrow buttons indicate camera movement from the perspective of a person facing the camera, open the Settings control and invert the pan direction.

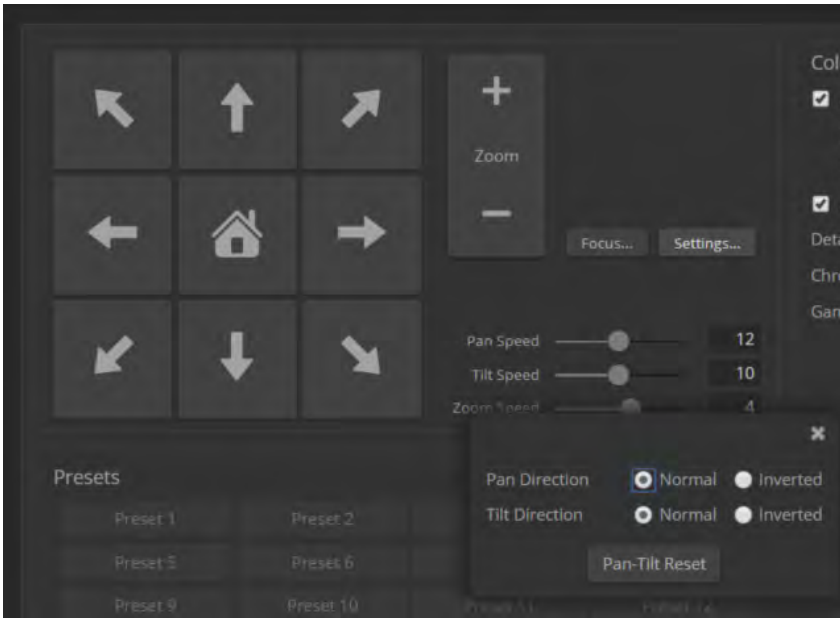

Software Switch Settings

SYSTEM PAGE, DIP SWITCHES TAB

The DIP Switches tab of the System page provides access to these features:

- **Glass Mode** (smart-glass enclosure only) – In Auto mode, the glass is clear whenever the camera is sending video. In Manual mode, the Glass control is available on all pages of the web interface.
- **Camera ID (IR Settings)** – The IR Remote Commander can control up to three cameras in the same room with different IR frequencies. Use **IR Settings** switches 1 and 2 to select the frequency to identify the camera as camera 1 (both switches up), camera 2 (switch 1 down, switch 2 up), or camera 3 (switch 1 up, switch 2 down).
- **IR On/IR Off** – Enable/disable the camera's IR sensors. The camera does not respond to the IR remote if IR is off.
- **Image Flip** – If mounting the camera upside-down, set IMAGE FLIP ON.
- **Super Wide mode** – Provides a wider horizontal field of view and greater zoom. Some distortion may be present.
- **Baud Rate** – RS-232 serial communication rate (9600 bps or 38400 bps).
- **HDMI color** – YCbCr (default) or sRGB.
- **LED on/off** – When the LED is set to OFF, it remains off even when the camera is sending video.
- **Enable LED in Standby** – When the LED is not enabled in standby mode, it is on when the camera is sending video or updating firmware; but off when the camera is in standby mode.
- **Standard Control Mode/Codec Control Mode** – Select Codec Control Mode if using the camera with a third-party codec.
- **Video resolution** – Select the desired video output resolution from the table. The pointer on the soft rotary switch matches the resolution you select.




Operating the Camera from the Web Interface

CONTROLS PAGE

The Controls page provides most of the same controls as the IR Remote Commander. If guest access is disabled, you will need to log in as `user` to access these controls.

- Move to camera presets, if any have been stored
- Pan, tilt, zoom, or return it to its home position
- Put the camera in standby or bring it back to the ready state
- Select a custom lighting adjustment, if any have been stored

Since the web interface is specific to the camera you are working with, it does not offer camera selection.

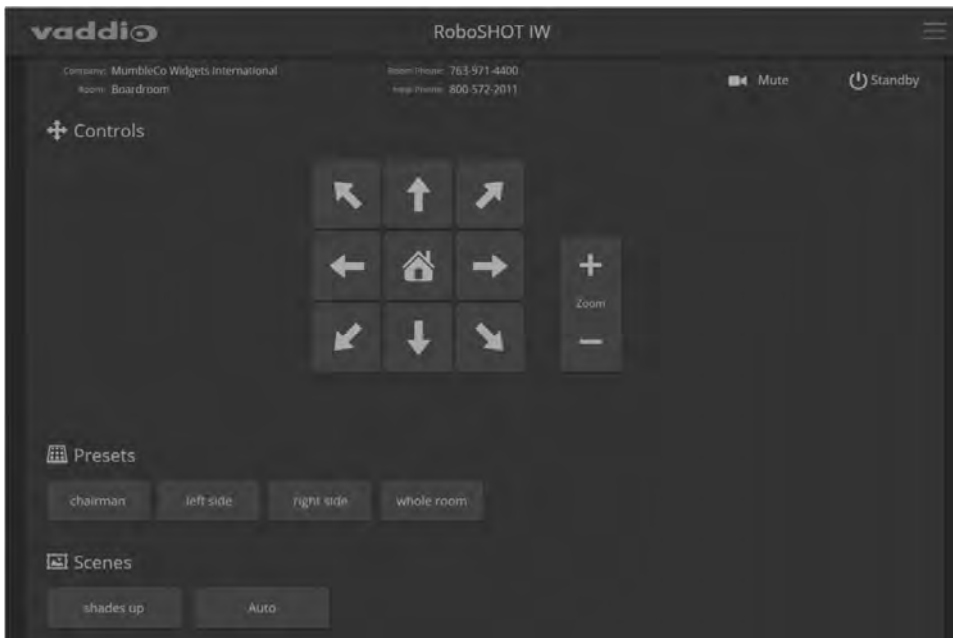

Switching the Camera Off or On (Standby)

Use the Standby button to switch between low-power (standby) and ready states. On entering standby mode, the camera moves to its standby position and stops sending video.

If the camera has a smart glass cover, the glass is frosted when the camera is in standby mode.

Stop or Resume Sending Video (Mute)

Use the Mute button to stop sending live video without putting the camera in standby mode. When the video is muted, the camera sends a blue or black screen. If the camera is part of a conferencing system, this does not mute the audio.

If the camera has a smart glass cover, the glass remains clear when video is muted.

Moving the Camera

Use the arrow buttons for camera pan and tilt. The center button moves the camera to the home position.

Zooming In or Out

Use the Zoom + button to zoom in and the Zoom - button to zoom out.




Moving the Camera to a Preset Position

Presets are camera shots that have been stored. They include pan, tilt, and zoom information, and may include color and speed information as well. If no presets are defined, the Controls page does not present the Presets section.

Use the Preset buttons to move the camera to any of its preset positions.

Adjusting the Color and Lighting

If any color and lighting adjustments (CCU scenes) have been saved, they are available in the Scenes area, along with the Auto setting. In most cases, the Auto setting is appropriate. This setting allows the camera to adjust to current conditions automatically.

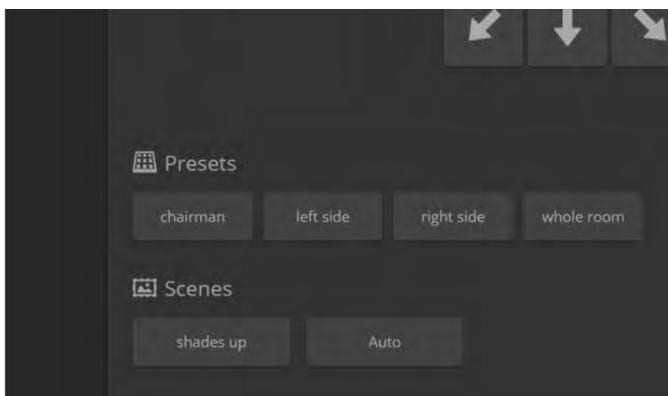

Telnet Command Reference

Vaddio's Telnet command protocol is a high-level, text-based command line interface supported via Telnet session on the camera. The API is accessed by a telnet client on the Ethernet port; the default Telnet port is 23. Telnet sessions require the administrator account login.

The command application protocol interface is intended to allow external devices such as AMX or Crestron to control the camera. The protocol is based upon ASCII format following the VT100 terminal emulation standard and uses an intuitive text command nomenclature for ease of use.

General format usage follows a get/set structure. Usage examples for each type are:

Set Example

COMMAND: > **camera zoom in**

RESPONSE: > OK

Get Example

COMMAND: > **camera ccu get iris**

RESPONSE: > iris 11

Syntax Error Example

COMMAND: > **camera preset 1**

RESPONSE: > Syntax error: Unknown or incomplete command

Using a question mark as a command parameter will bring up a list of available commands for the menu you are in.

Things to know about control via Telnet session:

- Command lines are terminated with a carriage return.
- All ASCII characters (including carriage returns) are echoed to the terminal program and appended with the VT100 string ESC[J (hex 1B 5B 4A), which most terminal programs automatically strip.
- CTRL-5 Clears the current serial buffer on the device.

Typographical conventions:

- {x | y | z} – Choose x, y, or z.
- <variable> – Substitute the desired value here.
- < x - y > – Valid range of values is from x through y.
- [optional] – Parameter is not required.

```

telnet 192.168.1.66
BoardroomCamControl login: admin
Password:
Last login: Wed Mar 30 13:19:52 -0500 2016 on /dev/pts/0
*****
*      Vaddio Interactive Shell      *
*          WARNING: Authorized Access Only          *
*****

Welcome admin
: version
Commit      25120c9af446a884cf282702a214efba8a96b6c7
System Version PCC Premier 1.1.0-RC3
OK
: network settings get
Name        eth0:WDRN
MAC Address 98:1E:C0:8D:89:5B
IP Address  192.168.1.66
Netmask     255.255.255.0
DUPN        Disabled
Gateway     192.168.1.254
OK

```

camera home

Moves the camera to its home position.

Synopsis	camera home
Example	>camera home OK >

camera pan

Moves the camera horizontally.

Synopsis	camera pan { left [<speed>] right [<speed>] stop get set }	
Options	left	Moves the camera left.
	right	Moves the camera right.
	speed <1 - 24>	Optional: Specifies the pan speed as an integer (1 to 24). Default speed is 12.
	stop	Stops the camera's horizontal movement.
	get	Returns the camera's current pan position.
	set <position>	Sets the camera's pan position as degrees from center (0°). <position> is a floating-point value; negative values are left of center if image flip is not used. The range varies slightly by camera and reflects physical limits. If the value is out of range, the camera returns an error message and no motion occurs.
Examples	<pre>>camera pan left OK ></pre> <p>Pans the camera left at the default speed.</p> <pre>>camera pan right 20 OK ></pre> <p>Pans the camera right using a speed of 20.</p> <pre>>camera pan stop OK ></pre> <p>Stops the camera's horizontal motion.</p>	

camera tilt

Moves the camera vertically.

Synopsis	camera tilt{ up [<speed>] down [<speed>] stop }	
Options	up	Moves the camera up.
	down	Moves the camera down.
	speed <1 - 20>	Optional: Specifies the tilt speed as an integer (1 to 20). Default speed is 10.
	stop	Stops the camera's vertical movement.
	get	Returns the camera's current tilt position.
	set <position>	Sets the camera's tilt position as degrees from horizontal (0°). <position> is a floating-point value; negative values are down if image flip is not used. The range varies slightly by camera and reflects physical limits. If the value is out of range, the camera returns an error message and no motion occurs.
Examples	<pre>>camera tilt up OK > Tilts the camera up at the default speed. >camera tilt down 20 OK > Tilts the camera down using a speed of 20. >camera tilt stop OK > Stops the camera's vertical motion.</pre>	

camera zoom

Zooms the camera in toward the subject or out away from the subject.

Synopsis	camera zoom { in [<speed>] out [<speed>] stop get set }	
Options	in	Moves the camera in.
	out	Moves the camera out.
	speed [1 - 7]	Optional: Specifies the zoom speed as an integer (1 to 7). Default speed is 3.
	stop	Stops the camera's zoom movement.
	get	Returns the camera's current zoom level.
	set <1..n>	Sets the zoom level as an integer value. The value of n (maximum zoom) depends on the camera's capabilities; for example the range is 1 – 12 for a 12x camera.
Examples	<pre>>camera zoom in OK > Zooms the camera in at the default speed. >camera zoom out 7 OK > Zooms the camera out using a speed of 7. >camera zoom stop OK > Stops the camera's zoom motion. >camera zoom set 14 OK > Sets the camera's zoom level to 14x. >camera zoom get 14 OK > Returns the camera's current zoom level.</pre>	

camera focus

Changes the camera focus.

Synopsis	<code>camera focus { near [<speed>] far [<speed> stop mode {get auto manual}}</code>	
Options	<code>near</code>	Brings the focus nearer to the camera. Can only be used when camera is in manual mode.
	<code>far</code>	Moves the focus farther from the camera. Can only be used when camera is in manual mode.
	<code>speed <1 - 8></code>	Optional: integer (1 to 8) specifies the focus speed.
	<code>mode {get auto manual}</code>	Returns the current focus mode, or specifies automatic or manual focus.
	<code>stop</code>	Stops the camera's focus movement.
Examples	<pre>camera focus near OK ></pre> <p>Brings the focus near at the default speed.</p> <pre>camera focus far 7 OK ></pre> <p>Moves the focus farther from the camera at a speed of 7.</p> <pre>camera focus mode get auto_focus: on OK ></pre> <p>Returns the current focus mode.</p>	



camera preset

Moves the camera to the specified preset, or stores the current camera position and (optionally) CCU information.


Note

This command corresponds to the CAM_Memory commands in the RS-232 command set.

Synopsis	camera preset { recall store} <1 - 16> [save-ccu]	
Options	recall <1 - 16>	Moves the camera to the specified preset. If CCU information was saved with the preset, the camera switches to the CCU setting associated with the preset.
	store <1 - 16>	Stores the current camera position as the specified preset.
	save-ccu	Optional: Saves the current CCU settings as part of the preset. If not specified, the last color settings are used when recalled.
Examples	<pre>>camera preset recall 3 OK ></pre> <p>Moves the camera to preset 3.</p> <pre>>camera preset store 1 OK ></pre> <p>Saves the camera's current position as preset 1.</p> <pre>>camera preset store 2 save-ccu OK ></pre> <p>Stores the camera's current position as preset 2. The camera applies the current CCU settings when it is recalled to this preset.</p>	


camera ccu get

Returns CCU (lighting and color) information.

Synopsis	<code>camera ccu get <param></code>	
Options 	all	Returns all current CCU settings.
	auto_white_balance	Returns the current state of the auto white balance setting (on or off).
	red_gain	Returns the red gain value as an integer (0 to 255).
	blue_gain	Returns the blue gain value as an integer (0 to 255).
	backlight_compensation	Returns the current state of the backlight compensation setting (on or off).
	auto_iris	Returns the current auto-iris state (on or off).
	iris	Returns the iris value as an integer (0 to 11).
	gain	Returns the gain value as an integer (0 to 11).
	detail	Returns the detail value as an integer (0 to 15).
	chroma	Returns the chroma value as an integer (0 to 14).
	wide_dynamic_range	Returns the current state for Wide Dynamic Range (on or off).
Examples	<pre>>camera ccu get iris iris 6 OK ></pre> <p>Returns the current iris value.</p> <pre>>camera ccu get red_gain red_gain 201 OK ></pre> <p>Returns the current red gain value.</p> <pre>>camera ccu get all auto_iris on auto_white_balance on backlight_compensation off blue_gain 193 chroma 2 detail 8 gain 3 iris 11 red_gain 201 wide_dynamic_range off OK ></pre> <p>Returns all current CCU settings.</p>	

camera ccu set

Sets the specified CCU (lighting and color) information.

Synopsis	<code>camera ccu set <param> <value></code>	
Options 	<code>auto_white_balance {on off}</code>	Sets the current state of the auto white balance setting (on or off). Auto white balance overrides red gain and blue gain manual settings.
	<code>red_gain <0 - 255></code>	Sets the red gain value as an integer (0 to 255). Can only be used when auto white balance is off.
	<code>blue_gain <0 - 255></code>	Sets the blue gain value as an integer (0 to 255). Can only be used when auto white balance is off.
	<code>backlight_compensation {on off}</code>	Sets the current state of the backlight compensation setting (on or off). Can only be used when wide dynamic range mode is off.
	<code>iris <0 - 11></code>	Sets the iris value as an integer (0 to 11). Can only be used when auto-iris is off.
	<code>auto_iris {on off}</code>	Sets the auto-iris state (on or off). Auto-iris disables manual iris and gain when it is on.
	<code>gain <0 - 11></code>	Sets gain value as an integer (0 to 11). Can only be used when auto-iris is off.
	<code>detail <0 - 15></code>	Sets the detail value as an integer (0 to 15).
	<code>chroma <0 - 14></code>	Sets the chroma value as an integer (0 to 14).
	<code>wide_dynamic_range {on off}</code>	Sets Wide Dynamic Range mode on or off. Can only be used when backlight compensation is off.
Examples	<pre>>camera ccu set auto_iris off OK ></pre> <p>Turns off auto-iris mode, returning the camera to manual iris control.</p> <pre>>camera ccu set red_gain 10 OK ></pre> <p>Sets the red gain value to 10.</p>	

camera ccu scene

Stores the current CCU scene or recalls the specified ccu scene.

Synopsis	camera ccu scene {recall {factory <1 - 6> custom <1 - 3>} store custom <1 - 3>}	
Options	recall factory <1 - 6> recall custom <1 - 3>	Recalls the camera to the specified scene (factory 1 - 6 or custom 1 - 3).
	store custom <1 - 3>	Saves the current scene as the specified custom scene.
Examples	<pre>>camera ccu scene recall factory 2 OK ></pre> <p>Sets the camera to use factory CCU scene 2.</p> <pre>>camera ccu scene store custom 1 OK ></pre> <p>Saves the current CCU scene as custom CCU scene 1.</p>	

camera glass mode

Set or change the control mode of the smart glass cover – auto or manual. This command has no effect if the camera has safety glass rather than smart glass.

Synopsis	camera glass mode { get set { auto manual } toggle }	
Options	get	Returns the current smart glass mode (auto or manual).
	set	Sets the current smart glass mode (auto or manual).
	auto	In auto mode, glass control is not available to the operator. The smart glass cover is clear when the camera is sending video and opaque (frosted) when the camera is in standby mode.
	manual	In manual mode, the Glass control is available in the web interface and the camera glass state set and camera glass state toggle commands can be used.
	toggle	Changes the current smart glass mode (auto if it was manual, or manual if it was auto).
Examples	<pre>>camera led off OK ></pre> <p>Disables the indicator light. You cannot tell by looking at the camera whether it is sending video.</p> <pre>>camera led get led: on OK ></pre> <p>Returns the current state of the indicator light.</p>	

camera glass state

Set or change the state of the smart glass cover. This command has no effect if the camera has safety glass rather than smart glass.

Notes

The camera glass must be in manual mode (camera glass mode command) to use the set and toggle subcommands.

Unlike `video mute`, this command does not keep the camera from sending video.

Synopsis	<code>camera glass state { get set { clear frosted } toggle }</code>	
Options	<code>get</code>	Returns the current state of the smart glass cover (<code>clear</code> or <code>frosted</code>).
	<code>set</code>	Set the state of the smart glass cover (<code>clear</code> or <code>frosted</code>).
	<code>clear</code>	Specifies that the smart glass cover is transparent.
	<code>frosted</code>	Specifies that the smart glass cover is opaque.
	<code>toggle</code>	Changes the state of the smart glass cover (clear if it was frosted, or frosted if it was clear). camera glass state toggle has the same effect as selecting the Glass control in the web interface.
Examples	<pre>>camera glass state set frosted OK > Makes the smart glass cover opaque. >camera glass state get frosted OK > Returns the current state of the smart glass cover.</pre>	


camera resolution

Gets or sets the camera's video output resolution.

Notes

Video streams may be at lower resolutions than the configured resolution, but cannot be at higher resolutions.

Changing the resolution interrupts the IP stream. If you are viewing the IP stream, you will need to reopen the stream on the media player.

Synopsis	camera resolution { get set <resolution> }	
Options 	get	Returns the resolution and frame rate currently in use.
	set	Sets the resolution and frame rate.
	resolutions	1080p/60 1080p/59.94 1080p/50 1080p/30 1080p/25 1080i/60 1080i/59.94 1080i/50 720p/60 720p/59.94 720p/50
Examples	<pre>>camera resolution get "720p/59.94" > Returns the camera's current resolution and frame rate. >camera resolution set 1080p/30 OK > Sets the camera's resolution and frame rate to 1080p/30.</pre>	


camera led

Set or change the behavior of the indicator light.

Synopsis	camera led { get off on }	
Options	get	Returns the indicator light's current state (on or off).
	off	Disables the indicator light.
	on	Enables the indicator light.
Examples	<pre>>camera led off OK ></pre> <p>Disables the indicator light. You cannot tell by looking at the camera whether it is sending video.</p> <pre>>camera led get led: on OK ></pre> <p>Returns the current state of the indicator light.</p>	

camera standby

Set or change camera standby status.

Synopsis	camera standby { get off on toggle }	
Options	get	Returns the camera's current standby state.
	off	Brings the camera out of standby (low power) mode.
	on	Stops video and puts the camera in standby mode.
	toggle	Changes the camera's standby state - if it was not in standby mode, it enters standby; if it was in standby mode, it "wakes up."
Examples	 <pre>>camera standby off OK ></pre> <p>Brings the camera out of standby mode.</p> <pre>>camera standby get standby: on OK ></pre> <p>Returns the current standby state.</p>	

camera recalibrate

Recalibrates the pan and tilt motors. This is typically done in response to a motor fault indication or error message.

As the camera may be jostled during installation, you may wish to recalibrate the motors before putting the camera into service. You can also do this via the web interface; the System page includes a Pan-Tilt Reset button that recalibrates the motors.

Synopsis	camera recalibrate
Example	<pre>>camera recalibrate OK ></pre>

streaming settings get

Retrieves IP streaming settings. These are configured in the web interface.

Synopsis	streaming settings get	
Parameters	IP Custom_Frame_Rate	Frame rate selected in Custom quality mode.
	IP Custom_Resolution	Resolution selected in Custom quality mode.
	IP Enabled	True if IP streaming is enabled, False if it is not.
	IP Port	The RTSP port number used for IP streaming. Default is 554.
	IP Preset_Quality	Video quality selected in Easy video quality mode.
	IP Preset_Resolution	Resolution selected in Easy video quality mode.
	IP Protocol	The IP streaming protocol in use.
	IP URL	The URL where the stream is available.
	IP Video_Mode	Video quality mode selected (preset or custom)
Example	<pre>>streaming settings get IP Custom_Frame_Rate 15 IP Custom_Resolution 1080p IP Enabled true IP Port 554 IP Preset_Quality Standard (Better) IP Preset_Resolution 720p IP Protocol RTSP IP URL vaddio-roboshot-iw-stream IP Video_Mode preset</pre> <p>Returns the current streaming settings.</p>	

network settings get

Returns the current network settings for MAC address, IP address, subnet mask, and gateway.

Synopsis	<code>network settings get</code>
Example	<pre>> network settings get Name eth0:WAN MAC Address 00:1E:C0:F6:CA:7B IP Address 192.168.1.67 Netmask 255.255.255.0 VLAN Disabled Gateway 192.168.1.254 OK ></pre>

network ping

Sends an ICMP ECHO_REQUEST to the specified IP address or hostname.

Synopsis	<code>network ping [count <count>] [size <size>] <destination-ip></code>	
Options	<count>	The number of ECHO_REQUEST packets to send. Default is five packets.
	<size>	The size of each ECHO_REQUEST packet. Default is 56 bytes.
	<destination-ip>	The IP address where the ECHO_REQUEST packets will be sent.
Examples	<pre>>network ping 192.168.1.66 PING 192.168.1.66 (192.168.1.66): 56 data bytes 64 bytes from 192.168.1.66: seq=0 ttl=64 time=0.476 ms 64 bytes from 192.168.1.66: seq=1 ttl=64 time=0.416 ms 64 bytes from 192.168.1.66: seq=2 ttl=64 time=0.410 ms 64 bytes from 192.168.1.66: seq=3 ttl=64 time=0.410 ms 64 bytes from 192.168.1.66: seq=4 ttl=64 time=3.112 ms --- 192.168.1.66 ping statistics --- 5 packets transmitted, 5 packets received, 0% packet loss round-trip min/avg/max = 0.410/0.964/3.112 ms ></pre> <p>Sends five ECHO_REQUEST packets of 56 bytes each to the host at 192.168.1.66.</p>	
	<pre>>network ping count 10 size 100 192.168.1.1</pre> <p>Sends 10 ECHO_REQUEST packets of 100 bytes each to the host at 192.168.1.1. The command returns data in the same form as above.</p>	


system reboot

Reboots the system either immediately or after the specified delay. Note that a reboot is required when resetting the system to factory defaults (system factory-reset).

Synopsis	system reboot [<seconds>]	
Options	<seconds>	The number of seconds to delay the reboot.
Examples	<p>Reboots the system immediately.</p> <pre>>system reboot 30</pre> <p>Reboots the system in 30 seconds. The response is in the same form; the system message appears at the end of the delay.</p>	

system factory-reset

Gets or sets the factory reset status. When the factory reset status is on, the system resets to factory defaults on reboot.

Synopsis	system factory-reset { get on off}	
Options	get	Returns the camera's current factory reset status.
	on	Enables factory reset on reboot.
	off	Disables factory reset on reboot.
Examples	 <pre>>system factory-reset get factory-reset (software): off factory-reset (hardware): off OK ></pre> <p>Returns the factory reset status.</p> <p>This evaluates the most recent <code>system factory-reset on</code> or <code>off</code> command, if one has been received, then reads the rear panel DIP switches and returns the status <code>on</code> if they are all in the down position.</p> <pre>>system factory-reset on factory-reset (software): on factory-reset (hardware): off OK ></pre> <p>Enables factory reset upon reboot.</p> <p>Note <i>This command does not initiate a factory reset. The factory reset takes place on the next reboot.</i></p>	

version

Returns the current firmware version.

Synopsis	<code>version</code>
Example	<pre>> version Commit: 206259519382dee2dee2deedee2dee9605f4e40d HDLink: TX4.6.1*0.01-RX4.6.1*0.01 PSoC Version: 1.2 Sensor Version: 06.00 System Version: RoboSHOT IW 1.0.1 OK Returns current firmware version information.</pre>

history


Returns the most recently issued commands from the current Telnet session. Since many of the programs read user input a line at a time, the command history is used to keep track of these lines and recall historic information.

Synopsis	<code>history <limit></code>	
Options	<code><limit></code>	Integer value specifying the maximum number of commands to return.
Examples	<p>history Displays the current command buffer.</p> <p>history 5 Sets the history command buffer to remember the last 5 unique entries.</p>	
Additional information	<p>You can navigate the command history using the up and down arrow keys.</p> <p>This command supports the expansion functionality from which previous commands can be recalled from within a single session. History expansion is performed immediately after a complete line is read.</p> <p>Examples of history expansion:</p> <ul style="list-style-type: none"> * !! Substitute the last command line. * !4 Substitute the 4th command line (absolute as per 'history' command) * !-3 Substitute the command line entered 3 lines before (relative) 	



help

Displays an overview of the CLI syntax.

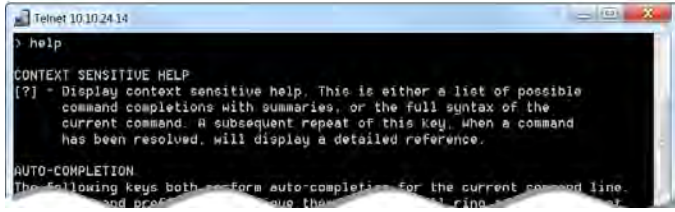Synopsis	help
Example	<p>help</p> 

exit

Ends the command session and then closes the socket.

Synopsis	exit
Example	exit

RS-232 Serial Command Reference

The Vaddio RS-232 Serial Control Protocol is available if the camera is installed with a OneLINK device. It is similar to the Sony® VISCA command set in order to be compatible with several popular control devices. Not all VISCA commands are supported, and there are Vaddio-specific commands in the following command and inquiry lists.

Camera Movement, Zoom, and Focus Commands

Command Set	Command	Command Packet	Comments
CAM_Zoom	Stop	8x 01 04 07 00 FF	Variable speed: p = 0 (low) to 7 (high) Direct: pqrs = zoom position (0h-4000h)
	Tele (std)	8x 01 04 07 02 FF	
	Wide (std)	8x 01 04 07 03 FF	
	Tele (variable)	8x 01 04 07 2p FF	
	Wide (variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	
Corresponds to <code>camera zoom</code> in Telnet API			
CAM_Focus	Stop	8x 01 04 08 00 FF	Variable speed: p = 0 (low) to 7 (high) Direct and Near Limit: pqrs = focus position (1000h – F000h)
	Far (std)	8x 01 04 08 02 FF	
	Near (std)	8x 01 04 08 03 FF	
	Far (variable)	8x 01 04 08 2p FF	
	Near (variable)	8x 01 04 08 3p FF	
	Direct	8x 01 04 48 0p 0q 0r 0s FF	
	Auto Focus	8x 01 04 38 02 FF	
	Manual Focus	8x 01 04 38 03 FF	
	Auto/Manual	8x 01 04 08 10 FF	
	One Push Trigger	8x 01 04 18 01 FF	
	Near Limit	8x 01 04 28 0p 0q 0r 0s FF	
	Corresponds to <code>camera focus</code> in Telnet API		

Command Set	Command	Command Packet	Comments
Pan-TiltDrive	Up	8x 01 06 01 vv ww 03 01 FF	vv= Pan speed (01h-18h)
	Down	8x 01 06 01 vv ww 03 02 FF	ww=Tilt speed (01h-14h)
	Left	8x 01 06 01 vv ww 01 03 FF	
	Right	8x 01 06 01 vv ww 02 03 FF	
	UpLeft	8x 01 06 01 vv ww 01 01 FF	
	UpRight	8x 01 06 01 vv ww 02 01 FF	
	DownLeft	8x 01 06 01 vv ww 01 02 FF	
	DownRight	8x 01 06 01 vv ww 02 02 FF	
	Stop	8x 01 06 01 vv ww 03 03 FF	
	Absolute Position	8x 01 06 02 vv ww 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	0Y0Y0Y0Y = Pan position (90E2h-6BD8h) 0Z0Z0Z0Z = Tilt position (EB99h-3D59h)
Home	8x 01 06 04 FF	Returns the camera to its default position	
Pan-Tilt-ZoomDrive	Up	8x 01 06 0A vv ww rr 03 01 03 FF	vv= Pan speed (01h-18h) ww=Tilt speed (01h-14h)
	Down	8x 01 06 0A vv ww rr 03 02 03 FF	rr=Zoom speed (00h - 07h)
	Left	8x 01 06 0A vv ww rr 01 03 03 FF	
	Right	8x 01 06 0A vv ww rr 02 03 03 FF	
	In	8x 01 06 0A vv ww rr 03 03 01 FF	
	Out	8x 01 06 0A vv ww rr 03 03 02 FF	
	Stop	8x 01 06 0A vv ww rr 03 03 03 FF	
	Home	8x 01 06 0C FF	Returns the camera to the default position and zoom
Pan-Tilt-ZoomDrive	Absolute Position	8x 01 06 0B vv ww 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z 0R 0R 0R 0R FF	0Y0Y0Y0Y = Pan position (90E2h-6BD8h) 0Z0Z0Z0Z = Tilt position (EB99h-3D59h) 0R0R0R0R = Zoom position (0h-4000h) 0R0R0R0R = Zoom position

Command Set	Command	Command Packet	Comments
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	Corresponds to camera preset in Telnet API. p= preset number(0h-0Fh) qr= Speed(01h-18h)
	Set	8x 01 04 3F 01 0p FF	
	Set with 'scene'	8x 01 04 3F 21 0p FF	
	Recall	8x 01 04 3F 02 0p FF	
			Corresponds to camera preset in Telnet API.
CAM_PTZ_PresetSpeed		8x 01 7e 01 0b pp qq rr FF	pp: pan speed (01h-18h) qq: tilt speed (01h-14h) rr: zoom speed (0h-07h)

Movement, Zoom, and Focus Inquiry Commands

Inquiry Command	Command	Response Packet	Comments
Pan-TiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0z 0z 0z 0z FF	www= Pan position zzzz=Tilt Position
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom position
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus position
CAM_FocusModeInq	8x 09 04 38 FF	y0 50 02 FF	Auto focus
		y0 50 03 FF	Manual focus
			Corresponds to camera focus mode get in Telnet API.
CAM_MemoryInq	8x 09 04 3F FF	y0 50 pp FF	pp: Preset number recalled last (00h - 0Fh)
CAM_MemoryStatusInq	8x 09 04 3F 0p FF	y0 50 0p 0q 0r 0s FF	p: Preset number (00h - 0Fh) q: mode (00-std, 10-std /w ccu) rs: speed (0x1-0x18) 1 - 24
CAM_MemSaveInq	8x 09 04 23 0X FF	y0 50 0p 0q 0r 0s FF	X: 00h to 0Fh (preset number) pqrs: 0000h to FFFFh (Data)
CAM_PTZ_PresetSpeedInq	8x 09 7E 01 0B FF	y0 50 p q r FF	p:pan speed (01h-18h) q:tilt speed (01h-14h) r:zoom speed (0h-07h)

Color and Light Management Commands

Command Set	Command	Command Packet	Comments
CAM_WB	Auto	8x 01 04 35 00 FF	Normal auto
	Manual	8x 01 04 35 05 FF	Manual control mode
Corresponds to <code>camera ccu set auto_white_balance</code> in Telnet API.			
CAM_RGain	Reset	8x 01 04 03 00 FF	Manual control of red gain pq = red gain (00h – FFh)
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	
Corresponds to <code>camera ccu set red_gain</code> in Telnet API.			
CAM_BGain	Reset	8x 01 04 04 00 FF	Manual control of blue gain pq = blue gain (00h – FFh)
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	
Corresponds to <code>camera ccu set blue_gain</code> in Telnet API.			
CAM_AE	Auto	8x 01 04 39 00 FF	Auto exposure mode
	Manual	8x 01 04 39 03 FF	Manual control mode
Corresponds to <code>camera ccu set auto_iris</code> in Telnet API.			
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter setting pq = shutter position (00h – 15h) See "Shutter Speed Values (CAM_Shutter)" on page 62
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris setting pq = iris position (0h, 05h-11h) See "Iris Values (CAM_Iris)" on page 63
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	
Corresponds to <code>camera ccu set iris</code> in Telnet API.			
CAM_Gain	Reset	8x 01 04 0C 00 FF	Iris gain setting pq = gain position (01h – 0Fh) p = gain limit (04h-0Fh) See "Iris Gain and Gain Limit Values (CAM_Gain)" on page 63 and "Shutter Speed Values (CAM_Shutter)" on page 62
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 4C 00 00 0p 0q FF	
	+Gain Limit	8x 01 04 2C 0p FF	
Corresponds to <code>camera ccu set gain</code> in Telnet API.			

Command Set	Command	Command Packet	Comments
CAM_BackLight	On	8x 01 04 33 02 FF	Backlight compensation On/Off
	Off	8x 01 04 33 03 FF	
Corresponds to <code>camera ccu set backlight_compensation</code> in Telnet API.			
CAM_WD	On	8x 01 04 3D 02 FF	Wide Dynamic Range On
	Off	8x 01 04 3D 03 FF	Wide Dynamic Range Off
Corresponds to <code>camera ccu set wide_dynamic_range</code> in Telnet API.			
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture setting pq = aperture position (0h-0fh)
	Up	8x 01 04 02 01 FF	
	Down	8x 01 04 02 02 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	
Corresponds to <code>camera ccu set detail</code> in Telnet API.			
CAM_Chroma	Direct	8x 01 7E 55 00 00 0p 0q FF	pq: 00h – 14h
Corresponds to <code>camera ccu set chroma</code> in Telnet API.			
CAM_GammaOffset	Direct	8x 01 04 1E 00 00 00 0s 0t 0u FF	s: polarity offset (0 is plus, 1 is minus) tu: offset s=0 (00h to 40h) offset s=1 (00h to 10h)
Corresponds to <code>camera ccu set gamma</code> in Telnet API.			

Shutter Speed Values (CAM_Shutter)

Value	60/59.94/30/29.97 fps	50/25 fps
0x15	1/10000	1/10000
0x14	1/6000	1/6000
0x13	1/4000	1/3500
0x12	1/3000	1/2500
0x11	1/2000	1/1750
0x10	1/1500	1/1250
0x0F	1/1000	1/1000
0x0E	1/725	1/600
0x0D	1/500	1/425
0x0C	1/350	1/300
0x0B	1/250	1/215
0x0A	1/180	1/150
0x09	1/125	1/120
0x08	1/100	1/100
0x07	1/90	1/75
0x06	1/60	1/50
0x05	1/30	1/25
0x04	1/15	1/12
0x03	1/8	1/6
0x02	1/4	1/3
0x01	1/2	1/2
0x00	1/1	1/1

Iris Values (CAM_Iris)

Value	Iris
0x11	F1.6
0x10	F2
0x0F	F2.4
0x0E	F2.8
0x0D	F3.4
0x0C	F4
0x0B	F4.8
0x0A	F5.6
0x09	F6.8
0x08	F8
0x07	F9.6
0x06	F11
0x05	F14
0x00	CLOSED

Iris Gain and Gain Limit Values (CAM_Gain)

Iris Gain			Iris Gain Limit		
Value	Steps	Gain in dB	Value	Steps	Gain in dB
0x0F	28	77.8	0x0F	28	77.8
0x0E	26	44.4	0x0E	26	44.4
0x0D	24	41.0	0x0D	24	41.0
0x0C	22	37.5	0x0C	22	37.5
0x0B	20	34.1	0x0B	20	34.1
0x0A	18	30.7	0x0A	18	30.7
0x09	16	27.3	0x09	16	27.3
0x08	14	23.9	0x08	14	23.9
0x07	12	20.5	0x07	12	20.5
0x06	10	17.1	0x06	10	17.1
0x05	8	13.7	0x05	8	13.7
0x04	6	10.2	0x04	6	10.2
0x03	4	6.8			
0x02	2	3.4			
0x01	0	0			

Color and Light Management Inquiry Commands

Inquiry Command	Command	Response Packet	Comments
CAM_WBModelInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: Red gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: Blue gain
CAM_AEModelInq	8x 09 04 39 FF	y0 50 00 FF	Auto
		y0 50 03 FF	Manual
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris position
CAM_GainPosInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain position
CAM_WDModelInq	8x 09 04 3D FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_BackLightModelInq	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture gain
CAM_ChromaInq	8x 09 7E 55 FF	y0 50 05 00 00 00 0p FF	p: 0 – Eh
CAM_GammaOffsetInq	8x 09 04 1E FF	y0 50 00 00 00 0s 0t 0u FF	s: Polarity offset (0 is plus, 1 is minus) tu: Offset s=0 (00h to 40h) Offset s=1 (00h to 10h)

Other Commands

Command Set	Command	Command Packet	Comments
CommandCancel		8x 2p FF	p= socket (1 or 2)
CAM_Power	On	8x 01 04 00 02 FF	Power on
	Off	8x 01 04 00 03 FF	Power off
	Corresponds to <code>camera standby</code> in Telnet API.		
CAM_Tally	On	8x 01 7E 01 0A 00 02 FF	
	Off	8x 01 7E 01 0A 00 03 FF	
CAM_NR	--	8x 01 04 53 0p FF	p = noise reduction level (0: off, 1 – 5)
CAM_Mute	On	8x 01 04 75 02 FF	Video mute on/off
	Off	8x 01 04 75 03 FF	
	Toggle	8x 01 04 75 10 FF	
	Corresponds to <code>video mute</code> in Telnet API.		

Command Set	Command	Command Packet	Comments
Smart_Glass_Mode	Auto	81 01 08 0B 02 FF	Operator control is only available in Manual mode.
	Manual	81 01 08 0B 03 FF	
Corresponds to <code>camera glass mode</code> in Telnet API.			
Smart_Glass_Assign	Clear	81 01 08 0A 02 FF	Command only recognized in manual smart glass mode.
	Frosted	81 01 08 0A 03 FF	
Corresponds to <code>camera glass state</code> in Telnet API.			

Other Inquiry Commands

Inquiry Command	Command	Response Packet	Comments
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off (standby)
Corresponds to <code>camera standby get</code> in Telnet API			
CAM_TallyInq	8x 09 7E 01 0A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_NRIInq	8x 09 04 53 FF	y0 50 0p FF	Noise reduction p: 00h to 05h
CAM_MuteModelInq	8x 09 04 75 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
Corresponds to <code>video mute get</code> in Telnet API			
Vaddio_ModelInq	8x 09 08 0e FF	y0 50 05 10 00 00 00 FF	RoboSHOT IW
Smart_Glass_ModelInq	81 09 08 0B FF	90 50 02 FF	Automatic glass control
		90 50 03 FF	Manual glass control
Corresponds to <code>camera glass mode get</code> in Telnet API			
Smart_Glass_AssignInq	81 09 08 0A FF	90 50 02 FF	Glass is clear
		90 50 03 FF	Glass is frosted
Corresponds to <code>camera glass state get</code> in Telnet API			

Specifications

Camera and image

Image device	1/2.8-Type Exmor [®] CMOS sensor		
Pixels	2.14 million (effective), 2.38 million (total)		
Pan and tilt	Pan: +/- 31°, Tilt: +18/-30°		
Lens and horizontal FOV	10x optical zoom, 73.0° (wide) to 6.6° (tele)		
Min. working distance	10mm (wide), 800mm (tele)		
Min. illumination	Recommended: 100+ lux	Gain	Auto/Manual (28 steps)
Backlight compensation	On/off	Aperture/detail	16 steps
Focusing system	Auto Focus, Manual Focus, One Push Trigger Mode, Infinity Mode, Near Limit Mode		
White balance	Auto, ATW, Indoor, Outdoor, One-push, Manual		
Sync system	Internal	S/N ratio	More than 50 dB
Noise reduction	On/Off, 6 Steps	Power	
Remote management	IR Remote Commander, web interface, Telnet and RS-232 command APIs		

Physical and Environmental

Height	10 in. (25.4 cm)	Weight	
Width	15 in. (38.1 cm)	Operating temperature	0°C to +40°C (32°F to 104°F)
Depth	5 in. (12.7 cm) Extends 1.3 in (3.3 cm) from the wall	Operating humidity	20% to 80% RH, non-condensing

Specifications are subject to change without notice.

Troubleshooting and Care

Stuff happens – we get it. Use this information to determine whether it's time to call Vaddio Technical Support.


Check the Status Light First

When the camera doesn't behave as you expect, check the indicator light before you do anything else.

- **Blue:** Normal operation (blinks once when the camera receives a command from the remote)
- **Red:** On-air tally
- **Blinking blue or blinking red:** Video is muted
- **Purple:** In standby mode or booting
- **Yellow:** Firmware update in progress

If the status light is off, check whether it is disabled. (Web interface: System page, DIP Switches tab; Telnet: `camera led get.`)

Identify the Issue


What is it doing?	Possible causes	Check and correct
<p>Nothing. The status light is off, there is no video, and the camera does not respond to the remote.</p> 	The camera is not receiving power.	<p>Is the camera's power source (OneLINK device or PoE+ injector) receiving power?</p> <p>Is the camera's cable connected to the power source?</p> <p>If both are true, either the camera cable or the camera is bad.</p>
	The camera's status light is turned off and the camera is in standby mode.	Point the remote toward the camera and press the Power button.
	The camera's status light is turned off and the remote is not using the same IR channel as the camera.	Push the Camera Select 1 button on the remote. Try the other Camera Select buttons if necessary.
	The camera's status light is off and the camera is confused.	Reboot or power-cycle the camera.
The camera never finishes initializing and the light is purple.	The camera is not receiving enough power. Is a PoE power injector connected?	Use PoE+ instead. PoE does not deliver enough power.

What is it doing?	Possible causes	Check and correct
The camera does not respond to the remote and the light is yellow.	A firmware update is in progress.	Wait a few minutes, and try again when the light turns blue.
The camera responds to the remote but the web interface is not available.	The camera is not using the IP address you browsed to.	Press the Data Screen button on the remote to see camera information.
The camera's web UI is available but the camera does not respond to commands sent via RS-232 connection to the OneLINK device.	The RS-232 cable to the OneLINK device is not connected, or is bad.	Connect a known good cable.
	The camera's baud rate setting doesn't match the settings on the controlling device.	Check the baud rate setting at both ends to be sure they match. The camera's baud rate setting is available on the System page in the web UI.
No H.264 video stream.	Streaming is not enabled.	Enable streaming: Streaming page in the web interface.

Restoring Factory Settings

SYSTEM PAGE, FIRMWARE TAB

Sometimes it's easiest to just start over. To restore the original factory settings...click Restore Factory Settings. This will overwrite everything you have customized – custom CCU scenes and presets, soft DIP switch settings, passwords, room labels, and more. For this reason, you may want to back up (export) the camera's configuration after you set up the customizations you want. See [Saving \(Exporting\) or Restoring \(Importing\) a Configuration](#).

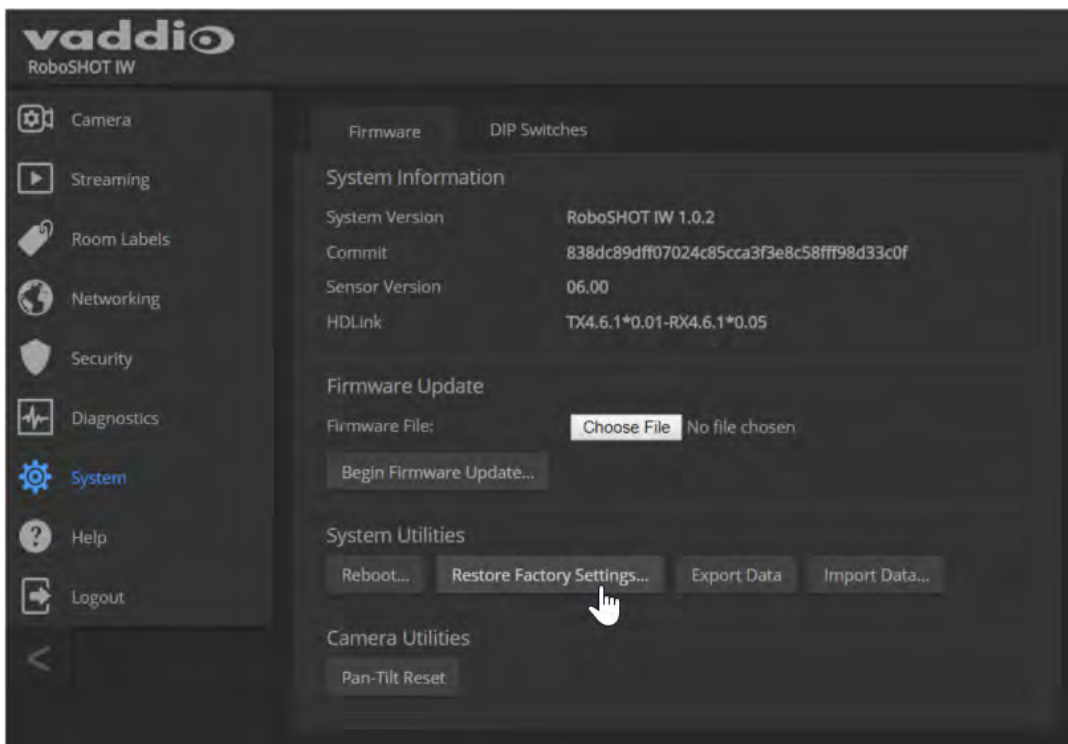


Correcting a Motor Calibration Fault

If the camera is jostled during installation or service, the motors may need to recalibrate. The status light blinks yellow in this case, if it is enabled.

To correct the fault, do one of these things:

- Using the IR Remote Commander: Press the Pan/Tilt Reset button.
- From the web interface: On the System page, select Pan/Tilt Reset.
- Via a Telnet connection, issue the command `camera recalibrate`.

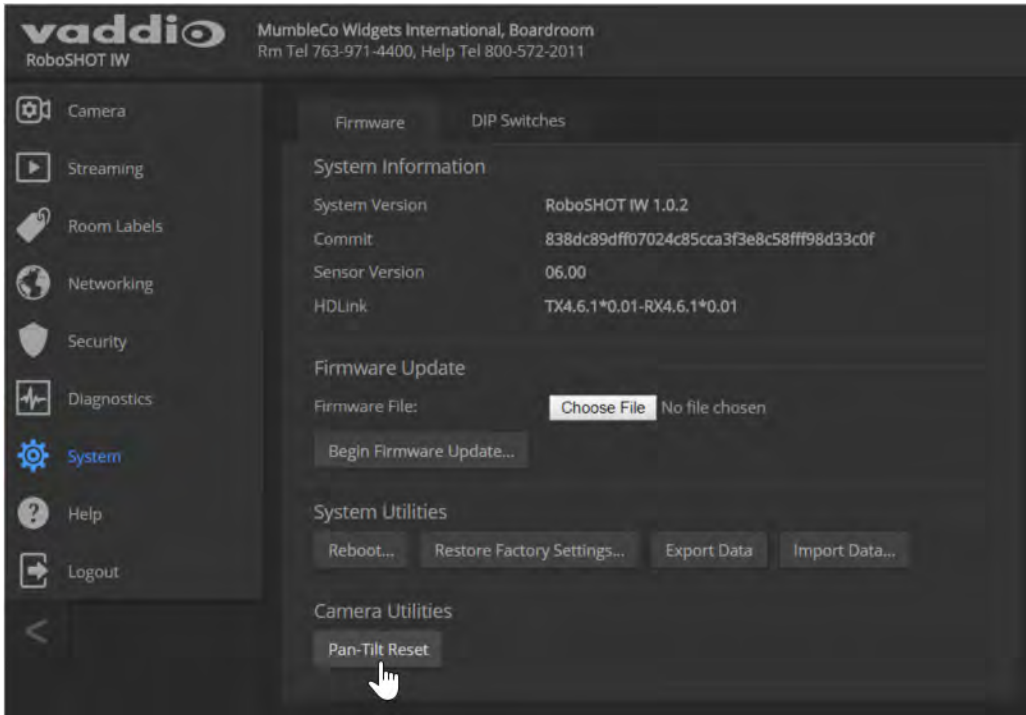

If the camera is controlled by a PCC MatrixMIX controller, you can recalibrate the camera's motors from the controller's touch panel interface.

Operation, Storage, and Care

For smears or smudges on the product, wipe with a clean, soft cloth. Use a lens cleaner on the lens. Do not use any abrasive chemicals.

Keep this device away from food and liquids.

Do not operate or store the device under any of the following conditions:

- Temperatures above 40°C (104°F) or below 0°C (32°F)
- High humidity, condensing or wet environments
- Inclement weather
- Severe vibration
- Lunar environments not pressurized and climate-controlled to Earth-normal
- Dry environments with an excess of static discharge

Do not attempt to take this product apart. There are no user-serviceable components inside.

Compliance Statements and Declarations of Conformity

Compliance testing was performed to the following regulations:

FCC Part 15 (15.107, 15.109), Subpart B	Class A
ICES-003, Issue 54: 2012	Class A
EMC Directive 2014/30/EU	Class A
EN 55032: 2015	Class A
EN 55024: November 2010	Class A
KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)	Class A
IEC 60950-1:2005 (2nd Edition); Am 1: 2009 + Am 2: 2013	Safety
EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013	Safety

FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:



EMC Directive 2014/30/EU

EN 55032: 2015

Conducted and Radiated Emissions

EN 55024: November 2010

Immunity

EN 61000-4-2: 1995 + Amendments A1: 1998 + A2: 2001

Electrostatic Discharge

EN 61000-4-3: 2006 + A1: 2008

Radiated Immunity

EN 61000-4-4: 2004 + Corrigendum 2006

Electrical Fast Transients

EN 61000-4-5: 2006

Surge Immunity

EN 61000-4-6: 2009

Conducted Immunity

EN 61000-4-8: 2010

Power Frequency Magnetic Field

EN 61000-4-11: 2004

Voltage Dips, Interrupts and Fluctuations

KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)

IT Immunity Characteristics

EN 61000-4-2

Electrostatic Discharge

EN 61000-4-3

Radiated Immunity

EN 61000-4-4

Electrical Fast Transients

EN 61000-4-5

Surge Immunity

EN 61000-4-6

Conducted Immunity

EN 61000-4-8

Power Frequency Magnetic Field

EN 61000-4-11

Voltage Dips, Interrupts and Fluctuations

IEC 60950-1: 2005 (2nd Edition); Am 1: 2009 + Am 2: 2013

Safety

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

Safety

Warranty Information

See Vaddio Warranty, Service and Return Policies posted on support.vaddio.com for complete details.

Hardware* warranty: Two (2) year limited warranty on all parts and labor for Vaddio manufactured products. Vaddio warrants its manufactured products against defects in materials and workmanship for a period of two years from the day of purchase, to the original purchaser, if Vaddio receives notice of such defects during the warranty. Vaddio, at its option, will repair or replace products that prove to be defective. Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Exclusions: The above warranty shall not apply to defects resulting from improper or inadequate maintenance by the customer, customer's applied software or interfacing, unauthorized modifications or misuse, mishandling, operation outside the normal environmental specifications for the product, use of the incorrect power supply, modified power supply or improper site operation and maintenance. OEM and special order products manufactured by other companies are excluded and are covered by the manufacturer's warranty.

Vaddio Customer Service: Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises.

Vaddio Technical Support: Vaddio technicians will determine and discuss with the customer the criteria for repair costs and/or replacement. Vaddio Technical Support can be contacted by email at support@vaddio.com or by phone at one of the phone numbers listed on support.vaddio.com.

Return Material Authorization (RMA) number: Before returning a product for repair or replacement request an RMA from Vaddio's technical support. Provide the technician with a return phone number, e-mail address, shipping address, product serial numbers and original purchase order number. Describe the reason for repairs or returns as well as the date of purchase. See the General RMA Terms and Procedures section for more information. RMAs are valid for 30 days and will be issued to Vaddio dealers only. End users must return products through Vaddio dealers. Include the assigned RMA number in all correspondence with Vaddio. Write the assigned RMA number clearly on the shipping label of the box when returning the product. All products returned for credit are subject to a restocking charge without exception. Special order products are not returnable.

Voided warranty: The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, use of incorrect power supply, use of a modified power supply or unauthorized repair.

Shipping and handling: Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.

Products not under warranty: Payment arrangements are required before outbound shipment for all out of warranty products.

Photo Credits

This guide may include some or all of these photos.

European Space Agency (ESA) astronaut Samantha Cristoforetti, a Flight Engineer with Expedition 42, photographs the Earth through a window in the Cupola on the International Space Station

By NASA - https://blogs.nasa.gov/ISS_Science_Blog/2015/03/06/women-in-space-part-two-whats-gender-got-to-do-with-it/, Public Domain, <https://commons.wikimedia.org/w/index.php?curid=38834990>

Carl Sagan, Bruce Murray, Louis Friedman (founders) and Harry Ashmore (advisor), on the occasion of signing the papers formally incorporating The Planetary Society

By credit NASA JPL - JPL, Public Domain, <https://commons.wikimedia.org/w/index.php?curid=1180927>

Main Control Room / Mission Control Room of ESA at the European Space Operations Centre (ESOC) in Darmstadt, Germany

By European Space Agency - ESOC flickr, Credit: ESA - Jürgen Mai, CC BY-SA 3.0-igo,

<https://commons.wikimedia.org/w/index.php?curid=36743173>

Expedition 42 on orbit crew portrait, International Space Station, Mar. 7, 2015 – Barry Wilmore (Commander) Top, Upside down, to the right cosmonaut Elena Serova, & ESA European Space Agency Samantha Cristoforetti. Bottom center US astronaut Terry Virts, top left cosmonauts Alexander Samokutyaev and Anton Shkaplerov.

By NASA - <https://www.flickr.com/photos/nasa2explore/16166230844/>, Public Domain,

<https://commons.wikimedia.org/w/index.php?curid=38931301>

European Space Agency astronaut Luca Parmitano, Expedition 36 flight engineer, outside the International Space Station

By NASA - <http://spaceflight.nasa.gov/gallery/images/station/crew-36/html/iss036e016704.html>, Public Domain, <https://commons.wikimedia.org/w/index.php?curid=27263573>

Chris Cassidy, Luca Parmitano, and Karen Nyberg, ISS, 2013. Photo Credit: NASA

Nicolas Altobelli, Rosetta Scientist at ESA's European Space Astronomy Centre, Villanueva de la Cañada, Madrid, Spain

By European Space Agency - Nicolas Altobelli talks to the media, CC BY-SA 3.0-igo,

<https://commons.wikimedia.org/w/index.php?curid=36743144>

Andrea Accomazzo, ESA Rosetta Spacecraft Operations Manager, providing a live update from the Main Control Room at ESA's European Space Operations Centre, Darmstadt, Germany during the Rosetta wake-up day.

By European Space Agency - Live update from the Main Control Room, CC BY-SA 3.0-igo,

<https://commons.wikimedia.org/w/index.php?curid=36743150>

Sleeping goose

By ladypine - Own work, CC BY-SA 3.0, <https://commons.wikimedia.org/w/index.php?curid=1695227>

Index

A

- admin login 17, 23
 - changing 23
 - default 17
- anatomy of the camera 6
- API 40, 56
 - syntax help 56
- auto focus 32, 44
- auto iris 34, 46-47
- auto white balance 34, 46-47
- automatic NTP updating 22

B

- backing up a configuration 26
- backlight compensation 34, 46-47
- behavior on power-up 13, 35
- bit rate, constant or variable (IP streaming setting) 29
- blue gain 34, 46-47
- browser compatibility 16

C

- cable connector 7
- Camera Control page (web) 38
- camera ID setting (DIP switch) 37
- camera power 10
- camera select 14-15, See also camera ID setting (DIP switch)
- Camera Settings page (web) 33
- camera specifications 66
- camera standby position 38
- capabilities 2, 66
- CCU scenes 33-35, 39, 48
 - custom 34-35, 48
 - recalling 48
- CCU settings 45-47
- cheat sheet 14, 19
 - Vaddio IR Remote Commander 14
 - web interface 19
- chroma setting 34, 46-47
- cleaning 69
- clear glass 49
- color codes for status light 13
- color settings 33-34, 46-47
- colors of the status light 6, 67
- command history 55

- command set, RS-232 (VISCA) 57, 59-60, 62-65
- compatibility, browsers 16
- configuration, saving or restoring 26
- connection example 9-10
- constant bit rate (IP streaming setting) 29
- custom CCU scenes 34
- custom home position, setting 35

D

- damage, preventing 7
- default 16-17, 54, 68
 - admin password 17
 - IP address 16
 - settings, restoring 54, 68
 - user password 17
- detail setting 34, 46-47
- DHCP 21
- diagnostic logs 28
- Diagnostics page (web) 28
- DIP switch settings 37
- directional controls 14-15, 39

F

- factory defaults, restoring 54, 68
- fault isolation 67
- fault, motor calibration, correcting 69
- firmware update 26
- firmware version 26, 55
- focus 14-15, 32, 44
- frosted glass 49

G

- gain 34, 46
 - blue 34
 - red 34
- getting help 27
- glass 48-49, See also smart glass
- guest access 23
 - allowing 23

H

- Help page (web) 27
- home position 35, 39, 41
 - custom 35
- hostname 21

I

- importing a configuration 26

inactive sessions (web interface) 23
 indicator light 6, 13, 37, 51, 67, 69
 blinking yellow 69
 color scheme 37
 meaning of colors 13
 information, conference room 25
 installation requirements 10
 IP address 14-16, 21
 default 16, 21
 IP streaming 29, 31, 52
 enabling or disabling 29
 quality 29
 resolutions and frame rates 29
 settings 29, 31, 52
 IR remote 14-15
 iris settings 34, 46-47

L

labels, room 25
 LED control 51
 light, status indicator 13
 meaning of colors 13
 lighting settings 33-34, 39, 46-48
 log files 28
 login 17
 admin 17
 user 17
 low-power state 38, 51

M

manual focus 14-15, 32, 44
 motor calibration fault, correcting 69
 mounting kit for hard ceilings 10
 mounting the enclosure 11
 to a wall stud 11
 to drywall 11

N

navigation buttons, hiding/showing 18
 network configuration 16, 21, 53
 default 21
 Networking page (web) 21
 NTP server 22

O

OneLINK 10, 67
 opacity 49
 operating environment 69

P

packing lists 3-5
 page 21, 23, 25-29, 33, 38
 Camera Control 38
 Camera Settings 33
 Diagnostics 28
 Help 27
 Networking 21
 Room Labels 25
 Security 23
 Streaming 29
 System 26-27
 pan 36, 41
 direction 36
 speed 36
 pan/tilt recalibration 52
 pan/tilt/zoom 14-15
 pan/tilt/zoom controls 39
 part numbers 3-5
 passwords 17, 23
 admin, default 17
 user, default 17
 performance specifications 66
 physical and environmental specifications 66
 ping command 53
 PoE+ power 10
 power 10, 12-15
 on and off 13-15
 options 10
 to smart glass cover 12
 power-up settings 35
 presets 14-15, 35, 39, 45
 clearing 15
 moving to 39
 recalling 45
 renaming 35
 setting 15, 45
 privacy 49
 product capabilities 2
 product returns and repairs 72

Q

quantization (IP streaming setting) 29
 quick reference 14, 19
 Vaddio IR Remote Commander 14
 web interface 19

R

ready state 38, 51
 rebooting the camera 27, 54
 recalibration, pan and tilt 52
 red gain 34, 46-47
 remote control 14-15
 requirements, installation 8, 10
 reset pan and tilt motors 52
 resolution 29, 50
 IP streaming 29
 setting via API 50
 restoring a configuration 26
 restoring default settings 54, 68
 RJ-45 connector 7
 room information 25
 Room Labels page (web) 25
 RS-232 commands 57, 59-60, 62-65
 setting values 62-63

S

safety requirements 7-8
 saving a configuration 26
 scenes, CCU 33-35, 39
 naming 35
 storing 34
 Scott 33
 Security page (web) 23
 session time-out 23
 settings, default, restoring 54, 68
 site requirements 8
 smart glass 48-49
 controlling transparency 49
 enabling control 48
 soft DIP switches 37
 solving problems 67
 specifications 66
 speed 36, 41-44
 focus 44
 pan/tilt/zoom 36, 41-43
 standby state 38, 51
 start-up behavior, setting 35
 static IP address 21
 status light 13
 meanings of colors 13
 status light, meanings of colors 6, 67
 storage environment 69
 storing a configuration 26

streaming 29
 enabling or disabling 29
 quality 29
 settings 29
 Streaming page (web) 29
 streaming settings 52
 structural requirements 8
 supported web browsers 16
 switch settings 26, 37
 reading from web interface 26
 System page (web) 26-27
 system time 22

T

technical specifications 66
 technical support 27
 Telnet 40, 55-56
 command help 40, 56
 session 40
 session history 55
 session, ending 56
 temperature, operating and storage 69
 tilt 36, 42
 direction 36
 speed 36
 time zone 22
 transparency 49
 troubleshooting 67
 typical installation 9

U

update 26
 user login 17, 23
 changing 23
 default 17

V

Vaddio IR Remote Commander 14
 variable bit rate (IP streaming setting) 29
 version, firmware 55
 VISCA commands 57, 59-60, 62-65
 visual packing list 3-5

W

warranty 7, 72
 web browsers supported 16
 web interface 18, 21, 23, 25-29, 33, 38
 Camera Control page 38
 Camera Settings page 33

Diagnostics page 28
Help page 27
navigation button labels 18
Networking page 21
Room Labels page 25
Security page 23
Streaming page 29
System page 26-27
wide dynamic range setting 34, 46-47

Z

zoom 39, 43
zoom speed 14-15, 36, 43

Vaddio is a brand of Milestone AV Technologies · www.vaddio.com · Phone 800.572.2011 / +1.763.971.4400 · Fax +1.763.971.4464 · Email info@vaddio.com

Visit us at support.vaddio.com for firmware updates, specifications, drawings, manuals, technical support information, and more. Vaddio, RoboSHOT, and OneLINK are trademarks or registered trademarks of Milestone AV Technologies. HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance. Exmor® is a trademark of Sony Corporation. All other brand names or marks are used for identification purposes and are trademarks of their respective owners. In British Columbia, Milestone AV Technologies ULC carries on business as MAVT Milestone AV Technologies ULC.

©2018 Milestone AV Technologies

The logo for Vaddio, featuring the word "vaddio" in a bold, blue, lowercase sans-serif font. The final letter "o" is stylized as a circle with a smaller solid blue circle inside it, and a registered trademark symbol (®) is positioned to the upper right of the circle.