/	\
Search	
Jearen	
	/

<u>SPECTRUM ANALYZERS</u> <u>(/SUPPORT/S/TOPIC/0TO4A00000</u>...

How do I measure FM Deviation with a DSA?

O Dec 11, 2019 . Knowledge

Measuring FM Deviation with a Rigol DSA

General purpose spectrum analyzers like the Rigol DSA series can be used to test the deviation of an FM signal.

In this example, we are going to measure the FM deviation of a 10MHz FM signal with a DSA815. This is Rigol's 1.5GHz spectrum analyzer.

NOTE: We are starting from Factory default settings. See the User's Guide for the instrument you are using to learn more about restoring factory defaults.

1. Set the center frequency of the analyzer to the carrier frequency of the FM signal.

Press FREQ > Press Center Freg > set Center Frequency using the scroll wheel or keypad

2. Set the Span to cover the expected frequency deviation of the input signal.

Press SPAN > press Span > set using the scroll wheel or keypad


3. Set the resolution bandwidth (RBW) to provide the resolution that is required for the test.

Press BW/Det > Press RBW > set using the scroll wheel or keypad

4. Enable a second trace type as Max Hold. We will leave trace 1 (yellow) as a Clear Write type. This will display the input values in "real time" and trace 2 (purple) will provide a histogram of the max values achieved for all scans.

Press Trace/P/F > Select Trace 2 > Set Trace Type to Max Hold

5. Let the instrument scan for a period of time long enough to build a complete envelope of the modulated signals frequency deviation.

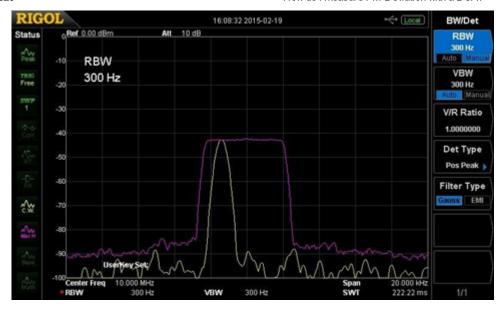

The DSA815 has 10 divisions on the display. The span in this example is 20kHz. So, each division is 2kHz. In this example the FM deviation is approximately 2kHz.

Spectrum Analyzers (/support/s/topic/0TO4A00000Dv...

Rigol USA Web Site (https://www.rigolna.com/)

For Assistance in North America:

Call Us @ 877.474.4651 Email Us @ help@rigol.com www.rigolna.com (https://www.rigolna.com)

For Assistance in Europe:

Call Us @ +49 (0)89-8941895-01 www.rigol.eu (https://www.rigol.eu)

For Assistance in China:

No.8 Ke Ling Road, Hi-tech Development Zone,3 Suzhou, China 21516 info-intl@rigol.com

Sales: +86-512-69585066 Fax: +86-10-80720067

www.rigol.com (https://www.rigol.com)

For Assistance in Other Countries:

info-intl@rigol.com

int.rigol.com (https://int.rigol.com)

Warranty Terms (https://www.rigolna.com/warranty/)
Activate a License (http://licenseen.rigol.com/CustomerService/ProductRight EN)

powered by salesforce