

# EasyIP CeilingMIC D Dante Configuration File

---

## Current Release

### **EasyIP CeilingMIC D Dante Configuration File 1.0.2**

September 21, 2020

#### New Features

- Enabled support for AES67 mode.
- The microphone's Dante chip can now be configured to use a static IP address.

## Release History

### **EasyIP CeilingMIC D Dante Configuration File 1.0.1**

June 24, 2020

#### Notes

- Initial release.

## Dante Configuration File Update Instructions

Your microphone's Dante configuration file updates cannot be installed from the Vaddio product managing the microphone.

You will need:

- The Dante configuration file for your device – download from the device's product page on [www.legrandav.com](http://www.legrandav.com)
- A current copy of Dante Firmware Update Manager – download from Audinate's website: [www.audinate.com/latest-firmware-update-manager](http://www.audinate.com/latest-firmware-update-manager)
- A current copy of the Vaddio Dante Interface Application – download from our website: [www.legrandav.com/tools\\_and\\_training/tools/vaddio\\_tools](http://www.legrandav.com/tools_and_training/tools/vaddio_tools)


### To update the device's Dante configuration file:

1. Download the Dante configuration file from the device's product page on [legrandav.com](http://legrandav.com) or from the Audinate website.
2. Open Dante Firmware Update Manager.



3. Choose the network that will be used (Ethernet may be the only option) and select Next; then select Update Dante Firmware.
4. Browse to the Dante configuration file that you downloaded. The filename ends in .dnt.
5. Select Next. The Dante Firmware Update Manager displays a list of devices available to be updated.
6. Select the device(s) to update with this file.

7. Select Start, then read the confirmation message and select OK to start the update.

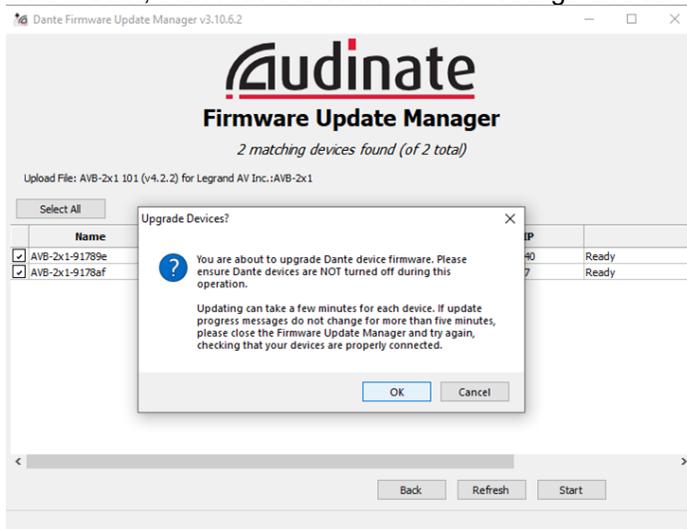

8. When the update finishes, the application displays a success message. Although the message instructs you to reboot the device, we recommend turning it off and back on again.
9. Verify that the device now shows the updated Dante firmware version. You can check this using the Vaddio Dante Interface Application.

#### **Caution**

**The device must remain connected to power and to the network during the update. Interrupting the update could make it unusable.**

If you have any questions, call Vaddio Technical Support: (+1) 763-971-4428 or 1-800-572-2011