




2"X 2" ACRYLIC REMOVABLE THRESHOLD INSTALLATION INSTRUCTIONS

Rev. #: 11/21/2014

1. This product will fit most Clarion Bathware barrier-free units. Please call Clarion Bathware at (800) 576-9228 ext. 822 to confirm that your unit is compatible and for threshold options.
2. Clean the shower threshold and the removable threshold with rubbing alcohol to ensure a good bond.
3. Check the fit of the threshold by performing a "dry-fit" in the shower unit. (*See Fig. 1*) or if the shower has a collapsible rubber threshold (*See Fig. 2*)

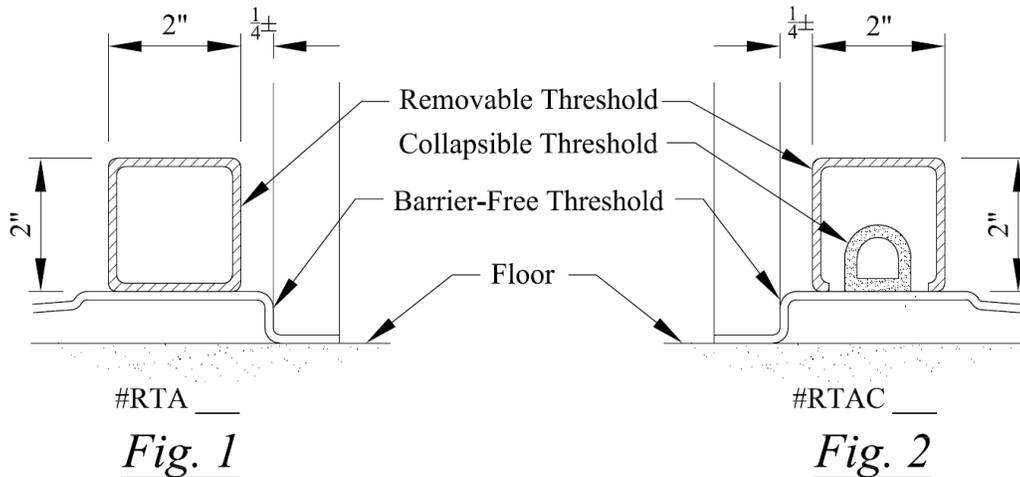

4. Locate the adhesive squares provided. Peel away backing from one side and place at both ends and evenly spaced between the ends. If applying to the removable threshold shown in Fig.2, the squares can be cut in half or fold the excess up into the inside of the threshold. Remove the backing from the other side of the adhesive squares.
5. Place the threshold insert onto the shower threshold, approximately 1/4" from the front edge of the shower threshold, or centered over the collapsible rubber threshold. After ensuring the removable threshold is properly positioned, apply pressure to the top of the removable threshold to seat it firmly in place.
6. Apply a small bead of 100% neutral cure silicone white caulking to the perimeter of the threshold and finish as necessary. We recommend and can supply Silco RTV-7500 silicone. Contact your sales representative for additional information if necessary.
7. Clean up any excess silicone and allow the silicone to dry for at least 24 hours before using the shower.

Please follow the instructions provided on next page for removal of the threshold

Instructions to remove the threshold.

1. Using a sharp utility knife carefully slit the silicone caulking from area between the shower surface and the threshold.
2. Using a plastic putty knife, wooden wedge, or other non-marring instrument carefully pry the removable threshold away from the adhesive tape or silicone holding it into the unit.
3. After the threshold is free from the unit, use a brand new, sharp, plastic putty knife to remove all of the silicone caulking that you can.
4. Any remaining silicone caulking or adhesive should be removed using Naphtha oil.

IF YOU HAVE ANY QUESTIONS REGARDING THE INSTALLATION OR REMOVAL OF THIS PRODUCT, PLEASE CALL CLARION BATHWARE'S CUSTOMER SERVICE DEPARTMENT AT (800) 576-9228 EXT. 818 OR BY E-MAIL AT CUSTOMERSERVICE@CLARIONBATHWARE.COM