SLOAN.

CODE NUMBER

0345154PK

DESCRIPTION

Standard

FEATURES

When using Sloan Optima® "ES-S" flushometers, the transformer must be specified and ordered separately. The following transformers are recommended:


- EL-154 (Box Mount) 120 V AC Input/24 V AC Output, 50/60 Hz, 50 VA (0345154PK)
- EL-342 (Box Mount) 240 V AC Input/24 V AC Output, 50/60 Hz, 50 VA (0345999PK)
- EL-208 (Foot Mount) 120 V AC Input/24 V AC Output, 50/60 Hz, 100 VA (0345211PK)

When using Sloan Optima® ETF or ESF Series faucets, the transformer must be specified and ordered separately. Sloan Optima® ETF Series faucets are typically supplied with a transformer. Transformers supplied with ETF Series faucets:

- ETF-416 (Plug-in for Canada) 120 V AC Input/24 V AC Output, 50/60 Hz, 35 VA (0365879)
- ETF-233 (Plug-in) 120 V AC Input/24 V AC Output, 50/60 Hz, 35 V A (0365534PK) (not shown)
- Some Optima® faucet installations can be powered by a single transformer, provided the transformer is properly sized. Allow a minimum of 15 VA of current rating for each faucet or solenoid valve being used. Specify and order the transformer separately. To order an "ETF" Series faucet less the transformer, specify the "LT" Variation.

NOTES

All information contained within this document subject to change without notice.

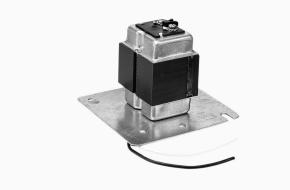

DOWNLOADS

Additional Downloads