

Pedestal - Mobile and Cushion Top

Tools Required

- Drill
- Flat Head Screwdriver
- ¼" and #2 Phillips Tip Bits
- Center Punch
- Round Metal File

Package Contents

- 1 Pedestal
- 4 Casters
- 4 Washers
- 4 Nuts
- 6 Phillips Panhead #10 x ½" AB Screws

General Information

- These instructions provide the basic information to install the casters onto the flat profile mobile pedestal and mobile cushion top pedestal.

Installing Casters

1. Set pedestal on its side. (Figure A).
2. Insert a caster into each threaded mount on the bottom of the pedestal. (Figure A).
3. Place washer and nut onto each caster stem and tighten. (Figure B). (Standard Mobile Pedestal shown).
4. Stand pedestal upright.

Figure A


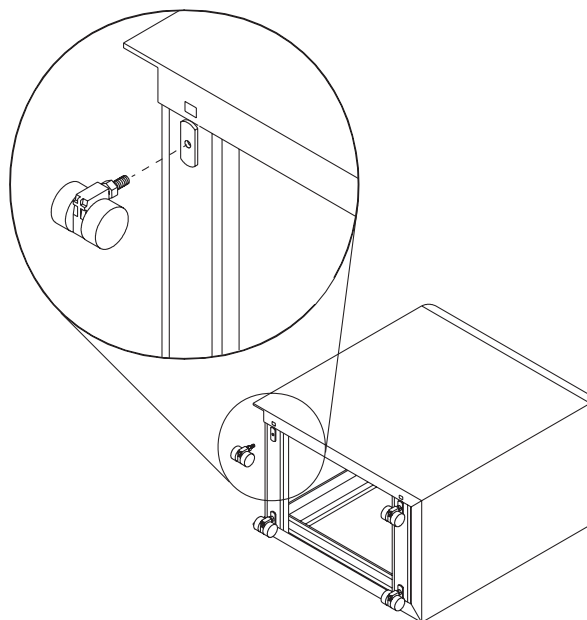


Figure B

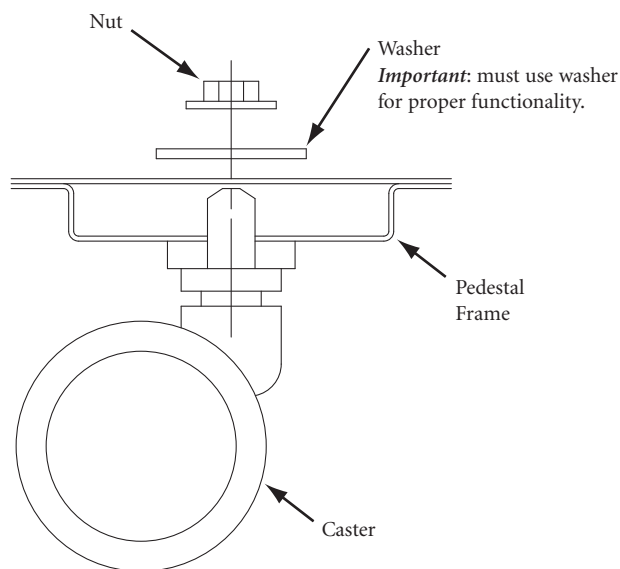

Footprint

Removing Pedestal Drawers

Box Drawer:

1. Begin with top drawer. (Figures C and D). Extend drawer fully. Put one hand underneath drawer. Insert flat head screwdriver between slide and drawer body close to the front engagement area to unlock drawer.
2. Lift front of drawer up to disengage from front drawer slide channel hooks.
3. When front of drawer is disengaged, pull entire drawer towards you, supporting it from the bottom. This should disengage drawer from rear drawer slide channel hooks.
4. Set all drawers aside and slide drawer channels back into case. Do not try to remove the entire drawer slide.

File Drawer:

1. Extend drawer fully. (Figure E).
2. Each drawer slide has a lever: one is depressed, the other is lifted. Simultaneously while lifting and depressing the levers, hold drawer level and pull drawer toward you. This should disengage drawer from pedestal.
3. Set drawer aside and slide drawer channels back into case. Do not try to remove the entire drawer slide.

Figure C

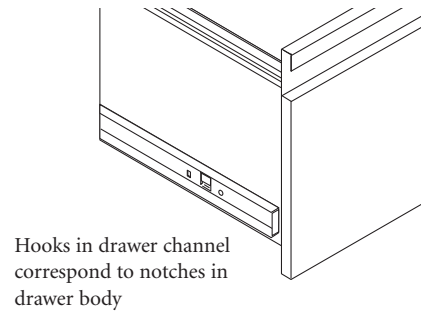


Figure D

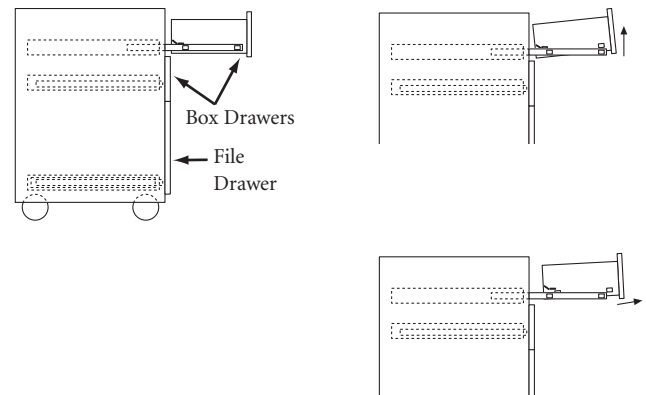


Figure E

