

CLEANING GUIDE

# Furniture Cleaning & Disinfecting Protocols





## Table of Contents

Knowing the Difference: Cleaning, Disinfectant, & Sanitizing.....	3
Antimicrobials.....	4
General Cleaning and Care.....	5
Glass.....	6
Laminate 3D.....	7
Laminate (HPL)	
Woodgrains.....	8
Solid.....	10
Pattern.....	12
Gallery Laminate.....	14
Laminate (TFL).....	16
Paint.....	17
PET.....	18
Polyurethane Arm Caps.....	19
Resin.....	20
Seating	
Mesh.....	21
Plastic.....	24
Textiles Non-Woven.....	25
Textiles Woven.....	30
Solid Surface.....	31
Stone & Concrete.....	36
Vertical Textiles.....	37
Vinyl Edge.....	38
Wood.....	39
Wool Felt.....	40

## Knowing the Difference: Cleaning, Disinfectant, & Sanitizing

Now, more than ever, cleanability is in the forefront of everyone's mind. That's why we've gathered information from our partners to provide you with accurate cleaning and disinfecting information. We're here to help answer questions about cleaning our products so you can provide a safe workspace.

**Cleaning:** Cleaning is the process of removing visible debris, dirt, and dust and organizing a space. Cleaning may or may not kill bacteria and germs, but it will dilute their numbers and aid in lowering the risk of spreading infectious microbes.


- When to Clean: Cleaning should be a routine process that occurs on a daily, weekly, monthly, and seasonal basis. Basic housekeeping maintains order, reduces the growth of potentially harmful organisms, helps keep pests under control, and protects the investment you've made in your home and belongings.

**Sanitizing:** When a product claims to sanitize a surface, it is promising to make the surface free of germs that could be harmful to your health according to public health standards or requirements. Sanitizing reduces, not kills, the number and growth of bacteria, viruses, and fungi.

- When to Sanitize: Sanitization is important for health and hygiene and is particularly important on communal surfaces like counter-tops, doorknobs, light switches, touch-pads, and any surface that comes in contact with body fluids.

**Disinfectant:** The act of disinfecting kills microscopic organisms (germs, viruses, fungi) on surfaces. Disinfecting does not necessarily remove visible dirt and debris from a surface and is much more effective if basic cleaning is done first.

- When to Disinfect: When someone in the workplace is ill or if someone has a compromised immune system. Following label instructions and using disinfectants correctly is vital to killing microorganisms.

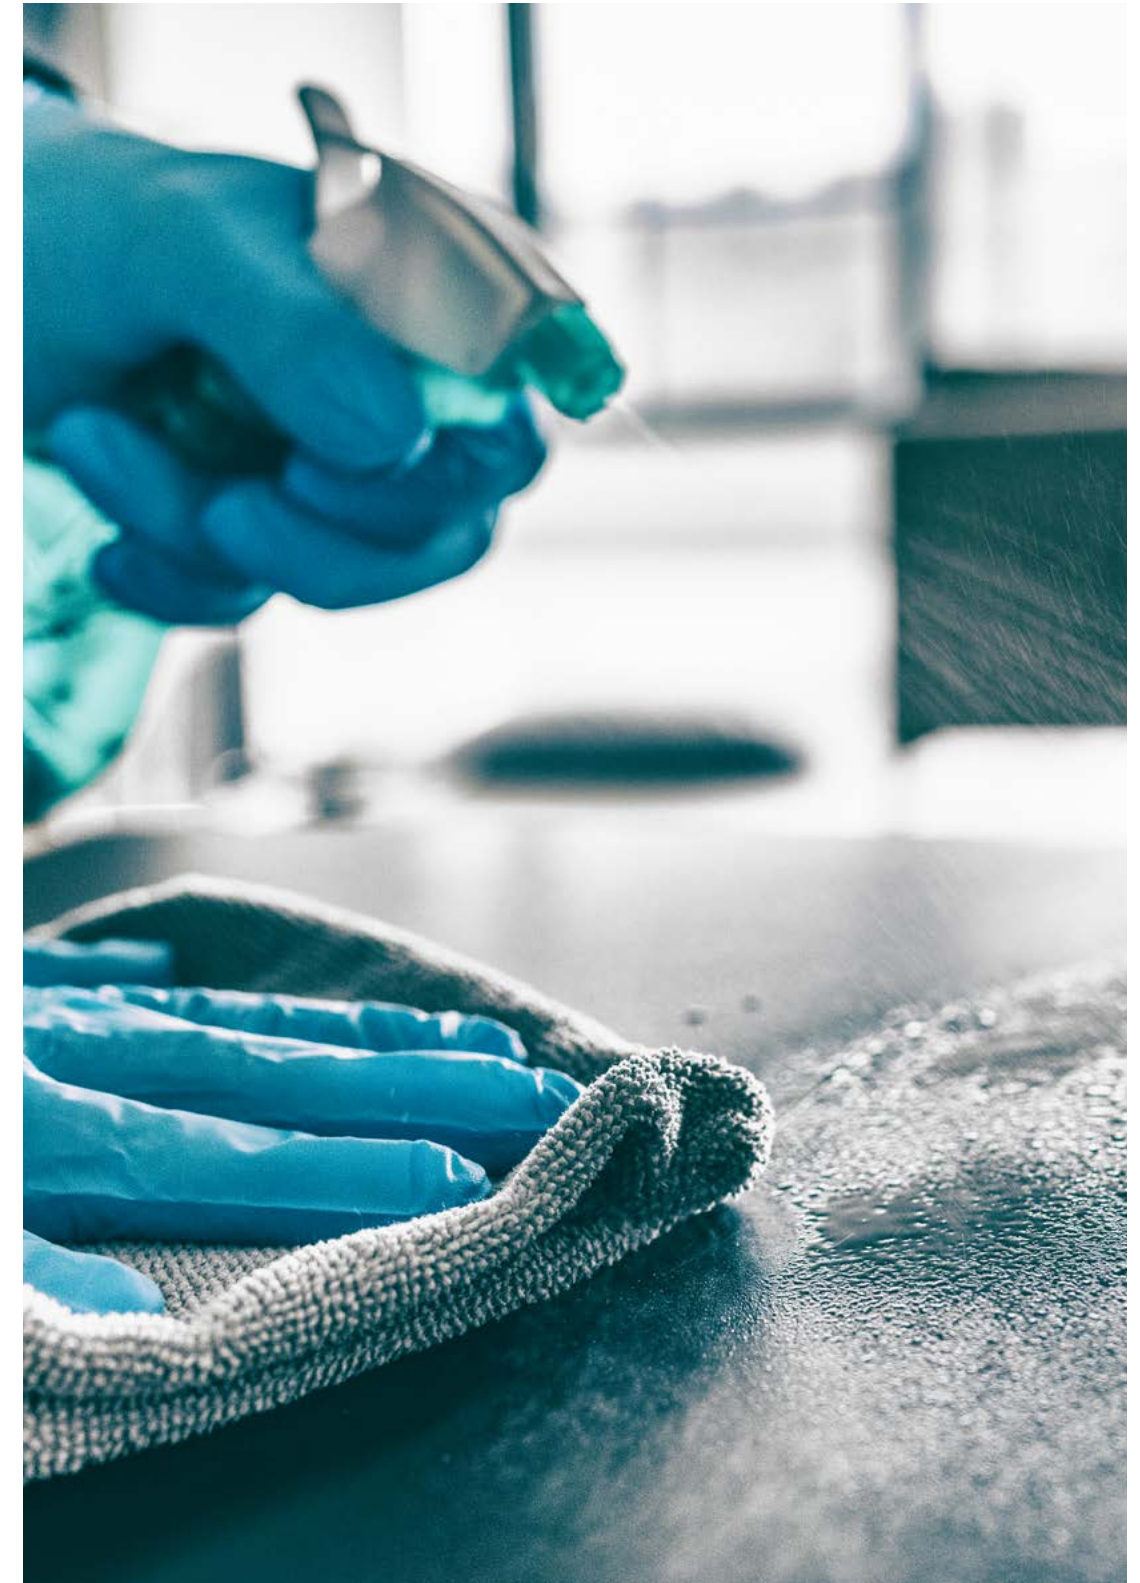

## Antimicrobial

With the current concerns about cleaning and disinfecting, antimicrobials are gaining attention. While antimicrobials were very popular in healing environments for a number of years, research has found they can do more harm than good. Healthcare institutions are learning about this reversal in opinion from a variety of sources, including the Healthier Hospitals Initiative (HHI). Recent studies have shown that bacteria can become immune to the antimicrobial property. Therefore, the bacteria is morphing into a 'super bug'.

According to the FDA, Antimicrobial Resistance is recognized as a growing global threat. In 2014, The White House announced the National Strategy for Combating Antibiotic Resistance Bacteria (CARB), underscoring the need to address antimicrobial resistance. This movement began with a focus around antibiotics and consumables, but has spread to include products for healing environments. The FDA plays an integral role in these efforts.

It's important to understand what antimicrobials in surfaces do. For example, you may find them in kitchen countertops. They claim to protect the surface from the growth of mold and mildew that cause stains and odors. The antimicrobials in those surfaces do not kill microbes. It is there to keep the surface looking and smelling better longer. Another common place to find antimicrobials is textiles. Again, they are protecting the surface from the growth of mold and mildew that cause stains and odors.

With this in mind, most of our surfaces do not contain antimicrobials. We do offer a limited number of materials with antimicrobials for those who do want them. You'll find them mainly in seating upholsteries, however, if you are needing antimicrobials in other materials, you can do so through our COM and CSL programs.

General reading about cleaning/disinfecting/antimicrobials:

[Consumer Reports](#)

[OSHA](#)

[CDC, Disinfecting Building Facilities](#)

[Common Line, Pros and Cons of Antimicrobial Surfaces](#)

[Common Line, Improving Disinfection Outcomes with Electrostatic Technologies](#)

[Common Line, How to Stop Custodian Induced Contamination](#)

[Healthier Hospitals, Safer Chemicals](#)



# Cleaning and Care

## WOOD SURFACE CARE

- Ensure the lasting beauty and performance of your wood furniture with proper use and care.
- Clean surfaces with a water dampened soft cloth; always wipe with the grain and dry the surface completely.
- If needed, clean with a small amount of non-alkaline dish soap in warm water.
- Immediately remove any liquids from the furniture surface with a blotting action.
- Lift objects to remove them; never pull them across the surface.
- For an additional safeguard, use a protective desk pad. The single item could ensure a lasting finish by protecting your furniture from possible damage caused by pens or sharp objects.
- If using a protective glass top, place spacer pads under the glass to allow the wood to breathe.
- Avoid exposing furniture to extreme heat or cold; also avoid wide humidity variance.
- Avoid exposure of furniture to strong sunlight. Prolonged exposure may change the color of wood beneath the finish.
- Wood finishes can withstand cleaning solutions that include bleach (10%), hydrogen peroxide (Virox), alcohol (CaviWipes, hand sanitizers), quaternary ammonium compounds (Virex, Ecolab A-456 II, Lysol) and phenols (Wex-cide) when they are used in accordance with the manufacturer's label instructions.

## LAMINATE, METAL, PAINTED, AND POLYURETHANE SURFACE CARE

- Clean laminate surfaces with a mild soap and water solution. Wipe the surface, moving with the grain on laminate surfaces. Follow up with a clean, dry soft cloth.
- Avoid exposing furniture to extreme heat or cold; also avoid wide humidity variance.

## 3D LAMINATE SURFACE CARE

- Clean 3D laminate surfaces with a mild soap and water solution. Wipe dry with a soft, clean cloth.

## GLASS SURFACE CARE

- Clean as normal with a soft cloth and mild, non-alkaline detergent using moderate pressure
- Detergent must be free of silicone and other polishing additives that may leave a residue causing streaks to form. Abrasive and caustic cleaners are not to be used.
- Excessive pressure or hard scrubbing motions may damage the painted frost glass surface.
- Wipe glass surface until dry; liquids left on the glass may cause staining.

## SOLID SURFACES CARE

- These simple care guidelines provide tips on how to keep your solid surface looking its best:
  - [Caring for Corian Solid Surface](#)
  - [Care & Maintenance for Wilsonart Solid Surfaces](#)

## MARKERBOARD AND WRITABLE GLASS SURFACE CARE

- Expo dry erase markers are recommended for markerboard and writable glass surfaces.
- All other markers are not recommended, as they may leave undesirable results when erased.
- Permanent or non-dry erase markers should not be used.
- Dry erase erasers, not chalk board erasers should be used to remove marker. Replace the erasers when heavily soiled.
- Clean surface with Expo markerboard cleaner. Residue from other types of cleaners may cause markers to smear when erased.
- If ghosting or staining persists after cleaning metal markerboards, see additional cleaning instructions below.

## ADDITIONAL CLEANING INSTRUCTIONS (APPLIES TO METAL MARKERBOARDS ONLY)

1. Erase markings with a clean paper towel
2. If ghosting or stain appears, spray area with Expo Cleaner Cleaning solution
3. Wipe surface with a clean paper towel
4. If ghosting or stain is still present, moisten a small area of a soft, absorbing cloth with Goof-Off House hold Strength
5. Wipe area with Goof-Off moistened cloth
6. Repeat steps 4-5 until stain disappears
7. Spray area with Expo Cleaner Cleaning solution to remove oily residue from Goof-Off
8. Dry surface with clean paper towel

## FABRIC CLEANING AND CARE

### Cleaning Codes

(W) Use water-based cleaning solutions (Resolve™ Upholstery Cleaner, or mix 2 tbsp of ammonia or ammoniated detergent, such as Ajax® liquid, to 1 qt of water). Blot the stain gently with a cloth dampened in this solution. Continue turning the cloth to always use a clean portion.

(S) Use mild, pure, water-free dry cleaning solvents (Energine® or Carbona®). Wet a cloth with the spot cleaner and follow the procedure described above. Cleaning by a professional furniture service is recommended.

## PET

- Blot excess spills from material quickly as possible. Wipe with a damp cloth.
- If stain persists a mild soapy water mixture and damp cloth can be used to rub the stain.
- If stain still persists, use a polyester carpet shampoo cleaner mixed with water, a damp cloth and apply to the affected area (or as per manufacturer's instructions). Blot well after each application.

## TRANSLUCENT/WHITE PVDF TEXTILE

- A lot of contaminations can be removed with hot water.
- Always rub off stains carefully, because powerful mechanical attack can cause damage at the coating or the structure of the screen fabric.
- Cleaning should be done from the outside to the inner side of the stain to avoid dispersing it.
- Most suitable for cleaning is to use an absorbent white cloth; microfiber cloth recommended.
- Repeat the cleaning procedure to remove stubborn stains. If the stains of the dirt is old and dried, it might have a negative effect on complete cleaning.

## FOR OIL AND GREASE

- Use a petroleum ether as a detergent for best results.
- Depending on the type of oil and grease, it may be necessary to repeat the cleaning procedure for several times.

## FOR DUST AND DIRT

- Dust should be moistened with hot water and then rubbed off carefully.
- If the stain is still on the textile, hot water with some detergent "tenside" added may be used. The detergent tenside should be carefully rubbed on to the stained area and then rinsed with fresh water.

## Glass

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Glass	Back Painted Glass
Antimicrobial	No	No
Cleaning	Mild Soap/Water	Mild Soap/Water
Glass Plus®	Yes	Yes*
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes*
Lysol® Wipes	Yes	Yes*
Windex® Original Formula/S.C. Johnson	Yes	Yes*

\*Clean/disinfect the non-painted side only

## Laminate 3D

Clean 3D laminate surfaces with a mild soap and water solution. Wipe dry with a soft, clean cloth. It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	3D LAMINATE
Antimicrobial	Yes*
Cleaning	Mild Soap/Water
Agar™ Powerquat	Yes
Biortrol™ Birex SE®	Yes
Bleach/Water Solution 1:5	Yes
Caltech® Citrace®	Yes
Caltech® Precise® Hospital Foam Cleaner Disinfectant	Yes
Caltech® Precise® QTB Spray	Yes
Clorox® Broad Spectrum Quaternary Disinfectant Cleaner	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes
Clorox Healthcare® Bleach Germicidal Cleaner	Yes
Clorox Healthcare® Bleach Germicidal Wipes	Yes
Clorox Healthcare® EZ-Kill Wipes	Yes
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes	Yes
Current Technologies Bleach-Rite® Disinfecting Spray	Yes
Diversey™ Accel® INTERVENTion Wipes	Yes
Diversey™ Oxivir® 1 RTU	Yes
Diversey™ Oxivir® Tb	Yes
Diversey™ Virex® II 256	Yes
Diversey™ Virox™ AHP® 5	Yes
Ecolab® Asepticare™	Yes
Ecolab® Asepticare™ TB II	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes

DISINFECTANT SUPPLIER/PRODUCT NAME	3D LAMINATE
ERC Performance Wipes	Yes
Fantastik® All-Purpose Cleaner	Yes
Formula 409® Antibacterial All-Purpose Cleaner	Yes
Lysol® Disinfectant Spray	Yes
Lysol® One Step Floor Cleaner	Yes
McKesson Disposable Germicidal Surface Wipes	Yes
McKesson Pro-Tech RTU Disinfectant Cleaner	Yes
Metrex™ CaviCide™	Yes
Metrex™ CaviCide™ AF	Yes
NCL® Avistat-D™ Ready To Use Spray Disinfectant Cleaner	Yes
NCL® Micro-Chem Plus™	Yes
PDI® Sani-Cloth® AF3 Germicidal Disposable Wipes	Yes
PDI® Sani-Cloth® HB Germicidal	Yes
PDI® Sani-Cloth® Plus Germicidal Disposable Wipe	Yes
PDI® Super Sani-Cloth® Germicidal Disposable Wipe	Yes
Russ Medical FADE-A-DYNE II	Yes
Safetec® SaniZide Plus®	Yes
Sani-Kleen Broad-Cide 128	Yes
SciCan OPTIM® 1 Wipes	Yes
SciCan OPTIM® 33TB	Yes
Texas Gulf Industries Santimine 150	Yes
Virox® PREempt™ RTU	Yes
Wexford Wex-Cide 128	Yes

\*The clear overlay/top-coat used on the 3D Laminate naturally inhibits the growth of bacteria. An antimicrobial chemical is not added to this material.

# Laminate HPL – Wood Grain

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Acorn	Almond	Amber	Autumn 2	Brazilwood	Brighton	Caramel	Canyon	Chai	Cordoba	Cordova	Driftwood	Honey 2	Huntington	Judicial	Kona	Midtown	Mocha	Monterey	Natural	Porcini	Portico	Portobello	Sable	Skyline	Sedona	Sonoma	Tribeca	Truffle	Tuscan	Urban	Willow		
<b>Antimicrobial</b>	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	
<b>Cleaning</b>	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain	Mild Soap/ Water with Grain		
<b>3M™ TB Quat Disinfectant RTU</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
<b>Benefect®</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
<b>Bleach/Water Solution 1:10 (10%)</b>	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes	Yes	Yes	Yes
<b>Clear Ammonia All-Purpose Cleaner</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
<b>Clorox® Disinfecting Wipes</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach</b>	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*
<b>Clorox Healthcare® Bleach Germicidal Cleaner</b>	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes	Yes*	Yes*	Yes*	Yes	Yes	Yes	Yes*	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes
<b>Clorox Healthcare® Bleach Germicidal Wipes</b>	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes	Yes*	Yes*	Yes*	Yes	Yes	Yes	Yes*	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes
<b>Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Ultra Clorox® Regular Bleach 8.25%</b>	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*
<b>Diversey™ Expose® II 256</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Diversey™ Oxivir® 1</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Diversey™ Oxivir® 1 RTU</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Diversey™ Oxivir® Five 16</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Diversey™ Oxivir® Tb</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Diversey™ Oxivir® Tb Wipes</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Diversey™ Stride® Floral Neutral Cleaner</b>	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*		Yes*	Yes*	Yes*	Yes*	Yes*	Yes*		Yes*	Yes*	Yes*	Yes*		Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	
<b>Diversey™ Virex® II 256</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Ecolab® A-456® II</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Ecolab® Endure Hand Sanitizer</b>	Yes*	Yes*	Yes*	Yes*	Yes*		Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes
<b>Ecolab® Klercide™ 70/30 IPA</b>	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes
<b>Ecolab® Oxycide™ Daily Disinfectant Cleaner</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Ethanol 95%</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Evaclean™ Purtabs</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
<b>Fantastik® All-Purpose Cleaner</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
<b>Formula 409® Antibacterial All-Purpose cleaner</b>	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes



# Laminate HPL – Wood Grain, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Acorn	Almond	Amber	Autumn 2	Brazilwood	Brighton	Caramel	Canyon	Chai	Cordoba	Cordova	Driftwood	Honey 2	Huntington	Judicial	Kona	Midtown	Mocha	Monterey	Natural	Porcini	Portico	Portobello	Sable	Skyline	Sedona	Sonoma	Tribeca	Truffle	Tuscan	Urban	Willow
Gclean® G200 Surface Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Glass Plus®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Hillyard Foaming Hand Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (91%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Max Cover Mist	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® One Step Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Metrex™ CaviWipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Metrex™ Caviwipes™ Bleach	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*
Mr. Clean®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
PDI® Sani-Prime® Germicidal Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PDI® Super Sani-Cloth® Germicidal Disposable Wipe	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Pine Sol All Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PURELL Advanced Instant Hand Sanitizer	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*
Purell® Professional Surface Disinfectant Wipes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*	Yes*
Simple Green®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
SSS® Sanotracin	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Steris LpH®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Unimed Accel® TB	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Victoria Bay RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Virox® PREempt™ RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Wexford Wex-Cide 128	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Windex®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Laminate HPL – Solid

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Antique White	Chamois	Cinder	Cinder Linear	Cloud	Dapple	Designer White	Designer White Linear	Fog	Frosty White	Graphite	Platinum Grey	Sandstone	Shadow	Storm	Wallaby	Dry Erase/Writeable Marker-board
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Cleaning	Mild Soap/Water with Grain	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water with Grain	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water with Grain	Mild Soap/Water with Grain	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water
3M™ TB Quat Disinfectant RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Benefect®	Yes			Yes		Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	No
Bleach/Water Solution 1:10 (10%)	Yes*	Yes	Yes	Yes*	Yes	Yes	Yes	Yes*	Yes	Yes	Yes	Yes*	Yes*	Yes	Yes	Yes	
Clear Ammonia All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Clorox® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes*	Yes	Yes	Yes	Yes	Yes*	Yes	Yes	Yes*	Yes	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Clorox Healthcare® Bleach Germicidal Cleaner	Yes*	Yes	Yes	Yes	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Clorox Healthcare® Bleach Germicidal Wipes	Yes*	Yes	Yes	Yes	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Ultra Clorox® Regular Bleach 8.25%	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Diversey™ Expose® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Diversey™ Oxivir® 1	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Diversey™ Oxivir® 1 RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Diversey™ Oxivir® Five 16	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Diversey™ Oxivir® Tb	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Diversey™ Oxivir® Tb Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Diversey™ Stride® Floral Neutral Cleaner	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes	Yes*	No
Diversey™ Virex® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Ecolab® A-456® II	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Ecolab® Endure Hand Sanitizer	Yes*	Yes	Yes*	Yes	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes	Yes	Yes*	Yes*	Yes*	Yes	No
Ecolab® Klercide™ 70/30 IPA	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Ethanol 95%	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Evaclean™ Purtabs	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Fantastik® All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Formula 409® Antibacterial All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No

## Laminate HPL – Solid, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Antique White	Chamois	Cinder	Cinder Linear	Cloud	Dapple	Designer White	Designer White Linear	Fog	Frosty White	Graphite	Platinum Grey	Sandstone	Shadow	Storm	Wallaby	Dry Erase/Writeable Marker-board
Gclean® G200 Surface Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Glass Plus®	Yes			Yes		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Hillyard Foaming Hand Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Isopropyl/Rubbing Alcohol (91%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	No
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Lysol® Disinfectant Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Lysol® Disinfectant Max Cover Mist	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Lysol® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Lysol® One Step Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Metrex™ CaviWipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Metrex™ CaviWipes™ Bleach	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Mr. Clean®	Yes			Yes		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes		Yes	No
PDI® Sani-Prime® Germicidal Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
PDI® Super Sani-Cloth® Germicidal Disposable Wipe	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Pine Sol All Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
PURELL Advanced Instant Hand Sanitizer	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Purell® Professional Surface Disinfectant Wipes	Yes*	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	No
Simple Green®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
SSS® Sanotracin	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Steris LpH®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Unimed Accel® TB	Yes			Yes		Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	No
Victoria Bay RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Virox® PREempt™ RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Wexford Wex-Cide 128	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Windex®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Laminate HPL – Pattern

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Black Fusion	Calacatta Marble	Elemental Concrete	Flax Gauze	Grey Glace	Jet Sequoia	Misted Zephyr	Silicon Evolv	Smoke Quarstone	Titanium Evolv	White Nebula	White Tigris
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No	No
Cleaning	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water	Mild soap/water
3M™ TB Quat Disinfectant RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Benefect®					Yes		Yes	Yes		Yes	Yes	Yes
Bleach/Water Solution 1:10 (10%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Clear Ammonia All-Purpose Cleaner					Yes		Yes	Yes		Yes	Yes	Yes
Clorox® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Clorox Healthcare® Bleach Germicidal Cleaner	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Clorox Healthcare® Bleach Germicidal Wipes	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ultra Clorox® Regular Bleach 8.25%	Yes		Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Diversey™ Expose® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® 1	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® 1 RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® Five 16	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® Tb	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® Tb Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Stride® Floral Neutral Cleaner					Yes*		Yes*	Yes		Yes	Yes	Yes*
Diversey™ Virex® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® A-456® II	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Endure Hand Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Klercide™ 70/30 IPA	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ethanol 95%	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Evaclean™ Purtabs					Yes		Yes	Yes		Yes	Yes	Yes
Fantastik® All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Formula 409® Antibacterial All-Purpose cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Laminate HPL – Pattern, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Black Fusion	Calacatta Marble	Elemental Concrete	Flax Gauze	Grey Glace	Jet Sequoia	Misted Zephyr	Silicon Evolv	Smoke Quarstone	Titanium Evolv	White Nebula	White Tigris
Gclean® G200 Surface Sanitizer					Yes		Yes	Yes		Yes	Yes	Yes
Glass Plus®					Yes		Yes	Yes		Yes	Yes	Yes
Hillyard Foaming Hand Sanitizer					Yes		Yes	Yes		Yes	Yes	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (91%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner					Yes		Yes	Yes		Yes	Yes	Yes
Lysol® Disinfectant Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Max Cover Mist			Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® One Step Floor Cleaner					Yes		Yes	Yes		Yes	Yes	Yes
Metrex™ CaviWipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Metrex™ CaviWipes™ Bleach	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Mr. Clean®					Yes		Yes	Yes		Yes	Yes	Yes
PDI® Sani-Prime® Germicidal Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PDI® Super Sani-Cloth® Germicidal Disposable Wipe	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Pine Sol All Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PURELL Advanced Instant Hand Sanitizer	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Purell® Professional Surface Disinfectant Wipes	Yes	Yes	Yes	Yes	Yes*	Yes	Yes*	Yes*	Yes	Yes*	Yes*	Yes*
Simple Green®	No	No	No	No	Yes	No	Yes	Yes	No	Yes	Yes	Yes
SSS® Sanotracin	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Steris LpH®	No	No	No	No	Yes	No	Yes	Yes	No	Yes	Yes	Yes
Unimed Accel® TB	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Victoria Bay RTU					Yes		Yes	Yes		Yes	Yes	Yes
Virox® PREempt™ RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Wexford Wex-Cide 128	No	No	No	No	Yes	No	Yes	Yes	No	Yes	Yes	Yes
Windex®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Laminate HPL – Gallery Laminate

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Citadel	Evening Notte	Kirsche	Midnight Run	Pepperdust	Phantom Ecrú	Planked Raw Oak	Sepia Walnut	Serotina	Timeless	White Nebbia
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No
Cleaning	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water	Mild soap/ water
3M™ TB Quat Disinfectant RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Benefect®		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Bleach/Water Solution 1:10 (10%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Clear Ammonia All-Purpose Cleaner		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Clorox® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Clorox Healthcare® Bleach Germicidal Cleaner	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Clorox Healthcare® Bleach Germicidal Wipes	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ultra Clorox® Regular Bleach 8.25%	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Diversey™ Expose® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® 1	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® 1 RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® Five 16	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® Tb	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Oxivir® Tb Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Stride® Floral Neutral Cleaner		Yes*	Yes*	Yes*	Yes*	Yes*		Yes*	Yes*	Yes*	Yes*
Diversey™ Virex® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® A-456® II	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Endure Hand Sanitizer	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Ecolab® Klercide™ 70/30 IPA	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ethanol 95%	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Evaclean™ Purtabs		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Fantastik® All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Formula 409® Antibacterial All-Purpose cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Laminate HPL – Gallery Laminate, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Citadel	Evening Notte	Kirsche	Midnight Run	Pepperdust	Phantom Ecrú	Planked Raw Oak	Sepia Walnut	Serotina	Timeless	White Nebbia
Gclean® G200 Surface Sanitizer		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Glass Plus®		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Hillyard Foaming Hand Sanitizer		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (91%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Lysol® Disinfectant Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Max Cover Mist	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® One Step Floor Cleaner		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Metrex™ CaviWipes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Metrex™ CaviWipes™ Bleach	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Mr. Clean®		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
PDI® Sani-Prime® Germicidal Spray	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PDI® Super Sani-Cloth® Germicidal Disposable Wipe	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Pine Sol All Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PURELL Advanced Instant Hand Sanitizer	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Purell® Professional Surface Disinfectant Wipes	Yes	Yes*	Yes*	Yes*	Yes*	Yes*	Yes	Yes*	Yes*	Yes*	Yes*
Simple Green®	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
SSS® Sanotracin	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Steris LpH®	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Unimed Accel® TB	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Victoria Bay RTU		Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Virox® PREempt™ RTU	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Wexford Wex-Cide 128	No	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes
Windex®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Laminate TFL

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\* Causes slight change of gloss or color.

DISINFECTANT SUPPLIER/PRODUCT NAME	Thermally Fused Laminate (TFL)
Antimicrobial	No
Cleaning	Mild Soap/ Water w. Grain
3M™ TB Quat Disinfectant RTU	Yes
Benefect®	Yes
Bleach/Water Solution 1:10 (10%)	Yes*
Clear Ammonia All-Purpose Cleaner	Yes
Clorox® Disinfecting Wipes	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes*
Clorox Healthcare® Bleach Germicidal Cleaner	Yes*
Clorox Healthcare® Bleach Germicidal Wipes	Yes*
Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes	Yes
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes	Yes
Ultra Clorox® Regular Bleach 8.25%	Yes*
Diversey™ Expose® II 256	Yes
Diversey™ Oxivir® 1	Yes
Diversey™ Oxivir® 1 RTU	Yes
Diversey™ Oxivir® Five 16	Yes
Diversey™ Oxivir® Tb	Yes
Diversey™ Oxivir® Tb Wipes	Yes
Diversey™ Stride® Floral Neutral Cleaner	Yes*
Diversey™ Virex® II 256	Yes
Ecolab® A-456® II	Yes
Ecolab® Edure Hand Sanitizer	Yes*
Ecolab® Klercide™ 70/30 IPA	Yes*
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes
Ethanol 95%	Yes

DISINFECTANT SUPPLIER/PRODUCT NAME	Thermally Fused Laminate (TFL)
Evaclean™ Purtabs	Yes
Fantastik® All-Purpose Cleaner	Yes
Formula 409® Antibacterial All-Purpose cleaner	Yes
Gclean® G200 Surface Sanitizer	Yes
Glass Plus®	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes
Lysol® Disinfectant Spray	Yes
Lysol® Disinfectant Max Cover Mist	Yes
Lysol® Disinfecting Wipes	Yes
Lysol® One Step Floor Cleaner	Yes
Metrex™ CaviWipes™ Bleach	Yes*
Mr. Clean®	Yes
PDI® Sani-Prime® Germicidal Spray	Yes
PDI® Super Sani-Cloth® Germicidal Disposable Wipe	Yes
Pine Sol All Purpose Cleaner	Yes
Purell® Advanced Instant Hand Sanitizer	Yes*
Purell® Professional Surface Disinfectant Wipes	Yes*
Simple Green®	Yes
SSS® Sanotracin	Yes
Steris LpH®	Yes
Unimed Accel® TB	Yes
Victoria Bay RTU	Yes
Virox® PREempt™ RTU	Yes
Wexford Wex-Cide 128	Yes
Windex®	Yes



## Paint

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Paint
Antimicrobial	No
Cleaning	Mild Soap/Water
Bioesque™ Botanical Disinfectant	Yes
Bleach/Water Solution 1:10 (10%)	Yes
Clear Ammonia All-Purpose Cleaner	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes
Diversey™ Virex® II 256	Yes
Ecolab® A-456® II	Yes
Ecolab® Endure 320 Hand Sanitizer	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes
Ecolab® Peroxide Multi-Surface Cleaner and Disinfectant	Yes
Ethanol 95%	Yes
Evaclean™ Purtabs	Yes
Formula 409® Antibacterial All-Purpose cleaner	Yes
GClean® G200 Surface Sanitizer	Yes
Hillyard Foaming Hand Sanitizer	Yes

DISINFECTANT SUPPLIER/PRODUCT NAME	Paint
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes
Isopropyl Alcohol (70% solution)	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes
Lysol® Disinfectant Spray	Yes
Lysol® Disinfectant Max Cover Mist	Yes
Lysol® Disinfecting Wipes	Yes
Lysol® One Step Floor Cleaner	Yes
Lysol® Disinfecting Wipes	Yes
Nixall® Disinfectant/Sanitizer	Yes
Pine Sol All-Purpose Cleaner	Yes
ProKure® V	Yes
SIMPLE GREEN®	Yes
SSS® Sanotracin	Yes
Vital Oxide®	Yes
Wexford Wex-Cide 128	Yes
Windex® Original Formula/S.C. Johnson	Yes

## PET

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.  
The bleach solution should be sprayed to apply the solution as a mist and then wipe off the surface moisture to help spread the bleach solution

DISINFECTANT SUPPLIER/PRODUCT NAME	PET
Antimicrobial	No
Cleaning	Mild Soap/Water
Bleach/Water Solution 1:10 (10%)	Yes
Clear Ammonia All-Purpose Cleaner	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes
Diversey™ Virex® II 256	Yes
Ecolab® A-456® II	Yes
Ecolab® Endure 320 Hand Sanitizer	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes
Ethanol 95%	Yes
Evaclean™ Purtabs	Yes
Gclean® G200 Surface Sanitizer	Yes
Hillyard Foaming Hand Sanitizer	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes
Isopropyl Alcohol (70%)	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes
Lysol® Disinfectant Spray	Yes
Lysol® Disinfectant Max Cover Mist	Yes
Lysol® Disinfecting Wipes	Yes
Lysol® One Step floor cleaner	Yes
Pine Sol All-Purpose Cleaner	Yes
Simple Green®	Yes
SSS® Sanotracin	Yes
Wexford Wex-Cide 128	Yes

## Polyurethane Arm Caps

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Polyurethane Arm Caps
Antimicrobial	No
Cleaning	Mild Soap/Water
Bleach/Water Solution 1:10 (10%)	Yes
Clear Ammonia All-Purpose Cleaner	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes
Diversey™ Virex® II 256	Yes
Ecolab® A-456® II	Yes
Ecolab® Endure 320 Hand Sanitizer	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes
Ethanol 95%	Yes
Evaclean™ Purtabs	Yes
Gclean® G200 Surface Sanitizer	Yes
Hillyard Foaming Hand Sanitizer	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes
Isopropyl Alcohol (70%)	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes
Lysol® Disinfectant Spray	Yes
Lysol® Disinfectant Max Cover Mist	Yes
Lysol® Disinfecting Wipes	Yes
Lysol® One Step Floor Cleaner	Yes
Pine Sol All-Purpose Cleaner	Yes
Simple Green®	Yes
SSS® Sanotracin	Yes
Wexford Wex-Cide 128	Yes

## Resin

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Alpine White, Mist, Breeze, Glacier	Frosted and Clear Acrylic	Polycarbonate (Fluted semi-opaque)
Antimicrobial	No	No	No
Cleaning	mild soap/water	mild soap/water	mild soap/water
Behold Furniture Polish (Industrial)	No Effect		
Bioesque Botanical Disinfectant	No Effect		
Bleach (10% dilution)	No Effect	No Effect	No Effect
Brilliance® Plastic Cleaner		No Effect	
Certol Pro Spray (Phenolic)	No Effect		
Clear Ammonia All-Purpose cleaner	No Effect	No Effect	No Effect
Clorox Bleach Germicidal Cleaner	No Effect		
Clorox Healthcare® Bleach Germicidal Wipes		No Effect	
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach		No Effect	No Effect
Diversey Virex II 256 Disinfectant Cleaner (Quaternary Ammonium)	No Effect	No Effect	
Ecolab A-456 II	No Effect	No Effect	No Effect
Ecolab® Endure 320 Hand Sanitizer	No Effect	No Effect	No Effect
Ecolab Floor Cleaner	No Effect		
Ecolab Multi-Surface Cleaner	No Effect		
Ecolab® Oxycide™ Daily Disinfectant Cleaner		No Effect	No Effect
Ethanol 95%	No Effect	No Effect	No Effect
Evaclean™ Purtabs		No Effect	
Gclean G200	No Effect	No Effect	

DISINFECTANT SUPPLIER/PRODUCT NAME	Alpine White, Mist, Breeze, Glacier	Frosted and Clear Acrylic	Polycarbonate (Fluted semi-opaque)
Hillyard Foaming Hand Sanitizer	No Effect	No Effect	No Effect
Isopropyl Alcohol 70%	No Effect	No	No Effect
Isopropyl Alcohol (30% solution)		No Effect	
Jay-Kem pH Neutral Commercial Floor Cleaner	No Effect	No Effect	No Effect
Lysol® Disinfectant Spray		No Effect	No Effect
Lysol® Disinfectant Max Cover Mist		No Effect	No Effect
Lysol® Disinfecting Wipes		No Effect	No Effect
Lysol® One Step Floor Cleaner		No Effect	No Effect
Nixall	No Effect		
Novus® Plastic Clean and Shine		No Effect	
Perspiration (Pickering Labs)	No Effect		
Pine Sol All-Purpose Cleaner	No Effect	No Effect	No Effect
Purtabs	No Effect		
Oxycide Cleaner	No Effect		
SSS® Sanotracin (Hydrogen Peroxide - This is not Hydrogen Peroxide Vapor/Mist)	No Effect	No Effect	No Effect
Simple Green	No Effect	No Effect	No Effect
Vaseline Intensive Repair	No Effect		
Wex-cide 128 Germicidal Detergent (per label)	No Effect		
Wexford Wex-Cide 128		No Effect	No Effect
Windex® Original Formula		No Effect	No Effect
Vital Oxide	No Effect		

## Seating – Mesh

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	CHADDY	FIERCE	HELIO	JIMINY	JOYA Standard Black	JOYA Premium Black	JOYA Premium White	LAUDIO Black	LAUDIO Blue, Green, Light Grey, Medium Grey, Red	LAVORO	MELORA Black with Black Accent, Black with Grey Accent, Black with White Accent	MIX-IT	VORA Black	VORA Grey	WHIRL Black	WHIRL Blue, Medium Grey, White, Green, Red	WISH Raven, Quick Silver, and Grey
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Cleaning	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W
Bioesque® Botanical Disinfectant	Yes		Yes				Yes				Yes				Yes	Yes	
Bleach/Water Solution 1:4					No												
Bleach/Water Solution 1:5					No												
Bleach/Water Solution 1:10 (10%)	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	No	Yes	No	Yes
Caltech® Dispatch® (1:10 dilution)					No												
Certol Pro Spray	Yes		Yes				Yes				Yes				Yes	Yes	
Citrus H2O2				Yes	Yes					Yes		Yes					
Clear Ammonia All-Purpose Cleaner	Yes		Yes			Yes	Yes				Yes				Yes	Yes	Yes
Clorox Bleach Germicidal Cleaner	Yes		Yes			Yes	Yes				Yes				Yes	Yes	Yes
Clorox® Clean-Up® with Bleach					No												
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach					No	Yes	Yes				Yes						
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant Towels with Bleach					No												
CloroxPro™ Germicidal Bleach					No												
Clorox Healthcare® Bleach Germicidal Cleaner					No												
Clorox Healthcare® Bleach Germicidal Wipes					No												
Contec® PeridoxRTU®					Yes												
Current Technologies Bleach-Rite® Disinfecting Spray					No												
Diversey™ Oxivir® 1					Yes												
Diversey™ Oxivir® 1 RTU					Yes												
Diversey™ Oxivir® Tb					Yes												
Diversey™ Oxivir® Tb Wipes					Yes												
Diversey™ Virex®		Yes		Yes				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Diversey™ Virex® II 256	Yes		Yes		Yes	Yes	Yes				Yes				Yes	Yes	Yes
Diversey™ Virox™ AHP® 5 RTU		Yes		Yes				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Ecolab® A-456® II	Yes		Yes		Yes	Yes	Yes				Yes				Yes	Yes	Yes

## Seating – Mesh, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	CHADDY	FIERCE	HELIO	JIMINY	JOYA Standard Black	JOYA Premium Black	JOYA Premium White	LAUDIO Black	LAUDIO Blue, Green, Light Grey, Medium Grey, Red	LAVORO	MELORA Black with Black Accent, Black with Grey Accent, Black with White Accent	MIX-IT	VORA Black	VORA Grey	WHIRL Black	WHIRL Blue, Medium Grey, White, Green, Red	WISH Raven, Quick Silver, and Grey
Ecolab® DisCide®		Yes		Yes				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Ecolab® Endure 320 Hand Sanitizer					Yes	Yes	Yes				Yes						Yes
Ecolab® High Performance Neutral Floor Cleaner	Yes		Yes				Yes				Yes				Yes		Yes
Ecolab® Multi-Surface Cleaner	Yes		Yes				Yes				Yes				Yes	Yes	
Ecolab® Neutral Disinfectant Cleaner						Yes	Yes				Yes						
Ecolab® Virasept™					Yes												
Endure 320	Yes		Yes												Yes	Yes	
ERC Performance Wipes				No								Yes					
Ethanol 95%	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Evaclean™ Purtabs						Yes	Yes				Yes						
Fiberlock Shockwave				Yes						Yes		Yes					
Formula 409® Antibacterial All-Purpose Cleaner: 1:1 solution							Yes				Yes						
Gclean® G200 Surface Sanitizer	Yes		Yes			Yes	Yes				Yes				Yes	Yes	
Hillyard Foaming Hand Sanitizer	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)					Yes	Yes	Yes				Yes						Yes
Isopropyl Alcohol (50% solution)	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes		Yes		Yes	Yes	Yes				Yes				Yes	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes		Yes			Yes	Yes				Yes				Yes	Yes	
Joy Dishwashing Liquid		Yes		No				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Lysol® Disinfectant Spray		Yes		No				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Reckit Benckier/Lysol® Disinfectant Spray					Yes	Yes	Yes				Yes						Yes
Lysol® Disinfectant Max Cover Mist		Yes		No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

## Seating – Mesh, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	CHADDY	FIERCE	HELIO	JIMINY	JOYA Standard Black	JOYA Premium Black	JOYA Premium White	LAUDIO Black	LAUDIO Blue, Green, Light Grey, Medium Grey, Red	LAVORO Mesh	MELORA Black with Black Accent, Black with Grey Accent, Black with White Accent	MIX-IT	VORA Black	VORA Grey	WHIRL Black	WHIRL Blue, Medium Grey, White, Green, Red	WISH Raven, Quick Silver, and Grey
Lysol® Disinfecting Wipes					Yes	Yes	Yes				Yes						Yes
Lysol® I.C. Foaming Disinfectant Cleaner				Yes						Yes		Yes					
Lysol® One Step Floor Cleaner						Yes	Yes				Yes						Yes
Nixall® Disinfectant/Sanitizer	Yes		Yes				Yes				Yes				Yes	Yes	
Oxycide Cleaner	Yes		Yes												Yes	Yes	
PDI® Sani-Cloth® AF3 Germicidal Disposable Wipes					No												
Pine Sol All Purpose Cleaner	Yes		Yes		Yes	Yes	Yes				Yes				Yes	Yes	
PurTabs	Yes		Yes												Yes	Yes	
SciCan OPTIM® 33TB Wipes		Yes		Yes				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Simple Green®	Yes		Yes			Yes	Yes				Yes				Yes	Yes	Yes
SSS® Perisept		Yes		Yes	Yes			Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
SSS® Sanotracin	Yes		Yes		Yes	Yes	Yes				Yes				Yes	Yes	Yes
Steris Coverage® Spray HB					Yes												
Virox® Accel® TB Wipes					Yes												
Vital Oxide®	Yes		Yes				Yes				Yes				Yes	Yes	
Virox® Rescue™		Yes		Yes				Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	
Wexford Wex-Cide 128	Yes		Yes	Yes		Yes	Yes			Yes	Yes	Yes			Yes	Yes	Yes
Windex® Original Formula/S.C. Johnson																	Yes

## Seating – Plastic

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Cinch	Ditto	Essay	Rizora	Volute	Pep	Poly	Portata
Antimicrobial	No	No	No	No	No	No	No	No
Cleaning	Mild Soap/ Water	Mild Soap/ Water	Mild Soap/ Water	Mild Soap/ Water	Mild Soap/ Water	Mild Soap/ Water	Mild Soap/ Water	Mild Soap/ Water
Behold Furniture Polish (industrial)								Yes
Bleach/Water Solution 1:10 (10%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Clear Ammonia All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
CloroxHealthcare® Dispatch® Hospital Cleaner Disinfectant Towels with Bleach	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Virex® II 256	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® A-456® II	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Endure 320 Hand Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Endure 320								Yes
Ethanol 95%	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes
Hillyard Foaming Hand Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Spray	Yes	Yes	Yes	Yes	Yes	No	Yes	
Lysol® Disinfectant Max Cover Mist	Yes	Yes	Yes	Yes	Yes	No	Yes	
Lysol® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	No	Yes	
Lysol® One Step Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Oxycide Cleaner								Yes
Perspiration (Pickering Labs)								Yes
Pine Sol All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Simple Green®	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
SSS® Sanotracin	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Vaseline Intensive Repair								Yes
Wexford Wex-Cide 128	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes



## Seating – Textiles Non Woven

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\*The contents naturally inhibit the growth of bacteria. An antimicrobial chemical is not added to this material.

DISINFECTANT SUPPLIER/PRODUCT NAME	Sewing Thread	Brisa	Brisa Distressed	Connect Four	Davenport	Dolce	Essence	Florence	Karid Black Polyurethane	Masquerade	Pixie	Reef Pro	Sedona	Silica	Silica Etch	Silvertex	Tottori
Antimicrobial	No	No	No	No	Yes	No	No	Yes	No	No	Yes	No	No	Yes*	Yes*	Yes	No
Cleaning	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water	Mild Soap/Water
303 Fabric/Vinyl Cleaner (Dilution: 4oz in 1 Gallon Water)				Yes		Yes				Yes			Yes			Yes	
303 Aerospace Protecttan - Applying Every 3-5 Weeks Only													Yes				
3M™ C. Diff Solution Tablets														Yes	Yes		
3M™ HB Quat #25														Yes	Yes		
3M™ Neutral Cleaner 3H														Yes	Yes		
3M™ Neutral Cleaner 3L		Yes	Yes				Yes					Yes					Yes
3M™ Neutral Quat														Yes	Yes		
3M™ Neutral Quat 23L		Yes	Yes				Yes					Yes					Yes
3M™ RCT Concentrate 40L														Yes	Yes		
3M™ Twist-n-Fill #23													Yes	Yes	Yes		
A&G Industries, Inc. Boat Wash & Multipurpose Cleaner													Yes				
American Continental techlabs, LLC; Reprosolv Cleaner													Yes				
Apco Vinyl Clean Plus													Yes				
Babes Boat Care Products (1 oz per gallon of water)													Yes				
Benefect®											Yes						
Betco® Quat-Stat™ 5														Yes	Yes		
Bio Kleen Products Inc. Bio Kleen Amazing (dilution: 6 oz per gallon of water)													Yes				
Bio2Eco VINYL CLEANER (Concentration Pure and 1:1 with water)													Yes				
Bioesque™ Botanical Disinfectant									Yes								
Biotrol™ Birex® Quat™		Yes	Yes				Yes					Yes					Yes
Biortrol™ Birex SE®														Yes	Yes		
Bleach/Water Solution 1:4														Yes	Yes		
Bleach/Water Solution 1:5		Yes	Yes				Yes				Yes	Yes		Yes	Yes		Yes
Bleach/Water Solution 1:10 (10%)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Caltechx® Dispatch® (1:10 dilution)				Yes		Yes			Yes	Yes			Yes	Yes	Yes	Yes	

## Seating – Textiles Non Woven, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\*The contents naturally inhibit the growth of bacteria. An antimicrobial chemical is not added to this material.

DISINFECTANT SUPPLIER/PRODUCT NAME	Sewing Thread	Brisa	Brisa Distressed	Connect Four	Davenport	Dolce	Essence	Florence	Karid Black Polyurethane	Masquerade	Pixie	Reef Pro	Sedona	Silica	Silica Etch	Silvertex	Tottori
Certol Pro Spray									Yes								
Citrus H2O2														Yes	Yes		
ClickSan® Disinfectant					Yes			Yes									
Clorox® Clean-Up® with Bleach					Yes			Yes						Yes	Yes		
Clorox® Disinfecting Wipes		Yes	Yes		Yes		Yes	Yes				Yes		Yes	Yes		Yes
Clorox® Fuzion													Yes				
Clorox® Pro Quaternary All-Purpose Cleaner														Yes	Yes		
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach		Yes	Yes				Yes					Yes					Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant Towels with Bleach											Yes						
CloroxPro™ Germicidal Bleach		Yes	Yes				Yes					Yes					Yes
Clorox Healthcare® Bleach Germicidal Cleaner									Yes					Yes	Yes		
Clorox Healthcare® Bleach Germicidal Wipes				Yes		Yes				Yes			Yes			Yes	
Clorox Healthcare® Citrace®														Yes	Yes		
Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes				Yes		Yes				Yes			Yes	Yes	Yes	Yes	
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes														Yes	Yes		
Contec® PeridoxRTU®														Yes	Yes		
Cortina Leathers Universal Cleaner High-Tech Wipes					Yes			Yes									
Crypton Inc, Super Fabric Disinfectant Deodorizer													Yes				
Crypton Inc, Leather/Vinyl Cleaner													Yes				
Crypton Inc. Upholstery Stain Remover													Yes				
Diversey™ Accel® PREvention														Yes	Yes		
Diversey™ Glance® NA Diluted (1:50 Water)				Yes		Yes				Yes			Yes			Yes	
Diversey™ GP Forward Diluted (1:64 Water)				Yes		Yes				Yes			Yes			Yes	
Diversey™ Morning Mist® Neutral Disinfectant Cleaner											Yes						
Diversey™ Oxivir® 1														Yes	Yes		
Diversey™ Oxivir® Five 16														Yes	Yes		
Diversey™ Oxivir® Tb														Yes	Yes		

## Seating – Textiles Non Woven, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\*The contents naturally inhibit the growth of bacteria. An antimicrobial chemical is not added to this material.

DISINFECTANT SUPPLIER/PRODUCT NAME	Sewing Thread	Brisa	Brisa Distressed	Connect Four	Davenport	Dolce	Essence	Florence	Karid Black Polyurethane	Masquerade	Pixie	Reef Pro	Sedona	Silica	Silica Etch	Silvertex	Tottori
Diversey™ Oxivir® Tb Wipes				Yes		Yes				Yes			Yes			Yes	
Diversey™ Stride® Floral Neutral (1:32 water) - Daily cleaning (1:64 water - Cleaning excess dirt)				Yes		Yes				Yes			Yes			Yes	
Diversey™ Stride® Fragrance Free Neutral Cleaner				Yes		Yes				Yes			Yes			Yes	
Diversey™ Triad® III														Yes	Yes		
Diversey™ Virex® 5 RTU													Yes				
Diversey™ Virex® II 256		Yes	Yes	Yes		Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Diversey™ Virex® Tb		Yes	Yes				Yes					Yes					Yes
Diversey™ Virex® Plus														Yes	Yes		
Diversey™ Virox™ AHP® 5 Concentrate		Yes	Yes				Yes					Yes		Yes	Yes		Yes
Diversey™ Virox™ AHP® 5 RTU				Yes		Yes				Yes			Yes	Yes	Yes	Yes	
Ducky All Purpose Cleaner													Yes				
Ecolab® A-456® II									Yes								
Ecolab® Asepticare™														Yes	Yes		
Ecolab® Asepticare™ TB II		Yes	Yes	Yes		Yes	Yes			Yes		Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® DisCide®		Yes	Yes				Yes					Yes					Yes
Ecolab® Endure 320 Hand Sanitizer									Yes								
Ecolab® High Performance Neutral Floor Cleaner									Yes								
Ecolab® Multi Surface Cleaner									Yes								
Ecolab® Oasis® 146														Yes	Yes		
Ecolab® Oasis® 146 Multi Quat Sanitizer (0.25 oz per gallon)													Yes				
Ecolab® Oxycide™ Daily Disinfectant Cleaner (3 oz/gl in water)		Yes	Yes	Yes		Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ecolab® Virasept™														Yes	Yes		
Esteem™ Sani-NC Use					Yes			Yes									
Ethanol 95%									Yes								
Evaclean™ Purtabs									Yes								
Fantastik® All-Purpose Cleaner		Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes			Yes	Yes
Fiberlock Shockwave											Yes						
Finyl Fix™, Vinyl cleaner													Yes				

## Seating – Textiles Non Woven, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\*The contents naturally inhibit the growth of bacteria. An antimicrobial chemical is not added to this material.

DISINFECTANT SUPPLIER/PRODUCT NAME	Sewing Thread	Brisa	Brisa Distressed	Connect Four	Davenport	Dolce	Essence	Florence	Karid Black Polyurethane	Masquerade	Pixie	Reef Pro	Sedona	Silica	Silica Etch	Silvertex	Tottori
Formula 409® Antibacterial All-purpose cleaner		Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Gclean® G200 Surface Sanitizer									Yes								
Greased Lightning® Multi Purpose											Yes						
Hillyard Foaming Hand Sanitizer									Yes								
Hula Boat, Chill Mold Retardant													Yes				
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)		Yes	Yes				Yes					Yes	Yes	Yes	Yes		Yes
Isopropyl Alcohol 1:1 solution				Yes		Yes	Yes			Yes		Yes	No	Yes	Yes	Yes	Yes
Isopropyl/Rubbing alcohol (70%)		Yes	Yes				Yes					Yes		Yes	Yes		Yes
Jay-Kem pH Neutral Commercial Floor Cleaner									Yes								
Kay® Instant Solutions glass cleaner					Yes			Yes									
Kay® QSR Liquid Cleaner					Yes			Yes									
Lysol® Advanced Cleaning Disinfecting Wipes											Yes			Yes	Yes		
Lysol® Disinfectant Spray														Yes	Yes		
Lysol® I.C. Foaming Disinfectant Cleaner				Yes		Yes				Yes			Yes			Yes	
Lysol® Disinfecting Wipes														Yes	Yes		
Metrex™ CaviCide™														Yes	Yes		
Metrex™ CaviCide1™														Yes	Yes		
Metrex™ CaviWipes		Yes	Yes				Yes					Yes		Yes	Yes		Yes
Metrex™ CaviWipes1™													Yes	Yes	Yes		
Metrex™ CaviWipes XL™ Packed				Yes		Yes				Yes			Yes			Yes	
Metrex™ CaviWipes Bleach													Yes				
Microban											Yes						
Marine Products, Mold & Mildew Stain Remover (diluted 1/2 ounce per quart water)													Yes				
Nixall® Disinfectant/Sanitizer									Yes								
Ecolab® DisCide®		Yes	Yes				Yes					Yes					Yes
Palmero DisCide® Wipes														Yes	Yes		
PCS Sodium Hypochlorite Disinfectant/Disinfectant Cleaner														Yes	Yes		
PDI® Bleach Germicidal Disposable Wipe														Yes	Yes		

## Seating – Textiles Non Woven, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

\*The contents naturally inhibit the growth of bacteria. An antimicrobial chemical is not added to this material.

DISINFECTANT SUPPLIER/PRODUCT NAME	Sewing Thread	Brisa	Brisa Distressed	Connect Four	Davenport	Dolce	Essence	Florence	Karid Black Polyurethane	Masquerade	Pixie	Reef Pro	Sedona	Silica	Silica Etch	Silvertex	Tottori
PDI® Sani-Cloth® AF3 Germicidal Disposable Wipes				Yes		Yes				Yes			Yes			Yes	
PDI® Sani Cloth® Bleach Germicidal Disposable Wipes		Yes	Yes				Yes					Yes					Yes
PDI® Sani-Cloth® HB Germicidal														Yes	Yes		
PDI® Sani-Cloth® Plus Germicidal Disposable Wipe		Yes	Yes				Yes					Yes		Yes	Yes		Yes
PDI® Sani-Hands® Instant Hand Sanitizing Wipe											Yes						
PDI® Super Sani-Cloth® Germicidal Disposable Wipe		Yes	Yes	Yes		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Perfex, Multi-Purpose detergent													Yes				
Pinnacle, Natural Brilliance													Yes				
Pine Sol All-Purpose Cleaner									Yes								
Process Cleaning Solutions, Sodium Hypochlorite Disinfectant (dilution 0,56 %)													Yes				
Safetec® SaniZide®														Yes	Yes		
SciCan OPTIM® 33TB Wipes														Yes	Yes		
Simple Green®									Yes								
Simple Green® : Dilution 1:30				Yes		Yes				Yes			Yes				Yes
Simple Green® Towels				Yes		Yes				Yes			Yes				Yes
Sonax Car interior cleaner Sonax													Yes				
SSS® Perisept														Yes	Yes		
SSS® Sanotracin									Yes								
Steris Coverage® Spray HB														Yes	Yes		
Unimed Accel® TB														Yes	Yes		
Veridien Viraguard®		Yes	Yes				Yes					Yes		Yes	Yes		Yes
Victoria Bay RTU				No						No			No				No
Virox® Accel® TB Wipes		Yes	Yes				Yes					Yes					Yes
Virox® Rescue™														Yes	Yes		
Vital Oxide®									Yes								
Wexford Wex-Cide 128				Yes		Yes			Yes	Yes			Yes	Yes	Yes	Yes	
Woolite®					Yes			Yes									

## Seating – Textiles Woven

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Sewing Thread	Bliss	Brilliant	Call	Dorset	Entwine	Input	Intuition	Laudio Black Seat, Polyester	Melange	Mode	Phrase	Ridge	Spark	Stancil	Strand	Vessel	Zig Zag	Vora	Joya	Whirl	Melora
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No			
Cleaning	WS Or Soap/Water	W	WS	W	W	W	WS	Ws	W	W	WS	W	W	W	W	W	W	W	W			
Bleach/Water Solution 1:10 (10%)	Yes	No	No	No	No	No	Yes	No	No	No	No	Yes	No	No	No	No	No	No	No			
Clear Ammonia All-Purpose Cleaner																			No			
Diversey™ Virex® II 256									Yes										No			
Ecolab® A-456® II									Yes										No			
Ecolab® Endure 320 Hand Sanitizer									Yes										No			
Ethanol 55-70%									Yes										No			
Formula 409® Antibacterial All-Purpose cleaner																			No			
Hydrogen Peroxide									Yes										No			
Isopropyl Alcohol (70% solution)									Yes										No			
Lysol® Disinfectant Spray									Yes										No			
Lysol® Disinfectant Max Cover Mist									Yes										No			
Lysol® One Step Floor Cleaner																			No			
Simple Green®									Yes										No			
SSS® Sanotracin									Yes										No			
SSS® Perisept									Yes													
Virox® Rescue™									Yes													
Wexford Wex-Cide 128									Yes										No			
Windex® Original Formula/S.C. Johnson																			No			

## Solid Surface

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

Yes\* - Moderate Deglossing

DISINFECTANT SUPPLIER/PRODUCT NAME	Bisque 7101	Carbon Concete 467	Concrete 7301	Deep Night Sky 7302	Designer White 405	Designer White 7203	EOS Beige 495	EOS Grey 496	Glacier White 7201	Neutral Concrete 468	Peace Grey 464	Silt 7204	Weathered Concrete 469
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No	No	No
Cleaning	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	mild soap/water	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	mild soap/water	mild soap/water	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	mild soap/water	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®	Mild Soap/Water Commercial Solid Surface Cleaners CLR®, Lime-A-Way®
3M Avagard Instant Hand Antiseptic with Moisturizers							Yes	Yes					
3M Avagard Foaming Instant Hand Antiseptic							Yes	Yes					
3M Avagard Liquid Soap with Moisturizers							No	No					
3M Heavy Duty Multi-Surface Cleaner							Yes	Yes					
3M Quat Disinfectant Cleaner							Yes	Yes					
Bioesque® Botanical Disinfectant	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Bleach/Water Solution 1:10 (10%)	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	
Bleach/Water Solution 1:100	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Bleach-Rite Disinfecting Spray with Bleach							Yes	Yes					
Bleach-Rite Disinfecting Towel with Bleach							Yes	Yes					
Caltech Dispatch Hospital Cleaner Disinfectant Towels with Bleach							Yes	Yes					
Certol Pro Spray	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Clear Ammonia All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Clorox® Broad Spectrum Quaternary Disinfectant Cleaner							Yes	Yes					
Clorox FUZION Cleaner Disinfectant							No	No					
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Clorox Healthcare® Bleach Germicidal Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		Yes	Yes	Yes	Yes
Clorox Healthcare® Bleach Germicidal Wipes							Yes	Yes					
Clorox Healthcare® EZ-KILL Quat Alcohol Cleaner Disinfectant Wipes							No	No					
Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes							No	No					
Clorox Healthcare® VersaSure™ Alcohol-Free Disinfectant Cleaner Wipes							Yes	Yes					
Clorox Hydrogen Peroxide Disinfecting Cleaner							No	No					
Comet Cleaner with Bleach							Yes	Yes					

## Solid Surface, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

Yes\* - Moderate Deglossing

DISINFECTANT SUPPLIER/PRODUCT NAME	Bisque 7101	Carbon Concete 467	Concrete 7301	Deep Night Sky 7302	Designer White 405	Designer White 7203	EOS Beige 495	EOS Grey 496	Glacier White 7201	Neutral Concrete 468	Peace Grey 464	Silt 7204	Weathered Concrete 469
Contec® PeridoxRTU®							No	No					
Contec Prosat Sterile Wipes							Yes	Yes					
Defender Disinfectant and Cleaner							Yes	Yes					
Dial Antibacterial White Tea & Vitamin E Hand Soap with Moisturizer							No	No					
Dial Professional Antibacterial Hand Sanitizer Fragrance Free Foam							Yes	Yes					
Dial Professional Antimicrobial Liquid Sensitive Skin							No	No					
Dial Professional Antimicrobial Liquid Soap Original Gold							No	No					
Dial Professional Complete Antibacterial Foaming Hand Soap							No	No					
Diversey Accel® Intervention Wipes							No	No					
Diversey Alpha-HP® Multi-Surface Disinfectant Cleaner							Yes	Yes					
Diversey™ Avert™ Disinfectant Cleaner							Yes	Yes					
Diversey Emerel® Plus Alkaline Cream Cleanser							Yes	Yes					
Diversey GP Forward™ General Purpose Cleaner							Yes	Yes					
Diversey Non-Acid Crème Cleaner - Blue							Yes	Yes					
Diversey™ Oxivir® 1							No	No					
Diversey™ Oxivir® Tb							No	No					
Diversey™ Oxivir® Tb Wipes							No	No					
Diversey™ Virex® II 256	Yes	Yes	Yes	Yes	Yes	Yes	No	No	Yes	Yes	Yes	Yes	Yes
Diversey Virex® Plus One-Step Disinfectant Cleaner & Deodorant							Yes	Yes					
Ecolab® A-456® II	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
ECOLAB Asepti-Wipe II							Yes	Yes					
ECOLAB Disinfectant 1 Spray							Yes	Yes					
ECOLAB Disinfectant 1 Wipe							Yes	Yes					
Ecolab® Endure 320 Hand Sanitizer	Yes*	Yes*	Yes*	Yes*	Yes	Yes*			Yes*	Yes*	Yes	Yes*	Yes*
Ecolab® High Performance Neutral Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes



## Solid Surface, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

Yes\* - Moderate Deglossing

DISINFECTANT SUPPLIER/PRODUCT NAME	Bisque 7101	Carbon Concete 467	Concrete 7301	Deep Night Sky 7302	Designer White 405	Designer White 7203	EOS Beige 495	EOS Grey 496	Glacier White 7201	Neutral Concrete 468	Peace Grey 464	Silt 7204	Weathered Concrete 469
Ecolab® Multi Surface Cleaner	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes	Yes	Yes	Yes	Yes	Yes	No	No	Yes	Yes	Yes	Yes	Yes
Ecolab® Peroxide Multi-Surface Cleaner and Disinfectant							Yes	Yes					
Ecolab® Quaternary Disinfectant Wipes							No	No					
Ecolab® Virasept™							Yes	Yes					
Ethanol	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Fantastik® All-Purpose Cleaner					Yes						Yes		
Formula 409® Antibacterial All-Purpose Cleaner					Yes						Yes		
Gclean® G200 Surface Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Generic First Aid Antiseptic 91% Isopropyl Alcohol							Yes	Yes					
Generic First Aid Antiseptic 70% Isopropyl Alcohol							Yes	Yes					
Germiphene Ultra Swipes Plus							Yes	Yes					
Glass Plus®	No	No	No	No		No			No	No		No	No
GOJO Luxury Foam Antibacterial Handwash							No	No					
GOJO PROVON Antimicrobial Skin Cleanser							Yes	Yes					
GOJO PROVON Foaming Medicated Handwash with Moisturizers and Triclosan							No	No					
GOJO PROVON Medicated Foam Handwash with Advanced Moisturizers and Triclosan							No	No					
GOJO Ultra Mild Antimicrobial Lotion Soap with Chloroxylenol							No	No					
Hillyard Foaming Hand Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Spray	Yes	Yes	Yes	Yes	Yes	Yes	No	No	Yes	Yes	Yes	Yes	Yes
Lysol® Disinfectant Max Cover Mist	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Lysol® Disinfecting Wipes	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes

## Solid Surface, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

Yes\* - Moderate Deglossing

DISINFECTANT SUPPLIER/PRODUCT NAME	Bisque 7101	Carbon Concete 467	Concrete 7301	Deep Night Sky 7302	Designer White 405	Designer White 7203	EOS Beige 495	EOS Grey 496	Glacier White 7201	Neutral Concrete 468	Peace Grey 464	Silt 7204	Weathered Concrete 469
Lysol® One Step Floor Cleaner	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Medline Lotion Soap with Aloe Vera							No	No					
Medline Moisturizing Lotion made with Oatmeal, Aloe & Vitamin E							No	No					
Medline Skintegrity Antibacterial Hand Soap							No	No					
Medline Skintegrity Foaming Antibacterial Hand Soap							No	No					
Metrex™ CaviCide™							Yes	Yes					
Multi-Clean 64 Millenium Q							Yes	Yes					
Nixall® Disinfectant/Sanitizer	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
PDI® Sani-Cloth® AF3 Germicidal Disposable Wipes							Yes	Yes					
PDI® Sani Cloth® Bleach Germicidal Disposable Wipes							Yes	Yes					
PDI® Sani-Cloth® Plus Germicidal Disposable Wipe							Yes	Yes					
PDI® Sani-Cloth® Prime Germicidal Disposable Wipe							Yes	Yes					
PDI Sani-HyperCide Germicidal Spray							No	No					
PDI Sani-24 Disinfecting Spray							Yes	Yes					
PDI® Super Sani-Cloth® Germicidal Disposable Wipe							Yes	Yes					
Pine Sol All-Purpose Cleaner	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Pharma-Choice DIFF-INFECTION Sporicidal Disinfectant Cleaner							Yes	Yes					
Purell Advanced Hand Sanitizer							Yes	Yes					
PurTabs	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Rite Aid Hydrogen Peroxide Topical Solution USP							No	No					
Simple Green®	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Spartan Clean Go Multi-Surface Cleaner							Yes	Yes					
Spartan GS High Dilution DiSpartan Clean Go Multi-Surface Cleanersinfectant 256							Yes	Yes					
SSS Peritex High Performance Wipes							No	No					
SSS® Sanotracin	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes

## Solid Surface, Continued

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

Yes\* - Moderate Deglossing

DISINFECTANT SUPPLIER/PRODUCT NAME	Bisque 7101	Carbon Concrete 467	Concrete 7301	Deep Night Sky 7302	Designer White 405	Designer White 7203	EOS Beige 495	EOS Grey 496	Glacier White 7201	Neutral Concrete 468	Peace Grey 464	Silt 7204	Weathered Concrete 469
Steris Cal Stat Plus: Antiseptic Handrub with Enhanced Emollients							Yes	Yes					
Steris Coverage® Spray HB Plus							Yes	Yes					
Steris Coverage® Plus Germicidal Wipes							Yes	Yes					
Steris Coverage Spray TB							Yes	Yes					
Steris Coverage Spray TB Plus							Yes	Yes					
Vital Oxide®	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Wexford Wex-Cide 128	Yes	Yes	Yes	Yes	Yes	Yes			Yes	Yes	Yes	Yes	Yes
Windex® Original Formula	No	No	No	No	Yes	No			No	No	Yes	No	No

# Stone & Concrete

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Stone & Concrete
Antimicrobial	NO
Cleaning	Mild Soap/Water
Bono® Stone, Tile and Laminate Floor Cleaner	YES
Formula 409® Stone and Steel	YES
Simple Green® Stone Cleaner	YES

# Vertical Textiles

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Basket	Blazer Lite	Cara	Compose	Crossroads	Dune	Frenzied	Fuse	Fusion	Infuse	Linen	Lyko	Meander	Merge	Mykel	Pact	Plinth	Prose	Repetition	Saville	Tapestry	Universe	
Antimicrobial	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Cleaning	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W	W
Bleach/Water Solution 1:10 (10%)	Yes	No	Yes	Yes	Yes		Yes	Yes							Yes		Yes	Yes		Yes			

## Vinyl Edge

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Vinyl Edge
Antimicrobial	No
Cleaning	Mild Soap/Water
Bleach/Water Solution 1:10 (10%)	Yes
Clear Ammonia All-Purpose Cleaner	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes
Diversey™ Virex® II 256	Yes
Ecolab® A-456® II	Yes
Ecolab® Endure 320 Hand Sanitizer	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes
Ethanol 95%	Yes
Evaclean™ Purtabs	Yes
Gclean® G200 Surface Sanitizer	Yes
Hillyard Foaming Hand Sanitizer	Yes
Hydrogen Peroxide (3% Solution. This is not Hydrogen Peroxide Vapor/Mist)	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes
Lysol® Disinfectant Spray	Yes
Lysol® Disinfectant Max Cover Mist	Yes
Lysol® Disinfecting Wipes	Yes
Lysol® One Step Floor Cleaner	Yes
Pine Sol All Purpose Cleaner	Yes
Simple Green®	Yes
SSS® Sanotracin	Yes
Wexford Wex-Cide 128	Yes

## Wood

It is recommended to thoroughly rinse with clean water and wipe completely dry after exposure to cleaners/disinfectants.

DISINFECTANT SUPPLIER/PRODUCT NAME	Seating	Caseloads & Tables
Antimicrobial	No	No
Cleaning	Mild Soap/Water	Mild Soap/Water
3M™ TB Quat Disinfectant RTU	Yes	Yes
Bleach/Water Solution 1:10 (10%)	Yes	Yes
Clear Ammonia All-Purpose Cleaner	Yes	Yes
Clorox Healthcare® Dispatch® Hospital Cleaner Disinfectant with Bleach	Yes	Yes
Diversey™ Virex® II 256	Yes	Yes
Ecolab® A-456® II	Yes	Yes
Ecolab® Endure 320 Hand Sanitizer	Yes	Yes
Ecolab® Oxycide™ Daily Disinfectant Cleaner	Yes	Yes
Ethanol 95%	Yes	Yes
Hillyard Foaming Hand Sanitizer	Yes	Yes
Hydrogen Peroxide	Yes	Yes
Isopropyl/Rubbing Alcohol (70%)	Yes	Yes
Jay-Kem pH Neutral Commercial Floor Cleaner	Yes	Yes
Lysol® Disinfectant Spray	Yes	Yes
Lysol® Disinfectant Max Cover Mist	Yes	Yes
Lysol® Disinfecting Wipes	Yes	Yes
Lysol® One Step Floor Cleaner	Yes	Yes
Pine Sol All Purpose Cleaner	Yes	Yes
Simple Green®	Yes	Yes
SSS® Sanotracin	Yes	Yes
Victoria Bay RTU	Yes	Yes
Wexford Wex-Cide 128	Yes	Yes

## Wool Felt

DISINFECTANT SUPPLIER/PRODUCT NAME	Wool Felt
Antimicrobial	No
Cleaning	Professional Dryclean or Wipe Clean with a PH Neutral Soap and a Damp Cloth
Formula 409®, Fantastik®	No
Bleach Examples: 10% Bleach/Water Solution, Dispatch Hospital Bleach Cleaner	No
Quaternary Ammonium Compounds Examples: Virex, Ecolab A-456, Lysol	No
Hydrogen Peroxide Examples: Oxycide, Sanotracin, Virox	No
Isopropyl Alcohol Examples: CaviWipes, Hand Sanitizers	No
Phenolic Examples: Simple Green, Expose II 256	No