



Materials used

Body: POM
O-Ring: EPDM



Laminar stream

Model Overview

Color	Item No.	Wetted Surface (in mm²)
red	01.3636.000	2117
yellow	01.3637.000	2117
blue	01.3638.000	2117
green	01.3639.000	2117
grey	01.3640.000	2117

Assembly Instructions

Clinic Snap aerators can be easily assembled by hand by slightly twisting the colored insert until a click is audible (snap-fit). In addition, a special NEOPERL key (09.9191.0) can be used either to tighten the adapter or to facilitate (dis)assembly of the inserts.



ATTENTION!

Product may not be altered!
May not be used for hot water application exceeding 70°C


Adapters

Special metal adapters necessary with the following thread sizes (including silicone washer):


M22x1: 01.9025.000

M24x1: 01.9023.000

Recommended mounting torque **0.5 Nm max. steadily applied**

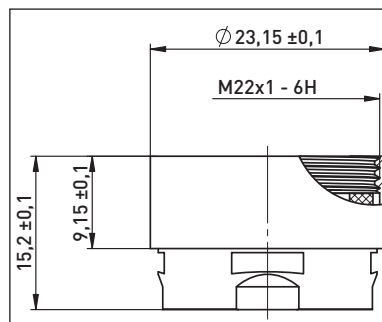


Clinic Snap NEOSTRAHL®
Adapter STD M22x1

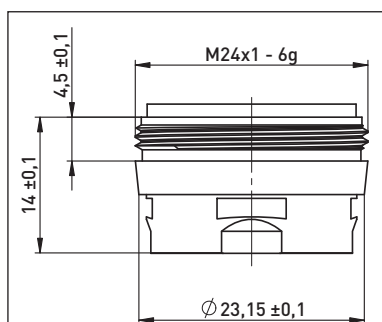

Clinic Snap NEOSTRAHL®
Adapter STD M24x1

The flow rate of the application should be limited to 16 l/min max.

Dimensions

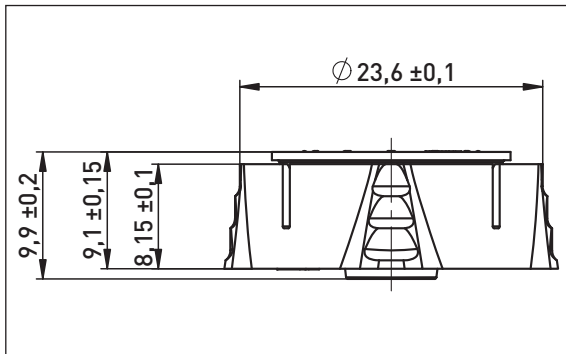


Clinic Snap NEOSTRAHL® STD Insert


Application Areas




Drinking
water only

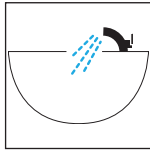

Bath tap

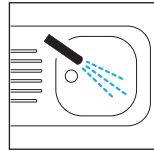


Kitchen tap

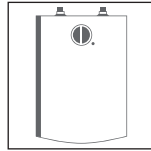


Pressureless
water heaters

Operating Conditions

Continuous

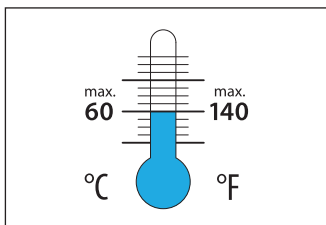

Short-term (3 minutes max.)

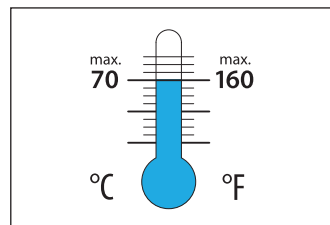

The flow rate of the application should be limited to 16 l/min max.

Indicated pressure values refer to supply line pressure.
Avoid water hammer.