

Box 1:
Chair Body, Shoulder
Panel, Accessory Box,
and Back Pad

Box 2:
Arm
Panels (2)

Box 3:
Footrest (1)
Foot Pads
(2 pcs)

Accessory Box

Phillips
Screw
Driver

Key

M8 Hex

Bolt: M8 x 30mm (2 pcs)

Bolt: M6 x 20mm (2 pcs)

Screw: M5 x20mm (10 pcs)

Screw: M4 x 16mm (4 pcs)

Spare Screw: M4 x 12mm (2 pcs)

Washer: M8 x 14mm (2 pcs)

Washer: M6 x14mm (2 pcs)

Washer: M4 x 10mm (2 pcs)

Spare Power Cord

Fuse (2 pcs)

Clips (2 pcs)

Spare Arm Panel Connector (2 pcs)

10" Touch Screen Tablet

Tablet Holder Mount

Tablet Mount Cover

Warranty Card

INFINITY Massage Chairs

Quick Start Guide

Assembly Guide

INFINITY Massage Chair SE

INFINITY Circadian 4D DualFlex SE

User Manual

1

Step 1:
Prior to assembly, carefully unpack all box contents. Check box contents to the detail below. Make sure all contents are accounted for. If anything is missing, please contact INFINITY at 603-910-5000. Do not return to the place of purchase.

Before assembling your chair, watch an assembly video at: www.infinitymassagechairs.com/assembly-tutorials

Alternatively, scan the QR code to go directly to the URL above.

SCAN CODE

INFINITY[®]

MASSAGE CHAIRS

Assembly
Guide

Circadian[®] 4D DualFlex SE

Massage Chair

3

Step 3:
Place the chair body on a soft surface for assembly. Determine the left arm panel from the right and place next to the correct side of the chair.

Chair Body

Arm Panel

Arm Panel

2

Step 2:
Connect the chair power cord to a grounded 110V electrical outlet and plug it into the respective port on the back side of the chair. Flip the *main power switch to on*. Connect the tablet remote cord to the tablet remote port found on the left side of the chair, making sure the notches on the tablet remote turns on, tap OK on the warning screen, then press the power button on the tablet remote to bring the chair into an upright position. Once chair is in upright position, and before continuing, *turn the main power switch off*.

Power cord port

Main power switch

Remote Port

Tablet Remote Port

Line up Notches

Tablet Remote Cord

14

Step 14:
Locate the tablet holder from the accessory box. Use the screw driver to remove the two M4x12mm screws from the tablet holder mount, making sure the mount stays attached to the chair once screws are removed. Place the tablet holder into the tablet holder mount and then re-insert the two M4x12mm screws into the screw holes to secure the holder in place. Next, attach the tablet mount cover to the tablet holder mount and push into place to secure. Place the tablet remote into the tablet holder.

Tablet Holder

Tablet Holder Mount

Tablet Remote

Tablet Mount Cover

15

Step 15:
Flip the Main power switch back ON. Your Circadian[®] 4D DUALFLEX SE Massage Chair is now complete and ready to use. Wake up the touch screen tablet by tapping on the screen, or press the power button on the top left of the tablet. You can also press and hold the power button on the quick access control panel.

Power on the tablet and select AUTO to start a program.

Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Infinity support at 1-603-910-5000 if you need live US-based support.

You are done; time for a Massage!

SCAN CODE

Register your product at www.infinitymassagechairs.com/warranty to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, scan the QR code to go directly to the URL above.

INFINITY[®]


72 Stard Road, Seabrook, NH 03874 (603) 910-5000 www.infinitymassagechairs.com

Version 1.1


INFINITY

MASSAGE CHAIRS


- 4 Step 4:** Locate the electrical plugs off the side of the chair body. Firmly clip electrical plugs into the electrical ports on the arm panels by matching corresponding colors. Locate the Air Hoses off each side of chair body and note each hose has a number. Locate the corresponding number on the Air Ports of each Arm. Firmly connect the hoses to the ports by matching the numbers of each.

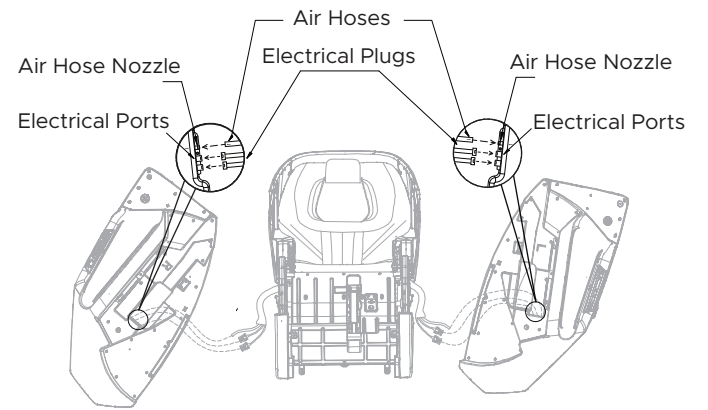


- 5 Step 5:** Carefully lift arm panel and guide the arm panel back hook into the chair hook rail (**see location A**). Make sure the air hoses and electrical wires remain connected and not pinched. Slide the arm panel back towards the chair body as far as it will go.

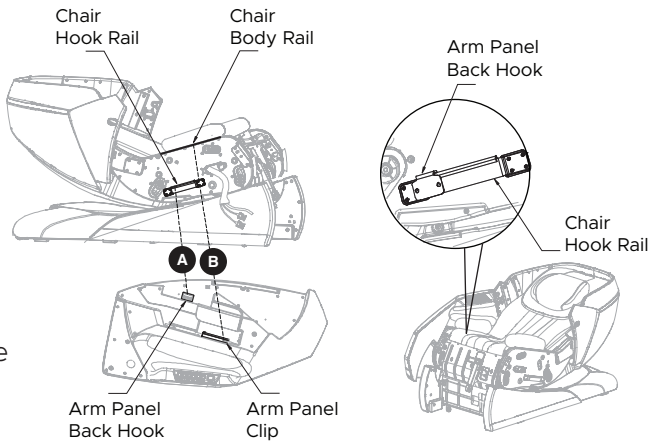


- 6 Step 6:** Next place the arm panel clip on to the chair body rail (**connection location B from step 5**). Ensure the arm panel back hook remains in the chair hook rail as you lift up the front of the arm panel slightly to wiggle the arm panel into position. Make sure both connections at point A and B are firmly in place before continuing.

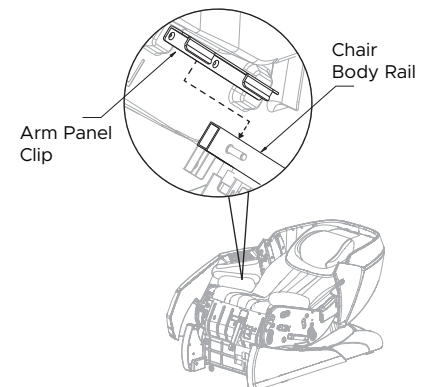


- 7 Step 7:** To secure the arm panel to the chair body, locate the screw hole where the top of the arm panel overlaps the bottom of the shoulder panel. Insert an M8x30mm bolt and M8x14mm washer into the arm panel connector, and then insert into the screw hole. Hand Tighten. Next, locate the holes on the inside of the arm panel by the foot well and insert an M6x20mm Bolt and M6x14mm Washer into the **top hole**. Tighten both bolts with provided hex key. **Repeat steps 5-7 on other side of chair.**

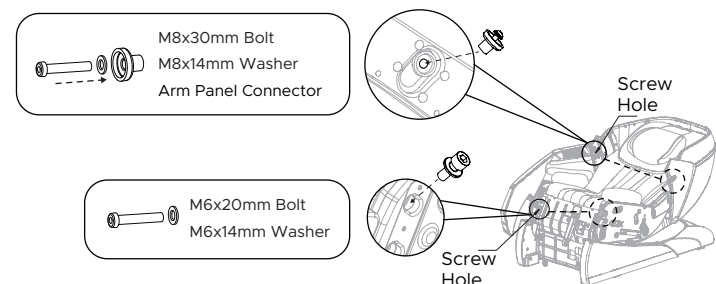


- 8 Step 8:** Before attaching, ensure the airbag on the shoulder panel is toward the front of the chair. Unzip the shoulder airbag and position the shoulder panel into place, pull the air hose and electrical from chair body through the shoulder panel. The shoulder panel mounting bracket and the chair body mounting channel will align. Slide into the body mounting channels until it seats flushly in place.

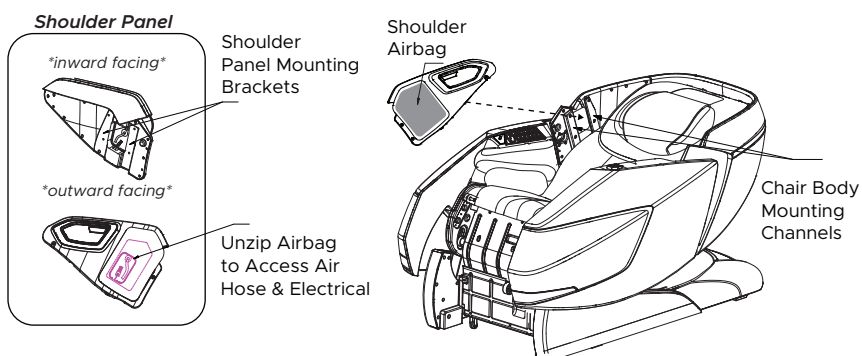


- 9 Step 9:** Look under the shoulder airbag to expose the electrical and airhose. Fasten airhose and then fasten electrical. Fasten three M5x20mm screws into the three screw holes shown below. Close the shoulder airbag zipper once complete.

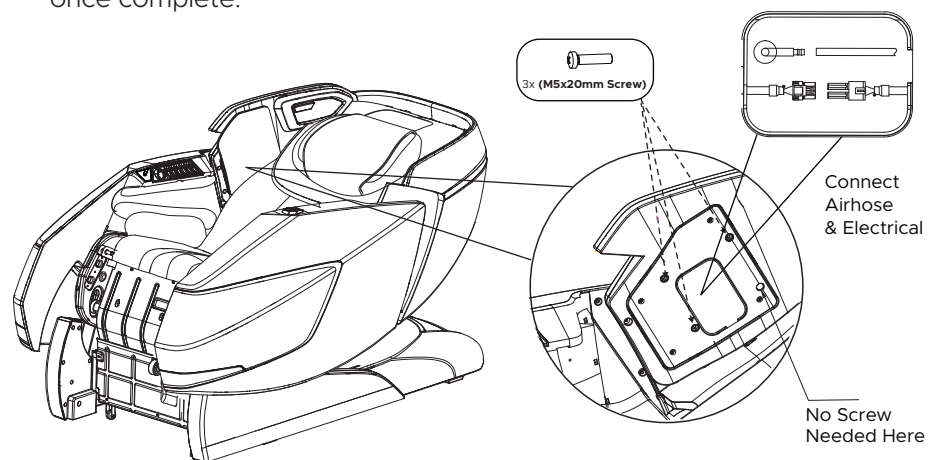


- 10 Step 10:** To secure the shoulder panel to the chair body, insert one M5x20mm screw into the top screw hole, and one M4x16mm screw & M4x10mm washer into the bottom middle screw hole only. Tighten with screw driver. **Repeat steps 8, 9, 10 for other arm.**

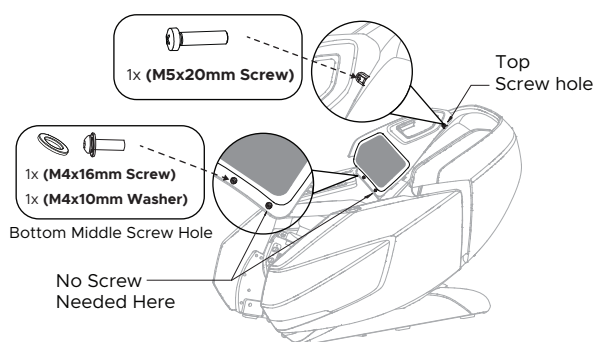

- 11 Step 11:** Remove the footrest from its packaging and position it in front of the main chair body. Connect the footrest electrical plug into the footrest electrical port. Ensure the thumb release is facing up and push in until it clips. Next, slide the air hose firmly onto the air nozzle.

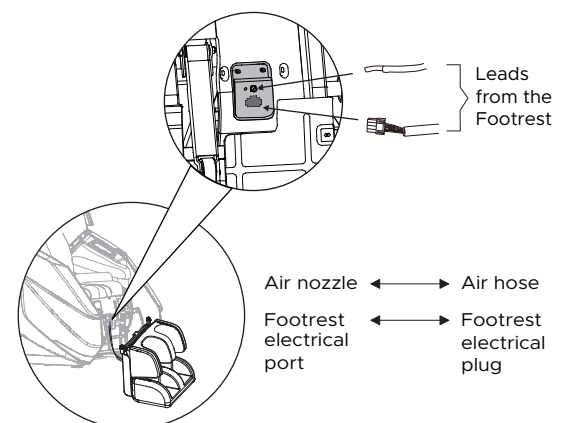

- 12 Step 12:** Before attaching the footrest to the chair body, remove the clips on the chair body footrest pins by sliding up. (If Clips are missing, there are spare clips in the Accessory Box).

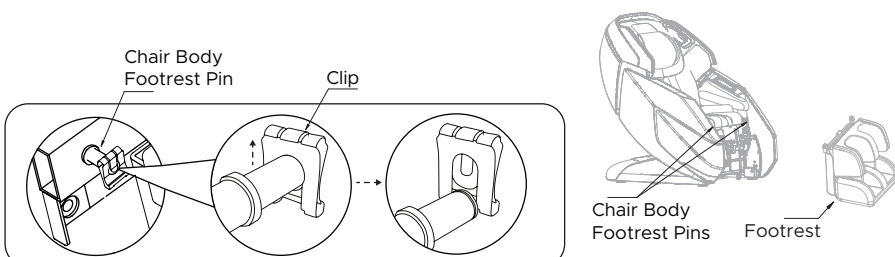

- 13 Step 13:** Lift the footrest and slide one side of the footrest mounting bracket completely onto the chair body pin. Fasten the clip over the pin to secure. Carefully align the other side of the mounting bracket with the remaining pin and slide it on too. Make sure to center the footrest, then fasten the remaining clip over the pin to secure both sides of the footrest.

