

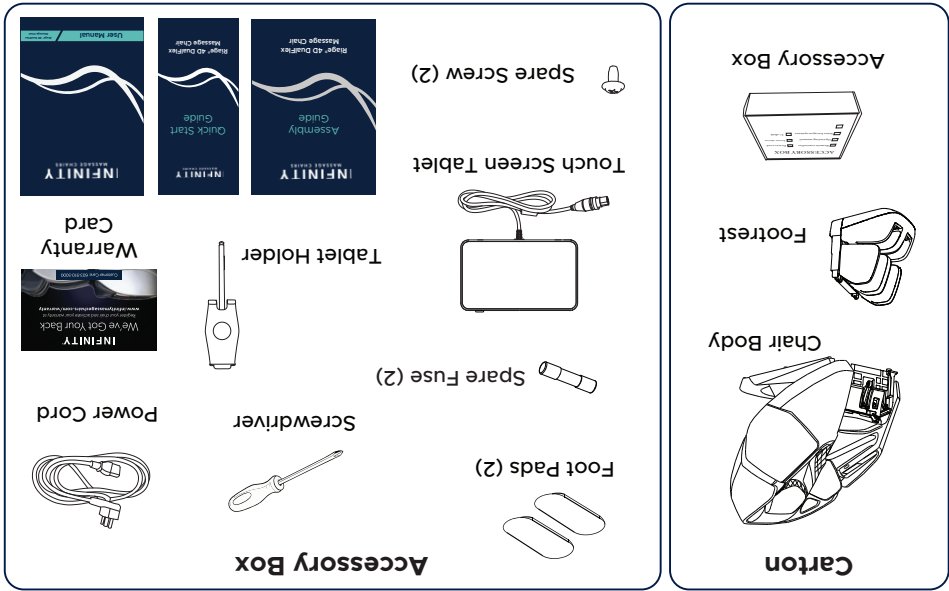
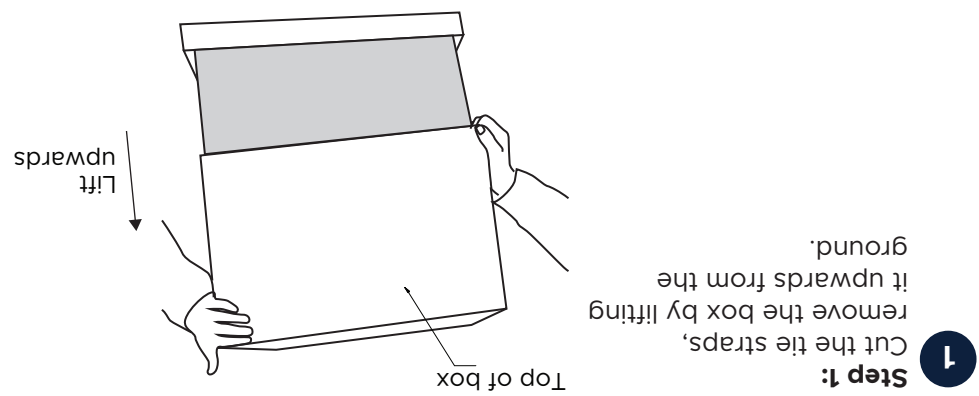


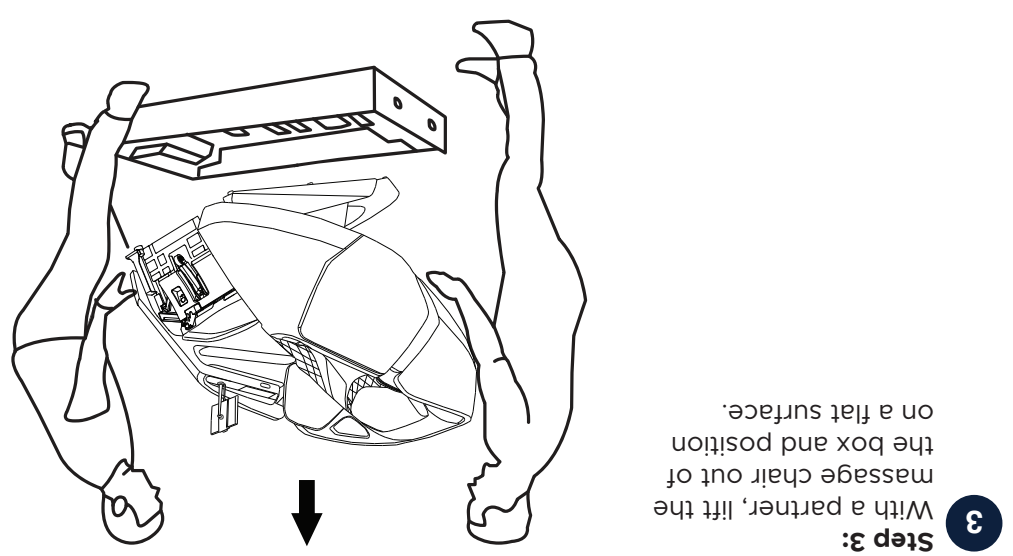

If anything is missing, please contact INFINITY at 603-910-5000. Do not return to the place of purchase.

Prior to assembly, carefully unpack accessories box. Check the box to make sure all the contents are accounted for.

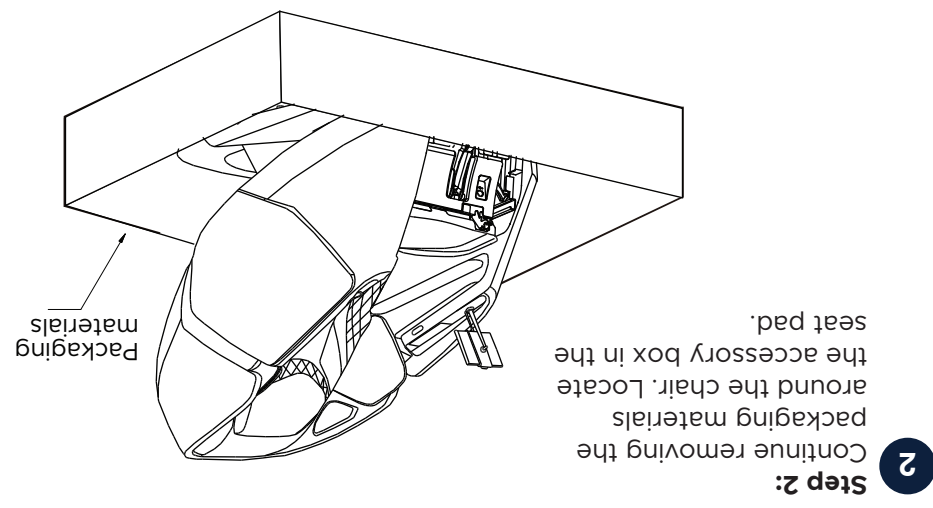


Before assembling your chair, watch an assembly video at: www.infinitymassagechairs.com/assembly-tutorials

Alternatively, scan the QR code to go directly to the URL above.



SCAN CODE

Final Check:

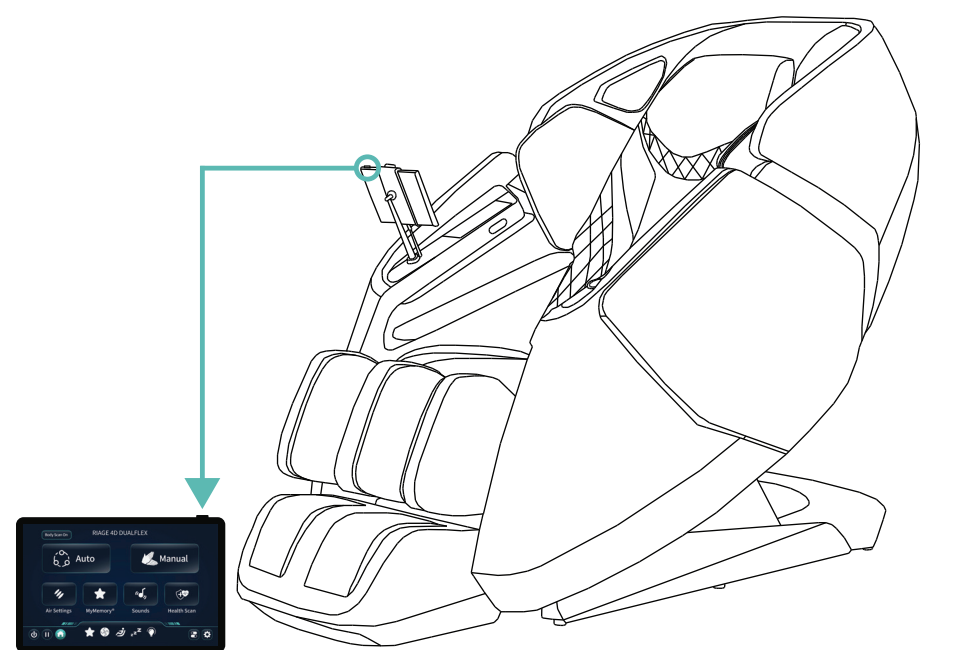

Power on the tablet by pressing the power button on the top right of the screen. Select an Auto Program to start your session.

Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Infinity support at 1-603-910-5000 if you need live US-based support.

You are done; time for a Massage!



SCAN CODE


Register your product at www.infinitymassagechairs.com/warranty to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, scan the QR code to go directly to the URL above.


INFINITY

MASSAGE CHAIRS


- 4 Step 4:** Grab the footrest with both hands and lift it out of the seat pad. Place the footrest upright near the massage chair.

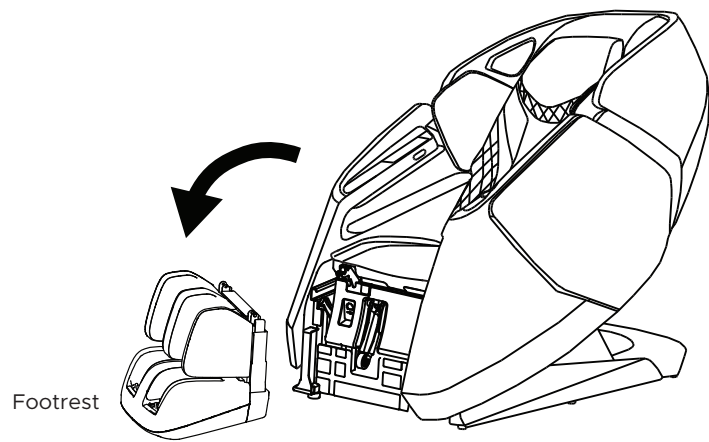


- 6 Step 6:** Lift the metal bracket on the left and right side of the chair body, position the two footrest shafts into the metal brackets. Close the bracket cover on both, and re-insert a small screw on each side, turn until tight.

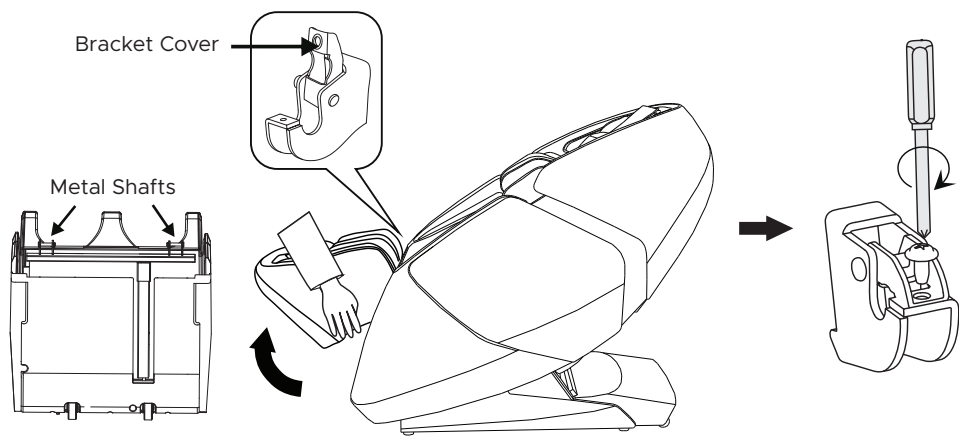


- 8 Step 8:** Slide the bottom of the tablet into the holder, then snap the top into place. Locate the tablet's connection port between the seatpad and right armrest, then align the notch key and pins and gently push the plug in. Screw the collar to secure the connection, then tuck the cord back between the seatpad and armrest.

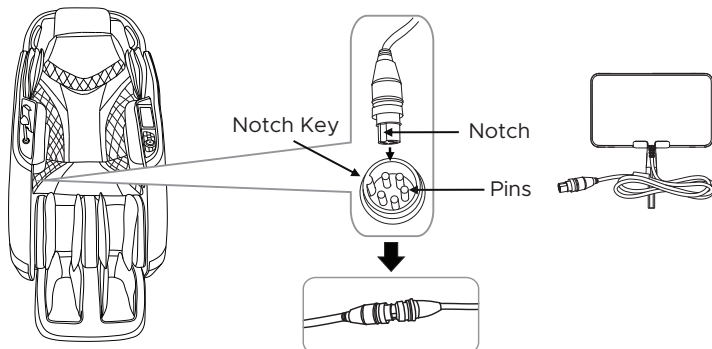


- 10 Step 10:** Locate the zippers on the massage chair's seatpad and backrest. Zip up both sides until secure. Position the seat's underside velcro over the top of the footrest's velcro, push down from right to left to secure.

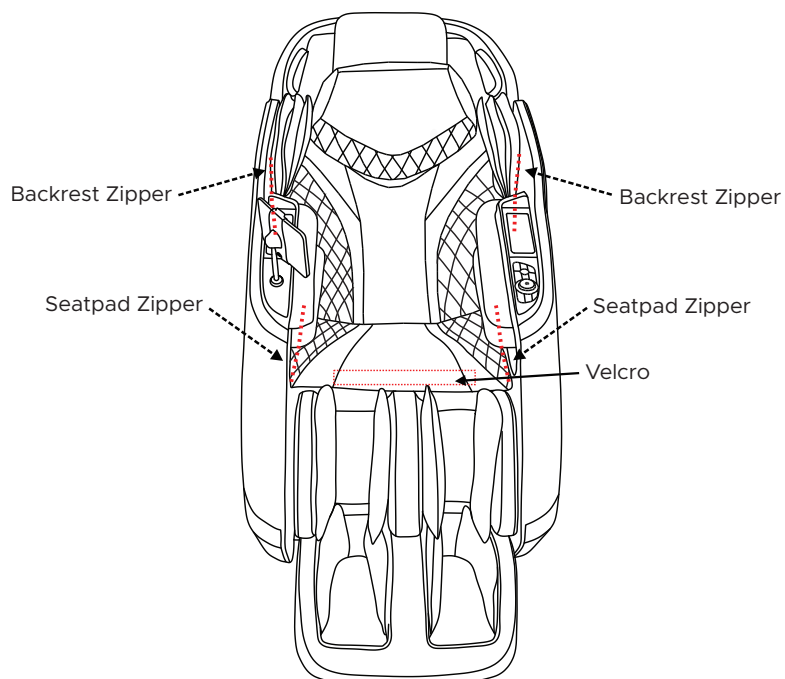


- 5 Step 5:** Unscrew the small screw from each side of the metal brackets located on the legrest within the massage chair footrest area. Notice the electrical port and air nozzle port. Move the footrest to the massage chair, locate the air nozzle and electrical plug on the back of the footrest. Firmly push in both electrical plug and air nozzle into the electrical port and air nozzle port in the massage chair's footwell area.

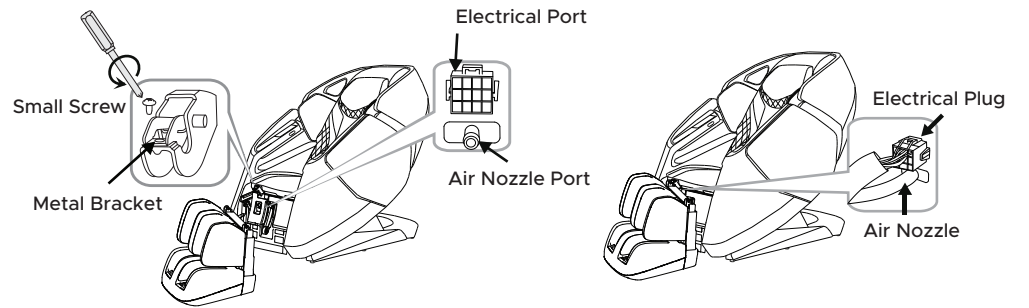

- 7 Step 7:** Locate the tablet holder, align the keyed post with the receiver on the right arm and gently push down until it clicks into place.

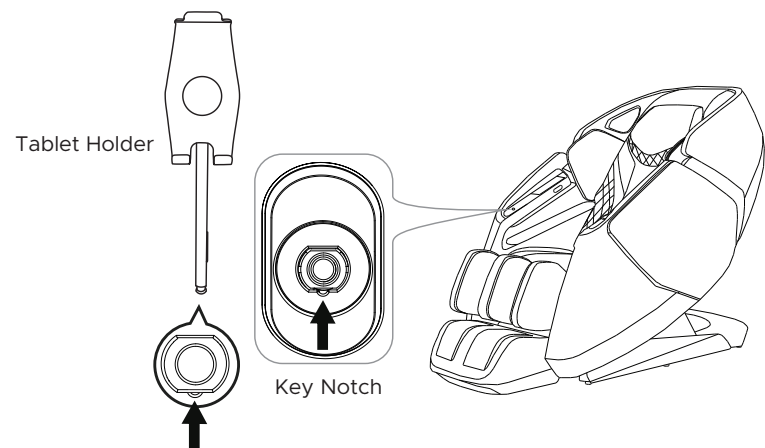

- 9 Step 9:** Remove any protective covering on the velcro, if attached. Lift the seat pad up and notice the two straps underneath the seat cushion, pass them through the rings on the bottom of the seatpad. Connect them with the velcro. Next, notice the air hose ports and air hose nozzles. Both of them should be connected together, if not, push them together until tight. Check to make sure that the heat plug and port on the left side of the seatpad is connected. Now, attach the legrest velcro to the front of the seat.

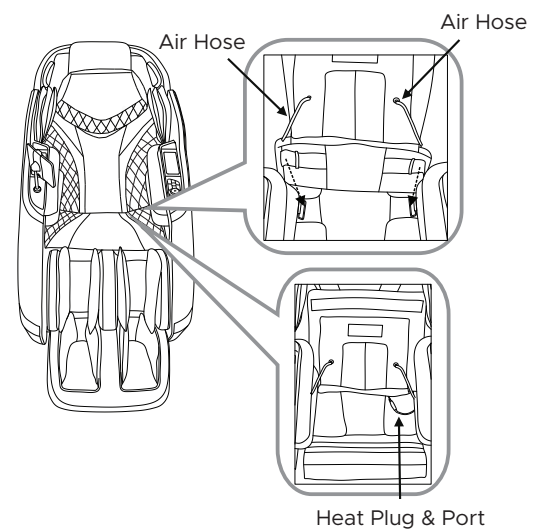

- 11 Step 11:** Remove the power cord from the accessories box and connect it to the power inlet located on the back of the massage chair. Plug the opposite end into a properly grounded 120V electrical outlet. Press the "I" side of the main power switch to turn on the chair's primary power. To power on the chair, locate the Power button on top of the touch screen tablet and press and hold until the Infinity logo appears on the display. Alternatively, press and hold the Power button on the Smart Dial located on the left armrest's Quick Access Control Panel until the chair powers on.

