






If anything is missing, please contact INFINITY at 603-910-5000. Do not return to the place of purchase.

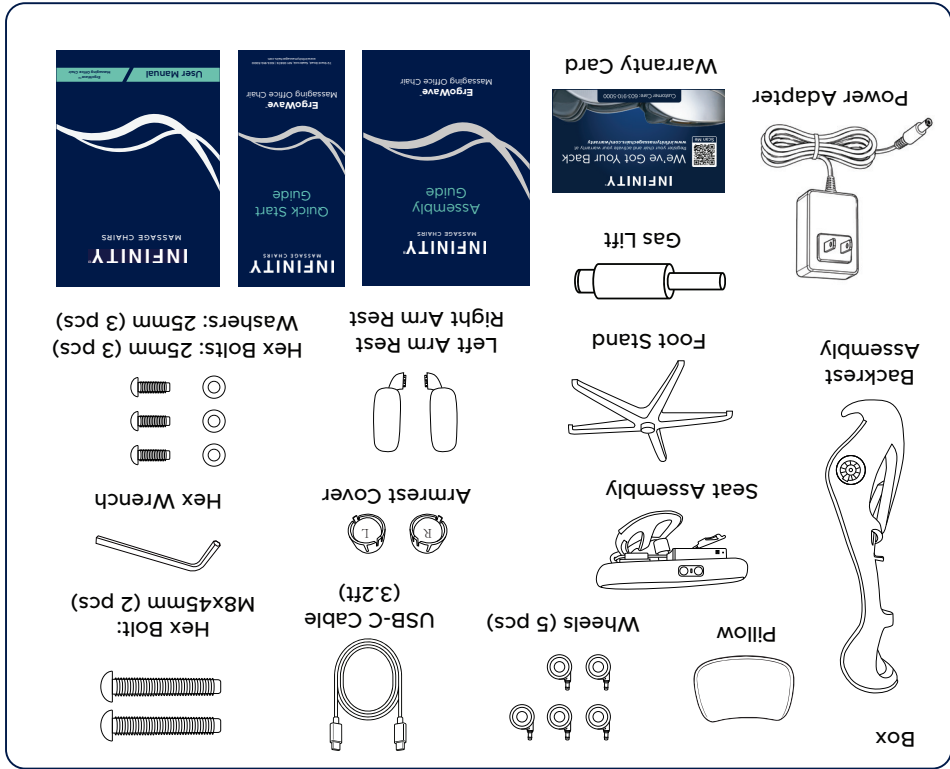


Step 2: Open the accessory box, unpack all contents and remove the plastic, bubble wrap, and protective materials. Check that all parts and accessories are included before beginning assembly.

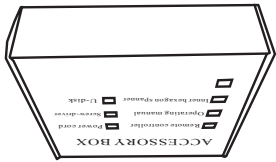

Before assembling your chair, watch an assembly video at: www.infinitymassagechairs.com/assembly-tutorials
Alternatively, scan the QR code to go directly to the URL above.

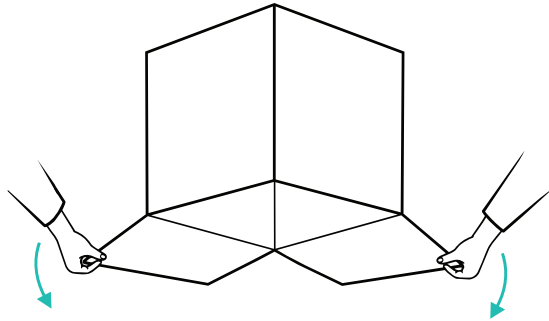


Step 1: Open the box and carefully remove all chair components. Unwrap each component and gently remove the bubble wrap and protective packaging. Set all parts aside in a clear, open area for assembly.

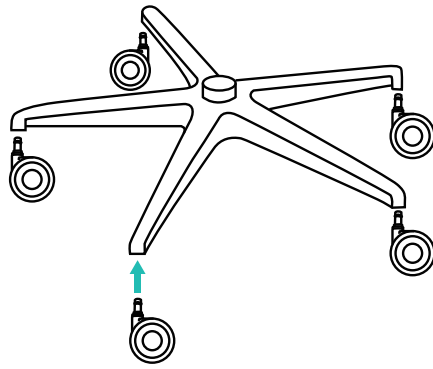

Step 3: Remove the five wheels from the accessory box. Turn the footstand upside down. Insert each wheel into a wheel socket on the foot stand and press firmly until fully seated. Once installed, turn the footstand rightside up, check that all five wheels roll smoothly and freely.

Step 10: To charge the built-in 5,000 mAh battery, connect the power adapter to a wall outlet and the chair's power port. You can also charge the chair using a USB-C cable connected to the control panel and a compatible power bank.

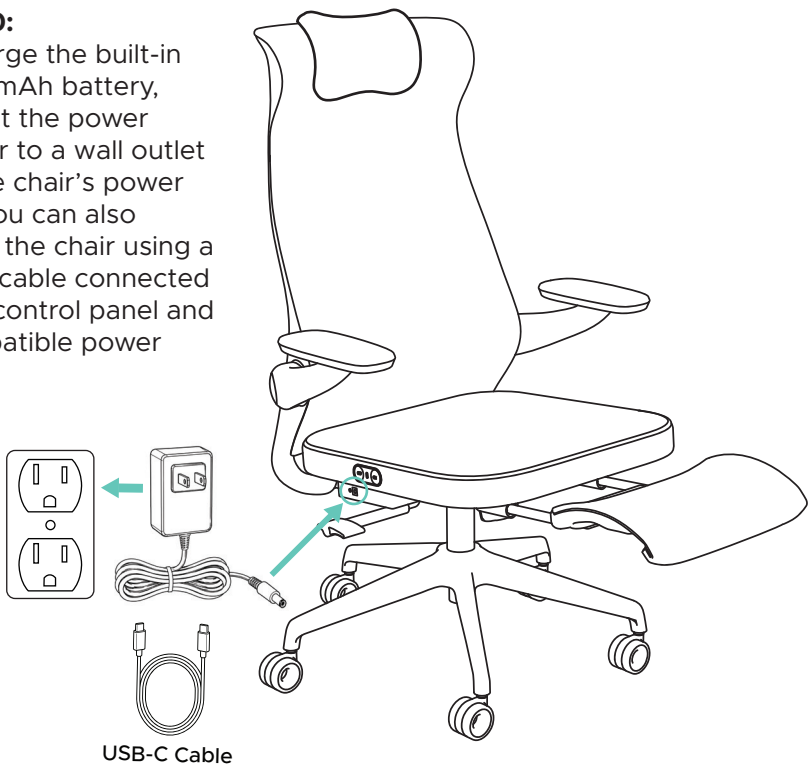

Read the **Quick Start Guide** to learn how to operate your chair.



Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Infinity support at 1-603-910-5000 if you need live US-based support.

You are done; time for a Massage!



SCAN CODE

Register your product at www.infinitymassagechairs.com/warranty to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, scan the QR code to go directly to the URL above.

INFINITY

72 Stard Road, Seabrook, NH 03874

(603) 910-5000

www.infinitymassagechairs.com

Version 1.0

INFINITY
MASSAGE CHAIRS


Assembly
Guide

ErgoWave
Massaging Office Chair


INFINITY

MASSAGE CHAIRS


- 4 Step 4:** Insert the gas lift into the center of the foot stand with the wider end facing down. Press down firmly until the gas lift is fully seated and secure.

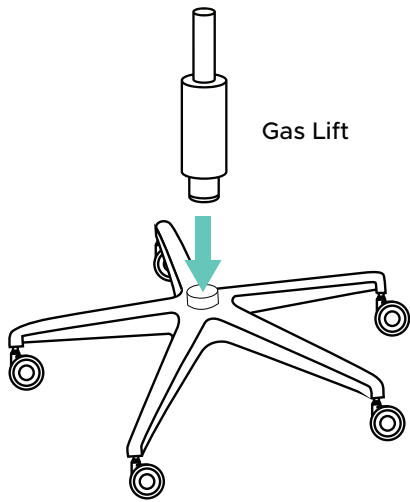


- 5 Step 5:** Use the chair box as a support surface. Place the seat assembly on top of the box and let the backrest hang over the side. Align the rails and slide the backrest assembly into the seat assembly.

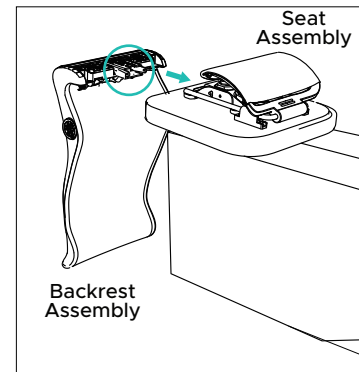


- 6 Step 6:** Locate the 6-pin white plug on the right side of the backrest assembly. Connect it to the matching plug on the seat assembly. Push firmly until it clicks securely into place.

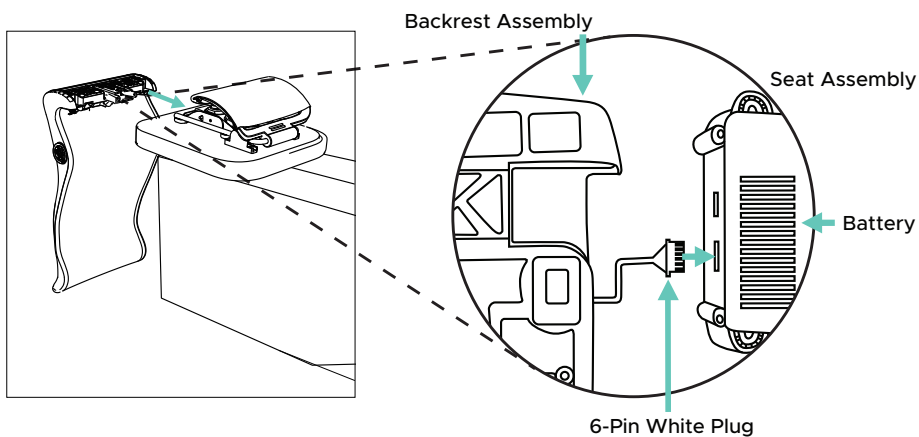

- 7 Step 7:** Place a washer on each of the three 25mm bolts. Insert the bolts into the three holes and tighten with the hex wrench. Tighten the center bolt first, then the two side bolts. Finish by tightening the center bolt again. **Do not overtighten.**

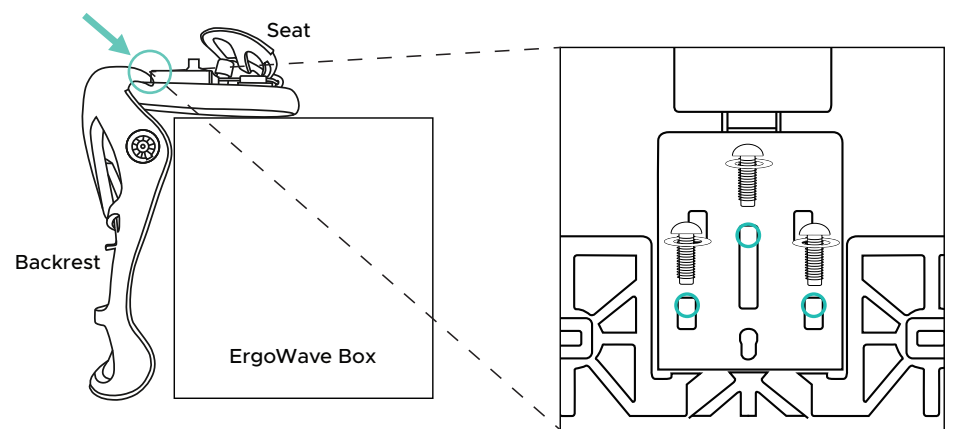

- 8 Step 8:** Carefully lift the backrest from the box and turn it upright. Align the bottom of the backrest with the gas lift and press down firmly until it snaps securely into place.

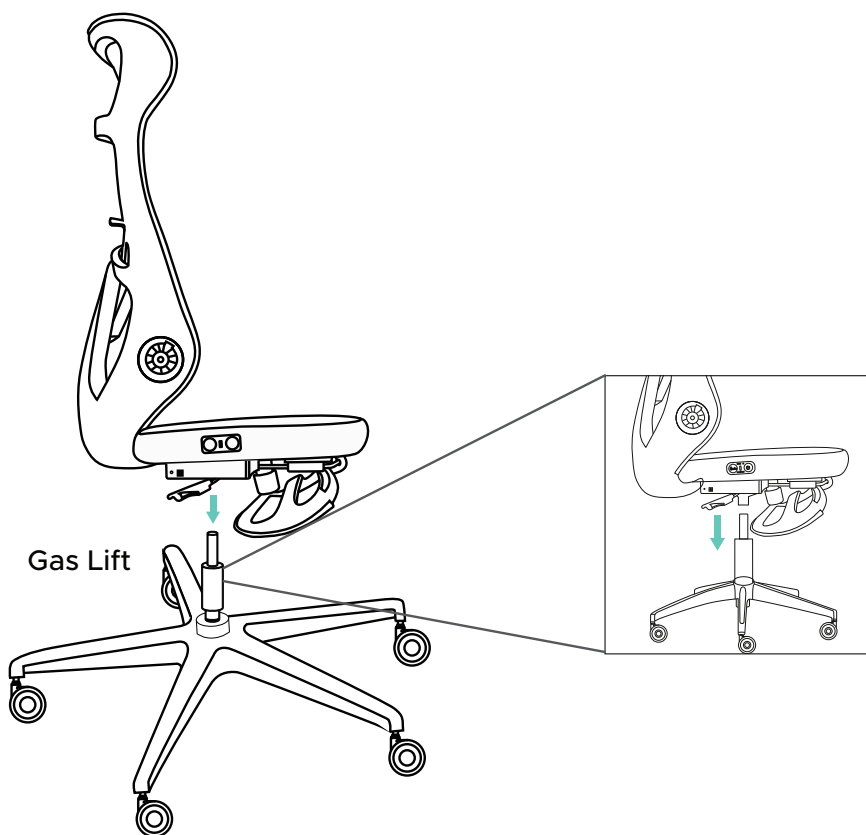

- 9 Step 9:** Position the left armrest over the armrest hole and rotate until it snaps into place. Insert a 45mm bolt through the armrest and tighten with the hex wrench. Do not overtighten. Repeat on the right side. Test both armrests by lifting them upward 90°, then install the armrest covers.

