





Step 1: Prior to assembly, carefully unpack all box contents. Check box contents to the detail below. Make sure all contents are accounted for. If anything is missing, please contact INFINITY at 603-910-5000. Do not return to the place of purchase.


SCAN CODE

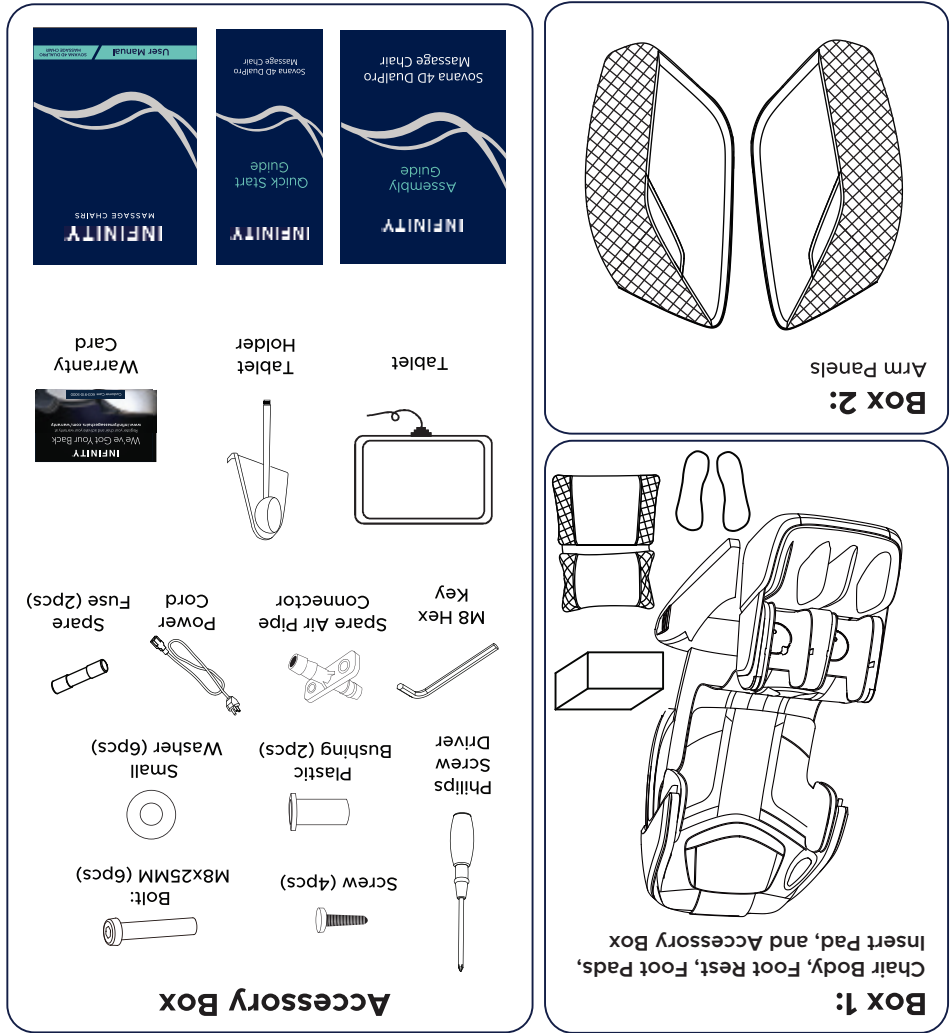


Before assembling your chair, watch an assembly video at: www.infinitymassagechairs.com/assembly-tutorials. Alternatively, scan the QR code to go directly to the URL above.

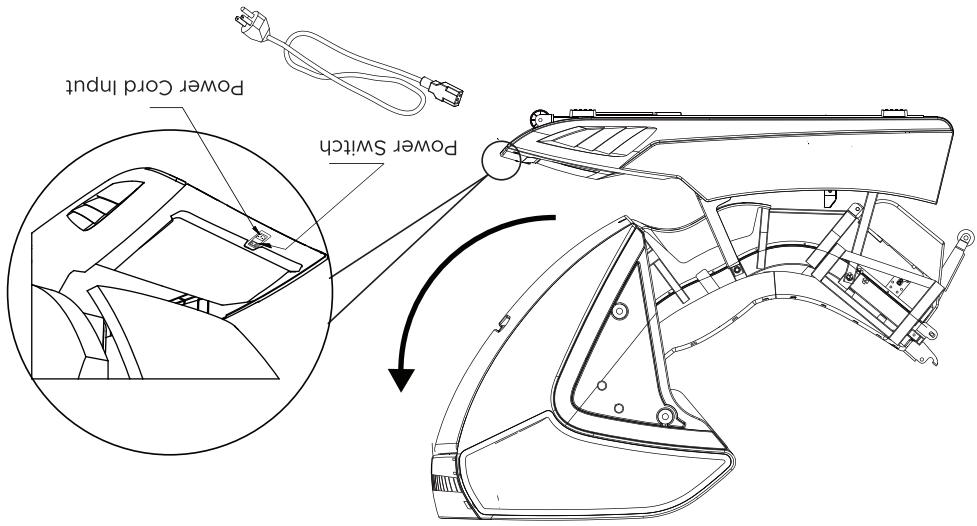

Step 3: Connect the chair power cord to a grounded 120V electrical outlet and plug it into the respective port on the back side of the base of the chair. Turn the Power Switch to 'ON'. Your chair will now reset and move to its upright position.

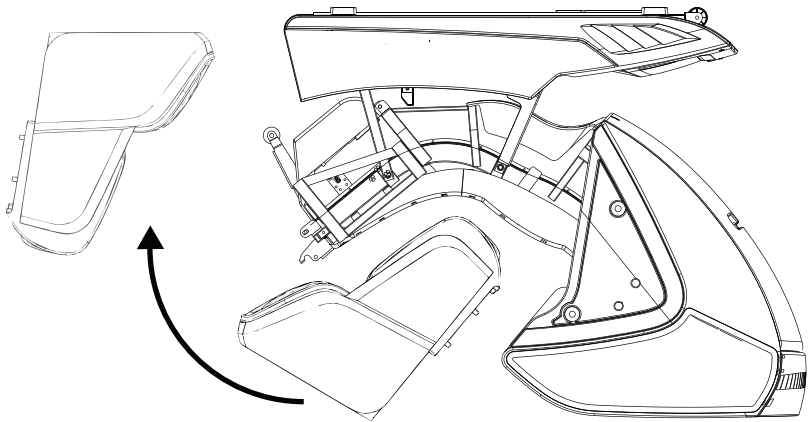

Step 2: Gently place the footrest to the floor, move it aside for now.

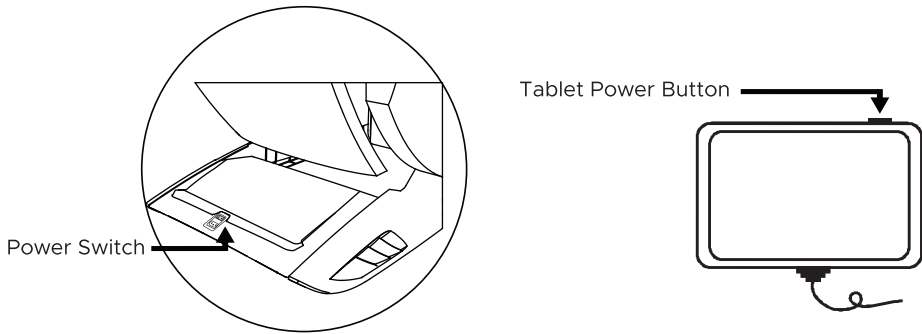

Step 12: Flip the main power switch on the chair back to on. Turn on the chair either by pressing the tablet's power button found on the top right side of the display, or the quick access control panel's power button.


Power on the tablet and select an AUTO program to start a session.



Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Infinity support at 1-603-910-5000 if you need live US-based support.

You are done; time for a Massage!

Included Accessories:

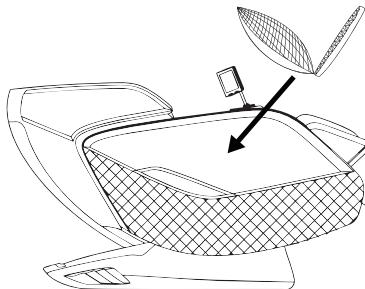

Recliner Insert Pad: use chair as a power recliner



Foot Pads: to lower massage intensity on foot soles



SCAN CODE

Register your product at www.infinitymassagechairs.com/warranty to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, scan the QR code to go directly to the URL above.

INFINITY®

72 Stard Road, Seabrook, NH 03874 (603) 910-5000 www.infinitymassagechairs.com

Version 1.7

INFINITY®
MESSAGE CHAIRS

Assembly Guide


Sovana 4D DualPro
Massage Chair

INFINITY

MASSAGE CHAIRS


Step 4:

- 4 Connect the tablet cord to the port on the chair's right side, making sure the notch and pins are aligned, then push in and twist to secure it. Place the tablet on the seat pad. Locate the shoulder airbags on each side of the chair and unzip both from the bottom so you can access the bolt hole on the shoulder panel.

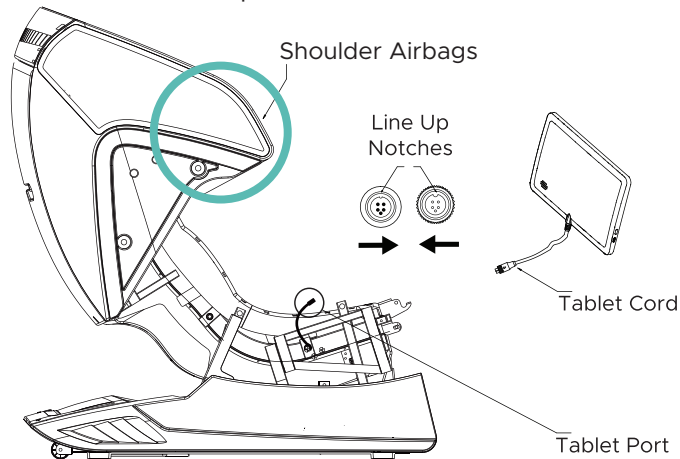


Step 6:

- 6 First, locate the electrical plug on the right arm panel and the electrical port on the chair body. Firmly clip plug into port; matching corresponding colors. Second, locate the air hose and air port between chair body and arm panel; firmly connect each air hose to air port and repeat for the other side.

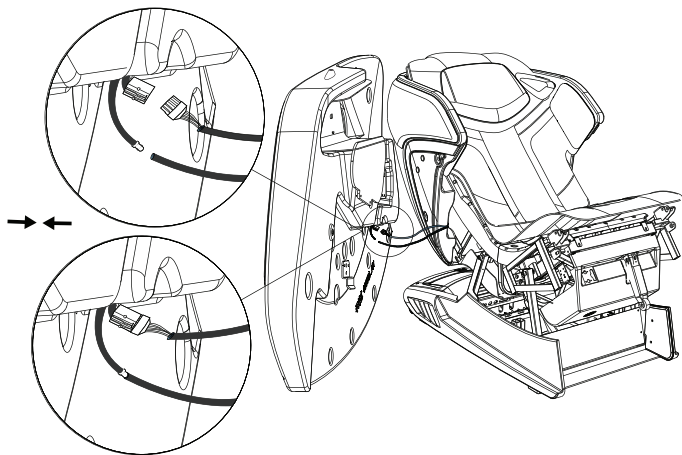


Step 8:

- 8 Move the footrest close to the chair, connect both electrical plugs to the ports, and attach the footrest air hose to the chair's air port.

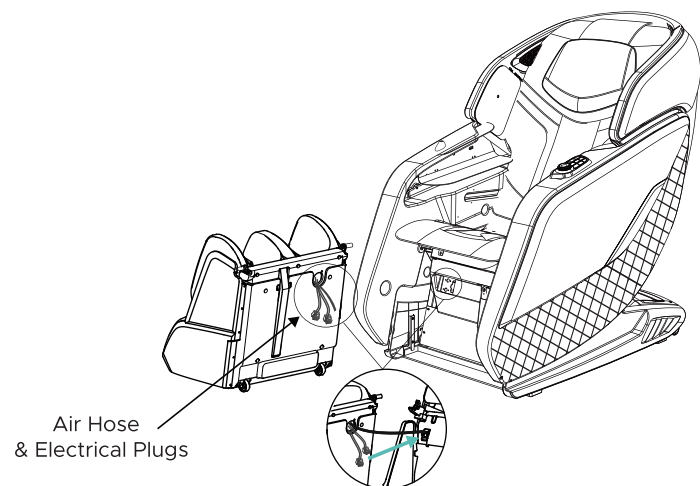


Step 10:

- 10 Remove the bolt from the tablet base and replace with tablet holder. Screw into place and tighten. Discard the bolt. Next, slide the tablet into the tablet holder.

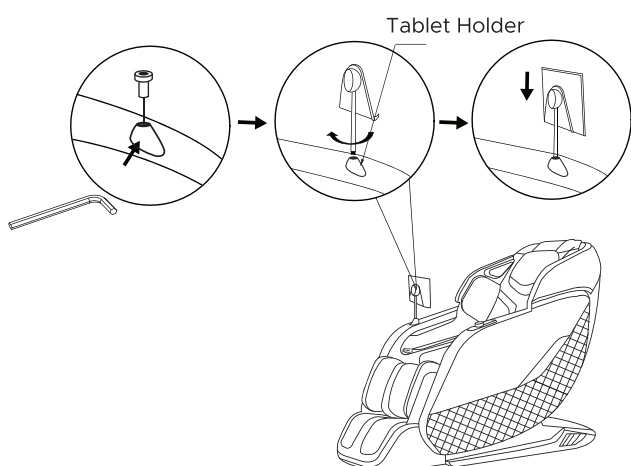


Step 5:

- 5 Determine the left arm panel from the right arm panel. Place each one to the side of the chair.

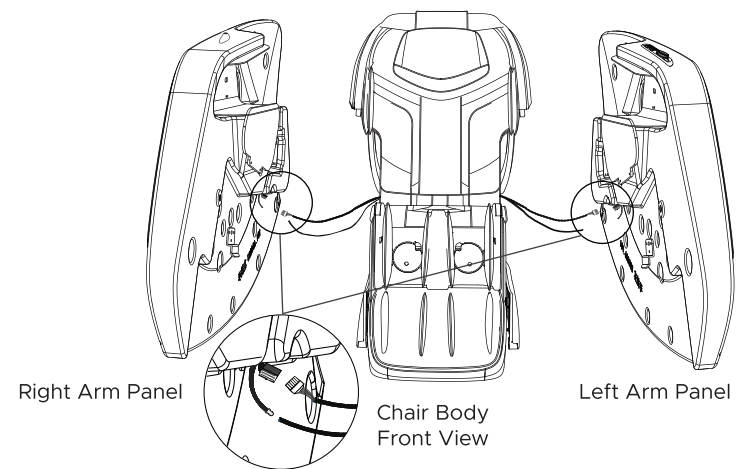


Step 7:

- 7 Align the right arm panel clip over the bottom bar until it hooks in place, then insert and tighten two M8x25MM bolts with small washers; one behind the shoulder airbag and one near the footrest. Repeat on the left side. Then, zip the shoulder airbags up.

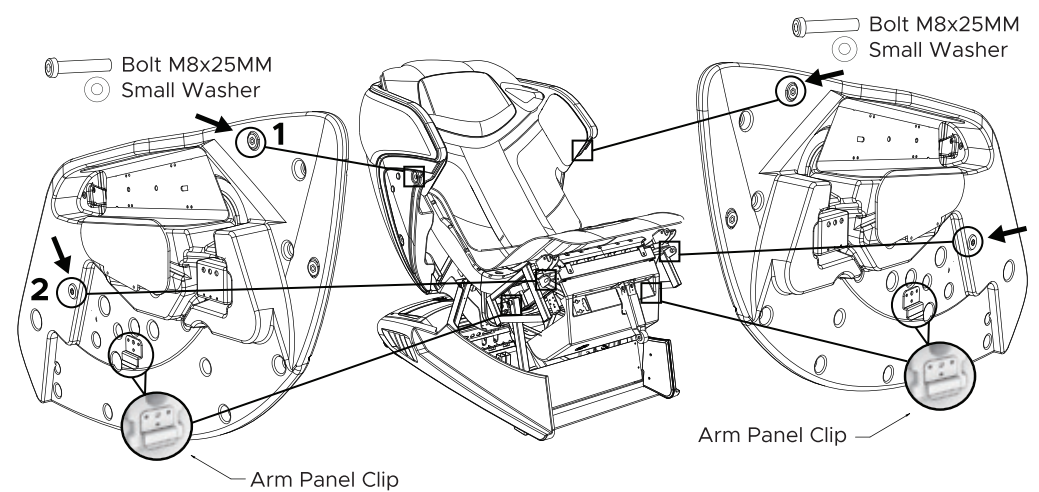

Step 9:

- 9 Place 1x plastic bushing over each footrest axle. Lift the footrest axle into the Hook insert, flip the cover down, insert 1x screw into each side of the footrest axle. Screw to tighten.

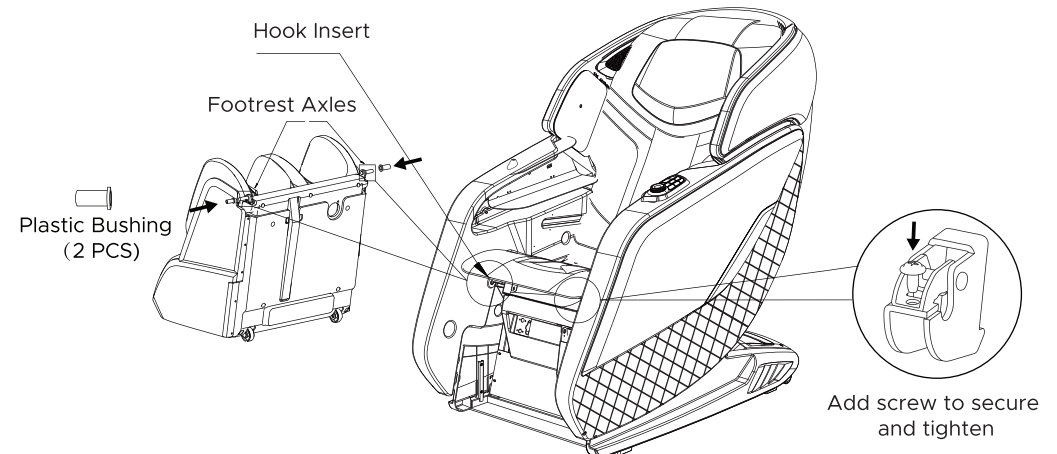

Step 11:

- 11 Find the zippers inside the chair body and align them at these points: (A) side of chair, (B) seat cushion, and (C) end of seat pad. Zip each until secure.

