

# Micro-Ohmmeter Model 6292



## MICRO-OHMMETERS



### WARNING

**INGESTION HAZARD:** This product contains a button cell or coin battery

*Measure Up*  
WITH AEMC INSTRUMENTS<sup>®</sup>



Copyright© Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments. All rights reserved.

No part of this documentation may be reproduced in any form or by any means (including electronic storage and retrieval or translation into any other language) without prior agreement and written consent from Chauvin Arnoux®, Inc., as governed by United States and International copyright laws.

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments  
15 Faraday Drive • Dover, NH 03820 USA  
Phone: (603) 749-6434 or (800) 343-1391 • Fax: (603) 742-2346

This documentation is provided **as is**, without warranty of any kind, express, implied, or otherwise. Chauvin Arnoux®, Inc. has made every reasonable effort to ensure that this documentation is accurate; but does not warrant the accuracy or completeness of the text, graphics, or other information contained in this documentation. Chauvin Arnoux®, Inc. shall not be liable for any damages, special, indirect, incidental, or inconsequential; including (but not limited to) physical, emotional or monetary damages due to lost revenues or lost profits that may result from the use of this documentation, whether or not the user of the documentation has been advised of the possibility of such damages.

# Statement of Compliance

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments certifies that this instrument has been calibrated using standards and instruments traceable to international standards.

We guarantee that at the time of shipping your instrument has met the instrument's published specifications.

**An NIST traceable certificate may be requested at the time of purchase, or obtained by returning the instrument to our repair and calibration facility, for a nominal charge.**

The recommended calibration interval for this instrument is 12 months and begins on the date of receipt by the customer. For recalibration, please use our calibration services. Refer to our repair and calibration section at [www.aemc.com/calibration](http://www.aemc.com/calibration).

**Serial #:** \_\_\_\_\_

**Catalog #:** 2129.83

**Model #:** 6292

Please fill in the appropriate date as indicated:

Date Received: \_\_\_\_\_

Date Calibration Due: \_\_\_\_\_





Chauvin Arnoux®, Inc.  
d.b.a AEMC® Instruments  
**[www.aemc.com](http://www.aemc.com)**

---

# TABLE OF CONTENTS

---

<b>1. INTRODUCTION.....</b>	<b>6</b>
1.1 INTERNATIONAL ELECTRICAL SYMBOLS.....	6
1.2 DEFINITION OF MEASUREMENT CATEGORIES (CAT) .....	6
1.3 PRECAUTIONS FOR USE  .....	7
2.1 RECEIVING YOUR SHIPMENT .....	8
2.2 ORDERING INFORMATION .....	8
2.2.1 Accessories .....	8
2.2.2 Replacement Parts .....	8
<b>2. PRODUCT FEATURES.....</b>	<b>9</b>
2.1 DESCRIPTION.....	9
2.2 FEATURES .....	10
2.3 APPLICATIONS.....	10
2.4 CONTROL FEATURES.....	11
2.5 CURRENT PROBE CONNECTOR .....	11
2.6 LCD DISPLAY .....	12
2.7 KEYPAD AND FUNCTION BUTTONS .....	12
2.8 ROTARY KNOB .....	13
<b>3. INSTRUMENT CONFIGURATION.....</b>	<b>14</b>
3.1 TIME AND DATE SETTINGS.....	15
3.2 DISPLAY OPTIONS .....	17
3.3 COOLING SYSTEM.....	17
3.4 LANGUAGE .....	18
<b>4. OPERATION .....</b>	<b>19</b>
4.1 GETTING STARTED .....	19
4.2 TEST LEADS .....	20
4.3 MAIN SCREEN .....	20
4.4 CHANGING THE OPERATING MODE .....	20
4.5 CREATING A NEW OBJECT NAME .....	21
4.6 ADJUSTING THE TEST CURRENT .....	21
4.7 ADJUSTING THE TEST DURATION.....	22
4.8 MEASUREMENT FILTERING AND WORKING FREQUENCY .....	23











4.9 RUNNING A TEST .....	23
4.9.1 Normal Mode .....	23
4.9.2 Both Sides Grounded (BSG) Mode .....	24
4.9.3 Making Current Adjustments .....	24
4.10 WARNING MESSAGES .....	24
4.10.1 Saving a Test.....	25
4.11 STORING OBJECTS IN MEMORY .....	26
4.11.1 Viewing Stored Results.....	26
4.11.2 Navigating through an Object.....	27
4.12 CHECKING MEMORY USAGE.....	28
4.13 REMOVING TESTS AND OBJECTS FROM MEMORY .....	28
4.13.1 Erasing a Single Test.....	28
4.13.2 Erasing an Object.....	29
4.13.3 Erasing the Entire Memory .....	29
4.13.4 Memory Compaction.....	30
<b>5. DATAVIEW® SOFTWARE.....</b>	<b>31</b>
5.1 INSTALLING DATAVIEW® .....	31
5.2 MICRO-OHMMETER CONTROL PANEL .....	32
5.3 CONNECTING THE INSTRUMENT .....	32
<b>6. SPECIFICATIONS .....</b>	<b>33</b>
6.1 CURRENT MEASUREMENT WITH THE OPTIONAL MR6292 CLAMP .....	34
<b>7. MAINTENANCE.....</b>	<b>35</b>
7.1 WARNING  .....	35
7.2 CLEANING .....	35
7.3 FUSE REPLACEMENT .....	35
7.4 REPAIR AND CALIBRATION .....	36
7.5 TECHNICAL AND SALES ASSISTANCE .....	36
7.6 LIMITED WARRANTY .....	37
7.6.1 Warranty Repairs .....	37

# 1. INTRODUCTION

Thank you for purchasing an AEMC® Instruments **Micro-Ohmmeter Model 6292**.

For best results from your instrument and for your safety, read the enclosed operating instructions carefully and comply with the precautions for use. Only qualified and trained operators should use this product.

## 1.1 INTERNATIONAL ELECTRICAL SYMBOLS

	<b>CAUTION! HOT SURFACE!</b> The metallic parts close to this symbol may cause burn-related injuries.
	Refers to a type B current sensor. Application or withdrawal not authorized on conductors carrying dangerous voltages. Type B current sensor as per IEC 61010-2-032.
	Signifies that the instrument is protected by double or reinforced insulation.
	Application or withdrawal authorized on conductors carrying dangerous voltages. Type A current sensor as per IEC 61010-2-032.
	Indicates a risk of electric shock. The voltage at the parts marked with this symbol may be dangerous.
	<b>CAUTION - Risk of Danger!</b> Indicates a <b>WARNING</b> . Whenever this symbol is present, the operator must refer to the user manual before operation.
	Battery
	Indicates Important information to acknowledge
	This product complies with the Low Voltage & Electromagnetic Compatibility European directives.
	In the European Union, this product is subject to a separate collection system for recycling electrical and electronic components in accordance with directive WEEE 2012/19/EU.

## 1.2 DEFINITION OF MEASUREMENT CATEGORIES (CAT)

- CAT IV:** Corresponds to measurements performed at primary electrical supply (< 1000 V).  
*Example: primary overcurrent protection devices, ripple control units, and meters.*
- CAT III:** Corresponds to measurements performed in the building installation at the distribution level.  
*Example: hardwired equipment in fixed installation and circuit breakers.*
- CAT II:** Corresponds to measurements performed on circuits directly connected to the electrical distribution system.  
*Example: measurements on household appliances and portable tools.*

## 1.3 PRECAUTIONS FOR USE

The protection obtained by the instrument can be compromised if it is used in a way that is not recommended by the manufacturer.

- Do not attempt to perform any tests with this instrument until you have read the user manual.
- Tests are to be carried out on de-energized circuits only! Never connect the unit to a live circuit.
- The micro-ohmmeter must be connected to the earth/ground point, through the ground terminal or the power cord.
- Be sure the power cord is accessible at all times, in case the instrument needs to be quickly unplugged for any reason. Always disconnect the power cord before performing any repair on the instrument.
- Do not obstruct either the intake vents or the fan, to avoid overheating.
- During a circuit breaker measurement its contacts must be closed and connected to an earth/ground point. The end connected to an earth/ground point must be connected to the **C**- terminal.
- Ensure the terminals are free of any voltage in relation to earth/ground point and between each other. Take into account that in a substation you will find, in disconnected points, high potential levels in relation to the earth/ground point. Those potentials are caused by presence of electromagnetic fields and can be minimized following the indications in the paragraph before.
- Make sure that the current connections are well connected to avoid undesirable heating.
- Be careful when manipulating the current terminals in the instrument. High temperatures may occur in the current connections.
- Never connect or disconnect the cables during a measurement. If a modification must be made, press the STOP button first.
- The micro-ohmmeter should never be used in an explosive environment (this includes poorly ventilated battery rooms and enclosures).
- The instrument, test leads and measuring wires must be free of defects and should be changed if there is any evidence of deterioration (insulation split, burnt, etc.).
- Never exceed the safety values indicated in the specifications.

## 2.1 RECEIVING YOUR SHIPMENT

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage. Save the damaged packing container to substantiate your claim.

## 2.2 ORDERING INFORMATION

**Micro-Ohmmeter Model 6292** (200A, DataView® Software) ..... **Cat. #2129.83**  
*Includes meter and an accessory bag supplied with a set of 25 ft Kelvin clips (200 A hippo), ground lead (green) with clamp, 5 ft USB cable, 110V US power cord, quick start guide and a USB drive supplied with a user manual and DataView® software.*

### 2.2.1 Accessories

Current Probe Model MR6292..... **Cat. #2129.86**  
Lead - Set of 2, 50 ft Kelvin Clips (200 A-Hippo) ..... **Cat. #2129.73**

### 2.2.2 Replacement Parts

Lead, Replacement Set of 2, 25 ft Kelvin Clips (200 A-Hippo) ..... **Cat. #2129.72**  
Ground Lead (green) w/clamp..... **Cat. #2129.88**  
Carrying Bag..... **Cat. #2133.71**  
USB Cable (5 ft) - *(Discontinued - Replacement part is now*  
**Cat. #2136.80 - Cable 10 ft USB Type A to Type B)**..... **Cat. #2140.46**  
Power Cord..... **Cat. #5000.40**

<p><b>Order Accessories and Replacement Parts Directly Online</b> Check our Storefront at <a href="http://www.aemc.com/store">www.aemc.com/store</a> for availability</p>
---



---

## 2. PRODUCT FEATURES

---

### 2.1 DESCRIPTION

The AEMC® Instruments Model 6292 is a portable high-current Micro-Ohmmeter that incorporates optimized filters and protection for measurements in electrical substations. The Model 6292 can be used to accurately measure very low contact resistances on high voltage circuit-breakers and switches, busbars, etc., with test currents up to 200 A. It employs the four-terminal method Kelvin principle to eliminate errors caused by test leads and their contact resistances.

The AEMC® Instruments Model 6292 incorporates a technology known as True DC. Its high frequency switching system outputs very low ripple less than 2 % of full range. Measurement accuracy is guaranteed through a state-of-the-art signal amplification system, offset-free with high long-term stability. Resistance readings are shown in the alphanumeric display with up to 4½ digit resolution. It allows measurement of resistances up to 1  $\Omega$  with resolution as low as 0.1  $\mu\Omega$ . Test currents can be adjusted by the operator and are displayed on the digital display.

The Model 6292 has an internal memory for storing up to 8000 readings. These stored readings can be downloaded to a computer through a USB interface. The advanced high current generation system significantly decreases both weight (24 lbs [11 kg]), and size. The hard plastic case is highly resistant to impact and environmental conditions. Internal thermal sensors in all sensitive components prevent overheating damage to the instrument.

This rugged but light-weight instrument can easily be carried by one person.

## 2.2 FEATURES

- Cooling system increases the number of sequential tests that can be performed
- Programmable and manual test current selection from (5 to 200) A
- Accurately measures low contact resistances with test currents up to 200 A
- Measures resistances from 0.1  $\mu\Omega$  to 1  $\Omega$
- Low resolution of 0.1  $\mu\Omega$
- Perform tests normally or with both sides of the switch gear connected to the ground
- Display is available in four languages (English, French, Spanish and Italian)
- Can measure objects with both sides grounded
- Programmable test duration from (5 to 120) seconds, with unlimited duration tests at currents 100 A and below.
- Direct viewing of stored tests on the large LCD digital display
- Stores up to 8000 test results
- USB communication interface
- Direct printout using DataView® software and a PC
- Configurable from a PC using DataView
- Rugged, light-weight and water-resistant case
- Protected by double insulation terminals, and USB isolated from the power supply

## 2.3 APPLICATIONS

- Test switchgear contact resistance
- Test circuit breaker contact resistance
- Test air frame bonding
- Test rail bonding
- Test pipeline bonding

# 2.4 CONTROL FEATURES

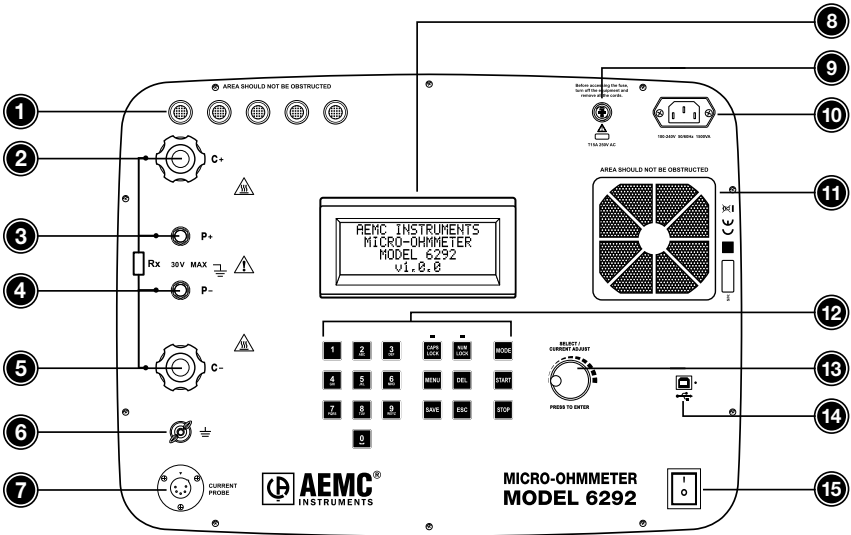


Figure 2-1

1. Intake vents
2. Current output terminal (C+)
3. Potential terminal (P+)
4. Potential terminal (P-)
5. Current output terminal (C-)
6. Ground terminal
7. Current probe connector
8. LCD Display
9. Fuse
10. Power cord connector
11. Fan
12. Alphanumeric keypad and function buttons
13. Rotary test knob
14. USB communication port
15. ON/OFF switch

# 2.5 CURRENT PROBE CONNECTOR

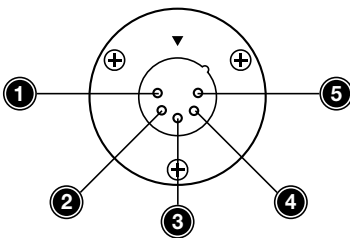


Figure 2-2

1. Positive supply for the current probe (+9 VDC)
2. Negative supply for the current probe (Gnd)
3. Not connected
4. Current probe output signal (+)
5. Current probe output signal (-)

**NOTE:** The positive supply can supply 80 mA maximum.

## 2.6 LCD DISPLAY

The four line x 20-digit alphanumeric LCD display provides the following information:

- Measurement result and corresponding measuring unit
- Elapsed time since the measurement started
- Test current
- Messages to the operator

The display also features an adjustable backlight.

## 2.7 KEYPAD AND FUNCTION BUTTONS

The Model 6292 can be operated and configured using the alphanumeric keypad. The keypad enables you to name objects (groups of tests) and enter date/time information, and the function buttons let you select a number of configuration settings.

**The function buttons perform as follows:**

- **CAPS LOCK:** When enabled (indicated by a green LED just above it) results in all typed letters appearing capitalized on the display. When deselected, letters appear in lower case.
- **NUM LOCK:** When enabled causes the keypad to print numbers rather than letters. When NUM LOCK is disabled, the keypad prints letters.
- **MENU:** Displays the main menu, from which you can configure test and instrument settings.
- **DEL:** Erases characters.
- **SAVE:** Saves the configuration or advances one menu level.
- **ESC:** Aborts some functions or returns back one menu level.
- **MODE:** Selects between Normal or BSG (both sides grounded) operation modes.
- **START:** Starts a test.
- **STOP:** Stops a test.

## 2.8 ROTARY KNOB

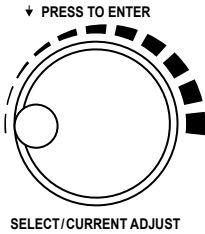


Figure 2-3

The rotary knob has two primary purposes:

1. Adjusts the current during a test
  2. Navigates through menus and select options.
- When the main screen is displayed, a short press will perform the **MENU** button function.
  - When in a menu, rotating the knob navigates through listed options; a short press selects the highlighted option.
  - When in a menu, pressing the rotary knob for two seconds performs an **ESC** button function.
  - During a fixed current test, a short press will allow manual adjustment of the test current.

---

## 3. INSTRUMENT CONFIGURATION

---

The Model 6292 can be configured by performing the following:

- Press the **MENU** button to display the main menu.
- Turn the rotary knob clockwise (to move up) or counter-clockwise (to move down) to navigate through the listed options. When the desired option is highlighted, select it by giving the rotary knob a short press.
- Press the rotary knob or the **SAVE** button to save a setting.
- Press and hold the rotary knob to return to the previous menu.



**NOTE:** At any point during navigation, pressing the **MENU** button will return directly to the Main Menu.

---

**The following parameters are configurable:**

### MAIN SCREEN:

- Setup Test
  - Edit Object Name
  - Test Current
  - Test Duration
  - Return

### LANGUAGE:

- English
- Français
- Italiano
- Español

### MEMORY:

- Recall
- Clear All
- Usage
- Return

### SETTINGS:

- Date Format
  - MM/DD/YY
  - DD/MM/YY

- Time Format
  - 12 H
  - 24 H
- Set Date
- Set Time
- Auto Save
  - OFF
  - ON
- Fan
  - AUTO
  - ON
- Display
  - Backlight
  - Contrast
  - Return
- System Info
- Return



**NOTE:** The instrument can also be configured from the Micro-Ohmmeter Control Panel within DataView®.

---

### 3.1 TIME AND DATE SETTINGS

A good way to become familiar with the Model 6292 menu options and navigation features is to enter time and date settings. For example, you can choose either MM/DD/YY or DD/MM/YY format for dates. To set this option, press the **MENU** button to display the main menu:

**=== MENU ===**

**→ SETUP TEST**

**LANGUAGE**

**MEMORY**

Turn the rotary knob counter-clockwise until the arrow scrolls down to the Settings option. (Due to limited space, only three options at a time can be displayed. Scrolling displays additional menu options.)

```
=== MENU ===  
LANGUAGE  
MEMORY  
➔ SETTINGS
```

With Settings selected, press the rotary knob to display the Settings menu.

```
=== SETTINGS ===  
➔ DATE FORMAT  
TIME FORMAT  
SET DATE
```

Select Date Format, and choose either MM/DD/YY or DD/MM/YY.

```
=== DATE FORMAT ===  
• MM/DD/YY  
DD/MM/YY
```

After you make your selection by pressing the rotary knob, press the **ESC** button to return to the Settings menu. You can now choose the time display format (12 or 24 hour) by using the rotary knob to select the Time Format option.

```
=== TIME FORMAT ===  
• 12H  
24H
```


Now that you have defined the time and date display formats, you can now enter the actual time and date. To do this, return to the Settings menu and select Set Date:

```
SET DATE  
10/16/2013
```



Use the number keypad to enter the current date. If you make a mistake, you can press **ESC** to return to the Settings menu without changing the current settings. If you enter an invalid number, such as **20** in the MM field, the system defaults to the highest allowable value (in this case 12).


To enter the system time, select Set Time from the Settings menu:

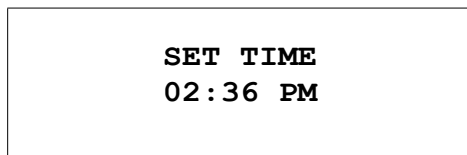

As with the date, use the number keypad to enter the current time. If you are using 12 hour time format, turn the rotary knob to toggle between AM and PM.

## 3.2 DISPLAY OPTIONS

The Settings menu lets you adjust your display's backlight and contrast levels to suit the illumination level in the environment in which the Model 6292 is being used. To do this, select Display from the Settings menu. The Display menu appears:

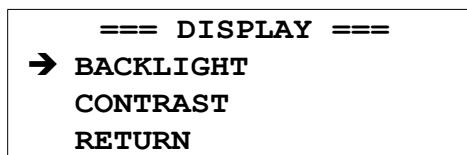

Selecting either Backlight or Contrast displays a bar graph that represents the current setting. Use the rotary knob to raise or lower the level as appropriate. When you are finished with the Display menu, you can select Return or press the **ESC** button to return to the Settings menu.

## 3.3 COOLING SYSTEM

The Model 6292 features a cooling system that increases the number of sequential tests that you can run without overheating the instrument. A fan in the front panel exchanges internal heated air with ambient air. The cooling system includes a filter for preventing dust and dirt from entering the instrument.

You can choose to have the fan run continuously, or have the instrument run the fan only when it needs to cool its internal temperature. To set this option:

- Go to the main menu and select Settings.
- Select Fan, and then select either ON (the fan runs continuously) or AUTO (the fan runs only when the instrument needs to cool its internal temperature).

## 3.4 LANGUAGE

There are four languages available to use for the text on the LCD display: English, French, Italian and Spanish.

### To change the language of all screens:

- Go to the main menu and select Language. A list of available language options is displayed with the present language marked.
- Turn the rotary knob clockwise or counter-clockwise to select the desired language. Confirm the choice by pressing the **SAVE** button or the rotary knob.

---

## 4. OPERATION

---

### 4.1 GETTING STARTED

---



**WARNING:** Read the user manual and safety warnings before using this instrument. Safety procedures and rules for working near high voltage energized systems must be observed during the use of this instrument. The generated voltages and currents may be dangerous.

---

The Micro-Ohmmeter Model 6292 uses the four-terminal Kelvin method to prevent test lead resistance errors during measurement. The test current, selected by the operator, and the reading is obtained by comparison through internal high-stability standards.

1. Connect the instrument to a 120/240 V 50/60 Hz AC power supply.
2. Perform a test with the test leads shorted. If the current does not reach the preset current (or the measured resistance is significantly higher than  $0\ \Omega$ ), check the connection and try again. If the problem persists, contact technical assistance.
3. Before turning the instrument on, connect the test leads to the device to be tested and to the front panel terminals.

#### Connection Example in BSG Mode:

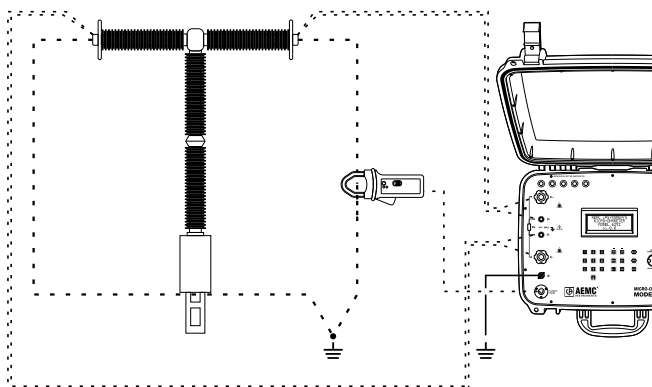


Figure 4-1



**WARNING:** Do not connect or disconnect the test leads during a measurement. Grounding connections are strongly recommended to protect the operator and equipment. Use a strong grounding point as close as possible to the device under test. This ground is required to verify the instrument is working properly.

---

## 4.2 TEST LEADS



**WARNING:** Only use the test leads supplied with the instrument for measurement and calibration.

---

- Make sure that the current connections are securely connected to avoid overheating.
- Carefully adjust the current terminals of the instrument. High temperatures may occur in the current connections.
- Make sure that the leads are not coiled during the measurement.



**WARNING:** High temperature may occur in the current connections and around the parts where the Hot Symbol is marked.

---

## 4.3 MAIN SCREEN

The main screen displays the present test parameters, including Object Name, Test Mode, Test Current, Test Duration, Date, and Time.

The preceding screen indicates that the test will be performed with a current of 100A for 60 seconds in NORMAL mode and that any saved tests will be stored in an object named **Object Name**. For tests in which the time duration has been set to Unlimited, the main screen appears as follows:

<b>OBJECT NAME</b>		
<b>NORMAL</b>	<b>(100A</b>	<b>---S)</b>
<b>MENU</b>		
<b>DATE</b>		<b>HOURL</b>

Note the dashes in the second line, indicating there is no time limit set for this test.

## 4.4 CHANGING THE OPERATING MODE

There are two operation modes, NORMAL and BSG (Both Sides Grounded). The difference between the operation modes is the connections to the grounding.

To choose the operation mode press the blue **MODE** button while the main screen is displayed. Check the main screen to verify the desired operational mode is displayed.

## 4.5 CREATING A NEW OBJECT NAME

To create a new object name to store the new tests, press the **MENU** button to display the main menu, select Setup Test, then select Edit Object Name. The current object name (if any) will be displayed. To edit this name, do the following:

- Press **DEL** to erase characters.
- Press **CAPS LOCK** to choose between uppercase or lowercase letters. Note that for uppercase the green LED above the button will be on.
- Press **NUM LOCK** to input numbers. The LED above the button will be on when this button is selected.
- Press the appropriate keypad button until the desired letter is displayed. A brief pause of around two seconds will advance the cursor and wait for the next character input.
- Press the **SAVE** button or give the rotary knob a short press to enter the object name into memory.
- Pressing **ESC** will cancel the operation (changes will not be saved).

**EDIT OBJECT NAME**  
**SWITCH: 8471 12**



**NOTE:** Object names are limited to a maximum of 20 characters.

---

When you change the object name, the number of tests associated with it is set to one. This occurs because the new object name represents a new group of tests.


## 4.6 ADJUSTING THE TEST CURRENT

To adjust the test current, go to the main menu, select Setup Test, then select Test Current. A list of available fixed test currents and a **MANUAL** option will be displayed. When you select **MANUAL**, you will set the current during the test by turning the rotary knob.



Turn the rotary knob clockwise or counter-clockwise to navigate the available current level options (50, 100, 150, or 200) A. Confirm the choice by pressing the **SAVE** button or rotary knob. To abort the setup press **ESC**.

## 4.7 ADJUSTING THE TEST DURATION

To adjust the duration of a test, go to the main menu, select Setup Test, then Test Duration. This displays two options. Timed sets a specific duration for the test; and Unlimited allows the test to run continuously.

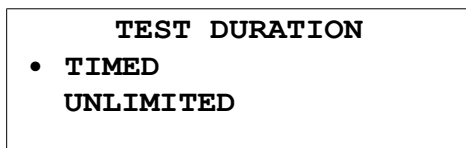

If you select Timed, a number box will appear containing the current time configuration. Type the desired time using the keyboard or turn the rotary knob to adjust the test time. The timed test duration must be between 5 and 120 seconds. If a value outside of this range is selected, a MIN or MAX warning will be displayed, as shown in the example below; and the time should be entered again.

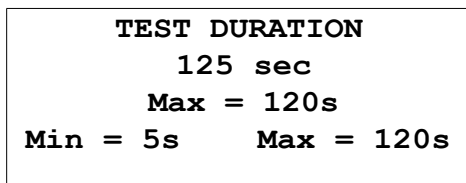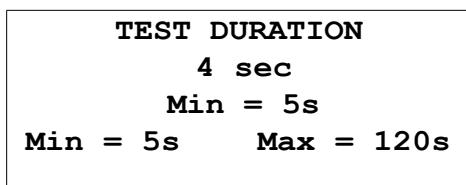

---

**NOTE:** You can only run Unlimited tests if the Test Current setting is 100A or lower. If the current has been previously set to above 100 A, the Unlimited option is not available.



If you select Unlimited, and subsequently adjust the Test Current to above 100 A, the Test Duration prompt will appear. You must then enter a specific duration for this test.

Unlimited is available when you select the MANUAL option for the Test Current setting. If during the test you manually adjust the current to over 100 A, the test will automatically switch to timed mode, with a duration of 120 seconds. The test will conclude after 120 seconds, even if you manually set the current back below 100 A before the conclusion of the test.

---

To abort the setup process, press **ESC** or press the rotary knob for 2 seconds.

## 4.8 MEASUREMENT FILTERING AND WORKING FREQUENCY

The Model 6292 has a strong filter to cancel the (50 or 60) Hz noise present in a measurement due to the induction generated by high voltage substations. The working frequency is auto detected by the instrument, with the appropriate filter selected automatically.

### 4.9 RUNNING A TEST

Prior to starting a test, check that the configuration is correct for the desired test and that all connections and grounding are good. Pressing the **START** button will start the configured test.

A screen will appear with the name of the object and number of the test:

```
Starting Test:
SWITCH: 8471 12
Number:      0001
```

This screen will display for a few seconds, until the actual test begins.

#### 4.9.1 Normal Mode

In **NORMAL** mode operation, the instrument will display a screen similar to the example below while the test is underway:

```
      R=100.0uΩ
      I=150A
DURATION:    015/060s
10/20/13     01:25 PM
```

- The first line shows the resistance under test (100  $\mu\Omega$ ).
- The second line shows the current through the resistance.
- The third line indicates the elapsed time and (in timed tests) the duration of the test. The example above is a timed test. The elapsed time is 15 seconds and the total time is 60 seconds, so in this case the test still has 45 seconds to run. In an Unlimited time test, the third line simply shows the elapsed time.
- The fourth line shows the present date and hour.
- To end a test for which the duration has been set to Unlimited, press the **STOP** button.

## 4.9.2 Both Sides Grounded (BSG) Mode

To run a test in **BSG** mode, you must use the Model MR6292 current probe, which is rated for 40 A or lower.

In **BSG** mode, the instrument will display the screen below:

<b>R=100.0uΩ</b>	
<b>It=142A</b>	<b>Ig=8.0A</b>
<b>DURATION:</b>	<b>015/060s</b>
<b>10/20/13</b>	<b>03:25 PM</b>

The data displayed on the screen is basically the same as in **NORMAL** mode. The difference is the indication of **Ig** current measured by the current probe.

The second line shows:

- **It** - the current running through the resistance.
- **Ig** - the current running through the ground.

## 4.9.3 Making Current Adjustments

During a test with preselected current, you can make current adjustments **on the fly**. Pressing the rotary knob during a test enables **MANUAL** mode. Turn the rotary knob clockwise to increase the current or counter-clockwise to decrease current.

For example, after the start of a test, if the current is 150 A and you press the rotary knob, the current can be adjusted to any value between (5 and 200) A.



**NOTE:** As mentioned previously, if you are running a manual test with the Test Duration set to Unlimited and you adjust the current to a value higher than 100 A, the test will automatically become a timed test with a duration of 120 seconds.

At the end of the test, the previous configuration is recovered for the preselected value of the current.

## 4.10 WARNING MESSAGES

The following messages may appear on the LCD display during the test.

- **TEST COMPLETED:** Indicates that the test was completed successfully. This message will blink; press **ESC** to return control to the main display.
- **LOW CURRENT:** Indicates that the current is not high enough to measure the resistance.
- **OVERRANGE:** Indicates that the resistance is above the maximum range for the Model 6292.
- **OVERHEATING:** Indicates that the instrument has reached the maximum internal temperature limit. This message will blink.



- **PROTECTION ACTIVATED:** Indicates that the instrument has stopped the test due to a problem. Check the connections to eliminate bad contacts, power supplying, and grounding. This message will blink.
- **VOLTAGE DETECTED:** Indicates that the instrument has detected voltage above 20 V on the current terminals and potential terminals. Check the grounding connections. Tests cannot be performed in this situation.

### 4.10.1 Saving a Test

To save a test result, press **SAVE** during the test to get partial results or at the end of the test to save the final result.

**Timed tests only:** If the Auto Save function in the menu settings is set to ON, the final result will be automatically saved when the timed test is complete.

**To enable Auto Save:**

- Press the Menu button to display the main menu.
- Select Settings, and then select Auto Save.
- Select ON, and then save the setting by pressing Save or by pressing the rotary knob.

A message appears at the bottom of the LCD when a test is saved:

**R=33.1uΩ**  
**I=10A**  
**TEST COMPLETED**  
**Saved! 73% Free Mem**

If the memory is full, a message will be displayed every time a save command is sent:

**R=33.1uΩ**  
**I=10A**  
**TEST COMPLETED**  
**Memory Full**

If the memory is full, you must erase some objects or tests to free up memory space for saving new tests, as explained in the next section of this user manual.

When saving a test, the following information is stored in the internal memory:

- Name of the object
- Test number
- Current of test (in **BSG** mode, both the test current and ground current are displayed)
- Partial, final and total time of test
- Measured resistance
- Date and time



**NOTE:** An object can contain several tests, and a test can contain several results.

## 4.11 STORING OBJECTS IN MEMORY

The storage capacity for the Model 6292 is approximately (1600 to 8000) readings depending on how the tests are stored. For example, if a new object is created for each measurement, only around 1600 results can be saved. But if the name of the object is never changed, it is then possible to save up to 8000 measurements.

### 4.11.1 Viewing Stored Results

To view a previously stored test, display the main menu and select Memory. This displays the Memory menu:

```
==MEMORY RECALL==  
→ RECALL  
  CLEAR ALL  
  USAGE
```

Select Recall.

If at least one object has been saved, the most recent object will be displayed showing the following information:

- Object name.
- The number of tests stored in this object.
- The date of the most recent test stored in this object.
- If additional objects are stored in memory, the **PREVIOUS** and **NEXT** options appear at the bottom of the display to navigate through the objects.

```
SWITCH: 8471 12  
NUMBER OF TESTS: 002  
LAST TEST: 10/23/13  
< PREVIOUS      NEXT >
```

If there are no objects saved into memory, the message below will be displayed. Press **ENTER** or **ESC** to proceed.

```
NO DATA IN MEMORY!
```

### 4.11.2 Navigating through an Object

To navigate from one object to another, turn the rotary knob clockwise or counter-clockwise until the desired object name is displayed. To see individual tests within the selected object, press the rotary knob. A screen similar to the following appears:

<b>REGISTER:</b>	<b>004</b>
<b>10/16/13</b>	<b>10:38AM</b>
<b>MEASUREMENTS:</b>	<b>001</b>
<b>&lt;PREVIOUS</b>	<b>NEXT&gt;</b>

This screen displays the following data:

- The memory register location of the stored test.
- Date and time that the test was performed.
- Number of stored measurements in this test.
- PREVIOUS and NEXT options to indicate the presence of older or later tests.

Turn the rotary knob clockwise or counter-clockwise to navigate through the tests stored in this object. An object can have several tests stored. When the desired test is displayed, press the rotary knob or the SAVE button. A screen similar to the following appears:

<b>102.7<math>\mu\Omega</math></b>
<b>I=100A</b>
<b>DURATION: 015s</b>
<b>&lt; 01/03 &gt;</b>


**This screen displays the following information:**

- Resistance under test.
- Test current at the time of saving.
- Elapsed time at the time of saving.
- Partial/total results. In the preceding example, the test contains three measurements; the first of these three is currently displayed.

Turn the rotary knob clockwise or counter-clockwise to navigate through the measurements recorded during this test. A test can have several partial results stored.

## 4.12 CHECKING MEMORY USAGE

To check how much memory remains available on the Model 6292 instrument, display the main menu, and select Memory. Then select Usage. A bar graph will indicate the used memory percentage, as follows:

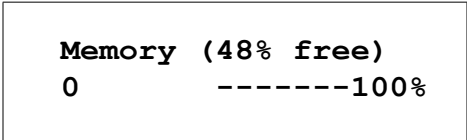

Memory (48% free)  
0 -----100%


## 4.13 REMOVING TESTS AND OBJECTS FROM MEMORY

To conserve available memory on the Model 6292, you can delete individual tests or objects. You can also clear memory, deleting all currently stored objects at once.

### 4.13.1 Erasing a Single Test

To erase a single test within an object:

- Go to the main menu and select Memory.
- Select Recall and navigate to the object that contains the test you want to delete.
- Select the object, and navigate to the test to be deleted.
- Press **DEL** to erase the test. A confirmation will be requested:

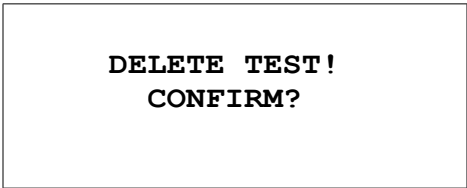

**DELETE TEST!**  
**CONFIRM?**

Confirm by pressing the rotary knob or press **ESC** to abort. If confirmed, the following screen will be displayed for four seconds:



**TEST DELETED!**

### 4.13.2 Erasing an Object

To remove an object from memory, do the following:

- Go to the main menu and select Memory.
- Select Recall and navigate to the object to be deleted.
- Press **DEL** to erase the selected object. A confirmation will be requested:

**DELETE OBJECT!  
CONFIRM?**

Confirm the deletion by pressing the rotary knob or press **ESC** to abort. If confirmed, the following screen will be displayed for four seconds:

**OBJECT DELETED !**

### 4.13.3 Erasing the Entire Memory

You can also erase all the content currently stored in memory. To do this:

- Go to the main menu and select Memory.
- Select Clear All. To prevent accidental erasing of the memory, the instrument will ask you to confirm whether or not you want to proceed.

**CLEAR MEMORY!  
CONFIRM?  
WILL NOT BE ABLE TO  
RECOVER!**

Press the rotary knob to confirm. Press **ESC** at any time during the erasing process to abort the operation.

If you confirm the deletion, the instrument displays a four-digit security code and prompts you to enter this number via the keypad. This is intended to further limit the possibility that the deletion is unintended (for example, the result of erroneously pressing the **DEL** button). Erasing the memory will start only if the security code is entered correctly. The security code is a randomly generated number.

**PLEASE TYPE THE  
SECURITY CODE BELOW:  
(0842)**

After you enter the code, press the rotary knob to confirm.

A message will be displayed displaying success...

**ALL RECORDS DELETED!**

...or failure.

**INVALID CODE!  
TRY AGAIN**

#### **4.13.4 Memory Compaction**

When the instrument is turned on, it scans its memory looking for unused spaces left behind from the erasing process. When unused spaces are found, the compaction process is started. This may take several seconds before completing. This scan occurs every time you erase objects or tests from memory.

---

## 5. DATAVIEW® SOFTWARE

---

### 5.1 INSTALLING DATAVIEW®



**WARNING:** Do not connect the instrument to the computer before installing the software and drivers.

---

When you purchase an AEMC® Instruments device supported by DataView®, the software is included as part of the product package. DataView program files are stored on a USB Drive.



**NOTE:** When installing, the user must have Administrative access rights during the installation. The users access rights can be changed after the installation is complete. DataView must be reinstalled for each user in a multi-user system.

---

DataView® software with the Micro-Ohmmeter Control Panel allows you to:


- Connect the instrument to a computer
- Configure and schedule a recording session on the instrument
- Download recorded data from the instrument to the computer
- Generate reports from downloaded data
- View instrument measurements in real time on the computer

To install DataView on a computer:

1. Insert the USB drive that comes with the instrument into a USB port on your computer.
2. If Autorun is enabled, an AutoPlay window appears on your screen. Click **Open folder to view files** to display the DataView folder. If Autorun is not enabled or allowed, use Windows Explorer to locate and open the USB drive labeled **DataView**.
3. When the DataView folder is open, double-click the file **Setup.exe** in the root directory.
4. The Setup screen appears. This enables you to select the language version of the setup program. You can also select additional install options (each option is explained in the Description field). Make your selections and click **Install**.
5. Click **OK** to confirm setup. The InstallShield Wizard screen appears. This program leads you through the DataView install process. As you complete these screens, be sure to check **Micro-Ohmmeters** when prompted to select features to install.
6. When the InstallShield Wizard finishes installing DataView, the Setup screen appears. Click **Exit** to close. The DataView folder appears on your computer desktop.
7. Open the DataView folder on your desktop. This displays a list of icons for the Control Panel(s) installed with DataView.

## 5.2 MICRO-OHMMETER CONTROL PANEL


Clicking the **DataView** icon in the DataView folder on your desktop opens the core DataView program. Clicking the **Micro-Ohmmeter Control Panel**

icon  opens the Micro-Ohmmeter Control Panel.


In general, core DataView features are for creating, viewing, editing, and storing DataView reports; while the Control Panel is for connecting to, configuring, viewing measurements on, and downloading data from the instrument.

You can access all DataView features through either the DataView icon or the Control Panel icon. For users who interact with micro-ohmmeter instruments, we recommend primarily using the Control Panel. However, there are situations where using the core DataView icon may be more convenient, such as when viewing multiple archived reports from different AEMC® Instruments product families.

## 5.3 CONNECTING THE INSTRUMENT

To connect the instrument to the PC, select **Connect** from the Instrument menu. Alternatively, you can connect the instrument by clicking the **Connect** icon  in the toolbar. Either action displays the Connection Dialog Box. This dialog box allows you to specify the serial port and communication rate to be used to access the instrument.

- **Communication Port:** The USB port through which the PC will communicate with the instrument. Select the desired serial port by selecting it from the Communications port drop-down list. If your computer's Device Manager indicates the instrument is connected but it is not listed in the Communications port field, make note of the communications port through which the instrument is connected. Then select the **Show all communication ports** check box in the Connection Dialog Box. This displays a drop-down list of all available communications ports in the Communications port field. Select the port through which the instrument is connected.
- **Communication Rate:** The serial transfer rate for communicating with the instrument. The **Model 6292** defaults to communication rate **57600**.
- **Instrument Model:** The type of micro-ohmmeter instrument with which your PC is communicating. After you make your selections, click **OK** to make the connection or **Cancel** to exit the dialog without establishing communication.

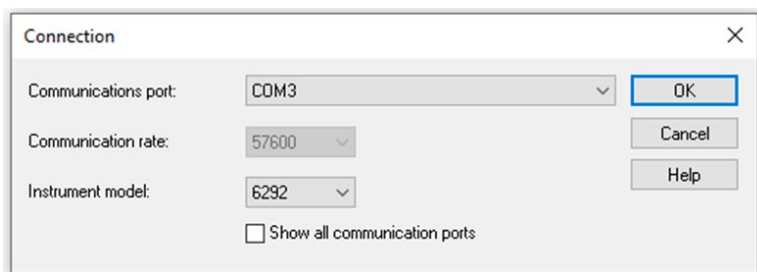

For further information about using the Micro-Ohmmeter Control Panel, consult the Help system that comes with the product. Access Help by clicking the option **Help** in the Control Panel's menu bar at the top of the screen.



## 6. SPECIFICATIONS

Reference Condition: 23 °C ± 3 °C, RH ≤ 50 %

ELECTRICAL	
Test Current Range	(5 to 200) A (True DC)
Resistance Range	0.1 μΩ to 2 mΩ (2 to 200) mΩ 200 mΩ to 1 Ω
Accuracy	± 1 % ± 2 μ from (.5 to 49.9) μΩ ± 1 % of reading from 50 μΩ to 1 Ω
Resolution 0.1 μΩ to 2 mΩ (2 to 200) mΩ 200 mΩ to 1 Ω	0.1 μΩ (50 to 200) A 10 μΩ (25 A at 200 mΩ) 1 mΩ (5 A at 1 Ω)
Output Voltage	100 VAC: 4.2 V @ 200 A 220 VAC: 8.6 V @ 200 A
Max. Load Resistance	100 VAC: 20 mW @ 200 A 220 VAC: 42 mW @ 200 A
Measurement Method	Four-terminal, Kelvin-type
Test Mode	Normal or both sides grounded (BSG)*
Adjustable Test Time	Unlimited for test currents of 100 A or less; (5 to 120) seconds for test currents above 100 A
Memory	Stores up to 8000 measurements
Interface	USB 2.0
Communication Software	DataView® Software
Power Supply	(100 to 240) VAC, 50/60 Hz
MECHANICAL	
Dimensions	(19.8 x 15.5 x 7.5) in (502 x 394 x 190) mm
Weight	24.25 lbs (11kg) approx
ENVIRONMENTAL	
Operating Temperature	(32 to 122) °F (0 to 50) °C
Storage Temperature	(14 to 158) °F (-10 to 70) °C
Humidity	95 % RH (non-condensing)
SAFETY	
Safety Rating	IEC61010-1; instrument protected by double insulation
Environmental Protection	IP54 with cover closed; IP40 with cover open
Security Protection	Protections against over current, short circuit, overheating and over voltage at output terminals
CE Mark	Yes

\*BSG Test Mode requires optional Current Probe Model MR6292 (Cat. #2129.86)

Specifications are subject to change without notice

## 6.1 CURRENT MEASUREMENT WITH THE OPTIONAL MR6292 CLAMP

Measurement Range	1.0 - 50.0 A <sub>DC</sub>
Resolution	0.1 A
Accuracy	± (3 % + 2 cts)
Output Signal	10 mV / A <sub>DC</sub>
Load Impedance	> 100 kΩ / 100 pF
Influence of the Position of the Conductor in the Jaws	0.5 %

---

## 7. MAINTENANCE

---

Use only factory specified replacement parts. AEMC® Instruments will not be held responsible for any accident, incident, or malfunction following a repair done other than by its service center or by an approved repair center.

### 7.1 WARNING

- To avoid electrical shock, do not attempt to perform any servicing unless you are qualified to do so.
- Do not perform any service while the micro-ohmmeter is on any circuit.
- To avoid electrical shock and/or damage to the instrument, do not allow water or other foreign agents into the electronic module.
- Make sure the internal battery is fully charged prior to testing. If the instrument has been left unused for several months, charge the battery.
- We recommend charging the micro-ohmmeter every month to ensure a full battery charge when used.
- When replacing the fuse, install only a direct replacement fuse.

### 7.2 CLEANING



**WARNING:** Disconnect the instrument from any source of electricity.

---

- If the case needs cleaning, do not use any alcohol or oil based cleaners. Preferably use soapy water with a damp cloth or sponge.
- Dry immediately after cleaning. Avoid water penetration into the electronic module.
- Make sure the micro-ohmmeter and all leads are dry before further use.

### 7.3 FUSE REPLACEMENT



**WARNING:** Make sure that no terminals are connected and that the switch is in the **OFF** position before replacing the fuse.

---

To replace the fuse, proceed as follows:

- Set the switch to OFF.
- Disconnect the power cord and measurement leads from the input terminals.
- Replace with an equivalent fuse 15 A, 250 V, 5 x 20 mm (Cat. #2130.00)

## 7.4 REPAIR AND CALIBRATION

To ensure that your instrument meets factory specifications, we recommend that it be sent back to our factory Service Center at one-year intervals for recalibration or as required by other standards or internal procedures.

### **For instrument repair and calibration:**

You must contact our Service Center for a Customer Service Authorization Number (CSA#). Send an email to [repair@aemc.com](mailto:repair@aemc.com) requesting a CSA#, you will be provided a CSA Form and other required paperwork along with the next steps to complete the request. Then return the instrument along with the signed CSA Form. This will ensure that when your instrument arrives, it will be tracked and processed promptly. Please write the CSA# on the outside of the shipping container. If the instrument is returned for calibration, we need to know if you want a standard calibration or a calibration traceable to N.I.S.T. (includes calibration certificate plus recorded calibration data).

**Ship To:** Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments  
15 Faraday Drive ▪ Dover, NH 03820 USA  
Phone: (800) 945-2362 (Ext. 360) / (603) 749-6434 (Ext. 360)  
Fax: (603) 742-2346  
E-mail: [repair@aemc.com](mailto:repair@aemc.com)

### **(Or contact your authorized distributor.)**

Contact us for the costs for repair, standard calibration, and calibration traceable to N.I.S.T.



**NOTE:** You must obtain a CSA# before returning any instrument.

---

## 7.5 TECHNICAL AND SALES ASSISTANCE

If you are experiencing any technical problems or require any assistance with the proper operation or application of your instrument, please call, e-mail or fax our technical support team:

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments  
Phone: (800) 343-1391 (Ext. 351)  
Fax: (603) 742-2346  
E-mail: [techsupport@aemc.com](mailto:techsupport@aemc.com) ▪ [www.aemc.com](http://www.aemc.com)

## 7.6 LIMITED WARRANTY

The instrument is warranted to the owner for a period of two years from the date of original purchase against defects in manufacture. This limited warranty is given by AEMC® Instruments, not by the distributor from whom it was purchased. This warranty is void if the unit has been tampered with, abused, or if the defect is related to service not performed by AEMC® Instruments.

**Full warranty coverage and product registration is available on our website at [www.aemc.com/warranty.html](http://www.aemc.com/warranty.html).**

**Please print the online Warranty Coverage Information for your records.**

**What AEMC® Instruments will do:**

If a malfunction occurs within the warranty period, you may return the instrument to us for repair, provided we have your warranty registration information on file or a proof of purchase. AEMC® Instruments will repair or replace the faulty material at our discretion.

**REGISTER ONLINE AT: [www.aemc.com/warranty.html](http://www.aemc.com/warranty.html)**

### 7.6.1 Warranty Repairs

**What you must do to return an Instrument for Warranty Repair:**

First, send an email to [repair@aemc.com](mailto:repair@aemc.com) requesting a Customer Service Authorization Number (CSA#) from our Service Department. You will be provided a CSA Form and other required paperwork along with the next steps to complete the request. Then return the instrument along with the signed CSA Form. Please write the CSA# on the outside of the shipping container. Return the instrument, postage or shipment prepaid to:

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments  
15 Faraday Drive, Dover, NH 03820 USA  
Phone: (800) 945-2362 (Ext. 360) • (603) 749-6434 (Ext. 360)  
Fax: (603) 742-2346  
E-mail: [repair@aemc.com](mailto:repair@aemc.com)

**Caution: To protect yourself against in-transit loss, we recommend that you insure your returned material.**



**NOTE:** You must obtain a CSA# before returning any instrument.

---

NOTES:

---

NOTES:

---



12/24  
99-MAN 100393 v21